

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-340	A/C switch (manual A/C)	HA-169
ABS - Wiring diagram	BR-36	A/C system description (auto A/C)	HA-24
ABS sensor rotor	AX-6, 19	A/C trouble diagnoses (auto A/C)	HA-28
Absolute pressure sensor	EC-131	A/C trouble diagnoses (manual A/C)	HA-133
A/C air flow (auto A/C)	HA-26	A/C, A - Wiring diagram (auto A/C)	HA-31
A/C air flow (manual A/C)	HA-131	A/C, M - Wiring diagram (manual A/C)	HA-137
A/C component layout (auto A/C)	HA-20	Accelerator control system	FE-3
A/C component layout (manual A/C)	HA-129	Accelerator wire adjustment	FE-3
A/C compressor clutch removal and installation (auto A/C)	HA-102	Air bag	RS-9
A/C compressor clutch removal and installation (manual A/C)	HA-175	Air bag disposal	RS-22
A/C compressor description (manual A/C)	HA-122	Air bag precautions	GI-2
A/C compressor precaution (auto A/C)	HA-6	Air bleeding (hydraulic clutch)	CL-7
A/C compressor precaution (manual A/C)	HA-115	Air bleeding for brake system	BR-7
A/C compressor special service tool (auto A/C)	HA-9	Air cleaner filter replacement	MA-17
A/C compressor special service tool (manual A/C)	HA-118	Air conditioner cut control	EC-23
A/C control linkage adjustment (manual A/C)	HA-147, 162, 164	Air flow meter - See Mass air flow sensor	EC-122
A/C control operation (auto A/C)	HA-24	Air mix door control linkage adjustment (auto A/C)	HA-56
A/C control operation (manual A/C)	HA-130	Air mix. door motor (auto A/C)	HA-54, 96
A/C diagnostic work flow (auto A/C)	HA-43	Air spoiler, rear	BT-24
A/C diagnostic work flow (manual A/C)	HA-140	Alternator	SC-14
A/C HFC134a (R134a) system precau- tion (auto A/C)	HA-2	Ambient sensor (auto A/C)	HA-86
A/C HFC134a (R134a) system precau- tion (manual A/C)	HA-111	Angular tightening application	EM-2
A/C HFC134a (R134a) system service procedure (auto A/C)	HA-97	Antenna - See Power antenna	EL-152
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-171	Anti-lock brake system - Wiring diagram	BR-36
A/C HFC134a (R134a) system service tools (auto A/C)	HA-10	AP/SEN - Wiring diagram	EC-134
A/C HFC134a (R134a) system service tools (manual A/C)	HA-119	ASCD (automatic speed control device)	EL-163
A/C HFC134a system service equip- ment precaution (auto A/C)	HA-6	ASCD - Wiring diagram	EL-168
A/C HFC134a system service equip- ment precaution (manual A/C)	HA-115	A/T - Wiring diagram - AT - FTS	AT-94
A/C lubricant (R134a) (auto A/C)	HA-99	A/T - Wiring diagram - AT - MAIN	AT-85
A/C lubricant (R134a) (manual A/C)	HA-173	A/T - Wiring diagram - AT - PNP/SW	AT-89
A/C operational check (auto A/C)	HA-44	A/T - Wiring diagram - AT - VSS A/T	AT-99
A/C operational check (manual A/C)	HA-141	A/T control	EC-349
A/C performance chart (auto A/C)	HA-77	A/T diagnosis communication line	EC-440
A/C performance chart (manual A/C)	HA-156	A/T fluid temperature sensor	AT-96
A/C performance test diagnoses (auto A/C)	HA-75	A/T self-diagnoses	AT-44
A/C performance test diagnoses (manual A/C)	HA-154	A/T shift lock system	AT-219
A/C relay (auto A/C)	HA-72	A/T shift lock system - Wiring diagram	AT-220
A/C relay (manual A/C)	HA-169	A/T trouble diagnoses	AT-49
A/C self-diagnoses (auto A/C)	HA-37	A/T Wiring diagram - AT - ENG SS	AT-104
A/C service data specification	HA-185	A/T Wiring diagram AT - 1ST	AT-109
		A/T Wiring diagram AT - 2ND	AT-115
		A/T Wiring diagram AT - 3RD	AT-121
		A/T Wiring diagram AT - 4TH	AT-128
		A/T Wiring diagram AT - BA/FTS	AT-174
		A/T Wiring diagram AT - LPSV	AT-146
		A/T Wiring diagram AT - NONDTC	AT-185
		A/T Wiring diagram AT - OVRCSV	AT-169
		A/T Wiring diagram AT - SSV/A	AT-152
		A/T Wiring diagram AT - SSV/B	AT-157
		A/T Wiring diagram AT - TCCSIG	AT-140
		A/T Wiring diagram AT - TCV	AT-134
		A/T Wiring diagram AT - TPS	AT-163
		A/T Wiring diagram AT - VSSMTR	AT-179
		AT/C - Wiring diagram	EC-351
		ATDIAG - Wiring diagram	EC-441
		Audio	EL-142
		AUDIO - Wiring diagram	EL-143, 146

ALPHABETICAL INDEX

Audio and A/C control removal and
installation - See Instrument panelBT-13
Auto air conditioner - Wiring diagram
(auto A/C).....HA-31
Automatic amplifier (auto A/C)HA-35, 47
Automatic speed control system - See
ASCDEL-163
Automatic transmission fluid
replacement.....MA-22
Automatic transmission numberGI-42
Auxiliary air control (AAC) valveEC-336
Axle housing (rear)AX-19

B

Back doorBT-8
Back door opener - See Back doorBT-8
Back door trim.....BT-23
Back-up lampEL-53
Back-up lamp switch (M/T)MT-6
BACK/L - Wiring diagram.....EL-53
Ball joint (front)SU-14
Basic inspectionEC-86
BatterySC-3
Baulk ring (M/T).....MT-13
Block heaterEM-45
Blower motor (auto A/C).....HA-63
Blower motor (manual A/C).....HA-149
Blower resistor (manual A/C)HA-149
Body alignmentBT-48
BPT valveEC-297, 300
Brake boosterBR-18
Brake control valve (Proportioning
valve)BR-10
Brake fluid changeBR-6
Brake fluid levelMA-26
Brake fluid level and line checkBR-6
Brake hydraulic line.....BR-8
Brake inspectionMA-26
Brake lines and cables inspectionMA-26
Brake lining wear temporary checkingMA-27
Brake master cylinderBR-15
Brake pedalBR-13
Bulb specificationsEL-332
Bumper, frontBT-5
Bumper, rearBT-8
BYP/S/V - Wiring diagramEC-430, 436

C

Camshaft inspectionEM-30
Camshaft position sensor (CMPS).....EC-282
Canister-See EVAP canisterEC-24
Center bearing assembly (propeller
shaft)PD-10
Center bearing disassembly (propeller
shaft)PD-8
Center case (Transfer)TF-11

CHARGE - Wiring diagramSC-12 GI
Charging system.....SC-11
Chassis and body maintenanceMA-21 MA
CHIME - Wiring diagram.....EL-108
CIGAR - Wiring diagram.....EL-133
Cigarette lighter.....EL-133
Circuit breaker.....EL-14 EM
CKPS - Wiring diagram.....EC-279, 375
Closed loop control (Left bank)EC-365
Closed loop control (Right bank)EC-365 LG
Closed throttle position switchEC-343
Clutch cover.....CL-13 EC
Clutch damperCL-10
Clutch discCL-13
Clutch fluid level.....MA-21 FE
Clutch master cylinderCL-8
Clutch operating cylinderCL-9
Clutch pedal.....CL-5 CL
Clutch release bearing.....CL-11
Clutch withdrawal lever.....CL-11
CMPS - Wiring diagramEC-285 MT
Coil spring (front).....SU-9
Coil spring (rear)SU-19
Collision diagnosis.....RS-59 AT
Combination lamp, front, removal and
installationBT-5
Combination lamp, rear, removal and
installationBT-24 TF
Combination meter.....EL-79
Combination meter removal and instal-
lation - See Instrument panel.....BT-13 PD
Combination switch.....EL-20
COMPAS - Wiring diagram.....EL-94 AX
CompassEL-93
Component Location (auto A/C).....HA-28
Component Location (manual A/C)HA-133 SU
Compression pressureEM-12
Compressor clutch removal and instal-
lation (auto A/C).....HA-102 BR
Compressor clutch removal and instal-
lation (manual A/C)HA-175
Compressor description (manual A/C)HA-122 ST
Compressor precaution (auto A/C)HA-6
Compressor precaution (manual A/C)HA-115
Compressor special service tool (auto
A/C).....HA-9 RS
Compressor special service tool
(manual A/C)HA-118 BT
Connecting rod.....EM-47
Connecting rod bearing clearanceEM-52
Connecting rod bushing clearanceEM-53 HA
Connector inspection.....GI-18
Console box - See Instrument panel.....BT-13 SC
CONSULT for ABSBR-42
CONSULT for engineEC-67
CONSULT general information.....GI-35 EL
Control lever (Transfer)TF-10
Control valve (A/T)AT-254
Converter housing installation.....AT-231
Coolant mixture ratio.....MA-12
Coolant replacement.....MA-14

ALPHABETICAL INDEX

Cooling circuit (engine).....	LC-8
Counter gear (M/T).....	MT-13
Counter gear (Transfer).....	TF-12
Coupling sleeve (M/T).....	MT-13
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-282
"Crankcase emission control system - See positive crankcase ventilation".....	EC-30
Crankshaft.....	EM-50
Crankshaft position sensor (OBD).....	EC-277
Crankshaft position sensor (OBD) cog chipping.....	EC-373
Cruise control - See ASCD.....	EL-163
Cylinder block.....	EM-44
Cylinder block boring.....	EM-49
Cylinder head.....	EM-26
Cylinder head bolt tightening.....	EM-38

D

Data link connector for Consult.....	EC-67
Daytime light system.....	EL-34
Daytime running light - See Daytime light system.....	EL-34
DEF - Wiring diagram.....	EL-136
Detonation sensor - See Knock sensor.....	EC-272
Diagnostic trouble code (DTC) for OBD system.....	EC-2, 45
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-95
Differential carrier assembly.....	PD-29, 55
Differential carrier disassembly.....	PD-42
Differential gear oil replacement.....	MA-25
Dimensions.....	GI-42
Distributor.....	EC-22
Distributor ignition (DI) system.....	EC-22
D/LOCK - Wiring diagram.....	EL-195
Dome light - See Interior lamp.....	EL-72
Door glass.....	BT-11
Door lock.....	BT-11
Door mirror.....	BT-47
Door trim.....	BT-19
Door, front.....	BT-11
Door, rear.....	BT-12
Drive belt inspection.....	MA-13
Drive chain (Transfer).....	TF-12
Drive pinion diff. inspection.....	PD-22, 45
Drive pinion height.....	PD-24, 51
Drive plate runout.....	EM-53
Drive shaft (front).....	AX-12
Dropping resistor (A/T).....	AT-149
DTC work support.....	EC-76
DTRL - Wiring diagram.....	EL-38
Dual pressure switch (auto A/C).....	HA-73
Dual pressure switch (manual A/C).....	HA-169

E

ECM input/output signal.....	EC-106
ECTS - Wiring diagram.....	EC-148, 164
EGR control (EGRC) - BPT valve.....	EC-297
EGR control (EGRC) - solenoid valve.....	EC-378
EGR control valve.....	EC-289, 296, 389, 394
EGR temperature sensor.....	EC-383
EGR/TS - Wiring diagram.....	EC-386
EGRC/V - Wiring diagram.....	EC-380
EGRC1 - Wiring diagram.....	EC-293, 392
Electric sun roof.....	EL-156
Electrical diagnoses.....	GI-21
Electrical ignition system.....	EC-22
Electrical unit.....	Foldout
Electrical units location.....	EL-312
Engine compartment.....	BT-49
Engine control circuit diagram.....	EC-16
Engine control component parts location.....	EC-14
Engine control module (ECM).....	EC-353
Engine control system diagram and chart.....	EC-17
Engine coolant temperature sensor (ECTS).....	EC-146, 162
Engine fail-safe system.....	EC-96
Engine oil filter replacement.....	MA-18
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-17
Engine outer component parts.....	EM-9
Engine removal.....	EM-41
Engine room - See Engine compartment.....	BT-49
Engine serial number.....	GI-42
EVAP canister.....	EC-25
EVAP canister purge volume control solenoid valve.....	EC-24, 311, 403
EVAP canister vent control valve.....	EC-317, 410, 421
EVAP control system (small leak) diagnosis.....	EC-304, 396
EVAP control system pressure sensor.....	EC-323
EVAP control system purge flow moni- toring diagnosis.....	EC-415
EVAP vapor lines inspection.....	MA-20
Evaporative emission (EVAP) system.....	EC-24
Exhaust gas recirculation (EGR) valve.....	EC-289, 389
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-21
Exterior.....	BT-24

F

Fan control amp. (auto A/C).....	HA-65
Fan switch (manual A/C).....	HA-149
Fast idle cam (FIC) inspection and adjustment.....	EC-33

ALPHABETICAL INDEX

F/FOG - Wiring diagramEL-56
 FICD - Wiring diagramEC-469
 Final drive disassemblyPD-41
 Final drive pre-inspectionPD-41
 Final drive removal and installationPD-41
 Finisher, interior - See TrimBT-17
 Fluid temperature sensor (A/T)AT-96
 FluidsMA-11
 Flywheel (clutch)CL-14
 Flywheel runoutEM-53
 FO2H-L - Wiring diagramEC-207
 FO2H-R - Wiring diagramEC-206
 Fog lamp, frontEL-54
 Fog lamp, front, removal and
 installationBT-5
 Fork rod (M/T)MT-15
 Forward clutchAT-273
 F/PUMP - Wiring diagramEC-460
 Freeze frame dataEC-46
 FRO2LH - Wiring diagramEC-171, 191, 200
 FRO2RH - Wiring diagramEC-170, 190, 199
 Front axleAX-2
 Front bumperBT-5
 Front case (Transfer)TF-11
 Front combination lamp removal and
 installationBT-5
 Front disc brakeBR-21
 Front doorBT-11
 Front drive shaft (Transfer)TF-12
 Front final drive disassembly (4WD)PD-17
 Front final drive pre-inspection (4WD)PD-17
 Front final drive removal and installa-
 tion (4WD)PD-17
 Front fog lampEL-54
 Front fog lamp removal and installationBT-5
 Front heated oxygen sensor (HO2S)
 (Left bank)EC-167, 175, 181, 187, 196
 Front heated oxygen sensor (HO2S)
 (Right bank)EC-167, 175, 181, 187, 196
 Front heated oxygen sensor heater
 (Left bank)EC-204
 Front heated oxygen sensor heater
 (Right bank)EC-204
 Front oxygen sensor (O2S) monitorEC-58
 Front seatBT-31
 Front seat beltRS-3
 Front suspensionSU-2
 Front washerEL-115
 Front wiperEL-115
 Fuel cut control (at no load & high
 engine speed)EC-24
 Fuel filler lidBT-8
 Fuel filter replacementMA-16
 Fuel gaugeEL-79
 Fuel injection system (Left bank)EC-249, 256
 Fuel injection system (Right bank)EC-249, 256
 Fuel line inspectionMA-16
 Fuel precautionsGI-6
 Fuel pressure checkEC-31
 Fuel pressure regulatorEC-32
 Fuel pressure releaseEC-31

Fuel pumpEC-459
 Fuel systemFE-4
 Fuel tank vacuum relief valveEC-25
 FUELLH - Wiring diagramEC-252, 259
 FUEL RH - Wiring diagramEC-251, 258
 FuseEL-14
 Fuse blockFoldout
 Fusible linkEL-14

G

Garage jack and safety standGI-45
 GaugesEL-79
 Gear components (M/T)MT-13
 Generator - See AlternatorSC-14
 Generic scan tool (GST)EC-80
 GlassBT-11
 GreaseMA-11
 Ground distributionEL-15

H

Harness connectorEL-3
 Harness connector inspectionGI-18
 Harness layoutEL-315
 Hazard warning lampEL-59
 HeadlampEL-23
 Headlining - See Roof trimBT-22
 Heated seatBT-34, EL-162
 Height (Dimensions)GI-42
 HFC134a (R134a) system precaution
 (auto A/C)HA-2
 HFC134a (R134a) system precaution
 (manual A/C)HA-111
 HFC134a (R134a) system service pro-
 cedure (auto A/C)HA-97
 HFC134a (R134a) system service pro-
 cedure (manual A/C)HA-171
 HFC134a (R134a) system service tools
 (auto A/C)HA-10
 HFC134a (R134a) system service tools
 (manual A/C)HA-119
 HFC134a system service equipment
 precaution (auto A/C)HA-6
 HFC134a system service equipment
 precaution (manual A/C)HA-115
 High clutchAT-271
 H/LAMP - Wiring diagramEL-27
 HoodBT-5
 HornEL-132
 HORN - Wiring diagramEL-132
 How to erase DTC for OBD systemEC-55
 HSEAT - Wiring diagramEL-162
 Hydraulic lash adjuster inspectionEM-35

ALPHABETICAL INDEX

I

IACV-AAC valve	EC-336
IACV-FICD solenoid valve	EC-468
IATS - Wiring diagram	EC-143
Identification plate	GI-41
Idle air control valve (IACV)	EC-336
Idle mixture ratio	EC-35
Idle speed	EC-35
IGN/SG - Wiring diagram	EC-369
Ignition timing	EC-35
Ignition wire inspection	EC-271
ILL - Wiring diagram	EL-67
Illumination	EL-64
In vehicle sensor (auto A/C)	HA-89
INJECT - Wiring diagram	EC-450
Injector	EC-454
Injector removal and installation	EC-32
Instrument panel	BT-13
INT/L - Wiring diagram	EL-75
Intake air temperature sensor	EC-140
Intake door control linkage adjustment (auto A/C)	HA-62
Intake door control linkage adjustment (manual A/C)	HA-147
Intake door motor (auto A/C)	HA-58
Intake door motor (manual A/C)	HA-144
Intake sensor (auto A/C)	HA-94
Integrated homelink transmitter	EL-257
Interior	BT-17
Interior lamp	EL-72
Interior lamp on-off control	EL-73
IVCS (Nissan communicator)	EL-275
IVCS - Wiring diagram	EL-286

J

Jacking points	GI-44
Journal bearing assembly (propeller shaft)	PD-10
Journal bearing disassembly (propeller shaft)	PD-9
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-re- mote control system	EL-208
Knock sensor (KS)	EC-272
Knuckle spindle	AX-10
KS - Wiring diagram	EC-274

L

Length (Dimensions)	GI-42
---------------------------	-------

License lamp	EL-45
Lifting points	GI-46
Limited slip diff. adjustment	PD-48
Limited slip diff. assembly	PD-49
Limited slip diff. disassembly	PD-46
Limited slip diff. inspection	PD-47
Line pressure solenoid valve	AT-131, 143, 148
Line pressure test (A/T)	AT-58
Liquid gasket application	EM-2
Location of electrical units	EL-312
Lock, door	BT-11
Low and reverse brake	AT-277
LSV (Load sensing valve)	BR-11
Lubricant (R134a) A/C (auto A/C)	HA-99
Lubricant (R134a) A/C (manual A/C)	HA-173
Lubricants	MA-11
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-28
Luggage room lamp	EL-72

M

MAFS - Wiring diagram	EC-127
Magnet clutch (auto A/C)	HA-69, 102
Magnet clutch (manual A/C)	HA-175
MAIN - Wiring diagram	EC-116
Main drive gear (M/T)	MT-13
Main gear (Transfer)	TF-12
Mainshaft (M/T)	MT-13
Mainshaft (Transfer)	TF-12
Maintenance (engine)	MA-13
MAJOR OVERHALL	AT-234
Major overhaul (Transfer)	TF-10
Malfunction indicator lamp (MIL)	EC-57
Manual air conditioner - Wiring diagram (manual A/C)	HA-137
Manual transmission number	GI-42
Manual transmission oil replacement	MA-21
MAP/BARO switch solenoid valve	EC-355
Mass air flow sensor (MAFS)	EC-122
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-79
METER - Wiring diagram	EL-83
MIL & Data link connectors circuit	EC-473
MIL/DL - Wiring diagram	EC-473
MIRROR - Wiring diagram	EL-159
Mirror defogger	EL-134
Mirror, door	BT-47
Mirror, out side	BT-47
Misfire	EC-267
Mode door control linkage adjustment (auto A/C)	HA-53
Mode door control linkage adjustment (manual A/C)	HA-164
Mode door motor (auto A/C)	HA-49
Model variation	GI-39
Molding - See Exterior	BT-24
M/T major overhaul	MT-12

ALPHABETICAL INDEX

M/T removal and installationMT-9
 MULTI - Wiring diagram.....EL-212
 Multi-remote control system.....EL-208
 Multiport fuel injection (MFI) system.....EC-20
 Multiport fuel injection precautions.....GI-5

N

NATS - Wiring diagram.....EL-262
 NISSAN COMMUNICATOR.....EL-275
 Nissan communicator (IVCS)EL-275
 NVH troubleshooting (AX).....AX-3, 18
 NVH troubleshooting (BR).....BR-5
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-5
 NVH troubleshooting (PD).....PD-3
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU)SU-3, 15
 NVH troubleshooting (Transfer)TF-5
 NVIS (Nissan vehicle immobiliser system).....EL-260

O

Oil change (capacity)MA-11
 Oil pan (engine)EM-14
 Oil pressure (engine)LC-3
 Oil pump (A/T).....AT-250
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine)EM-24
 Oil seal replacement (front final drive 4WD).....PD-14
 Oil seal replacement (front of final drive)PD-38
 On board diagnostic systemEC-44
 Operating cylinder (clutch).....CL-9
 Out side mirrorBT-47
 Overdrive control switch.....AT-216
 Overrun clutch.....AT-273
 Overrun clutch solenoid valve.....AT-170
 Oversize pistonEM-49

P

P/ANT - Wiring diagram.....EL-153
 Park/Neutral position switch.....EC-443
 Park/neutral position switch (A/T)AT-91, 217
 Park/neutral position switch (M/T).....MT-6
 Parking brake controlBR-29
 Parking lampEL-45
 PCV (positive crankcase ventilation)EC-30
 PGC/V - Wiring diagramEC-314, 406
 Pilot bushing replacementEM-56
 Pinion bearing preload diff.PD-24
 Pinion gear height diff.PD-24, 51
 Piston assemblyEM-54

Piston pin inspection.....EM-46 GI
 Piston ring inspection.....EM-47
 Piston to bore clearanceEM-48
 PNP/SW - Wiring diagramEC-446 MA
 POWER - Wiring diagram.....EL-8
 Power antenna.....EL-152
 Power door lock.....EL-193 EM
 Power door mirrorEL-159
 Power seat.....EL-160
 Power steering fluid level.....MA-28, ST-7 LC
 Power steering gear.....ST-16
 Power steering hydraulic pressureST-9
 Power steering oil pressure switchEC-464 EC
 Power steering oil pump.....ST-26
 Power steering system bleeding.....ST-8
 Power supply routingEL-7 FE
 Power transistor & ignition coil.....EC-367
 Power window.....EL-185
 PRE/SE - Wiring diagramEC-326 CL
 Precautions (General)GI-3
 Pressure plate - See Clutch coverCL-13 MT
 Pressure test (A/T)AT-58
 Propeller shaftPD-2
 Propeller shaft greasing.....MA-24 AT
 Propeller shaft inspectionMA-24
 Propeller shaft on vehicle servicePD-7
 Propeller shaft vibrationPD-7 TF
 PST/SW - Wiring diagram.....EC-465

R

Rack retainer adjustment.....ST-7 AX
 RadiatorLC-12
 Radio - See Audio.....EL-142
 Rear air spoilerBT-24 SU
 Rear axleAX-17
 Rear bumperBT-8
 Rear case (Transfer)TF-11 BR
 Rear combination lamp removal and installationBT-24
 Rear cover packing replacement diff.PD-15 ST
 Rear doorBT-12
 Rear drum brakeBR-25 RS
 Rear heated oxygen sensor (HO2S)EC-210, 218, 226, 235
 Rear heated oxygen sensor (HO2S) heater.....EC-243 BT
 Rear seatBT-35
 Rear seat beltRS-4 HA
 Rear side windowBT-46
 Rear suspensionSU-15
 Rear washer.....EL-124
 Rear window defogger.....EL-134 SC
 Rear wiper.....EL-124
 Refrigerant connection precaution (auto A/C).....HA-3 EL
 Refrigerant connection precaution (manual A/C).....HA-112
 Refrigerant discharging evacuating charging (auto A/C).....HA-97

ALPHABETICAL INDEX

Refrigerant general precaution (auto A/C).....HA-3
 Refrigerant general precaution (manual A/C).....HA-112
 Refrigerant lines (auto A/C).....HA-106
 Refrigerant lines (manual A/C).....HA-180
 Refrigeration cycle (auto A/C).....HA-13
 Refrigeration cycle (manual A/C).....HA-122
 Release bearing (clutch).....CL-11
 Removal and installation (A/T).....AT-230
 Removal and installation (Transfer).....TF-9
 Reverse clutch.....AT-267
 Reverse idler shaft (M/T).....MT-13
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....MT-6
 Reverse main gear (M/T).....MT-13
 Revolution sensor (A/T).....AT-101
 Ring gear diff. inspection.....PD-22, 45
 RO2H-L - Wiring diagram.....EC-246
 RO2H-R - Wiring diagram.....EC-245
 Road wheel size.....GI-43
 Roof trim.....BT-22
 Room lamp - See Interior lamp.....EL-72
 RRO2LH - Wiring diagram.....EC-214, 222, 230, 238
 RRO2RH - Wiring diagram.....EC-213, 221, 229, 237

S

SAE J1930 terminology list.....GI-50
 Screw jack.....GI-44
 Seal - See Exterior.....BT-24
 SEAT - Wiring diagram.....EL-160
 Seat belt inspection.....MA-29, RS-6
 Seat belt pre-tensioner.....RS-2
 Seat belt pre-tensioner disposal.....RS-22
 Seat belt, front.....RS-3
 Seat belt, rear.....RS-4
 Seat, front.....BT-31
 Seat, rear.....BT-35
 Self-diagnostic results.....EC-58
 SHIFT - Wiring diagram.....AT-220
 Shift control (Transfer).....TF-13, 24
 Shift control components (M/T).....MT-15
 Shift fork (M/T).....MT-15
 Shift lever.....MT-15
 Shift lock system.....AT-219
 Shift schedule.....AT-309
 Shift solenoid valve A (A/T).....AT-111, 122, 131, 153
 Shift solenoid valve B (A/T).....AT-111, 116, 131, 158
 Shock absorber (rear).....SU-19
 Side air bag.....RS-20
 Side bearing preload (front final drive 4WD).....PD-23
 Side trim.....BT-17
 Side window - See Rear side window.....BT-46
 Smart entrance control unit.....EL-252
 SMJ (super multiple junction).....Foldout
 Spare tire size.....GI-43
 Spark plug replacement.....MA-19
 Speedometer.....EL-79

Spot lamp.....EL-72
 Spring (Wheelarch) height.....SU-6
 SROOF - Wiring diagram.....EL-157
 SRS - See Supplemental Restraint System.....RS-9
 SRS - Wiring diagram.....RS-34
 S/SIG - Wiring diagram.....EC-456
 Stabilizer bar (front).....SU-12
 Stabilizer bar (rear).....SU-21
 Stall test (A/T).....AT-55
 Standardized relay.....EL-5
 START - Wiring diagram.....SC-8
 Starter.....SC-10
 Starting system.....SC-6
 Steering gear, linkage and transfer gear inspection.....MA-27
 Steering linkage.....ST-16
 Steering switch.....EL-22
 Steering transfer gear.....ST-14
 Steering wheel and column.....ST-10
 Steering wheel play.....ST-6
 Steering wheel turning force.....ST-8
 Stop lamp.....EL-51
 STOP/L - Wiring diagram.....EL-51
 Striking rod (M/T).....MT-15
 Strut (front).....SU-9
 Sub-gear (M/T).....MT-13
 Sun roof, electric.....EL-156
 Sunload sensor (auto A/C).....HA-91
 Sunroof.....BT-36
 Supplemental Restraint System.....RS-9
 Supplemental restraint system - Wiring diagram.....RS-34
 SW/V - Wiring diagram.....EC-359
 Symbols and abbreviations.....GI-8
 Symptom matrix chart.....EC-97
 Synchronizer (M/T).....MT-13
 System readiness test (SRT) code.....EC-46

T

Tachometer.....EL-79
 Tail lamp.....EL-45
 TAIL/L - Wiring diagram.....EL-47
 Tank fuel temperature sensor.....EC-263
 TCM circuit diagram.....AT-11
 TCM inspection table.....AT-81
 Temperature control cable and linkage adjustment (manual A/C).....HA-162
 TETS - Wiring diagram.....EC-265
 THEFT - Wiring diagram.....EL-234
 Theft warning system.....EL-228
 Thermometer.....EL-93
 Thermostat.....LC-10
 Three way catalyst function (Left bank).....EC-301
 Three way catalyst function (Right bank).....EC-301
 Three way catalyst precautions.....GI-5
 Throttle position sensor (TPS).....EC-151
 Throttle position sensor adjustment.....EC-86

ALPHABETICAL INDEX

Throttle position switchEC-343, AT-166, 217
 Throwout bearing - See Clutch release bearing.....CL-11
 Tie-rodST-20
 Tie-rod ball joints.....ST-20
 Tightening torque of standard bolts.....GI-49
 Timing belt.....EM-17
 Tire rotation.....MA-25
 Tire sizeGI-43
 Tooth contact (front final drive 4WD)PD-28
 Tooth contact diff.PD-54
 Torque converter installationAT-231
 Torque convertor clutch solenoid valveAT-135, 143
 Tow truck towing.....GI-46
 Towing point.....GI-48
 TP/SW - Wiring diagramEC-345
 TPS - Wiring diagram.....EC-157
 Transfer caseTF-11
 Transfer oil replacement.....MA-23
 Transfer serial numberGI-42
 Transmission case (M/T).....MT-12
 TRANSMT - Wiring diagram.....EL-257
 Tread-FR&RR (Dimensions).....GI-42
 TrimBT-17
 Trouble diagnosesGI-31
 TURN - Wiring diagramEL-61
 Turn signal lampEL-59
 Two trip detection logicEC-44
 Two-pole liftGI-46

U

Under bodyBT-51

V

Vacuum cut valveEC-24, 439
 Vacuum cut valve bypass valve.....EC-24, 428, 433
 Vacuum hose (brake system).....BR-20
 Vacuum hose drawing (Engine control)EC-18
 Valve clearance.....EM-58
 Valve guide.....EM-32
 Valve seat.....EM-33
 Valve spring.....EM-34

Vehicle identification number.....GI-41
 Vehicle recovery (freeing a stuck vehicle).....GI-48
 Vehicle speed sensor (VSS)EC-331
 VENT/V - Wiring diagramEC-319, 412, 424
 Viscosity number (SAE)MA-12
 VSS - Wiring diagramEC-334

W

WARN - Wiring diagramEL-98
 Warning chimeEL-106
 Warning lampsEL-97
 Washer, front.....EL-115
 Washer, rear.....EL-124
 Water cock control rod adjustment (manual A/C).....HA-162
 Water pumpLC-9
 Water temperature gaugeEL-79
 Weatherstrip - See ExteriorBT-24
 Wheel balanceMA-25
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-6
 Wheel sensors (ABS).....BR-53, 69
 Wheel sizeGI-43
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-43
 Wide open & closed throttle position switch.....EC-151
 Width (Dimensions)GI-42
 WINDOW - Wiring diagramEL-188
 Window, door.....BT-11
 Window, rear sideBT-46
 Window, side - See Rear side window.....BT-46
 Windshield.....BT-44
 WIP/R - Wiring diagram.....EL-127
 WIPER - Wiring diagram.....EL-117
 Wiper, front.....EL-115
 Wiper, rearEL-124
 Wiring Diagram (Cell code) list.....EL-333
 Wiring diagrams.....GI-9
 Withdrawal lever (clutch).....CL-11
 Wrist pin - See Piston pin inspection.....EM-46



PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals.
Use this form to report any issues or comments you may have regarding our Service Manuals.
Please photocopy this form and type or print your comments below. Mail or fax to:

Nissan North America, Inc.
Technical Service Information
39001 Sunrise Drive, P.O. Box 9200
Farmington Hills, MI USA 48331
FAX: (248) 488-3910

SERVICE MANUAL: Model: _____ Year: _____

PUBLICATION NO. (Please photocopy back cover): _____

VEHICLE INFORMATION VIN: _____ Production Date: _____

Please describe any issues or problems in detail:

Page number(s) _____ Note: Please include a copy of each page, marked with your comments.

Are the trouble diagnosis procedures logical and easy to use? (circle your answer) YES NO

If no, what page number(s)? _____ Note: Please include a copy of each page, marked with your comments.

Please describe the issue or problem in detail: _____

Is the organization of the manual clear and easy to follow? (circle your answer) YES NO

Please comment: _____

What information should be included in NISSAN Service Manuals to better support you in servicing or repairing customer vehicles?

DATE: _____ YOUR NAME: _____ POSITION: _____

DEALER: _____ DEALER NO.: _____ ADDRESS: _____

CITY: _____ STATE/PROV./COUNTRY: _____ ZIP/POSTAL CODE: _____