

ALPHABETICAL INDEX

SECTION **IDX**

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-426
ABS - Wiring diagram	BR-37
ABS sensor rotor	AX-6, 20
Absolute pressure sensor	EC-159
A/C air flow (auto A/C)	HA-26
A/C air flow (manual A/C)	HA-146
A/C component layout (auto A/C)	HA-20
A/C component layout (manual A/C)	HA-144
A/C compressor clutch removal and installation (auto A/C).....	HA-116
A/C compressor clutch removal and installation (manual A/C).....	HA-197
A/C compressor description (manual A/C).....	HA-139
A/C compressor precaution (auto A/C)	HA-7
A/C compressor precaution (manual A/C).....	HA-131
A/C compressor special service tool (auto A/C).....	HA-11
A/C compressor special service tool (manual A/C).....	HA-135
A/C control linkage adjustment (manual A/C)	HA-164, 181, 183
A/C control operation (auto A/C)	HA-24
A/C control operation (manual A/C)	HA-145
A/C diagnostic work flow (auto A/C)	HA-47
A/C diagnostic work flow (manual A/C).....	HA-155
A/C HFC134a (R134a) system precau- tion (auto A/C).....	HA-3
A/C HFC134a (R134a) system precau- tion (manual A/C).....	HA-127
A/C HFC134a (R134a) system service procedure (auto A/C).....	HA-111
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-192
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-12
A/C HFC134a (R134a) system service tools (manual A/C).....	HA-136
A/C HFC134a system service equip- ment precaution (auto A/C)	HA-8
A/C HFC134a system service equip- ment precaution (manual A/C).....	HA-132
A/C lubricant (R134a) (auto A/C)	HA-113
A/C lubricant (R134a) (manual A/C)	HA-194
A/C operational check (auto A/C)	HA-48
A/C operational check (manual A/C).....	HA-156
A/C performance chart (auto A/C)	HA-88
A/C performance chart (manual A/C).....	HA-175
A/C performance test diagnoses (auto A/C).....	HA-86
A/C performance test diagnoses (manual A/C).....	HA-173
A/C relay (auto A/C)	HA-83
A/C relay (manual A/C)	HA-190
A/C self-diagnoses (auto A/C).....	HA-37
A/C service data specification (auto A/C).....	HA-126
A/C service data specification (manual A/C).....	HA-207
A/C switch (manual A/C)	HA-190
A/C system description (auto A/C)	HA-24
A/C trouble diagnoses (auto A/C)	HA-28
A/C trouble diagnoses (manual A/C)	HA-148
A/C, A - Wiring diagram	HA-31
A/C, M - Wiring diagram	HA-152
Accelerator control system	FE-3
Accelerator wire adjustment	FE-3
Actuator lever (Transfer) (ATX14A)	TF-151
Air bag	RS-10
Air bag disposal.....	RS-22
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-8
Air cleaner filter replacement.....	MA-18
Air conditioner cut control	EC-31
Air flow meter - See Mass air flow sensor	EC-151
Air mix door control linkage adjustment (auto A/C).....	HA-61
Air mix. door motor (auto A/C)	HA-59, 110
Air spoiler, rear.....	BT-36
All - mode 4WD system (ATX14A)	TF-42
Alternator	SC-29
Ambient sensor (auto A/C).....	HA-97
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-191
Anti-lock brake system - Wiring diagram.....	BR-37
AP/SEN - Wiring diagram	EC-161
ASCD (automatic speed control device)	EL-239
ASCD - Wiring diagram	EL-243
A/T - Wiring diagram - AT - FTS	AT-107
A/T - Wiring diagram - AT - MAIN.....	AT-96
A/T - Wiring diagram - AT - PNP/SW.....	AT-101
A/T - Wiring diagram - AT - VSS A/T	AT-113
A/T control	EC-441
A/T diagnosis communication line.....	EC-604
A/T fluid temperature sensor	AT-110
A/T self-diagnoses.....	AT-46
A/T shift lock system	AT-265
A/T shift lock system - Wiring diagram	AT-266
A/T trouble diagnoses	AT-53
A/T Wiring diagram - AT - ENG SS.....	AT-117
A/T Wiring diagram AT - 1ST	AT-123
A/T Wiring diagram AT - 2ND	AT-129
A/T Wiring diagram AT - 3RD	AT-135
A/T Wiring diagram AT - 4TH.....	AT-142
A/T Wiring diagram AT - BA/FTS	AT-192
A/T Wiring diagram AT - LPSV	AT-164
A/T Wiring diagram AT - NONDTC	AT-215
A/T Wiring diagram AT - OVRCSV	AT-187
A/T Wiring diagram AT - SSV/A	AT-169
A/T Wiring diagram AT - SSV/B	AT-173
A/T Wiring diagram AT - TCCSIG	AT-156
A/T Wiring diagram AT - TCV	AT-150
A/T Wiring diagram AT - TPS.....	AT-179

ALPHABETICAL INDEX

A/T Wiring diagram AT - VSSMTR.....AT-199
 AT/C - Wiring diagram.....EC-443
 ATP switch (ATX14A).....TF-143
 ATP warning lamp (ATX14A)TF-133
 AudioEL-179
 AUDIO - Wiring diagram.....EL-180, 183
 Audio and A/C control removal and
 installation - See Instrument panelBT-22
 AUT/DP - Wiring diagramEL-209
 Auto air conditioner - Wiring diagramHA-31
 Automatic amplifierHA-35
 Automatic amplifier (auto A/C)HA-51
 Automatic drive positionerEL-204
 Automatic speed control system - See
 ASCDEL-239
 Automatic transmission fluid
 replacement.....MA-23
 Automatic transmission numberGI-42
 Auxiliary air control (AAC) valveEC-423
 Axle housing (rear)AX-20

B

Back doorBT-16
 Back door opener - See Back doorBT-16
 Back door trim.....BT-35
 Back-up lampEL-85
 Back-up lamp switch (M/T)MT-6, 7
 BACK/L - Wiring diagram.....EL-85
 Ball joint (front)SU-14
 Base idle air volume initialingEC-58
 Basic inspectionEC-102
 BatterySC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 13, 22
 Baulk ring (M/T).....MT-15
 Blower motor (auto A/C).....HA-70
 Blower motor (manual A/C).....HA-166
 Blower resistor (manual A/C)HA-166
 Body alignmentBT-60
 Brake boosterBR-19
 Brake control valve (Proportioning
 valve).....BR-11
 Brake fluid changeBR-7
 Brake fluid levelMA-27
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-27
 Brake lines and cables inspectionMA-27
 Brake lining wear temporary checkingMA-28
 Brake master cylinderBR-16
 Brake pedalBR-14
 Bulb specificationsEL-392
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-588, 595

C

Camshaft inspectionEM-43
 Camshaft position sensor (PHASE)EC-343
 Canister-See EVAP canisterEC-32
 Center bearing assembly (propeller
 shaft)PD-11
 Center bearing disassembly (propeller
 shaft).....PD-9
 Center case (Transfer) (ATX14A)TF-154
 Center case (Transfer) (TX10A)TF-16
 CHARGE - Wiring diagramSC-21
 Charging systemSC-20
 Chassis and body maintenanceMA-22
 CHIME - Wiring diagram.....EL-146
 CIGAR - Wiring diagram.....EL-167
 Cigarette lighter.....EL-167
 Circuit breaker.....EL-16
 CKPS - Wiring diagramEC-335
 Closed loop control (Left bank).....EC-492
 Closed loop control (Right bank)EC-492
 Closed throttle position switchEC-432
 Clutch coverCL-13
 Clutch discCL-14
 Clutch drum (Transfer) (ATX14A)TF-156
 Clutch fluid level.....MA-22
 Clutch force release limit adjustment
 (ATX14A)TF-71
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-9
 Clutch pedalCL-5
 Clutch pressure switch (Transfer)
 (ATX14A)TF-142
 Clutch release bearing.....CL-10
 Clutch withdrawal lever.....CL-10
 Coil spring (front).....SU-9
 Coil spring (rear)SU-20
 Collision diagnosis.....RS-59
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-36
 Combination meterEL-114
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-22
 Combination switch.....EL-28
 COMPAS - Wiring diagram.....EL-131
 CompassEL-130
 Component Location (auto A/C).....HA-28
 Component Location (manual A/C).....HA-148
 Compression pressureEM-14
 Compressor clutch removal and instal-
 lation (auto A/C)HA-116
 Compressor clutch removal and instal-
 lation (manual A/C)HA-197
 Compressor description (manual A/C)HA-139
 Compressor precaution (auto A/C)HA-7
 Compressor precaution (manual A/C).....HA-131

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Compressor special service tool (auto
A/C)HA-11
Compressor special service tool
(manual A/C)HA-135
Connecting rodEM-66
Connecting rod bearing clearanceEM-70
Connecting rod bushing clearanceEM-71
Connector inspectionGI-21
Console box - See Instrument panelBT-22
CONSULT for ABSBR-43
CONSULT for all-mode 4WD (ATX14A)TF-62
CONSULT for engineEC-82
CONSULT-II general informationGI-38
Control lever (Transfer) (TX10A)TF-15
Control valve (A/T)AT-302
Control valve (Transfer) (ATX14A)TF-159
Converter housing installationAT-278
Coolant mixture ratioMA-13
Coolant replacementMA-15
Cooling circuit (engine)LC-11
Counter gear (M/T)MT-15
Counter gear (Transfer) (TX10A)TF-17
Coupling sleeve (M/T)MT-15
"Crankcase emission control system -
See positive crankcase ventilation"EC-38
CrankshaftEM-68
Crankshaft position sensor (POS)EC-335
Crankshaft position sensor (POS)
chippingEC-518
Crankshaft position sensor (REF)EC-511
Cruise control - See ASCDEL-239
Cylinder blockEM-62
Cylinder headEM-39
Cylinder head bolt tighteningEM-50

D

Data link connector for ConsultEC-82
Daytime light systemEL-53
Daytime running light - See Daytime
light systemEL-53
DEF - Wiring diagramEL-172
Detonation sensor - See Knock sensorEC-329
Diagnostic trouble code (DTC) for OBD
systemEC-8, 61
Diagnostic trouble code (DTC) inspec-
tion priority chartEC-117
Differential carrier assemblyPD-31, 58
Differential carrier disassemblyPD-45
Differential gear oil replacementMA-26
DimensionsGI-43
D/LOCK - Wiring diagramEL-274
Dome light - See Interior lampEL-108
Door glassBT-19
Door lockBT-19
Door mirrorBT-59
Door trimBT-31
Door, frontBT-19
Door, rearBT-21
Drive belt inspectionMA-14

Drive chain (Transfer) (ATX14A)TF-156
Drive chain (Transfer) (TX10A)TF-17
Drive pinion diff. inspectionPD-24, 48
Drive pinion heightPD-26, 54
Drive plate runoutEM-71
Drive shaft (front)AX-12
Dropping resistor (A/T)AT-167
DTC work supportEC-94
DTRL - Wiring diagramEL-62

E

ECM input/output signalEC-128
ECTS - Wiring diagramEC-172, 190
Electric sun roofEL-195
Electrical diagnosesGI-24
Electrical ignition systemEC-30
Electrical unitFoldout
Electrical units locationEL-372
Engine compartmentBT-61
Engine control circuit diagramEC-24
Engine control component parts
locationEC-20
Engine control module (ECM)EC-445
Engine control system diagram and
chartEC-25
Engine coolant temperature sensor
(ECTS)EC-170, 188
Engine fail-safe systemEC-118
Engine oil filter replacementMA-19
Engine oil precautionsGI-7
Engine oil replacementMA-19
Engine outer component partsEM-10
Engine removalEM-58
Engine room - See Engine
compartmentBT-61
Engine serial numberGI-42
EVAP canisterEC-33
EVAP canister purge volume control
solenoid valveEC-32, 368, 542
EVAP canister vent control
valveEC-375, 554, 574
EVAP control system (small leak)
diagnosisEC-353, 395, 527
EVAP control system pressure sensorEC-382
EVAP control system purge flow moni-
toring diagnosisEC-562
EVAP vapor lines inspectionMA-21
Evaporative emission (EVAP) systemEC-32
Exhaust systemFE-8
Exhaust system inspectionMA-22
ExteriorBT-36

F

4LO indicator lamp (ATX14A)TF-135
4WD shift indicator lamp (ATX14A)TF-129
4WD shift switch (ATX14A)TF-142

ALPHABETICAL INDEX

4WD solenoid valve (ATX14A)TF-142
 4WD warning lamp (ATX14A).....TF-45
 Fan control amp. (auto A/C).....HA-72
 Fan switch (manual A/C).....HA-166
 F/FOG - Wiring diagramEL-89
 Final drive disassemblyPD-44
 Final drive pre-inspectionPD-44
 Final drive removal and installationPD-44
 Finisher, interior - See TrimBT-29
 Fluid temperature sensor (A/T)AT-110
 Fluids.....MA-12
 Flywheel (clutch)CL-14
 Flywheel runout.....EM-71
 FO2H-L - Wiring diagramEC-244
 FO2H-R - Wiring diagramEC-243
 Fog lamp, front.....EL-86
 Fog lamp, front, removal and
 installationBT-13
 Fork rod (M/T)MT-17
 Forward clutch.....AT-321
 F/PUMP - Wiring diagramEC-629
 Freeze frame data.....EC-61
 FRO2LH - Wiring diagramEC-198, 224, 236
 FRO2RH - Wiring diagram.....EC-197, 223, 235
 Front axle.....AX-2
 Front bumperBT-13
 Front case (Transfer) (ATX14A)TF-164
 Front case (Transfer) (TX10A).....TF-16
 Front combination lamp removal and
 installationBT-13
 Front disc brakeBR-22
 Front doorBT-19
 Front drive shaft (Transfer) (ATX14A)TF-156
 Front drive shaft (Transfer) (TX10A)TF-17
 Front final drive disassembly (4WD).....PD-19
 Front final drive pre-inspection (4WD).....PD-19
 Front final drive removal and installa-
 tion (4WD).....PD-19
 Front fog lamp.....EL-86
 Front fog lamp removal and installationBT-13
 Front heated oxygen sensor (HO2S)
 (Left bank)EC-193, 203, 211, 219, 232
 Front heated oxygen sensor (HO2S)
 (Right bank).....EC-193, 203, 211, 219, 232
 Front heated oxygen sensor heater
 (Left bank).....EC-241
 Front heated oxygen sensor heater
 (Right bank)EC-241
 Front revolution sensor (Transfer)
 (ATX14A)TF-143
 Front seat.....BT-43
 Front seat beltRS-4
 Front suspension.....SU-2
 Front washerEL-155
 Front wiperEL-155
 Fuel cut control (at no load & high
 engine speed)EC-32
 Fuel filler lid.....BT-16
 Fuel filter replacementMA-17
 Fuel gaugeEL-114
 Fuel injection system (Left bank)EC-295, 303

Fuel injection system (Right bank)EC-295, 303
 Fuel line inspectionMA-17
 Fuel precautionsGI-8
 Fuel pressure check.....EC-39
 Fuel pressure regulatorEC-40
 Fuel pressure releaseEC-39
 Fuel pumpEC-627
 Fuel systemFE-4
 Fuel tank temperature sensorEC-310
 Fuel tank vacuum relief valveEC-33
 FUELLH - Wiring diagram.....EC-298, 306
 FUEL RH - Wiring diagramEC-297, 305
 FuseEL-16
 Fuse blockFoldout
 Fusible linkEL-16

G

Garage jack and safety standGI-45
 Gauges.....EL-114
 Gear components (M/T)MT-15
 Generator - See AlternatorSC-29
 Generic scan tool (GST)EC-96
 GlassBT-19
 GreaseMA-12
 Ground distribution.....EL-17

H

Harness connectorEL-5
 Harness connector inspectionGI-21
 Harness layoutEL-376
 Hazard warning lampEL-94
 Headlamp.....EL-32
 Headlining - See Roof trimBT-34
 Heated seat.....BT-46, EL-202
 Height (Dimensions)GI-43
 HFC134a (R134a) system precaution
 (auto A/C).....HA-3
 HFC134a (R134a) system precaution
 (manual A/C).....HA-127
 HFC134a (R134a) system service pro-
 cedure (auto A/C).....HA-111
 HFC134a (R134a) system service pro-
 cedure (manual A/C).....HA-192
 HFC134a (R134a) system service tools
 (auto A/C).....HA-12
 HFC134a (R134a) system service tools
 (manual A/C).....HA-136
 HFC134a system service equipment
 precaution (auto A/C).....HA-8
 HFC134a system service equipment
 precaution (manual A/C).....HA-132
 High clutch.....AT-318
 H/LAMP - Wiring diagramEL-39
 Hood.....BT-13
 HornEL-166
 HORN - Wiring diagram.....EL-166

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

How to erase DTC for OBD system.....EC-73
HSEAT - Wiring diagram.....EL-202

I

IACV-AAC valveEC-423
IATS - Wiring diagramEC-167
Identification plateGI-42
Idle air control valve (IACV)EC-423
Idle mixture ratioEC-43
Idle speedEC-43
IGN/SG - Wiring diagramEC-502
Ignition control systemEC-500
Ignition timingEC-43
ILL - Wiring diagramEL-102
IlluminationEL-99
In vehicle sensor (auto A/C).....HA-101
INJECT - Wiring diagramEC-619
InjectorEC-618
Injector removal and installationEC-41
Instrument panelBT-22
INT/L - Wiring diagramEL-111
Intake air temperature sensorEC-165
Intake door control linkage adjustment
(auto A/C).....HA-69
Intake door control linkage adjustment
(manual A/C).....HA-164
Intake door motor (auto A/C)HA-63
Intake door motor (manual A/C).....HA-159
Intake manifoldEM-12
Intake sensor (auto A/C)HA-108
Integrated homelink transmitterEL-349
InteriorBT-29
Interior lampEL-108
Interior lamp on-off control.....EL-109
Internal gear (Transfer) (ATX14A)TF-165
IVC-L - Wiring diagramEC-454
IVC-R - Wiring diagramEC-454
IVCS-L - Wiring diagramEC-486
IVCS-R - Wiring diagramEC-486

J

Jacking pointsGI-44
Journal bearing assembly (propeller
shaft)PD-11
Journal bearing disassembly (propeller
shaft)PD-10
Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control systemEL-288
Knock sensor (KS)EC-329
Knuckle spindleAX-10

KS - Wiring diagramEC-331

L

Length (Dimensions)GI-43
License lampEL-76
Lifting pointsGI-46
Limited slip diff. adjustmentPD-51
Limited slip diff. assemblyPD-52
Limited slip diff. disassemblyPD-49
Limited slip diff. inspectionPD-50
Line pressure solenoid valveAT-147, 161, 167
Line pressure switch (Transfer)
(ATX14A)TF-142
Line pressure test (A/T)AT-62
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-645
Location of electrical unitsEL-372
Lock, doorBT-19
Low and reverse brakeAT-325
LSV (Load sensing valve)BR-12
Lubricant (R134a) A/C (auto A/C)HA-113
Lubricant (R134a) A/C (manual A/C)HA-194
LubricantsMA-12
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-29
Luggage room lampEL-108

M

MAFS - Wiring diagramEC-155
Magnet clutch (auto A/C).....HA-78, 116
Magnet clutch (manual A/C).....HA-197
MAIN - Wiring diagramEC-143
Main drive gear (M/T).....MT-15
Main gear (Transfer) (TX10A).....TF-17
Main oil pump (Transfer) (ATX14A)TF-162
Mainshaft (M/T)MT-15
Mainshaft (Transfer) (ATX14A)TF-156
Mainshaft (Transfer) (TX10A)TF-17
Maintenance (engine)MA-14
MAJOR OVERHALLAT-282
Major overhaul (Transfer) (ATX14A).....TF-151
Major overhaul (Transfer) (TX10A).....TF-15
Malfunction indicator lamp (MIL)EC-75
Manual air conditioner - Wiring diagramHA-152
Manual transmission numberGI-42
Manual transmission oil replacementMA-22
Mass air flow sensor (MAFS)EC-151
Master cylinder (brake)BR-16
Master cylinder (clutch)CL-8
MeterEL-114
METER - Wiring diagramEL-119
MIL & Data link connectors circuitEC-652
MIL/DL - Wiring diagramEC-652
MIRROR - Wiring diagramEL-199
Mirror defoggerEL-170

ALPHABETICAL INDEX

Mirror, door.....BT-59
 Mirror, out sideBT-59
 MisfireEC-321
 Mode door control linkage adjustment
 (auto A/C).....HA-58
 Mode door control linkage adjustment
 (manual A/C).....HA-183
 Mode door motor (auto A/C)HA-53
 Model variationGI-40
 Molding - See ExteriorBT-36
 M/T major overhaulMT-14
 M/T removal and installationMT-10
 MULTI - Wiring diagram.....EL-292
 Multi-remote control system.....EL-288
 Multiport fuel injection (MFI) systemEC-28
 Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-352
 NATS - Wiring diagramEL-354
 Neutral-4LO switch (ATX14A).....TF-143
 NVH troubleshooting (AX).....AX-3, 19
 NVH troubleshooting (BR).....BR-6
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-5
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-6
 NVH troubleshooting (SU)SU-3, 17
 NVH troubleshooting (Transfer)
 (TX10A)TF-10
 NVIS (Nissan vehicle immobilizer
 system).....EL-352

O

Oil change (capacity)MA-12
 Oil filter (Transfer) (ATX14A)TF-149
 Oil pan (engine)EM-15
 Oil pressure (engine)LC-5
 Oil pump (A/T).....AT-298
 Oil pump (engine)LC-6
 Oil pump regulator valve (engine)LC-7
 Oil seal replacement (engine).....EM-36
 Oil seal replacement (front final drive
 4WD).....PD-16
 Oil seal replacement (front of final
 drive)PD-41
 On board diagnostic systemEC-60
 Operating cylinder (clutch).....CL-9
 Out side mirrorBT-59
 Overdrive control switch.....AT-263
 Overrun clutchAT-321
 Overrun clutch solenoid valve.....AT-189

P

P/ANT - Wiring diagram.....EL-192
 Park/Neutral position switchEC-605
 Park/neutral position switch (A/T)AT-103, 263
 Park/neutral position switch (M/T)MT-6, 7
 Parking brake controlBR-30
 Parking lampEL-76
 PCV (positive crankcase ventilation)EC-38
 PGC/V - Wiring diagramEC-371, 545
 PHASE - Wiring diagramEC-343
 Pinion bearing preload diff.PD-26
 Pinion gear height diff.PD-26, 54
 Piston assemblyEM-72
 Piston pin inspectionEM-64
 Piston ring inspection.....EM-65
 Piston to bore clearance.....EM-67
 Planetary carrier (Transfer) (ATX14A)TF-165
 PNP/SW - Wiring diagramEC-608
 POS - Wiring diagramEC-518
 POWER - Wiring diagram.....EL-10
 Power antenna.....EL-191
 Power door lockEL-272
 Power door mirrorEL-199
 Power seatEL-200
 Power steering fluid level.....MA-29, ST-8
 Power steering gear.....ST-17
 Power steering hydraulic pressureST-10
 Power steering oil pressure switchEC-636
 Power steering oil pump.....ST-27
 Power steering system bleeding.....ST-9
 Power supply routingEL-9
 Power transistor & ignition coil.....EC-500
 Power windowEL-259
 PRE/SE - Wiring diagramEC-385
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-13
 Pressure test (A/T)AT-62
 Propeller shaftPD-3
 Propeller shaft greasing.....MA-25
 Propeller shaft inspectionMA-25
 Propeller shaft on vehicle service.....PD-8
 Propeller shaft vibrationPD-8
 PST/SW - Wiring diagramEC-637

R

Rack retainer adjustment.....ST-8
 RadiatorLC-20, 22
 Radio - See Audio.....EL-179
 Rear air spoilerBT-36
 Rear axleAX-18
 Rear bumperBT-16
 Rear case (Transfer) (ATX14A)TF-154
 Rear case (Transfer) (TX10A)TF-16
 Rear combination lamp removal and
 installationBT-36
 Rear cover packing replacement diff.PD-17

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Rear doorBT-21
 Rear drum brakeBR-26
 Rear heated oxygen sensor
 (HO2S)EC-248, 258, 268, 278
 Rear heated oxygen sensor (HO2S)
 heater.....EC-287
 Rear seatBT-47
 Rear seat belt.....RS-5
 Rear side windowBT-58
 Rear suspensionSU-17
 Rear washer.....EL-160
 Rear window defogger.....EL-170
 Rear wiper.....EL-160
 REF - Wiring diagram.....EC-511
 Refrigerant pressure sensor (auto A/C).....HA-84
 Refrigerant pressure sensor (manual
 A/C).....HA-190
 Refrigerant connection precaution (auto
 A/C).....HA-5
 Refrigerant connection precaution
 (manual A/C).....HA-129
 Refrigerant discharging evacuating
 charging (auto A/C)HA-111
 Refrigerant general precaution (auto
 A/C).....HA-4
 Refrigerant general precaution (manual
 A/C).....HA-128
 Refrigerant lines (auto A/C).....HA-120
 Refrigerant lines (manual A/C).....HA-201
 Refrigerant pressure sensor.....EC-641
 Refrigeration cycle (auto A/C)HA-15
 Refrigeration cycle (manual A/C)HA-139
 Release bearing (clutch).....CL-10
 REMOTE - Wiring diagram.....EL-190
 Removal and installation (A/T).....AT-277
 Removal and installation (Transfer)
 (ATX14A)TF-150
 Removal and installation (Transfer)
 (TX10A)TF-14
 Reverse clutch.....AT-315
 Reverse idler shaft (M/T)MT-15
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T).....MT-6, 7
 Reverse main gear (M/T).....MT-15
 Revolution sensor (A/T).....AT-115
 Ring gear diff. inspectionPD-24, 48
 RO2H-L - Wiring diagram.....EC-291
 RO2H-R - Wiring diagram.....EC-290
 Road wheel sizeGI-43
 Roof trimBT-34
 Room lamp - See Interior lampEL-108
 RRO2LH - Wiring diagram...EC-252, 262, 272, 282
 RRO2RH - Wiring diagram..EC-251, 261, 271, 281

S

SAE J1930 terminology listGI-50
 Screw jackGI-44
 Seal - See ExteriorBT-36
 SEAT - Wiring diagramEL-200

Seat belt inspectionMA-30, RS-7
 Seat belt pre-tensioner.....RS-3
 Seat belt pre-tensioner disposalRS-22
 Seat belt, front.....RS-4
 Seat belt, rear.....RS-5
 Seat, frontBT-43
 Seat, rearBT-47
 Self-diagnosis (Transfer) (ATX14A)TF-59
 SHIFT - Wiring diagramAT-266
 Shift control (Transfer) (TX10A)TF-18, 30
 Shift control components (M/T).....MT-17
 Shift fork (M/T)MT-17
 Shift leverMT-17
 Shift lock systemAT-265
 Shift schedule.....AT-357
 Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171
 Shift solenoid valve B (A/T) ..AT-125, 131, 147, 175
 Shock absorber (rear)SU-20
 Side air bagRS-21
 Side bearing preload (front final drive
 4WD).....PD-25
 Side trim.....BT-29
 Side window - See Rear side windowBT-58
 Smart entrance control unitEL-343
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-43
 Spark plug replacement.....MA-20
 SpeedometerEL-114
 Spiral cable.....RS-17
 Spot lamp.....EL-108
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-196
 SRS - See Supplemental Restraint
 SystemRS-10
 SRS - Wiring diagramRS-35
 S/SIG - Wiring diagramEC-624
 Stabilizer bar (front).....SU-12
 Stabilizer bar (rear)SU-22
 Stall test (A/T)AT-59
 Standardized relayEL-7
 START - Wiring diagramSC-11, 12
 Start signalEC-623
 StarterSC-19
 Starting system.....SC-10
 Steering gear, linkage and transfer
 gear inspectionMA-28
 Steering linkageST-17
 Steering switch.....EL-31
 Steering transfer gearST-15
 Steering wheel and column.....ST-11
 Steering wheel playST-7
 Steering wheel turning force.....ST-9
 Stop lamp.....EL-83
 STOP/L - Wiring diagram.....EL-83
 Striking rod (M/T)MT-17
 Strut (front)SU-9
 Sub-gear (M/T).....MT-15
 Sub-oil pump (Transfer) (ATX14A)TF-162
 Sun gear (Transfer) (ATX14A)TF-165
 Sun roof, electric.....EL-195
 Sunload sensor (auto A/C).....HA-104

ALPHABETICAL INDEX

Sunroof.....BT-48
 Supplemental Restraint System.....RS-10
 Supplemental restraint system - Wiring diagram.....RS-35
 S/VCSW - Wiring diagram.....EC-494
 Swirl control valve control solenoid valve.....EC-459
 Swirl control valve control vacuum check switch.....EC-494
 SWL/V - Wiring diagram.....EC-459
 Symbols and abbreviations.....GI-10
 Symptom matrix chart.....EC-119
 Synchronizer (M/T).....MT-15
 System readiness test (SRT) code.....EC-62

T

2-4WD shift solenoid valve (ATX14A).....TF-142
 Tachometer.....EL-114
 Tail lamp.....EL-76
 TAIL/L - Wiring diagram.....EL-78
 TCM circuit diagram.....AT-13
 TCM inspection table.....AT-92
 Temperature control cable and linkage adjustment (manual A/C).....HA-181
 TFTS - Wiring diagram.....EC-312
 THEFT - Wiring diagram.....EL-320
 Theft warning system.....EL-312
 Thermometer.....EL-130
 Thermostat.....LC-17
 Three way catalyst function (Left bank).....EC-348
 Three way catalyst function (Right bank).....EC-348
 Three way catalyst precautions.....GI-6
 Throttle bodies.....EM-12
 Throttle position sensor (TPS).....EC-175
 Throttle position sensor adjustment.....EC-102
 Throttle position switch.....EC-432, AT-184, 264
 Throwout bearing - See Clutch release bearing.....CL-10
 Tie-rod.....ST-21
 Tie-rod ball joints.....ST-21
 Tightening torque of standard bolts.....GI-49
 Timing chain.....EM-20
 Tire rotation.....MA-27
 Tire size.....GI-43
 Tooth contact (front final drive 4WD).....PD-30
 Tooth contact diff.PD-57
 Torque converter installation.....AT-278
 Torque convertor clutch solenoid valve.....AT-152, 161
 Tow truck towing.....GI-46
 Towing point.....GI-48
 TP/SW - Wiring diagram.....EC-435
 TPS - Wiring diagram.....EC-181
 Transfer case (TX10A).....TF-16
 Transfer control unit inspection table (ATX14A).....TF-86
 Transfer dropping resistor (ATX14A).....TF-143

Transfer fluid replacement (All-mode 4WD model).....MA-25
 Transfer fluid replacement (Part time 4WD model).....MA-24
 Transfer fluid temperature sensor (ATX14A).....TF-142
 Transfer motor (ATX14A).....TF-148
 Transfer motor relay (ATX14A).....TF-144
 Transfer serial number.....GI-43
 Transmission case (M/T).....MT-14
 TRANSMT - Wiring diagram.....EL-349
 Tread-FR&RR (Dimensions).....GI-43
 Trim.....BT-29
 Trouble diagnoses.....GI-34
 Turbine revolution sensor.....AT-202
 TURN - Wiring diagram.....EL-96
 Turn signal lamp.....EL-94
 Two trip detection logic.....EC-60
 Two-pole lift.....GI-46

U

Under body.....BT-63

V

Vacuum cut valve.....EC-32
 Vacuum cut valve bypass valve.....EC-32, 586, 592
 Vacuum hose (brake system).....BR-21
 Vacuum hose drawing (Engine control).....EC-26
 Valve clearance.....EM-53
 Valve guide.....EM-44
 Valve seat.....EM-46
 Valve spring.....EM-47
 Vehicle identification number.....GI-41
 Vehicle recovery (freeing a stuck vehicle).....GI-48
 Vehicle speed sensor (VSS).....EC-418
 VENT/V - Wiring diagram.....EC-377, 556, 577
 VIAS.....EC-612
 VIAS - Wiring diagram.....EC-612
 Viscosity number (SAE).....MA-13
 VSS - Wiring diagram.....EC-421

W

Wait detection switch (ATX14A).....TF-143
 WARN - Wiring diagram.....EL-135
 Warning chime.....EL-144
 Warning lamps.....EL-134
 Washer, front.....EL-155
 Washer, rear.....EL-160
 Water cock control rod adjustment (manual A/C).....HA-181
 Water pump.....LC-13
 Water temperature gauge.....EL-114
 Weatherstrip - See Exterior.....BT-36

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Wheel balance	MA-26	Window, rear side	BT-58
Wheel bearing (front).....	AX-4	Window, side - See Rear side window.....	BT-58
Wheel bearing (rear)	AX-19	Windshield.....	BT-56
Wheel hub (front).....	AX-6	WIP/R - Wiring diagram	EL-162
Wheel sensors (ABS).....	BR-56, 81	WIPER - Wiring diagram	EL-157
Wheel size	GI-43	Wiper, front.....	EL-155
Wheelarch height	SU-6	Wiper, rear	EL-160
Wheelbase (Dimensions)	GI-43	Wiring Diagram (Cell code) list.....	EL-393
Wide open & closed throttle position switch.....	EC-175	Wiring diagram (Transfer) (ATX14A)	TF-50
Width (Dimensions)	GI-43	Wiring diagrams	GI-11
WINDOW - Wiring diagram	EL-263	Withdrawal lever (clutch)	CL-10
Window, door	BT-19	Wrist pin - See Piston pin inspection.....	EM-64