

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

SECTION **IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram .....EC-446, 453, 462  
 ABS - Wiring diagram .....BR-40  
 ABS sensor rotor .....AX-6, 20  
 Absolute pressure sensor .....EC-197  
 A/C air flow .....HA-27, 178  
 A/C component layout .....HA-20, 176  
 A/C compressor clutch removal and installation .....HA-148, 229  
 A/C compressor description .....HA-171  
 A/C compressor precaution .....HA-7, 163  
 A/C compressor special service tool .....HA-11, 167  
 A/C control linkage adjustment (manual A/C) .....HA-196, 213, 215  
 A/C control operation (auto A/C) .....HA-25  
 A/C control operation (manual A/C) .....HA-177  
 A/C diagnostic work flow (auto A/C) .....HA-66  
 A/C diagnostic work flow (manual A/C) .....HA-187  
 A/C HFC134a (R134a) system precaution .....HA-3, 159  
 A/C HFC134a (R134a) system service procedure .....HA-143, 224  
 A/C HFC134a (R134a) system service tools .....HA-12, 168  
 A/C HFC134a system service equipment precaution .....HA-8, 164  
 A/C lubricant (R134a) .....HA-145, 226  
 A/C operational check .....HA-67, 188  
 A/C performance chart .....HA-116, 207  
 A/C performance test diagnoses .....HA-114, 205  
 A/C relay .....HA-110, 222  
 A/C self-diagnoses (auto A/C) .....HA-45  
 A/C service data specification .....HA-158, 239  
 A/C switch .....HA-222  
 A/C system description (auto A/C) .....HA-24  
 A/C trouble diagnoses (auto A/C) .....HA-29  
 A/C trouble diagnoses (manual A/C) .....HA-180  
 A/C, A - Wiring diagram .....HA-33, 38  
 A/C, M - Wiring diagram .....HA-184  
 Accelerator control system .....FE-3  
 Accelerator wire adjustment .....FE-3  
 Actuator lever (Transfer) (ATX14A) .....TF-150  
 Air bag .....RS-10  
 Air bag disposal .....RS-22  
 Air bag precautions .....GI-3  
 Air bleeding (hydraulic clutch) .....CL-7  
 Air bleeding for brake system .....BR-8  
 Air cleaner filter replacement .....MA-18  
 Air conditioner cut control .....EC-33  
 Air flow meter - See Mass air flow sensor .....EC-184, 191, 481  
 Air mix door control linkage adjustment .....HA-86  
 Air mix. door motor .....HA-83, 140  
 Air spoiler, rear .....BT-36  
 All - mode 4WD system (ATX14A) .....TF-42  
 Alternator .....SC-29  
 Ambient sensor .....HA-129  
 Angular tightening application .....EM-3

Antenna - See Power antenna .....EL-198  
 Anti-lock brake system - Wiring diagram .....BR-40  
 ASCD (automatic speed control device) .....EL-248  
 ASCD - Wiring diagram .....EL-252  
 A/T - Wiring diagram - AT - FTS .....AT-107  
 A/T - Wiring diagram - AT - MAIN .....AT-96  
 A/T - Wiring diagram - AT - PNP/SW .....AT-101  
 A/T - Wiring diagram - AT - VSS A/T .....AT-113  
 A/T control .....EC-476  
 A/T diagnosis communication line .....EC-660  
 A/T fluid temperature sensor .....AT-110  
 A/T self-diagnoses .....AT-46  
 A/T shift lock system .....AT-264  
 A/T shift lock system - Wiring diagram .....AT-265  
 A/T trouble diagnoses .....AT-53  
 A/T Wiring diagram - AT - ENG SS .....AT-117  
 A/T Wiring diagram AT - 1ST .....AT-123  
 A/T Wiring diagram AT - 2ND .....AT-129  
 A/T Wiring diagram AT - 3RD .....AT-135  
 A/T Wiring diagram AT - 4TH .....AT-142  
 A/T Wiring diagram AT - BA/FTS .....AT-192  
 A/T Wiring diagram AT - LPSV .....AT-164  
 A/T Wiring diagram AT - NONDTC .....AT-215  
 A/T Wiring diagram AT - OVRCSV .....AT-187  
 A/T Wiring diagram AT - SSV/A .....AT-169  
 A/T Wiring diagram AT - SSV/B .....AT-173  
 A/T Wiring diagram AT - TCCSIG .....AT-156  
 A/T Wiring diagram AT - TCV .....AT-150  
 A/T Wiring diagram AT - TPS .....AT-179  
 A/T Wiring diagram AT - VSSMTR .....AT-199  
 AT/C - Wiring diagram .....EC-477  
 ATP switch (ATX14A) .....TF-142  
 ATP warning lamp (ATX14A) .....TF-132  
 Audio .....EL-186  
 AUDIO - Wiring diagram .....EL-187  
 Audio and A/C control removal and installation - See Instrument panel .....BT-22  
 AUT/DP - Wiring diagram .....EL-218  
 Auto air conditioner - Wiring diagram .....HA-33, 38  
 Automatic amplifier .....HA-42, 73  
 Automatic drive positioner .....EL-213  
 Automatic speed control system - See ASCD .....EL-248  
 Automatic transmission fluid replacement .....MA-23  
 Automatic transmission number .....GI-43  
 Auxiliary air control (AAC) valve .....EC-443, 450, 459  
 Axle .....MA-29  
 Axle housing (rear) .....AX-20

## B

Back door .....BT-16  
 Back door opener - See Back door .....BT-16  
 Back door trim .....BT-35  
 Back-up lamp .....EL-73  
 Back-up lamp switch (M/T) .....MT-5  
 BACK/L - Wiring diagram .....EL-73  
 Ball joint (front) .....SU-14

# ALPHABETICAL INDEX

Base idle air volume initialing.....EC-70  
 Basic inspection.....EC-117  
 Battery .....SC-4  
 Battery/Starting/Charging System  
     Tester.....SC-7, 13, 22  
 Baulk ring (M/T).....MT-11  
 Blower motor .....HA-95, 198  
 Blower resistor.....HA-198  
 Body alignment .....BT-62  
 Brake booster .....BR-22  
 Brake control valve (Proportioning  
     valve).....BR-11  
 Brake fluid change .....BR-7  
 Brake fluid level .....MA-27  
 Brake fluid level and line check .....BR-7  
 Brake hydraulic line .....BR-9  
 Brake inspection .....MA-27  
 Brake lines and cables inspection .....MA-27  
 Brake lining wear temporary checking .....MA-28  
 Brake master cylinder .....BR-16, 19  
 Brake pedal .....BR-14  
 Bulb specifications .....EL-476  
 Bumper, front .....BT-13  
 Bumper, rear .....BT-16  
 BYPS/V - Wiring diagram .....EC-644, 651

## C

Camshaft inspection .....EM-42  
 Camshaft position sensor (PHASE).....EC-333  
 Canister-See EVAP canister .....EC-34  
 Center bearing assembly (propeller  
     shaft) .....PD-11  
 Center bearing disassembly (propeller  
     shaft) .....PD-9  
 Center case (Transfer) (ATX14A) .....TF-153  
 Center case (Transfer) (TX10A) .....TF-16  
 CHARGE - Wiring diagram .....SC-21  
 Charging system .....SC-20  
 Chassis and body maintenance .....MA-22  
 CHIME - Wiring diagram.....EL-148  
 CIGAR - Wiring diagram.....EL-172  
 Cigarette lighter.....EL-172  
 Circuit breaker.....EL-16  
 Clock .....EL-173  
 CLOCK - Wiring diagram.....EL-173  
 Closed loop control (Bank 1) .....EC-567  
 Closed loop control (Bank 2) .....EC-567  
 Closed throttle position switch .....EC-468  
 Clutch cover.....CL-12  
 Clutch disc .....CL-12  
 Clutch drum (Transfer) (ATX14A) .....TF-155  
 Clutch fluid level.....MA-22  
 Clutch force release limit adjustment  
     (ATX14A) .....TF-71  
 Clutch master cylinder .....CL-8  
 Clutch operating cylinder .....CL-9  
 Clutch pedal.....CL-5  
 Clutch pressure switch (Transfer)  
     (ATX14A) .....TF-141

Clutch release bearing.....CL-10 GI  
 Clutch withdrawal lever.....CL-10  
 Coil spring (front).....SU-9  
 Coil spring (rear) .....SU-20 MA  
 Collision diagnosis.....RS-59  
 Combination lamp, front, removal and  
     installation .....BT-13 EM  
 Combination lamp, rear, removal and  
     installation .....BT-36  
 Combination meter .....EL-118 LC  
 Combination meter removal and instal-  
     lation - See Instrument panel.....BT-22  
 Combination switch.....EL-28 EC  
 COMPAS - Wiring diagram .....EL-133  
 Compass .....EL-132  
 Component Location (auto A/C).....HA-29 FE  
 Component Location (manual A/C).....HA-180  
 Compression pressure .....EM-14 CL  
 Compressor clutch removal and  
     installation.....HA-148, 229  
 Compressor description .....HA-171  
 Compressor precaution.....HA-7, 163 MT  
 Compressor special service tool .....HA-11, 167  
 Connecting rod.....EM-67 AT  
 Connecting rod bearing clearance.....EM-71  
 Connecting rod bushing clearance .....EM-72  
 Connector inspection.....GI-21 TF  
 Console box - See Instrument panel.....BT-22  
 CONSULT for ABS .....BR-46  
 CONSULT for all-mode 4WD (ATX14A) .....TF-62 PD  
 CONSULT for engine .....EC-97  
 CONSULT-II for engine .....EC-97  
 CONSULT-II general information.....GI-39 AX  
 Control valve (A/T) .....AT-301  
 Control valve (Transfer) (ATX14A) .....TF-158  
 Converter housing installation.....AT-277 SU  
 Coolant mixture ratio.....MA-13  
 Coolant overtemperature enrichment  
     protection .....EC-306 BR  
 Coolant replacement.....MA-15  
 Cooling circuit (engine) .....LC-11  
 Counter gear (M/T).....MT-11 ST  
 Counter gear (Transfer) (TX10A).....TF-17  
 Coupling sleeve (M/T) .....MT-11  
 Crankcase emission control system -  
     See positive crankcase ventilation .....EC-49 RS  
 Crankshaft.....EM-69  
 Crankshaft position sensor (POS) .....EC-325 BT  
 Crankshaft position sensor (POS)  
     chipping .....EC-586  
 Crankshaft position sensor (REF).....EC-580 HA  
 Cruise control - See ASCD.....EL-248  
 Cylinder block .....EM-63 SC  
 Cylinder head.....EM-38  
 Cylinder head bolt tightening .....EM-50

## D

Data link connector for Consult.....EC-97  
 Daytime light system.....EL-45

## ALPHABETICAL INDEX

Daytime running light - See Daytime  
light system .....EL-45  
DEF - Wiring diagram .....EL-176  
Detonation sensor - See Knock  
sensor .....EC-291, 320  
Diagnostic trouble code (DTC) for OBD  
system .....EC-8, 73  
Diagnostic trouble code (DTC) inspec-  
tion priority chart .....EC-130  
Differential carrier assembly .....PD-31, 58  
Differential carrier disassembly .....PD-45  
Differential gear oil replacement .....MA-26  
Dimensions .....GI-44  
D/LOCK - Wiring diagram .....EL-289  
Dome light - See Interior lamp .....EL-92  
Door glass .....BT-19  
Door lock .....BT-19  
Door mirror .....BT-61  
Door trim .....BT-31  
Door, front .....BT-19  
Door, rear .....BT-21  
Drive belt inspection .....MA-14  
Drive chain (Transfer) (ATX14A) .....TF-155  
Drive chain (Transfer) (TX10A) .....TF-17  
Drive pinion diff. inspection .....PD-24, 48  
Drive pinion height .....PD-26, 54  
Drive plate runout .....EM-72  
Drive shaft .....MA-30  
Drive shaft (front) .....AX-12  
Dropping resistor (A/T) .....AT-167  
DTC work support .....EC-108  
DTRL - Wiring diagram .....EL-50

### E

ECM input/output signal .....EC-141  
ECTS - Wiring diagram .....EC-205  
Electric sun roof .....EL-202  
Electrical diagnoses .....GI-24  
Electrical ignition system .....EC-32  
Electrical unit .....Foldout  
Electrical units location .....EL-457  
Engine compartment .....BT-63  
Engine control circuit diagram .....EC-26  
Engine control component parts  
location .....EC-22  
Engine control module (ECM) .....EC-479  
Engine control system diagram and  
chart .....EC-27  
Engine coolant temperature sensor  
(ECTS) .....EC-203, 227  
Engine fail-safe system .....EC-131  
Engine oil filter replacement .....MA-19  
Engine oil precautions .....GI-7  
Engine oil replacement .....MA-18  
Engine outer component parts .....EM-10  
Engine removal .....EM-59  
Engine room - See Engine  
compartment .....BT-63  
Engine serial number .....GI-43

EVAP canister .....EC-35  
EVAP canister purge volume control  
solenoid valve .....EC-34, 370, 594  
EVAP canister vent control  
valve .....EC-377, 606, 614  
EVAP control system (small leak)  
diagnosis .....EC-354, 399, 412, 623  
EVAP control system pressure  
sensor .....EC-384, 390  
EVAP control system purge flow moni-  
toring diagnosis .....EC-343  
EVAP vapor lines inspection .....MA-21  
Evaporative emission (EVAP) system .....EC-34  
Exhaust system .....FE-9  
Exhaust system inspection .....MA-22  
Exterior .....BT-36

### F

4LO indicator lamp (ATX14A) .....TF-134  
4WD shift indicator lamp (ATX14A) .....TF-128  
4WD shift switch (ATX14A) .....TF-141  
4WD solenoid valve (ATX14A) .....TF-141  
4WD warning lamp (ATX14A) .....TF-45  
Fan control amp. ....HA-98  
Fan switch .....HA-198  
F/FOG - Wiring diagram .....EL-75  
Final drive disassembly .....PD-44  
Final drive pre-inspection .....PD-44  
Final drive removal and installation .....PD-44  
Finisher, interior - See Trim .....BT-29  
FLS1 - Wiring diagram .....EC-429  
FLS2 - Wiring diagram .....EC-435  
FLS3 - Wiring diagram .....EC-640  
Fluid temperature sensor (A/T) .....AT-110  
Fluids .....MA-12  
Flywheel (clutch) .....CL-13  
Flywheel runout .....EM-72  
Fog lamp, front .....EL-74  
Fog lamp, front, removal and  
installation .....BT-13  
Fork rod (M/T) .....MT-13  
Forward clutch .....AT-320  
F/PUMP - Wiring diagram .....EC-698  
Freeze frame data .....EC-74  
Front axle .....AX-2  
Front bumper .....BT-13  
Front case (Transfer) (ATX14A) .....TF-163  
Front case (Transfer) (TX10A) .....TF-16  
Front combination lamp removal and  
installation .....BT-13  
Front disc brake .....BR-25  
Front door .....BT-19  
Front drive shaft (Transfer) (ATX14A) .....TF-155  
Front drive shaft (Transfer) (TX10A) .....TF-17  
Front final drive disassembly (4WD) .....PD-19  
Front final drive pre-inspection (4WD) .....PD-19  
Front final drive removal and installa-  
tion (4WD) .....PD-19  
Front fog lamp .....EL-74

# ALPHABETICAL INDEX

Front og lamp removal and installation .....BT-13  
 Front revolution sensor (Transfer)  
 (ATX14A) .....TF-142  
 Front seat .....BT-43  
 Front seat belt .....RS-4  
 Front suspension .....SU-2  
 Front washer .....EL-160  
 Front wiper .....EL-160  
 Fuel cut control (at no load & high  
 engine speed) .....EC-34  
 Fuel filler lid .....BT-16  
 Fuel filter replacement .....MA-17  
 Fuel gauge .....EL-118  
 Fuel injection system .....EC-283  
 Fuel injection system (Bank 1) .....EC-283, 291  
 Fuel injection system (Bank 2) .....EC-283, 291  
 Fuel level sensor .....EC-428, 432, 434, 639  
 Fuel line inspection .....MA-17  
 Fuel precautions .....GI-8  
 Fuel pressure check .....EC-51  
 Fuel pressure regulator .....EC-52  
 Fuel pressure release .....EC-51  
 Fuel pump .....EC-696  
 Fuel system .....FE-4  
 Fuel tank temperature sensor .....EC-298, 301  
 Fuel tank vacuum relief valve .....EC-35  
 Fuse .....EL-16  
 Fuse and fusible link box .....Foldout  
 Fuse block .....Foldout  
 Fusible link .....EL-16

## G

Garage jack and safety stand .....GI-46  
 Gauges .....EL-118  
 Gear components (M/T) .....MT-11  
 Generator - See Alternator .....SC-29  
 Generic scan tool (GST) .....EC-111  
 Glass .....BT-19  
 Grease .....MA-12  
 Ground distribution .....EL-17

## H

Harness connector .....EL-5  
 Harness connector inspection .....GI-21  
 Harness layout .....EL-460  
 Hazard warning lamp .....EL-78  
 Headlamp .....EL-31  
 Headlining - See Roof trim .....BT-34  
 Heated oxygen sensor 1  
 (bank 1) .....EC-232, 241, 254, 531, 539  
 Heated oxygen sensor 1  
 (bank 2) .....EC-232, 241, 254, 531, 539  
 Heated oxygen sensor 2  
 (bank 1) .....EC-264, 273, 547, 557  
 Heated oxygen sensor 2  
 (bank 2) .....EC-264, 273, 547, 557

Heated oxygen sensor 2 heater  
 (bank 1) .....EC-169, 176  
 Heated oxygen sensor 2 heater  
 (bank 2) .....EC-169, 176  
 Heated oxygen sensor heater .....EC-169, 176  
 Heated seat .....BT-46, EL-211  
 Height (Dimensions) .....GI-44  
 HFC134a (R134a) system precaution .....HA-3, 159  
 HFC134a (R134a) system service  
 procedure .....HA-143, 224  
 HFC134a (R134a) system service  
 tools .....HA-12, 168  
 HFC134a system service equipment  
 precaution .....HA-8, 164  
 High clutch .....AT-317  
 H/LAMP - Wiring diagram .....EL-35  
 Homelink universal transceiver .....EL-381  
 Hood .....BT-13  
 Horn .....EL-171  
 HORN - Wiring diagram .....EL-171  
 How to erase DTC for OBD system .....EC-86  
 HSEAT - Wiring diagram .....EL-211

## I

IACV-AAC valve .....EC-443, 450, 459  
 IATS - Wiring diagram .....EC-200  
 Identification plate .....GI-43  
 Idle air control valve (IACV) .....EC-443, 450, 459  
 Idle air volume learning .....EC-70  
 Idle mixture ratio .....EC-55  
 Idle speed .....EC-55  
 IGN/SG - Wiring diagram .....EC-678  
 Ignition control system .....EC-677  
 Ignition timing .....EC-55  
 ILL - Wiring diagram .....EL-86  
 Illumination .....EL-83  
 In vehicle sensor .....HA-132  
 INJECT - Wiring diagram .....EC-688  
 Injector .....EC-687  
 Injector removal and installation .....EC-53  
 Instrument panel .....BT-22  
 INT/L - Wiring diagram .....EL-95  
 Intake air temperature sensor .....EC-199, 230  
 Intake door control linkage adjustment ..HA-94, 196  
 Intake door motor .....HA-87, 191  
 Intake manifold .....EM-12  
 Intake sensor .....HA-138  
 Intake valve timing control .....EC-164  
 Intake valve timing control (Bank 1) .....EC-164  
 Intake valve timing control (Bank 2) .....EC-164  
 Intake valve timing control position  
 sensor (Bank 1) .....EC-522  
 Intake valve timing control position  
 sensor (Bank 2) .....EC-522  
 Intake valve timing control solenoid  
 valve (Bank 1) .....EC-487  
 Intake valve timing control solenoid  
 valve (Bank 2) .....EC-487  
 Integrated homelink transmitter .....EL-381



## ALPHABETICAL INDEX

Interior .....BT-29  
Interior lamp .....EL-92  
Interior lamp on-off control.....EL-93  
Internal gear (Transfer) (ATX14A) .....TF-164

### J

Jacking points .....GI-45  
Journal bearing assembly (propeller  
shaft) .....PD-11  
Journal bearing disassembly (propeller  
shaft) .....PD-10  
Junction box (J/B).....Foldout

### K

KEYLES - Wiring diagram .....EL-315  
Keyless entry system - See Multi-re-  
mote control system.....EL-310  
Knock sensor (KS) .....EC-320  
Knuckle spindle .....AX-10  
KS - Wiring diagram.....EC-321

### L

Length (Dimensions) .....GI-44  
License lamp .....EL-61  
Lifting points .....GI-47  
Limited slip diff. adjustment.....PD-51  
Limited slip diff. assembly .....PD-52  
Limited slip diff. disassembly.....PD-49  
Limited slip diff. inspection .....PD-50  
Line pressure solenoid valve .....AT-147, 161, 167  
Line pressure switch (Transfer)  
(ATX14A) .....TF-141  
Line pressure test (A/T) .....AT-62  
Liquid gasket application .....EM-3  
LOAD - Wiring diagram .....EC-716  
Location of electrical units .....EL-457  
Lock, door .....BT-19  
Low and reverse brake .....AT-324  
LSV (Load sensing valve) .....BR-12  
Lubricant (R134a) A/C .....HA-145, 226  
Lubricants.....MA-12  
Lubrication circuit (engine) .....LC-3  
Lubrication-locks, hinges and hood  
latches .....MA-30  
Luggage room lamp.....EL-92

### M

MAFS - Wiring diagram .....EC-187, 193, 483  
Magnet clutch.....HA-104, 148, 229  
MAIN - Wiring diagram.....EC-156  
Main drive gear (M/T) .....MT-11

Main gear (Transfer) (TX10A).....TF-17  
Main oil pump (Transfer) (ATX14A) .....TF-161  
Mainshaft (M/T).....MT-11  
Mainshaft (Transfer) (ATX14A) .....TF-155  
Mainshaft (Transfer) (TX10A) .....TF-17  
Maintenance (engine) .....MA-14  
MAJOR OVERHALL.....AT-281  
Major overhaul (Transfer) (ATX14A).....TF-150  
Major overhaul (Transfer) (TX10A).....TF-15  
Malfunction indicator lamp (MIL).....EC-88  
Manual air conditioner - Wiring diagram.....HA-184  
Manual transmission number .....GI-43  
Manual transmission oil replacement .....MA-22  
Mass air flow sensor (MAFS) .....EC-184, 191, 481  
Master cylinder (brake) .....BR-16, 19  
Master cylinder (clutch) .....CL-8  
Meter .....EL-118  
METER - Wiring diagram.....EL-123  
MIL & Data link connectors circuit .....EC-720  
MIL/DL - Wiring diagram .....EC-720  
MIRROR - Wiring diagram.....EL-208  
Mirror defogger .....EL-174  
Mirror, door.....BT-61  
Mirror, out side .....BT-61  
Misfire .....EC-312  
Mode door control linkage adjustment...HA-82, 215  
Mode door motor .....HA-76  
Model variation .....GI-41  
Molding - See Exterior .....BT-36  
M/T major overhaul .....MT-10  
M/T removal and installation .....MT-7  
MULTI - Wiring diagram.....EL-315  
Multi-remote control system.....EL-310  
Multiplex communication .....HA-141  
Multiport fuel injection (MFI) system .....EC-30  
Multiport fuel injection precautions.....GI-6

### N

NATS (Nissan anti-theft system).....EL-385  
NATS - Wiring diagram.....EL-387  
NAVI - wiring diagram.....EL-414  
Navigation System .....EL-405  
Neutral-4LO switch (ATX14A).....TF-142  
NVH troubleshooting (AX) .....AX-3, 19  
NVH troubleshooting (BR).....BR-6  
NVH troubleshooting (CL) .....CL-4  
NVH troubleshooting (M/T) .....MT-4  
NVH troubleshooting (PD).....PD-4  
NVH troubleshooting (ST).....ST-6  
NVH troubleshooting (SU) .....SU-3, 17  
NVH troubleshooting (Transfer)  
(TX10A) .....TF-10  
NVIS (Nissan vehicle immobilizer  
system).....EL-385

# ALPHABETICAL INDEX

## O

O2H1B1 - Wiring diagram .....EC-171  
 O2H1B2 - Wiring diagram .....EC-172  
 O2H2B1 - Wiring diagram .....EC-179  
 O2H2B2 - Wiring diagram .....EC-180  
 O2S1B1 - Wiring diagram .....EC-235, 245, 258  
 O2S1B2 - Wiring diagram .....EC-236, 246, 259  
 O2S2B1 - Wiring diagram ...EC-267, 276, 550, 560  
 O2S2B2 - Wiring diagram ...EC-268, 277, 551, 561  
 Oil change (capacity) .....MA-12  
 Oil filter (Transfer) (ATX14A) .....TF-148  
 Oil pan (engine) .....EM-15  
 Oil pressure (engine) .....LC-5  
 Oil pump (A/T) .....AT-297  
 Oil pump (engine) .....LC-6  
 Oil pump regulator valve (engine) .....LC-7  
 Oil seal replacement (engine) .....EM-36  
 Oil seal replacement (front final drive  
 4WD) .....PD-16  
 Oil seal replacement (front of final  
 drive) .....PD-41  
 On board diagnostic system .....EC-72  
 Operating cylinder (clutch) .....CL-9  
 ORVR (On-board Refueling Vapor  
 Recovery) .....EC-40  
 Out side mirror .....BT-61  
 Overdrive control switch .....AT-262  
 Overheat .....EC-575  
 Overrun clutch .....AT-320  
 Overrun clutch solenoid valve .....AT-189

## P

P/ANT - Wiring diagram .....EL-199  
 Park/Neutral position switch .....EC-661  
 Park/neutral position switch (A/T) .....AT-103, 262  
 Park/neutral position switch (M/T) .....MT-5  
 Parking brake control .....BR-33  
 Parking lamp .....EL-61  
 PCV (positive crankcase ventilation) .....EC-49  
 Periodic maintenance .....MA-7  
 PGC/V - Wiring diagram .....EC-373, 597  
 PHASE - Wiring diagram .....EC-335  
 Pinion bearing preload diff. ....PD-26  
 Pinion gear height diff. ....PD-26, 54  
 Piston assembly .....EM-73  
 Piston pin inspection .....EM-65  
 Piston ring inspection .....EM-66  
 Piston to bore clearance .....EM-68  
 Planetary carrier (Transfer) (ATX14A) .....TF-164  
 PNP/SW - Wiring diagram .....EC-664  
 POS - Wiring diagram .....EC-328, 588  
 POWER - Wiring diagram .....EL-10  
 Power antenna .....EL-198  
 Power door lock .....EL-287  
 Power door mirror .....EL-208  
 Power seat .....EL-209

Power steering fluid level .....MA-29, ST-8  
 Power steering gear .....ST-17  
 Power steering hydraulic pressure .....ST-10  
 Power steering oil pressure switch .....EC-705  
 Power steering oil pump .....ST-27  
 Power steering system bleeding .....ST-9  
 Power supply routing .....EL-9  
 Power transistor & ignition coil .....EC-677  
 Power window .....EL-268  
 PRE/SE - Wiring diagram .....EC-386, 392  
 Precautions (General) .....GI-4  
 Pressure plate - See Clutch cover .....CL-12  
 Pressure test (A/T) .....AT-62  
 Propeller shaft .....PD-3  
 Propeller shaft greasing .....MA-25  
 Propeller shaft inspection .....MA-25  
 Propeller shaft on vehicle service .....PD-8  
 Propeller shaft vibration .....PD-8  
 PST/SW - Wiring diagram .....EC-706

## R

Rack retainer adjustment .....ST-8  
 Radiator .....LC-21, 23  
 Radio - See Audio .....EL-186  
 Rear air spoiler .....BT-36  
 Rear axle .....AX-18  
 Rear bumper .....BT-16  
 Rear case (Transfer) (ATX14A) .....TF-153  
 Rear case (Transfer) (TX10A) .....TF-16  
 Rear combination lamp removal and  
 installation .....BT-36  
 Rear cover packing replacement diff. ....PD-17  
 Rear door .....BT-21  
 Rear drum brake .....BR-29  
 Rear heated oxygen sensor (HO2S) .....EC-547  
 Rear seat .....BT-47  
 Rear seat belt .....RS-5  
 Rear side window .....BT-60  
 Rear suspension .....SU-17  
 Rear washer .....EL-165  
 Rear window defogger .....EL-174  
 Rear wiper .....EL-165  
 REF - Wiring diagram .....EC-582  
 Refrigerant pressure sensor .....HA-111, 222  
 Refrigerant connection precaution .....HA-5, 161  
 Refrigerant discharging evacuating  
 charging .....HA-143  
 Refrigerant general precaution .....HA-4, 160  
 Refrigerant lines .....HA-152, 233  
 Refrigerant pressure sensor .....EC-710  
 Refrigeration cycle .....HA-15, 171  
 Release bearing (clutch) .....CL-10  
 REMOTE - Wiring diagram .....EL-197  
 Removal and installation (A/T) .....AT-276  
 Removal and installation (Transfer)  
 (ATX14A) .....TF-149  
 Removal and installation (Transfer)  
 (TX10A) .....TF-14  
 Reverse clutch .....AT-314

# ALPHABETICAL INDEX

Reverse idler shaft (M/T).....MT-11  
 Reverse lamp switch (M/T) - See  
     Back-up lamp switch (M/T).....MT-5  
 Reverse main gear (M/T) .....MT-11  
 Revolution sensor (A/T).....AT-115  
 Ring gear diff. inspection .....PD-24, 48  
 Road wheel size .....GI-44  
 Roof trim .....BT-34  
 Room lamp - See Interior lamp .....EL-92  
 RP/SEN - Wiring diagram.....EC-711

## S

SAE J1930 terminology list .....GI-52  
 Screw jack .....GI-45  
 Seal - See Exterior .....BT-36  
 SEAT - Wiring diagram .....EL-209  
 Seat belt inspection .....MA-31, RS-7  
 Seat belt pre-tensioner .....RS-3  
 Seat belt pre-tensioner disposal .....RS-22  
 Seat belt, front .....RS-4  
 Seat belt, rear .....RS-5  
 Seat, front .....BT-43  
 Seat, rear .....BT-47  
 Self-diagnosis (Transfer) (ATX14A) .....TF-59  
 SHIFT - Wiring diagram .....AT-265  
 Shift control (Transfer) (TX10A) .....TF-18, 30  
 Shift control components (M/T) .....MT-13  
 Shift fork (M/T) .....MT-13  
 Shift lever .....MT-13  
 Shift lock system .....AT-264  
 Shift schedule .....AT-356  
 Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171  
 Shift solenoid valve B (A/T) ..AT-125, 131, 147, 175  
 Shock absorber (rear) .....SU-20  
 Side air bag .....RS-21  
 Side bearing preload (front final drive  
     4WD).....PD-25  
 Side trim .....BT-29  
 Side window - See Rear side window .....BT-60  
 Smart entrance control unit .....EL-372  
 SMJ (super multiple junction) .....Foldout  
 Spare tire size .....GI-44  
 Spark plug replacement.....MA-20  
 Specification value .....EC-150  
 Speedometer .....EL-118  
 Spiral cable .....RS-16  
 Spot lamp .....EL-92  
 Spring (Wheelarch) height .....SU-6  
 SROOF - Wiring diagram .....EL-203  
 SRS - See Supplemental Restraint  
     System.....RS-10  
 SRS - Wiring diagram .....RS-35  
 S/SIG - Wiring diagram .....EC-693  
 Stabilizer bar (front).....SU-12  
 Stabilizer bar (rear) .....SU-22  
 Stall test (A/T) .....AT-59  
 Standardized relay .....EL-7  
 START - Wiring diagram.....SC-11  
 Start signal .....EC-692

Starter .....SC-19  
 Starting system.....SC-10  
 Steering gear, linkage and transfer  
     gear inspection .....MA-28  
 Steering linkage .....ST-17  
 Steering switch.....EL-30  
 Steering transfer gear .....ST-15  
 Steering wheel and column.....ST-11  
 Steering wheel play .....ST-7  
 Steering wheel turning force .....ST-9  
 Stop lamp .....EL-71  
 STOP/L - Wiring diagram.....EL-71  
 Striking rod (M/T) .....MT-13  
 Strut (front) .....SU-9  
 Sub-gear (M/T) .....MT-11  
 Sub-oil pump (Transfer) (ATX14A) .....TF-161  
 Sun gear (Transfer) (ATX14A) .....TF-164  
 Sun roof, electric .....EL-202  
 Sunload sensor .....HA-135  
 Sunroof.....BT-48  
 Supplemental Restraint System .....RS-10  
 Supplemental restraint system - Wiring  
     diagram .....RS-35  
 Suspension .....MA-29  
 S/VCSW - Wiring diagram .....EC-571  
 Swirl control valve control solenoid  
     valve .....EC-493, 516  
 Swirl control valve control vacuum  
     check switch .....EC-569  
 SWL/V - Wiring diagram .....EC-497, 518  
 Symbols and abbreviations .....GI-10  
 Symptom matrix chart .....EC-132  
 Synchronizer (M/T) .....MT-11  
 System readiness test (SRT) code .....EC-74

## T

2-4WD shift solenoid valve (ATX14A) .....TF-141  
 Tachometer.....EL-118  
 Tail lamp.....EL-61  
 TAIL/L - Wiring diagram .....EL-64  
 TCM circuit diagram .....AT-13  
 TCM inspection table .....AT-92  
 Temperature control cable and linkage  
     adjustment .....HA-213  
 TFTS - Wiring diagram.....EC-303  
 THEFT - Wiring diagram.....EL-346  
 Theft warning system.....EL-339  
 Thermometer.....EL-132  
 Thermostat.....LC-18  
 Three way catalyst function (Bank 1) .....EC-338  
 Three way catalyst function (Bank 2) .....EC-338  
 Three way catalyst precautions.....GI-6  
 Throttle body .....EM-12  
 Throttle position sensor (TPS) .....EC-208, 219  
 Throttle position sensor adjustment .....EC-117  
 Throttle position switch .....EC-468, AT-184, 263  
 Throwout bearing - See Clutch release  
     bearing .....CL-10  
 Tie-rod .....ST-21



# ALPHABETICAL INDEX

Tie-rod ball joints.....ST-21  
 Tightening torque of standard bolts.....GI-50  
 Timing chain.....EM-20  
 Tire rotation .....MA-26  
 Tire size .....GI-44  
 Tooth contact (front final drive 4WD) .....PD-30  
 Tooth contact diff. ....PD-57  
 Torque converter installation .....AT-277  
 Torque convertor clutch solenoid  
     valve .....AT-152, 161  
 Tow truck towing .....GI-47  
 Towing point.....GI-49  
 TP/SW - Wiring diagram .....EC-471  
 TPS - Wiring diagram .....EC-213, 222  
 Transfer case (TX10A).....TF-16  
 Transfer control unit inspection table  
     (ATX14A) .....TF-86  
 Transfer dropping resistor (ATX14A) .....TF-142  
 Transfer fluid replacement (All-mode  
     4WD model) .....MA-24  
 Transfer fluid replacement (Part time  
     4WD model) .....MA-24  
 Transfer fluid temperature sensor  
     (ATX14A) .....TF-141  
 Transfer motor (ATX14A).....TF-147  
 Transfer motor relay (ATX14A).....TF-143  
 Transfer serial number .....GI-44  
 Transmission case (M/T).....MT-10  
 TRANSMT - Wiring diagram .....EL-381  
 Tread-FR&RR (Dimensions).....GI-44  
 Trim .....BT-29  
 TRNSCV - Wiring diagram .....EL-381  
 Trouble diagnoses .....GI-34  
 Turbine revolution sensor.....AT-202  
 TURN - Wiring diagram .....EL-80  
 Turn signal lamp .....EL-78  
 Two trip detection logic .....EC-72  
 Two-pole lift .....GI-47

## U

Under body .....BT-65

## V

Vacuum cut valve .....EC-34  
 Vacuum cut valve bypass valve.....EC-34, 642, 648  
 Vacuum hose (brake system).....BR-24  
 Vacuum hose drawing (Engine control) .....EC-28  
 Valve clearance.....EM-53  
 Valve guide.....EM-44  
 Valve seat.....EM-45

Valve spring.....EM-46  
 Vanity mirror lamp .....EL-92  
 Vehicle identification number.....GI-42  
 Vehicle recovery (freeing a stuck  
     vehicle).....GI-49  
 VEHICLE SECURITY (THEFT WARN-  
     ING) SYSTEM .....EL-339  
 Vehicle speed sensor (VSS) .....EC-438  
 VENT/V - Wiring diagram .....EC-379, 608, 617  
 VIAS .....EC-669  
 VIAS/V - Wiring diagram .....EC-671  
 Viscosity number (SAE) .....MA-13  
 VSS - Wiring diagram .....EC-441

## W

Wait detection switch (ATX14A) .....TF-142  
 WARN - Wiring diagram .....EL-137  
 Warning chime .....EL-146  
 Warning lamps .....EL-136  
 Washer, front.....EL-160  
 Washer, rear.....EL-165  
 Water pump .....LC-13  
 Water temperature gauge .....EL-118  
 Weatherstrip - See Exterior .....BT-36  
 Wheel balance .....MA-26  
 Wheel bearing (front).....AX-4  
 Wheel bearing (rear) .....AX-19  
 Wheel hub (front).....AX-6  
 Wheel sensors (ABS).....BR-59, 83  
 Wheel size .....GI-44  
 Wheelarch height .....SU-6  
 Wheelbase (Dimensions) .....GI-44  
 Wide open & closed throttle position  
     switch.....EC-208, 219  
 Width (Dimensions) .....GI-44  
 WINDOW - Wiring diagram .....EL-272  
 Window, door .....BT-19  
 Window, rear side .....BT-60  
 Window, side - See Rear side window .....BT-60  
 Windshield.....BT-58  
 WIP/R - Wiring diagram .....EL-167  
 WIPER - Wiring diagram .....EL-162  
 Wiper, front.....EL-160  
 Wiper, rear .....EL-165  
 Wiring Diagram (Cell code) list.....EL-477  
 Wiring diagram (Transfer) (ATX14A) .....TF-50  
 Wiring Diagram - VEHSEC - .....EL-346  
 Wiring diagrams .....GI-11  
 Withdrawal lever (clutch) .....CL-10  
 Wrist pin - See Piston pin inspection.....EM-65

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 TF  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL

## NOTES