

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

SECTION **IDX**

ALPHABETICAL INDEX

A

ABS - Wiring diagram	BR-37
ABS sensor rotor	AX-6, 20
ABS/TCS C/U signal	EC-549, 551
A/C air flow	HA-27, 169
A/C component layout	HA-20, 167
A/C compressor clutch removal and installation	HA-139, 220
A/C compressor description	HA-162
A/C compressor precaution	HA-7, 154
A/C compressor special service tool	HA-10, 157
A/C control linkage adjustment (manual A/C)	HA-187, 204, 206
A/C control operation (auto A/C)	HA-25
A/C control operation (manual A/C)	HA-168
A/C diagnostic work flow (auto A/C)	HA-59
A/C diagnostic work flow (manual A/C)	HA-178
A/C HFC134a (R134a) system precaution	HA-3, 150
A/C HFC134a (R134a) system service procedure	HA-134, 215
A/C HFC134a (R134a) system service tools	HA-11, 158
A/C HFC134a system service equip- ment precaution	HA-8, 155
A/C lubricant (R134a)	HA-136, 217
A/C operational check	HA-60, 179
A/C performance chart	HA-108, 198
A/C performance test diagnoses	HA-106, 196
A/C relay	HA-103, 213
A/C self-diagnoses (auto A/C)	HA-39
A/C service data specification	HA-149, 230
A/C switch	HA-213
A/C system description (auto A/C)	HA-24
A/C trouble diagnoses (auto A/C)	HA-29
A/C trouble diagnoses (manual A/C)	HA-171
A/C, A - Wiring diagram	HA-32
A/C, M - Wiring diagram	HA-175
Accelerator control system	FE-3
Accelerator pedal position (APP) sensor	EC-562, 675, 682, 697
Accelerator pedal released position learning	EC-73
Actuator lever (Transfer)	TF-156
Air bag	RS-11
Air bag precautions	GI-3
Air bleeding for brake system	BR-9
Air cleaner filter replacement	MA-18
Air conditioner cut control	EC-37
Air flow meter - See Mass air flow sensor	EC-187, 194
Air mix door control linkage adjustment	HA-78
Air mix. door motor	HA-75, 133
Air spoiler, rear	BT-38
All-mode 4WD system	TF-43
Alternator	SC-30
Ambient sensor	HA-121
Angular tightening application	EM-3
Antenna - See Power antenna	EL-218
Anti-lock brake system - Wiring diagram	BR-37
APPS1 - Wiring diagram	EC-678
APPS2 - Wiring diagram	EC-685
APPS3 - Wiring diagram	EC-700
ASC/BS - Wiring diagram	EC-655
ASC/SW - Wiring diagram	EC-647
ASCBOF - Wiring diagram	EC-742
ASCD	EC-54
ASCD (automatic speed control device)	EL-271
ASCD brake switch	EC-652, 741
ASCD clutch switch	EC-652, 741
ASCD steering switch	EC-645
ASCIND - Wiring diagram	EC-750
A/T - Wiring diagram - AT - FTS	AT-110
A/T - Wiring diagram - AT - MAIN	AT-99
A/T - Wiring diagram - AT - PNP/SW	AT-104
A/T - Wiring diagram - AT - VSS A/T	AT-116
A/T fluid temperature sensor	AT-113
A/T self-diagnoses	AT-48
A/T shift lock system	AT-262
A/T shift lock system - Wiring diagram	AT-263
A/T trouble diagnoses	AT-55
A/T Wiring diagram - AT - ENG SS	AT-120
A/T Wiring diagram AT - 1ST	AT-126
A/T Wiring diagram AT - 2ND	AT-132
A/T Wiring diagram AT - 3RD	AT-138
A/T Wiring diagram AT - 4TH	AT-145
A/T Wiring diagram AT - BA/FTS	AT-192
A/T Wiring diagram AT - CAN	AT-204
A/T Wiring diagram AT - LPSV	AT-167
A/T Wiring diagram AT - NONDTC	AT-215
A/T Wiring diagram AT - OVRCSV	AT-187
A/T Wiring diagram AT - SSV/A	AT-172
A/T Wiring diagram AT - SSV/B	AT-176
A/T Wiring diagram AT - TCCSIG	AT-159
A/T Wiring diagram AT - TCV	AT-153
A/T Wiring diagram AT - TPS	AT-182
A/T Wiring diagram AT - VSSMTR	AT-199
ATP switch	TF-148
ATP warning lamp	TF-138
Audio	EL-206
AUDIO - Wiring diagram	EL-207
Audio and A/C control removal and installation - See Instrument panel	BT-24
AUT/DP - Wiring diagram	EL-241
Auto air conditioner - Wiring diagram	HA-32
Automatic amplifier	HA-36, 66
Automatic drive positioner	EL-236
Automatic speed control system - See ASCD	EL-271
Automatic transmission fluid replacement	MA-23
Automatic transmission number	GI-45
Axle	MA-29
Axle housing (rear)	AX-20

ALPHABETICAL INDEX

B

Back door	BT-17
Back door opener - See Back door	BT-17
Back door trim	BT-37
Back-up lamp	EL-78
Back-up lamp switch (M/T)	MT-5
BACK/L - Wiring diagram	EL-78
Ball joint (front)	SU-15
Basic inspection	EC-123
Battery	SC-4
Battery/Starting/Charging System	
Tester	SC-7, 13, 23
Baulk ring (M/T)	MT-11
Blower motor	HA-87, 189
Blower resistor	HA-189
Body alignment	BT-64
Brake booster	BR-19
Brake control valve (Proportioning valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-27
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake lining wear temporary checking	MA-28
Brake master cylinder	BR-15
Brake pedal	BR-13
Brake switch	EC-669
BRK/SW - Wiring diagram	EC-671
Bulb specifications	EL-498
Bumper, front	BT-13
Bumper, rear	BT-17
BYP/S/V - Wiring diagram	EC-629, 636

C

Camshaft inspection	EM-48
Camshaft position sensor (PHASE)	EC-326
CAN (Controller Area Network) ...	EL-409, 414, 438, 460, 473
CAN - Wiring diagram	EC-167, EL-415, 439, 461, 474
CAN communication ...	EC-54, 166, BR-90, EL-409, 414, 438, 460, 473
Canister - See EVAP canister	EC-38
Center bearing assembly (propeller shaft)	PD-11
Center bearing disassembly (propeller shaft)	PD-9
Center case (Transfer)	TF-17, 159
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-22
CHIME - Wiring diagram	EL-166
CIGAR - Wiring diagram	EL-190
Cigarette lighter	EL-190

Circuit breaker	EL-18	GI
Clock	EL-191	
CLOCK - Wiring diagram	EL-191	
Closed loop control (Bank 1)	EC-541	MA
Closed loop control (Bank 2)	EC-541	
Clutch cover	CL-12	EM
Clutch disc	CL-12	
Clutch drum (Transfer)	TF-161	
Clutch fluid level	MA-22	LC
Clutch force release limit adjustment	TF-74	
Clutch master cylinder	CL-8	EC
Clutch operating cylinder	CL-9	
Clutch pedal	CL-5	
Clutch pressure switch (Transfer)	TF-147	
Clutch release bearing	CL-10	FE
Clutch withdrawal lever	CL-10	
Coil spring (front)	SU-10	CL
Coil spring (rear)	SU-40	
Collision diagnosis	RS-53	
Combination lamp, front, removal and installation	BT-13	MT
Combination lamp, rear, removal and installation	BT-38	
Combination meter	EL-124	AT
Combination meter removal and installation - See Instrument panel	BT-24	
Combination switch	EL-32	TF
COMPAS - Wiring diagram	EL-142	
Compass	EL-141	
Component Location (auto A/C)	HA-29	PD
Component Location (manual A/C)	HA-171	
Compression pressure	EM-17	AX
Compressor clutch removal and installation	HA-139, 220	
Compressor description	HA-162	SU
Compressor precaution	HA-7, 154	
Compressor special service tool	HA-10, 157	
Connecting rod	EM-70	BR
Connecting rod bearing clearance	EM-74	
Connecting rod bushing clearance	EM-75	
Connector inspection	GI-21	ST
Console box - See Instrument panel	BT-24	
CONSULT for ABS	BR-43	
CONSULT for all-mode 4WD	TF-64	RS
CONSULT for engine	EC-103	
CONSULT for VDC	BR-103	BT
CONSULT-II general information	GI-39	
Control valve (A/T)	AT-298	
Control valve (Transfer)	TF-164	
Controller Area Network (CAN)	EL-409, 414, 438, 460, 473	HA
Converter housing installation	AT-274	
Coolant mixture ratio	MA-13	SC
Coolant replacement	MA-15	
Cooling circuit (engine)	LC-11	EL
Counter gear (M/T)	MT-11	
Counter gear (Transfer)	TF-18	
Coupling sleeve (M/T)	MT-11	
Crankcase emission control system - See positive crankcase ventilation	EC-53	
Crankshaft	EM-72	IDX

ALPHABETICAL INDEX

Crankshaft position sensor (POS)EC-319
Cruise control - See ASCDEL-271
Cylinder blockEM-66
Cylinder headEM-44
Cylinder head bolt tighteningEM-55

D

Data link connector for ConsultEC-103
Daytime light systemEL-50
Daytime running light - See Daytime
light systemEL-50
DEF - Wiring diagramEL-194
Detonation sensor - See Knock sensorEC-314
Diagnostic trouble code (DTC) for OBD
systemEC-9, 78
Diagnostic trouble code (DTC) inspec-
tion priority chartEC-129
Differential carrier assemblyPD-31, 58
Differential carrier disassemblyPD-45
Differential gear oil replacementMA-26
DimensionsGI-46
D/LOCK - Wiring diagramEL-293
Dome light - See Interior lampEL-98
Door glassBT-21
Door lockBT-21
Door mirrorBT-63
Door trimBT-33
Door, frontBT-21
Door, rearBT-23
Drive belt inspectionMA-14
Drive chain (Transfer)TF-18, 161
Drive pinion diff. inspectionPD-24, 48
Drive pinion heightPD-26, 54
Drive plate runoutEM-76
Drive shaftMA-30
Drive shaft (front)AX-12
Dropping resistor (A/T)AT-170
DTC work supportEC-114
DTRL - Wiring diagramEL-55

E

ECM input/output signalEC-141
ECM power supplyEC-443
ECM/PW - Wiring diagramEC-445
ECTS - Wiring diagramEC-206
Electric sun roofEL-222
Electric throttle control actuatorEC-457, 459
Electrical diagnosesGI-24
Electrical ignition systemEC-36
Electrical unitFoldout
Electrical units locationEL-479
Engine compartmentBT-65
Engine control circuit diagramEC-30
Engine control component parts
locationEC-25
Engine control module (ECM)EC-441

Engine control system diagram and
chartEC-31
Engine coolant temperature sensor
(ECTS)EC-204, 217
Engine fail-safe systemEC-130
Engine oil filter replacementMA-19
Engine oil precautionsGI-7
Engine oil replacementMA-18
Engine outer component partsEM-10
Engine removalEM-62
Engine room - See Engine
compartmentBT-65
Engine serial numberGI-45
ETC1 - Wiring diagramEC-461
ETC2 - Wiring diagramEC-469
ETC3 - Wiring diagramEC-474
EVAP canisterEC-39
EVAP canister purge volume control
solenoid valveEC-38, 364, 582
EVAP canister vent control
valveEC-371, 594, 602
EVAP control system (small leak)
diagnosisEC-349, 394, 407, 567, 611
EVAP control system pressure
sensorEC-378, 384
EVAP control system purge flow moni-
toring diagnosisEC-339
EVAP vapor lines inspectionMA-21
Evaporative emission (EVAP) systemEC-38
Exhaust systemFE-9
Exhaust system inspectionMA-22
ExteriorBT-38

F

4LO indicator lampTF-140
4WD shift indicator lampTF-134
4WD shift switchTF-147
4WD solenoid valveTF-147
4WD warning lampTF-46
Fan control amp.HA-90
Fan switchHA-189
F/FOG - Wiring diagramEL-80
Final drive disassemblyPD-44
Final drive pre-inspectionPD-44
Final drive removal and installationPD-44
Finisher, interior - See TrimBT-31
Fluid temperature sensor (A/T)AT-113
FluidsMA-12
Flywheel (clutch)CL-13
Flywheel runoutEM-76
Fog lamp, frontEL-79
Fog lamp, front, removal and
installationBT-13
Fork rod (M/T)MT-13
Forward clutchAT-317
F/PUMP - Wiring diagramEC-731
Freeze frame dataEC-79
Front axleAX-2
Front bumperBT-13

ALPHABETICAL INDEX

Front case (Transfer)TF-17, 169
Front combination lamp removal and
installationBT-13
Front disc brakeBR-22
Front doorBT-21
Front drive shaft (Transfer).....TF-18, 161
Front final drive disassembly (4WD).....PD-19
Front final drive pre-inspection (4WD).....PD-19
Front final drive removal and installa-
tion (4WD).....PD-19
Front fog lamp.....EL-79
Front fog lamp removal and installationBT-13
Front revolution sensor (Transfer)TF-148
Front seatBT-45
Front seat beltRS-5
Front suspension.....SU-3
Front washerEL-178
Front wiperEL-178
Fuel cut control (at no load & high
engine speed)EC-38
Fuel filler lid.....BT-17
Fuel filter replacementMA-17
Fuel gaugeEL-124
Fuel injection systemEC-273, 282
Fuel injection system (Bank 1)EC-273, 282
Fuel injection system (Bank 2)EC-273, 282
Fuel level sensor.....EC-423, 425, 428
Fuel line inspectionMA-17
Fuel precautionsGI-8
Fuel pressure check.....EC-56
Fuel pressure regulatorEC-57
Fuel pressure releaseEC-56
Fuel pumpEC-729
Fuel systemFE-4
Fuel tank temperature sensor.....EC-290, 293
Fuel tank vacuum relief valveEC-39
FUELB1 - Wiring diagram.....EC-275, 284
FUELB2 - Wiring diagram.....EC-276, 285
FuseEL-18
Fuse and fusible link boxFoldout
Fuse blockFoldout
Fusible linkEL-18

G

Garage jack and safety standGI-48
Gauges.....EL-124
Gear components (M/T)MT-11
Generator - See Alternator.....SC-30
Generic scan tool (GST).....EC-117
GlassBT-21
Glass hatch opener, electricEL-229
GreaseMA-12
Ground distribution.....EL-19

H

Harness connector.....EL-7

Harness connector inspectionGI-21
Harness layoutEL-482
Hazard warning lampEL-83
HeadlampEL-35
Headlining - See Roof trimBT-36
Heated oxygen sensor 1
(bank 1).....EC-224, 233, 246, 504, 512
Heated oxygen sensor 1
(bank 2).....EC-224, 233, 246, 504, 512
Heated oxygen sensor 1 heater
(bank 1).....EC-173
Heated oxygen sensor 1 heater
(bank 2).....EC-173
Heated oxygen sensor 2
(bank 1).....EC-255, 263, 521, 531
Heated oxygen sensor 2
(bank 2).....EC-255, 263, 521, 531
Heated oxygen sensor 2 heater
(bank 1).....EC-181
Heated oxygen sensor 2 heater
(bank 2).....EC-181
Heated oxygen sensor heater.....EC-173, 181
Heated seatBT-48, EL-232
Height (Dimensions)GI-46
HFC134a (R134a) system precautionHA-3, 150
HFC134a (R134a) system service
procedure.....HA-134, 215
HFC134a (R134a) system service
toolsHA-11, 158
HFC134a system service equipment
precaution.....HA-8, 155
High clutch.....AT-314
H/LAMP - Wiring diagramEL-39
Homelink universal transceiver.....EL-385
Hood.....BT-13
HornEL-189
HORN - Wiring diagram.....EL-189
How to erase DTC for OBD system.....EC-91
HSEAT - Wiring diagram.....EL-232

I

IATS - Wiring diagramEC-201
Identification plate.....GI-45
Idle air volume learningEC-73
Idle mixture ratio.....EC-61
Idle speed.....EC-61, 123
IGN/SG - Wiring diagramEC-715
Ignition control systemEC-714
Ignition timingEC-61, 123
ILL - Wiring diagramEL-91
IlluminationEL-88
In vehicle sensorHA-124
INJECT - Wiring diagramEC-725
InjectorEC-724
Injector removal and installationEC-58
Instrument panelBT-24
INT/L - Wiring diagram.....EL-101
Intake air temperature sensor.....EC-200, 220
Intake door control linkage adjustment..HA-86, 187

ALPHABETICAL INDEX

Intake door motorHA-79, 182
Intake manifold.....EM-12
Intake sensor.....HA-131
Intake valve timing controlEC-169, 448
Intake valve timing control (Bank 1)EC-169, 448
Intake valve timing control (Bank 2)EC-169, 448
Intake valve timing control solenoid
valveEC-172
Intake valve timing control solenoid
valve (Bank 1).....EC-451
Intake valve timing control solenoid
valve (Bank 2).....EC-451
Integrated homelink transmitterEL-385
InteriorBT-31
Interior lampEL-98
Interior lamp on-off control.....EL-99
Internal gear (Transfer)TF-170
IVCB1 - Wiring diagramEC-453
IVCB2 - Wiring diagramEC-454

J

Jacking points.....GI-47
Journal bearing assembly (propeller
shaft)PD-11
Journal bearing disassembly (propeller
shaft)PD-10
Junction box (J/B).....Foldout

K

KEYLES - Wiring diagramEL-319
Keyless entry system - See Multi-re-
mote control system.....EL-314
Knock sensor (KS)EC-314
Knuckle spindleAX-10
KS - Wiring diagram.....EC-315

L

Length (Dimensions)GI-46
License lampEL-66
Lifting pointsGI-49
Limited slip diff. adjustment.....PD-51
Limited slip diff. assemblyPD-52
Limited slip diff. disassembly.....PD-49
Limited slip diff. inspectionPD-50
Line pressure solenoid valveAT-150, 164, 170
Line pressure switch (Transfer)TF-147
Line pressure test (A/T)AT-64
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-753
Location of electrical unitsEL-479
Lock, doorBT-21
Low and reverse brakeAT-321
Low tire pressure warning systemSU-16

Low tire pressure warning system -
trouble diagnosesSU-25
Low tire pressure warning system -
Wiring diagram.....SU-18
Lubricant (R134a) A/CHA-136, 217
Lubricants.....MA-12
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-30
Luggage room lampEL-98

M

MAFS - Wiring diagramEC-190, 196
Magnet clutch.....HA-97, 139, 220
MAIN - Wiring diagram.....EC-157
Main drive gear (M/T).....MT-11
Main gear (Transfer)TF-18
Main oil pump (Transfer).....TF-167
Mainshaft (M/T).....MT-11
Mainshaft (Transfer).....TF-18, 161
Maintenance (engine)MA-14
MAJOR OVERHALL.....AT-278
Major overhaul (Transfer)TF-16, 156
Malfunction indicator lamp (MIL).....EC-94
Manual air conditioner - Wiring diagram.....HA-175
Manual transmission numberGI-45
Manual transmission oil replacementMA-22
Mass air flow sensor (MAFS).....EC-187, 194
Master cylinder (brake)BR-15
Master cylinder (clutch)CL-8
MeterEL-124
METER - Wiring diagram.....EL-132
MIL & Data link connectors circuitEC-757
MIL/DL - Wiring diagramEC-757
MIRROR - Wiring diagram.....EL-228
Mirror defoggerEL-192
Mirror, door.....BT-63
Mirror, outsideBT-63
MisfireEC-305
Mode door control linkage adjustment...HA-74, 206
Mode door motorHA-68
Model variationGI-43
Molding - See ExteriorBT-38
M/T major overhaulMT-10
M/T removal and installationMT-7
Multi-remote control system.....EL-314
Multiport fuel injection (MFI) systemEC-34
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-389
NATS - Wiring diagramEL-391
Neutral-4LO switchTF-148
NVH troubleshooting (AX)AX-3, 19
NVH troubleshooting (BR).....BR-7
NVH troubleshooting (CL)CL-4

ALPHABETICAL INDEX

NVH troubleshooting (M/T)MT-4
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-6
 NVH troubleshooting (SU)SU-4, 37
 NVH troubleshooting (Transfer)TF-10
 NVIS (Nissan vehicle immobilizer system).....EL-389

O

O2H1B1 - Wiring diagramEC-176
 O2H1B2 - Wiring diagramEC-177
 O2H2B1 - Wiring diagramEC-183
 O2H2B2 - Wiring diagramEC-184
 O2S1B1 - Wiring diagramEC-226, 236, 249
 O2S1B2 - Wiring diagramEC-227, 237, 250
 O2S2B1 - Wiring diagram ..EC-257, 266, 524, 534
 O2S2B2 - Wiring diagram ..EC-258, 267, 525, 535
 Oil change (capacity)MA-12
 Oil filter (Transfer)TF-154
 Oil pan (engine)EM-19
 Oil pressure (engine)LC-5
 Oil pump (A/T).....AT-294
 Oil pump (engine)LC-6
 Oil pump regulator valve (engine)LC-7
 Oil seal replacement (engine).....EM-42
 Oil seal replacement (front final drive 4WD).....PD-16
 Oil seal replacement (front of final drive).....PD-41
 On board diagnostic systemEC-77
 Operating cylinder (clutch).....CL-9
 ORVR (On-board Refueling Vapor Recovery).....EC-44
 Outside mirrorBT-63
 Overdrive control switch.....AT-260
 Overheat.....EC-553
 Overrun clutchAT-317
 Overrun clutch solenoid valve.....AT-189

P

P/ANT - Wiring diagram.....EL-219
 Park/Neutral position switch.....EC-663
 Park/neutral position switch (A/T)AT-106, 260
 Park/neutral position switch (M/T).....MT-5
 Parking brake controlBR-30
 Parking lampEL-66
 PCV (positive crankcase ventilation)EC-53
 Periodic maintenanceMA-7
 PGC/V - Wiring diagramEC-367, 585
 PHASE - Wiring diagramEC-328
 Pinion bearing preload diff.PD-26
 Pinion gear height diff.PD-26, 54
 Piston assembly.....EM-76
 Piston pin inspection.....EM-69
 Piston ring inspection.....EM-69
 Piston to bore clearance.....EM-71

Planetary carrier (Transfer).....TF-170
 PNP/SW - Wiring diagramEC-665
 POS - Wiring diagramEC-321
 POWER - Wiring diagram.....EL-12
 Power antenna.....EL-218
 Power door lockEL-291
 Power door mirrorEL-228
 Power seatEL-230
 Power steering fluid level.....MA-29, ST-8
 Power steering gear.....ST-17
 Power steering hydraulic pressureST-10
 Power steering oil pumpST-27
 Power steering pressure (PSP) sensorEC-436
 Power steering system bleeding.....ST-9
 Power supply routing.....EL-11
 Power transistor & ignition coil.....EC-714
 Power windowEL-272
 PRE/SE - Wiring diagramEC-380, 386
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-12
 Pressure test (A/T)AT-64
 Propeller shaftPD-3
 Propeller shaft greasingMA-25
 Propeller shaft inspectionMA-25
 Propeller shaft on vehicle servicePD-8
 Propeller shaft vibrationPD-8
 PS/SEN - Wiring diagramEC-437

R

Rack retainer adjustment.....ST-8
 RadiatorLC-22, 24
 Radio - See Audio.....EL-206
 Rear air spoilerBT-38
 Rear axleAX-18
 Rear bumperBT-17
 Rear case (Transfer).....TF-17, 159
 Rear combination lamp removal and installationBT-38
 Rear cover packing replacement diff.PD-17
 Rear doorBT-23
 Rear drum brakeBR-26
 Rear heated oxygen sensor (HO2S)EC-521
 Rear seatBT-49
 Rear seat belt.....RS-6
 Rear side windowBT-62
 Rear suspensionSU-37
 Rear washer.....EL-183
 Rear window defoggerEL-192
 Rear wiper.....EL-183
 Refrigerant pressure sensorHA-103, 213
 Refrigerant connection precautionHA-5, 152
 Refrigerant discharging evacuating chargingHA-134
 Refrigerant general precautionHA-4, 151
 Refrigerant linesHA-143, 224
 Refrigerant pressure sensor.....EC-736
 Refrigeration cycleHA-15, 162
 Release bearing (clutch).....CL-10
 REMOTE - Wiring diagram.....EL-217

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Removal and installation (A/T).....AT-273
 Removal and installation (Transfer).....TF-15, 155
 Reverse clutch.....AT-311
 Reverse idler shaft (M/T).....MT-11
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T).....MT-5
 Reverse main gear (M/T).....MT-11
 Revolution sensor (A/T).....AT-118
 Ring gear diff. inspectionPD-24, 48
 Road wheel sizeGI-46
 Roof trimBT-36
 Room lamp - See Interior lampEL-98
 RP/SEN - Wiring diagramEC-737

S

SAE J1930 terminology listGI-54
 Screw jackGI-47
 Seal - See ExteriorBT-38
 SEAT - Wiring diagramEL-230
 Seat belt inspectionMA-31, RS-8
 Seat belt pre-tensionerRS-3
 Seat belt, frontRS-5
 Seat belt, rearRS-6
 Seat, frontBT-45
 Seat, rearBT-49
 Self-diagnosis (Transfer).....TF-61
 SEN/PW - Wiring diagramEC-564
 SHIFT - Wiring diagramAT-263
 Shift control (Transfer).....TF-19, 31
 Shift control components (M/T).....MT-13
 Shift fork (M/T)MT-13
 Shift leverMT-13
 Shift lock systemAT-262
 Shift schedule.....AT-353
 Shift solenoid valve A (A/T) ..AT-128, 140, 150, 174
 Shift solenoid valve B (A/T) ..AT-128, 134, 150, 178
 Shock absorber (rear)SU-40
 Side bearing preload (front final drive
 4WD).....PD-25
 Side trimBT-31
 Side window - See Rear side windowBT-62
 Smart entrance control unitEL-376
 SMJ (super multiple junction)Foldout
 Spare tire sizeGI-46
 Spark plug replacement.....MA-20
 Speedometer.....EL-124
 Spiral cable.....RS-17
 Splice locationEL-414, 438, 460, 473
 Spot lampEL-98
 Spring (Wheelarch) heightSU-7
 SROOF - Wiring diagramEL-223
 SRS - See Supplemental Restraint
 SystemRS-11
 SRS - Wiring diagramRS-28
 Stabilizer bar (front).....SU-13
 Stabilizer bar (rear)SU-42
 Stall test (A/T)AT-61
 Standardized relayEL-9
 START - Wiring diagram.....SC-11

StarterSC-19
 Starting system.....SC-10
 Steering gear, linkage and transfer
 gear inspectionMA-28
 Steering linkageST-17
 Steering switch.....EL-34
 Steering transfer gearST-15
 Steering wheel and column.....ST-11
 Steering wheel playST-7
 Steering wheel turning force.....ST-9
 Stop lamp.....EL-76
 Stop lamp switch.....EC-652, 669, 741
 STOP/L - Wiring diagram.....EL-76
 Striking rod (M/T)MT-13
 Strut (front)SU-10
 Sub-gear (M/T)MT-11
 Sub-oil pump (Transfer)TF-167
 Sun gear (Transfer).....TF-170
 Sunload sensorHA-128
 Sunroof.....BT-50
 Sunroof, electricEL-222
 Supplemental Restraint SystemRS-11
 Supplemental restraint system - Wiring
 diagram.....RS-28
 SuspensionMA-29
 S/VCSW - Wiring diagramEC-545
 Swirl control valve control solenoid
 valveEC-477, 498
 Swirl control valve control vacuum
 check switchEC-543
 SWL/V - Wiring diagramEC-481, 500
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-131
 Synchronizer (M/T)MT-11
 System readiness test (SRT) codeEC-79

T

2-4WD shift solenoid valveTF-147
 T&FLID - Wiring diagramEL-229
 TachometerEL-124
 Tail lamp.....EL-66
 TAIL/L - Wiring diagramEL-69
 TCM circuit diagram.....AT-13
 TCM inspection tableAT-95
 Temperature control cable and linkage
 adjustmentHA-204
 TFTS - Wiring diagram.....EC-295
 Theft warning system.....EL-343
 Thermometer.....EL-141
 Thermostat.....LC-19
 Three way catalyst function (Bank 1)EC-334
 Three way catalyst function (Bank 2)EC-334
 Three way catalyst precautions.....GI-6
 Throttle bodyEM-12
 Throttle control motorEC-472
 Throttle control motor relayEC-467
 Throttle position sensor
 (TPS).....EC-210, 298, 558, 560, 690
 Throttle valve closed position learning.....EC-73

ALPHABETICAL INDEX

Throwout bearing - See Clutch release bearingCL-10
 Tie-rodST-21
 Tie-rod ball joints.....ST-21
 Tightening torque of standard bolts.....GI-52
 Timing chain.....EM-24
 Tire rotationMA-26
 Tire sizeGI-46
 Tooth contact (front final drive 4WD)PD-30
 Tooth contact diff.PD-57
 Torque converter clutch solenoid valveAT-155, 164
 Torque converter installationAT-274
 Tow truck towingGI-49
 Towing point.....GI-51
 TPS1 - Wiring diagram.....EC-301
 TPS2 - Wiring diagram.....EC-213
 TPS3 - Wiring diagram.....EC-693
 Transfer caseTF-17
 Transfer control unit inspection table.....TF-89
 Transfer dropping resistor.....TF-148
 Transfer fluid replacement (All-mode 4WD model)MA-24
 Transfer fluid replacement (Part time 4WD model)MA-24
 Transfer fluid temperature sensor.....TF-147
 Transfer motor.....TF-154
 Transfer motor relay.....TF-149
 Transfer serial numberGI-46
 Transmission case (M/T).....MT-10
 TRANSMT - Wiring diagramEL-385
 Tread-FR&RR (Dimensions).....GI-46
 TrimBT-31
 TRNSCV - Wiring diagramEL-385
 Trouble diagnosesGI-34
 Turbine revolution sensor.....AT-206
 TURN - Wiring diagramEL-85
 Turn signal lampEL-83
 Two trip detection logicEC-77
 Two-pole liftGI-49

U

Under bodyBT-67

V

Vacuum cut valveEC-38
 Vacuum cut valve bypass valve....EC-38, 627, 633
 Vacuum hose (brake system).....BR-21
 Vacuum hose drawing (Engine control)EC-32
 Valve clearance.....EM-58

Valve guide.....EM-50
 Valve seat.....EM-51
 Valve spring.....EM-52
 Vanity mirror lampMA-98
 VDC (vehicle dynamics control)BR-88
 Vehicle identification numberGI-44
 Vehicle recovery (freeing a stuck vehicle).....GI-51
 Vehicle security (theft warning) systemEL-343
 Vehicle speed sensor (VSS)EC-430
 VEHSEC - Wiring Diagram.....EL-350
 VENT/V - Wiring diagramEC-373, 596, 605
 VIASEC-705
 VIAS/V - Wiring diagramEC-707
 Viscosity number (SAE)MA-13

W

Wait detection switchTF-148
 WARN - Wiring diagramEL-146, 155
 Warning chimeEL-164
 Warning lampsEL-145
 Washer, front.....EL-178
 Washer, rear.....EL-183
 Water pumpLC-14
 Water temperature gaugeEL-124
 Weatherstrip - See ExteriorBT-38
 Wheel balanceMA-26
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-19
 Wheel hub (front).....AX-6
 Wheel sensor (VDC)BR-139
 Wheel sensors (ABS).....BR-56, 80
 Wheel sizeGI-46
 Wheelarch heightSU-7
 Wheelbase (Dimensions)GI-46
 Width (Dimensions)GI-46
 WINDOW - Wiring diagramEL-276
 Window, doorBT-21
 Window, rear sideBT-62
 Window, side - See Rear side windowBT-62
 Windshield.....BT-60
 WIP/R - Wiring diagramEL-185
 WIPER - Wiring diagramEL-180
 Wiper, front.....EL-178
 Wiper, rearEL-183
 Wiring Diagram (Cell code) list.....EL-499
 Wiring diagram (Transfer)TF-52
 Wiring diagramsGI-11
 Withdrawal lever (clutch)CL-10
 Wrist pin - See Piston pin inspection.....EM-69

EL

IDX

NOTES