

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-96 , TF-166
4LO switch	TF-228
4WD - Wiring diagram	TF-26 , TF-203
4WD shift switch	TF-69 , TF-232
4WD solenoid valve	TF-92 , TF-166
4WD system description	TF-17 , TF-195
4WD system diagram	TF-21 , TF-198

A

A/C air flow	ATC-29 , MTC-25
A/C compressor clutch removal and installation ..	ATC-159 , MTC-102
A/C compressor mounting	ATC-158 , MTC-101
A/C compressor precaution	ATC-11 , MTC-9
A/C compressor special service tool ..	ATC-14 , MTC-12
A/C control operation (auto A/C)	ATC-26 , MTC-24
A/C diagnostic work flow (auto A/C)	ATC-115
A/C evaporator	ATC-166 , MTC-108
A/C HFC134a (R134a) system identification	ATC-7 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-154 , MTC-98
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-9
A/C lubricant (R134a)	ATC-22 , MTC-19
A/C lubrication oil	ATC-22 , MTC-19
A/C operational check	ATC-52 , ATC-55 , MTC-40
A/C self-diagnoses (auto A/C)	ATC-50 , ATC-115
A/C service data specification	ATC-174 , MTC-113
A/C trouble diagnoses (auto A/C)	ATC-33 , MTC-28
A/C, A - Wiring diagram	ATC-40 , MTC-34
A/T fluid checking	AT-13 , AT-50 , MA-22
A/T fluid cooler cleaning	AT-13
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-130
A/T IND - Wiring diagram	DI-44
A/T indicator	DI-44
A/T self-diagnoses	AT-98
A/T shift lock system	AT-223
A/T shift lock system - Wiring diagram	AT-224
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-101
A/T Wiring diagram AT - FTS	AT-131
A/T Wiring diagram AT - MAIN	AT-172
A/T Wiring diagram AT - NONDTC	AT-180
A/T Wiring diagram AT - PNP/SW	AT-109
A/T Wiring diagram AT - STSIG	AT-104
A/T Wiring diagram AT - VSS A/T	AT-114
ABS - Wiring diagram	BRC-17 , BRC-80
ABS (anti-lock brake system)	BRC-8 , BRC-70
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor ..	EC-630 , EC-

[636](#), [EC-650](#)

Accelerator pedal released position learning	EC-88
AF1B1-Wiring diagram	EC-485 , EC-494 , EC-503 , EC-513 , EC-524 , EC-534 , EC-546
AF1B2-Wiring diagram	EC-487 , EC-496 , EC-505 , EC-515 , EC-526 , EC-536 , EC-548
AF1HB1-Wiring diagram	EC-401
AF1HB2-Wiring diagram	EC-403
Aiming adjustment	LT-27 , LT-72
Air bag	SRS-3
Air bag precautions	AP-2
Air cleaner and air duct	EM-15
Air cleaner filter	EM-15
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-183 , EC-192
Air fuel ratio sensor 1 ..	EC-483 , EC-492 , EC-501 , EC-511 , EC-521 , EC-531 , EC-543
Air fuel ratio sensor 1 heater	EC-399
Air mix. door motor	ATC-63 , MTC-49
Ambient sensor	ATC-117 , ATC-128
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-632
APPS2 - Wiring diagram	EC-638
APPS3 - Wiring diagram	EC-652
ASC/BS - Wiring diagram	EC-606
ASC/SW - Wiring diagram	EC-599
ASCSOF - Wiring diagram	EC-698
ASCD	EC-30
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-705
ATP switch	TF-117 , TF-253
Audio	AV-6
AUDIO - Wiring diagram	AV-11
AUT/DP - Wiring diagram	SE-19
Auto air conditioner - Wiring diagram	ATC-40 , MTC-34
Auto anti-dazzling inside mirror	GW-71
Autolamp	LT-45
Automatic amplifier	MTC-42
Automatic drive positioner	SE-11
Automatic transmission number	GI-48
AV and NAVI control unit	AV-71
AV communication line	AV-95

B

B/COMP - Wiring diagram	DI-64
Back door trim	EI-25
BACK/L - Wiring diagram	LT-100
Back-up lamp	LT-100
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery current sensor ..	EC-569 , EC-576 , EC-583 , EC-590
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-22
BCM (Body control module)	BCS-3

ALPHABETICAL INDEX

Block heater [EM-105](#)
 Blower motor [ATC-75](#), [ATC-132](#), [MTC-57](#), [MTC-84](#)
 Body alignment [BL-138](#)
 Body component parts [BL-125](#)
 Body construction [BL-137](#)
 Body exterior paint color [BL-124](#)
 Body mounting [BL-123](#)
 Body repair [BL-124](#)
 Body sealing [BL-134](#)
 Boring/horning cylinder block [EM-126](#)
 Bose speaker amp. [AV-7](#)
 Brake booster [BR-18](#)
 Brake fluid level [MA-28](#)
 Brake hydraulic line [BR-13](#)
 Brake inspection [MA-28](#)
 Brake lines and cables inspection [MA-28](#)
 Brake master cylinder [BR-16](#)
 Brake switch [EC-625](#)
 BRK/SW - Wiring diagram [EC-626](#)
 Bulb specifications [LT-164](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-15](#)

C

Camshaft [EM-74](#)
 Camshaft inspection [EM-76](#)
 Camshaft position sensor (PHASE) [EC-305](#)
 CAN - Wiring diagram [EC-168](#), [LAN-36](#), [LAN-65](#), [LAN-94](#), [LAN-126](#), [LAN-163](#), [LAN-193](#), [LAN-224](#), [LAN-258](#)
 CAN (Controller Area Network) . [WT-9](#), [BRC-11](#), [BRC-74](#), [SE-16](#), [LAN-34](#), [LAN-63](#), [LAN-92](#), [LAN-124](#), [LAN-161](#), [LAN-191](#), [LAN-222](#), [LAN-256](#)
 CAN communication [EC-167](#), [AT-100](#), [TF-22](#), [TF-115](#), [TF-199](#), [TF-250](#), [WT-9](#), [BRC-11](#), [BRC-74](#), [SE-16](#), [LAN-34](#), [LAN-63](#), [LAN-92](#), [LAN-124](#), [LAN-161](#), [LAN-191](#), [LAN-222](#), [LAN-256](#)
 Canister-See EVAP canister [EC-36](#)
 Center case (Transfer) [TF-166](#)
 CHARGE - Wiring diagram [SC-21](#)
 Charging system [SC-19](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-8](#)
 Chassis and body maintenanceSchedule 2 [MA-10](#)
 CHIME - Wiring diagram [DI-49](#)
 Circuit breaker [PG-71](#)
 Closed loop control [EC-26](#)
 Clutch drum (Transfer) [TF-166](#)
 Clutch pressure switch (Transfer) [TF-166](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-59](#)
 Combination lamp, rear, removal and installation .. [LT-120](#)
 Combination meter [DI-4](#)
 Combination switch [LT-91](#)
 COMBSW - Wiring diagram [LT-91](#)
 COMM - Wiring diagram [AV-95](#)
 COMPAS - Wiring diagram [DI-28](#)
 Compass [DI-27](#)

Component Location (auto A/C) [ATC-36](#), [MTC-31](#)
 Compression pressure [EM-91](#)
 Compressor clutch removal and installation . [ATC-159](#), [MTC-102](#)
 Compressor mounting [ATC-158](#), [MTC-101](#)
 Compressor precaution [ATC-11](#), [MTC-9](#)
 Compressor special service tool [ATC-14](#), [MTC-12](#)
 Condenser [ATC-165](#), [MTC-106](#)
 Connecting rod [EM-123](#)
 Connecting rod bearing clearance [EM-127](#)
 Connecting rod bushing clearance [EM-123](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-29](#), [BRC-93](#)
 Control units (terminal arrangement) [PG-76](#)
 Control valve (A/T) [AT-35](#)
 Control valve (Transfer) [TF-166](#)
 Controller Area Network (CAN) . [WT-9](#), [BRC-11](#), [BRC-74](#), [SE-16](#), [LAN-34](#), [LAN-63](#), [LAN-92](#), [LAN-124](#), [LAN-161](#), [LAN-191](#), [LAN-222](#), [LAN-256](#)
 Converter housing installation [AT-247](#), [AT-250](#)
 COOL/F - Wiring diagram [EC-467](#)
 Coolant mixture ratio [MA-12](#)
 Coolant replacement [MA-13](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-14](#)
 Cooling fan motor [EC-473](#)
 Cooling unit (A/C evaporator) [ATC-136](#), [ATC-166](#), [MTC-87](#), [MTC-108](#)
 Corrosion protection [BL-131](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft [EM-127](#)
 Crankshaft position sensor (POS) [EC-298](#)
 Crash zone sensor [SRS-54](#)
 CUR/SE - Wiring diagram ... [EC-571](#), [EC-578](#), [EC-585](#), [EC-592](#)
 Cylinder block [EM-105](#)
 Cylinder head [EM-91](#)
 Cylinder head bolt tightening [EM-94](#)

D

Daytime light system [LT-31](#)
 Daytime running light - See Daytime light system .. [LT-31](#)
 DEF - Wiring diagram [GW-75](#)
 Diagnosis sensor unit [SRS-57](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-9](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-99](#)
 Differential gear oil replacement [MA-26](#), [MA-27](#)
 Dimensions [GI-49](#)
 Direct clutch solenoid valve [AT-152](#), [AT-154](#)
 Display and amp.assembly [MTC-42](#)
 Display Control Unit [AV-166](#)
 Dome light - See Interior lamp [LT-128](#)
 Door glass [GW-59](#), [GW-63](#)
 Door lock [BL-96](#)
 Door mirror lamp [LT-128](#)

ALPHABETICAL INDEX

Door trim [EI-25](#)
 Door, front [BL-91](#), [GW-59](#)
 Door, rear [BL-91](#), [GW-63](#)
 Drive belt [EM-13](#)
 Drive chain (Transfer) [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-44](#)
 DTC work support [EC-137](#)
 DTRL - Wiring diagram [LT-35](#)
 Duct and grilles [ATC-149](#), [MTC-94](#)
 DVD - Wiring Diagram [AV-63](#)
 DVD Player [AV-68](#)

E

ECM input/output signal [EC-116](#)
 ECM power supply [EC-159](#), [EC-407](#)
 ECM/PW - Wiring diagram [EC-408](#)
 ECTS - Wiring diagram [EC-206](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator .. [EM-18](#), [EC-418](#), [EC-420](#)
 Electrical load signal circuit [EC-696](#)
 Electrical units location [PG-68](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control circuit diagram [EC-114](#)
 Engine control component parts location [EC-106](#)
 Engine control module (ECM) [EC-396](#)
 Engine control system diagram [EC-24](#)
 Engine coolant temperature sensor (ECTS) .. [EC-204](#), [EC-216](#)
 Engine fail-safe system [EC-101](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-102](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-421](#)
 ETC2 - Wiring diagram [EC-428](#)
 ETC3 - Wiring diagram [EC-432](#)
 EVAP canister [EC-36](#)
 EVAP canister purge volume control solenoid valve [EC-332](#)
 EVAP canister vent control valve [EC-339](#), [EC-563](#)
 EVAP control system (small leak) diagnosis .. [EC-324](#), [EC-363](#)
 EVAP control system pressure sensor [EC-346](#), [EC-349](#), [EC-355](#)
 EVAP control system purge flow monitoring diagnosis [EC-319](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-33](#)
 Evaporator [ATC-166](#), [MTC-108](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)

Expansion valve [ATC-169](#), [MTC-109](#)

F

F/FOG - Wiring diagram [LT-65](#)
 F/PUMP - Wiring diagram [EC-687](#)
 Final drive pre-inspection [FFD-17](#), [RFD-17](#)
 Final drive removal and installation [RFD-13](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-130](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-170](#), [MTC-109](#)
 Fog lamp, front [LT-63](#)
 Foot lamp [LT-129](#)
 Freeze frame data [EC-53](#)
 Front brake solenoid valve [AT-148](#), [AT-150](#)
 Front bumper [EI-14](#)
 Front case (Transfer) [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#)
 Front door [BL-91](#), [BL-96](#), [GW-59](#)
 Front Door Trim [EI-25](#)
 Front drive shaft (Transfer) .. [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#), [TF-295](#)
 Front final drive removal and installation (4WD) . [FFD-14](#)
 Front fog lamp [LT-63](#)
 Front passenger air bag [SRS-48](#)
 Front seat [SE-91](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-56](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTTS - Wiring diagram [EC-268](#), [EC-273](#)
 Fuel cut control (at no load high engine speed) [EC-28](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-246](#), [EC-256](#)
 Fuel injection system (Bank 2) [EC-246](#), [EC-256](#)
 Fuel injector and fuel tube [EM-34](#)
 Fuel level sensor [EC-379](#), [EC-381](#), [EC-383](#)
 Fuel line inspection [FL-5](#)
 Fuel pressure check [EC-91](#)
 Fuel pressure release [EC-91](#)
 Fuel pump [EC-686](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-5](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-266](#), [EC-272](#)
 Fuel tank vacuum relief valve [EC-36](#)
 FUEL1 - Wiring diagram [EC-248](#), [EC-258](#)
 FUEL2 - Wiring diagram [EC-249](#), [EC-259](#)
 Fuse [PG-71](#), [PG-82](#)
 Fuse and fusible link box [PG-82](#)
 Fuse block [PG-81](#)
 Fusible link [PG-71](#), [PG-82](#)

G

Garage jack and safety stand [GI-40](#)

ALPHABETICAL INDEX

Gauges	DI-4
Generator	SC-19
Generic scan tool (GST)	EC-139
Glass	GW-11 , GW-59 , GW-63
Glove box lamp	LT-150
GPS antenna	AV-70
Grease	MA-11
Ground distribution	PG-30

H

H/LAMP - Wiring diagram	LT-8
Handling precautions for plastics	BL-153
Harness connector	PG-72
Harness layout	PG-40
Hazard warning lamp	LT-74
Headlamp	LT-5
Heated oxygen sensor 2 (bank 1) ...	EC-224 , EC-234 , EC-436 , EC-448
Heated oxygen sensor 2 (bank 2) ...	EC-224 , EC-234 , EC-436 , EC-448
Heated oxygen sensor 2 heater (bank 1)	EC-174
Heated oxygen sensor 2 heater (bank 2)	EC-174
Heated seat	SE-86
Heater and cooling unit (Heater core) .	ATC-136 , ATC-140 , MTC-87 , MTC-89
Heater unit (heater core) ATC-136 , ATC-140 , MTC-87 , MTC-89	
Height (Dimensions)	GI-49
HFC134a (R134a) system identification ATC-7 , MTC-6	
HFC134a (R134a) system precaution ..	ATC-5 , MTC-4
HFC134a (R134a) system service procedure ATC-154 , MTC-98	
HFC134a (R134a) system service tools ATC-14 , MTC-12	
HFC134a system service equipment precaution ATC-11 , MTC-9	
High & low reverse clutch solenoid valve .	AT-156 , AT-158
Homelink universal transceiver	BL-120
Horn	WW-55
HORN - Wiring diagram	WW-55
How to erase DTC for OBD system	EC-61
HSEAT - Wiring diagram	SE-88

I

I/MIRR - Wiring diagram	GW-70
IATS - Wiring diagram	EC-201
Identification plate	GI-47
Idle air volume learning	EC-89
Idle mixture ratio	EC-77
Idle speed	EC-77
Idle speed control (ISC)	EC-387 , EC-389
Ignition coil	EM-31 , EC-657
Ignition control system	EC-657
Ignition key hole illumination	LT-128
Ignition timing	EC-77
IGNSYS - Wiring diagram	EC-658

ILL - Wiring diagram	LT-155
Illumination	LT-149
Illumination control	LT-163
In vehicle sensor	ATC-120 , ATC-129
INJECT - Wiring diagram	EC-680
Injector	EC-679
Input clutch solenoid valve	AT-144 , AT-146
Instrument panel	IP-10
INT/L - Wiring diagram	LT-134
Intake air temperature sensor	EC-199 , EC-219
Intake door control linkage adjustment	MTC-54
Intake door motor ATC-72 , ATC-74 , ATC-143 , MTC-53 , MTC-90	
Intake manifold	EM-19
Intake manifold collector	EM-16
Intake sensor ..	ATC-125 , ATC-131 , MTC-80 , MTC-83
Intake valve timing control (Bank 1)	EC-170
Intake valve timing control (Bank 2)	EC-170
Intake valve timing control solenoid valve (Bank 1) EC-411	
Intake valve timing control solenoid valve (Bank 2) EC-411	
Integrated homelink transmitter - See Homelink universal transceiver	BL-120
Interior	EI-27
Interior lamp	LT-128
Interior lamp on-off control	LT-129
Internal gear (Transfer) ..	TF-148 , TF-175 , TF-275 , TF-277 , TF-283
IPDM (Intelligent power distribution module engine room)	PG-17
IVCB1 - Wiring diagram	EC-412
IVCB2 - Wiring diagram	EC-414
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

J

Jacking points	GI-40
Junction box (J/B)	PG-81

K

Key illumination	LT-129
KEYLES - Wiring diagram	BL-46
Knock sensor (KS)	EC-293
KS - Wiring diagram	EC-294

L

Length (Dimensions)	GI-49
License lamp	LT-102
Lifting points	GI-41
Line pressure solenoid valve	AT-123
Line pressure switch (Transfer)	TF-166
Line pressure test (A/T)	AT-51
Liquid gasket application	EM-5 , LU-2 , CO-2
Location of electrical units	PG-68
Low coast brake solenoid valve	AT-160 , AT-162

ALPHABETICAL INDEX

Low tire pressure warning system [WT-7](#)
 Low tire pressure warning system - trouble diagnoses .
[WT-10](#)
 Low tire pressure warning system - Wiring diagram
[WT-10](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-19](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-22](#), [MTC-19](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-186](#), [EC-194](#)
 Magnet clutch . [ATC-96](#), [ATC-159](#), [MTC-65](#), [MTC-102](#)
 MAIN - Wiring diagram [EC-159](#)
 Main oil pump (Transfer) [TF-166](#)
 Mainshaft (Transfer) [TF-166](#), [TF-275](#), [TF-277](#), [TF-283](#)
 Maintenance (engine)Schedule 1 [MA-7](#)
 Maintenance (engine)Schedule 2 [MA-9](#)
 Major overhaul (Final drive) [FFD-16](#), [RFD-16](#)
 Major overhaul (Transfer) [TF-145](#), [TF-275](#)
 Malfunction indicator lamp (MIL) [EC-62](#)
 Map lamp [LT-129](#)
 Mass air flow sensor (MAFS) [EC-183](#), [EC-192](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-8](#)
 MIL data link connectors circuit [EC-707](#)
 MIL/DL - Wiring diagram [EC-707](#)
 MIRROR - Wiring diagram [GW-92](#)
 Misfire [EC-284](#)
 Mode door control linkage adjustment [MTC-46](#)
 Mode door motor [ATC-59](#), [ATC-61](#), [ATC-144](#), [MTC-45](#),
[MTC-91](#)
 Model variation [GI-46](#)
 Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system - See Remote keyless entry
 system [BL-41](#)

N

NATS - Wiring diagram [BL-104](#)
 NAVI - Wiring diagram [AV-87](#)
 NAVI Control Unit [AV-165](#)
 Neutral-4LO switch [TF-65](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-10](#)
 NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (RAX) [RAX-4](#)
 NVH troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (Transfer) [TF-12](#), [TF-191](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-3](#)
 NVIS (Nissan vehicle immobilizer system) [BL-101](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-176](#)
 O2H2B2 - Wiring diagram [EC-178](#)
 O2S2B1 - Wiring diagram .. [EC-226](#), [EC-237](#), [EC-439](#),
[EC-451](#)
 O2S2B2 - Wiring diagram .. [EC-228](#), [EC-239](#), [EC-441](#),
[EC-453](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil filter (Transfer) [TF-142](#)
 Oil pan (engine) [EM-26](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (A/T) [AT-280](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-88](#)
 Oil seal replacement (front of final drive) [FFD-9](#), [RFD-](#)
[10](#)
 Oil seal replacement (side of final drive) [FFD-12](#), [RFD-](#)
[12](#)
 On board diagnostic system [EC-48](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-40](#)
 Overheat [EC-463](#)
 Oversize piston [EM-125](#)

P

P/SCKT - Wiring diagram [WW-53](#)
 Pantograph jack [GI-40](#)
 Park/Neutral position switch [EC-615](#)
 Park/neutral position switch (A/T) [AT-108](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) [EC-45](#)
 Personal lamp [LT-129](#)
 PGC/V - Wiring diagram [EC-334](#), [EC-557](#)
 PHSB1 - Wiring diagram [EC-307](#)
 PHSB2 - Wiring diagram [EC-309](#)
 Pilot bushing replacement - See Pilot converter ... [EM-](#)
[106](#)
 Piston assembly [EM-116](#)
 Piston pin inspection [EM-121](#)
 Piston ring inspection [EM-122](#)
 Piston to bore clearance [EM-125](#)
 Planetary carrier (Transfer) .. [TF-148](#), [TF-175](#), [TF-275](#),
[TF-277](#), [TF-283](#), [TF-291](#)
 PNP/SW - Wiring diagram [EC-617](#)
 POS - Wiring diagram [EC-300](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power door mirror [GW-92](#)
 Power seat [SE-82](#)
 Power steering fluid level [MA-29](#)
 Power steering gear [PS-15](#)
 Power steering oil pump [PS-20](#)
 Power steering pressure (PSP) sensor [EC-391](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)

ALPHABETICAL INDEX

PRE/SE - Wiring diagram [EC-351](#), [EC-357](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-156](#)
 Pressure switch 1 [AT-150](#), [AT-164](#)
 Pressure switch 2 [AT-162](#)
 Pressure switch 3 [AT-146](#), [AT-166](#)
 Pressure switch 5 [AT-154](#), [AT-168](#)
 Pressure switch 6 [AT-158](#), [AT-170](#)
 Pressure test (A/T) [AT-51](#)
 Propeller shaft [PR-4](#), [PR-9](#)
 Propeller shaft inspection [MA-25](#)
 Propeller shaft on vehicle service [PR-9](#)
 Propeller shaft vibration [PR-4](#), [PR-9](#)
 PS/SEN - Wiring diagram [EC-392](#)

R

Radiator [CO-11](#)
 Radio - See Audio [AV-6](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-147](#), [TF-180](#), [TF-275](#), [TF-277](#),
[TF-283](#)
 Rear combination lamp removal and installation ... [LT-120](#)
 Rear cover packing replacement diff. [FFD-13](#)
 Rear door [BL-91](#), [GW-63](#)
 Rear seat [SE-97](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear washer [WW-35](#)
 Rear window defogger [GW-72](#)
 Rear wiper [WW-35](#)
 Refrigerant connection precaution [ATC-7](#), [MTC-6](#)
 Refrigerant discharging evacuating charging [ATC-154](#),
[MTC-98](#)
 Refrigerant general precaution [ATC-6](#), [MTC-5](#)
 Refrigerant lines [ATC-154](#), [ATC-162](#), [ATC-163](#), [MTC-98](#),
[MTC-105](#), [MTC-106](#)
 Refrigerant pressure sensor . [EC-691](#), [ATC-165](#), [MTC-106](#)
 Relay box [PG-83](#)
 Remote keyless entry system [BL-41](#)
 Removal and installation (A/T) [AT-245](#), [AT-248](#)
 Removal and installation (Transfer) ... [TF-144](#), [TF-274](#)
 Revolution sensor (A/T) [AT-112](#)
 Road wheel size [GI-49](#)
 Rocker cover [EM-40](#)
 Room lamp [LT-128](#)
 Room lamp - See Interior lamp [LT-128](#)
 ROOM/L - Wiring diagram [LT-134](#)
 RP/SEN - Wiring diagram [EC-692](#)

S

SAE J1979 - Service \$01 - 09 [EC-48](#)
 SEAT - Wiring diagram [SE-82](#), [SE-83](#)
 Seat belt inspection [SB-9](#), [MA-32](#)
 Seat belt pre-tensioner [SRS-56](#)

Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-91](#)
 Seat, rear [SE-97](#)
 Self-diagnosis (Transfer) [TF-53](#), [TF-215](#)
 SEN/PW - Wiring diagram [EC-479](#)
 SHIFT - Wiring diagram [AT-224](#)
 Shift control (Transfer) ... [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#),
[TF-283](#), [TF-297](#)
 Shift lock system [AT-223](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-13](#)
 Side air bag (satellite) sensor [SRS-55](#)
 Side curtain air bag [SRS-52](#)
 Side trim [EI-27](#)
 SMJ (super multiple junction) [PG-79](#)
 Spare tire size [GI-49](#)
 Spark plug [EM-32](#)
 Spark plug replacement [MA-19](#)
 Specification value [EC-148](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-46](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-20](#)
 Stall test (A/T) [AT-50](#)
 Standardized relay [PG-77](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-10](#)
 Steering gear, linkage and transfer gear inspection
[MA-29](#)
 Steering linkage [PS-15](#)
 Steering wheel and column [PS-8](#)
 Step lamp [LT-129](#)
 Stop lamp [LT-97](#)
 Stop lamp switch [EC-625](#)
 STOP/L - Wiring diagram [LT-98](#)
 Strut (front) [FSU-10](#)
 Sub-oil pump (Transfer) [TF-166](#)
 Sun gear (Transfer) [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#),
[TF-283](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-123](#)
 Sunroof [RF-25](#)
 Supplemental Restraint System [SRS-5](#)
 Symbols and abbreviations [GI-10](#), [GI-22](#)
 Symptom matrix chart [EC-102](#)
 System readiness test (SRT) code [EC-54](#)

T

T/TOW - Wiring diagram [LT-124](#)
 Tachometer [DI-4](#)
 Tail lamp [LT-102](#)
 TAIL/L - Wiring diagram [LT-105](#)
 TCM circuit diagram [AT-49](#)

ALPHABETICAL INDEX

TCM inspection table	AT-83
TCS - Wiring diagram	BRC-17 , BRC-80
TCS (traction control system)	BRC-8 , BRC-70
TCS component parts and connector location	BRC-15 , BRC-78
TCS wheel sensors	BRC-15 , BRC-78
Theft warning system - See Vehicle security (Theft warning) system	BL-69
Thermometer	DI-27
Thermostat	CO-21
Three way catalyst	EM-21
Three way catalyst function (Bank 1)	EC-314
Three way catalyst function (Bank 2)	EC-314
Three way catalyst precautions	GI-5
Throttle control motor	EC-431
Throttle control motor relay	EC-426
Throttle position sensor (TPS) ..	EC-209 , EC-277 , EC-474 , EC-476 , EC-643
Tie-rod	PS-15
Timing chain	EM-54
Tire rotation	MA-28
Tire size	GI-49
Torque converter installation	AT-247 , AT-250
Torque convertor clutch solenoid valve ..	AT-119 , AT-121
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-279
TPS2 - Wiring diagram	EC-211
TPS3 - Wiring diagram	EC-645
Traction control system - Wiring diagram	BRC-17 , BRC-80
Transfer control device	TF-79 , TF-83 , TF-139 , TF-242 , TF-271
Transfer control unit inspection table	TF-38 , TF-209
Transfer dropping resistor	TF-92
Transfer fluid temperature sensor	TF-106 , TF-166
Transfer motor	TF-104 , TF-141
Transfer motor relay	TF-104
Transfer oil replacement	MA-25
Transfer serial number	GI-48
Transmission serial number	GI-48
Tread-FR&RR (Dimensions)	GI-49
Trim	EI-27
TRNSCV - Wiring diagram	BL-120
Trouble diagnoses	GI-10
Turbine revolution sensor	AT-135
TURN - Wiring diagram	LT-77
Turn signal lamp	LT-74
Two trip detection logic	EC-48
Two-pole lift	GI-41

V

Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-113
Valve clearance	EM-83
Valve guide	EM-98
Valve lifter	EM-78

Valve seat	EM-100
Valve spring	EM-101
Vanity mirror lamp	LT-128
Variable induction air control system (VIAS) ..	EC-620 , EC-670
VDC (vehicle dynamics control)	BRC-8 , BRC-70
VDC -Wiring diagram	BRC-17 , BRC-80
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-385
VEHSEC - Wiring diagram	BL-74
VENT/V - Wiring diagram	EC-341 , EC-565
VIAS - Wiring diagram	EC-672
VIAS/V - Wiring diagram	EC-621
Video Monitor	AV-68
VIN registration	EC-88
Viscosity number (SAE)	MA-12

W

W/ANT - Wiring diagram	AV-57
Wait detection switch	TF-72 , TF-235
WARN - Wiring diagram	DI-34
Warning chime	DI-46
Warning lamps	DI-33
Washer, front	WW-4
Washer, rear	WW-35
Water pump	CO-16
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-6
Wheel balance	MA-27
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-49
Wheelbase (Dimensions)	GI-49
Width (Dimensions)	GI-49
WINDOW - Wiring diagram	GW-21
Window antenna	AV-56
Window, door	GW-59 , GW-63
Windshield	GW-11
WIP/R - Wiring diagram	WW-37
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-35
Wiring Diagram (Cell code) list	PG-65
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-10