

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-95 , TF-167
4LO switch	TF-230
4WD - Wiring diagram	TF-26 , TF-205
4WD shift switch	TF-68 , TF-234
4WD solenoid valve	TF-91 , TF-167
4WD system description	TF-17 , TF-196
4WD system diagram	TF-21 , TF-199

A

A/C air flow	ATC-30 , MTC-26
A/C compressor clutch removal and installation ..	ATC-159 , MTC-102
A/C compressor mounting	ATC-158 , MTC-101
A/C compressor precaution	ATC-11 , MTC-9
A/C compressor special service tool .	ATC-14 , MTC-12
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-25
A/C diagnostic work flow (auto A/C)	ATC-115
A/C evaporator	ATC-166 , MTC-108
A/C HFC134a (R134a) system identification	ATC-6 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-154 , MTC-98
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-9
A/C lubricant (R134a)	ATC-22 , MTC-19
A/C lubrication oil	ATC-22 , MTC-19
A/C operational check	ATC-53 , ATC-55 , MTC-40
A/C self-diagnoses (auto A/C)	ATC-51 , ATC-115
A/C service data specification	ATC-174 , MTC-113
A/C trouble diagnoses (auto A/C)	ATC-34
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-41
A/C, M - Wiring diagram	MTC-35
A/T fluid checking	AT-13 , AT-53 , MA-22
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-14 , MA-24
A/T fluid temperature sensor	AT-133
A/T IND - Wiring diagram	DI-44
A/T indicator	DI-44
A/T self-diagnoses	AT-101
A/T shift lock system	AT-223
A/T shift lock system - Wiring diagram	AT-224
A/T trouble diagnoses	AT-44
ABS - Wiring diagram	BRC-17 , BRC-80
ABS (anti-lock brake system)	BRC-8 , BRC-70
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-582 , EC-588 , EC-602
Accelerator pedal released position learning	EC-77
AF1B1-Wiring diagram	EC-230 , EC-239 , EC-248 , EC-258 , EC-611

AF1B2-Wiring diagram	EC-232 , EC-241 , EC-250 , EC-260 , EC-613
AF1HB1-Wiring diagram	EC-164
AF1HB2-Wiring diagram	EC-166
Aiming adjustment	LT-25 , LT-62
Air bag	SRS-3
Air cleaner and air duct	EM-16
Air cleaner filter	EM-16
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-186 , EC-195
Air fuel ratio sensor 1 ..	EC-227 , EC-237 , EC-246 , EC-255 , EC-609
Air fuel ratio sensor 1 heater	EC-162
Air mix. door motor	ATC-63 , MTC-49
Ambient sensor	ATC-117 , ATC-128
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-584
APPS2 - Wiring diagram	EC-590
APPS3 - Wiring diagram	EC-604
ASC/BS - Wiring diagram	EC-544
ASC/SW - Wiring diagram	EC-537
ASCSOF - Wiring diagram	EC-622
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-629
ATP switch	TF-116 , TF-255
Audio	AV-6
AUDIO - Wiring diagram	AV-12
AUT/DP - Wiring diagram	SE-15
Auto air conditioner - Wiring diagram	ATC-41
Auto anti-dazzling inside mirror	GW-69
Autolamp	LT-40
Automatic drive positioner	SE-11
Automatic transmission number	GI-50
AV communication line	AV-91

B

B/COMP - Wiring diagram	DI-61
Back door trim	EI-25
BACK/L - Wiring diagram	LT-88
Back-up lamp	LT-88
Ball joint (front)	FSU-15
Basic inspection	EC-70
Battery	SC-4
Battery current sensor .	EC-507 , EC-514 , EC-521 , EC-528
Battery/Starting/Charging System Tester	SC-6 , SC-11 , SC-20
BCM (Body control module)	BCS-3
Block heater	EM-107
Blower motor	ATC-75 , ATC-132 , MTC-57 , MTC-84
Body alignment	BL-137
Body component parts	BL-124
Body construction	BL-136
Body exterior paint color	BL-123
Body mounting	BL-122

ALPHABETICAL INDEX

Body repair	BL-123
Body sealing	BL-133
Boring/horning cylinder block	EM-128
Bose speaker amp.	AV-7
Brake booster	BR-18
Brake fluid level	MA-30
Brake hydraulic line	BR-13
Brake inspection	MA-31
Brake lines and cables inspection	MA-30
Brake master cylinder	BR-16
Brake switch	EC-558
BRK/SW - Wiring diagram	EC-559
Bulb specifications	LT-151
Bumper, front	EI-14
Bumper, rear	EI-15

C

Camshaft	EM-75
Camshaft inspection	EM-77
Camshaft position sensor (PHASE)	EC-366
CAN - Wiring diagram	EC-154 , AT-104 , LAN-27 , LAN-41 , LAN-55 , LAN-69 , LAN-84 , LAN-101 , LAN-116 , LAN-131 , LAN-146 , LAN-161 , LAN-177
CAN communication	EC-153 , EC-156
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-167
CHARGE - Wiring diagram	SC-19
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-48
Circuit breaker	PG-17
Closed loop control	EC-25
Clutch drum (Transfer)	TF-167
Clutch pressure switch (Transfer)	TF-167
Coil spring (front)	FSU-10
Collision diagnosis	SRS-60
Combination lamp, rear, removal and installation ..	LT-105
Combination meter	DI-4
Combination switch	LT-79
COMBSW - Wiring diagram	LT-79
COMM - Wiring diagram	AV-91
COMPAS - Wiring diagram	DI-28
Compass	DI-27
Component Location (auto A/C)	ATC-37
Component Location (manual A/C)	MTC-32
Compression pressure	EM-92
Compressor clutch removal and installation	ATC-159 , MTC-102
Compressor mounting	ATC-158 , MTC-101
Compressor precaution	ATC-11 , MTC-9
Compressor special service tool	ATC-14 , MTC-12
Condenser	ATC-165 , MTC-106
Connecting rod	EM-125
Connecting rod bearing clearance	EM-129
Connecting rod bushing clearance	EM-125

Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-29 , BRC-93
CONSULT general information	GI-37
Control units (terminal arrangement)	PG-80
Control valve (A/T)	AT-38
Control valve (Transfer)	TF-167
Converter housing installation	AT-248 , AT-251
COOL/F - Wiring diagram	EC-497
Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-7
Cooling fan	CO-17
Cooling fan motor	EC-502
Cooling unit (A/C evaporator)	ATC-136 , ATC-166 , MTC-87 , MTC-108
Corrosion protection	BL-130
Crankcase ventilation system - See Positive crankcase ventilation	EC-44
Crankshaft	EM-129
Crankshaft position sensor (POS)	EC-359
Crash zone sensor	SRS-55
CUR/SE - Wiring diagram ...	EC-509 , EC-516 , EC-523 , EC-530
Cylinder block	EM-107
Cylinder head	EM-92
Cylinder head bolt tightening	EM-95

D

D/LOCK - Wiring diagram	BL-20
Daytime light system	LT-29
Daytime running light - See Daytime light system ..	LT-29
DEF - Wiring diagram	GW-73
Diagnosis sensor unit	SRS-58
Diagnostic trouble code (DTC) for OBD system ..	EC-8
Diagnostic trouble code (DTC) inspection priority chart ..	EC-87
Differential gear oil replacement	MA-27 , MA-28
Dimensions	GI-51
Direct clutch solenoid valve	AT-153 , AT-155
Display and amp.assembly	MTC-42
Display Control Unit-Description	AV-80
Display Unit-Description	AV-80
Dome light - See Interior lamp	LT-115
Door glass	GW-57 , GW-61
Door lock	BL-95
Door mirror lamp	LT-115
Door trim	EI-25
Door, front	BL-90 , GW-57
Door, rear	BL-90 , GW-61
Drive belt	EM-14
Drive chain (Transfer)	TF-149 , TF-176 , TF-278 , TF-280 , TF-286
Drive shaft (rear)	RAX-7
Driver air bag	SRS-45
DTC work support	EC-123
DTRL - Wiring diagram	LT-33
Duct and grilles	ATC-149 , MTC-94

ALPHABETICAL INDEX

DVD - Wiring Diagram [AV-72](#)
 DVD Player [AV-77](#)

E

ECM input/output signal [EC-104](#)
 ECM power supply [EC-145](#), [EC-472](#)
 ECM/PW - Wiring diagram [EC-473](#)
 ECTS - Wiring diagram [EC-209](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator .. [EM-19](#), [EC-569](#), [EC-580](#)
 Electrical load signal circuit [EC-631](#)
 Electrical units location [PG-73](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-102](#)
 Engine control component parts location [EC-94](#)
 Engine control module (ECM) [EC-476](#)
 Engine control system diagram [EC-23](#)
 Engine coolant temperature sensor (ECTS) .. [EC-207](#), [EC-219](#)
 Engine fail-safe system [EC-89](#)
 Engine oil [LU-7](#)
 Engine oil filter replacement [LU-10](#), [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-104](#)
 Engine room cover [EM-13](#)
 Engine serial number [GI-50](#)
 ETC1 - Wiring diagram [EC-570](#)
 ETC2 - Wiring diagram [EC-565](#)
 ETC3 - Wiring diagram [EC-576](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve [EC-402](#)
 EVAP canister vent control valve [EC-409](#), [EC-416](#)
 EVAP control system (small leak) diagnosis .. [EC-386](#), [EC-439](#)
 EVAP control system pressure sensor [EC-422](#), [EC-425](#), [EC-431](#)
 EVAP control system purge flow monitoring diagnosis [EC-381](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-166](#), [MTC-108](#)
 Exhaust manifold [EM-22](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-169](#), [MTC-109](#)

F

F/FOG - Wiring diagram [LT-58](#)
 F/PUMP - Wiring diagram [EC-641](#)
 Final drive pre-inspection [FFD-17](#), [RFD-17](#)
 Final drive removal and installation [RFD-13](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-133](#)
 Fluids [MA-11](#)

Fluorescent leak detector [ATC-170](#), [MTC-109](#)
 Fog lamp, front [LT-56](#)
 Foot lamp [LT-116](#)
 Freeze frame data [EC-52](#)
 Front brake solenoid valve [AT-149](#), [AT-151](#)
 Front bumper [EI-14](#)
 Front case (Transfer) [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#)
 Front door [BL-90](#), [BL-95](#), [GW-57](#)
 Front Door Trim [EI-25](#)
 Front drive shaft (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#), [TF-299](#)
 Front final drive removal and installation (4WD) . [FFD-14](#)
 Front fog lamp [LT-56](#)
 Front passenger air bag [SRS-49](#)
 Front seat [SE-85](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-57](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-134](#)
 FTTS - Wiring diagram [EC-331](#), [EC-335](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-305](#), [EC-317](#)
 Fuel injection system (Bank 2) [EC-305](#), [EC-317](#)
 Fuel injector and fuel tube [EM-35](#)
 Fuel level sensor [EC-455](#), [EC-457](#), [EC-459](#)
 Fuel line inspection [FL-5](#)
 Fuel pressure check [EC-79](#)
 Fuel pressure release [EC-79](#)
 Fuel pump [EC-640](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-5](#)
 Fuel tank [FL-12](#)
 Fuel tank temperature sensor [EC-329](#), [EC-334](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-307](#), [EC-319](#)
 FUEL B2 - Wiring diagram [EC-309](#), [EC-321](#)
 Fuse [PG-17](#), [PG-86](#)
 Fuse and fusible link box [PG-86](#)
 Fuse block [PG-85](#)
 Fusible link [PG-17](#), [PG-86](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-4](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-125](#)
 Glass [GW-11](#), [GW-57](#), [GW-61](#)
 GPS antenna [AV-79](#)
 Grease [MA-11](#)
 Ground distribution [PG-35](#)

ALPHABETICAL INDEX

H

H/LAMP - Wiring diagram	LT-8
Handling precautions for plastics	BL-152
Harness connector	PG-76
Harness layout	PG-45
Hazard warning lamp	LT-64
Headlamp	LT-5
Heated oxygen sensor 2 (bank 1)	EC-267 , EC-279 , EC-293
Heated oxygen sensor 2 (bank 2)	EC-267 , EC-279 , EC-293
Heated oxygen sensor 2 heater (bank 1)	EC-170
Heated oxygen sensor 2 heater (bank 2)	EC-170
Heated seat	SE-82
Heater and cooling unit (Heater core) .	ATC-136 , ATC-140 , MTC-87 , MTC-89
Heater unit (heater core) ATC-136 , ATC-140 , MTC-87 , MTC-89	
Height (Dimensions)	GI-51
HFC134a (R134a) system identification ATC-6 , MTC-5	
HFC134a (R134a) system precaution ..	ATC-5 , MTC-4
HFC134a (R134a) system service procedure ATC-154 , MTC-98	
HFC134a (R134a) system service tools ATC-14 , MTC-12	
HFC134a system service equipment precaution ATC-11 , MTC-9	
High and low reverse clutch solenoid valve	AT-157 , AT-159
Homelink universal transceiver	BL-119
Horn	WW-48
HORN - Wiring diagram	WW-48
How to erase DTC for OBD system	EC-60
HSEAT - Wiring diagram	SE-83

I

I/MIRR - Wiring diagram	GW-68
IATS - Wiring diagram	EC-204
Identification plate	GI-49
Idle air volume learning	EC-77
Idle speed control (ISC)	EC-463 , EC-465
Ignition coil	EM-32 , EC-646
Ignition control system	EC-646
Ignition key hole illumination	LT-115
IGNSYS - Wiring diagram	EC-647
ILL - Wiring diagram	LT-141
Illumination	LT-135
Illumination control	LT-150
In vehicle sensor	ATC-120 , ATC-129
INJECT - Wiring diagram	EC-634
Injector	EC-633
Input clutch solenoid valve	AT-145 , AT-147
Instrument panel	IP-10
INT/L - Wiring diagram	LT-121
Intake air temperature sensor	EC-202 , EC-222
Intake door control linkage adjustment	MTC-54
Intake door motor ATC-72 , ATC-74 , ATC-143 , MTC-53 ,	

MTC-90

Intake manifold	EM-20
Intake manifold collector	EM-17
Intake sensor ..	ATC-125 , ATC-131 , MTC-80 , MTC-83
Intake valve timing control (Bank 1)	EC-158
Intake valve timing control (Bank 2)	EC-158
Intake valve timing control solenoid valve (Bank 1) EC-179	
Intake valve timing control solenoid valve (Bank 2) EC-179	
Integrated homelink transmitter - See Homelink universal transceiver	BL-119
Interior	EI-27
Interior lamp	LT-115
Interior lamp on-off control	LT-116
Internal gear (Transfer) ..	TF-149 , TF-176 , TF-278 , TF-280 , TF-286
IPDM (Intelligent power distribution module engine room)	PG-18
IVCB1 - Wiring diagram	EC-180
IVCB2 - Wiring diagram	EC-182
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

J

Jacking points	GI-42
Junction box (J/B)	PG-85

K

Key illumination	LT-116
KEYLES - Wiring diagram	BL-45 , BL-46
Knock sensor (KS)	EC-354
KS - Wiring diagram	EC-355

L

Length (Dimensions)	GI-51
License lamp	LT-90
Lifting points	GI-43
Line pressure solenoid valve	AT-128
Line pressure switch (Transfer)	TF-167
Line pressure test (A/T)	AT-54
Liquid gasket application	EM-5 , LU-2 , CO-2
Location of electrical units	PG-73
Low coast brake solenoid valve	AT-161 , AT-163
Low tire pressure warning system	WT-8
Low tire pressure warning system - trouble diagnoses WT-11	
Low tire pressure warning system - Wiring diagram	WT-11
Lubricant (R134a) A/C	ATC-22 , MTC-19
Lubricants	MA-11
Lubrication circuit (engine)	LU-5
Lubrication oil A/C	ATC-22 , MTC-19
Lubrication-locks, hinges and hood latches	MA-33

ALPHABETICAL INDEX

M

MAFS - Wiring diagram [EC-189](#), [EC-197](#)
Magnet clutch . [ATC-96](#), [ATC-159](#), [MTC-65](#), [MTC-102](#)
MAIN - Wiring diagram [EC-145](#), [AT-173](#)
Main oil pump (Transfer) [TF-167](#)
Mainshaft (Transfer) [TF-167](#), [TF-278](#), [TF-280](#), [TF-286](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-16](#), [RFD-16](#)
Major overhaul (Transfer) [TF-146](#), [TF-278](#)
Malfunction indicator lamp (MIL) [EC-61](#)
Manual air conditioner - Wiring diagram [MTC-35](#)
Map lamp [LT-116](#)
Mass air flow sensor (MAFS) [EC-186](#), [EC-195](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-673](#)
MIL/DL - Wiring diagram [EC-673](#)
MIRROR - Wiring diagram [GW-88](#)
Misfire [EC-345](#)
Mode door control linkage adjustment [MTC-46](#)
Mode door motor [ATC-59](#), [ATC-61](#), [ATC-144](#), [MTC-45](#),
[MTC-91](#)
Model variation [GI-48](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry
system [BL-41](#)

N

NATS - Wiring diagram [BL-103](#)
NAVI - Wiring diagram [AV-83](#)
NAVI Control Unit [AV-80](#), [AV-159](#)
Neutral-4LO switch [TF-64](#)
NONDTC - Wiring diagram [AT-181](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-11](#)
NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-12](#), [TF-192](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-4](#)
NVIS (Nissan vehicle immobilizer system) [BL-100](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-172](#)
O2H2B2 - Wiring diagram [EC-174](#)
O2S2B1 - Wiring diagram ... [EC-270](#), [EC-282](#), [EC-296](#)
O2S2B2 - Wiring diagram ... [EC-272](#), [EC-284](#), [EC-298](#)
Oil cooler (engine) [LU-11](#)
Oil filter [LU-10](#)

Oil filter (Transfer) [TF-143](#)
Oil pan (engine) [EM-27](#)
Oil pressure (engine) [LU-8](#)
Oil pump (A/T) [AT-281](#)
Oil pump (engine) [LU-13](#)
Oil pump regulator valve (engine) [LU-13](#)
Oil seal replacement (engine) [EM-89](#)
Oil seal replacement (front of final drive) [FFD-9](#), [RFD-](#)
[10](#)
Oil seal replacement (side of final drive) [FFD-12](#), [RFD-](#)
[12](#)
On board diagnostic system [EC-47](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
Overheat [EC-493](#)
Oversize piston [EM-127](#)

P

P/SCKT - Wiring diagram [WW-46](#)
Pantograph jack [GI-42](#)
Park/Neutral position switch [EC-485](#)
Park/neutral position switch (A/T) [AT-111](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-44](#)
Personal lamp [LT-116](#)
PGCV - Wiring diagram [EC-396](#), [EC-404](#)
PHSB1 - Wiring diagram [EC-368](#)
PHSB2 - Wiring diagram [EC-370](#)
Pilot bushing replacement - See Pilot converter ... [EM-](#)
[108](#)
Piston assembly [EM-118](#)
Piston pin inspection [EM-123](#)
Piston ring inspection [EM-124](#)
Piston to bore clearance [EM-127](#)
Planetary carrier (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#),
[TF-280](#), [TF-286](#), [TF-295](#)
PNP/SW - Wiring diagram [EC-487](#), [AT-112](#)
POS - Wiring diagram [EC-361](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power door mirror [GW-88](#)
Power seat [SE-78](#)
Power steering fluid level [MA-32](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-20](#)
Power steering pressure (PSP) sensor [EC-467](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-427](#), [EC-433](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-155](#)
Pressure switch 1 [AT-151](#), [AT-165](#)
Pressure switch 2 [AT-163](#)
Pressure switch 3 [AT-147](#), [AT-167](#)
Pressure switch 5 [AT-155](#), [AT-169](#)
Pressure switch 6 [AT-159](#), [AT-171](#)
Pressure test (A/T) [AT-54](#)
Propeller shaft [PR-4](#), [PR-9](#)

ALPHABETICAL INDEX

Propeller shaft inspection [MA-26](#)
 Propeller shaft on vehicle service [PR-9](#)
 Propeller shaft vibration [PR-4](#), [PR-9](#)
 PS/SEN - Wiring diagram [EC-468](#)

R

Radiator [CO-14](#)
 Radio - See Audio [AV-6](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-148](#), [TF-181](#), [TF-278](#), [TF-280](#),
[TF-286](#)
 Rear combination lamp removal and installation ... [LT-105](#)
 Rear cover packing replacement diff. [FFD-13](#)
 Rear door [BL-90](#), [GW-61](#)
 Rear seat [SE-96](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear washer [WW-31](#)
 Rear window defogger [GW-70](#)
 Rear wiper [WW-31](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-5](#)
 Refrigerant discharging evacuating charging [ATC-154](#),
[MTC-98](#)
 Refrigerant general precaution [ATC-6](#), [MTC-5](#)
 Refrigerant lines [ATC-154](#), [ATC-162](#), [ATC-163](#), [MTC-98](#),
[MTC-105](#), [MTC-106](#)
 Refrigerant pressure sensor . [EC-659](#), [ATC-165](#), [MTC-106](#)
 Relay box [PG-87](#)
 Remote keyless entry system [BL-41](#)
 Removal and installation (A/T) [AT-246](#), [AT-249](#)
 Removal and installation (Transfer) ... [TF-145](#), [TF-277](#)
 Revolution sensor (A/T) [AT-117](#)
 Road wheel size [GI-51](#)
 Rocker cover [EM-41](#)
 Room lamp [LT-115](#)
 Room lamp - See Interior lamp [LT-115](#)
 ROOM/L - Wiring diagram [LT-121](#)
 RP/SEN - Wiring diagram [EC-660](#)

S

SAE J1979 - Service \$01 - 09 [EC-47](#)
 SEAT - Wiring diagram [SE-78](#), [SE-79](#)
 Seat belt inspection [SB-9](#), [MA-34](#)
 Seat belt pre-tensioner [SRS-57](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-85](#)
 Seat, rear [SE-96](#)
 Self-diagnosis (Transfer) [TF-52](#), [TF-217](#)
 SEN/PW - Wiring diagram [EC-480](#)
 SHIFT - Wiring diagram [AT-224](#)
 Shift control (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#),
[TF-286](#), [TF-301](#)
 Shift lock system [AT-223](#)

Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-13](#)
 Side air bag (satellite) sensor [SRS-56](#)
 Side curtain air bag [SRS-53](#)
 Side trim [EI-27](#)
 SMJ (super multiple junction) [PG-83](#)
 Spare tire size [GI-51](#)
 Spark plug [EM-33](#)
 Spark plug replacement [EM-33](#), [MA-19](#)
 Specification value [EC-134](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-47](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-20](#)
 Stall test (A/T) [AT-53](#)
 Standardized relay [PG-81](#)
 START - Wiring diagram [SC-9](#)
 Starting system [SC-8](#)
 Steering gear, linkage and transfer gear inspection
[MA-31](#)
 Steering linkage [PS-15](#)
 Steering wheel and column [PS-8](#)
 Step lamp [LT-116](#)
 Stop lamp [LT-85](#)
 Stop lamp switch [EC-558](#)
 STOP/L - Wiring diagram [LT-86](#)
 Strut (front) [FSU-10](#)
 STSIG - Wiring diagram [AT-107](#)
 Sub-oil pump (Transfer) [TF-167](#)
 Sun gear (Transfer) [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#),
[TF-286](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-123](#)
 Sunroof [RF-24](#)
 Supplemental Restraint System [SRS-5](#)
 Symbols and abbreviations [GI-10](#), [GI-22](#)
 Symptom matrix chart [EC-90](#)
 System readiness test (SRT) code [EC-53](#)

T

T/TOW - Wiring diagram [LT-110](#)
 Tachometer [DI-4](#)
 Tail lamp [LT-90](#)
 TAIL/L - Wiring diagram [LT-93](#)
 TCM circuit diagram [AT-52](#)
 TCM inspection table [AT-86](#)
 TCS - Wiring diagram [BRC-17](#), [BRC-80](#)
 TCS (traction control system) [BRC-8](#), [BRC-70](#)
 TCS component parts and connector location [BRC-15](#),
[BRC-78](#)
 TCS wheel sensors [BRC-15](#), [BRC-78](#)
 Theft warning system - See Vehicle security (Theft warn-
 ing) system [BL-68](#)
 Thermometer [DI-27](#)

ALPHABETICAL INDEX

Thermostat [CO-24](#)
 Three way catalyst [EM-22](#)
 Three way catalyst function (Bank 1) [EC-375](#)
 Three way catalyst function (Bank 2) [EC-375](#)
 Three way catalyst precautions [GI-5](#)
 Throttle control motor [EC-575](#)
 Throttle control motor relay [EC-563](#)
 Throttle position sensor (TPS) .. [EC-212](#), [EC-338](#), [EC-503](#), [EC-505](#), [EC-595](#)
 Tie-rod [PS-15](#)
 Timing chain [EM-55](#)
 Tire rotation [MA-30](#)
 Tire size [GI-51](#)
 Torque converter installation [AT-248](#), [AT-251](#)
 Torque convertor clutch solenoid valve .. [AT-124](#), [AT-126](#)
 Towing point [GI-45](#)
 TPS1 - Wiring diagram [EC-340](#)
 TPS2 - Wiring diagram [EC-214](#)
 TPS3 - Wiring diagram [EC-597](#)
 Traction control system - Wiring diagram [BRC-17](#), [BRC-80](#)
 Transfer control device [TF-78](#), [TF-82](#), [TF-138](#), [TF-244](#), [TF-273](#)
 Transfer control unit inspection table [TF-37](#), [TF-211](#)
 Transfer dropping resistor [TF-91](#)
 Transfer fluid temperature sensor [TF-105](#), [TF-167](#)
 Transfer motor [TF-103](#), [TF-142](#)
 Transfer motor relay [TF-103](#)
 Transfer oil replacement [MA-25](#)
 Transfer serial number [GI-50](#)
 Transmission serial number [GI-50](#)
 Tread-FR&RR (Dimensions) [GI-51](#)
 Trim [EI-27](#)
 TRNSCV - Wiring diagram [BL-119](#)
 Trouble diagnoses [GI-10](#)
 Turbine revolution sensor [AT-115](#)
 TURN - Wiring diagram [LT-67](#)
 Turn signal lamp [LT-64](#)
 Two trip detection logic [EC-47](#)
 Two-pole lift [GI-43](#)

V

Vacuum hose (brake system) [BR-21](#)
 Vacuum hose drawing (Engine control) [EC-101](#)
 Valve clearance [EM-84](#)
 Valve guide [EM-99](#), [EM-100](#)
 Valve lifter [EM-79](#)
 Valve seat [EM-101](#)
 Valve spring [EM-102](#), [EM-103](#)
 Vanity mirror lamp [LT-115](#)
 Variable induction air control system (VIAS) .. [EC-553](#), [EC-664](#)
 VDC (vehicle dynamics control) [BRC-8](#), [BRC-70](#)
 VDC -Wiring diagram [BRC-17](#), [BRC-80](#)
 Vehicle identification number [GI-49](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-45](#)
 Vehicle security (theft warning) system [BL-68](#)

Vehicle speed sensor (VSS) [EC-461](#), [EC-552](#)
 VEHSEC - Wiring diagram [BL-72](#)
 VENT/V - Wiring diagram [EC-411](#), [EC-418](#)
 VIAS - Wiring diagram [EC-666](#)
 VIAS/V - Wiring diagram [EC-554](#)
 VIN registration [EC-76](#)
 Viscosity number (SAE) [MA-12](#)
 VSS A/T - Wiring diagram [AT-119](#)

W

W/ANT - Wiring diagram [AV-67](#)
 Wait detection switch [TF-71](#), [TF-237](#)
 WARN - Wiring diagram [DI-34](#)
 Warning chime [DI-46](#)
 Warning lamps [DI-33](#)
 Washer, front [WW-4](#)
 Washer, rear [WW-31](#)
 Water pump [CO-19](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-6](#)
 Wheel alignment (rear) [RSU-6](#)
 Wheel balance [MA-28](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel size [GI-51](#)
 Wheelbase (Dimensions) [GI-51](#)
 Width (Dimensions) [GI-51](#)
 WINDOW - Wiring diagram [GW-21](#)
 Window antenna [AV-66](#)
 Window, door [GW-57](#), [GW-61](#)
 Windshield [GW-11](#)
 WIP/R - Wiring diagram [WW-33](#)
 WIPER - Wiring diagram [WW-8](#)
 Wiper, front [WW-4](#)
 Wiper, rear [WW-31](#)
 Wiring Diagram (Cell code) list [PG-70](#)
 Wiring diagrams [GI-15](#)
 WT-T/WARN - Wiring diagram [WT-11](#)