

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-95 , TF-167
4LO switch	TF-230
4WD - Wiring diagram	TF-26 , TF-205
4WD shift switch	TF-68 , TF-234
4WD solenoid valve	TF-91 , TF-167
4WD system description	TF-17 , TF-196
4WD system diagram	TF-21 , TF-199

A

A/C air flow	ATC-30 , MTC-26
A/C compressor clutch removal and installation ..	ATC-163 , MTC-103
A/C compressor mounting	ATC-162 , MTC-102
A/C compressor precaution	ATC-11 , MTC-9
A/C compressor special service tool .	ATC-14 , MTC-12
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-25
A/C diagnostic work flow (auto A/C)	ATC-118
A/C evaporator	ATC-170 , MTC-109
A/C HFC134a (R134a) system identification	ATC-6 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-158 , MTC-99
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-9
A/C lubricant (R134a)	ATC-22 , MTC-19
A/C lubrication oil	ATC-22 , MTC-19
A/C operational check	ATC-52 , ATC-54 , MTC-39
A/C self-diagnoses (auto A/C)	ATC-50 , ATC-118
A/C service data specification	ATC-178 , MTC-114
A/C trouble diagnoses (auto A/C)	ATC-34
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-40
A/C, M - Wiring diagram	MTC-34
A/T fluid checking	AT-12 , AT-52 , MA-22
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-14 , MA-24
A/T fluid temperature sensor	AT-127
A/T IND - Wiring diagram	DI-39
A/T indicator	DI-39
A/T self-diagnoses	AT-95
A/T shift lock system	AT-217
A/T shift lock system - Wiring diagram	AT-218
A/T trouble diagnoses	AT-43
ABS - Wiring diagram	BRC-17 , BRC-79
ABS (anti-lock brake system)	BRC-8 , BRC-69
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-579 , EC-585 , EC-599
Accelerator pedal released position learning	EC-77
AF1B1-Wiring diagram	EC-231 , EC-239 , EC-247 , EC-256 , EC-608

AF1B2-Wiring diagram	EC-233 , EC-241 , EC-249 , EC-258 , EC-610
AF1HB1-Wiring diagram	EC-165
AF1HB2-Wiring diagram	EC-167
Aiming adjustment	LT-23 , LT-58
Air bag	SRS-3
Air cleaner and air duct	EM-16
Air cleaner filter	EM-16
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-187 , EC-196
Air fuel ratio sensor 1 ..	EC-228 , EC-237 , EC-245 , EC-253 , EC-606
Air fuel ratio sensor 1 heater	EC-163
Air mix. door motor	ATC-63 , MTC-47
Ambient sensor	ATC-121 , ATC-132
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-581
APPS2 - Wiring diagram	EC-587
APPS3 - Wiring diagram	EC-601
ASC/BS - Wiring diagram	EC-541
ASC/SW - Wiring diagram	EC-534
ASCSOF - Wiring diagram	EC-619
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-626
ATP switch	TF-116 , TF-255
Audio	AV-6
AUDIO - Wiring diagram	AV-12
AUT/DP - Wiring diagram	SE-15
Auto air conditioner - Wiring diagram	ATC-40
Auto anti-dazzling inside mirror	GW-73
Autolamp	LT-38
Automatic drive positioner	SE-11
Automatic transmission number	GI-50
AV communication line	AV-91

B

B/COMP - Wiring diagram	DI-54
Back door trim	EI-26
BACK/L - Wiring diagram	LT-81
Back-up lamp	LT-81
Ball joint (front)	FSU-15
Basic inspection	EC-70
Battery	SC-4
Battery current sensor .	EC-504 , EC-511 , EC-518 , EC-525
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-22
BCM (Body control module)	BCS-3
Block heater	EM-107
Blower motor	ATC-76 , ATC-136 , MTC-56 , MTC-85
Body alignment	BL-131
Body component parts	BL-118
Body construction	BL-130
Body exterior paint color	BL-117
Body mounting	BL-116

ALPHABETICAL INDEX

Body repair	BL-117
Body sealing	BL-127
Boring/horning cylinder block	EM-128
Bose speaker amp.	AV-7
Brake booster	BR-18
Brake fluid level	MA-31
Brake hydraulic line	BR-13
Brake inspection	MA-32
Brake lines and cables inspection	MA-31
Brake master cylinder	BR-16
Brake switch	EC-555
BRK/SW - Wiring diagram	EC-556
Bulb specifications	LT-142
Bumper, front	EI-14
Bumper, rear	EI-15

C

Camshaft	EM-75
Camshaft inspection	EM-77
Camshaft position sensor (PHASE)	EC-362
CAN - Wiring diagram	EC-155 , AT-98
CAN communication	EC-154 , EC-157
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-167
CHARGE - Wiring diagram	SC-21
Charging system	SC-19
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-43
Circuit breaker	PG-17
Closed loop control	EC-25
Clutch drum (Transfer)	TF-167
Clutch pressure switch (Transfer)	TF-167
Coil spring (front)	FSU-10
Collision diagnosis	SRS-53
Combination lamp, rear, removal and installation	LT-98
Combination meter	DI-4
Combination switch	LT-73
COMBSW - Wiring diagram	LT-73
COMM - Wiring diagram	AV-91
COMPAS - Wiring diagram	DI-25
Compass	DI-24
Component Location (auto A/C)	ATC-36
Component Location (manual A/C)	MTC-31
Compression pressure	EM-92
Compressor clutch removal and installation	ATC-163 , MTC-103
Compressor mounting	ATC-162 , MTC-102
Compressor precaution	ATC-11 , MTC-9
Compressor special service tool	ATC-14 , MTC-12
Condenser	ATC-169 , MTC-107
Connecting rod	EM-125
Connecting rod bearing clearance	EM-129
Connecting rod bushing clearance	EM-125
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-29 , BRC-92
CONSULT general information	GI-37

Control units (terminal arrangement)	PG-80
Control valve (A/T)	AT-37
Control valve (Transfer)	TF-167
Converter housing installation	AT-242 , AT-245
COOL/F - Wiring diagram	EC-492
Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-7
Cooling fan	CO-17
Cooling fan motor	EC-497
Cooling unit (A/C evaporator)	ATC-140 , ATC-170 , MTC-88 , MTC-109
Corrosion protection	BL-124
Crankcase ventilation system - See Positive crankcase ventilation	EC-44
Crankshaft	EM-129
Crankshaft position sensor (POS)	EC-355
Crash zone sensor	SRS-48
CUR/SE - Wiring diagram ...	EC-506 , EC-513 , EC-520 , EC-527
Cylinder block	EM-107
Cylinder head	EM-92
Cylinder head bolt tightening	EM-95

D

D/LOCK - Wiring diagram	BL-20
Daytime light system	LT-27
Daytime running light - See Daytime light system ..	LT-27
DEF - Wiring diagram	GW-77
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system ..	EC-9
Diagnostic trouble code (DTC) inspection priority chart	EC-88
Differential gear oil replacement	MA-28 , MA-29
Dimensions	GI-51
Direct clutch solenoid valve	AT-147 , AT-149
Display and amp.assembly	MTC-40
Display Control Unit-Description	AV-80
Display Unit-Description	AV-80
Dome light - See Interior lamp	LT-108
Door glass	GW-61 , GW-65
Door lock	BL-89
Door mirror lamp	LT-108
Door trim	EI-26
Door, front	BL-84 , GW-61
Door, rear	BL-84 , GW-65
Drive belt	EM-14
Drive chain (Transfer) ...	TF-149 , TF-176 , TF-278 , TF-280 , TF-286
Drive shaft (rear)	RAX-7
Driver air bag	SRS-38
DTC work support	EC-124
DTRL - Wiring diagram	LT-31
Duct and grilles	ATC-153 , MTC-95
DVD - Wiring Diagram	AV-72
DVD Player	AV-77

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

E

ECM input/output signal [EC-105](#)
 ECM power supply [EC-146](#), [EC-468](#)
 ECM/PW - Wiring diagram [EC-469](#)
 ECTS - Wiring diagram [EC-210](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator .. [EM-19](#), [EC-566](#), [EC-577](#)
 Electrical load signal circuit [EC-628](#)
 Electrical units location [PG-73](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-103](#)
 Engine control component parts location [EC-95](#)
 Engine control module (ECM) [EC-472](#)
 Engine control system diagram [EC-23](#)
 Engine coolant temperature sensor (ECTS) .. [EC-208](#), [EC-220](#)
 Engine fail-safe system [EC-90](#)
 Engine oil [LU-7](#)
 Engine oil filter replacement [LU-10](#), [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-104](#)
 Engine room cover [EM-13](#)
 Engine serial number [GI-50](#)
 ETC1 - Wiring diagram [EC-567](#)
 ETC2 - Wiring diagram [EC-562](#)
 ETC3 - Wiring diagram [EC-573](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve [EC-398](#)
 EVAP canister vent control valve [EC-405](#), [EC-412](#)
 EVAP control system (small leak) diagnosis .. [EC-382](#), [EC-435](#)
 EVAP control system pressure sensor [EC-418](#), [EC-421](#), [EC-427](#)
 EVAP control system purge flow monitoring diagnosis [EC-377](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-170](#), [MTC-109](#)
 Exhaust manifold [EM-22](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-173](#), [MTC-110](#)

F

F/FOG - Wiring diagram [LT-53](#)
 F/PUMP - Wiring diagram [EC-638](#)
 Final drive pre-inspection [FFD-16](#), [RFD-19](#)
 Final drive removal and installation [RFD-15](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-127](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-174](#), [MTC-110](#)
 Fog lamp, front [LT-51](#)
 Foot lamp [LT-109](#)
 Freeze frame data [EC-52](#)

Front brake solenoid valve [AT-143](#), [AT-145](#)
 Front bumper [EI-14](#)
 Front case (Transfer) [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#)
 Front door [BL-84](#), [BL-89](#), [GW-61](#)
 Front Door Trim [EI-26](#)
 Front drive shaft (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#), [TF-299](#)
 Front final drive removal and installation (4WD) . [FFD-13](#)
 Front fog lamp [LT-51](#)
 Front passenger air bag [SRS-42](#)
 Front seat [SE-84](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-128](#)
 FTTS - Wiring diagram [EC-328](#), [EC-332](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-303](#), [EC-315](#)
 Fuel injection system (Bank 2) [EC-303](#), [EC-315](#)
 Fuel injector and fuel tube [EM-35](#)
 Fuel level sensor [EC-451](#), [EC-453](#), [EC-455](#)
 Fuel line inspection [FL-5](#)
 Fuel pressure check [EC-79](#)
 Fuel pressure release [EC-79](#)
 Fuel pump [EC-637](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-5](#)
 Fuel tank [FL-12](#)
 Fuel tank temperature sensor [EC-326](#), [EC-331](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-305](#), [EC-317](#)
 FUEL B2 - Wiring diagram [EC-307](#), [EC-319](#)
 Fuse [PG-17](#), [PG-86](#)
 Fuse and fusible link box [PG-86](#)
 Fuse block [PG-85](#)
 Fusible link [PG-17](#), [PG-86](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-4](#)
 Generator [SC-19](#)
 Generic scan tool (GST) [EC-126](#)
 Glass [GW-11](#), [GW-61](#), [GW-65](#)
 Glove box lamp [LT-127](#)
 GPS antenna [AV-79](#)
 Grease [MA-11](#)
 Ground distribution [PG-33](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 Handling precautions for plastics [BL-146](#)
 Harness connector [PG-76](#)

ALPHABETICAL INDEX

Harness layout [PG-43](#)
 Hazard warning lamp [LT-60](#)
 Headlamp [LT-5](#)
 Heated oxygen sensor 2 (bank 1) [EC-265](#), [EC-277](#), [EC-291](#)
 Heated oxygen sensor 2 (bank 2) [EC-265](#), [EC-277](#), [EC-291](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-171](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-171](#)
 Heated seat [SE-81](#)
 Heater and cooling unit (Heater core) . [ATC-140](#), [ATC-144](#), [MTC-88](#), [MTC-90](#)
 Heater unit (heater core) [ATC-140](#), [ATC-144](#), [MTC-88](#), [MTC-90](#)
 Height (Dimensions) [GI-51](#)
 HFC134a (R134a) system identification [ATC-6](#), [MTC-5](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-4](#)
 HFC134a (R134a) system service procedure [ATC-158](#), [MTC-99](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-12](#)
 HFC134a system service equipment precaution [ATC-11](#), [MTC-9](#)
 High and low reverse clutch solenoid valve [AT-151](#), [AT-153](#)
 Homelink universal transceiver [BL-113](#)
 Horn [WW-44](#)
 HORN - Wiring diagram [WW-44](#)
 How to erase DTC for OBD system [EC-60](#)
 HSEAT - Wiring diagram [SE-82](#)

I

I/MIRR - Wiring diagram [GW-72](#)
 IATS - Wiring diagram [EC-205](#)
 Identification plate [GI-49](#)
 Idle air volume learning [EC-77](#)
 Idle speed control (ISC) [EC-459](#), [EC-461](#)
 Ignition coil [EM-32](#), [EC-643](#)
 Ignition control system [EC-643](#)
 Ignition key hole illumination [LT-108](#)
 IGNSYS - Wiring diagram [EC-644](#)
 ILL - Wiring diagram [LT-132](#)
 Illumination [LT-126](#)
 Illumination control [LT-141](#)
 In vehicle sensor [ATC-124](#), [ATC-133](#)
 INJECT - Wiring diagram [EC-631](#)
 Injector [EC-630](#)
 Input clutch solenoid valve [AT-139](#), [AT-141](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-114](#)
 Intake air temperature sensor [EC-203](#), [EC-223](#)
 Intake door control linkage adjustment [MTC-53](#)
 Intake door motor [ATC-73](#), [ATC-75](#), [ATC-147](#), [MTC-52](#), [MTC-91](#)
 Intake manifold [EM-20](#)
 Intake manifold collector [EM-17](#)
 Intake sensor ... [ATC-129](#), [ATC-135](#), [MTC-81](#), [MTC-84](#)
 Intake valve timing control (Bank 1) [EC-159](#)

Intake valve timing control (Bank 2) [EC-159](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-180](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-180](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-113](#)
 Interior [EI-28](#)
 Interior lamp [LT-108](#)
 Interior lamp on-off control [LT-109](#)
 Internal gear (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#), [TF-280](#), [TF-286](#)
 IPDM (Intelligent power distribution module engine room) [PG-18](#)
 IVCB1 - Wiring diagram [EC-181](#)
 IVCB2 - Wiring diagram [EC-183](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-42](#)
 Junction box (J/B) [PG-85](#)

K

Key illumination [LT-109](#)
 KEYLES - Wiring diagram [BL-43](#), [BL-44](#)
 Knock sensor (KS) [EC-350](#)
 KS - Wiring diagram [EC-351](#)

L

Length (Dimensions) [GI-51](#)
 License lamp [LT-83](#)
 Lifting points [GI-43](#)
 Line pressure solenoid valve [AT-122](#)
 Line pressure switch (Transfer) [TF-167](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [EM-5](#), [LU-2](#), [CO-2](#)
 Location of electrical units [PG-73](#)
 Low coast brake solenoid valve [AT-155](#), [AT-157](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses [WT-11](#)
 Low tire pressure warning system - Wiring diagram [WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-19](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-5](#)
 Lubrication oil A/C [ATC-22](#), [MTC-19](#)
 Lubrication-locks, hinges and hood latches [MA-34](#)

M

MAFS - Wiring diagram [EC-190](#), [EC-198](#)
 Magnet clutch . [ATC-97](#), [ATC-163](#), [MTC-64](#), [MTC-103](#)
 MAIN - Wiring diagram [EC-146](#), [AT-167](#)
 Main oil pump (Transfer) [TF-167](#)

ALPHABETICAL INDEX

Mainshaft (Transfer) [TF-167](#), [TF-278](#), [TF-280](#), [TF-286](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-15](#), [RFD-18](#)
Major overhaul (Transfer) [TF-146](#), [TF-278](#)
Malfunction indicator lamp (MIL) [EC-61](#)
Manual air conditioner - Wiring diagram [MTC-34](#)
Map lamp [LT-109](#)
Mass air flow sensor (MAFS) [EC-187](#), [EC-196](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-670](#)
MIL/DL - Wiring diagram [EC-670](#)
MIRROR - Wiring diagram [GW-90](#)
Misfire [EC-342](#)
Mode door control linkage adjustment [MTC-44](#)
Mode door motor [ATC-58](#), [ATC-61](#), [ATC-148](#), [MTC-43](#),
[MTC-92](#)
Model variation [GI-48](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry
system [BL-39](#)

N

NATS - Wiring diagram [BL-97](#)
NAVI - Wiring diagram [AV-83](#)
NAVI Control Unit [AV-80](#), [AV-151](#)
Neutral-4LO switch [TF-64](#)
NONDTC - Wiring diagram [AT-175](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-11](#)
NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-12](#), [TF-192](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-4](#)
NVIS (Nissan vehicle immobilizer system) [BL-94](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-173](#)
O2H2B2 - Wiring diagram [EC-175](#)
O2S2B1 - Wiring diagram ... [EC-268](#), [EC-280](#), [EC-294](#)
O2S2B2 - Wiring diagram ... [EC-270](#), [EC-282](#), [EC-296](#)
Oil cooler (engine) [LU-11](#)
Oil filter [LU-10](#)
Oil filter (Transfer) [TF-143](#)
Oil pan (engine) [EM-27](#)
Oil pressure (engine) [LU-8](#)
Oil pump (A/T) [AT-276](#)
Oil pump (engine) [LU-13](#)
Oil pump regulator valve (engine) [LU-13](#)

Oil seal replacement (engine) [EM-89](#)
Oil seal replacement (front of final drive) [FFD-9](#), [RFD-10](#)
Oil seal replacement (side of final drive) [FFD-11](#), [RFD-12](#)
On board diagnostic system [EC-47](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
Overheat [EC-488](#)
Oversize piston [EM-127](#)

P

P/SCKT - Wiring diagram [WW-42](#)
Pantograph jack [GI-42](#)
Park/Neutral position switch [EC-480](#)
Park/neutral position switch (A/T) [AT-105](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-44](#)
Personal lamp [LT-109](#)
PGC/V - Wiring diagram [EC-392](#), [EC-400](#)
PHSB1 - Wiring diagram [EC-364](#)
PHSB2 - Wiring diagram [EC-366](#)
Pilot bushing replacement - See Pilot converter ... [EM-108](#)
Piston assembly [EM-118](#)
Piston pin inspection [EM-123](#)
Piston ring inspection [EM-124](#)
Piston to bore clearance [EM-127](#)
Planetary carrier (Transfer) .. [TF-149](#), [TF-176](#), [TF-278](#),
[TF-280](#), [TF-286](#), [TF-295](#)
PNP/SW - Wiring diagram [EC-482](#), [AT-106](#)
POS - Wiring diagram [EC-357](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power door mirror [GW-90](#)
Power seat [SE-77](#)
Power steering fluid level [MA-33](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-20](#)
Power steering pressure (PSP) sensor [EC-463](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-423](#), [EC-429](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-149](#)
Pressure switch 1 [AT-145](#), [AT-159](#)
Pressure switch 2 [AT-157](#)
Pressure switch 3 [AT-141](#), [AT-161](#)
Pressure switch 5 [AT-149](#), [AT-163](#)
Pressure switch 6 [AT-153](#), [AT-165](#)
Pressure test (A/T) [AT-53](#)
Propeller shaft [PR-4](#), [PR-9](#)
Propeller shaft inspection [MA-27](#)
Propeller shaft on vehicle service [PR-9](#)
Propeller shaft vibration [PR-4](#), [PR-9](#)
PS/SEN - Wiring diagram [EC-464](#)

ALPHABETICAL INDEX

R

Radiator	CO-14
Radio - See Audio	AV-6
Rear axle	RAX-5
Rear bumper	EI-15
Rear case (Transfer)	TF-148 , TF-181 , TF-278 , TF-280 , TF-286
Rear combination lamp removal and installation	LT-98
Rear door	BL-84 , GW-65
Rear seat	SE-95
Rear seat belt	SB-6
Rear suspension	RSU-5
Rear washer	WW-28
Rear window defogger	GW-74
Rear wiper	WW-28
Refrigerant connection precaution	ATC-6 , MTC-5
Refrigerant discharging evacuating charging	ATC-158 , MTC-99
Refrigerant general precaution	ATC-6 , MTC-5
Refrigerant lines	ATC-158 , ATC-166 , ATC-167 , MTC-99 , MTC-106 , MTC-107
Refrigerant pressure sensor	EC-656 , ATC-169 , MTC-107
Relay box	PG-87
Remote keyless entry system	BL-39
Removal and installation (A/T)	AT-240 , AT-243
Removal and installation (Transfer)	TF-145 , TF-277
Revolution sensor (A/T)	AT-111
Road wheel size	GI-51
Rocker cover	EM-41
Room lamp	LT-108
Room lamp - See Interior lamp	LT-108
ROOM/L - Wiring diagram	LT-114
RP/SEN - Wiring diagram	EC-657

S

SAE J1979 - Service \$01 - 09	EC-47
SEAT - Wiring diagram	SE-77 , SE-78
Seat belt inspection	SB-10 , MA-35
Seat belt pre-tensioner	SRS-50
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-84
Seat, rear	SE-95
Self-diagnosis (Transfer)	TF-52 , TF-217
SEN/PW - Wiring diagram	EC-476
SHIFT - Wiring diagram	AT-218
Shift control (Transfer)	TF-149 , TF-176 , TF-278 , TF-280 , TF-286 , TF-301
Shift lock system	AT-217
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-13
Side air bag (satellite) sensor	SRS-49
Side curtain air bag	SRS-46
Side trim	EI-28
SMJ (super multiple junction)	PG-83
Spare tire size	GI-51

Spark plug replacement	EM-33 , MA-19
Specification value	EC-135
Speedometer	DI-4
Spiral cable	SRS-40
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-13
SRS Trouble diagnoses	SRS-9
Stabilizer bar (front)	FSU-12
Stabilizer bar (rear)	RSU-20
Stall test (A/T)	AT-52
Standardized relay	PG-81
START - Wiring diagram	SC-11
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-32
Steering linkage	PS-15
Steering wheel and column	PS-8
Step lamp	LT-109
Stop lamp	LT-78
Stop lamp switch	EC-555
STOP/L - Wiring diagram	LT-79
Strut (front)	FSU-10
STSIG - Wiring diagram	AT-101
Sub-oil pump (Transfer)	TF-167
Sun gear (Transfer)	TF-149 , TF-176 , TF-278 , TF-280 , TF-286
Sun roof, electric	RF-10
Sunload sensor	ATC-127
Sunroof	RF-23
Supplemental Restraint System	SRS-5
Symbols and abbreviations	GI-10 , GI-22
Symptom matrix chart	EC-91
System readiness test (SRT) code	EC-53

T

T/TOW - Wiring diagram	LT-103
Tachometer	DI-4
Tail lamp	LT-83
TAIL/L - Wiring diagram	LT-86
TCM circuit diagram	AT-51
TCM inspection table	AT-85
TCS - Wiring diagram	BRC-17 , BRC-79
TCS (traction control system)	BRC-8 , BRC-69
TCS component parts and connector location	BRC-15 , BRC-77
TCS wheel sensors	BRC-15 , BRC-77
Theft warning system - See Vehicle security (Theft warning) system	BL-64
Thermometer	DI-24
Thermostat	CO-24
Three way catalyst	EM-22
Three way catalyst function (Bank 1)	EC-371
Three way catalyst function (Bank 2)	EC-371
Three way catalyst precautions	GI-5
Throttle control motor	EC-572
Throttle control motor relay	EC-560
Throttle position sensor (TPS)	EC-213 , EC-335 , EC-

ALPHABETICAL INDEX

[498](#), [EC-500](#), [EC-592](#)

Tie-rod [PS-15](#)
 Timing chain [EM-55](#)
 Tire rotation [MA-31](#)
 Tire size [GI-51](#)
 Torque converter installation [AT-242](#), [AT-245](#)
 Torque convertor clutch solenoid valve ... [AT-118](#), [AT-120](#)
 Towing point [GI-45](#)
 TPS1 - Wiring diagram [EC-337](#)
 TPS2 - Wiring diagram [EC-215](#)
 TPS3 - Wiring diagram [EC-594](#)
 Traction control system - Wiring diagram [BRC-17](#), [BRC-79](#)
 Transfer control device [TF-78](#), [TF-82](#), [TF-138](#), [TF-244](#), [TF-273](#)
 Transfer control unit inspection table [TF-37](#), [TF-211](#)
 Transfer dropping resistor [TF-91](#)
 Transfer fluid temperature sensor [TF-105](#), [TF-167](#)
 Transfer motor [TF-103](#), [TF-142](#)
 Transfer motor relay [TF-103](#)
 Transfer oil replacement [MA-26](#)
 Transfer serial number [GI-50](#)
 Transmission serial number [GI-50](#)
 Tread-FR&RR (Dimensions) [GI-51](#)
 Trim [EI-28](#)
 TRNSCV - Wiring diagram [BL-113](#)
 Trouble diagnoses [GI-11](#)
 Turbine revolution sensor [AT-109](#)
 TURN - Wiring diagram [LT-63](#)
 Turn signal lamp [LT-60](#)
 Two trip detection logic [EC-47](#)
 Two-pole lift [GI-43](#)

V

Vacuum hose (brake system) [BR-21](#)
 Vacuum hose drawing (Engine control) [EC-102](#)
 Valve clearance [EM-84](#)
 Valve guide [EM-99](#), [EM-100](#)
 Valve lifter [EM-79](#)
 Valve seat [EM-101](#)
 Valve spring [EM-102](#), [EM-103](#)
 Vanity mirror lamp [LT-108](#)
 Variable induction air control system (VIAS) .. [EC-550](#), [EC-661](#)
 VDC (vehicle dynamics control) [BRC-8](#), [BRC-69](#)
 VDC -Wiring diagram [BRC-17](#), [BRC-79](#)
 Vehicle identification number [GI-49](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-45](#)
 Vehicle security (theft warning) system [BL-64](#)
 Vehicle speed sensor (VSS) [EC-457](#), [EC-549](#)
 VEHSEC - Wiring diagram [BL-68](#)
 VENT/V - Wiring diagram [EC-407](#), [EC-414](#)
 VIAS - Wiring diagram [EC-663](#)
 VIAS/V - Wiring diagram [EC-551](#)
 VIN registration [EC-76](#)
 Viscosity number (SAE) [MA-12](#)
 VSS A/T - Wiring diagram [AT-113](#)

W

W/ANT - Wiring diagram [AV-67](#)
 Wait detection switch [TF-71](#), [TF-237](#)
 WARN - Wiring diagram [DI-31](#)
 Warning chime [DI-41](#)
 Warning lamps [DI-30](#)
 Washer, front [WW-4](#)
 Washer, rear [WW-28](#)
 Water pump [CO-19](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-6](#)
 Wheel alignment (rear) [RSU-6](#)
 Wheel balance [MA-29](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel size [GI-51](#)
 Wheelbase (Dimensions) [GI-51](#)
 Width (Dimensions) [GI-51](#)
 WINDOW - Wiring diagram [GW-21](#)
 Window antenna [AV-66](#)
 Window, door [GW-61](#), [GW-65](#)
 Windshield [GW-11](#)
 WIP/R - Wiring diagram [WW-30](#)
 WIPER - Wiring diagram [WW-8](#)
 Wiper, front [WW-4](#)
 Wiper, rear [WW-28](#)
 Wiring Diagram (Cell code) list [PG-70](#)
 Wiring diagrams [GI-15](#)
 WT-T/WARN - Wiring diagram [WT-11](#)