

PWC

SECTION

POWER WINDOW CONTROL SYSTEM

CONTENTS

LH FRONT ONLY AUTO DOWN	WIRING DIAGRAM	17
PRECAUTION	POWER WINDOW SYSTEM	17
PRECAUTIONS	Wiring Diagram - With Left Front Only Auto Down....	17
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	BASIC INSPECTION	26
Precaution for Work	DIAGNOSIS AND REPAIR WORKFLOW	26
PREPARATION	Work Flow	26
PREPARATION	DTC/CIRCUIT DIAGNOSIS	28
Special Service Tool	POWER SUPPLY AND GROUND CIRCUIT	28
SYSTEM DESCRIPTION	BCM	28
COMPONENT PARTS	BCM : Diagnosis Procedure	28
Component Parts Location	POWER WINDOW MAIN SWITCH	28
Component Description	POWER WINDOW MAIN SWITCH : Description	28
SYSTEM	POWER WINDOW MAIN SWITCH : Component Function Check	29
System Diagram	POWER WINDOW MAIN SWITCH : Diagnosis Procedure	29
System Description	POWER WINDOW MAIN SWITCH : Component Inspection	32
Fail-safe	FRONT POWER WINDOW SWITCH	33
DIAGNOSIS SYSTEM (BCM)	FRONT POWER WINDOW SWITCH : Description	33
COMMON ITEM	FRONT POWER WINDOW SWITCH : Component Function Check	33
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	FRONT POWER WINDOW SWITCH : Diagnosis Procedure	33
RETAINED PWR	FRONT POWER WINDOW SWITCH : Component Inspection	35
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)	REAR POWER WINDOW SWITCH	35
ECU DIAGNOSIS INFORMATION	REAR POWER WINDOW SWITCH : Description	35
BCM (BODY CONTROL MODULE)	REAR POWER WINDOW SWITCH : Component Function Check	35
List of ECU Reference	REAR POWER WINDOW SWITCH : Diagnosis Procedure	35
POWER WINDOW MAIN SWITCH		
Reference Value		

REAR POWER WINDOW SWITCH : Component Inspection	37	WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	53
POWER WINDOW MOTOR	38	WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED	53
DRIVER SIDE	38	WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED : Diagnosis Procedure	53
DRIVER SIDE : Description	38	WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED	53
DRIVER SIDE : Component Function Check	38	WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED : Diagnosis Procedure	53
DRIVER SIDE : Diagnosis Procedure	38	REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE	54
DRIVER SIDE : Component Inspection	39	WHEN POWER WINDOW MAIN SWITCH IS OPERATED	54
PASSENGER SIDE	39	WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	54
PASSENGER SIDE : Description	39	WHEN REAR POWER WINDOW SWITCH LH IS OPERATED	54
PASSENGER SIDE : Component Function Check	39	WHEN REAR POWER WINDOW SWITCH LH IS OPERATED : Diagnosis Procedure	54
PASSENGER SIDE : Diagnosis Procedure	39	WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED	54
PASSENGER SIDE : Component Inspection	40	WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED : Diagnosis Procedure	54
REAR LH	41	REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE	55
REAR LH : Description	41	WHEN POWER WINDOW MAIN SWITCH IS OPERATED	55
REAR LH : Component Function Check	41	WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	55
REAR LH : Diagnosis Procedure	41	WHEN REAR POWER WINDOW SWITCH RH IS OPERATED	55
REAR LH : Component Inspection	42	WHEN REAR POWER WINDOW SWITCH RH IS OPERATED : Diagnosis Procedure	55
REAR RH	42	WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED	55
REAR RH : Description	42	WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED : Diagnosis Procedure	55
REAR RH : Component Function Check	42	AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY	56
REAR RH : Diagnosis Procedure	42	DRIVER SIDE	56
REAR RH : Component Inspection	43	DRIVER SIDE : Diagnosis Procedure	56
ENCODER	45		
DRIVER SIDE	45		
DRIVER SIDE : Description	45		
DRIVER SIDE : Component Function Check	45		
DRIVER SIDE : Diagnosis Procedure	45		
DOOR SWITCH	48		
Component Function Check	48		
Diagnosis Procedure	48		
Component Inspection	49		
POWER WINDOW LOCK SWITCH	50		
Description	50		
Component Function Check	50		
SYMPTOM DIAGNOSIS	51		
POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH	51		
Diagnosis Procedure	51		
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	52		
Diagnosis Procedure	52		
FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE	53		
WHEN POWER WINDOW MAIN SWITCH IS OPERATED	53		

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY	57	Component Parts Location	67	
Diagnosis Procedure	57	Component Description	68	A
DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	58	SYSTEM	69	
Diagnosis Procedure	58	System Diagram	69	B
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	59	System Description	69	
Diagnosis Procedure	59	Fail-safe	70	C
POWER WINDOW LOCK SWITCH DOES NOT FUNCTION	60	DIAGNOSIS SYSTEM (BCM)	72	
Diagnosis Procedure	60	COMMON ITEM	72	D
POWER WINDOW SWITCH DOES NOT ILLUMINATE	61	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	72	
DRIVER SIDE	61	RETAINED PWR	73	E
DRIVER SIDE : Diagnosis Procedure	61	RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)	73	
PASSENGER SIDE	61	ECU DIAGNOSIS INFORMATION	74	F
PASSENGER SIDE : Diagnosis Procedure	61	BCM (BODY CONTROL MODULE)	74	
REAR LH	61	List of ECU Reference	74	G
REAR LH : Diagnosis Procedure	61	POWER WINDOW MAIN SWITCH	75	
REAR RH	61	Reference Value	75	H
REAR RH : Diagnosis Procedure	61	Fail Safe	76	
REMOVAL AND INSTALLATION	62	FRONT POWER WINDOW SWITCH	78	I
MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH	62	Reference Value	78	
Removal and Installation	62	Fail Safe	79	J
POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH	63	WIRING DIAGRAM	80	
Removal and Installation	63	POWER WINDOW SYSTEM	80	
REAR POWER WINDOW SWITCH	64	Wiring Diagram - With Left & Right Front Auto Up/Down	80	PWC
Removal and Installation	64	BASIC INSPECTION	89	
LH & RH FRONT AUTO UP/DOWN		DIAGNOSIS AND REPAIR WORKFLOW	89	L
PRECAUTION	65	Work Flow	89	
PRECAUTIONS	65	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	91	M
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	65	Description	91	
Precaution for Work	65	Work Procedure	91	N
PREPARATION	66	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	92	
PREPARATION	66	Description	92	O
Special Service Tool	66	Work Procedure	92	
SYSTEM DESCRIPTION	67	SYSTEM INITIALIZATION	93	P
COMPONENT PARTS	67	Description	93	
		Work Procedure	93	
		CHECK ANTI-PINCH FUNCTION	94	
		Description	94	
		Work Procedure	94	
		DTC/CIRCUIT DIAGNOSIS	95	
		POWER SUPPLY AND GROUND CIRCUIT	95	

BCM	95	REAR RH : Component Inspection	110
BCM : Diagnosis Procedure	95	ENCODER	111
POWER WINDOW MAIN SWITCH	95	DRIVER SIDE	111
POWER WINDOW MAIN SWITCH : Description ...	95	DRIVER SIDE : Description	111
POWER WINDOW MAIN SWITCH : Component		DRIVER SIDE : Component Function Check	111
Function Check	96	DRIVER SIDE : Diagnosis Procedure	111
POWER WINDOW MAIN SWITCH : Diagnosis		PASSENGER SIDE	113
Procedure	96	PASSENGER SIDE : Description	113
POWER WINDOW MAIN SWITCH : Component		PASSENGER SIDE : Component Function Check	
Inspection	98	. 113	
POWER WINDOW MAIN SWITCH : Special Re-		PASSENGER SIDE : Diagnosis Procedure	113
pair Requirement	99	DOOR SWITCH	116
FRONT POWER WINDOW SWITCH	99	Component Function Check	116
FRONT POWER WINDOW SWITCH : Descrip-		Diagnosis Procedure	116
tion	99	Component Inspection	117
FRONT POWER WINDOW SWITCH : Compo-		POWER WINDOW LOCK SWITCH	118
nent Function Check	99	Description	118
FRONT POWER WINDOW SWITCH : Diagnosis		Component Function Check	118
Procedure	100	Special Repair Requirement	118
FRONT POWER WINDOW SWITCH : Special		POWER WINDOW SERIAL LINK	119
Repair Requirement	101	POWER WINDOW MAIN SWITCH	119
REAR POWER WINDOW SWITCH	101	POWER WINDOW MAIN SWITCH : Description .	119
REAR POWER WINDOW SWITCH : Description..	101	POWER WINDOW MAIN SWITCH : Component	
REAR POWER WINDOW SWITCH : Component		Function Check	119
Function Check	101	POWER WINDOW MAIN SWITCH : Diagnosis	
REAR POWER WINDOW SWITCH : Diagnosis		Procedure	119
Procedure	101	FRONT POWER WINDOW SWITCH	120
REAR POWER WINDOW SWITCH : Component		FRONT POWER WINDOW SWITCH : Descrip-	
Inspection	103	tion	120
POWER WINDOW MOTOR	104	FRONT POWER WINDOW SWITCH : Compo-	
DRIVER SIDE	104	nent Function Check	120
DRIVER SIDE : Description	104	FRONT POWER WINDOW SWITCH : Diagnosis	
DRIVER SIDE : Component Function Check	104	Procedure	121
DRIVER SIDE : Diagnosis Procedure	104	SYMPTOM DIAGNOSIS	123
DRIVER SIDE : Component Inspection	105	POWER WINDOWS DO NOT OPERATE	
DRIVER SIDE : Special Repair Requirement	105	WITH POWER WINDOW MAIN SWITCH	123
PASSENGER SIDE	105	Diagnosis Procedure	123
PASSENGER SIDE : Description	105	DRIVER SIDE POWER WINDOW ALONE	
PASSENGER SIDE : Component Function Check		DOES NOT OPERATE	124
.. 106		Diagnosis Procedure	124
PASSENGER SIDE : Diagnosis Procedure	106	FRONT PASSENGER SIDE POWER WIN-	
PASSENGER SIDE : Component Inspection	107	DOW ALONE DOES NOT OPERATE	125
PASSENGER SIDE : Special Repair Requirement		Diagnosis Procedure	125
.. 107		REAR LH SIDE POWER WINDOW ALONE	
REAR LH	107	DOES NOT OPERATE	126
REAR LH : Description	107	Diagnosis Procedure	126
REAR LH : Component Function Check	107	REAR RH SIDE POWER WINDOW ALONE	
REAR LH : Diagnosis Procedure	108	DOES NOT OPERATE	127
REAR LH : Component Inspection	108		
REAR RH	109		
REAR RH : Description	109		
REAR RH : Component Function Check	109		
REAR RH : Diagnosis Procedure	109		

Diagnosis Procedure	127	
ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (DRIVER SIDE)	128	
Diagnosis Procedure	128	
ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (PASSENGER SIDE)	129	
Diagnosis Procedure	129	
AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)	130	
Diagnosis Procedure	130	
AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE)	131	
Diagnosis Procedure	131	
POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY	132	
Diagnosis Procedure	132	
DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	133	
Diagnosis Procedure	133	
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	134	
Diagnosis Procedure	134	
POWER WINDOW LOCK SWITCH DOES NOT FUNCTION	135	A
Diagnosis Procedure	135	
POWER WINDOW SWITCH DOES NOT ILLUMINATE	136	B
DRIVER SIDE	136	
DRIVER SIDE : Diagnosis Procedure	136	C
PASSENGER SIDE	136	
PASSENGER SIDE : Diagnosis Procedure	136	D
REAR LH	136	
REAR LH : Diagnosis Procedure	136	
REAR RH	136	E
REAR RH : Diagnosis Procedure	136	
REMOVAL AND INSTALLATION	137	F
MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH	137	
Removal and Installation	137	G
POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH	138	H
Removal and Installation	138	
REAR POWER WINDOW SWITCH	139	I
Removal and Installation	139	
		J

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011153908

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:0000000011153909

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

[LH FRONT ONLY AUTO DOWN]

PREPARATION


PREPARATION

Special Service Tool

INFOID:0000000011153910

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim tool set	Removing trim components

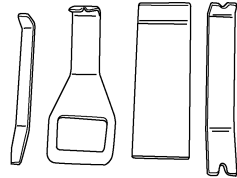

AWJIA0483ZZ

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[LH FRONT ONLY AUTO DOWN]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000011153911

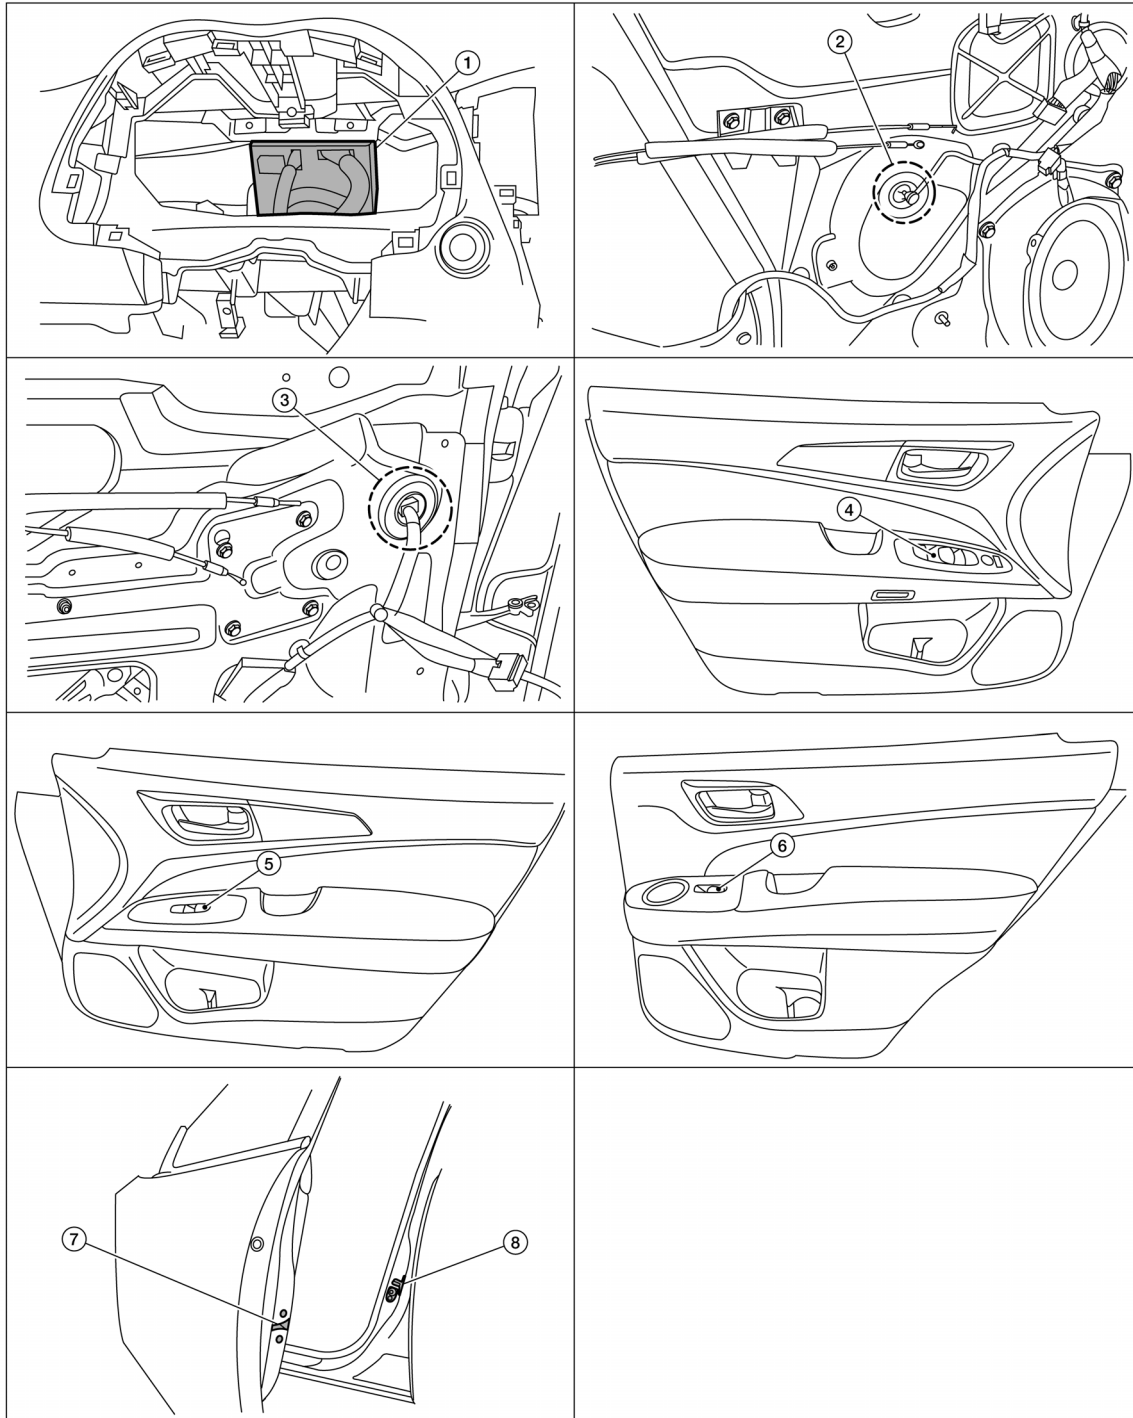

AWKIA2058ZZ

1. BCM (view with the combination meter removed)

2. Front power window motor LH (RH similar) (view with front door finisher removed)

3. Rear power window motor LH (RH similar) (view with rear door finisher removed)

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[LH FRONT ONLY AUTO DOWN]

- | | | |
|--|--|---|
| 4. Main power window and door lock/unlock switch | 5. Power window and door lock/unlock switch RH | 6. Rear power window switch LH (RH similar) |
| 7. Front door lock assembly LH (key cylinder switch) | 8. Front door switch LH (RH similar) | |

Component Description

INFOID:0000000011153912


Component	Function
BCM	- Supplies power to the window switches. - Controls retained power.
Main power window and door lock/unlock switch	Directly controls all power window motors.
Power window and door lock/unlock switch RH	Controls power window motor of passenger door.
Rear power window switch	Controls right and left power window motors for the rear doors.
Power window motor	- Integrates the ENCODER and WINDOW MOTOR. - Starts operating with signals from each power window switch. - Transmits power window motor rotation as a pulse signal to power window switch.
Front door lock assembly (door key cylinder switch)	Transmits operation condition of door key cylinder switch to power window main switch.
Front door switch LH/RH	Detects door open/close condition and transmits it to the BCM.

PWC

SYSTEM

System Diagram

INFOID:0000000011153913

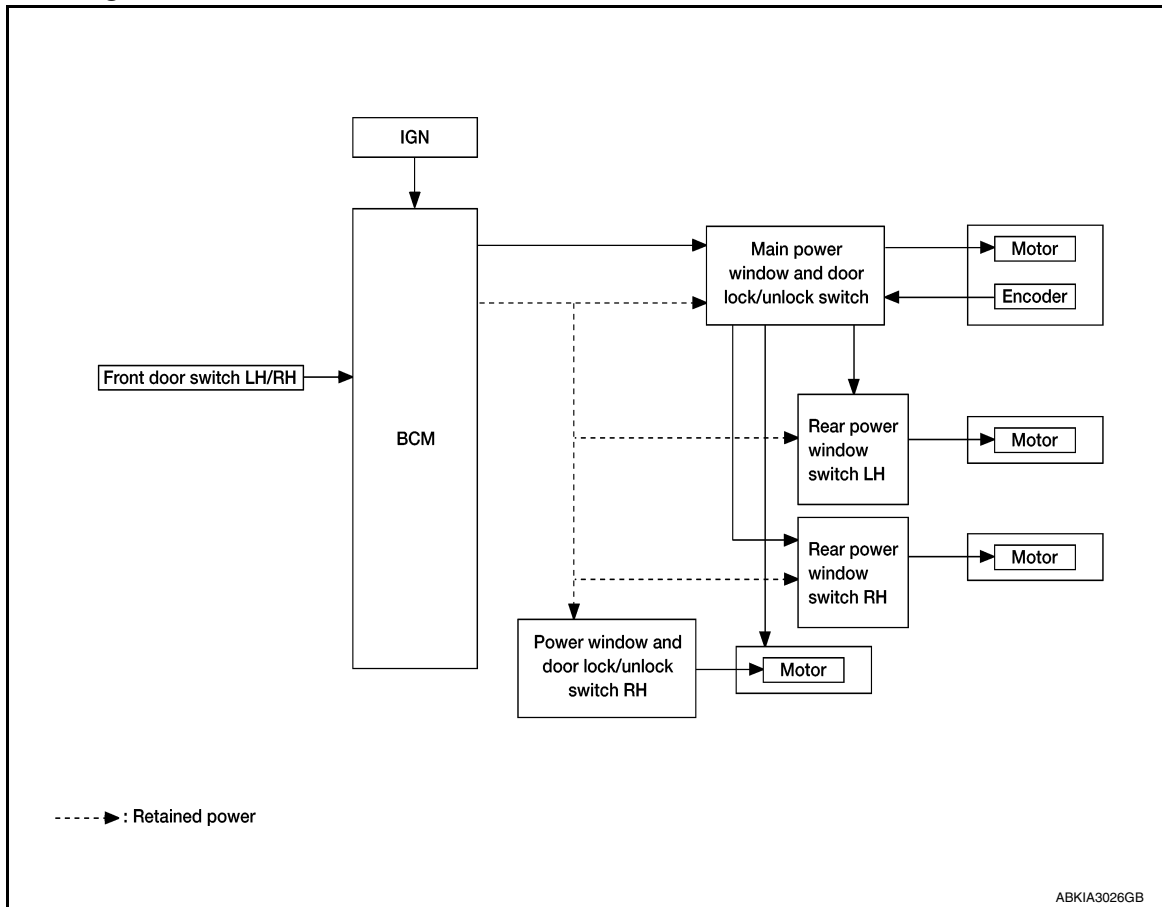

System Description

INFOID:0000000011153914

POWER WINDOW OPERATION

- Power window system is activated by the power window switch when the ignition switch is in the ON position or during the retained power operation after ignition switch turns OFF.
- Power window main switch can open/close door glass.
- Front and rear power window switch can open/close the corresponding door glass.
- Power window lock switch can lock all power windows other than driver seat.
- All power windows open when pressing Intelligent Key unlock button for 3 seconds.
- Power window serial link transmits the signals from power window main switch to each power window switch.

POWER WINDOW AUTO-OPERATION

- AUTO-DOWN operation can be performed when the front power window motor LH turns to AUTO.
- Encoder continues detecting the movement of power window motor and output the encoder pulse signal to power window switch while power window motor is operating.
- Power window motor is operable in case encoder is malfunctioning.
- AUTO-DOWN function does not operate if encoder is malfunctioning.

RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables power window system to operate during the 45 seconds even when ignition switch is turned OFF.

Retained Power Function Cancel Conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer time passes. (45 seconds)

POWER WINDOW LOCK FUNCTION

Ground circuit inside power window main switch shuts off when power window lock switch is ON. This inhibits power window switch operation except with the power window main switch.

DOOR KEY CYLINDER SWITCH OPERATION

Hold the door key cylinder to the LOCK or UNLOCK direction for 1 second or more to OPEN or CLOSE all power windows when ignition switch is OFF. In addition, it stops when key position is moved to N (NEUTRAL) when operating.

Operation Condition

- Ignition switch OFF.
- Hold door key cylinder to LOCK position for 1 second or more to perform CLOSE operation of the door glass.
- Hold door key cylinder to UNLOCK position for 1 second or more to perform OPEN operation of the door glass.

KEYLESS POWER WINDOW DOWN FUNCTION

All power windows open when the unlock button on Intelligent Key is activated and pressed for more than 3 seconds with the ignition switch OFF. The windows keep opening if the unlock button is continuously pressed. The power window opening stops when the following operations are performed.

- When the unlock button is pressed for more than 15 seconds.
- When the ignition switch is turned ON while the power window opening is operated.
- When the unlock button is released.

While retained power operation activate, keyless power window down function cannot be operated.

Fail-safe

INFOID:0000000011153915

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when an error beyond the regulation value is detected between the fully closed position and the actual position of the glass.

Malfunction	Malfunction condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control:

- Auto-up operation
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[LH FRONT ONLY AUTO DOWN]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011615579

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Back door open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[LH FRONT ONLY AUTO DOWN]

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Signal buffer system	SIGNAL BUFFER			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000011615580

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

PWC

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

List of ECU Reference

INFOID:0000000011153918

ECU	Reference
BCM	BCS-30, "Reference Value"
	BCS-50, "Fail Safe"
	BCS-50, "DTC Inspection Priority Chart"
	BCS-52, "DTC Index"

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >


[LH FRONT ONLY AUTO DOWN]

POWER WINDOW MAIN SWITCH

Reference Value



INFOID:0000000011153919

TERMINAL LAYOUT

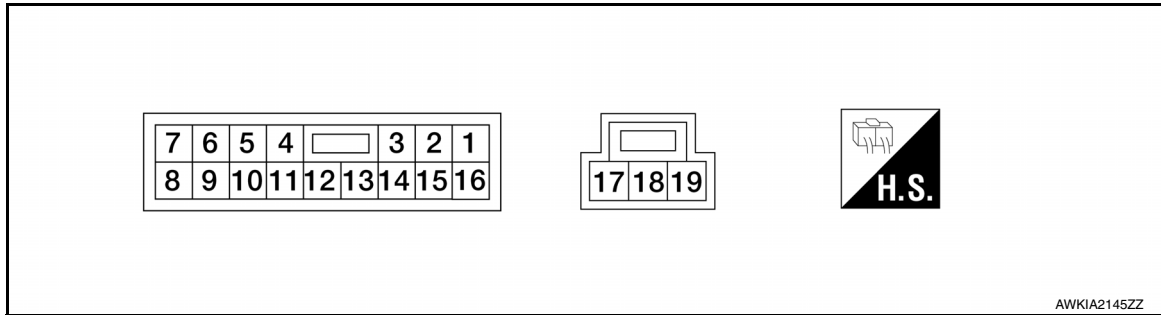

PHYSICAL VALUES

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

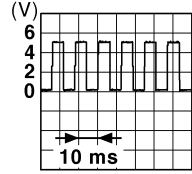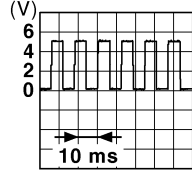Terminal No. (Wire color)		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/ Output		
1 (B)	Ground	Ground	—	—	0
2 (Y)	16	Front power window motor RH DOWN signal	Output	When front RH switch in power window main switch is operated DOWN.	Battery voltage
4 (SB)	12	Encoder pulse signal 2	Input	When power window mo- tor operates.	 JMK1A0070GB
5 (Y)	12	Encoder pulse signal 1	Input	When power window mo- tor operates.	 JMK1A0070GB
6 (L)	Ground	Rear power window motor RH DOWN signal	Output	When rear RH switch in power window main switch is operated DOWN.	Battery voltage
7 (V)	Ground	Rear power window motor RH UP signal	Output	When rear RH switch in power window main switch is operated UP.	Battery voltage
8 (LG)	Ground	Rear power window motor LH DOWN signal	Output	When rear LH switch in power window main switch is operated DOWN.	Battery voltage

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >

[LH FRONT ONLY AUTO DOWN]

Terminal No. (Wire color)		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/ Output		
9 (SB)	Ground	Rear power window motor LH UP signal	Output	When rear LH switch in power window main switch is operated UP.	Battery voltage
10 (BR)	Ground	RAP signal	Input	IGN SW ON	Battery voltage
				Within 45 second after ig- nition switch is turned to OFF.	Battery voltage
				When driver side or pas- senger side door is opened during retained power op- eration.	0
12 (BR)	Ground	Encoder ground	—	—	0
14 (LG)	Ground	Encoder power supply	Output	When ignition switch ON or power window timer oper- ates.	10
16 (R)	2	Front power window motor RH UP signal	Output	When front RH switch in power window main switch is operated UP.	Battery voltage
17 (Y)	19	Front power window motor LH UP signal	Output	When front LH switch in power window main switch is operated UP.	Battery voltage
18 (Y)	Ground	Battery power supply	Input	—	Battery voltage
19 (L)	17	Front power window motor LH DOWN signal	Output	When front LH switch in power window main switch is operated DOWN.	Battery voltage

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]


WIRING DIAGRAM

POWER WINDOW SYSTEM

Wiring Diagram - With Left Front Only Auto Down

INFOID:0000000011153920

POWER WINDOW SYSTEM - WITH LEFT FRONT ONLY AUTO DOWN

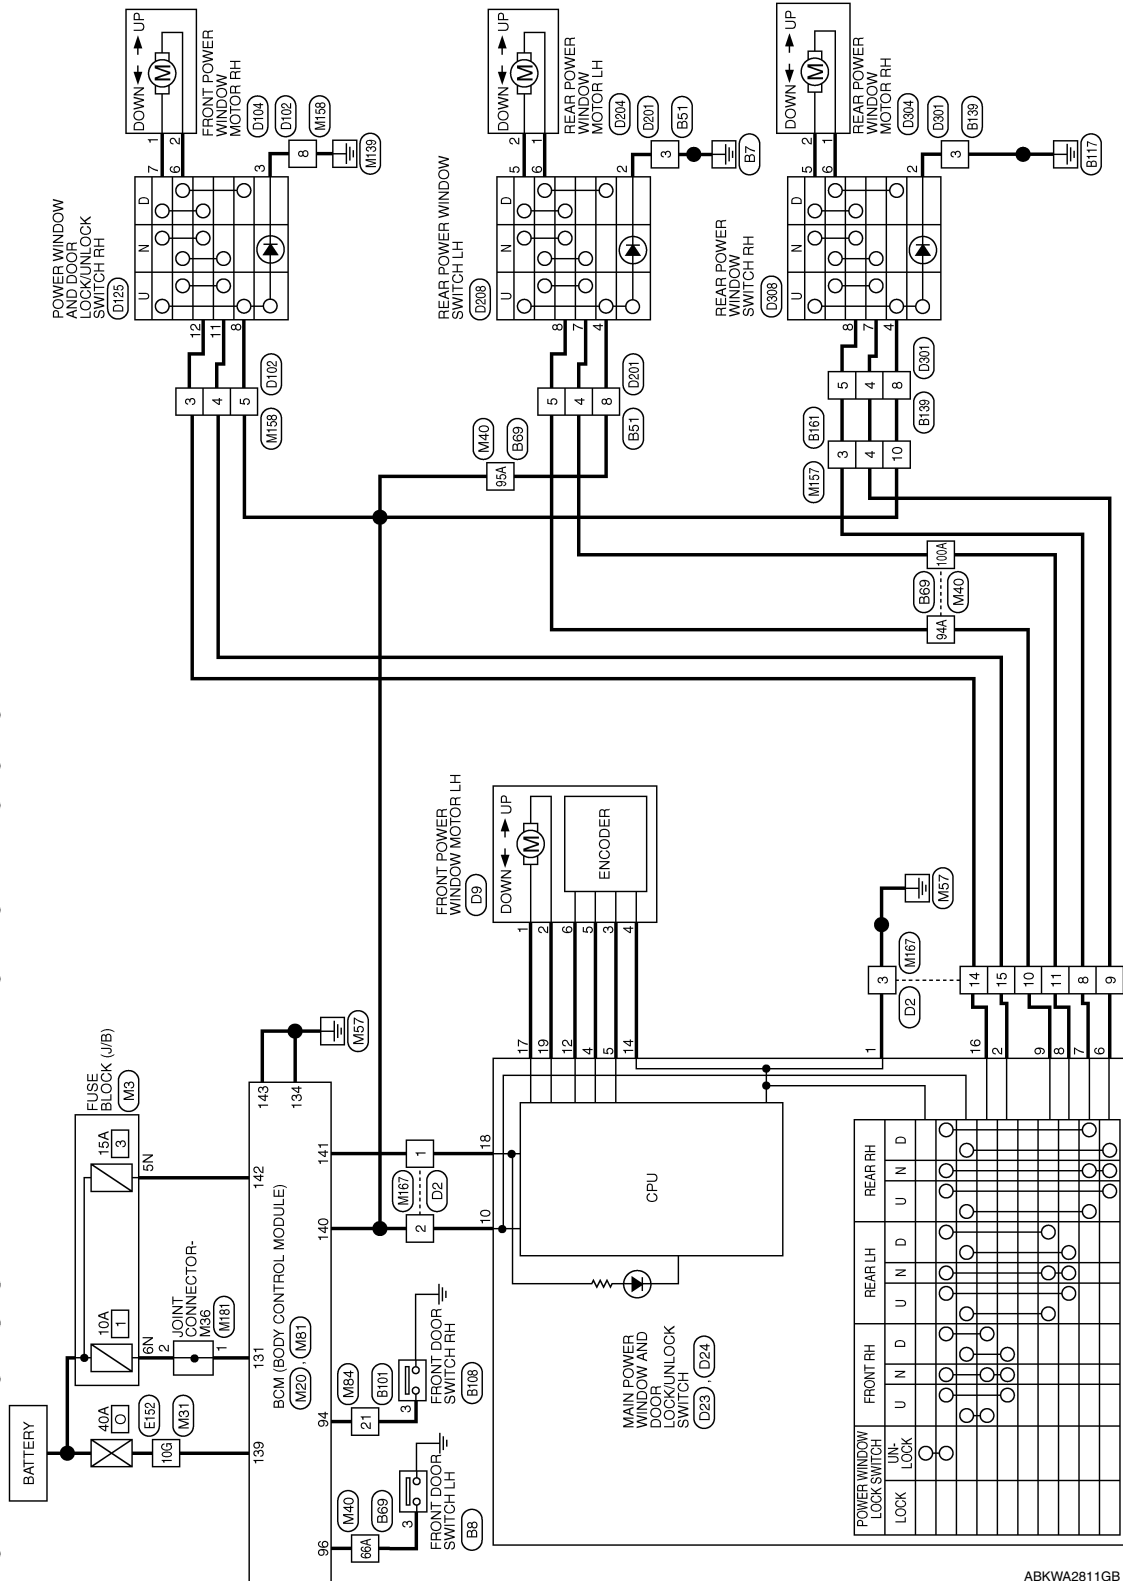

ABKWA2811GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC


POWER WINDOW SYSTEM

< WIRING DIAGRAM >


[LH FRONT ONLY AUTO DOWN]

POWER WINDOW SYSTEM CONNECTORS - WITH LEFT FRONT ONLY AUTO DOWN

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
5N	Y	—
6N	W	—

Terminal No.	Color of Wire	Signal Name
94	G	AS DOOR SW
96	BG	DR DOOR SW

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



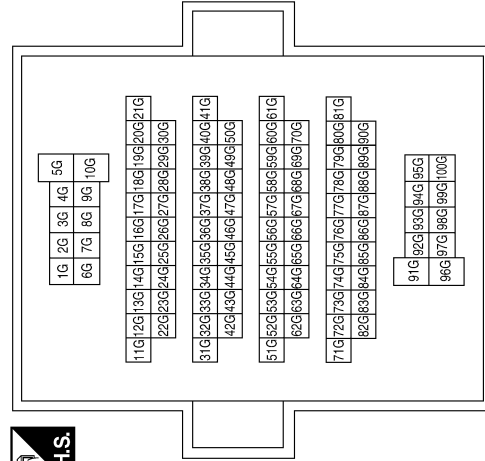


Terminal No.	Color of Wire	Signal Name
10G	W	—

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

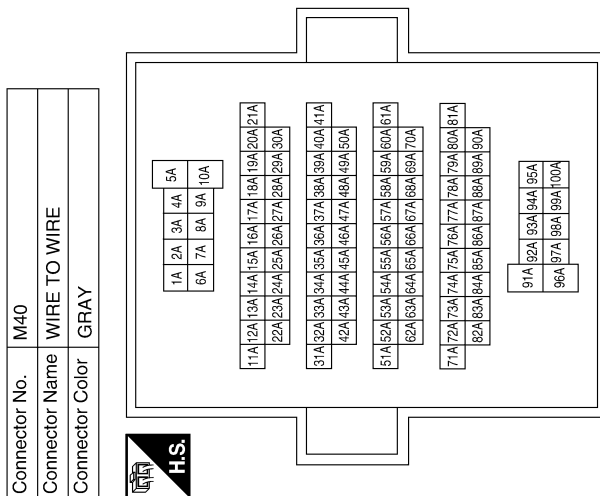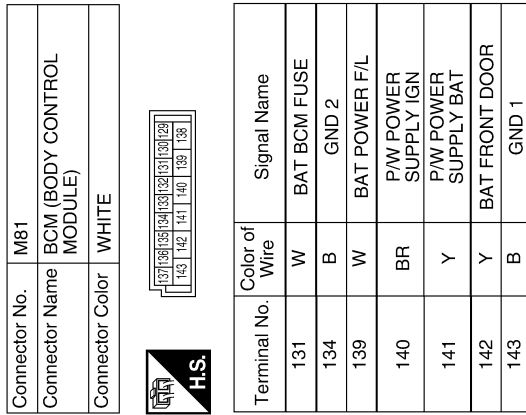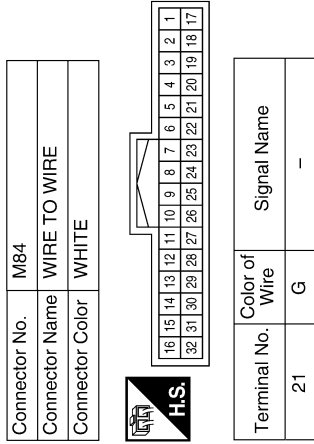

ABKIA4758GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-
3	B	-
8	V	-
9	L	-
10	SB	-
11	LG	-
14	R	-
15	Y	-

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2		3	4	
5	6		7	8	9

Terminal No.	Color of Wire	Signal Name
3	R	-
4	Y	-
5	BR	-(WITH LEFT FRONT ONLY AUTO DOWN)
8	B	-

Connector No.	M157
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	Color of Wire	Signal Name
3	V	-
4	L	-
10	BR	-

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

ABKIA4759GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

Connector No.	B51
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5	4			3	2	1
12	11	10	9	8	7	6

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
3	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

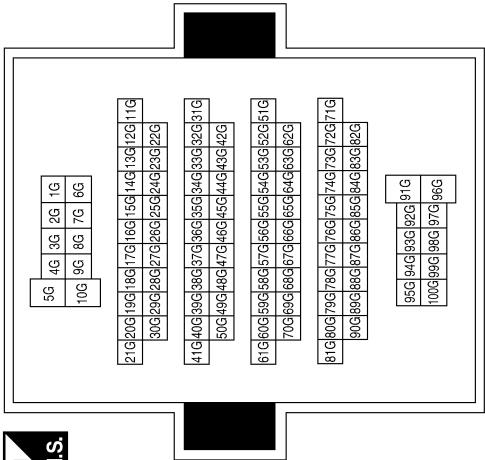


Terminal No.	Color of Wire	Signal Name
10G	P	-

PWC

POWER WINDOW SYSTEM




< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

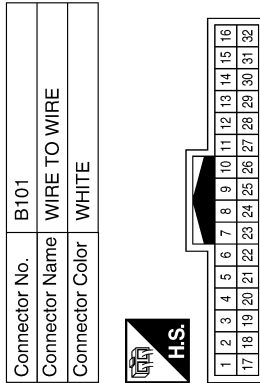

Terminal No.	Color of Wire	Signal Name
21	LG	—



Terminal No.	Color of Wire	Signal Name
66A	L	—
94A	SB	—
95A	BR	—
100A	Y	—

  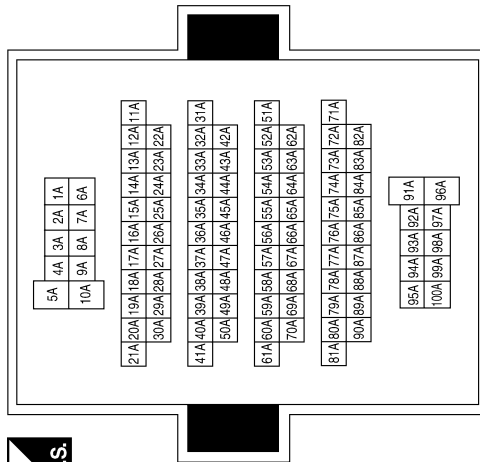

Terminal No.	Color of Wire	Signal Name
3	SB	—
4	Y	—
10	BR	—



Terminal No.	Color of Wire	Signal Name
3	B	—
4	Y	—
5	SB	—
8	BR	—

  

Terminal No.	Color of Wire	Signal Name
3	LG	—


ABKIA4761GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >


[LH FRONT ONLY AUTO DOWN]

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-
3	Y	-
4	LG	-
5	SB	-
6	BR	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-
3	B	-
8	V	-
9	L	-
10	SB	-
11	LG	-
14	R	-
15	Y	-


Connector No.	D24
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
17	Y	MOTOR DR UP
18	Y	B+
19	L	MOTOR DR DOWN

Terminal No.	Color of Wire	Signal Name
5	Y	ENCODER SIG-1 (DLP)
6	L	MOTOR RR DOWN
7	V	MOTOR RR UP
8	LG	MOTOR RL DOWN
9	SB	MOTOR RL UP
10	BR	IGN
11	-	-
12	BR	ENCODER GND
13	-	-
14	LG	ENCODER +
15	-	-
16	R	MOTOR AS UP

Connector No.	D23
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (WITH LEFT FRONT ONLY AUTO DOWN)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	B	GND
2	Y	MOTOR AS DOWN
3	-	-
4	SB	ENCODER SIG-2 (ULP)

ABKIA6404GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

Connector No.	D125
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH (WITH LEFT FRONT ONLY AUTO DOWN)
Connector Color	WHITE

1	2	3	4	5
6	7	8	9	10
11	12			



Terminal No.	Color of Wire	Signal Name
3	B	-
6	LG	-
7	V	-
8	BR	-
11	Y	-
12	SB	-

Connector No.	D104
Connector Name	FRONT POWER WINDOW MOTOR RH (WITH LEFT FRONT ONLY AUTO DOWN)
Connector Color	WHITE

1	2	3	4	5
---	---	---	---	---



Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	2	1
10	9	8	7
6	5		



Terminal No.	Color of Wire	Signal Name
3	SB	-
4	Y	-
5	BR	-
8	B	-

Connector No.	D208
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE

3	2	1
8	7	6
5	4	



Terminal No.	Color of Wire	Signal Name
2	B	-
4	BR	-
5	V	-
6	LG	-
7	Y	-
8	SB	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	WHITE

1	2	3	4	5
---	---	---	---	---



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5
6	7	8	9	10
11	12			



Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-

ABKIA6400GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH FRONT ONLY AUTO DOWN]

Connector No.	D308
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name
2	B	-
4	BR	-
5	V	-
6	LG	-
7	Y	-
8	SB	-

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	WHITE



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-

ABKIA6401GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000011153921

OVERALL SEQUENCE

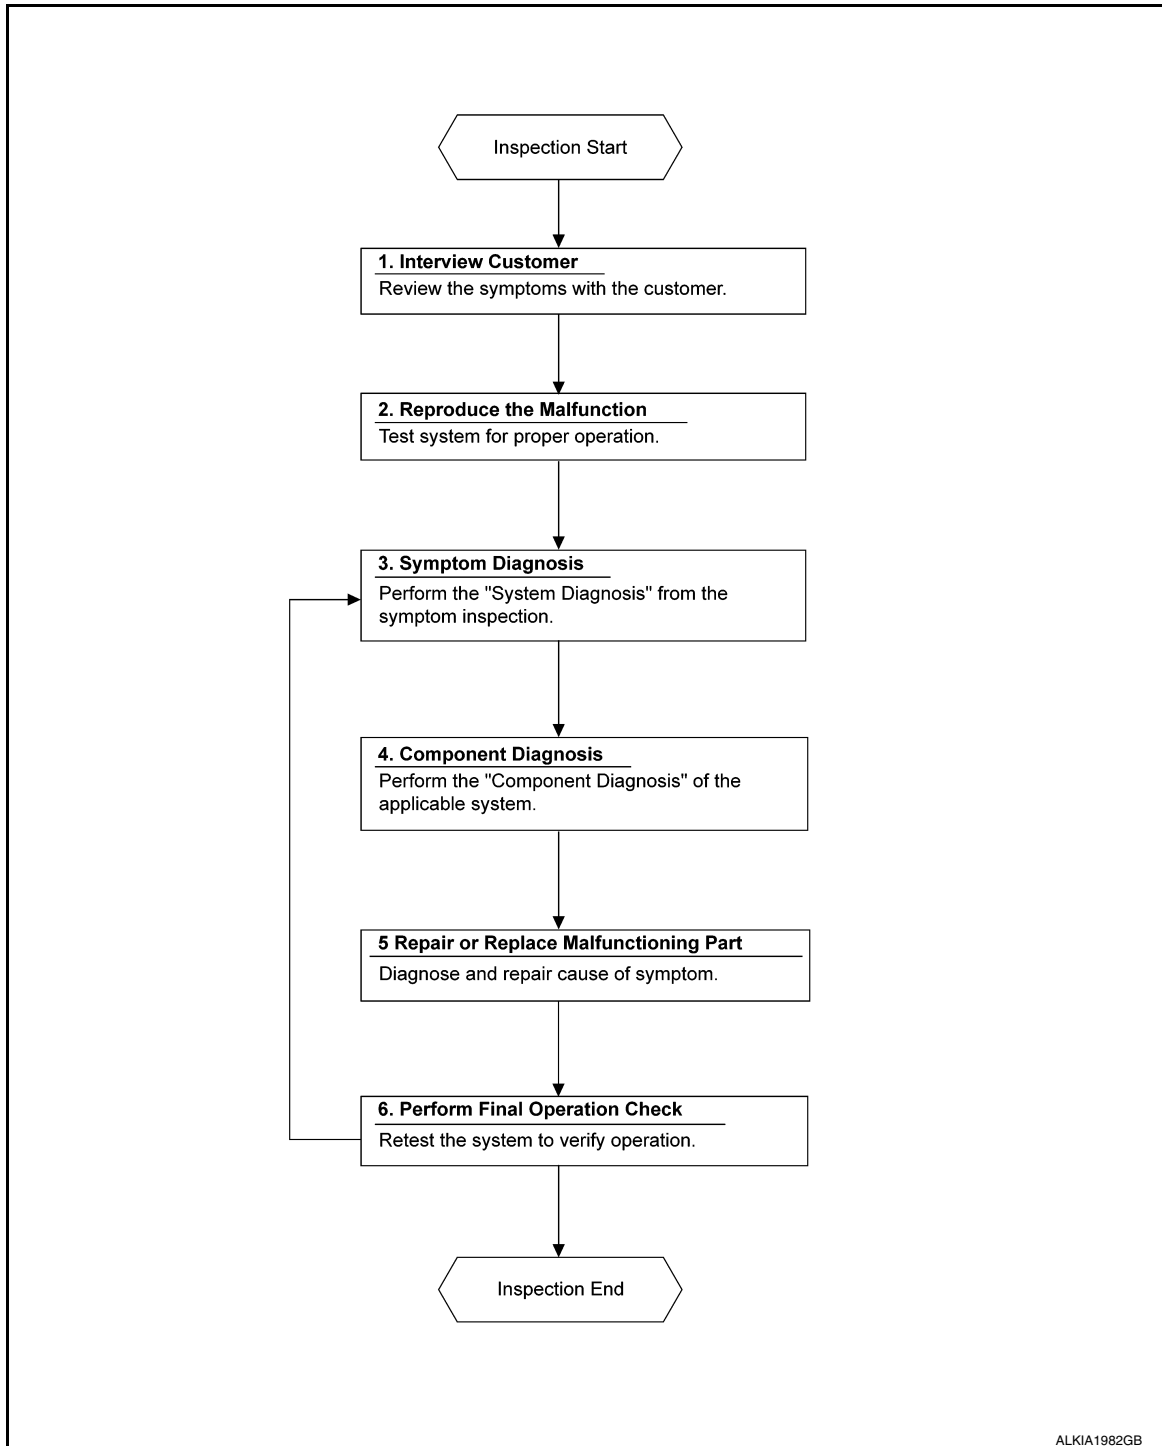

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[LH FRONT ONLY AUTO DOWN]

>> GO TO 2.

2. CONFIRM THE SYMPTOM

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH SYMPTOM DIAGNOSIS

Use Symptom diagnosis from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4. PERFORM THE COMPONENT DIAGNOSIS OF THE OF THE APPLICABLE SYSTEM

Perform the diagnosis with Component diagnosis of the applicable system.

>> GO TO 5.

5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:0000000011615581

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	O (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M81.

2. Check voltage between BCM connector M81 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M81	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M81 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M81	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Description

INFOID:0000000011153923

- BCM supplies power.
- It operates each power window motor via corresponding power window switch and makes window move up/down when main power window and door lock/unlock switch is operated.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:0000000011153924

Main Power Window And Door Lock/unlock Switch

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH FUNCTION

Check power window motor operation with main power window and door lock/unlock switch.

Is the inspection result normal?

- YES >> Main power window and door lock/unlock switch power supply and ground circuit are OK.
NO >> Refer to [PWC-29, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:0000000011153925

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Main Power Window And Door Lock/unlock Switch Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check voltage between main power window and door lock/unlock switch connectors D23, D24 and ground.

Terminal		Voltage (Approx.)
(+)	(-)	
Main power window and door lock/unlock switch	Terminal	
D23	10	Battery voltage
D24	18	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect BCM, main power window and door lock/unlock switch, power window and door lock/unlock switch RH, rear power window switch LH and rear power window switch RH.
- Check continuity between BCM connector and main power window and door lock/unlock switch connectors.

BCM connector	Terminal	Main power window and door lock/unlock switch connector	Terminal	Continuity
M81	140	D23	10	Yes
	141	D24	18	

- Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	140		No
	141		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the harness or connectors.

3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect main power window and door lock/unlock switch.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

3. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D23	1		Yes

Is the inspection result normal?

- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch LH) GO TO 5.
- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch RH) GO TO 6.
- YES >> Check main power window and door lock/unlock switch output signal (front power window switch LH) GO TO 7.
- YES >> Check main power window and door lock/unlock switch output signal (front power window switch RH) GO TO 8.
- NO >> Repair or replace the harness or connectors.

4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M81 and ground.

Terminals			Voltage (Approx.)
(+) BCM connector		(−)	
Terminal			
M81	140	Ground	Battery voltage
	141		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

5. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POWER WINDOW SWITCH LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch D23 and ground.

Terminal			Window switch position (rear LH)	Voltage (Approx.)
(+) Main power window and door lock/unlock switch connector		(-) Terminal		
D23		Ground	UP	Battery voltage
			DOWN	0
			UP	0
			DOWN	Battery voltage

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-62, "Removal and Installation"](#).

6. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POWER WINDOW SWITCH RH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch D23 and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal		Window switch position (rear RH)	Voltage (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D23	7	UP	Battery voltage
		DOWN	0
	6	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-62, "Removal and Installation"](#).

7. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (FRONT POWER WINDOW SWITCH LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch D24 and ground.

Terminal		Window switch position (front LH)	Voltage (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D24	17	UP	Battery voltage
		DOWN	0
	19	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-62, "Removal and Installation"](#).

8. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (FRONT POWER WINDOW SWITCH RH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch D23 and ground.

Terminal		Window switch position (front RH)	Voltage (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D23	16	UP	Battery voltage
		DOWN	0
	2	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-62, "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW MAIN SWITCH : Component Inspection

INFOID:0000000011153926

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

1. Check main power window and door lock/unlock switch D23.

Terminal		Main power window and door lock/unlock switch condition		Continuity
10	9	Rear LH	UP	Yes
10	7	Rear RH		
10	16	Front RH		
8	9	Rear LH	NEUTRAL	
6	7	Rear RH		
2	16	Front RH		
10	8	Rear LH	DOWN	
10	6	Rear RH		
10	2	Front RH		
1	12	-		

2. Check continuity between main power window and door lock/unlock switch D23 (power window lock switch) (Lock operation).

Terminal		Main power window and door lock/unlock switch condition		Continuity
9	1	Rear LH	UP	No
7		Rear RH		
16		Front RH		
8		Rear LH	NEUTRAL	
9				
7		Rear RH		
6				
2		Front RH		
16				
8		Rear LH	DOWN	
6		Rear RH		
2	Front RH			

3. Check continuity between main power window and door lock/unlock switch D23 (power window lock switch) (Unlock operation).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal		Main power window and door lock/unlock switch condition		Continuity
9	1	Rear LH	UP	Yes
7		Rear RH		
16		Front RH		
8		Rear LH	NEUTRAL	
9		Rear RH		
7				
6		Front RH		
2				
16		Rear LH	DOWN	
8		Rear RH		
6		Front RH		
2				

Is the inspection result normal?

YES >> Main power window and door lock/unlock switch is OK.

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-62. "Removal and Installation"](#).

FRONT POWER WINDOW SWITCH

FRONT POWER WINDOW SWITCH : Description

INFOID:0000000011153927

- BCM supplies power.
- Front power window motor RH will be operated if power window and door lock/unlock switch RH is operated.

FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:0000000011153928

Power Window And Door Lock/unlock Switch RH

1. CHECK POWER WINDOW MOTOR FUNCTION

Check front power window motor operation with power window and door lock/unlock switch RH.

Is the inspection result normal?

YES >> Power window and door lock/unlock switch RH power supply and ground circuit are OK.

NO >> Refer to [PWC-33. "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

FRONT POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:0000000011153929

Regarding Wiring Diagram information, refer to [PWC-17. "Wiring Diagram - With Left Front Only Auto Down"](#).

Power Window And Door Lock/Unlock Switch RH Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT (POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH)

1. Turn ignition switch ON.
2. Check voltage between power window and door lock/unlock switch RH connector D125 and ground.

Terminal			Voltage (Approx.)
(+)		(-)	
Power window and door lock/unlock switch RH connector	Terminal		
D125	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM, power window and door lock/unlock switch RH, rear power window switch LH and rear power window switch RH.
3. Check continuity between BCM connector M81 and power window and door lock/unlock switch RH connector D125.

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M81	140	D125	8	Yes

4. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	140		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness or connectors.

3. CHECK HARNESS CONTINUITY (POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and power window and door lock/unlock switch RH.
3. Check continuity between main power window and door lock/unlock switch connector D23 and power window and door lock/unlock switch RH connector D125.

Main power window and door lock/unlock switch connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
D23	2	D125	11	Yes
	16		12	

4. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D23	2		No
	16		

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace the harness or connectors.

4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M81 and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
BCM connector	Terminal		
M81	140	Ground	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

5. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Refer to [PWC-35, "FRONT POWER WINDOW SWITCH : Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
NO >> Replace power window and door lock/unlock switch RH. Refer to [PWC-63, "Removal and Installation"](#).

FRONT POWER WINDOW SWITCH : Component Inspection

INFOID:0000000011153930

COMPONENT INSPECTION

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH D125.

Terminal		Power window switch condition	Continuity
8	7	UP	Yes
11	6		
11	6	NEUTRAL	
7	12		
8	6	DOWN	
7	12		

Is the inspection result normal?

- YES >> Power window and door lock/unlock switch RH is OK.
NO >> Replace power window and door lock/unlock switch RH. Refer to [PWC-63, "Removal and Installation"](#).

REAR POWER WINDOW SWITCH

REAR POWER WINDOW SWITCH : Description

INFOID:0000000011153931

- BCM supplies power.
- Rear power window motor will be operated if rear power window switch is operated. Rear power window switch.

REAR POWER WINDOW SWITCH : Component Function Check

INFOID:0000000011153932

PWC

Rear Power Window Switch

1. CHECK REAR POWER WINDOW MOTOR FUNCTION

Check rear power window motor operation with rear power window switch.

Is the inspection result normal?

- YES >> Rear power window switch power supply and ground circuit are OK.
NO >> Refer to [PWC-35, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

REAR POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:0000000011153933

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Rear Power Window Switch Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear power window switch connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal				Condition	Voltage (Approx.)
(+)		(-)			
Rear power window switch connector	Terminal				
LH	D208	4	Ground	Ignition switch ON	Battery voltage
RH	D308				

Is the inspection result normal?

- YES >> GO TO 2 (Rear power window switch LH).
YES >> GO TO 3 (Rear power window switch RH).
NO >> GO TO 4.

2. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH LH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch LH.
3. Check continuity between main power window and door lock/unlock switch connector and rear power window switch LH connector.

Main power window and door lock/ unlock switch connector	Terminal	Rear power window switch LH connector	Terminal	Continuity
D23	8	D208	7	Yes
	9		8	

4. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D23	8		No
	9		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace the harness or connectors.

3. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH RH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch RH.
3. Check continuity between main power window and door lock/unlock switch connector and rear power window switch RH connector.

Main power window and door lock/ unlock switch connector	Terminal	Rear power window switch RH connector	Terminal	Continuity
D23	6	D308	7	Yes
	7		8	

4. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/un- lock switch connector	Terminal	Ground	Continuity
D23	6		No
	7		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace the harness or connectors.

4. CHECK HARNESS CONTINUITY

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

1. Disconnect BCM, power window and door lock/unlock switch RH, rear power window switch LH and rear power window switch RH.
2. Check continuity between BCM connector and rear power window switch connector.

BCM connector	Terminal	Rear power window switch connector		Terminal	Continuity
M81	140	LH	D208	4	Yes
		RH	D308		

3. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M81	140		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

5. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Refer to [PWC-37, "REAR POWER WINDOW SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace rear power window switch. Refer to [PWC-64, "Removal and Installation"](#).

REAR POWER WINDOW SWITCH : Component Inspection

INFOID:0000000011153934

COMPONENT INSPECTION

1. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Terminal		Power window switch condition	Continuity
4	5	UP	Yes
7	6		
7	6	NEUTRAL	
8	5		
8	5	DOWN	
4	6		

Is the inspection result normal?

YES >> Rear power window switch is OK.

NO >> Replace rear power window switch. Refer to [PWC-64, "Removal and Installation"](#).

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW MOTOR DRIVER SIDE

DRIVER SIDE : Description

INFOID:0000000011153935

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch.

DRIVER SIDE : Component Function Check

INFOID:0000000011153936

1. CHECK FRONT POWER WINDOW MOTOR LH CIRCUIT

Check front power window motor LH operation with the main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Refer to [PWC-38, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011153937

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Front Power Window Motor LH Circuit Check

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front power window motor LH.
3. Turn ignition switch ON.
4. Check voltage between front power window motor LH connector D9 and ground.

Terminal		Main power window and door lock/unlock switch condition	Voltage (Approx.)
(+)	(-)		
Front power window motor LH connector	Terminal		
D9	1	UP	Battery voltage
		DOWN	0
	2	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector D24 and front power window motor LH connector D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D24	19	D9	2	Yes
	17		1	

4. Check continuity between main power window and door lock/unlock switch connector D24 and ground.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D24	19		No
	17		

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-62, "Removal and Installation"](#).

NO >> Repair or replace harness.

3. CHECK FRONT POWER WINDOW MOTOR LH

Check front power window motor LH.

Refer to [PWC-39, "DRIVER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace front power window motor LH. Refer to [GW-18, "Removal and Installation"](#).

DRIVER SIDE : Component Inspection

INFOID:0000000011153938

COMPONENT INSPECTION

1. CHECK FRONT POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to power window motor D9.

Terminal		Motor condition
(+)	(-)	
1	2	UP
2	1	DOWN

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Replace front power window motor LH. Refer to [GW-18, "Removal and Installation"](#).

PASSENGER SIDE

PWC

PASSENGER SIDE : Description

INFOID:0000000011153939

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

PASSENGER SIDE : Component Function Check

INFOID:0000000011153940

1. CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

Check front power window motor RH operation with main power window and door lock/unlock switch or power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Refer to [PWC-39, "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000011153941

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Front Power Window Motor RH Circuit Check

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch OFF.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

2. Disconnect front power window motor RH.
3. Turn ignition switch ON.
4. Check voltage between front power window motor RH connector D104 and ground.

Terminal		Front power window motor RH condition	Voltage (V) (Approx.)
(+)	(-)		
Front power window motor RH connector	Terminal		
D104	1	UP	Battery voltage
		DOWN	0
	2	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector D125 and front power window motor RH connector D104.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D125	6	D104	2	Yes
	7		1	

4. Check continuity between power window and door lock/unlock switch connector D125 and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D125	6		No
	7		

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-63, "Removal and Installation"](#).

NO >> Repair or replace the harness or connectors.

3. CHECK FRONT POWER WINDOW MOTOR RH

Check front power window motor RH.

Refer to [PWC-40, "PASSENGER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace front power window motor RH. Refer to [GW-14, "Removal and Installation"](#).

PASSENGER SIDE : Component Inspection

INFOID:0000000011153942

COMPONENT INSPECTION

COMPONENT INSPECTION

1. CHECK FRONT POWER WINDOW MOTOR RH

Check motor operation by connecting the battery voltage directly to front power window motor RH D104.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal		Motor condition
(+)	(-)	
1	2	UP
2	1	DOWN

Is the inspection result normal?

YES >> Power window motor is OK.

NO >> Replace front power window motor RH. Refer to [GW-14, "Removal and Installation"](#).

REAR LH

REAR LH : Description

INFOID:0000000011153943

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or rear power window switch LH.

REAR LH : Component Function Check

INFOID:0000000011153944

1. CHECK REAR POWER WINDOW MOTOR LH CIRCUIT

Check rear power window motor LH operation with main power window and door lock/unlock switch or rear power window switch LH.

Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Refer to [PWC-41, "REAR LH : Diagnosis Procedure"](#)

REAR LH : Diagnosis Procedure

INFOID:0000000011153945

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Rear Power Window Motor LH Circuit Check

1. CHECK REAR POWER WINDOW SWITCH LH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor LH.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor LH connector D204 and ground.

PWC

Terminal			Window condition	Voltage (Approx.)
(+) Rear power window motor LH connector		(−)		
Terminal				
D204	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH.
3. Check continuity between rear power window switch LH connector D208 and rear power window motor LH connector D204.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Rear power window switch LH connector	Terminal	Rear power window motor LH connector	Terminal	Continuity
D208	6	D204	1	Yes
	5		2	

4. Check continuity between rear power window switch LH connector D208 and ground.

Rear power window switch LH connector	Terminal	Ground	Continuity
D208	6		No
	5		

Is the inspection result normal?

YES >> Check rear power window switch LH. Refer to [PWC-42, "REAR LH : Component Inspection"](#).
NO >> Repair or replace the harness or connectors.

3. CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-42, "REAR LH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
NO >> Replace rear power window motor LH. Refer to [GW-19, "Removal and Installation"](#).

REAR LH : Component Inspection

INFOID:0000000011153946

COMPONENT INSPECTION

1. CHECK REAR POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to rear power window motor LH D204.

Terminal		Motor condition
(+)	(-)	
2	1	UP
1	2	DOWN

Is the inspection result normal?

YES >> Rear power window motor LH is OK.
NO >> Replace rear power window motor LH. Refer to [GW-19, "Removal and Installation"](#).

REAR RH

REAR RH : Description

INFOID:0000000011153947

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or rear power window switch RH.

REAR RH : Component Function Check

INFOID:0000000011153948

1. CHECK POWER WINDOW MOTOR CIRCUIT

Check rear power window motor RH operation with operating power window main switch or rear power window switch RH.

Is the inspection result normal?

YES >> Power window motor is OK.
NO >> Refer to [PWC-42, "REAR RH : Diagnosis Procedure"](#).

REAR RH : Diagnosis Procedure

INFOID:0000000011153949

Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Rear Power Window Motor RH Circuit Check

1. CHECK REAR POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor RH.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor RH connector D304 and ground.

Terminal		Rear power window switch RH condition	Voltage (Approx.)
(+)	(-)		
Rear power window motor RH connector	Terminal		
D304	2	UP	Battery voltage
		DOWN	0
	1	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window switch RH.
3. Check continuity between rear power window switch RH connector D308 and rear power window motor RH connector D304.

Rear power window switch RH connector	Terminal	Rear power window motor RH connector	Terminal	Continuity
D308	5	D304	2	Yes
	6		1	

4. Check continuity between rear power window switch RH connector D308 and ground.

Rear power window switch RH connector	Terminal	Ground	Continuity
D308	5		No
	6		

Is the inspection result normal?

YES >> Check rear power window switch RH. Refer to [PWC-43, "REAR RH : Component Inspection"](#).

NO >> Repair or replace harness or connectors.

3. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-43, "REAR RH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace rear power window motor RH. Refer to [GW-19, "Removal and Installation"](#).

REAR RH : Component Inspection

INFOID:0000000011153950

COMPONENT INSPECTION

1. CHECK REAR POWER WINDOW MOTOR RH

Check motor operation by connecting the battery voltage directly to rear power window motor RH D304.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

Is the inspection result normal?

YES >> Power window motor is OK.

NO >> Replace rear power window motor RH. Refer to [GW-19, "Removal and Installation"](#).

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

ENCODER DRIVER SIDE

DRIVER SIDE : Description

INFOID:0000000011153951

Detects condition of the front power window motor LH operation and transmits to main power window and door lock/unlock switch as pulse signal.

DRIVER SIDE : Component Function Check

INFOID:0000000011153952

1. CHECK ENCODER OPERATION

Check front door glass LH perform AUTO DOWN operation normally with main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-45, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011153953


Regarding Wiring Diagram information, refer to [PWC-17, "Wiring Diagram - With Left Front Only Auto Down"](#).

Encoder Circuit Check

1. CHECK ENCODER OPERATION

1. Connect front power window motor LH.
2. Turn ignition switch ON.
3. Check signal between main power window and door lock/unlock switch connector D23 and ground with oscilloscope.

Signal name	Terminals			Signal (Reference value)
	(+)		(-)	
	Main power window and door lock/unlock switch connector	Terminal		
Encoder signal 1	D23	5	Ground	Refer to following signal
Encoder signal 2		4		

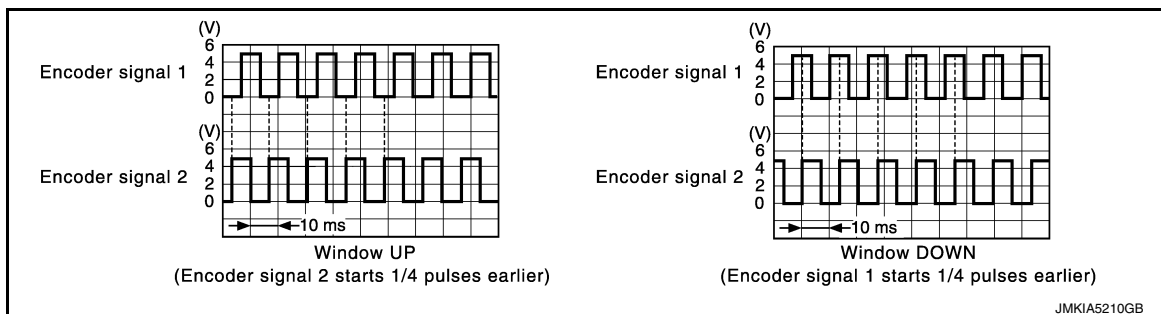

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 2.

2. CHECK FRONT POWER WINDOW MOTOR LH POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front power window motor LH connector D9 and ground.

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Terminal			Voltage (Approx.)
(+)		(-)	
Front power window motor LH connector	Terminal		
D9	4	Ground	10

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and front power window motor LH.
3. Check continuity between main power window and door lock/unlock switch connector D23 and front power window motor connector D9.

Main power window and door lock/ unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D23	14	D9	4	Yes

4. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D23	14		No

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-62. "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front power window motor LH.
3. Check continuity between front power window motor LH connector D9 and ground.

Front power window motor LH connector	Terminal	Ground	Continuity
D9	6		Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. CHECK HARNESS CONTINUITY 2

1. Disconnect main power window and door lock/unlock switch.
2. Check continuity between main power window and door lock/unlock switch connector D23 and front power window motor LH connector D9.

Main power window and door lock/un- lock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D23	12	D9	6	Yes

Is the inspection result normal?

YES >> Check main power window and door lock/unlock switch. Refer to [PWC-32. "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

NO >> Repair or replace the harness or connectors.

6. CHECK HARNESS CONTINUITY 3

1. Disconnect main power window and door lock/unlock switch.
2. Check continuity between main power window D23 and door lock/unlock switch connector and front power window motor LH connector D9.

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D23	5	D9	3	Yes
	4		5	

3. Check continuity between main power window and door lock/unlock switch connector D23 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D23	5		No
	4		

Is the inspection result normal?

- YES >> Replace front power window motor LH. Refer to [GW-14, "Removal and Installation"](#).
- NO >> Repair or replace harness or connectors.

PWC

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

DOOR SWITCH

Component Function Check

INFOID:0000000011153954

1.CHECK FUNCTION

1. Select DOOR LOCK of BCM using CONSULT.
2. Select DOOR SW-DR, DOOR SW-AS, DOOR SW-RL, DOOR SW-RR, in DATA MONITOR mode.
3. Check that the function operates normally according to the following conditions.

Monitor item	Condition		Status
DOOR SW-DR	Driver side door	Open	On
		Closed	Off
DOOR SW-AS	Passenger side door	Open	On
		Closed	Off
DOOR SW-RL	Rear door LH	Open	On
		Closed	Off
DOOR SW-RR	Rear door RH	Open	On
		Closed	Off

Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [PWC-48, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011153955

Regarding Wiring Diagram information, refer to [DLK-75, "Wiring Diagram"](#).

1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check signal between malfunctioning door switch harness connector and ground using oscilloscope.

(+)		Terminal	(-)	Signal (Reference value)
Door switch				
Connector				
Driver side	B8	3	Ground	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between door switch harness connector and BCM harness connector.

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

Door switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B8	3	M20	Yes
Passenger side	B108			
Rear LH	B18			
Rear RH	B116			

3. Check continuity between door switch harness connector and ground.

Door switch		Ground	Continuity
Connector	Terminal		
Driver side	B8	3	No
Passenger side	B108		
Rear LH	B18		
Rear RH	B116		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK DOOR SWITCH

Refer to [PWC-49, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning door switch. Refer to [DLK-315, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011153956

PWC

1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check continuity between door switch terminals.

Door switch		Condition		Continuity
Terminal				
3	Ground contact is part of the switch.	Door switch	Pressed	No
			Released	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace malfunction door switch. Refer to [DLK-315, "Removal and Installation"](#).

POWER WINDOW LOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW LOCK SWITCH

Description

INFOID:0000000011153957

Ground circuit of main power window and door lock/unlock switch shuts off if power window lock switch of main power window and door lock/unlock switch is operated. This inhibits all operation, except for the main switch.

Component Function Check

INFOID:0000000011153958

1. CHECK POWER WINDOW LOCK SIGNAL

Exchange for a normal main power window and door lock/unlock switch, and check operation.

Is the inspection result normal?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-62. "Removal and Installation"](#).
- NO >> Check condition of harness and connector.

SYMPTOM DIAGNOSIS

POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH

Diagnosis Procedure

INFOID:0000000011153959

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.

[BCS-80, "Removal and Installation"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK POWER WINDOW MAIN SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window switch power supply and ground circuit.

Refer to [PWC-29, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011153960

1.CHECK DRIVER SIDE POWER WINDOW MOTOR

Check driver side power window motor.

Refer to [PWC-38, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE WHEN POWER WINDOW MAIN SWITCH IS OPERATED

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000011153961

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH circuit.

Refer to [PWC-33, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED

WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED :
Diagnosis Procedure

INFOID:0000000011153962

1. REPLACE POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Replace power window and door lock/unlock switch RH.

Refer to [PWC-63, "Removal and Installation"](#).

>> Inspection End.

WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW
SWITCH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW
SWITCH ARE OPERATED : Diagnosis Procedure

INFOID:0000000011153963

1. CHECK FRONT POWER WINDOW SWITCH (PASSENGER SIDE) POWER SUPPLY AND GROUND CIRCUIT

Check power window and door lock/unlock switch RH power supply and ground circuit.

Refer to [PWC-33, "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

Check front power window motor RH circuit.

Refer to [PWC-33, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE WHEN POWER WINDOW MAIN SWITCH IS OPERATED

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000011153964

1.CHECK REAR POWER WINDOW SWITCH LH CIRCUIT

Check rear power window switch LH circuit.

Refer to [PWC-35, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN REAR POWER WINDOW SWITCH LH IS OPERATED

WHEN REAR POWER WINDOW SWITCH LH IS OPERATED : Diagnosis Procedure

INFOID:0000000011153965

1.REPLACE REAR POWER WINDOW SWITCH LH

Replace rear power window switch LH.

Refer to [PWC-64, "Removal and Installation"](#).

>> Inspection End.

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED : Diagnosis Procedure

INFOID:0000000011153966

1.CHECK REAR POWER WINDOW SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check rear power window switch power supply and ground circuit.

Refer to [PWC-35, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-41, "REAR LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE WHEN POWER WINDOW MAIN SWITCH IS OPERATED

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000011153967

1.CHECK REAR POWER WINDOW SWITCH RH CIRCUIT

Check rear power window switch RH circuit.

Refer to [PWC-35, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN REAR POWER WINDOW SWITCH RH IS OPERATED

WHEN REAR POWER WINDOW SWITCH RH IS OPERATED : Diagnosis Procedure

INFOID:0000000011153968

1.REPLACE REAR POWER WINDOW SWITCH RH

Replace rear power window switch RH.

Refer to [PWC-64, "Removal and Installation"](#).

>> Inspection End.

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED : Diagnosis Procedure

INFOID:0000000011153969

1.CHECK REAR POWER WINDOW SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check rear power window switch power supply and ground circuit.

Refer to [PWC-35, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-42, "REAR RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY
DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011153970

1.CHECK ENCODER (DRIVER SIDE) CIRCUIT

Check encoder (driver side) circuit.

Refer to [PWC-45, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY

Diagnosis Procedure

INFOID:0000000011153971

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-172. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

Diagnosis Procedure

INFOID:0000000011153972

1. CHECK FRONT DOOR LOCK ASSEMBLY LH (DOOR KEY CYLINDER SWITCH)

Check front door lock assembly LH (door key cylinder switch).

Refer to [DLK-193, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Inspection End.

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011153973

1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [DLK-240, "Diagnosis Procedure"](#).

2.CHECK POWER WINDOW OPERATION

Check power window operation.

In the inspection result normal?

YES >> GO TO 3.

NO >> Refer to [PWC-29, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

Diagnosis Procedure

INFOID:0000000011153974

1. REPLACE POWER WINDOW MAIN SWITCH

Replace power window main switch. Refer to [PWC-62, "Removal and Installation"](#).

>> Inspection End.

POWER WINDOW SWITCH DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[LH FRONT ONLY AUTO DOWN]

POWER WINDOW SWITCH DOES NOT ILLUMINATE

DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011153975

1.REPLACE POWER WINDOW MAIN SWITCH

Replace power window main switch.

Refer to [PWC-62, "Removal and Installation"](#).

>> Inspection End.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000011153976

1.REPLACE POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Replace power window and door lock/unlock switch RH.

Refer to [PWC-63, "Removal and Installation"](#).

>> Inspection End.

REAR LH

REAR LH : Diagnosis Procedure

INFOID:0000000011153977

1.REPLACE REAR POWER WINDOW SWITCH LH

Replace rear power window switch LH.

Refer to [PWC-64, "Removal and Installation"](#).

>> Inspection End.

REAR RH

REAR RH : Diagnosis Procedure

INFOID:0000000011153978

1.REPLACE REAR POWER WINDOW SWITCH RH

Replace rear power window switch RH.

Refer to [PWC-64, "Removal and Installation"](#).

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

< REMOVAL AND INSTALLATION >

[LH FRONT ONLY AUTO DOWN]

REMOVAL AND INSTALLATION


MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Removal and Installation

INFOID:0000000011153979


REMOVAL

1. Remove the main power window and door lock/unlock switch from the front door finisher using a suitable tool.
2. Disconnect the harness connectors (A) from the main power window and door lock/unlock switch (1) and harness connector (B) from the mirror control switch (2).

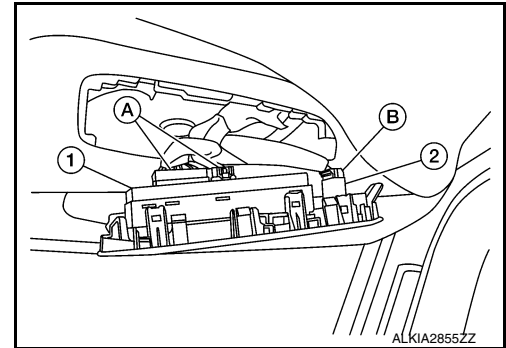

3. Release the pawls, then separate the main power window and door lock/unlock switch (1) from the switch finisher (2).

○: Pawl

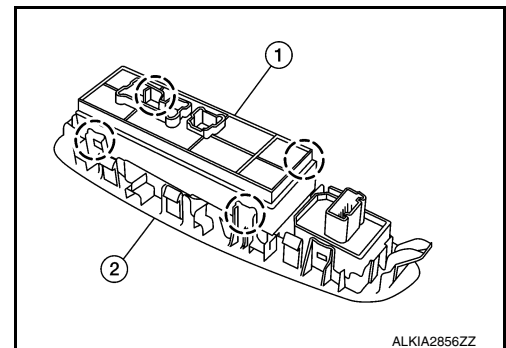

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

When the main power window and door lock/unlock switch is removed or replaced, it is necessary to perform the initialization procedure. Refer to [PWC-26, "Work Flow"](#).

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

< REMOVAL AND INSTALLATION >

[LH FRONT ONLY AUTO DOWN]


POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Removal and Installation

INFOID:0000000011153980


REMOVAL

1. Remove the power window and door lock/unlock switch (RH) from the front door finisher using a suitable tool.
2. Disconnect the harness connector (A) from the power window and door lock/unlock switch (RH) (1).

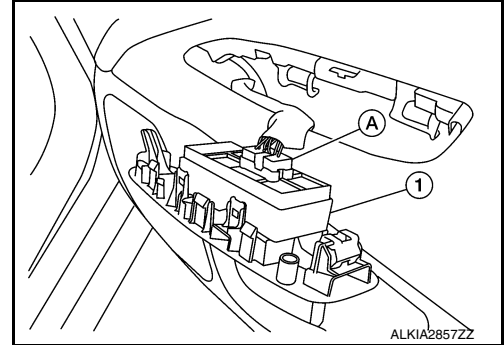

3. Release four pawls, then separate power window and door lock/unlock switch (RH) (1) from switch finisher (2).

(○): Pawl

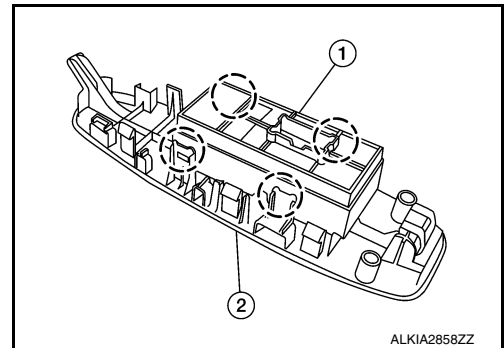

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

REAR POWER WINDOW SWITCH

< REMOVAL AND INSTALLATION >

[LH FRONT ONLY AUTO DOWN]


REAR POWER WINDOW SWITCH

Removal and Installation


INFOID:0000000011153981

REMOVAL

1. Remove the rear door cup holder mat.
2. Remove the rear power window switch finisher screw (A) and the rear power window switch finisher (1) from the rear door finisher using a suitable tool.

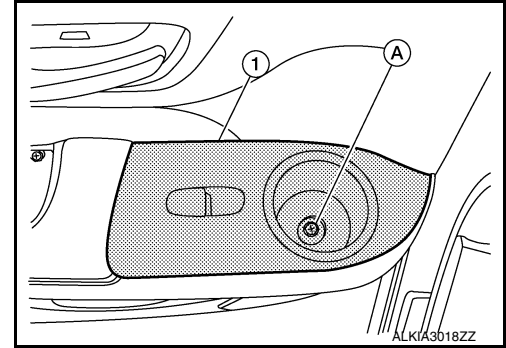


3. Disconnect the harness connector (A) from the rear power window switch (1).

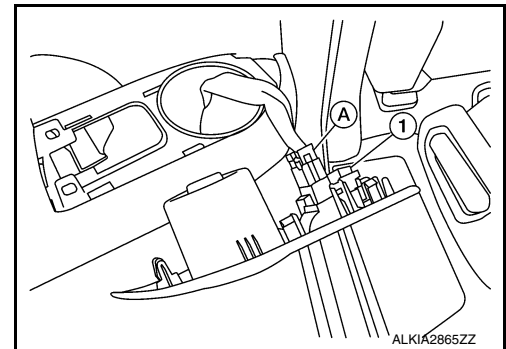

4. Release the two pawls, then separate the rear power window switch (1) from the switch finisher (2).

○: Pawl

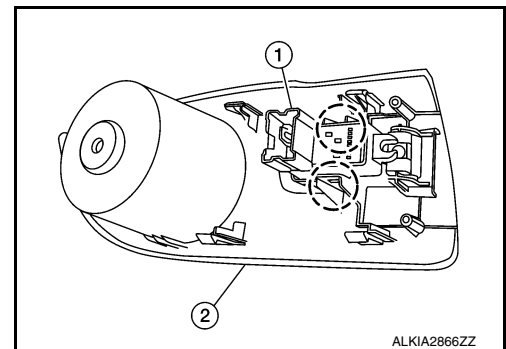

INSTALLATION

Installation is in the reverse order of removal.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011153982

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:000000011153983

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

[LH & RH FRONT AUTO UP/DOWN]


PREPARATION

PREPARATION

Special Service Tool

INFOID:0000000011153984

The actual shape of the tools may differ from those illustrated here.

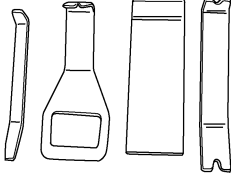Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim tool set  AWJIA0483ZZ	Removing trim components

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[LH & RH FRONT AUTO UP/DOWN]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011153985

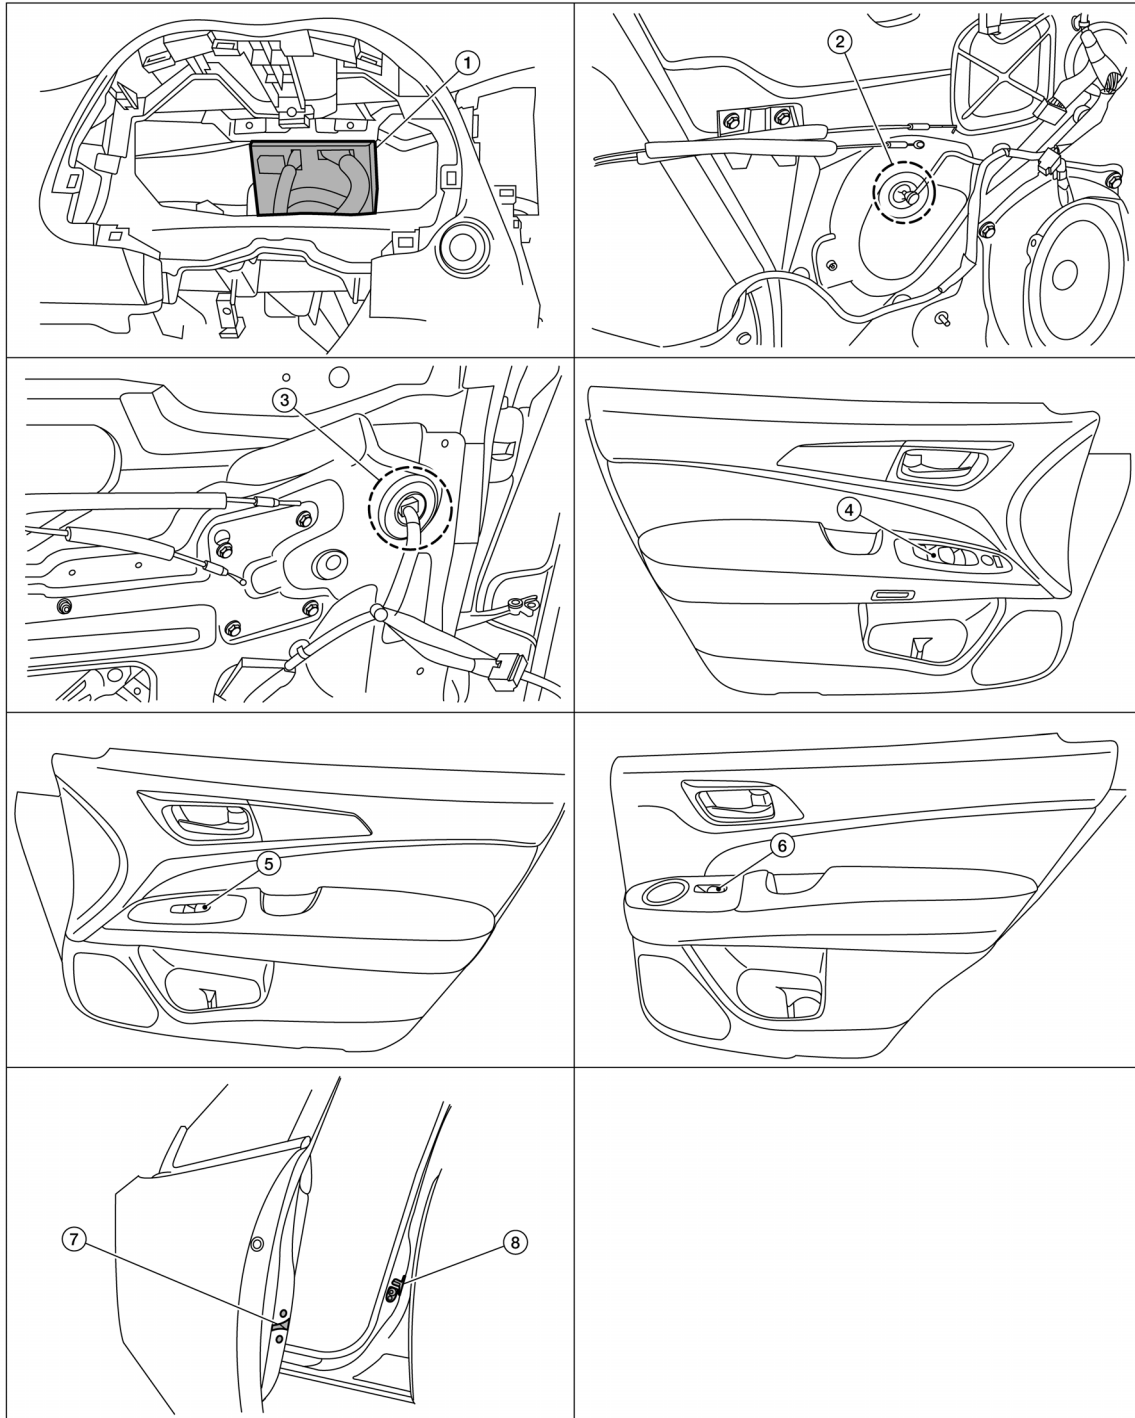

1. BCM (view with the combination meter removed)

2. Front power window motor LH (RH similar) (view with front door finisher removed)

3. Rear power window motor LH (RH similar) (view with rear door finisher removed)

AWKIA2058ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[LH & RH FRONT AUTO UP/DOWN]

- | | | |
|--|--|---|
| 4. Main power window and door lock/unlock switch | 5. Power window and door lock/unlock switch RH | 6. Rear power window switch LH (RH similar) |
| 7. Front door lock assembly LH (key cylinder switch) | 8. Front door switch LH (RH similar) | |


Component Description

INFOID:0000000011153986

Component	Function
BCM	- Supplies power to the window switches. - Controls retained power.
Main power window and door lock/unlock switch	Directly controls all power window motors.
Power window and door lock/unlock switch RH	Controls power window motor of passenger door.
Rear power window switch	- Controls anti-pinch operation of power window. - Controls right and left power window motors for the rear doors.
Power window motor	- Integrates the CPU and WINDOW MOTOR. - Starts operating with signals from each power window switch. - Transmits power window motor rotation as a pulse signal to power window switch. - Controls anti-pinch operation for all windows.
Front door lock assembly (door key cylinder switch)	Transmits operation condition of door key cylinder switch to power window main switch.
Front door switch LH/RH	Detects door open/close condition and transmits it to the BCM.

SYSTEM

System Diagram

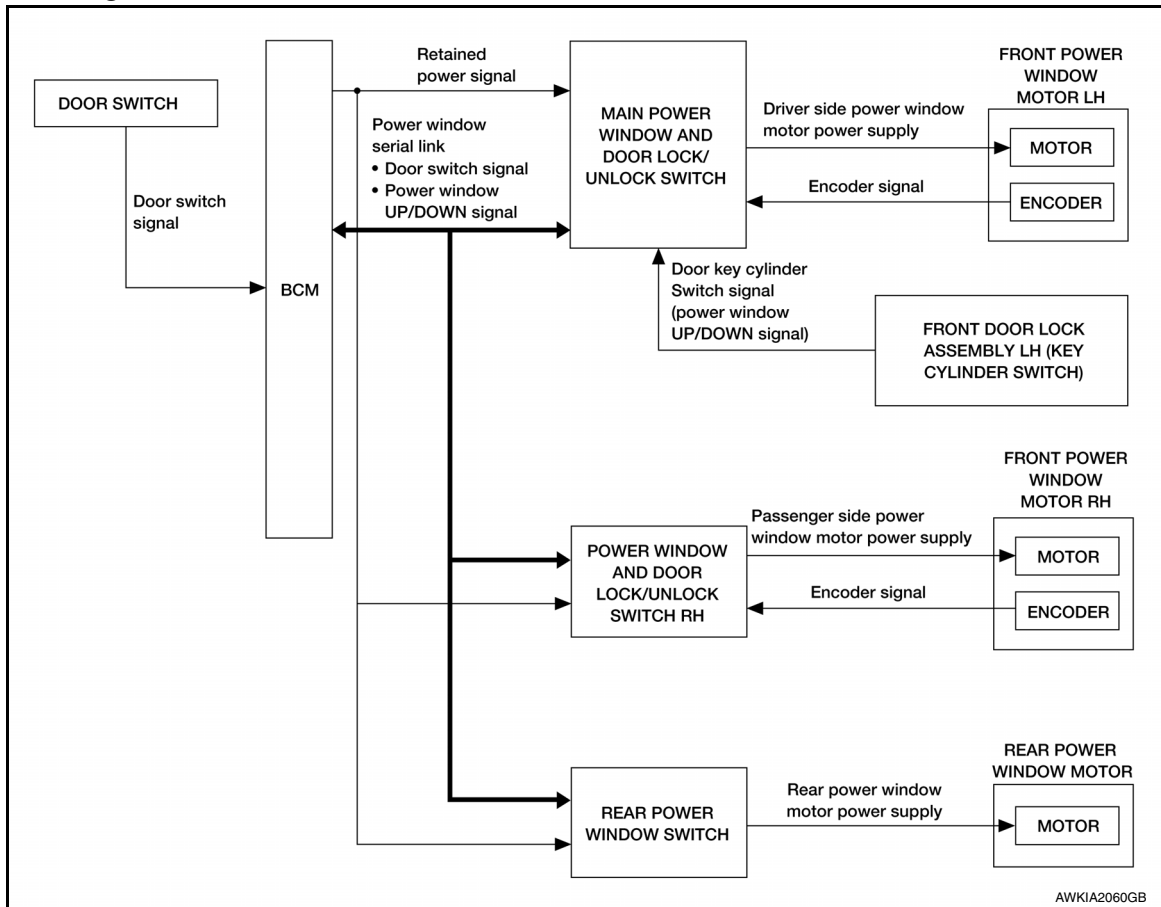

System Description

INFOID:0000000011153988

POWER WINDOW OPERATION

- Power window system is activated by the power window switch when the ignition switch is in the ON position or during the retained power operation after ignition switch turns OFF.
- Power window main switch can open/close door glass.
- Front and rear power window switch can open/close the corresponding door glass.
- Power window lock switch can lock all power windows other than driver seat.
- All power windows open when pressing Intelligent Key unlock button for 3 seconds.
- If door glass receives resistance that is more than the specified value and the power window is in the AUTO-UP operation, power window will move in the reverse direction (Anti-Pinch Function).

POWER WINDOW AUTO-OPERATION

- AUTO-UP/DOWN operation can be performed when each power window motor turns to AUTO.
- Power window switch reads the changes of the CPU signal and stops AUTO operation when door glass is at fully opened/closed position.
- Power window motor is operable in case of CPU malfunctioning.
- AUTO function does not operate if the CPU is malfunctioning.

POWER WINDOW SERIAL LINK

Power window main switch, front power window switch (passenger side) and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to power window main switch, front power window switch (passenger side).

- Keyless power window down signal.
- Door switch signal.

SYSTEM

< SYSTEM DESCRIPTION >

[LH & RH FRONT AUTO UP/DOWN]

The signal mentioned below is transmitted from power window main switch to front power window switch (passenger side).

- Front passenger side door window operation signal.
- Retained power operation signal.

RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables power window system to operate during the 45 seconds even when ignition switch is turned OFF.

Retained Power Function Cancel Conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer time passes. (45 seconds)

POWER WINDOW LOCK FUNCTION

Ground circuit inside power window main switch shuts off when power window lock switch is ON. This inhibits power window switch operation except with the power window main switch.

ANTI-PINCH OPERATION

- Pinch foreign material in the door glass during Auto-Up operation, and it is the anti-pinch that lowers the door glass 150 mm (5.9 in) or 2 seconds when detected.
- CPU continues detecting the movement of power window motor and transmits to the power window switch as the CPU signal while power window motor is operating.
- Resistance is applied to the power window motor rotation that changes the frequency of CPU signal if foreign material is trapped in the door glass.
- Power window switch controls to lower the door glass for 150 mm (5.9 in) or 2 seconds after it detects CPU pulse signal frequency change.

Operation Condition

When all door glass AUTO-UP operation is performed (anti-pinch function does not operate just before the door glass closes and is fully closed)

NOTE:

Depending on environment and driving conditions, if a similar impact or load is applied to the door glass, it may lower.

DOOR KEY CYLINDER SWITCH OPERATION

Hold the door key cylinder to the LOCK or UNLOCK direction for 1 second or more to OPEN or CLOSE all power windows when ignition switch is OFF. In addition, it stops when key position is moved to N (NEUTRAL) when operating.

Operation Condition

- Ignition switch OFF.
- Hold door key cylinder to LOCK position for 1 second or more to perform CLOSE operation of the door glass.
- Hold door key cylinder to UNLOCK position for 1 second or more to perform OPEN operation of the door glass.

KEYLESS POWER WINDOW DOWN FUNCTION

All power windows open when the unlock button on Intelligent Key is activated and pressed for more than 3 seconds with the ignition switch OFF. The windows keep opening if the unlock button is continuously pressed. The power window opening stops when the following operations are performed.

- When the unlock button is pressed for more than 15 seconds.
- When the ignition switch is turned ON while the power window opening is operated.
- When the unlock button is released.

While retained power operation activate, keyless power window down function cannot be operated.

Fail-safe

INFOID:0000000011153989

FAIL-SAFE CONTROL

Window system switches to fail-safe control when a malfunction is detected in the CPU during UP and DOWN operation. Switches to fail-safe control when an error beyond the regulation value is detected between the fully closed position and the actual position of the glass.

SYSTEM

< SYSTEM DESCRIPTION >

[LH & RH FRONT AUTO UP/DOWN]

Malfunction	Malfunction condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control:

- Auto-up operation
- Anti-pinch function
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[LH & RH FRONT AUTO UP/DOWN]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011616122

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Back door open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[LH & RH FRONT AUTO UP/DOWN]

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000011616123

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

PWC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[LH & RH FRONT AUTO UP/DOWN]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

List of ECU Reference

INFOID:0000000011153992

ECU	Reference
BCM	BCS-30, "Reference Value"
	BCS-50, "Fail Safe"
	BCS-50, "DTC Inspection Priority Chart"
	BCS-52, "DTC Index"

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >


[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW MAIN SWITCH

Reference Value



INFOID:0000000011153993

TERMINAL LAYOUT

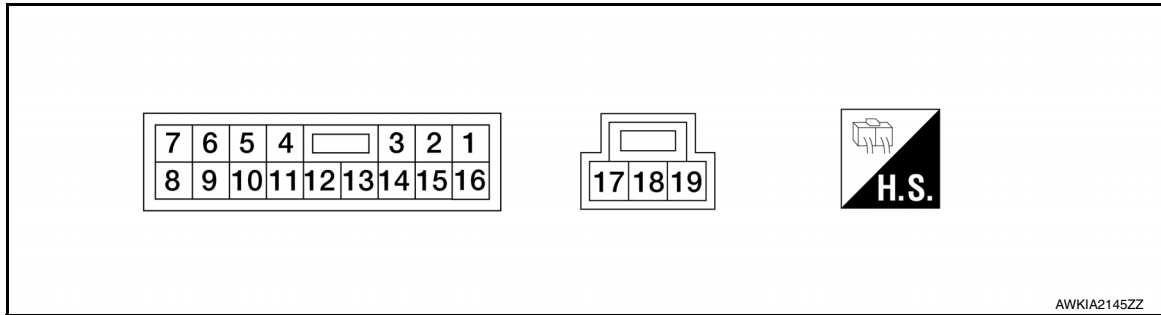

PHYSICAL VALUES

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

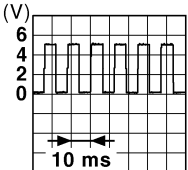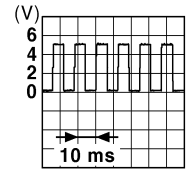Terminal No.		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/Output		
1 (B)	Ground	Ground	—	—	0
3 (BR)	Ground	Door key cylinder switch LOCK signal	Input	Key position (Neutral → Locked)	5 → 0
4 (SB)	12	Encoder pulse signal 2	Input	When power window motor operates.	 JMKIA0070GB
5 (Y)	12	Encoder pulse signal 1	Input	When power window motor operates.	 JMKIA0070GB
6 (L)	Ground	Rear power window motor RH DOWN signal	Output	When rear RH switch in power window main switch is operated DOWN.	Battery voltage
7 (V)	Ground	Rear power window motor RH UP signal	Output	When rear RH switch in power window main switch is operated UP.	Battery voltage
8 (LG)	Ground	Rear power window motor LH DOWN signal	Output	When rear LH switch in power window main switch is operated DOWN.	Battery voltage
9 (SB)	Ground	Rear power window motor LH UP signal	Output	When rear LH switch in power window main switch is operated UP.	Battery voltage


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >

[LH & RH FRONT AUTO UP/DOWN]

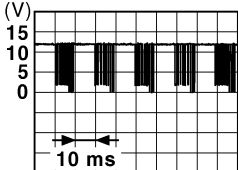Terminal No.		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/Output		
10 (BR)	Ground	RAP signal	Input	IGN SW ON	Battery voltage
				Within 45 second after ignition switch is turned to OFF.	Battery voltage
				When front LH or RH door is opened during retained power operation.	0
11 (P)	Ground	Power window serial link	Input/Output	IGN SW ON or power window timer operating.	 JPMIA0013GB
12 (BR)	Ground	Encoder ground	—	—	0
14 (LG)	Ground	Encoder power supply	Output	When ignition switch ON or power window timer operates.	10
15 (SB)	Ground	Door key cylinder switch UN-LOCK signal	Input	Key position (Neutral → Unlocked)	5 → 0
17 (Y)	19	Front door power window motor LH UP signal	Output	When front LH switch in power window main switch is operated UP.	Battery voltage
18 (Y)		Battery power supply	Input	—	Battery voltage
19 (L)	17	Front door power window motor LH DOWN signal	Output	When front LH switch in power window main switch is operated DOWN.	Battery voltage

Fail Safe

INFOID:0000000011153994

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when error beyond regulation value is detected between the fully closed position and the actual position of the glass.

Error	Error condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >

[LH & RH FRONT AUTO UP/DOWN]

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control.

- Auto-up operation
- Anti-pinch function
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS INFORMATION >


[LH & RH FRONT AUTO UP/DOWN]

FRONT POWER WINDOW SWITCH

Reference Value




INFOID:0000000011153995

TERMINAL LAYOUT

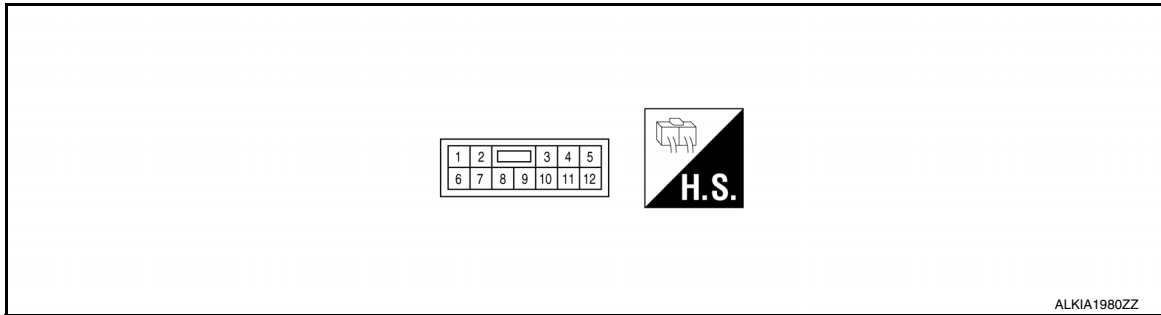

PHYSICAL VALUES

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

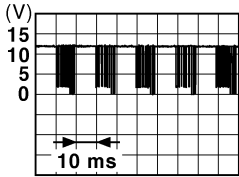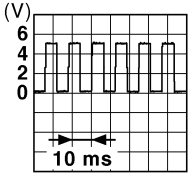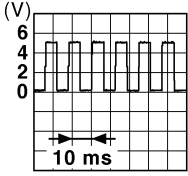Terminal No.		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/Output		
3 (Y)	Ground	Power window serial link	Input/Output	IGN SW ON or power window timer operating.	 JPMIA0013GB
4 (LG)	Ground	Encoder ground	—	—	0
5 (BG)	Ground	Encoder power supply	Output	When ignition switch ON or power window timer operates	10
7 (B)	Ground	Ground	—	—	0
8 (BR)	Ground	Battery power supply	Input	—	Battery voltage
9 (V)	4	Encoder pulse signal 1	Input	When power window motor operates.	 JMKIA0070GB
10 (W)	4	Encoder pulse signal 2	Input	When power window motor operates.	 JMKIA0070GB

FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS INFORMATION >

[LH & RH FRONT AUTO UP/DOWN]

Terminal No.		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/ Output		
11 (L)	12	Power window motor UP signal	Output	When power window motor is UP at operated.	Battery voltage
12 (BR)	11	Power window motor DOWN signal	Output	When power window motor is DOWN at operated.	Battery voltage

Fail Safe

INFOID:0000000011153996

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when error beyond regulation value is detected between the fully closed position and the actual position of the glass.

Error	Error condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control.

- Auto-up operation
- Anti-pinch function
- Retained power function


Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.

[LH & RH FRONT AUTO UP/DOWN]

WIRING DIAGRAM

Wiring Diagram - With Left & Right Front Auto Up/Down

INFOID:0000000011153997

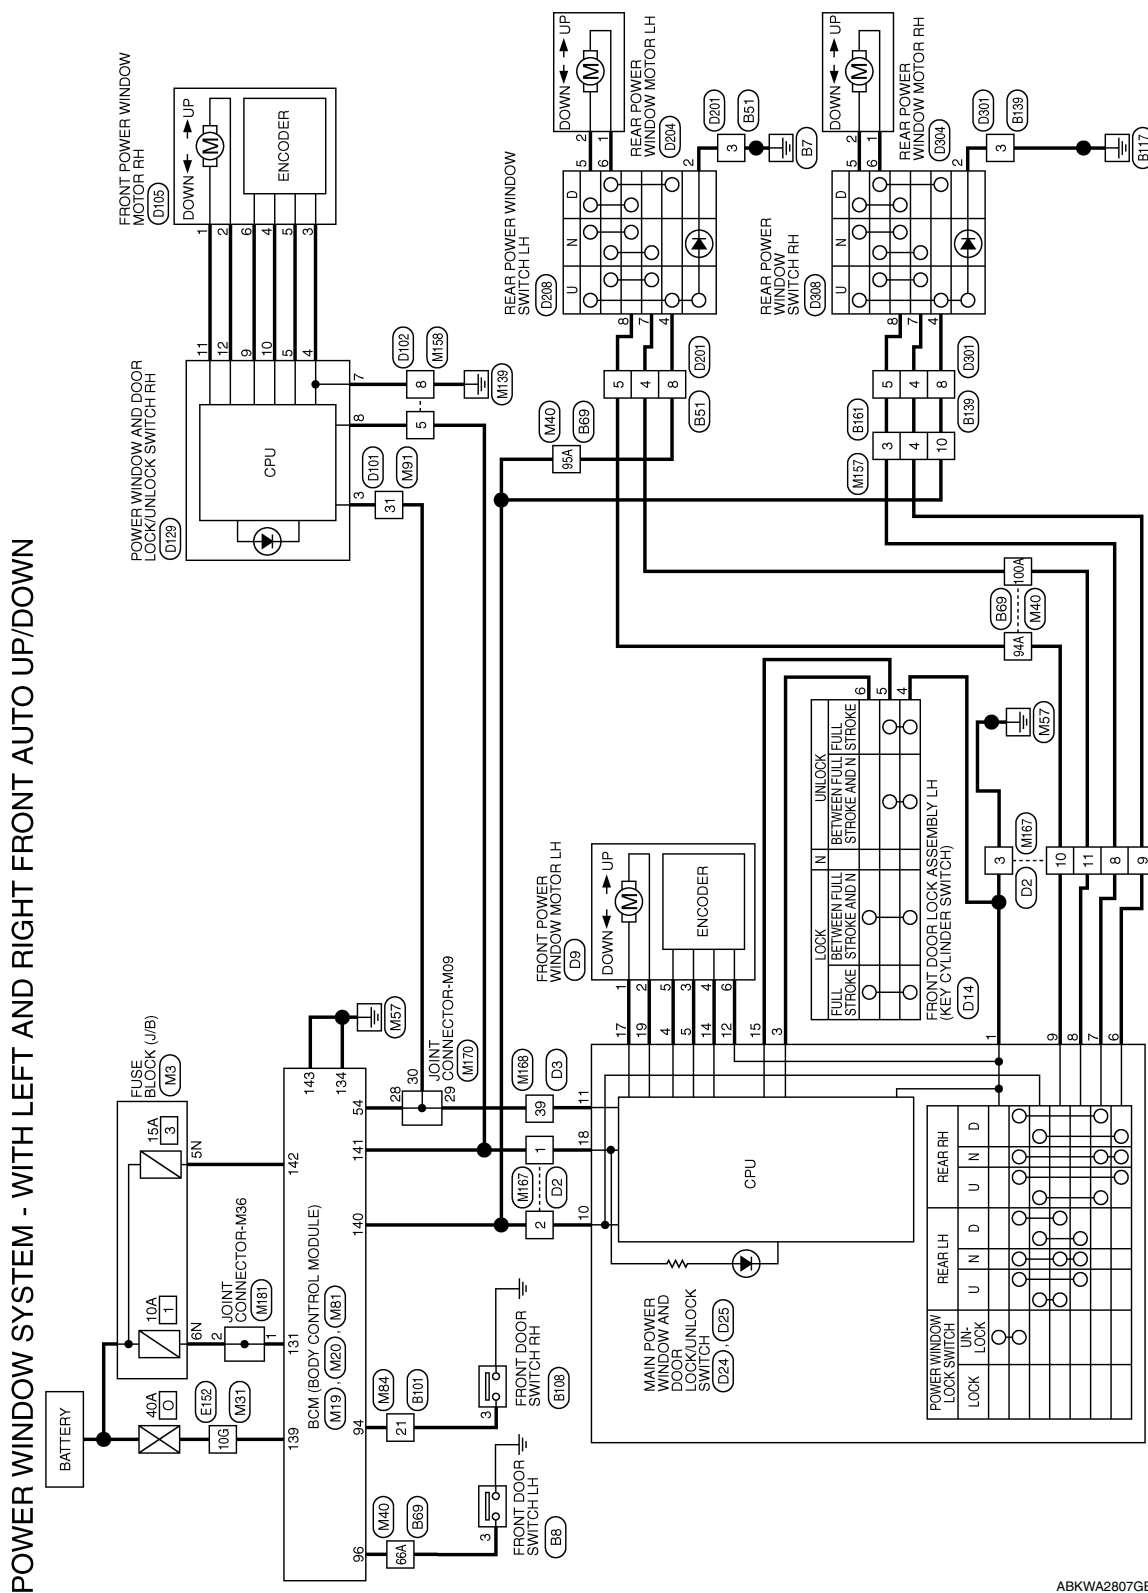


POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW SYSTEM CONNECTORS - WITH LEFT AND RIGHT FRONT AUTO UP/DOWN

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



92	91	90	89	88	87	86	85	84	83	82	81
104	103	102	101	100	99	98	97	96	95	94	93


Terminal No.	Color of Wire	Signal Name
5N	Y	-
6N	W	-

Terminal No.	Color of Wire	Signal Name
54	W	PW LIN/COM

Terminal No.	Color of Wire	Signal Name
94	G	AS DOOR SW
96	BG	DR DOOR SW

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
10G	W	-

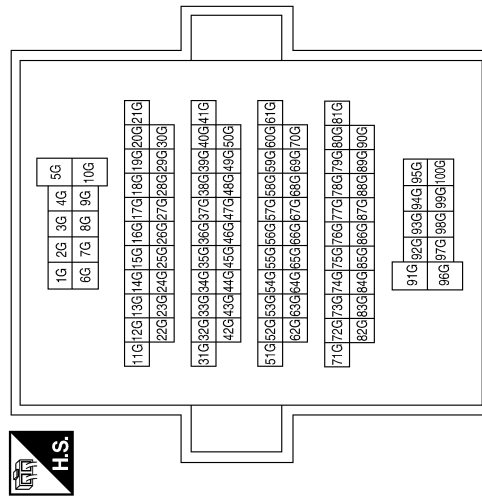

ABKIA4749GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE


137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
140	BR	P/W POWER SUPPLY IGN
141	Y	P/W POWER SUPPLY BAT
142	Y	BAT FRONT DOOR
143	B	GND 1

Terminal No.	Color of Wire	Signal Name
66A	BG	-
94A	SB	-
95A	BR	-
100A	LG	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

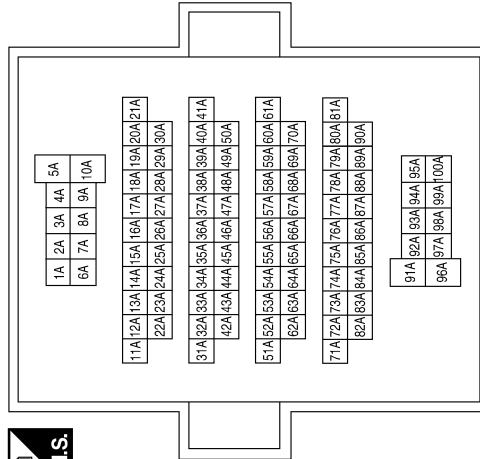

Connector No.	M157
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8



Terminal No.	Color of Wire	Signal Name
3	V	-
4	L	-
10	BR	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32



Terminal No.	Color of Wire	Signal Name
31	W	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17



Terminal No.	Color of Wire	Signal Name
21	G	-

ABKIA4750GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Terminal No.	Color of Wire	Signal Name
8	V	-
9	L	-
10	SB	-
11	LG	-

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-
3	B	-

Terminal No.	Color of Wire	Signal Name
5	Y	- (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)
8	B	-

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4		
5	6	7	8	9	10



Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE

4	3	2	1
---	---	---	---



Connector No.	M170
Connector Name	JOINT CONNECTOR-M09
Connector Color	WHITE

11	10	9	8	7	6	5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12
33	32	31	30	29	28	27	26	25	24	23



Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40



Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Terminal No.	Color of Wire	Signal Name
28	W	-
29	W	-
30	W	-

Terminal No.	Color of Wire	Signal Name
39	W	-

ABKIA4751GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Connector No.	B51
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5	4			3	2	1
12	11	10	9	8	7	6

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
3	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

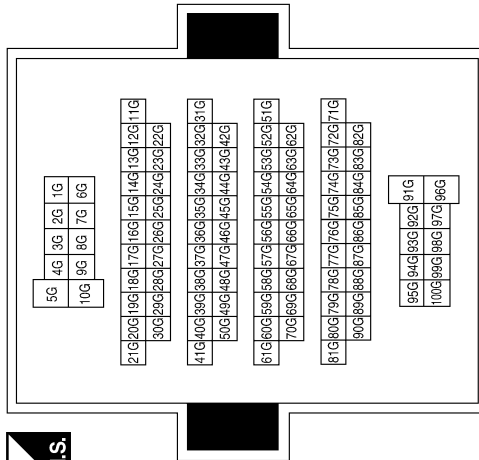

Terminal No.	Color of Wire	Signal Name
10G	P	-

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32



Terminal No.	Color of Wire	Signal Name
21	LG	-

Terminal No.	Color of Wire	Signal Name
66A	L	-
94A	SB	-
95A	BR	-
100A	Y	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

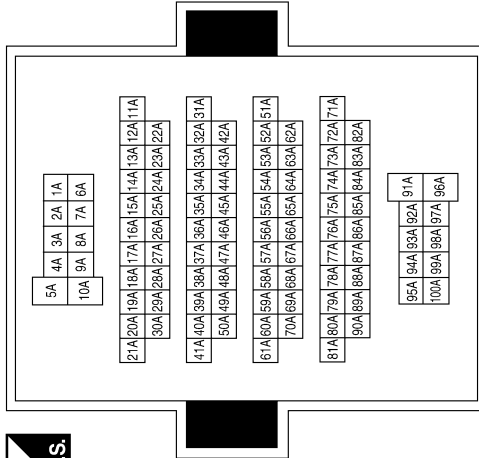

Connector No.	B161
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Connector No.	B139
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5	4	3	2	1
12	11	10	9	8
7	6			

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
3	SB	-
4	Y	-
10	BR	-

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-

Terminal No.	Color of Wire	Signal Name
3	LG	-

ABKIA4753GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


PWC

POWER WINDOW SYSTEM

< WIRING DIAGRAM >


[LH & RH FRONT AUTO UP/DOWN]

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-
3	Y	-
4	LG	-
5	SB	-
6	BR	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
39	Y	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-
3	B	-
8	V	-
9	L	-
10	SB	-
11	LG	-

Connector No.	D24
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
17	Y	MOTOR DR UP
18	Y	B+
19	L	MOTOR DR DOWN

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
4	B	-
5	SB	-
6	BR	-

ABKIA4754GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Connector No.	D25	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)	Signal Name
Connector Name	WIRE TO WIRE		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
1	B	GND
2	-	-
3	BR	KEY CYL LOCK
4	SB	ENCODER SIG-2 (ULP)

Terminal No.	Color of Wire	Signal Name
5	Y	ENCODER SIG-1 (DLP)
6	L	MOTOR RR DOWN
7	V	MOTOR RR UP
8	LG	MOTOR RL DOWN
9	SB	MOTOR RL UP
10	BR	IGN
11	Y	COM
12	BR	ENCODER GND
13	-	-
14	LG	ENCODER +
15	SB	UNLOCK CDL
16	-	-

Terminal No.	Color of Wire	Signal Name
31	Y	-

Connector No.	D101	WIRE TO WIRE	Signal Name
Connector Name	WIRE TO WIRE		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	Y	COM
4	LG	ENCODER
5	BG	ENCODER +
6	-	-
7	B	GND
8	BR	BAT
9	V	ENCODER SIG1
10	W	ENCODER SIG2
11	L	MOTOR UP
12	BR	MOTOR DOWN

Connector No.	D102	WIRE TO WIRE	Signal Name
Connector Name	WIRE TO WIRE		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
5	BR	-
8	B	-

Connector No.	D105	FRONT POWER WINDOW MOTOR RH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)	Signal Name
Connector Name	FRONT POWER WINDOW MOTOR RH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
1	L	-
2	BR	-
3	LG	-
4	W	-
5	BG	-
6	V	-

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	Y	COM
4	LG	ENCODER
5	BG	ENCODER +
6	-	-
7	B	GND
8	BR	BAT
9	V	ENCODER SIG1
10	W	ENCODER SIG2
11	L	MOTOR UP
12	BR	MOTOR DOWN

Connector No.	D129	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)	Signal Name
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	Y	COM
4	LG	ENCODER
5	BG	ENCODER +
6	-	-
7	B	GND
8	BR	BAT
9	V	ENCODER SIG1
10	W	ENCODER SIG2
11	L	MOTOR UP
12	BR	MOTOR DOWN

ABKIA6403GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

[LH & RH FRONT AUTO UP/DOWN]

Connector No.	D208
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name
2	B	-
4	BR	-
5	V	-
6	LG	-
7	Y	-
8	SB	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	WHITE



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-

Connector No.	D308
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name
2	B	-
4	BR	-
5	V	-
6	LG	-
7	Y	-
8	SB	-

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	WHITE



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
3	B	-
4	Y	-
5	SB	-
8	BR	-

ABKIA6402GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[LH & RH FRONT AUTO UP/DOWN]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000011153998

OVERALL SEQUENCE

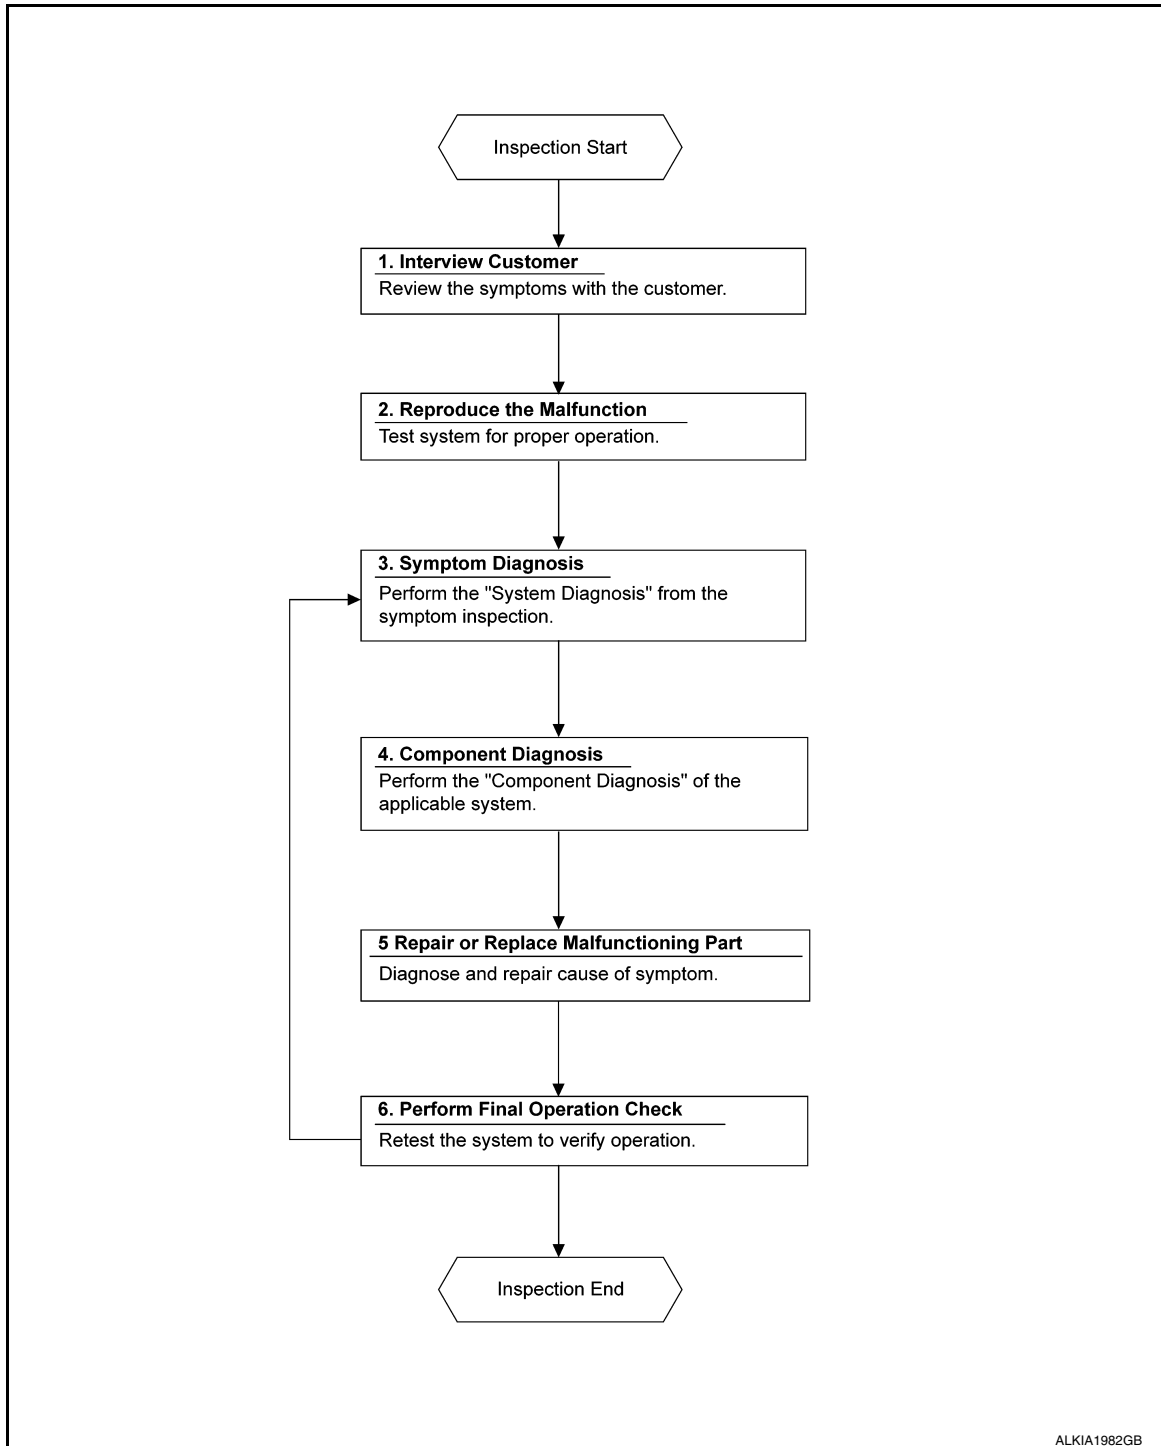

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[LH & RH FRONT AUTO UP/DOWN]

>> GO TO 2.

2. CONFIRM THE SYMPTOM

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH SYMPTOM DIAGNOSIS

Use Symptom diagnosis from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4. PERFORM THE COMPONENT DIAGNOSIS OF THE OF THE APPLICABLE SYSTEM

Perform the diagnosis with Component diagnosis of the applicable system.

>> GO TO 5.

5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3.

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

< BASIC INSPECTION >

[LH & RH FRONT AUTO UP/DOWN]

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

Description

INFOID:0000000011153999

When the negative battery terminal is disconnected, the initialization is necessary for normal operation of power window system.

CAUTION:

The following specified operations can not be performed under the non-initialized condition.

- Auto-up operation
- Anti-pinch function

Work Procedure

INFOID:0000000011154000

1.SYSTEM INITIALIZATION

Perform system initialization. Refer to [PWC-93. "Work Procedure"](#).

>> GO TO 2.

2.CHECK ANTI-PINCH FUNCTION

Check anti-pinch function. Refer to [PWC-94. "Work Procedure"](#).

>> Inspection End.

PWC

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[LH & RH FRONT AUTO UP/DOWN]

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

Description

INFOID:0000000011154001

When the negative battery terminal is disconnected, the initialization is necessary for normal operation of power window system.

CAUTION:

The following specified operations can not be performed under the non-initialized condition.

- Auto-up operation
- Anti-pinch function

Work Procedure

INFOID:0000000011154002

1.SYSTEM INITIALIZATION

Perform system initialization. Refer to [PWC-93. "Work Procedure"](#).

>> GO TO 2.

2.CHECK ANTI-PINCH FUNCTION

Check anti-pinch function. Refer to [PWC-94. "Work Procedure"](#).

>> Inspection End.

SYSTEM INITIALIZATION

Description

INFOID:0000000011154003

If any of the following operations are performed, the initialization is necessary for normal operation of power window system.

- When control unit replaced.
- Electric power supply to power window switch or motor is interrupted by blown fuse or disconnection and connection of the negative battery terminal.
- Removal and installation of regulator assembly.
- Power supply to the power window main switch or power window motor is cut off by the removal of battery terminal or if the battery fuse is blown.
- Disconnection and connection of power window main switch harness connector.
- Removal and installation of motor from regulator assembly.
- Operation of regulator assembly as an independent unit.
- Removal and installation of door glass.
- Removal and installation of door glass run.

The following specified operations can not be performed under the non-initialized condition.

- Auto-up operation
- Anti-pinch function

Work Procedure

INFOID:0000000011154004

1.STEP 1

1. Disconnect battery negative terminal or power main switch connector. Reconnect it after a minute or more.
2. Turn ignition switch ON.
3. Operate the power window switch to fully open the window. (This operation is not necessary if the window is already fully open).
4. Continue pulling the power window switch UP (AUTO-UP operation). Even after the glass stops at fully closed position, keep pulling the switch for 4 seconds or more.
5. Retest the AUTO-UP function operation.

>> GO TO 2.

2.STEP 2

Check anti-pinch function. Refer to [PWC-94, "Work Procedure"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

CHECK ANTI-PINCH FUNCTION

< BASIC INSPECTION >

[LH & RH FRONT AUTO UP/DOWN]

CHECK ANTI-PINCH FUNCTION

Description

INFOID:0000000011154005

If any of the following operations are performed, the initialization is necessary for normal operation of power window system.

- When control unit is replaced.
- Electric power supply to power window switch or motor is interrupted by blown fuse or disconnection and connection of the negative battery terminal.
- Removal and installation of regulator assembly.
- Power supply to the power window main switch or power window motor is cut off by the removal of battery terminal or if the battery fuse is blown.
- Disconnection and connection of power window main switch harness connector.
- Removal and installation of motor from regulator assembly.
- Operation of regulator assembly as an independent unit.
- Removal and installation of door glass.
- Removal and installation of door glass run.

The following specified operations can not be performed under the non-initialized condition.

- Auto-up operation
- Anti-pinch function

Work Procedure

INFOID:0000000011154006

1. CHECK ANTI-PINCH FUNCTION

- Fully open the door window.
- Place a piece of wood near fully closed position.
- Close door glass completely with AUTO-UP.
- Check the following conditions
 - Check that glass lowers for approximately 150 mm (5.91 in.) without pinching piece of wood and stops.
 - Check that glass does not rise not when operating the power window main switch while lowering.

CAUTION:

- **Perform initial setting when AUTO-UP operation or anti-pinch function does not operate normally.**
- **Check that AUTO-UP operates before inspection when system initialization is performed.**
- **Do not check with hands and other body parts because they may be pinched. Do not get pinched.**

>> Inspection End.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:0000000011616201

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	O (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M81.

2. Check voltage between BCM connector M81 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M81	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M81 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M81	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Description

INFOID:0000000011154008

- BCM supplies power.
- It operates each power window motor via corresponding power window switch and makes window move up/down when main power window and door lock/unlock switch is operated.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:0000000011154009

Main Power Window And Door Lock/unlock Switch

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH FUNCTION

Check power window motor operation with main power window and door lock/unlock switch.

Is the inspection result normal?

- YES >> Main power window and door lock/unlock switch power supply and ground circuit are OK.
NO >> Refer to [PWC-96, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:0000000011154010

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Main Power Window And Door Lock/unlock Switch Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between main power window and door lock/unlock switch connectors and ground.

Terminal		Voltage (Approx.)
(+)	(-)	
Main power window and door lock/unlock switch connector	Terminal	
D25	10	Battery voltage
D24	18	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM, main power window and door lock/unlock switch, power window and door lock/unlock switch RH, rear power window switch LH and rear power window switch RH.
3. Check continuity between BCM connector and main power window and door lock/unlock switch connectors.

BCM connector	Terminal	Main power window and door lock/unlock switch connector	Terminal	Continuity
M81	140	D25	10	Yes
	141	D24	18	

4. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	140		No
	141		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the harness or connectors.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector D25 and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D25	1		Yes

Is the inspection result normal?

- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch LH) GO TO 5.
- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch RH) GO TO 6.
- YES >> Check main power window and door lock/unlock switch output signal (front power window switch LH) GO TO 7.
- NO >> Repair or replace the harness and connectors.

4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M81 and ground.

Terminals			Voltage (Approx.)
(+)	(-)		
BCM connector	Terminal		
M81	140	Ground	Battery voltage
	141		

Is the measurement value within the specification?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

5. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POWER WINDOW SWITCH LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector D25 and ground.

Terminal			Window switch position (rear LH)	Voltage (Approx.)
(+)		(−)		
Main power window and door lock/unlock switch connector	Terminal			
D25	9	Ground	UP	Battery voltage
			DOWN	0
	8		UP	0
			DOWN	Battery voltage

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-99, "POWER WINDOW MAIN SWITCH : Special Repair Requirement"](#).

6. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POWER WINDOW SWITCH RH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector D25 and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Terminal		Window switch position (rear RH)	Voltage (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D25	7	UP	Battery voltage
		DOWN	0
	6	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#).

7. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (FRONT POWER WINDOW SWITCH LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector D25 and ground.

Terminal		Window switch position (front LH)	Voltage (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D25	17	UP	Battery voltage
		DOWN	0
	19	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#).

POWER WINDOW MAIN SWITCH : Component Inspection

INFOID:0000000011154011

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

1. Check main power window and door lock/unlock switch D25.

Terminal		Main power window and door lock/unlock switch condition	Continuity
10	9	Rear LH	Yes
10	7	Rear RH	
8	9	Rear LH	
6	7	Rear RH	
10	8	Rear LH	
10	6	Rear RH	
1	12	-	

2. Check continuity between main power window and door lock/unlock switch D25 (power window lock switch). (Lock operation).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Terminal		Main power window and door lock/unlock switch condition		Continuity	
9	1	Rear LH	UP	No	
7		Rear RH			
8		Rear LH	NEUTRAL		
9					Rear RH
7		Rear LH			
6					Rear RH
8		Rear LH			
6			Rear RH		

3. Check continuity between main power window and door lock/unlock switch D25 (power window lock switch). (Unlock operation).

Terminal		Main power window and door lock/unlock switch condition		Continuity
9	1	Rear LH	UP	Yes
7		Rear RH		
8		Rear LH	NEUTRAL	
9				
6		Rear RH		
7				
8		Rear LH	DOWN	
6				

Is the inspection result normal?

YES >> Main power window and door lock/unlock switch is OK.

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-99, "POWER WINDOW MAIN SWITCH : Special Repair Requirement"](#).

POWER WINDOW MAIN SWITCH : Special Repair Requirement

INFOID:0000000011154012

PWC

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.

Refer to [PWC-94, "Work Procedure"](#).

Is the inspection result normal?

YES >> Inspection end.

NO >> Refer to [PWC-111, "DRIVER SIDE : Component Function Check"](#).

FRONT POWER WINDOW SWITCH

FRONT POWER WINDOW SWITCH : Description

INFOID:0000000011154013

- BCM supplies power.
- Front power window motor RH will be operated if power window and door lock/unlock switch RH is operated.

FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:0000000011154014

Power Window And Door Lock/unlock Switch RH

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

1. CHECK FRONT POWER WINDOW MOTOR RH FUNCTION

Check front power window motor RH operation with power window and door lock/unlock switch RH.

Is the inspection result normal?

YES >> Power window and door lock/unlock switch RH power supply and ground circuit are OK.

NO >> Refer to [PWC-100, "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

FRONT POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:0000000011154015

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Power Window And Door Lock/unlock Switch RH Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT

Check voltage between power window and door lock/unlock switch RH connector D129 and ground.

Terminal			Voltage (Approx.)
(+)		(-)	
Power window and door lock/unlock switch RH connector	Terminal		
D129	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and power window and door lock/unlock switch RH.
3. Check continuity between BCM connector M81 and power window and door lock/unlock switch RH connector D129.

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M81	141	D129	8	Yes

4. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	141		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness or connectors.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector D129 and ground.

Power window and door lock/unlock switch RH	Terminal	Ground	Continuity
D129	7		Yes

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the harness or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M81 and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM connector	Terminal	
M81	141	Battery voltage

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

FRONT POWER WINDOW SWITCH : Special Repair Requirement

INFOID:0000000011154016

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.
Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.
Refer to [PWC-94, "Work Procedure"](#).

Is the inspection result normal?

- YES >> Inspection end.
NO >> Refer to [PWC-113, "PASSENGER SIDE : Component Function Check"](#).

REAR POWER WINDOW SWITCH

REAR POWER WINDOW SWITCH : Description

INFOID:0000000011154017

- BCM supplies power.
- Rear power window motor will be operated if rear power window switch is operated. Rear power window switch.

REAR POWER WINDOW SWITCH : Component Function Check

INFOID:0000000011154018

Rear Power Window Switch

1. CHECK REAR POWER WINDOW MOTOR FUNCTION

Check rear power window motor operation with rear power window switch.

Is the inspection result normal?

- YES >> Rear power window switch power supply and ground circuit are OK.
NO >> Refer to [PWC-101, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

REAR POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:0000000011154019

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Rear Power Window Switch Power Supply Circuit Check

1. CHECK POWER SUPPLY CIRCUIT

Check voltage between rear power window switch connector and ground.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Terminal				Condition	Voltage (Approx.)
(+)		(-)			
Rear power window switch connector	Terminal				
LH	D208	4	Ground	Ignition switch ON	Battery voltage
RH	D308				

Is the inspection result normal?

- YES >> GO TO 2 (Rear power window switch LH).
 YES >> GO TO 3 (Rear power window switch RH).
 NO >> GO TO 4.

2. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH LH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch LH.
3. Check continuity between main power window and door lock/unlock switch connector D25 and rear power window switch LH connector D208.

Main power window and door lock/ unlock switch connector	Terminal	Rear power window switch LH connector	Terminal	Continuity
D25	8	D208	7	Yes
	9		8	

4. Check continuity between main power window and door lock/unlock switch connector D25 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D25	8		No
	9		

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Repair or replace the harness or connectors.

3. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH RH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch RH.
3. Check continuity between main power window and door lock/unlock switch connector D25 and rear power window switch RH connector D308.

Main power window and door lock/ unlock switch connector	Terminal	Rear power window switch RH connector	Terminal	Continuity
D25	6	D308	7	Yes
	7		8	

4. Check continuity between main power window and door lock/unlock switch connector D25 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D25	6		No
	7		

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Repair or replace the harness or connectors.

4. CHECK HARNESS CONTINUITY

1. Disconnect BCM and rear power window switch.
2. Check continuity between BCM connector and rear power window switch connector.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

BCM connector	Terminal	Rear power window switch connector		Terminal	Continuity
M81	140	LH	D208	4	Yes
		RH	D308		

3. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	140		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Repair or replace the harness or connectors.

5. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Refer to [PWC-103, "REAR POWER WINDOW SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace rear power window switch. Refer to [PWC-139, "Removal and Installation"](#).

REAR POWER WINDOW SWITCH : Component Inspection

INFOID:0000000011154020

COMPONENT INSPECTION

1.CHECK REAR POWER WINDOW SWITCH LH

Check rear power window switch LH D208.

Terminal		Power window switch condition	Continuity
4	5	UP	Yes
7	6		
7	6	NEUTRAL	
8	5		
4	6	DOWN	
5	8		

Is the inspection result normal?

YES >> Rear power window switch LH is OK.

NO >> Replace rear power window switch. Refer to [PWC-139, "Removal and Installation"](#).

2.CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH D308.

Terminal		Power window switch condition	Continuity
4	5	UP	Yes
7	6		
7	6	NEUTRAL	
8	5		
4	6	DOWN	
5	8		

Is the inspection result normal?

YES >> Rear power window switch RH is OK.

NO >> Replace rear power window switch. Refer to [PWC-139, "Removal and Installation"](#).

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW MOTOR DRIVER SIDE

DRIVER SIDE : Description

INFOID:0000000011154021

Door glass moves UP/DOWN by receiving the signal from power window main switch.

DRIVER SIDE : Component Function Check

INFOID:0000000011154022

1. CHECK POWER WINDOW MOTOR CIRCUIT

Check front power window motor LH operation with operating main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Refer to [PWC-104, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011154023

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Front Power Window Motor LH Circuit Check

1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL

1. Disconnect front power window motor LH.
2. Turn ignition switch ON.
3. Check voltage between front power window motor LH connector D9 and ground.

Terminal		Main power window and door lock/unlock switch condition	Voltage (Approx.)
(+)	(-)		
Power window motor LH connector	Terminal		
D9	1	UP	Battery voltage
		DOWN	0
	2	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and front power window motor LH.
3. Check continuity between main power window and door lock/unlock switch connector D24 and front power window motor connector LH D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D24	17	D9	1	Yes
	19		2	

4. Check continuity between main power window and door lock/unlock switch connector D24 and ground.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D24	17		No
	19		

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

3. CHECK POWER WINDOW MOTOR

Check front power window motor LH.

Refer to [PWC-105, "DRIVER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace power window motor LH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

DRIVER SIDE : Component Inspection

INFOID:0000000011154024

COMPONENT INSPECTION

1. CHECK FRONT POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to power window motor D9.

Terminal		Motor condition
(+)	(-)	
2	1	DOWN
1	2	UP

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Replace front power window motor LH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

DRIVER SIDE : Special Repair Requirement

INFOID:0000000011154025

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.

Refer to [PWC-94, "Work Procedure"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-111, "DRIVER SIDE : Component Function Check"](#).

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:0000000011154026

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

PASSENGER SIDE : Component Function Check

INFOID:0000000011154027

1. CHECK POWER WINDOW MOTOR CIRCUIT

Check power window motor operation with operating main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Refer to [PWC-106, "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000011154028

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Front Power Window Motor RH Circuit Check

1. CHECK FRONT POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front power window motor RH.
3. Turn ignition switch ON.
4. Check voltage between front power window motor RH connector D105 and ground.

Terminal		Front power window motor RH condition	Voltage (Approx.)
(+)	(-)		
Front power window motor RH connector	Terminal		
D105	1	UP	Battery voltage
		DOWN	0
	2	UP	0
		DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector D129 and front power window motor RH connector D105.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D129	11	D105	1	Yes
	12		2	

4. Check continuity between power window and door lock/unlock switch RH connector D129 and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D129	11		No
	12		

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-138, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace harness or connectors.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

3. CHECK FRONT POWER WINDOW MOTOR RH

Check front power window motor RH.

Refer to [PWC-107, "PASSENGER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace front power window motor RH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-94, "Work Procedure"](#).

PASSENGER SIDE : Component Inspection

INFOID:0000000011154029

COMPONENT INSPECTION

1. CHECK FRONT POWER WINDOW MOTOR RH

Check motor operation by connecting the battery voltage directly to front power window motor RH D105.

Terminal		Motor condition
(+)	(-)	
1	2	UP
2	1	DOWN

Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Replace front power window motor RH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

PASSENGER SIDE : Special Repair Requirement

INFOID:0000000011154030

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.

Refer to [PWC-94, "Work Procedure"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-113, "PASSENGER SIDE : Component Function Check"](#).

REAR LH

REAR LH : Description

INFOID:0000000011154031

Door glass moves UP/DOWN by receiving the signal from power window main switch or rear power window switch LH.

REAR LH : Component Function Check

INFOID:0000000011154032

1. CHECK REAR POWER WINDOW MOTOR LH CIRCUIT

Check rear power window motor LH operation with main power window and door lock/unlock switch or rear power window switch LH.

Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Refer to [PWC-108, "REAR LH : Diagnosis Procedure"](#)

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

REAR LH : Diagnosis Procedure

INFOID:0000000011154033

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Power Window Motor Circuit Check

1. CHECK REAR POWER WINDOW SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor LH connector.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor LH connector D204 and ground.

Terminal		Window condition	Voltage (Approx.)
(+)	(-)		
Rear power window motor LH connector	Terminal		
D204	2	UP	Battery voltage
		DOWN	0
	1	UP	0
		DOWN	Battery voltage

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH.
3. Check continuity between rear power window switch LH connector D208 and rear power window motor LH connector D204.

Rear power window switch LH connector	Terminal	Rear power window motor LH connector	Terminal	Continuity
D208	5	D204	2	Yes
	6		1	

4. Check continuity between rear power window switch LH connector D208 and ground.

Rear power window switch LH connector	Terminal	Ground	Continuity
D208	5		No
	6		

Is the inspection result normal?

- YES >> Check rear power window switch LH. Refer to [PWC-103, "REAR POWER WINDOW SWITCH : Component Inspection"](#).
NO >> Repair or replace the harness or connectors.

3. CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-108, "REAR LH : Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
NO >> Replace rear power window motor LH. Refer to [GW-19, "Removal and Installation"](#).

REAR LH : Component Inspection

INFOID:0000000011154034

COMPONENT INSPECTION

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

1. CHECK REAR POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to rear power window motor LH D204.

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Replace rear power window motor LH. Refer to [GW-19, "Removal and Installation"](#).

REAR RH

REAR RH : Description

INFOID:0000000011154035

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or rear power window switch RH.

REAR RH : Component Function Check

INFOID:0000000011154036

1. CHECK REAR POWER WINDOW MOTOR RH CIRCUIT

Check rear power window motor RH operation with operating main power window and door lock/unlock switch or rear power window switch RH.

Is the inspection result normal?

YES >> Rear power window motor RH is OK.

NO >> Refer to [PWC-109, "REAR RH : Diagnosis Procedure"](#).

REAR RH : Diagnosis Procedure

INFOID:0000000011154037

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Rear Power Window Motor RH Circuit Check

1. CHECK REAR POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor RH.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor RH connector D304 and ground.

Terminal			Rear power window switch RH condition	Voltage (Approx.)
(+)		(-)		
Rear power window motor RH connector	Terminal			
D304	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window switch RH.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

3. Check continuity between rear power window switch RH connector D308 and rear power window motor RH connector D304.

Rear power window switch RH connector	Terminal	Rear power window motor RH connector	Terminal	Continuity
D308	5	D304	2	Yes
	6		1	

4. Check continuity between rear power window switch RH connector D308 and ground.

Rear power window switch RH connector	Terminal	Ground	Continuity
D308	5		No
	6		

Is the inspection result normal?

YES >> Check rear power window switch RH. Refer to [PWC-103, "REAR POWER WINDOW SWITCH : Component Inspection"](#).

NO >> Repair or replace the harness or connectors.

3. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-110, "REAR RH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace rear power window motor RH. Refer to [GW-19, "Removal and Installation"](#).

REAR RH : Component Inspection

INFOID:0000000011154038

COMPONENT INSPECTION

1. CHECK REAR POWER WINDOW MOTOR RH

Check motor operation by connecting the battery voltage directly to rear power window motor RH D304.

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

Is the inspection result normal?

YES >> Rear power window motor RH is OK.

NO >> Replace rear power window motor RH. Refer to [GW-19, "Removal and Installation"](#).

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

ENCODER DRIVER SIDE

DRIVER SIDE : Description

INFOID:0000000011154039

Detects condition of the front power window motor LH operation and transmits to main power window and door lock/unlock switch as pulse signal.

DRIVER SIDE : Component Function Check

INFOID:0000000011154040

1. CHECK ENCODER OPERATION

Check front door glass LH perform AUTO open/close operation normally when operating main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-111, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011154041


Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Encoder Circuit Check

1. CHECK ENCODER OPERATION

1. Turn ignition switch ON.
2. Check signal between main power window and door lock/unlock switch connector D25 and ground with oscilloscope.

Signal name	Terminals			Signal (Reference value)
	(+)		(−)	
	Main power window and door lock/unlock switch connector	Terminal		
Encoder signal 1	D25	5	Ground	Refer to following signal
Encoder signal 2		4		

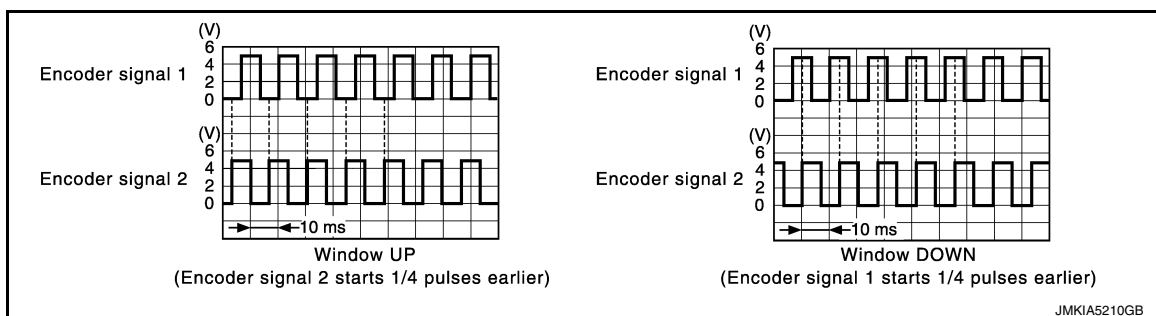

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 2.

2. CHECK FRONT POWER WINDOW MOTOR LH POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front power window motor LH connector D9 and ground.

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Terminal			Voltage (Approx.)
(+)		(−)	
Front power window motor LH connector	Terminal		
D9	4	Ground	

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and front power window motor LH.
3. Check continuity between main power window and door lock/unlock switch connector D25 and front power window motor LH connector D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D25	14	D9	4	Yes

4. Check continuity between main power window and door lock/unlock switch connector D25 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D25	14		No

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front power window motor LH.
3. Check continuity between front power window motor LH connector D9 and ground.

Front power window motor LH connector	Terminal	Ground	Continuity
D9	6		Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. CHECK HARNESS CONTINUITY 2

1. Disconnect main power window and door lock/unlock switch.
2. Check continuity between main power window and door lock/unlock switch connector D25 and front power window motor LH connector D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D25	12	D9	6	Yes

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

6. CHECK HARNESS CONTINUITY 3

1. Disconnect main power window and door lock/unlock switch.

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

2. Check continuity between main power window and door lock/unlock switch connector D25 and front power window motor LH connector D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D25	5	D9	3	Yes
	4		5	

3. Check continuity between main power window and door lock/unlock switch connector D25 and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D25	5	Ground	No
	4		

Is the inspection result normal?

YES >> Replace front power window motor LH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:0000000011154042

Detects condition of the front power window motor RH operation and transmits to power window and door lock/unlock switch RH as pulse signal.

PASSENGER SIDE : Component Function Check

INFOID:0000000011154043

1. CHECK ENCODER OPERATION

Check front door glass RH perform AUTO open/close operation normally when operating power window and door lock/unlock switch RH.

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-113, "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000011154044

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

1. CHECK ENCODER SIGNAL


1. Connect front power window motor RH.
2. Turn ignition switch ON.
3. Check signal between power window and door lock/unlock switch RH connector D129 and ground with oscilloscope.

Signal name	Terminals			Signal (Reference value)
	(+)		(-)	
	Power window and door lock/unlock switch RH connector	Terminal		
Encoder signal 1	D129	9	Ground	Refer to following signal
Encoder signal 2		10		

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

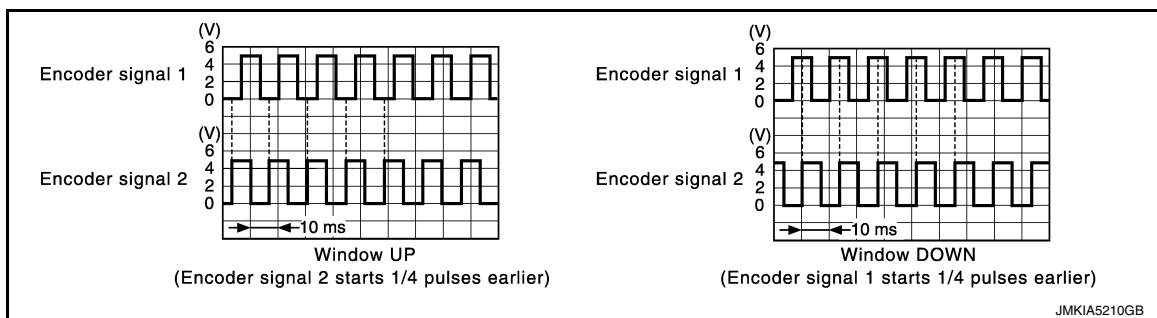

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 2.

2. CHECK FRONT POWER WINDOW MOTOR RH POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front power window motor RH connector D105 and ground.

Terminal			Voltage (Approx.)
(+)		(–)	
Front power window motor RH connector	Terminal		
D105	5	Ground	10

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH and front power window motor RH.
3. Check continuity between power window and door lock/unlock switch RH connector D129 and front power window motor RH connector D105.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D129	5	D105	5	Yes

4. Check continuity between power window and door lock/unlock switch RH connector D129 and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D129	5		No

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-138, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front power window motor RH.
3. Check continuity between front power window motor RH connector D105 and ground.

Front power window motor RH connector	Terminal	Ground	Continuity
D105	3		Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

ENCODER

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

5. CHECK HARNESS CONTINUITY 2

1. Disconnect power window and door lock/unlock switch RH.
2. Check continuity between power window and door lock/unlock switch RH connector D129 and front power window motor RH connector D105.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D129	4	D105	3	Yes

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-138, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

6. CHECK HARNESS CONTINUITY 3

1. Disconnect power window and door lock/unlock switch RH.
2. Check continuity between power window and door lock/unlock switch RH connector D129 and front power window motor RH connector D105.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D129	9	D105	6	Yes
	10		4	

3. Check continuity between power window and door lock/unlock switch RH connector D129 and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D129	9		No
	10		

Is the inspection result normal?

YES >> Replace front power window motor RH. Refer to [GW-14, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace the harness or connectors.

PWC

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

DOOR SWITCH

Component Function Check

INFOID:0000000011154045

1.CHECK FUNCTION

1. Select DOOR LOCK of BCM using CONSULT.
2. Select DOOR SW-DR, DOOR SW-AS, DOOR SW-RL, DOOR SW-RR, in DATA MONITOR mode.
3. Check that the function operates normally according to the following conditions.

Monitor item	Condition		Status
DOOR SW-DR	Driver side door	Open	On
		Closed	Off
DOOR SW-AS	Passenger side door	Open	On
		Closed	Off
DOOR SW-RL	Rear door LH	Open	On
		Closed	Off
DOOR SW-RR	Rear door RH	Open	On
		Closed	Off

Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [PWC-116. "Diagnosis Procedure"](#).


Diagnosis Procedure

INFOID:0000000011154046

Regarding Wiring Diagram information, refer to [DLK-75. "Wiring Diagram"](#).

1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check signal between malfunctioning door switch harness connector and ground using oscilloscope.

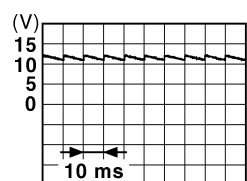(+)		Terminal	(-)	Signal (Reference value)
Door switch				
Connector				
Driver side	B8	3	Ground	 11.8 V
Passenger side	B108			
Rear LH	B18			
Rear RH	B116			

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between door switch harness connector and BCM harness connector.

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Door switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B8	M20	96	Yes
Passenger side	B108		94	
Rear LH	B18		82	
Rear RH	B116		93	

3. Check continuity between door switch harness connector and ground.

Door switch		Ground	Continuity
Connector	Terminal		
Driver side	B8	3	No
Passenger side	B108		
Rear LH	B18		
Rear RH	B116		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK DOOR SWITCH

Refer to [PWC-117, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning door switch. Refer to [DLK-315, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011154047

PWC

1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check continuity between door switch terminals.

Door switch		Condition		Continuity
Terminal				
3	Ground contact is part of the switch.	Door switch	Pressed	No
			Released	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace malfunction door switch. Refer to [DLK-315, "Removal and Installation"](#).

POWER WINDOW LOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW LOCK SWITCH

Description

INFOID:0000000011154048

Ground circuit of main power window and door lock/unlock switch shuts off if power window lock switch of main power window and door lock/unlock switch is operated. This inhibits all operation, except for the main switch.

Component Function Check

INFOID:0000000011154049

1. CHECK POWER WINDOW LOCK SIGNAL

Exchange for a normal main power window and door lock/unlock switch, and check operation.

Does power window lock operate?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-118, "Special Repair Requirement"](#).
NO >> Check condition of harness and connector.

Special Repair Requirement

INFOID:0000000011154050

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-91, "Work Procedure"](#).

Is the inspection result normal?

- YES >> Inspection end.
NO >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

POWER WINDOW SERIAL LINK

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW SERIAL LINK

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Description

INFOID:0000000011154051

Main power window and door lock/unlock switch, power window and door lock/unlock switch RH and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to main power window and door lock/unlock switch and power window and door lock/unlock switch RH

- Keyless power window down signal

The signal mentioned below is transmitted from main power window and door lock/unlock switch to power window and door lock/unlock switch RH

- Front door window RH operation signal
- Power window control by key cylinder switch signal
- Power window lock switch signal
- Retained power operation signal

POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:0000000011154052

1. CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

Check ("CDL LOCK SW ", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT. Refer to [BCS-15, "DOOR LOCK : CONSULT Function \(BCM - DOOR LOCK\)"](#).

Monitor item	Condition
CDL LOCK SW	LOCK : ON
	UNLOCK : OFF
CDL UNLOCK SW	LOCK : OFF
	UNLOCK : ON

Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> Refer to [PWC-119, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:0000000011154053

PWC

Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Power Window Serial Link Check

1. CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

1. Remove Intelligent Key, and close front door LH and RH.
2. Check signal between BCM connector and ground with oscilloscope when door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".
3. Check that signals which are shown in the figure below can be detected during 10 second just after door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".

POWER WINDOW SERIAL LINK

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Terminal			Signal (Reference value)
(+)		(-)	
BCM connector	Terminal		
M81	54	Ground	

(V)

10 ms

PIIA1297E

Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> GO TO 2.

2. CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM and main power window and door lock/unlock switch.
3. Check continuity between BCM connector M81 and main power window and door lock/unlock switch connector D25.

BCM connector	Terminal	Main power window and door lock/unlock switch connector	Terminal	Continuity
M81	54	D25	11	Yes

4. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	54		No

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).

NO >> Repair or replace harness or connectors.

FRONT POWER WINDOW SWITCH

FRONT POWER WINDOW SWITCH : Description

INFOID:0000000011154054

Main power window and door lock/unlock switch, power window and door lock/unlock switch RH and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to main power window and door lock/unlock switch and power window and door lock/unlock switch RH

- Keyless power window down signal

The signal mentioned below is transmitted from main power window and door lock/unlock switch to power window and door lock/unlock switch RH

- Front door window RH operation signal
- Power window control by key cylinder switch signal
- Retained power operation signal
- Power window lock switch signal

FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:0000000011154055

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH OUTPUT SIGNAL

Check ("CDL LOCK SW", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT. Refer to [BCS-15, "DOOR LOCK : CONSULT Function \(BCM - DOOR LOCK\)"](#).

POWER WINDOW SERIAL LINK

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

Monitor item	Condition
CDL LOCK SW	LOCK : ON
	UNLOCK : OFF
CDL UNLOCK SW	LOCK : OFF
	UNLOCK : ON

Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> Refer to [PWC-121, "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

FRONT POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:000000011154056


Regarding Wiring Diagram information, refer to [PWC-80, "Wiring Diagram - With Left & Right Front Auto Up/Down"](#).

Power Window Serial Link Check

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

1. Remove Intelligent Key, and close the front door LH and RH.
2. Check signal between BCM connector and ground with oscilloscope when door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".
3. Check that signals which are shown in the figure below can be detected during 10 second just after door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".

Terminal		Signal (Reference value)
(+)	(-)	
BCM connector	Terminal	
M81	54	Ground

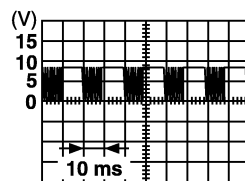

Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> GO TO 2.

2. CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check continuity between BCM connector M81 and power window and door lock/unlock switch RH connector D129.

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M81	54	D129	3	Yes

4. Check continuity between BCM connector M81 and ground.

BCM connector	Terminal	Ground	Continuity
M81	54		No

Is the inspection result normal?

POWER WINDOW SERIAL LINK

< DTC/CIRCUIT DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

-
- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-137, "Removal and Installation"](#). After that, refer to [PWC-93, "Work Procedure"](#).
- NO >> Repair or replace the harness or connectors.

SYMPTOM DIAGNOSIS

POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH

Diagnosis Procedure

INFOID:0000000011154057

1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.

Refer to [BCS-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Check main power window and door lock/unlock switch.

Refer to [PWC-98, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window switch main power supply and ground circuit.

Refer to [PWC-96, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH SERIAL CIRCUIT

Check main power window and door lock/unlock switch serial circuit.

Refer to [PWC-119, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011154058

1. CHECK FRONT POWER WINDOW MOTOR LH

Check front power window motor LH.

Refer to [PWC-104, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011154059

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-99, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH SERIAL LINK CIRCUIT

Check power window and door lock/unlock switch RH serial link circuit.

Refer to [PWC-120, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

Check front power window motor RH circuit.

Refer to [PWC-106, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011154060

1. CHECK REAR POWER WINDOW SWITCH LH

Check rear power window switch LH.

Refer to [PWC-101, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-107, "REAR LH : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011154061

1. CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-101, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-109, "REAR RH : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (DRIVER SIDE)

Diagnosis Procedure

INFOID:0000000011154062

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK DOOR WINDOW SLIDING PART

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK ENCODER CIRCUIT

Check encoder circuit.

Refer to [PWC-111, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (PASSENGER SIDE)

Diagnosis Procedure

INFOID:0000000011154063

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.
Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2. CHECK DOOR WINDOW SLIDING PART

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3. CHECK ENCODER CIRCUIT

Check encoder circuit.
Refer to [PWC-113, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

Diagnosis Procedure

INFOID:0000000011154064

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK ENCODER

Check encoder.

Refer to [PWC-111, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE)

< SYMPTOM DIAGNOSIS > [LH & RH FRONT AUTO UP/DOWN]

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE)

Diagnosis Procedure

INFOID:0000000011154065

1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.
Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace the malfunctioning parts.

2. CHECK ENCODER

Check encoder.
Refer to [PWC-113, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:0000000011154066

1. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [DLK-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

Diagnosis Procedure

INFOID:0000000011154067

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is performed and operation is confirmed.

Refer to [PWC-93, "Work Procedure"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2.

2.CHECK FRONT DOOR LOCK ASSEMBLY LH (DOOR KEY CYLINDER SWITCH)

Check front door lock assembly LH (door key cylinder switch).

Refer to [DLK-193, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011154068

1. CHECK INTELLIGENT KEY FUNCTION

Check Intelligent Key function.

Refer to [DLK-205, "Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

Diagnosis Procedure

INFOID:0000000011154069

1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Replace main power window and door lock/unlock switch.

Refer to [PWC-137, "Removal and Installation"](#). After that, [PWC-93, "Work Procedure"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

POWER WINDOW SWITCH DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[LH & RH FRONT AUTO UP/DOWN]

POWER WINDOW SWITCH DOES NOT ILLUMINATE

DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000011154070

1.REPLACE POWER WINDOW MAIN SWITCH

Replace power window main switch.

Refer to [PWC-137, "Removal and Installation"](#).

>> Inspection End.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000011154071

1.REPLACE POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Replace power window and door lock/unlock switch RH.

Refer to [PWC-138, "Removal and Installation"](#).

>> Inspection End.

REAR LH

REAR LH : Diagnosis Procedure

INFOID:0000000011154072

1.REPLACE REAR POWER WINDOW SWITCH LH

Replace rear power window switch LH.

Refer to [PWC-139, "Removal and Installation"](#).

>> Inspection End.

REAR RH

REAR RH : Diagnosis Procedure

INFOID:0000000011154073

1.REPLACE REAR POWER WINDOW SWITCH RH

Replace rear power window switch RH.

Refer to [PWC-139, "Removal and Installation"](#).

>> Inspection End.

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

< REMOVAL AND INSTALLATION >

[LH & RH FRONT AUTO UP/DOWN]

REMOVAL AND INSTALLATION


MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Removal and Installation

INFOID:0000000011154074


REMOVAL

1. Remove the main power window and door lock/unlock switch from the front door finisher using a suitable tool.
2. Disconnect the harness connectors (A) from the main power window and door lock/unlock switch (1) and harness connector (B) from the mirror control switch (2).

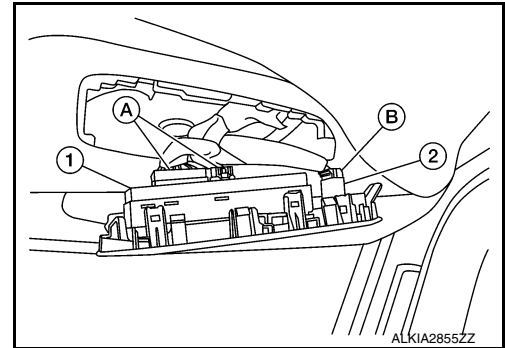

3. Release the pawls, then separate the main power window and door lock/unlock switch (1) from the switch finisher (2).

(○): Pawl

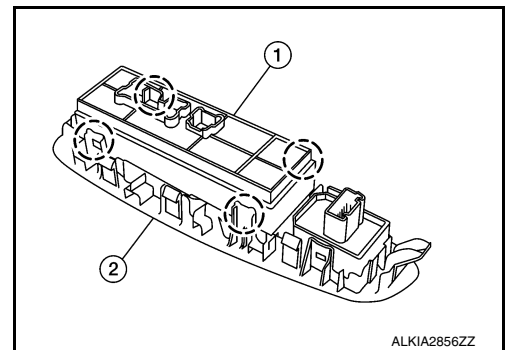

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

When the main power window and door lock/unlock switch is removed or replaced, it is necessary to perform the initialization procedure. Refer to [PWC-89, "Work Flow"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

< REMOVAL AND INSTALLATION >

[LH & RH FRONT AUTO UP/DOWN]


POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Removal and Installation

INFOID:000000011154075


REMOVAL

1. Remove the power window and door lock/unlock switch (RH) from the front door finisher using a suitable tool.
2. Disconnect the harness connector (A) from the power window and door lock/unlock switch (RH) (1).

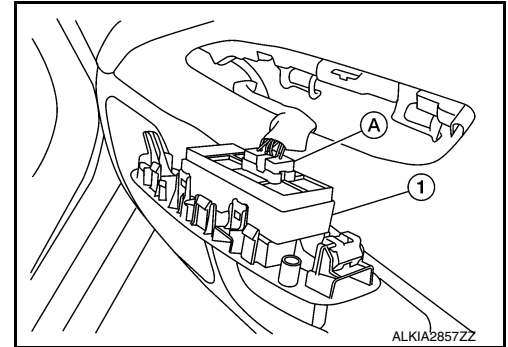

3. Release four pawls, then separate power window and door lock/unlock switch (RH) (1) from switch finisher (2).

○: Pawl

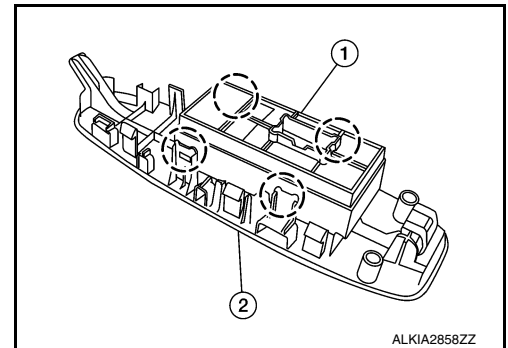

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

When the power window and door lock/unlock switch (RH) is removed or replaced, it is necessary to perform the initialization procedure. Refer to [PWC-89, "Work Flow"](#).

REAR POWER WINDOW SWITCH

< REMOVAL AND INSTALLATION >

[LH & RH FRONT AUTO UP/DOWN]


REAR POWER WINDOW SWITCH

Removal and Installation


INFOID:0000000011154076

REMOVAL

1. Remove the rear door cup holder mat.
2. Remove the rear power window switch finisher screw (A) and the rear power window switch finisher (1) from the rear door finisher using a suitable tool.

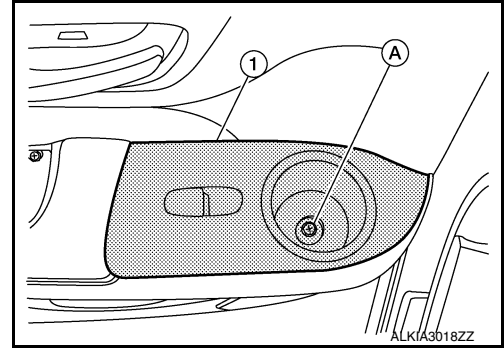


3. Disconnect the harness connector (A) from the rear power window switch (1).

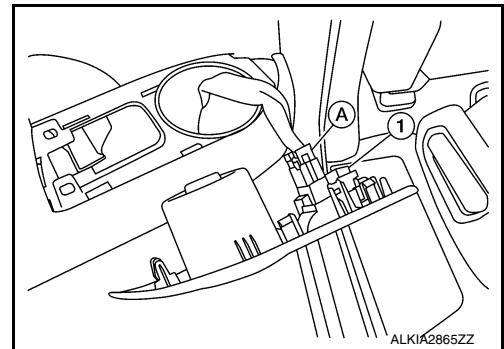

4. Release the two pawls, then separate the rear power window switch (1) from the switch finisher (2).

(○): Pawl

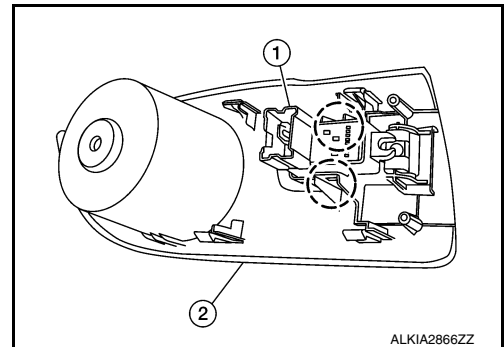

INSTALLATION

Installation is in the reverse order of removal.