

SECTION SEC

SECURITY CONTROL SYSTEM

CONTENTS

WITH INTELLIGENT KEY SYSTEM	NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS...11
PRECAUTION 4	NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS : System Diagram12
PRECAUTIONS 4	NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS : System Description12
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"4	VEHICLE SECURITY SYSTEM14
SYSTEM DESCRIPTION 5	VEHICLE SECURITY SYSTEM : System Dia- gram14
COMPONENT PARTS 5	VEHICLE SECURITY SYSTEM : System Descrip- tion14
Component Parts Location5	DIAGNOSIS SYSTEM (BCM)18
Component Description6	COMMON ITEM18
CVT Shift Selector (Park Position Switch)6	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)18
BCM6	INTELLIGENT KEY19
ECM7	INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)19
IPDM E/R7	THEFT ALM22
NATS Antenna Amp.7	THEFT ALM : CONSULT Function (BCM - THEFT ALM)22
Combination Meter7	IMMU23
Door Switch7	IMMU : CONSULT Function (BCM - IMMU)23
Outside Key Antenna7	DIAGNOSIS SYSTEM (IPDM E/R)24
Hood Switch7	CONSULT Function (IPDM E/R)24
Inside Key Antenna7	ECU DIAGNOSIS INFORMATION26
Remote Keyless Entry Receiver7	ECM, IPDM E/R, BCM26
Intelligent Key7	List of ECU Reference26
Push-button Ignition Switch8	WIRING DIAGRAM27
Security Indicator Lamp8	ENGINE START FUNCTION27
Starter Control Relay8	Wiring Diagram27
Starter Relay8	NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS44
Stop Lamp Switch8	
Transmission Range Switch8	
Vehicle Information Display8	
SYSTEM 9	
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION9	
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram9	
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description9	

Wiring Diagram	44	DTC Logic	93
VEHICLE SECURITY SYSTEM	56	Diagnosis Procedure	93
Wiring Diagram	56	B2190 NATS ANTENNA AMP.	96
BASIC INSPECTION	73	Description	96
DIAGNOSIS AND REPAIR WORK FLOW	73	DTC Logic	96
Work Flow	73	Diagnosis Procedure	96
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	76	B2191, P1615 DIFFERENCE OF KEY	98
ECM	76	Description	98
ECM : Description	76	DTC Logic	98
ECM : Work Procedure	76	Diagnosis Procedure	98
BCM	76	B2192 ID DISCORD, IMMU-ECM	99
BCM : Description	76	DTC Logic	99
BCM : Work Procedure	76	Diagnosis Procedure	99
DTC/CIRCUIT DIAGNOSIS	78	B2193 CHAIN OF ECM-IMMU	100
P1610 LOCK MODE	78	DTC Logic	100
Description	78	Diagnosis Procedure	100
DTC Logic	78	B2195 ANTI-SCANNING	101
Diagnosis Procedure	78	DTC Logic	101
P1611 ID DISCORD, IMMU-ECM	79	Diagnosis Procedure	101
DTC Logic	79	B2196 DONGLE UNIT	102
Diagnosis Procedure	79	Description	102
P1612 CHAIN OF ECM-IMMU	80	DTC Logic	102
DTC Logic	80	Diagnosis Procedure	102
Diagnosis Procedure	80	B2198 NATS ANTENNA AMP.	104
P1614 CHAIN OF IMMU-KEY	81	DTC Logic	104
DTC Logic	81	Diagnosis Procedure	104
Diagnosis Procedure	81	B2555 STOP LAMP	106
B210B STARTER CONTROL RELAY	83	DTC Logic	106
DTC Logic	83	Diagnosis Procedure	106
Diagnosis Procedure	83	Component Inspection	108
B210C STARTER CONTROL RELAY	84	B2556 PUSH-BUTTON IGNITION SWITCH ...	109
DTC Logic	84	DTC Logic	109
Diagnosis Procedure	84	Diagnosis Procedure	109
B210D STARTER RELAY	86	Component Inspection	110
DTC Logic	86	B2557 VEHICLE SPEED	111
Diagnosis Procedure	86	DTC Logic	111
B210E STARTER RELAY	88	Diagnosis Procedure	111
DTC Logic	88	B2560 STARTER CONTROL RELAY	112
Diagnosis Procedure	88	Description	112
B210F TRANSMISSION RANGE SWITCH	90	DTC Logic	112
Description	90	Diagnosis Procedure	112
DTC Logic	90	B2601 SHIFT POSITION	113
Diagnosis Procedure	90	DTC Logic	113
B2110 TRANSMISSION RANGE SWITCH	93	Diagnosis Procedure	113
Description	93	Component Inspection	115
		B2602 SHIFT POSITION	116
		DTC Logic	116
		Diagnosis Procedure	116
		Component Inspection	117

B2603 SHIFT POSITION	119	SECURITY INDICATOR LAMP	143	A
DTC Logic	119	Component Function Check	143	
Diagnosis Procedure	119	Diagnosis Procedure	143	
Component Inspection	122			
B2604 SHIFT POSITION	123	SYMPTOM DIAGNOSIS	145	B
DTC Logic	123	ENGINE DOES NOT START WHEN INTELLI-		
Diagnosis Procedure	123	GEN T KEY IS INSIDE OF VEHICLE	145	C
		Description	145	
B2605 SHIFT POSITION	126	Diagnosis Procedure	145	
DTC Logic	126			
Diagnosis Procedure	126	SECURITY INDICATOR LAMP DOES NOT		D
		TURN ON OR BLINK	146	
B2608 STARTER RELAY	129	Description	146	
DTC Logic	129	Diagnosis Procedure	146	E
Diagnosis Procedure	129			
B2617 STARTER RELAY CIRCUIT	131	VEHICLE SECURITY SYSTEM CANNOT BE		
Description	131	SET	147	F
DTC Logic	131	INTELLIGENT KEY	147	
Diagnosis Procedure	131	INTELLIGENT KEY : Description	147	
		INTELLIGENT KEY : Diagnosis Procedure	147	G
B261E VEHICLE TYPE	133	DOOR REQUEST SWITCH	147	
Description	133	DOOR REQUEST SWITCH : Description	147	
DTC Logic	133	DOOR REQUEST SWITCH : Diagnosis Proce-		H
Diagnosis Procedure	133	dure	147	
B26F3 STARTER CONTROL RELAY	135	DOOR KEY CYLINDER	148	I
DTC Logic	135	DOOR KEY CYLINDER : Description	148	
Diagnosis Procedure	135	DOOR KEY CYLINDER : Diagnosis Procedure ...	148	
B26F4 STARTER CONTROL RELAY	136	VEHICLE SECURITY ALARM DOES NOT		J
DTC Logic	136	ACTIVATE	149	
Diagnosis Procedure	136	Description	149	
B26F7 BCM	137	Diagnosis Procedure	149	SEC
DTC Logic	137			
Diagnosis Procedure	137	PANIC ALARM FUNCTION DOES NOT OP-		
B26F8 BCM	138	ERATE	150	L
DTC Logic	138	Description	150	
Diagnosis Procedure	138	Diagnosis Procedure	150	
HEADLAMP FUNCTION	139	REMOVAL AND INSTALLATION	151	M
Component Function Check	139	NATS ANTENNA AMP.	151	
Diagnosis Procedure	139	Exploded View	151	
		Removal and Installation	151	N
HOOD SWITCH	140	PUSH-BUTTON IGNITION SWITCH	152	
Component Function Check	140	Exploded View	152	
Diagnosis Procedure	140	Removal and Installation	152	O
Component Inspection	141	IMMOBILIZER CONTROL MODULE	153	
HORN FUNCTION	142	Removal and Installation	153	P
Component Function Check	142			
Component Inspection	142			

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011154271

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011154272

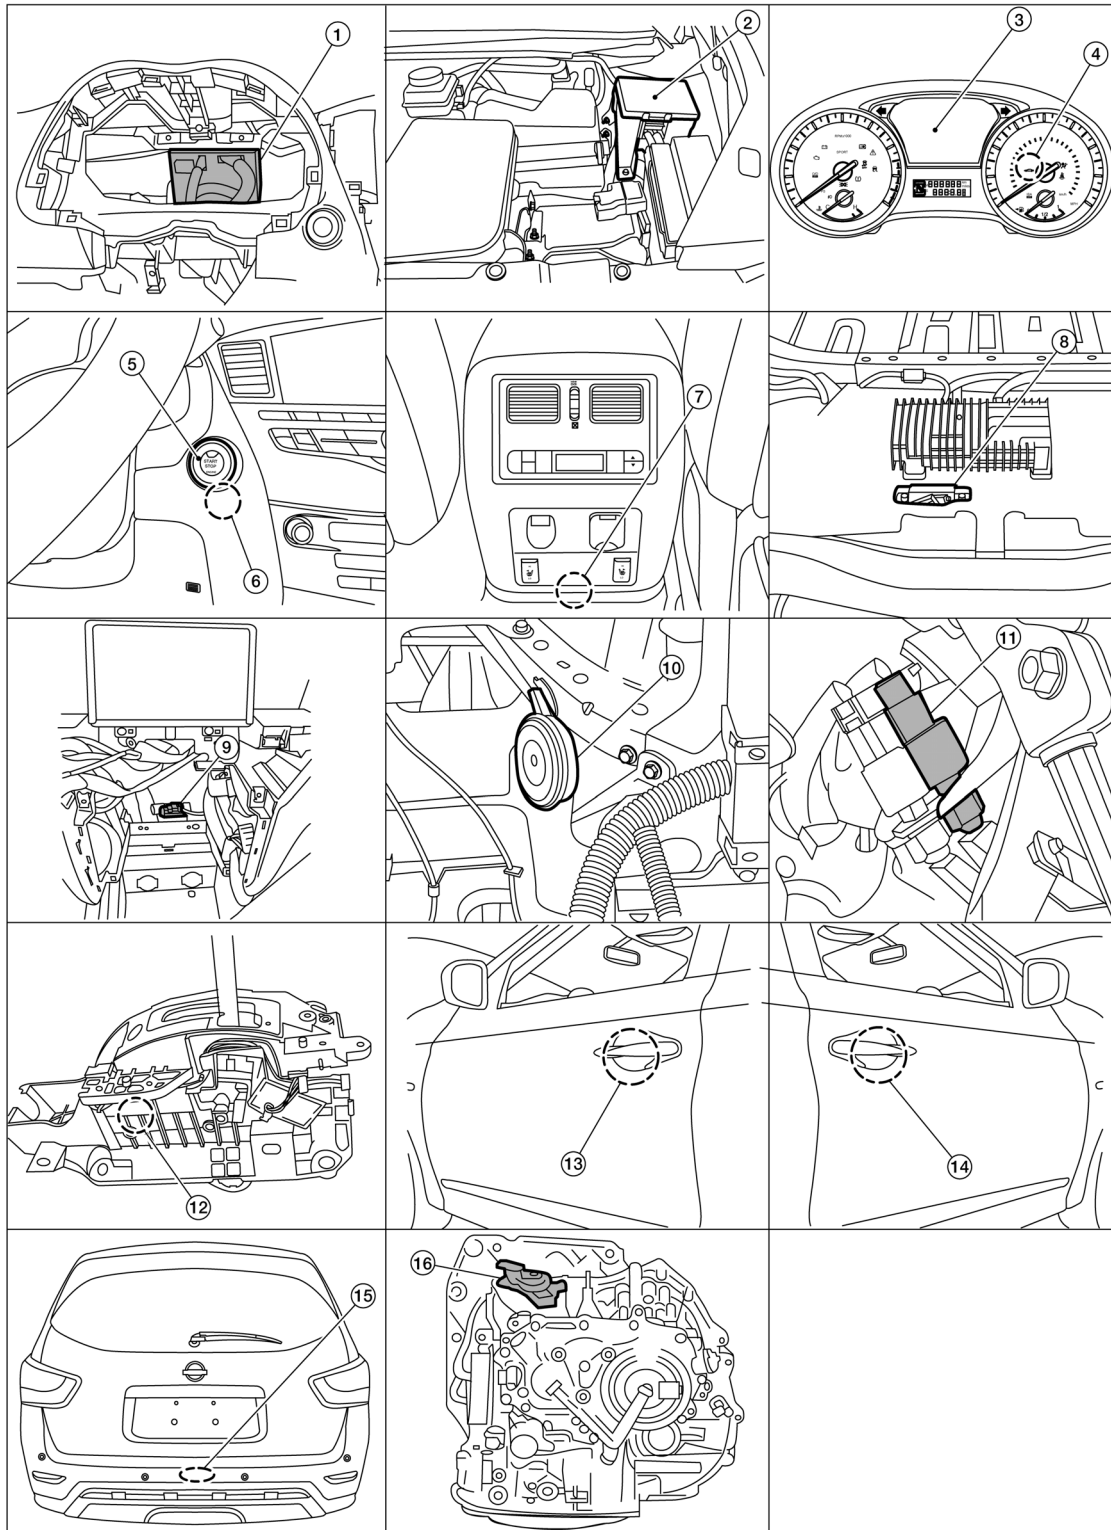

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ALKIA2806ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- | | | |
|---|--|--|
| 1. BCM (view with combination meter removed) | 2. IPDM E/R | 3. Combination meter |
| 4. Security indicator lamp | 5. Push-button ignition switch | 6. NATS antenna amp. |
| 7. Inside key antenna (console) | 8. Inside key antenna (luggage room) (view with rear carpet removed) | 9. Inside key antenna (instrument center) (view with AV control unit removed) |
| 10. Horn (view with right head light removed) | 11. Stop lamp switch | 12. CVT shift selector (park position switch) (view with center console removed) |
| 13. Outside key antenna (drivers side) | 14. Outside key antenna (passenger side) | 15. Outside key antenna (rear bumper) |
| 16. Transmission range switch | | |

Component Description

INFOID:0000000011154273

Component	Reference
CVT shift selector (park position switch)	SEC-6
BCM	SEC-6
ECM	SEC-7
IPDM E/R	SEC-7
NATS antenna amp.	SEC-7
Combination meter	SEC-7
Door switch	SEC-7
Hood switch	SEC-7
Outside key antenna	SEC-7
Inside key antenna	SEC-7
Intelligent Key	SEC-7
Push-button ignition switch	SEC-8
Remote keyless entry receiver	SEC-7
Security indicator lamp	SEC-8
Starter control relay	SEC-8
Starter relay	SEC-8
Stop lamp switch	SEC-8
Transmission range switch	SEC-8
Vehicle information display	SEC-8

CVT Shift Selector (Park Position Switch)

INFOID:0000000011154274

Park position switch detects that CVT shift selector is in the P (Park) position and then transmits the signal to BCM and IPDM E/R.

BCM confirms the CVT shift selector position with the following 5 signals:

- P (Park) position signal from CVT shift selector (park position switch)
- P/N position signal from TCM
- P (Park) position signal from IPDM E/R (CAN)
- P/N position signal from IPDM E/R (CAN)
- P/N position signal from TCM (CAN)

IPDM E/R confirms the CVT shift selector position with the following 3 signals:

- P (Park) position signal from CVT shift selector (park position switch)
- P/N position signal from TCM
- P/N position signal from BCM (CAN)

BCM

INFOID:0000000011154275

BCM controls INTELLIGENT KEY SYSTEM (ENGINE START FUNCTION), NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)], and VEHICLE SECURITY SYSTEM.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

BCM performs the ID verification between BCM and Intelligent Key when the Intelligent Key is carried into the detection area of inside key antenna and push-button ignition switch is pressed. If the ID verification result is OK, push-button ignition switch operation is available.

Then, when the power supply position is turned ON, BCM performs ID verification between BCM and ECM. If the ID verification result is OK, ECM can start engine.

ECM

INFOID:0000000011154276

ECM controls the engine.

When power supply position is turned ON, BCM starts communication with ECM and performs the ID verification between BCM and ECM.

If the verification result is OK, the engine can start. If the verification result is NG, the engine can not start.

IPDM E/R

INFOID:0000000011154277

IPDM E/R has the starter relay and starter control relay inside. Starter relay and starter control relay are used for the engine starting function. IPDM E/R controls these relays while communicating with BCM.

NATS Antenna Amp.

INFOID:0000000011154278

The ID verification is performed between BCM and transponder in Intelligent Key via NATS antenna amp. when Intelligent Key backside is contacted to push-button ignition switch in case that Intelligent Key battery is discharged. If the ID verification result is OK, the operation of starting engine is available.

Combination Meter

INFOID:0000000011154279

Combination meter transmits the vehicle speed signal to BCM via CAN communication.

BCM also receives the vehicle speed signal from ABS actuator and electric unit (control unit) via CAN communication. BCM compares both signals to detect the vehicle speed.

Door Switch

INFOID:0000000011154280

Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.

Outside Key Antenna

INFOID:0000000011154281

Outside key antennas detects whether Intelligent Key is inside the vehicle and transmits the signal to BCM.

Three outside key antennas are installed outside key antenna RH, outside key antenna LH and outside key antenna rear bumper.

Hood Switch

INFOID:0000000011154282

Hood switch detects that hood is open/closed, and then transmits the signal to IPDM E/R. IPDM E/R transmits hood switch signal to BCM via CAN communication.

Inside Key Antenna

INFOID:0000000011154283

Inside key antenna detects whether Intelligent Key is inside the vehicle and transmits the signal to BCM.

Three inside key antennas are installed in the instrument center, console and luggage room.

Remote Keyless Entry Receiver

INFOID:0000000011154284

Remote keyless entry receiver receives each button operation signal and electronic key ID signal from Intelligent Key and then transmits the signal to BCM.

Intelligent Key

INFOID:0000000011154285

Each Intelligent Key has an individual electronic ID and transmits the ID signal by request from BCM.

Carrying the Intelligent Key whose ID is registered in BCM, the driver can perform, remote start, door lock/unlock operation, remote liftgate, panic alarm and push-button ignition switch operation.

Push-button Ignition Switch

INFOID:0000000011154286

Push-button ignition switch detects that push-button is pressed and then transmits the signal to BCM. BCM changes the power supply position with the operation of push-button ignition switch. BCM maintains the power supply position status while push-button is not operated.

Security Indicator Lamp

INFOID:0000000011154287

Security indicator lamp is located on combination meter.

Security indicator lamp blinks when power supply position is any position other than ON to warn that NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] is on board.

Starter Control Relay

INFOID:0000000011154288

Engine starting system functions by controlling both starter relay and starter control relay.

Both relays are integrated in IPDM E/R. Starter relay is controlled by BCM and starter control relay is controlled by IPDM E/R on request from BCM.

IPDM E/R transmits starter relay and starter control relay status signal to BCM via CAN communication.

Starter Relay

INFOID:0000000011154289

Engine starting system functions by controlling both starter relay and starter control relay.

Both relays are integrated in IPDM E/R. Starter relay is controlled by BCM, and starter control relay is controlled by IPDM E/R on request from BCM.

IPDM E/R transmits starter relay and starter control relay status signal to BCM via CAN communication.

Stop Lamp Switch

INFOID:0000000011154290

Stop lamp switch detects that brake pedal is depressed, and then transmits the signal to BCM.

Transmission Range Switch

INFOID:0000000011154291

Transmission range switch is integrated in CVT assembly, and detects the CVT shift selector position.

TCM receives the transmission range switch signal and then transmits the P/N position signal to BCM and IPDM E/R.

BCM confirms the CVT shift selector position with the following 5 signals:

- P (Park) position signal from CVT shift selector (park position switch)
- P/N position signal from TCM
- P (Park) position signal from IPDM E/R (CAN)
- P/N position signal from IPDM E/R (CAN)
- P/N position signal from TCM (CAN)

IPDM E/R confirms the CVT shift selector position with the following 3 signals:

- P (Park) position signal from CVT shift selector (park position switch)
- P/N position signal from TCM
- P/N position signal from BCM (CAN)

Vehicle Information Display

INFOID:0000000011154292

Vehicle information display is integrated in combination meter.


Various information and warnings regarding the Intelligent Key System are displayed.

SYSTEM

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram

INFOID:0000000011154293

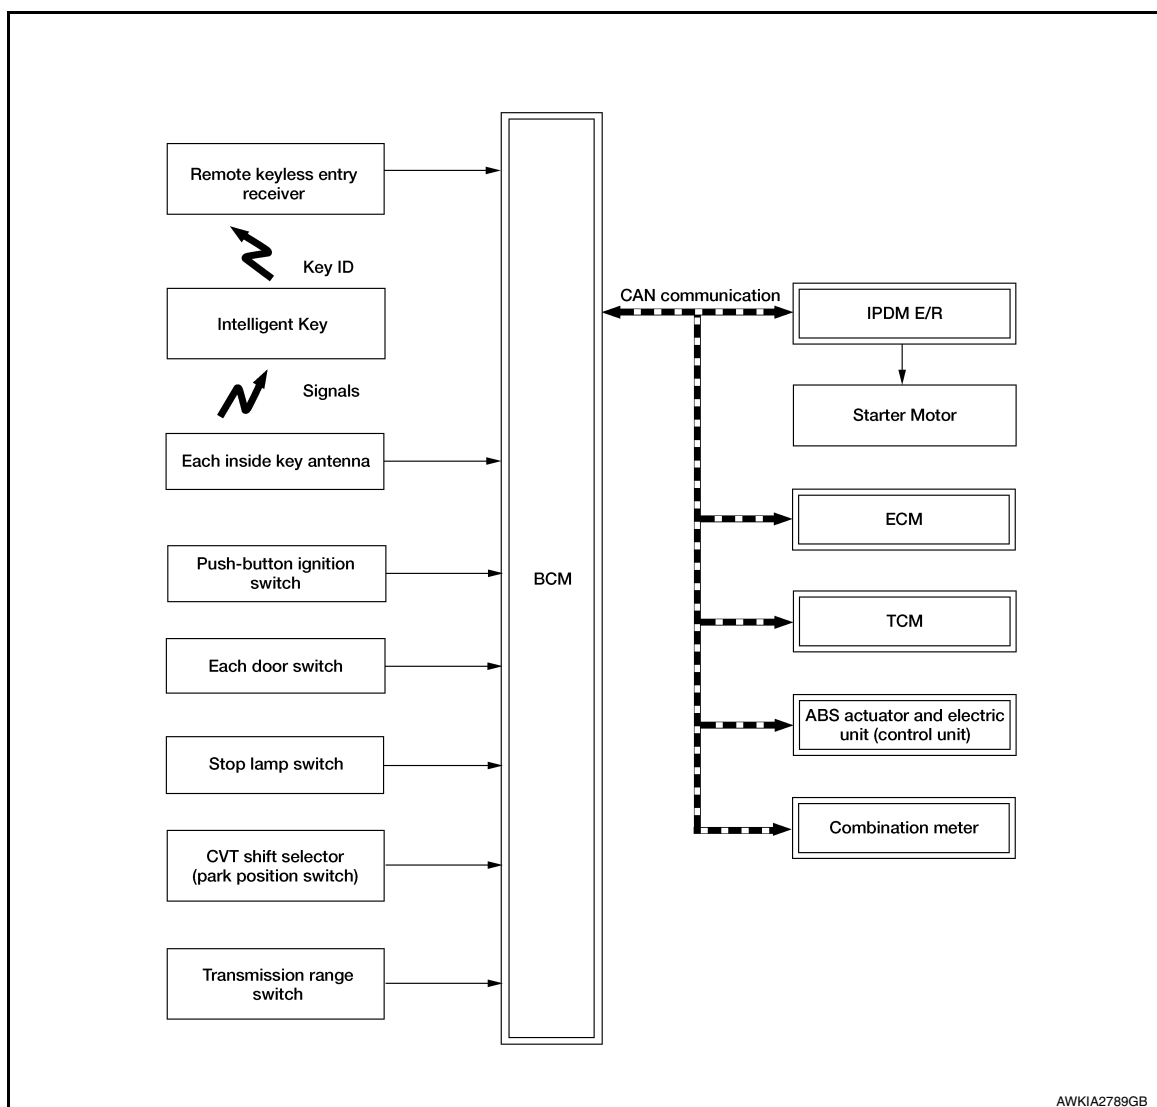

AWKIA2789GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description

INFOID:0000000011154294

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system makes it possible to start and stop the engine without using the key, based on the electronic ID verification. The electronic ID verification is performed between BCM and Intelligent Key when the push-button ignition switch is pressed while the Intelligent Key is within the detection area of inside key antenna.

NOTE:

The driver should carry the Intelligent Key at all times.

- Intelligent Key has 2 IDs [Intelligent Key ID and NVIS (NATS) ID]. It can perform the door lock/unlock operation and the push-button ignition switch operation when the registered Intelligent Key is carried.
- When Intelligent Key battery is discharged, engine can be started by operating push-button ignition switch after contacting Intelligent Key backside to push-button ignition switch. At that time, the NVIS (NATS) ID verification is performed.
- If the ID is successfully verified, when push-button ignition switch is pressed, the engine can be started.
- Up to 4 Intelligent Keys can be registered (Including the standard Intelligent Key) upon request from the customer.

- For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

NOTE:

Refer to [DLK-22, "INTELLIGENT KEY SYSTEM : System Description"](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

The transponder [the chip for NVIS (NATS) ID verification] is integrated into the Intelligent Key. In that case, the NVIS (NATS) ID verification can be performed when Intelligent Key backside is contacted to push-button ignition switch. If verification result is OK, engine can be started.

OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM.
3. BCM receives the Intelligent Key ID signal via remote keyless entry receiver and verifies it with the registered ID.
4. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position and brake pedal operating condition.
7. BCM transmits the starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition* is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the "KEY" warning lamp in the combination meter illuminates. At that time, the engine cannot be started.

10. When BCM receives feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops cranking by turning OFF the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) while the power supply is in the ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

*: For the engine start condition, refer to the table below "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION".

OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine may not start when Intelligent Key is on instrument panel or in glove box.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

When Intelligent Key battery is discharged, the NVIS (NATS) ID verification between transponder in Intelligent Key and BCM is performed when Intelligent Key backside is contacted to push-button ignition switch. If the verification result is OK, engine can be started.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions:
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram

INFOID:0000000011154295

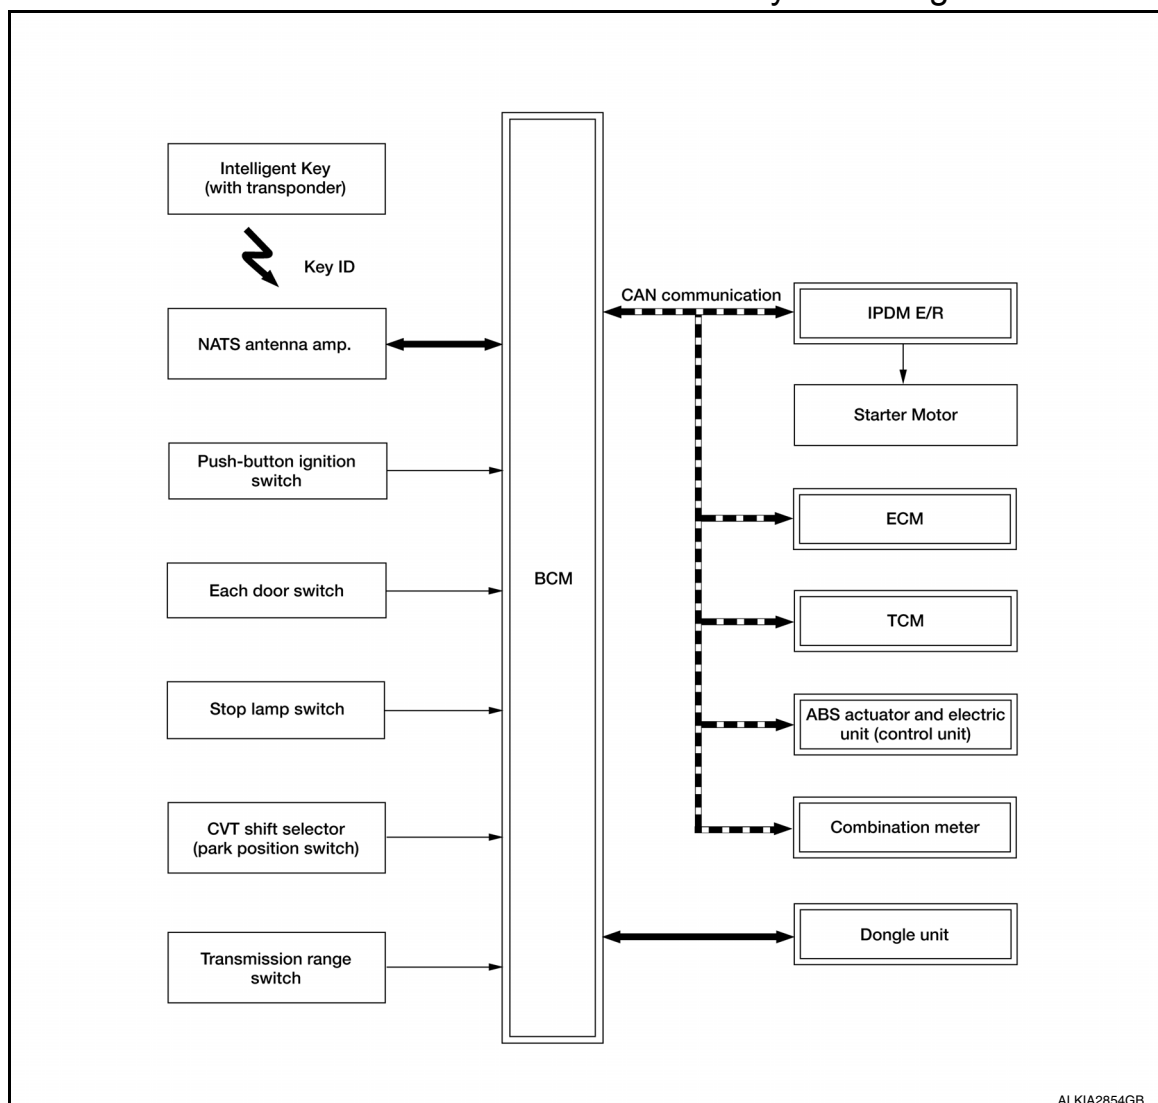

ALKIA2854GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description

INFOID:0000000011154296

SYSTEM DESCRIPTION

- The NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] prevents the engine from being started by Intelligent Key whose ID is not registered to the vehicle (BCM). It has higher protection against auto theft involving the duplication of mechanical keys.
- The ignition key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the NVIS (NATS) ID verification is performed between the transponder integrated with Intelligent Key and BCM via NATS antenna amp. when the Intelligent Key backside is contacted to push-button ignition switch. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator lamp and apply the anti-theft system equipment sticker that warns that the NVIS (NATS) is on-board the model.
- Security indicator lamp always blinks when the power supply position is any position other than ON.
- Up to 4 Intelligent Keys can be registered (including the standard ignition key) upon request from the owner.
- Specified registration is required when replacing ECM, BCM or Intelligent Key.
- For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.
- Possible symptom of NVIS (NATS) malfunction is "Engine cannot start". The engine can not be started because of other than NVIS (NATS) malfunction, so start the trouble diagnosis according to [SEC-73. "Work Flow"](#).

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- If ECM other than genuine part is installed, the engine cannot be started. For ECM replacement procedure, refer to [EC-526, "Removal and Installation"](#) (USA and Canada) or [EC-916, "Removal and Installation"](#) (Mexico).

PRECAUTIONS FOR KEY REGISTRATION

- The ID registration is a procedure that erases the current NVIS (NATS) ID once, and then reregisters a new ID. Therefore before starting the registration operation, collect all registered Intelligent Keys from the customer.
- When registering the Intelligent Key, perform only one procedure to simultaneously register both ID [NVIS (NATS) ID and Intelligent Key ID].

SECURITY INDICATOR LAMP

- Warns that the vehicle is equipped with NVIS (NATS).
- Security indicator lamp always blinks when the power supply position is any position other than ON.

NOTE:

Because security indicator lamp is highly efficient, the battery is barely affected.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

- When brake pedal is depressed while selector lever is in the P (Park) position, BCM activates NATS antenna amp. that is located behind push-button ignition switch.
- When Intelligent Key (transponder built-in) backside is contacted to push-button ignition switch, BCM starts NVIS (NATS) ID verification between BCM and Intelligent Key (transponder built-in) via NATS antenna amp.
- When the NVIS (NATS) ID verification result is OK, buzzer in combination meter sounds and BCM transmits the result to ECM.
- BCM turns ACC relay ON and transmits ignition power supply ON signal to IPDM E/R.
- IPDM E/R turns the ignition relay ON and starts the ignition power supply.
- BCM detects that the selector lever position is P (Park) or N (Neutral).
- BCM transmits starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition* is satisfied.
- IPDM E/R turns the starter control relay ON when receiving the starter request signal.
- Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.
- When BCM receives feedback signal from ECM indicating that the engine is started, BCM transmits a stop signal to IPDM E/R and stops cranking by turning off the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

*: For the engine start condition, refer to the table "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION" below.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions:
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → START ACC → START ON → START	P (Park) or N (Neutral) position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N (Neutral) position	Not depressed	1


Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

VEHICLE SECURITY SYSTEM

VEHICLE SECURITY SYSTEM : System Diagram

INFOID:0000000011154297

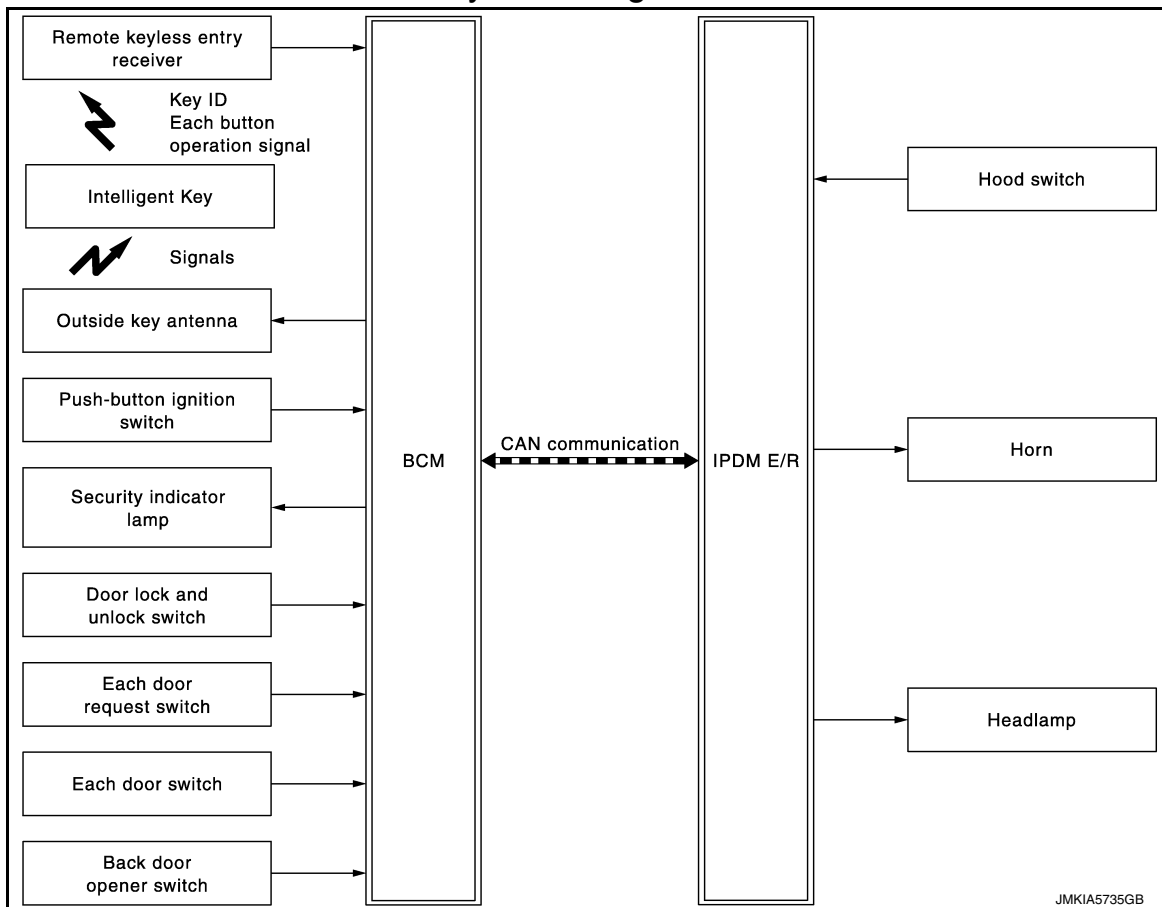

JMKIA5735GB

VEHICLE SECURITY SYSTEM : System Description

INFOID:0000000011154298

- The vehicle security system has two alarm functions (theft warning alarm and panic alarm) and reduces the possibility of a theft or mischief by activating horns and headlamps intermittently.

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]


- The panic alarm does not start when the theft warning alarm is activating and the panic alarm stops when the theft warning alarm is activated.
- The priority of the functions are as per the following.

Priority	Function
1	Theft warning alarm
2	Panic alarm

THEFT WARNING ALARM

- The theft warning alarm function activates horns and headlamps intermittently when BCM detects that any door or hood is opened by unauthorized means while the system is in the ARMED state.
- Security indicator lamp on combination meter always blinks when power supply position is any position other than ON. Security indicator lamp blinking warns that the vehicle is equipped with a vehicle security system.

Operation Flow

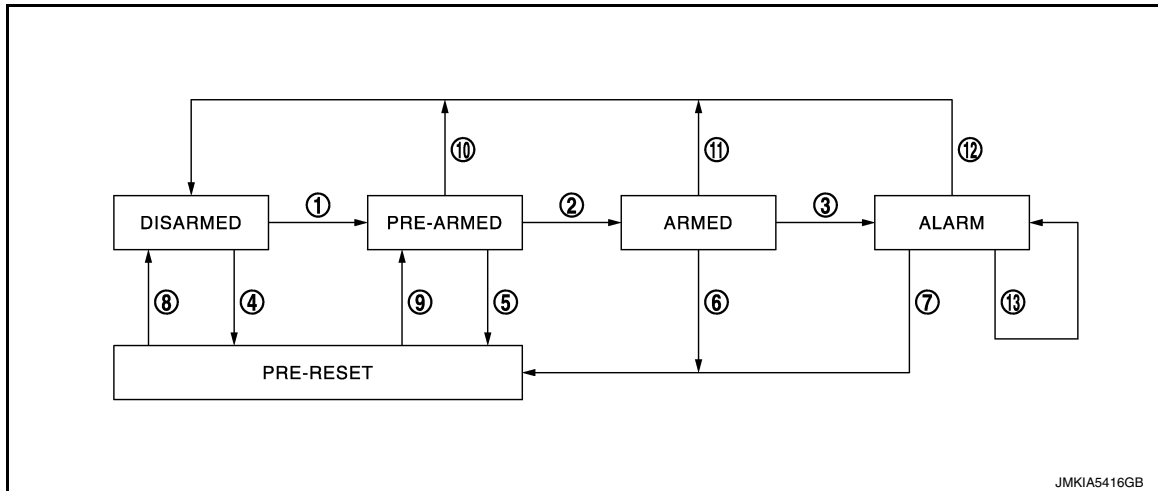

No.	System state	Switching condition					
1	DISARMED to PRE-ARMED	When all conditions of A and one condition of B is satisfied.	<table><tr><th>A</th><th>B</th></tr><tr><td> - Power supply position: OFF/LOCK - All doors: Closed - Hood: Closed </td><td>All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch </td></tr></table>	A	B	- Power supply position: OFF/LOCK - All doors: Closed - Hood: Closed	All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch
A	B						
- Power supply position: OFF/LOCK - All doors: Closed - Hood: Closed	All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch						
2	PRE-ARMED to ARMED	When all of the following conditions are satisfied for 30 seconds.	- Power supply position: OFF/LOCK - All doors: Locked - Hood: Closed				
3	ARMED to ALARM	When one condition of A and one condition of B are satisfied.	<table><tr><th>A</th><th>B</th></tr><tr><td>Intelligent Key: Not used</td><td> - Any door: Open - Hood: Open </td></tr></table>	A	B	Intelligent Key: Not used	- Any door: Open - Hood: Open
A	B						
Intelligent Key: Not used	- Any door: Open - Hood: Open						
4	DISARMED to PRE-RESET	When all conditions of A and one condition of B is satisfied.	<table><tr><th>A</th><th>B</th></tr><tr><td> - Power supply position: OFF/LOCK - All doors: Closed - Hood: Open </td><td>All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch </td></tr></table>	A	B	- Power supply position: OFF/LOCK - All doors: Closed - Hood: Open	All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch
A	B						
- Power supply position: OFF/LOCK - All doors: Closed - Hood: Open	All doors are locked by: - Door key cylinder LOCK switch - LOCK button of Intelligent Key - Door request switch						
5	PRE-ARMED to PRE-RESET	When one of the following conditions is satisfied.	Hood: Open				
6	ARMED to PRE-RESET	No conditions.					
7	ALARM to PRE-RESET						

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

No.	System state	Switching condition	
8	PRE-RESET to DISARMED	When one of the following conditions is satisfied.	- Power supply position: ACC/ON/CRANKING/RUN - Door key cylinder UNLOCK switch: ON - UNLOCK button of Intelligent Key: ON - Door request switch: ON - Back door opener switch: ON - UNLOCK switch of door lock and unlock switch: ON - Any door: Open
9	PRE-RESET to PRE-ARMED	When all of the following conditions are satisfied.	- Power supply position: OFF/LOCK - All doors: Closed - Hood: Closed
10	PRE-ARMED to DISARMED	When one of the following conditions is satisfied.	- Power supply position: ACC/ON/CRANKING/RUN - Door key cylinder UNLOCK switch: ON - UNLOCK button of Intelligent Key: ON - AUTO BACK DOOR button of Intelligent Key: ON - Door request switch: ON - Back door opener switch: ON - Any door: Open
11	ARMED to DISARMED	When one of the following conditions is satisfied.	- Power supply position: ACC/ON/CRANKING/RUN - Door key cylinder UNLOCK switch: ON - UNLOCK button of Intelligent Key: ON - AUTO BACK DOOR button of Intelligent Key: ON - Door request switch: ON - Back door opener switch: ON
12	ALARM to DISARMED		
13	RE-ALARM	When one of the following conditions is satisfied after the ALARM operation is finished.	- Any door: Open - Hood: Open

NOTE:

- BCM ignores the door key cylinder UNLOCK switch signal input for 1 second after the door key cylinder LOCK switch signal input.
- To lock/unlock all doors by operating remote controller button of Intelligent Key or door request switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [DLK-22. "INTELLIGENT KEY SYSTEM : System Description"](#).
- To open back door by operating back door opener switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [DLK-22. "INTELLIGENT KEY SYSTEM : System Description"](#).

DISARMED Phase

The vehicle security system is not set in the DISARMED phase. The vehicle security system stays in this phase while any door is open because it is assumed that the owner is inside or nearby the vehicle. Security indicator lamp blinks every 2.4 seconds.

When the vehicle security system is reset, each phase switches to the DISARMED phase directly.

PRE-ARMED Phase

The PRE-ARMED phase is the transient state between the DISARMED phase and the ARMED phase. This phase is maintained for 30 seconds so that the owner can reset the setting due to a mis-operation. This phase switches to the ARMED phase when vehicle conditions are not changed for 30 seconds. Security indicator lamp illuminates while being in this phase.

To reset the PRE-ARMED phase, refer to the switching condition of No. 10 in the table above.

ARMED Phase

The vehicle security system is set and BCM monitors all necessary inputs. If any door or hood is opened without using Intelligent Key, vehicle security system switches to the ALARM phase. Security indicator lamp blinks every 2.4 seconds.

To reset the ARMED phase, refer to the switching condition of No. 11 in the table above.

ALARM Phase

BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. In this phase, horns and headlamps are activated intermittently for approximately 50 seconds to warn that the vehicle is accessed by unauthorized means. ON/OFF timing of horns and headlamps are synchronized. After 50 seconds, the vehicle security system returns to the ARMED phase. At this time, if BCM still detects unauthorized access to the vehicle, the system is switched to the ALARM phase again. This RE-ALARM operation is carried out a maximum of 2 times.

To cancel the ALARM operation, refer to the switching condition of No. 12 in the table above.

NOTE:

If a battery terminal is disconnected during the ALARM phase, theft warning alarm stops. But when the battery terminal is reconnected, theft warning alarm is activated again.

PRE-RESET Phase

The PRE-RESET phase is the transient state between each phase and DISARMED phase. If only the condition of hood is not satisfied, the system switches to the PRE-RESET phase. Then, when any condition is changed, the system switches to the DISARMED phase or PRE-ARMED phase.

PANIC ALARM

- The panic alarm function activates horns and headlamps intermittently when the owner presses the PANIC ALARM button of Intelligent Key outside the vehicle while the power supply position is OFF or LOCK.
- When BCM receives panic alarm signal from Intelligent Key, BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. To prevent the activation due to mis-operation of Intelligent Key by owner, the panic alarm function is activated when BCM receives the signal for 0.4 - 0.6 seconds.
- Panic alarm operation is maintained for 25 seconds.
- Panic alarm operation is cancelled when BCM receives one of the following signals:
 - LOCK button of Intelligent Key: ON
 - UNLOCK button of Intelligent Key: ON
 - PANIC ALARM button of Intelligent Key: Long pressed
 - Any door request switch: ON

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011593350

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Back door open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:0000000011593373

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	×	Indicates condition of back door request switch.
PUSH SW [On/Off]		Indicates condition of push-button ignition switch.
SHFTLCK SLNID PWR SPLY [On/Off]	×	Indicates condition of power supply to shiftlock solenoid.
BRAKE SW 1 [On/Off]	×	Indicates condition of brake switch.
BRAKE SW 2 [On/Off]		Indicates condition of brake switch.
DETE/CANCL SW [On/Off]	×	Indicates condition of P (park) position.
SFT PN/N SW [On/Off]	×	Indicates condition of P (park) or N (neutral) position.
UNLK SEN -DR [On/Off]	×	Indicates condition of door unlock sensor.
PUSH SW -IPDM [On/Off]		Indicates condition of push-button ignition switch received from IPDM E/R on CAN communication line.
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line.
DETE SW -IPDM [On/Off]		Indicates condition of detent switch received from TCM on CAN communication line.
SFT PN -IPDM [On/Off]		Indicates condition of P (park) or N (neutral) position from TCM on CAN communication line.
SFT P -MET [On/Off]		Indicates condition of P (park) position from TCM on CAN communication line.
SFT N -MET [On/Off]		Indicates condition of N (neutral) position from IPDM E/R on CAN communication line.
ENGINE STATE [STOP/START/CRANK/RUN]	×	Indicates condition of engine state from ECM on CAN communication line.
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line.
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Main	Description
DOOR STAT-DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT-AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
DOOR STAT-RR [LOCK/READY/UNLK]	×	Indicates condition of rear right side door status.
DOOR STAT-RL [LOCK/READY/UNLK]	×	Indicates condition of rear left side door status.
BK DOOR STATE [LOCK/READY/UNLK]	×	Indicates condition of back door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
PRMT RKE STRT [Set/Reset]		Indicates condition of engine start possibility from Intelligent Key.
I-KEY OK FLAG [Key ON/Key OFF]	×	Indicates condition of Intelligent Key OK flag.
PRBT ENG STRT [Set/Reset]		Indicates condition of engine start prohibit.
ID AUTHENT CANCEL TIMER [STOP]		Indicates condition of Intelligent Key ID authentication.
ACC BATTERY SAVER [STOP]		Indicates condition of battery saver.
CRNK PRBT TMR [On/Off]		Indicates condition of crank prohibit timer.
AUT CRNK TMR [On/Off]		Indicates condition of automatic engine crank timer from Intelligent Key.
CRNK PRBT TME [sec]		Indicates condition of engine crank prohibit time.
AUT CRNK TME [sec]		Indicates condition of automatic engine crank time from Intelligent Key.
CRANKING TME [sec]		Indicates condition of engine cranking time from Intelligent Key.
DETE SW PWR [On/Off]		Indicates condition of detent switch voltage.
IGN RLY3 -REQ [On/Off]		Indicates condition of front blower motor relay control request.
ACC RLY -REQ [On/Off]		Indicates condition of accessory relay control request.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]		Indicates condition of back door open signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.
RKE PBD [On/Off]		Indicates condition of power back door signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INTELLIGENT KEY LINK (CAN)	This test is able to check Intelligent Key identification number [Off/ID No1/ID No2/ID No3/ID No4/ID No5].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
FLASHER	This test is able to check hazard lamp operation [LH/RH/Off].
HORN	This test is able to check horn operation [On].
BATTERY SAVER	This test is able to check battery saver operation [On/Off].
TRUNK/BACK DOOR	This test is able to check back door actuator operation [Open].
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [On/Off].
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Take Out/Knob/Key/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY ON/KEY IND/Off].
IGN CONT2	This test is able to check ignition relay-2 control operation [On/Off].
ENGINE SW ILLUMI	This test is able to check push-button ignition switch START indicator operation [On/Off].

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Test Item	Description
PUSH SWITCH INDICATOR	This test is able to check push-button ignition switch indicator operation [On/Off].
ACC CONT	This test is able to check accessory relay control operation [On/Off].
IGN CONT1	This test is able to check ignition relay-1 control operation [On/Off].
ST CONT LOW	This test is able to check starter control relay operation [On/Off].
IGNITION RELAY	This test is able to check ignition relay operation [On/Off].
REVERSE LAMP TEST	This test is able to check reverse lamp illumination operation [On/Off].
DOOR HANDLE LAMP TEST	This test is able to check door handle lamp illumination operation [On/Off].
TRUNK/LUGGAGE LAMP TEST	This test is able to check cargo lamp illumination operation [On/Off].
KEYFOB P/W TEST	This test is able to check power window operation using the Intelligent Key [P/W up/down OFF/Send P/W down ON/Send P/W up ON].
SHIFTLOCK SORENOID TEST	This test is able to check shift lock solenoid operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
IGN/ACC BATTERY SAVER	On*	Battery saver function ON.
	Off	Battery saver function OFF.
REMOTE ENGINE STARTER	On*	Remote engine start function ON.
	Off	Remote engine start function OFF.
ANSWER BACK I-KEY LOCK UNLOCK	BUZZER	Buzzer reminder function by door lock/unlock request switch ON.
	HORN	Horn chirp reminder function by door lock request switch ON.
	Off*	No reminder function by door lock/unlock request switch.
	INVALID	This mode is not used.
ANSWERBACK KEYLESS LOCK UNLOCK	On	Buzzer or horn chirp reminder when doors are locked/unlocked with Intelligent Key.
	Off*	No buzzer or horn chirp reminder when doors are locked/unlocked with Intelligent Key.
WELCOME LIGHT OP SET	On*	Door handle lamp function from request switch ON.
	Off	Door handle lamp function from request switch OFF.
ANSWER BACK	On*	Horn chirp reminder when doors are locked with Intelligent Key.
	Off	No horn chirp reminder when doors are locked with Intelligent Key.
RETRACTABLE MIRROR SET	On	Retractable mirror set ON.
	Off*	Retractable mirror set OFF.
CONFIRM KEY FOB ID	—	Intelligent Key ID code registration can be checked.
LOCK/UNLOCK BY I-KEY	On*	Door lock/unlock function from Intelligent Key ON.
	Off	Door lock/unlock function from Intelligent Key OFF.
ENGINE START BY I-KEY	On*	Engine start function from Intelligent Key ON.
	Off	Engine start function from Intelligent Key OFF.
TRUNK/GLASS HATCH OPEN	On*	Buzzer reminder function by back door request switch ON.
	Off	Buzzer reminder function by back door request switch OFF.
INTELLIGENT KEY LINK SET	On	Intelligent Key link set ON.
	Off*	Intelligent Key link set OFF.
SHORT CRANKING OUTPUT	Start	70 msec
		100 msec
		200 msec
	End	—

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Support Item	Setting		Description
INSIDE ANT DIAGNOSIS	—		This function allows inside key antenna self-diagnosis.
AUTO LOCK SET	MODE7	5 min	Auto door lock time can be set in this mode.
	MODE6	4 min	
	MODE5	3 min	
	MODE4	2 min	
	MODE3*	1 min	
	MODE2	30 sec	
	MODE1	Off	

*: Initial Setting

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:000000011593374

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	Indicates condition of back door request switch.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TR/BD OPEN SW [On/Off]	Indicates condition of back door opener switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]	Indicates condition of back door open signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Support Item	Setting	Description
SECURITY ALARM SET	On	Security alarm ON.
	Off	Security alarm OFF.

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000011593375

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
CONFIRM ID ALL [Yet/DONE]	Switches to DONE when an Intelligent Key is registered.
CONFIRM ID4 [Yet/DONE]	
CONFIRM ID3 [Yet/DONE]	
CONFIRM ID2 [Yet/DONE]	
CONFIRM ID1 [Yet/DONE]	
TP 4 [Yet/DONE]	DONE indicates the number of Intelligent Key ID which has been registered.
TP 3 [Yet/DONE]	
TP 2 [Yet/DONE]	
TP 1 [Yet/DONE]	
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:0000000011593671

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Ecu Identification	The IPDM E/R part number is displayed.
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

The IPDM E/R part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-20, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
RAD FAN REQ [%]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
IGN RLY1 -REQ [On/Off]		Indicates ignition switch ON signal received from BCM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
PUSH SW [On/Off]		Indicates condition of push-button ignition switch
INTER/NP SW [On/Off]		Indicates condition of CVT shift position
ST RLY CONT [On/Off]		Indicates starter relay status signal received from BCM on CAN communication line
IHBT RLY -REQ [On/Off]		Indicates starter control relay signal received from BCM on CAN communication line

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Main Signals	Description
ST/INHI RLY [Off/ ST /INHI]		Indicates condition of starter relay and starter control relay
DETENT SW [On/Off]		Indicates condition of CVT shift selector (park position switch)
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communication line
HOOD SW [On/Off]		Indicates condition of hood switch
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line
HOOD SW 2 [On/Off]		Indicates condition of hood switch

ACTIVE TEST

Test item	Description
HORN	This test is able to check horn operation [On].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/Tail/Off].

CAN DIAG SUPPORT MNTR

Refer to [LAN-18. "CAN Diagnostic Support Monitor"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ECU DIAGNOSIS INFORMATION

ECM, IPDM E/R, BCM

List of ECU Reference

INFOID:0000000011154304

ECU		Reference
ECM (USA and Canada)	Reference Value	EC-85, "Reference Value"
	Fail-safe	EC-101, "Fail-safe"
	DTC Inspection Priority Chart	EC-104, "DTC Inspection Priority Chart"
	DTC Index	EC-105, "DTC Index"
ECM (Mexico)	Reference Value	EC-593, "Reference Value"
	Fail-safe	EC-607, "Fail-safe"
	DTC Inspection Priority Chart	EC-609, "DTC Inspection Priority Chart"
	DTC Index	EC-610, "DTC Index"
IPDM E/R	Reference Value	PCS-12, "Reference Value"
	Fail-safe	PCS-19, "Fail Safe"
	DTC Index	PCS-20, "DTC Index"
BCM	Reference Value	BCS-30, "Reference Value"
	Fail-safe	BCS-50, "Fail Safe"
	DTC Inspection Priority Chart	BCS-50, "DTC Inspection Priority Chart"
	DTC Index	BCS-52, "DTC Index"

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

WIRING DIAGRAM


ENGINE START FUNCTION

Wiring Diagram

INFOID:0000000011154305

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

YR : WITH REQUEST SWITCH

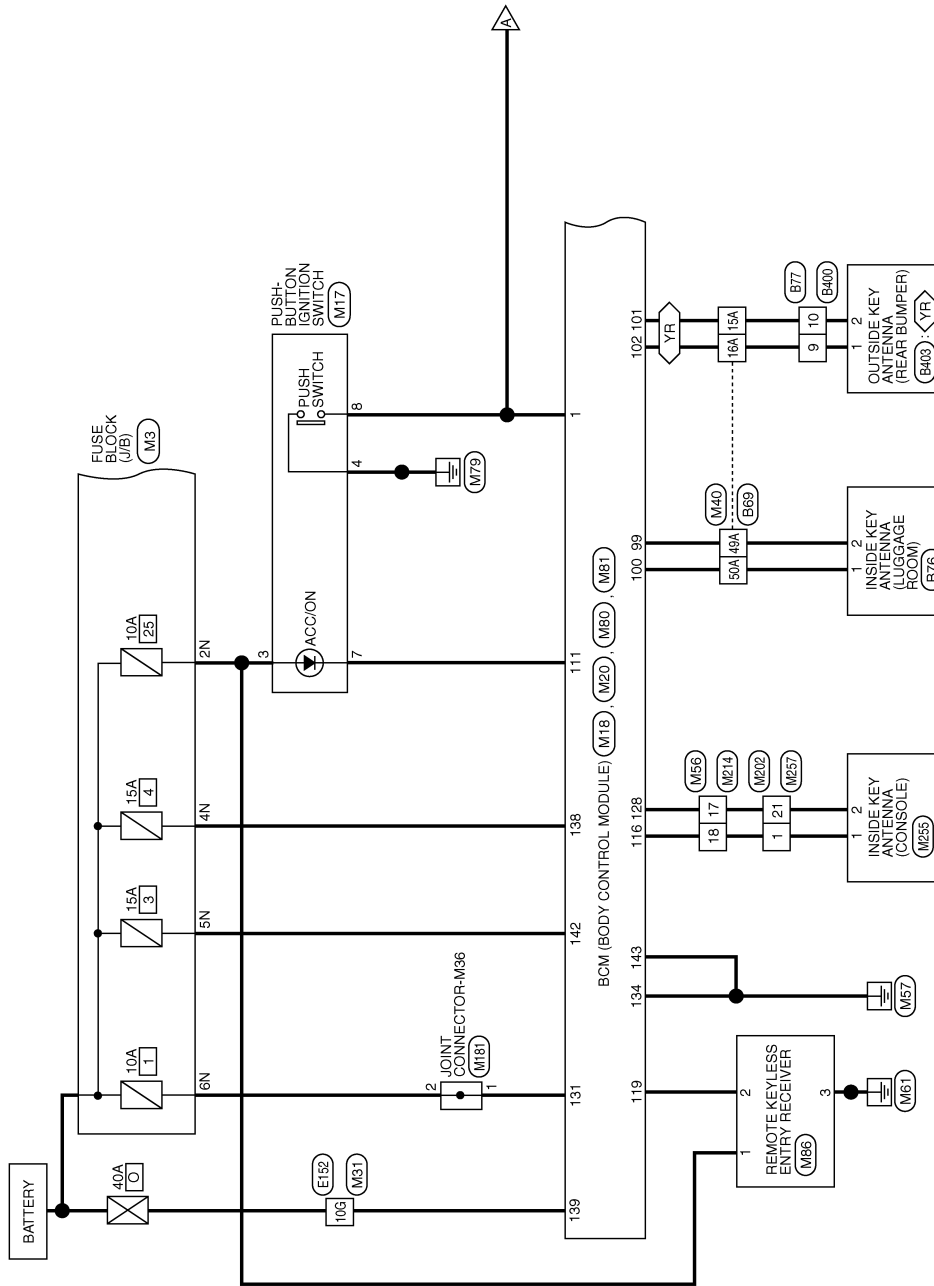


ABKWA2796GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

YR : WITH REQUEST SWITCH

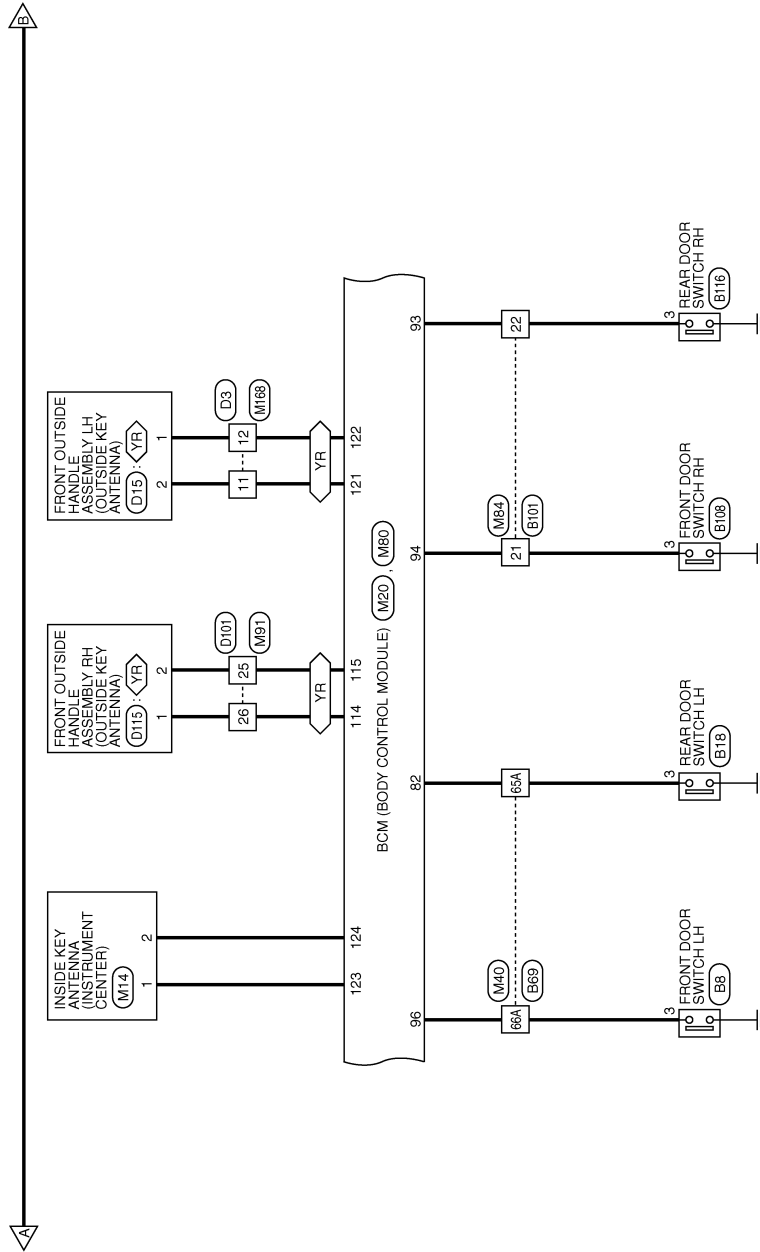


ABKWA2797GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

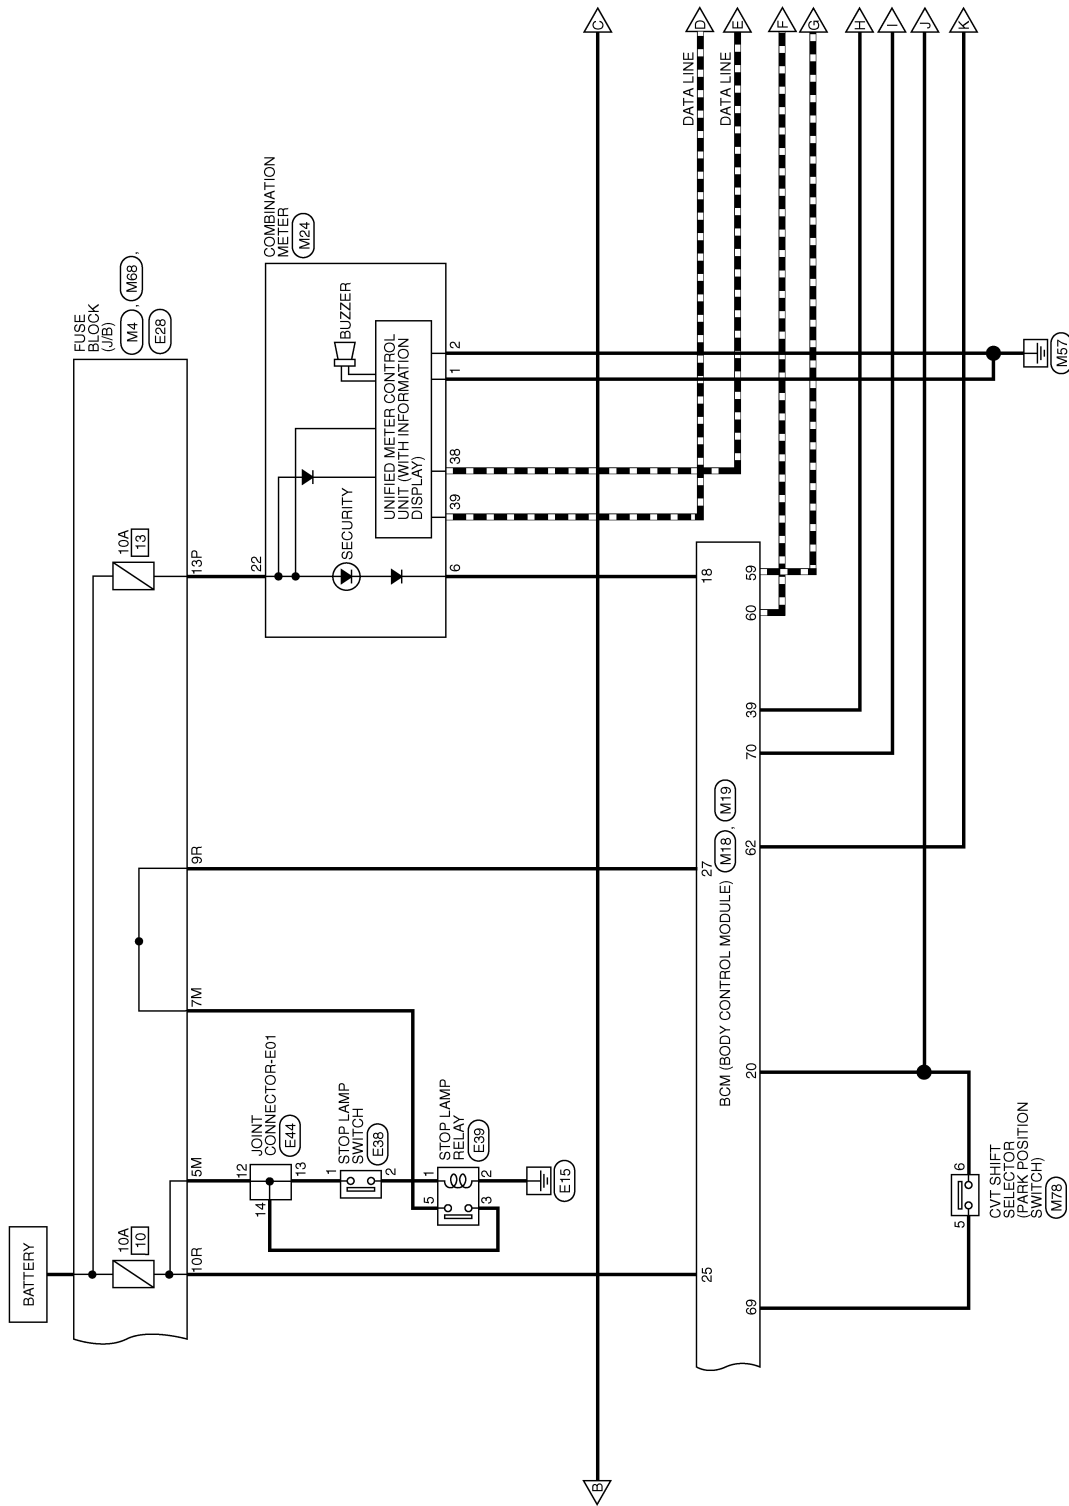


ABKWA2655GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

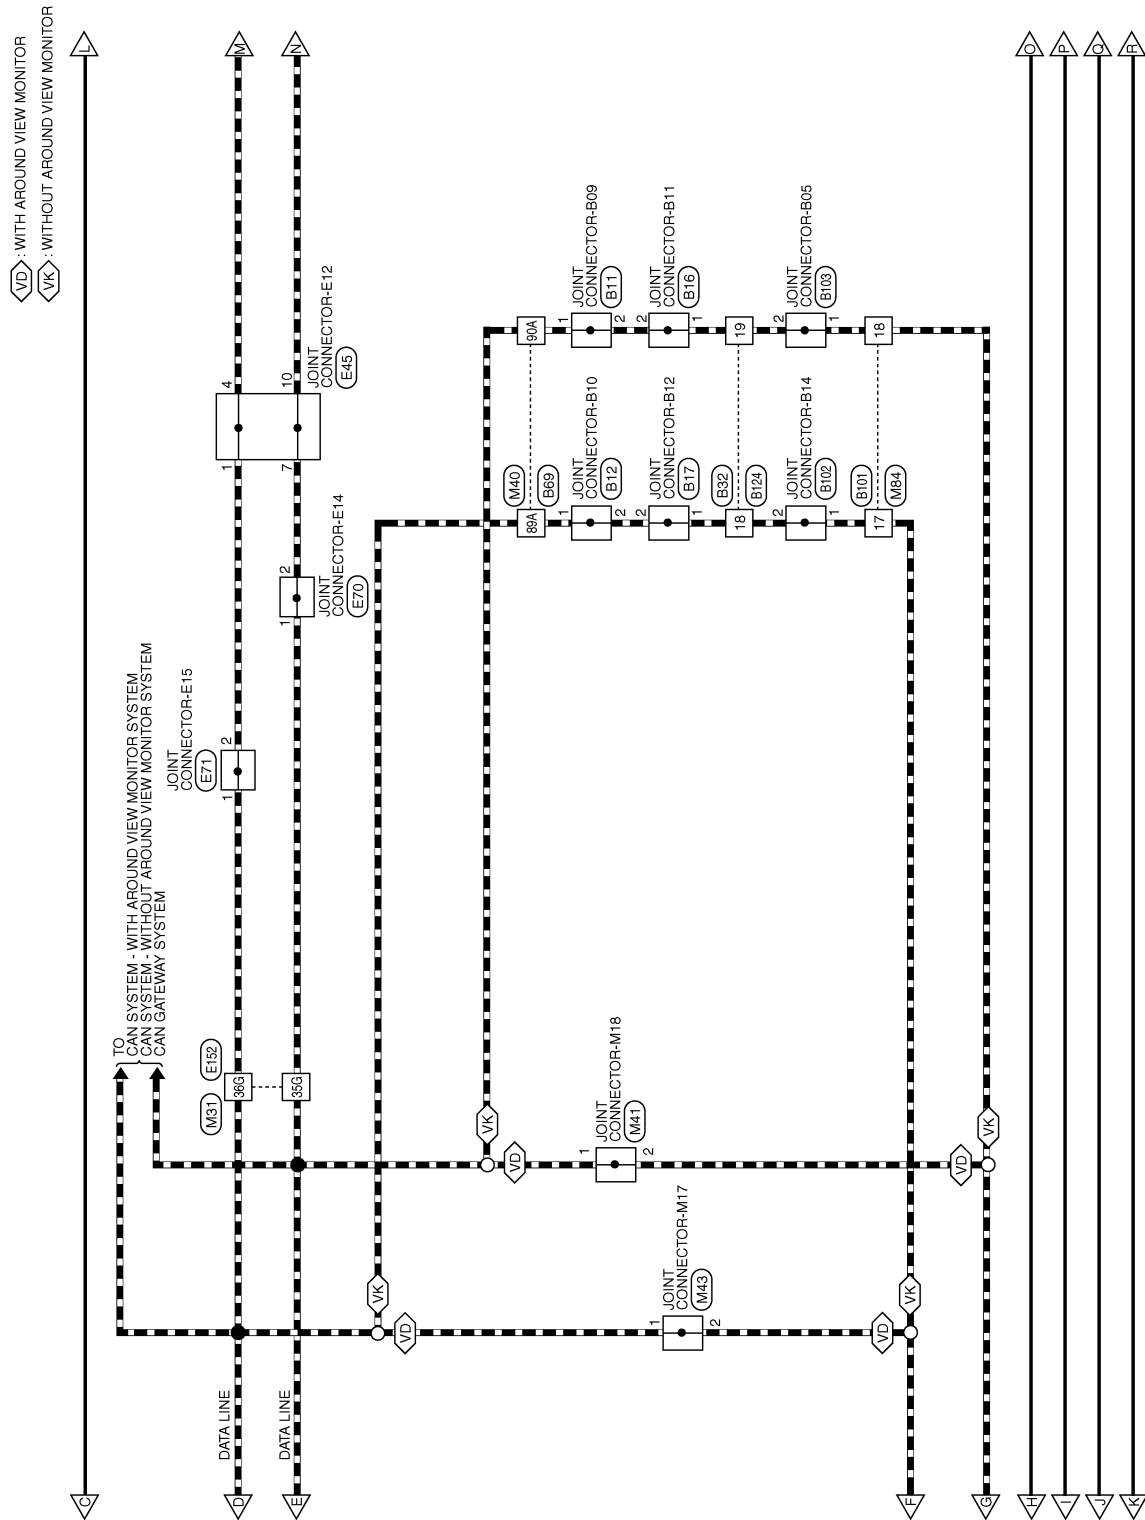


ABKWA2798GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

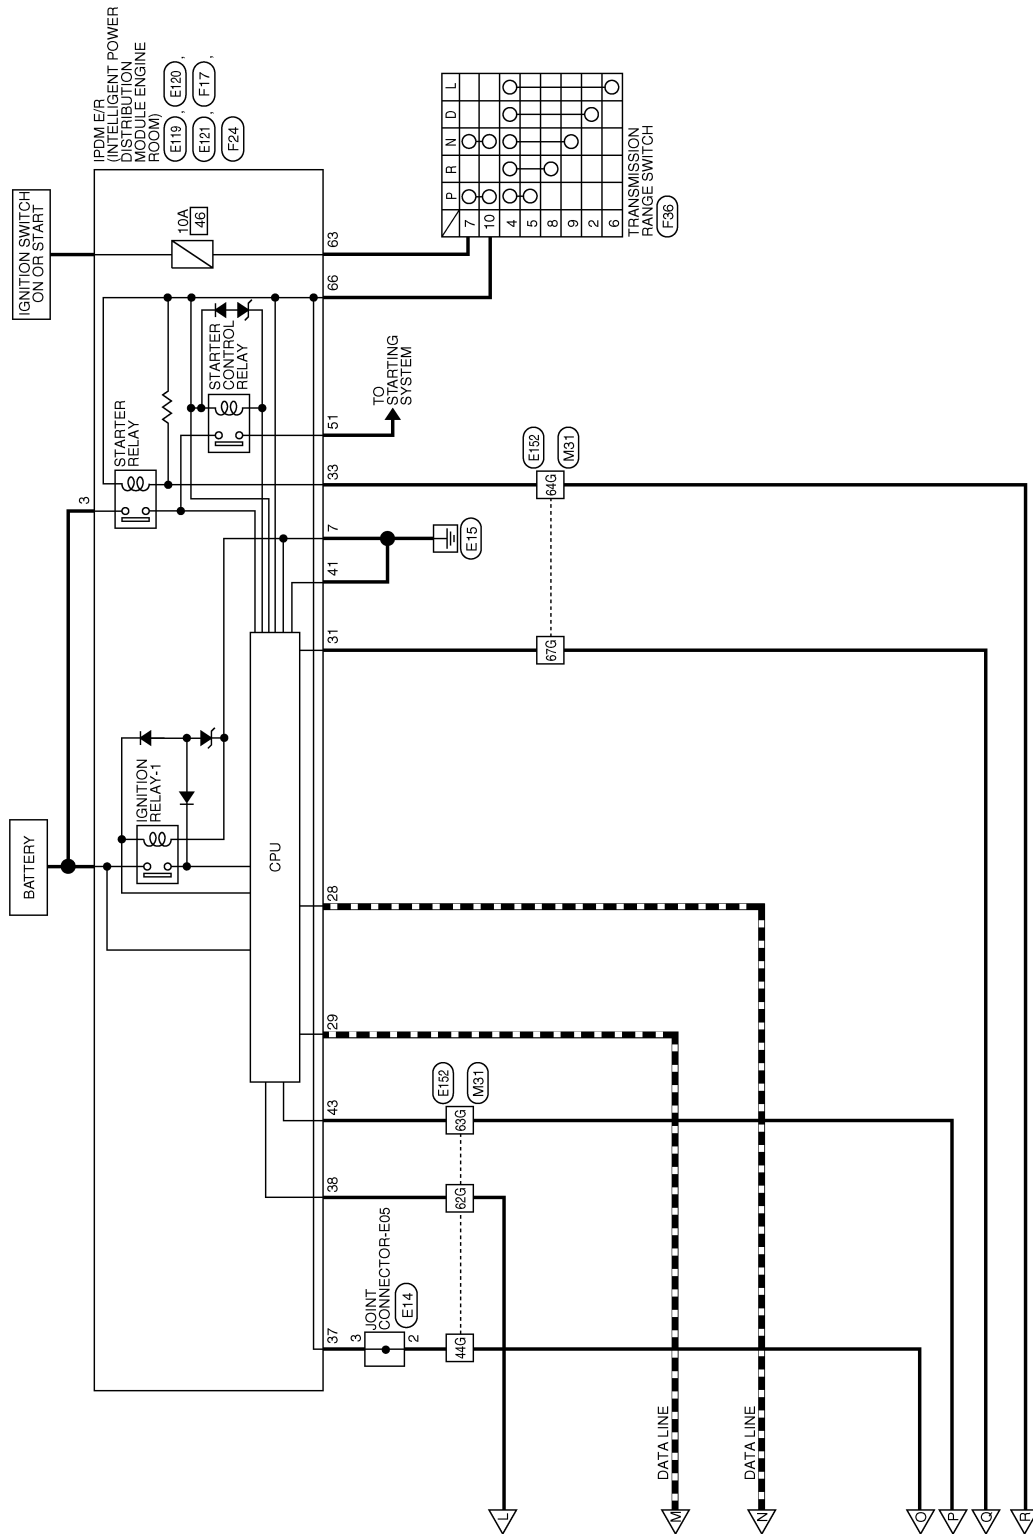

ABKWA2799GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P


ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2N	BG	-
4N	V	-
5N	Y	-
6N	W	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
13P	W	-

Connector No.	M14
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W	-
2	G	-

Connector No.	M17
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
3	BG	-
4	B	-
7	P	-
8	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

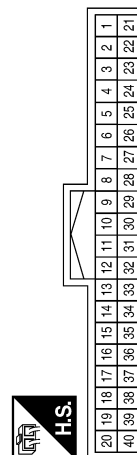

Terminal No.	Color of Wire	Signal Name
1	G	ENG START SW
18	V	SECURITY INDICATOR
20	W	SHIFT P
25	W	BRAKE SW FUSE
27	G	BRAKE SW LAMP
39	G	SHIFT N/P

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



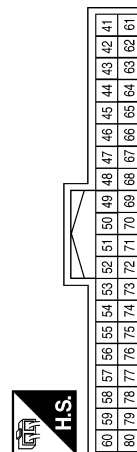


Terminal No.	Color of Wire	Signal Name
59	P	CAN-L
60	L	CAN-H
62	W	STARTER RELAY OUT
69	G	AT DEVICE OUT
70	P	IGN USM OUT 1

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

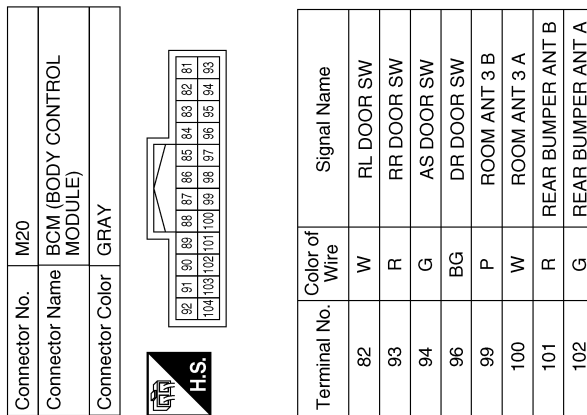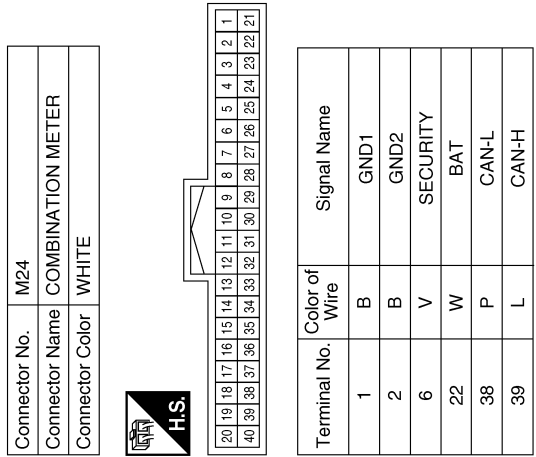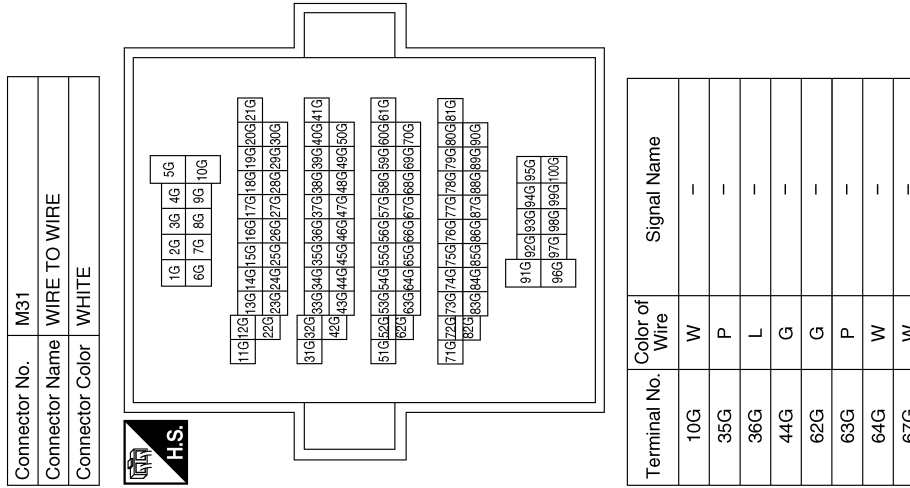

ABKIA6399GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—

Terminal No.	Color of Wire	Signal Name
15A	R	—
16A	G	—
49A	P	—
50A	W	—
65A	W	—
66A	BG	—
89A	L	—
90A	P	—

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

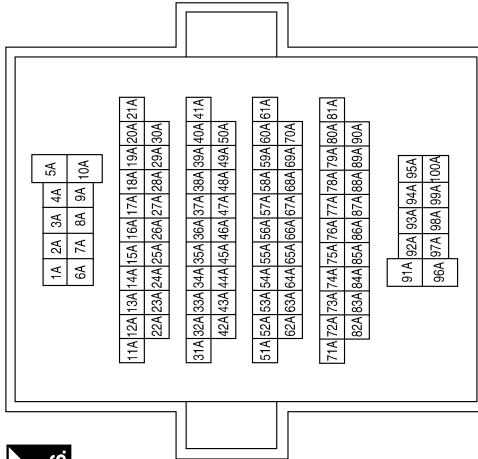


Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
9R	G	—
10R	W	—

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
17	R	—
18	W	—

Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—


ABKIA4727GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M78
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
5	G	—
6	W	—

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
111	P	ACC LED
114	W	AS DOOR ANT A
115	BG	AS DOOR ANT B
116	W	ROOM ANT 2 A
119	R	RF NIMOCO
121	G	DR DOOR ANT B
122	P	DR DOOR ANT A
123	W	ROOM ANT 1 A
124	G	ROOM ANT 1 B
128	R	ROOM ANT 2 B

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
138	V	BAT REAR DOOR
139	W	BAT POWER F/L
142	Y	BAT FRONT DOOR
143	B	GND 1

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE

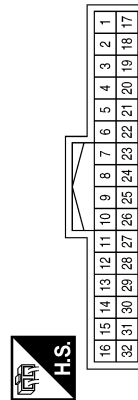


Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—
21	G	—
22	R	—

Connector No.	M86
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	BG	—
2	R	—
3	GR	—

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

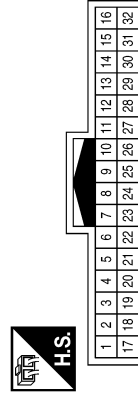


Terminal No.	Color of Wire	Signal Name
25	BG	—
26	W	—

ABKIA4728GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

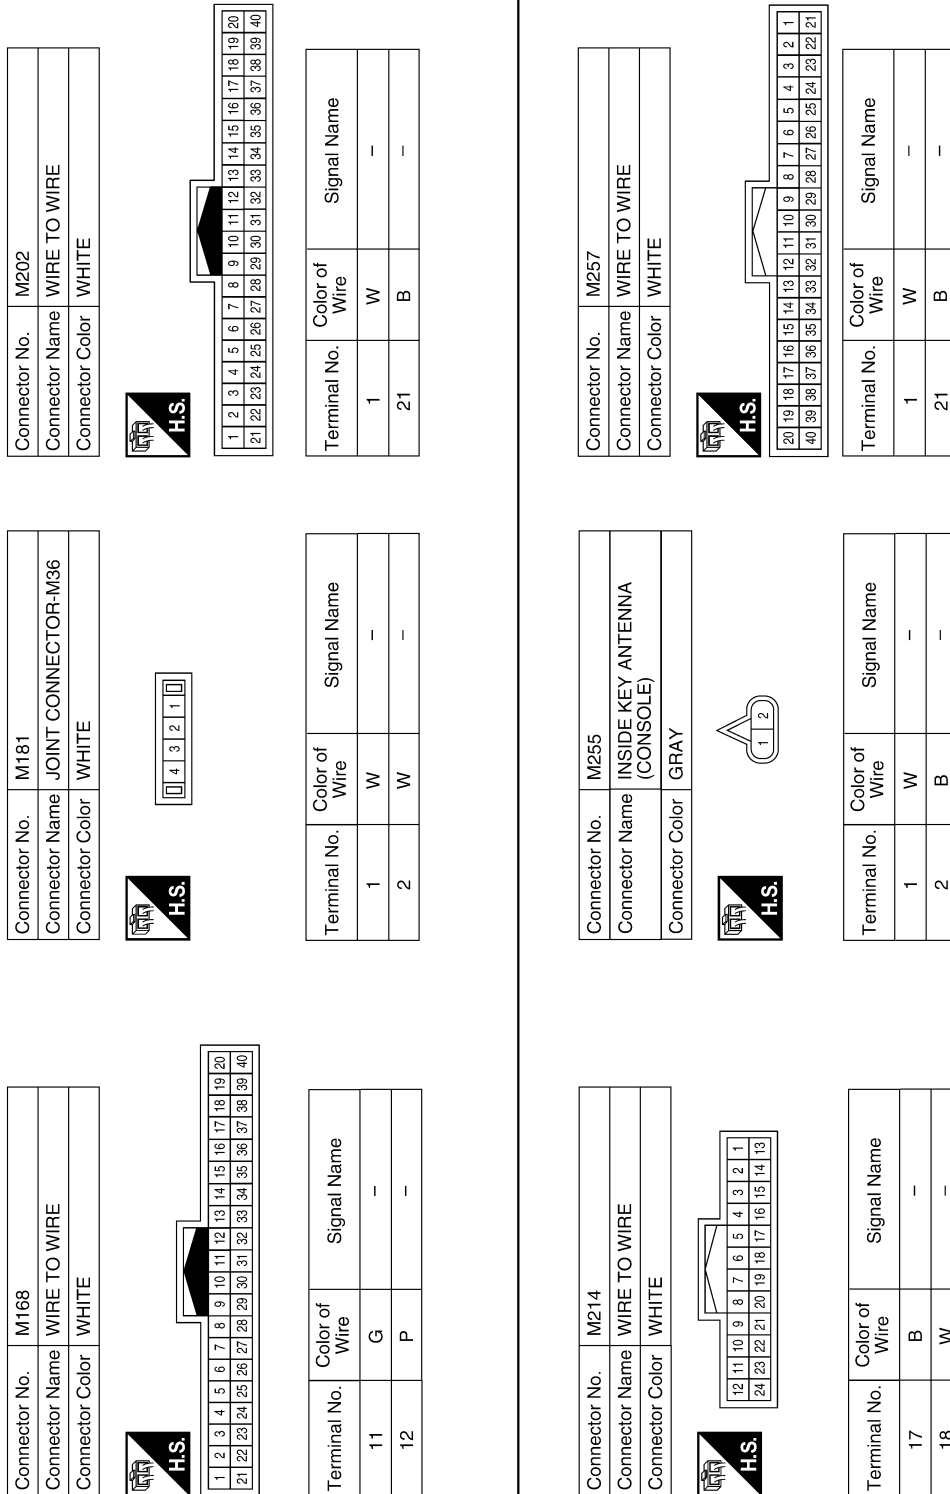

ABKIA4729GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5M	Y	-
7M	R	-

Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
2	W	-
3	W	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
4	L	-
7	P	-
10	P	-

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

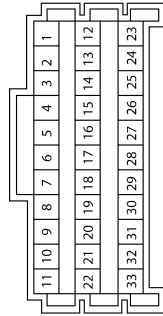

Terminal No.	Color of Wire	Signal Name
12	Y	-
13	Y	-
14	Y	-

Connector No.	E39
Connector Name	STOP LAMP RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-
3	Y	-
5	R	-


ABKIA4730GB

ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 
Terminal No.	Color of Wire	Signal Name
28	P	CAN-L
29	L	CAN-H
31	BG	DETENT SW
33	R	START CONT
37	W	CLUTCH I/L SW
38	P	PUSH START SW
41	B	GND (SIGNAL)
43	L	IGN SIGNAL

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK


Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

 Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
7	B	GND (POWER)

 Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	G	F/L IGNSW

ABK1A6384GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	F17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	51	Color of Wire	W	Signal Name	STARTER MOTOR
--------------	----	---------------	---	-------------	---------------

Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-
44G	W	-
62G	P	-
63G	L	-
64G	R	-
67G	BG	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

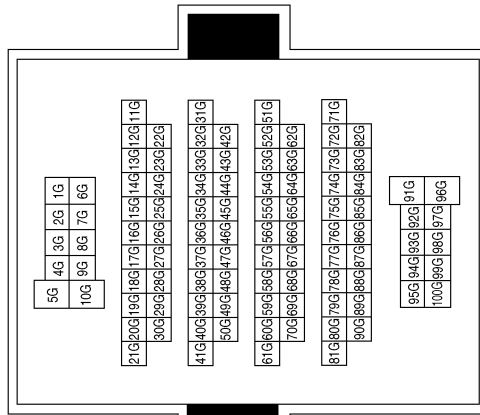


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	3	Color of Wire	L	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F36
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK

 

Terminal No.	7	Color of Wire	L	Signal Name	-
10	G	-	-	-	-

Connector No.	F24
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	63	Color of Wire	L	Signal Name	INHIBIT SW
66	G	-	-	NP SW	-

ABK1A6080GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
3	SB	-

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

ABK1A6081GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


Connector No.	B76
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-
2	G	-

Terminal No.	Color of Wire	Signal Name
15A	G	-
16A	W	-
49A	G	-
50A	W	-
65A	SB	-
66A	L	-
89A	L	-
90A	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

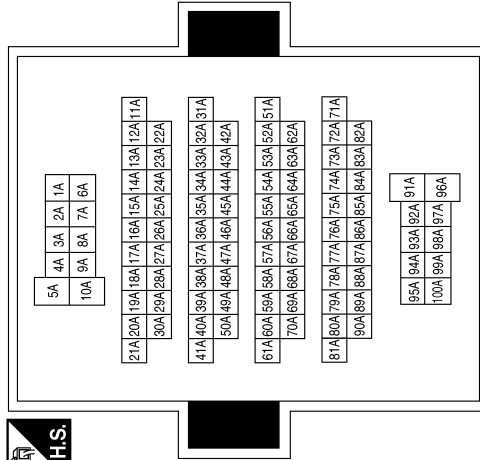


Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-
21	LG	-
22	LG	-

Connector No.	B77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	W	-
10	G	-

ABKIA6385GB


A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	LG	—

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	LG	—

Connector No.	B103
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—

Connector No.	B403
Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W	—
2	G	—

Connector No.	B400
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	W	—
10	G	—

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	L	—
19	P	—


ABK1A6386GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 
Terminal No.	Color of Wire	Signal Name
25	Y	—
26	LG	—

Connector No.	D15
Connector Name	FRONT OUTSIDE HANDLE ASSEMBLY LH
Connector Color	BLACK


Terminal No.	Color of Wire	Signal Name
1	LG	—
2	Y	—

 Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
11	Y	—
12	LG	—

 Connector No.	D115
Connector Name	FRONT OUTSIDE HANDLE ASSEMBLY RH
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
1	LG	—
2	Y	—

 ABKIA6387GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

Wiring Diagram

INFOID:0000000011154306

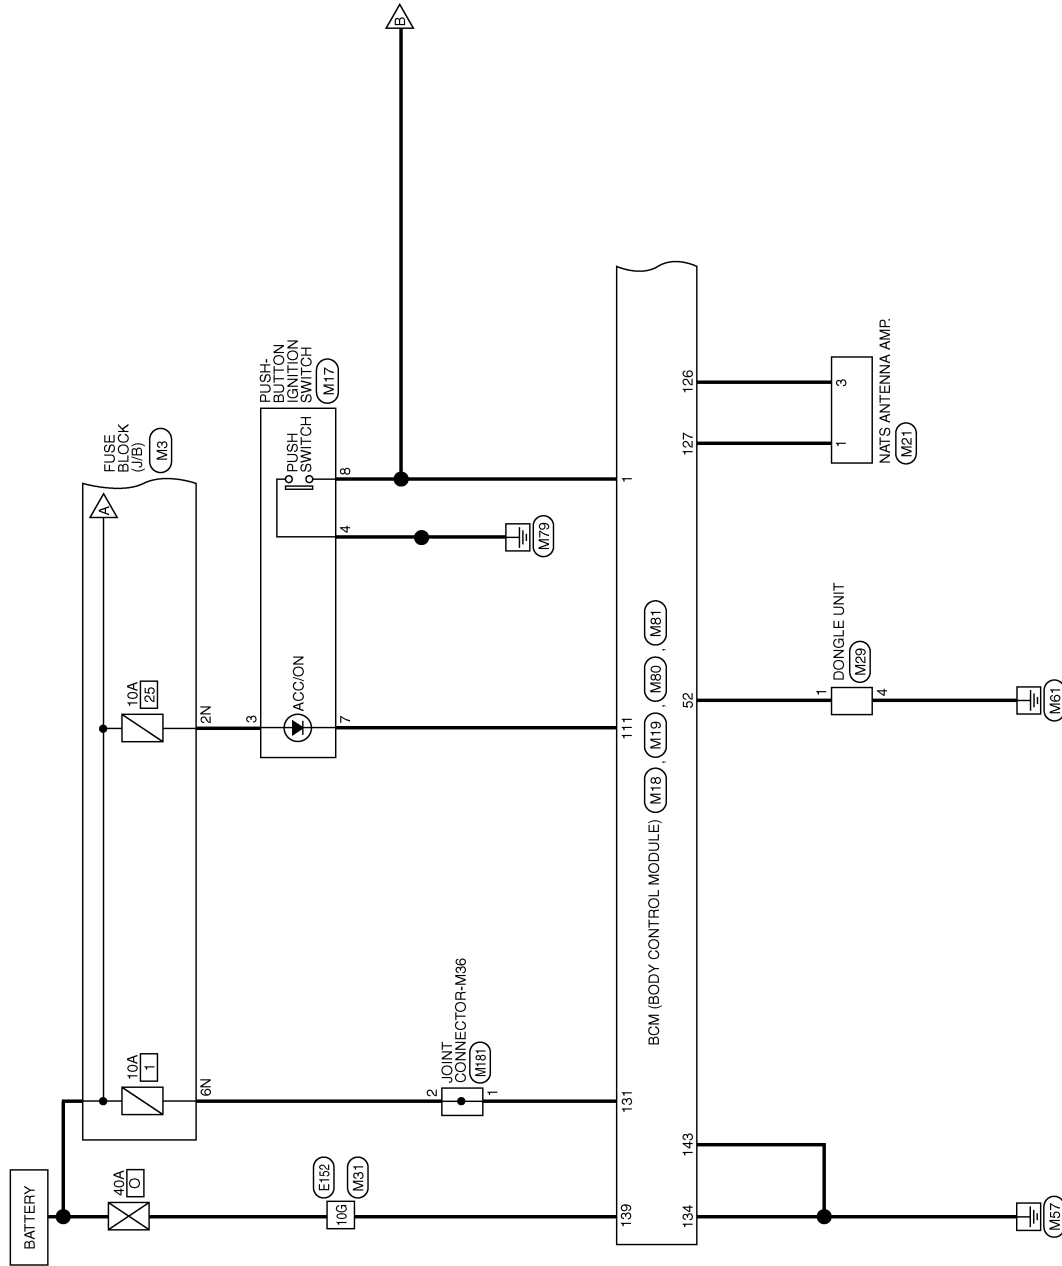

NVIS

ABKWA2800GB

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
REC
L
M
N
O
P




< WIRING DIAGRAM >

2015 Pathfinder

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

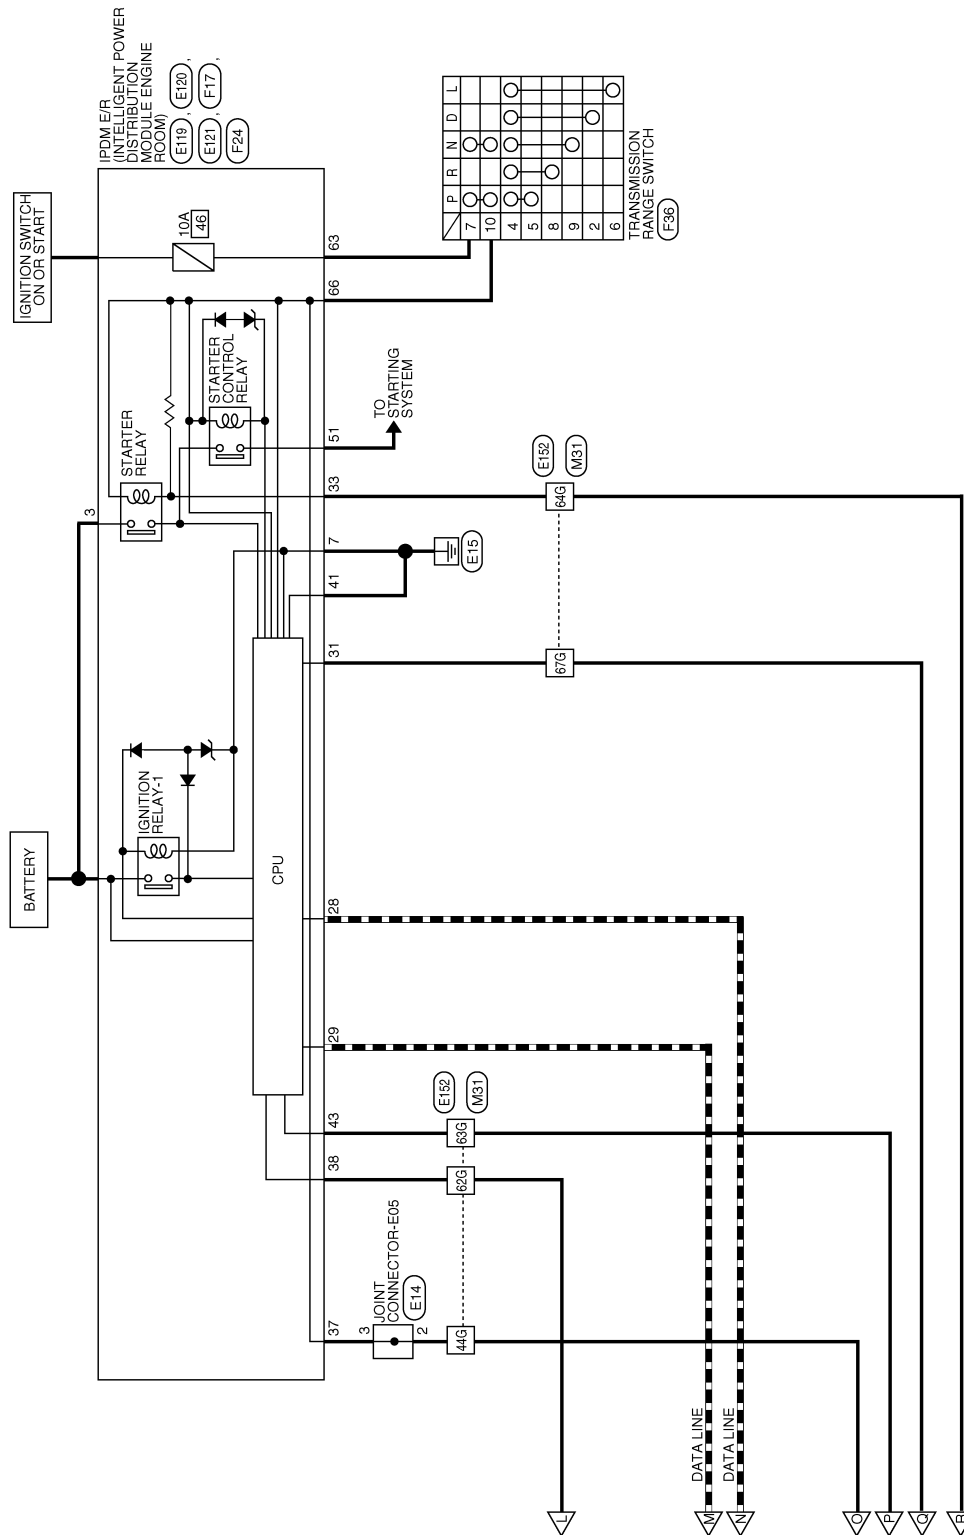

ABKWA2802GB


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


NVIS CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2N	BG	-
6N	W	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
13P	W	-

Connector No.	M17
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
3	BG	-
4	B	-
7	P	-
8	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

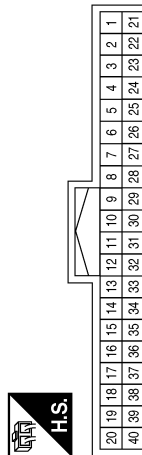

Terminal No.	Color of Wire	Signal Name
1	G	ENG START SW
18	V	SECURITY INDICATOR
20	W	SHIFT P
25	W	BRAKE SW FUSE
27	G	BRAKE SW LAMP
39	G	SHIFT N/P

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

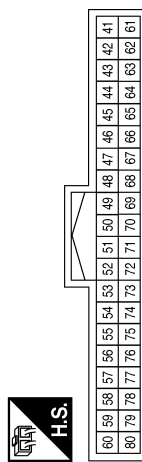

Terminal No.	Color of Wire	Signal Name
52	W	AUDIO DONGLE
59	P	CAN-L
60	L	CAN-H
62	W	STARTER RELAY OUT
69	G	AT DEVICE OUT
70	P	IGN USM OUT 1

Connector No.	M21
Connector Name	NATS ANTENNA AMP.
Connector Color	WHITE






Terminal No.	Color of Wire	Signal Name
1	BG	-
3	P	-

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

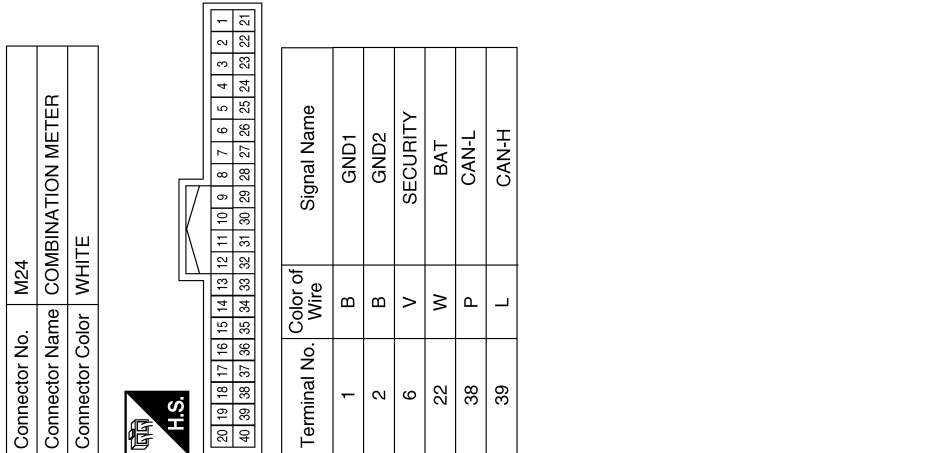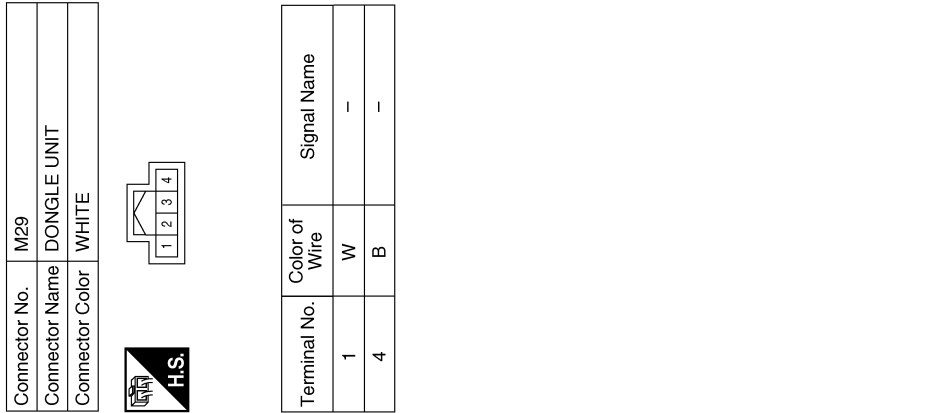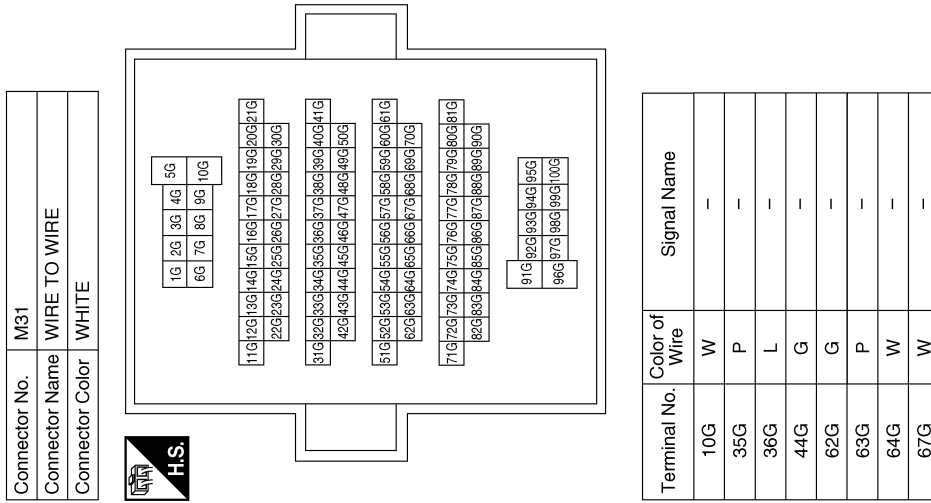

ABKIA6389GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

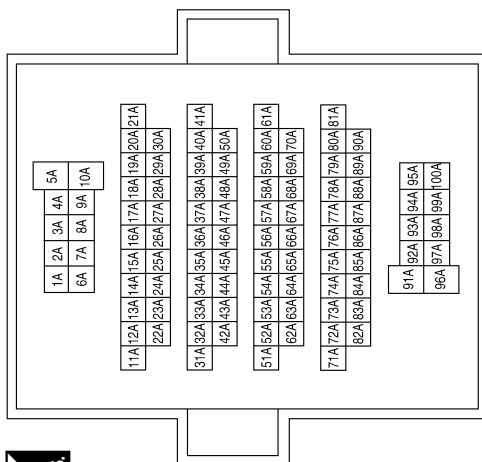

Connector No.	M78
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	G	-
6	W	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
9R	G	-
10R	W	-

Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

ABKIA4736GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



137	136	135	134	133	132	131	130	129
-----	-----	-----	-----	-----	-----	-----	-----	-----

Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



116	115	114	113	112	111	110	109	108	107	106	105
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

Terminal No.	Color of Wire	Signal Name
111	P	ACC LED
126	P	IMMO START BUTTON ANT B
127	BG	IMMO START BUTTON ANT A

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



4M	3M	2M	1M
----	----	----	----

Terminal No.	Color of Wire	Signal Name
5M	Y	—
7M	R	—

Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK



12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name
2	W	—
3	W	—

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	W	—
2	W	—

AAKIA0933GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	E39
Connector Name	STOP LAMP RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-
3	Y	-
5	R	-

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

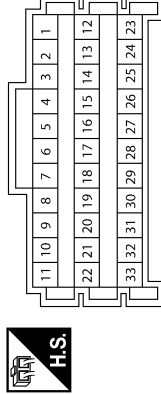

Terminal No.	Color of Wire	Signal Name
12	Y	-
13	Y	-
14	Y	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
4	L	-
7	P	-
10	P	-

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



7	8	9		10	11	
12	13	14	15	16	17	18

Terminal No.	7
Color of Wire	B
Signal Name	GND (POWER)

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



3	4	5	6
---	---	---	---

Terminal No.	3
Color of Wire	G
Signal Name	F/L IGNSW

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50

Terminal No.	Color of Wire	Signal Name
28	P	CAN-L
29	L	CAN-H
31	BG	DETENT SW
33	R	START CONT
37	W	CLUTCH I/L SW
38	P	PUSH START SW
41	B	GND (SIGNAL)
43	L	IGN SIGNAL

Connector No.	F17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




51

Terminal No.	51
Color of Wire	W
Signal Name	STARTER MOTOR

Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-
44G	W	-
62G	P	-
63G	L	-
64G	R	-
67G	BG	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

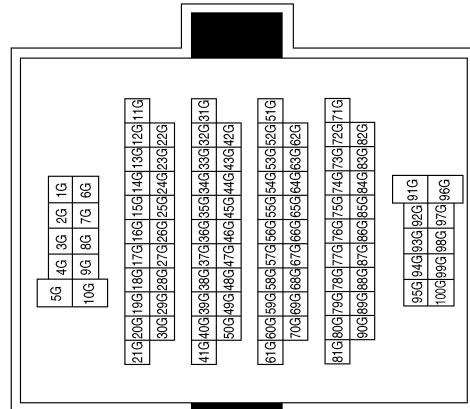

ABK1A6390GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	F36
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
7	L	-
10	G	-

Connector No.	F24
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
63	L	INHIBIT SW
66	G	NP SW

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

ABK1A6391GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
18	L	—
19	P	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

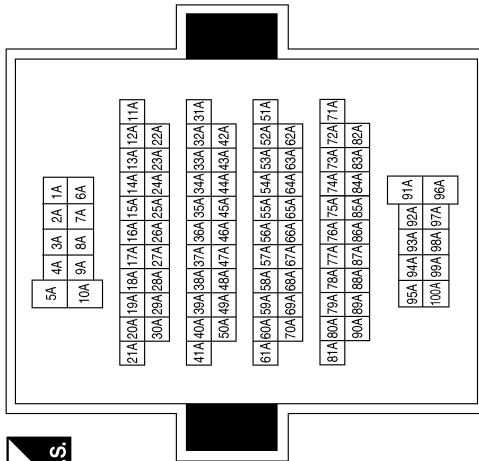

Terminal No.	Color of Wire	Signal Name
89A	L	—
90A	P	—

Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—

Connector No.	B103
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
18	L	—
19	P	—

ABK1A6392GB

VEHICLE SECURITY SYSTEM


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

Wiring Diagram

INFOID:0000000011154307

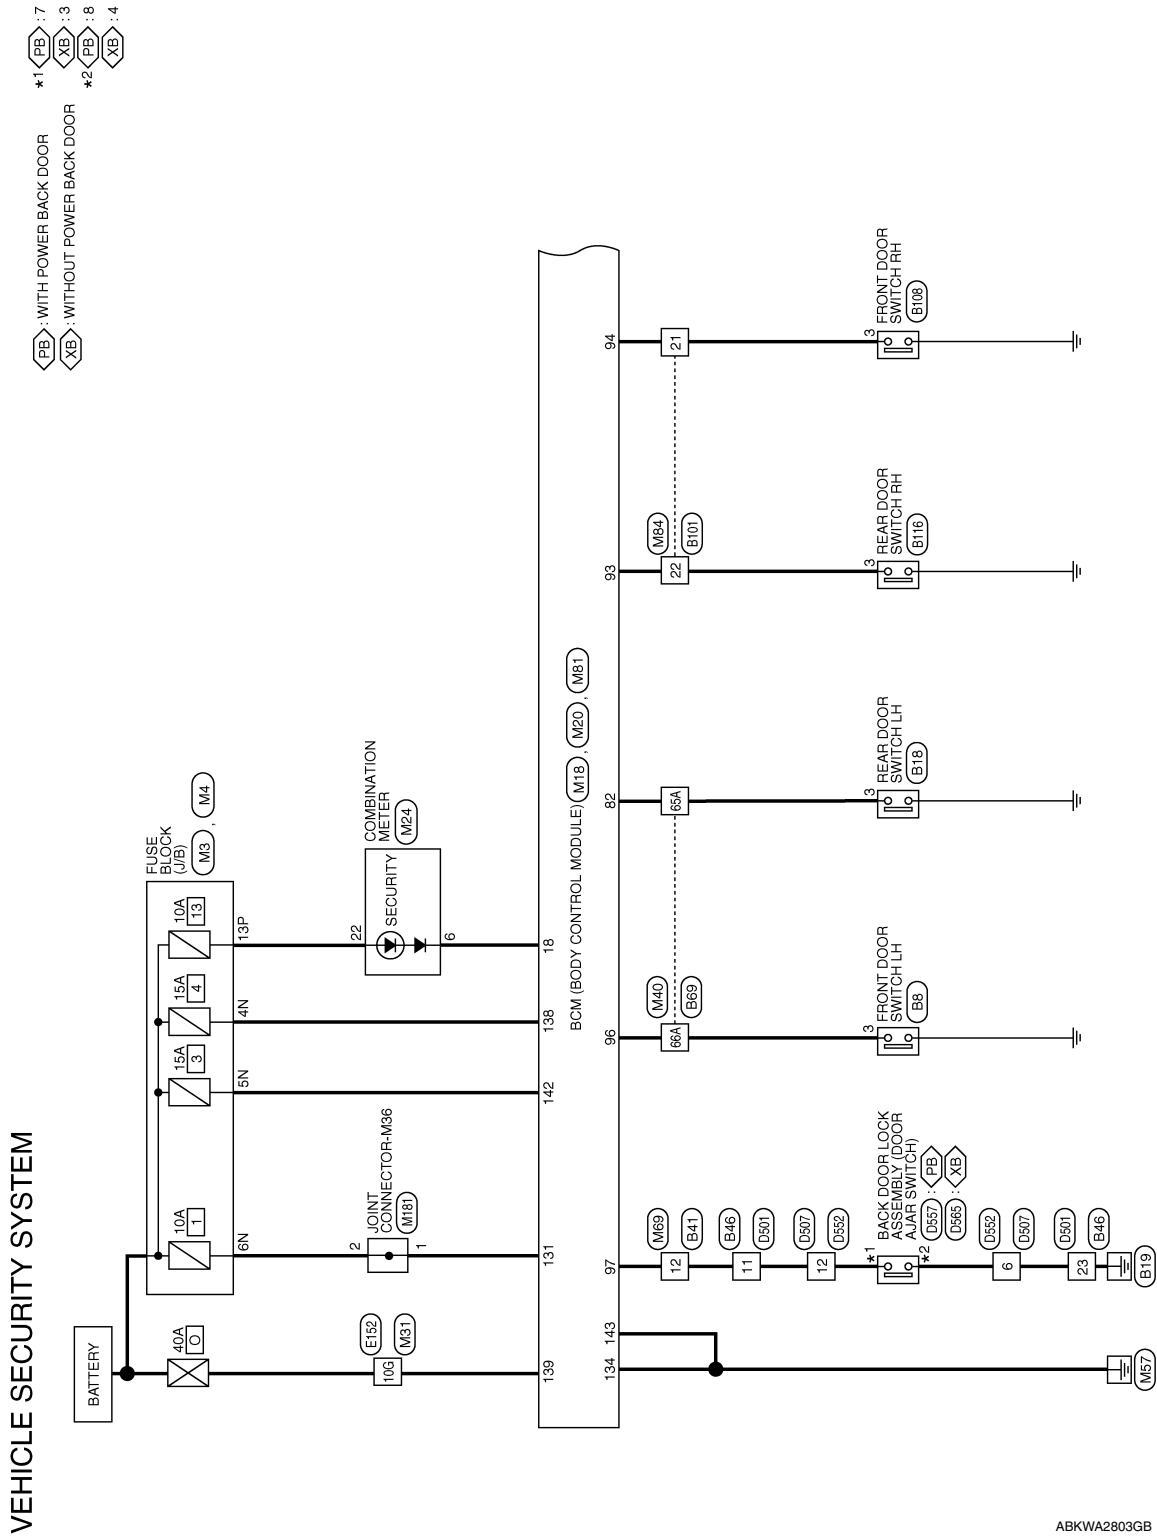


ABKWA2803GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

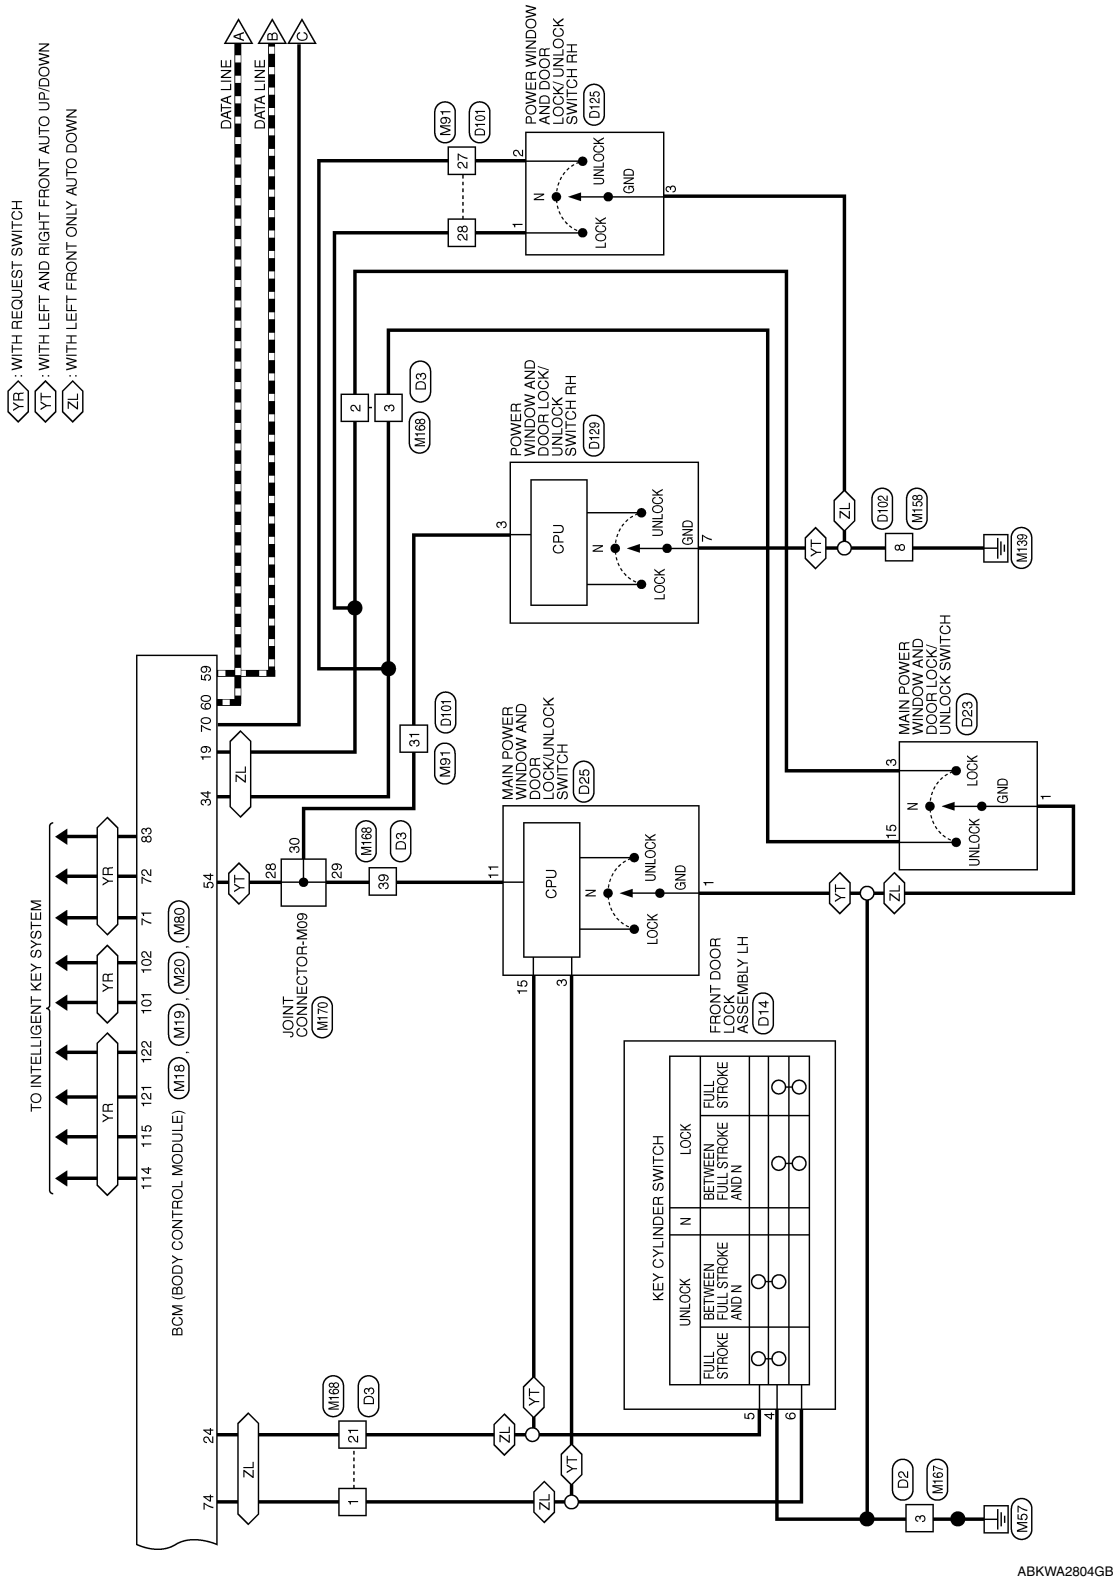


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

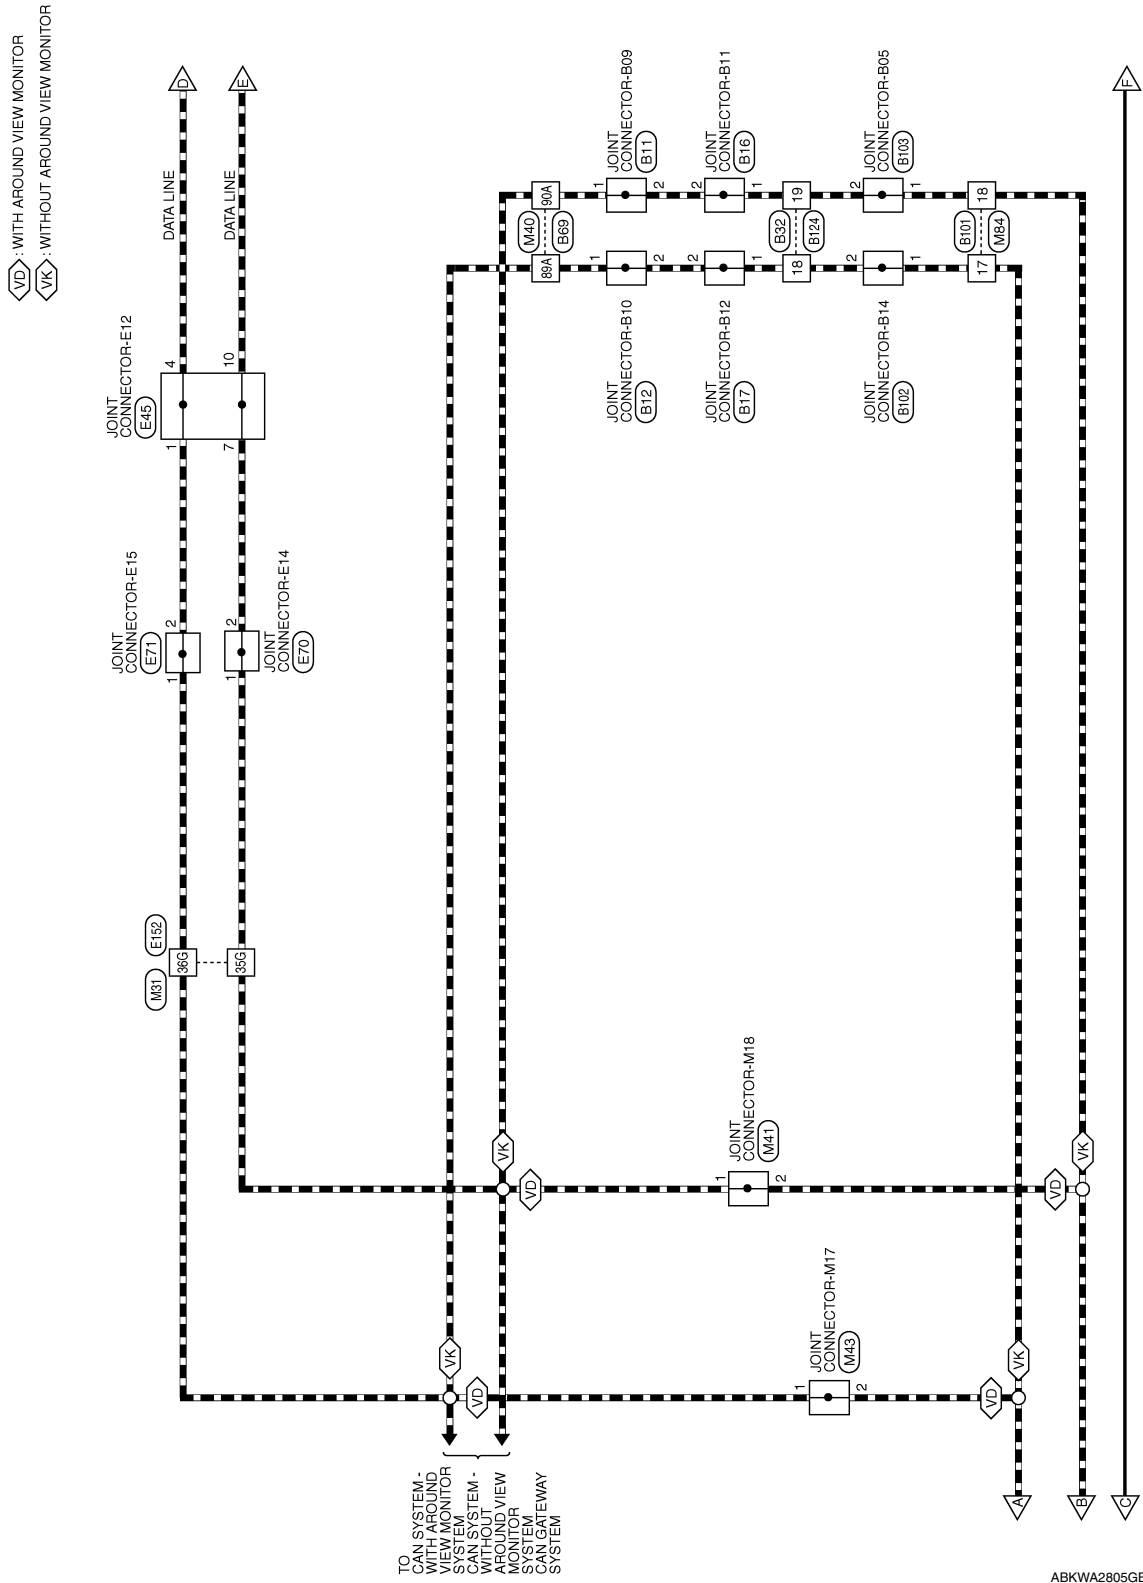

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

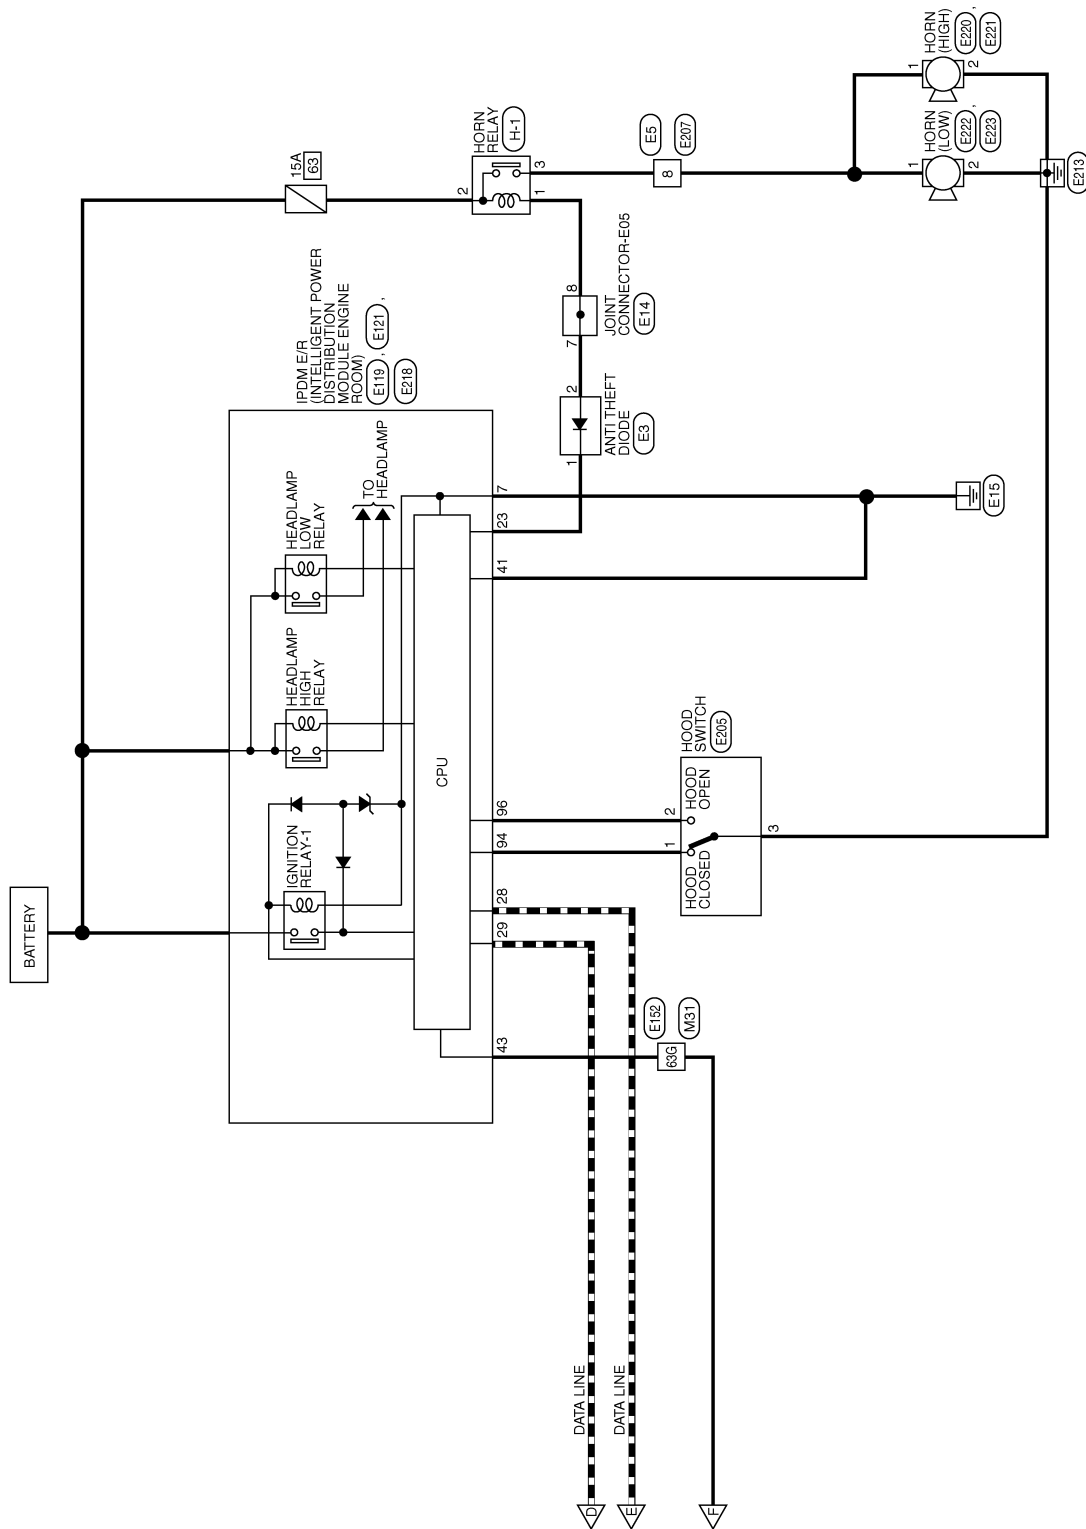

ABKWA2806GB


VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4N	V	-
5N	Y	-
6N	W	-

Terminal No.	Color of Wire	Signal Name
13P	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
18	V	SECURITY INDICATOR
19	Y	CENTRAL DOOR LOCK SW
24	SB	DOOR KEY/C UNLOCK SW
34	BR	CENTRAL DOOR UNLOCK SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
54	W	PW LIN/COM
59	P	CAN-L
60	L	CAN-H
70	P	IGN USM OUT 1
71	R	DR REQUEST SW
72	G	AS REQUEST SW
74	BR	DOOR KEY/C LOCK SW

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



92	91	90	89	88	87	86	85	84	83	82	81
104	103	102	101	100	99	98	97	96	95	94	93

Terminal No.	Color of Wire	Signal Name
82	W	RL DOOR SW
83	BG	BACK DOOR REQUEST SW
93	R	RR DOOR SW
94	G	AS DOOR SW
96	BG	DR DOOR SW
97	W	BACK DOOR SW
101	R	REAR BUMPER ANT B
102	G	REAR BUMPER ANT A

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21


Terminal No.	Color of Wire	Signal Name
6	V	SECURITY
22	W	BAT

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

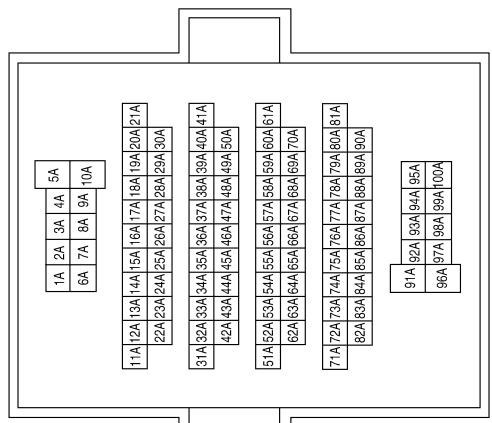

Terminal No.	Color of Wire	Signal Name
65A	W	-
66A	BG	-
89A	L	-
90A	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

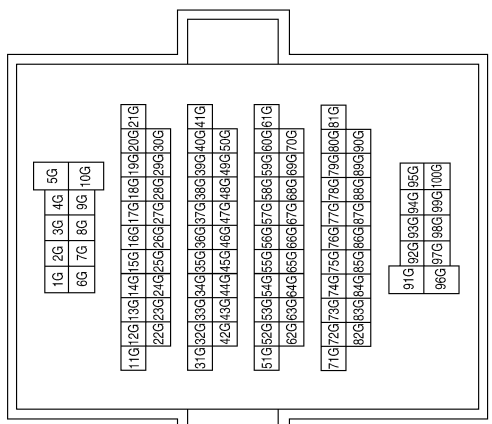

Terminal No.	Color of Wire	Signal Name
10G	W	-
35G	P	-
36G	L	-
63G	P	-

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE

4	3	2	1
---	---	---	---



Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
12	W	—

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



116	115	114	113	112	111	110	109	108	107	106	105
128	127	126	125	124	123	122	121	120	119	118	117

Terminal No.	Color of Wire	Signal Name
114	W	AS DOOR ANT A
115	BG	AS DOOR ANT B
121	G	DR DOOR ANT B
122	P	DR DOOR ANT A

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

137	136	135	134	133	132	131	130	129
143	142	141	140	139	138			



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
138	V	BAT REAR DOOR
139	W	BAT POWER F/L
142	Y	BAT FRONT DOOR
143	B	GND 1

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—
21	G	—
22	R	—

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
27	BR	—
28	Y	—
31	W	—

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4
5	6	7	8
9	10		

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
8	B	-

Terminal No.	Color of Wire	Signal Name
3	B	-

Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-
3	BR	-
21	SB	-
39	W	-

Connector No.	M170
Connector Name	JOINT CONNECTOR-M09
Connector Color	WHITE



11	10	9	8	7	6	5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12
33	32	31	30	29	28	27	26	25	24	23

Terminal No.	Color of Wire	Signal Name
28	W	-
29	W	-
30	W	-

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Connector No.	E3
Connector Name	ANTI THEFT DIODE
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y	-

ABKIA4743GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE

 


Terminal No.	Color of Wire	Signal Name
1	L	—
4	L	—
7	P	—
10	P	—

Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
7	Y	—
8	Y	—

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
8	G	—

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—

ABKIA4744GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

7	8		9	10	11
12	13	14	15	16	17
			18		



Terminal No.	7
Color of Wire	B
Signal Name	GND (POWER)

Terminal No.	Color of Wire	Signal Name
23	LG	HORN SW
28	P	CAN-L
29	L	CAN-H
41	B	GND (SIGNAL)
43	L	IGN SIGNAL

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50




Connector No.	E205
Connector Name	HOOD SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	R	-
3	B	-

Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-
63G	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

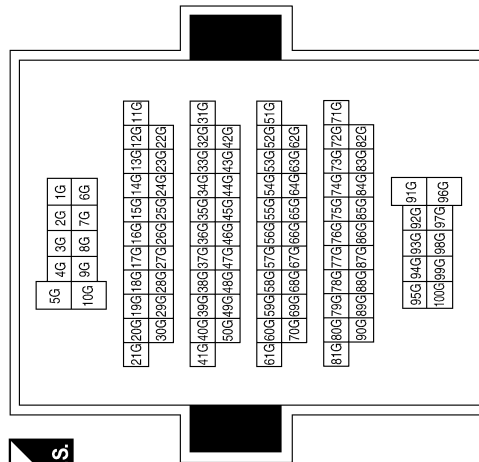

ABKIA4775GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E220
Connector Name	HORN (HIGH)
Connector Color	BLACK




Terminal No.	1	Color of Wire	G	Signal Name	—
--------------	---	---------------	---	-------------	---

Connector No.	E218
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	94	Color of Wire	LG	Signal Name	HOODSW 2
	96		R		HOODSW

Connector No.	E207
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	8	Color of Wire	G	Signal Name	—
--------------	---	---------------	---	-------------	---

Connector No.	E223
Connector Name	HORN (LOW)
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	—
--------------	---	---------------	---	-------------	---

Connector No.	E222
Connector Name	HORN (LOW)
Connector Color	BLACK



Terminal No.	1	Color of Wire	G	Signal Name	—
--------------	---	---------------	---	-------------	---

Connector No.	E221
Connector Name	HORN (HIGH)
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	—
--------------	---	---------------	---	-------------	---

AAKIA0957GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	L	-

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	SB	-

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

AAKIA0958GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
18	L	—
19	P	—

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
12	G	—

Connector No.	B46
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
11	G	—
23	GR	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

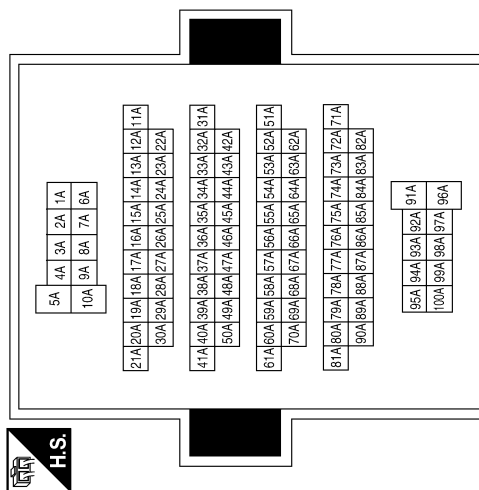

Terminal No.	Color of Wire	Signal Name
65A	SB	—
66A	L	—
89A	L	—
90A	P	—

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—
21	LG	—
22	LG	—


ABKIA4745GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE

 

Terminal No.	3	Color of Wire	LG	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	B103
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	3	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	3	Color of Wire	LG	Signal Name	-
--------------	---	---------------	----	-------------	---

ABKIA6395GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	D23
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (WITH LEFT FRONT ONLY AUTO DOWN)
Connector Color	WHITE

7	6	5	4	3	2	1		
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
1	B	GND
3	Y	LOCK CDL
15	BR	UNLOCK CDL

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	GRAY

1	2	3	4	5	6
---	---	---	---	---	---



Terminal No.	Color of Wire	Signal Name
4	B	-
5	SB	-
6	BR	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-
3	BR	-
21	SB	-
39	Y	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	2	1		
10	9	8	7	6	5



Terminal No.	Color of Wire	Signal Name
8	B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17



Terminal No.	Color of Wire	Signal Name
27	BR	-
28	Y	-
31	Y	-

Connector No.	D25
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)
Connector Color	WHITE

7	6	5	4	3	2	1		
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
1	B	GND
3	BR	KEY CYL LOCK
11	Y	COM
15	SB	UNLOCK CDL

ABKIA6396GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Connector No.	D129
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH (WITH LEFT AND RIGHT FRONT AUTO UP/DOWN)
Connector Color	WHITE



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
3	Y	COM
7	B	GND

Connector No.	D125
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH (WITH LEFT FRONT ONLY AUTO DOWN)
Connector Color	WHITE



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
1	Y	—
2	BR	—
3	B	—

Connector No.	D557
Connector Name	BACK DOOR LOCK ASSEMBLY (WITH POWER BACK DOOR)
Connector Color	WHITE



1	2	3
4	5	6
7	8	

Connector No.	D552
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
7	G	—
8	B	—

Connector No.	D507
Connector Name	WIRE TO WIRE
Connector Color	WHITE



8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9

Terminal No.	Color of Wire	Signal Name
6	B	—
12	P	— (WITH POWER BACK DOOR)
12	LG	— (WITHOUT POWER BACK DOOR)

ABKIA6397GB


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

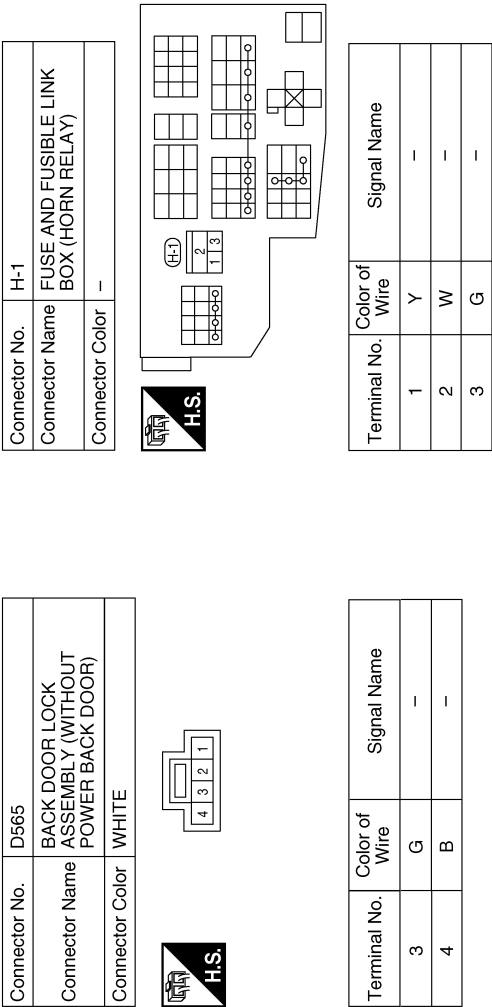

ABK1A6398GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000011154308

OVERALL SEQUENCE

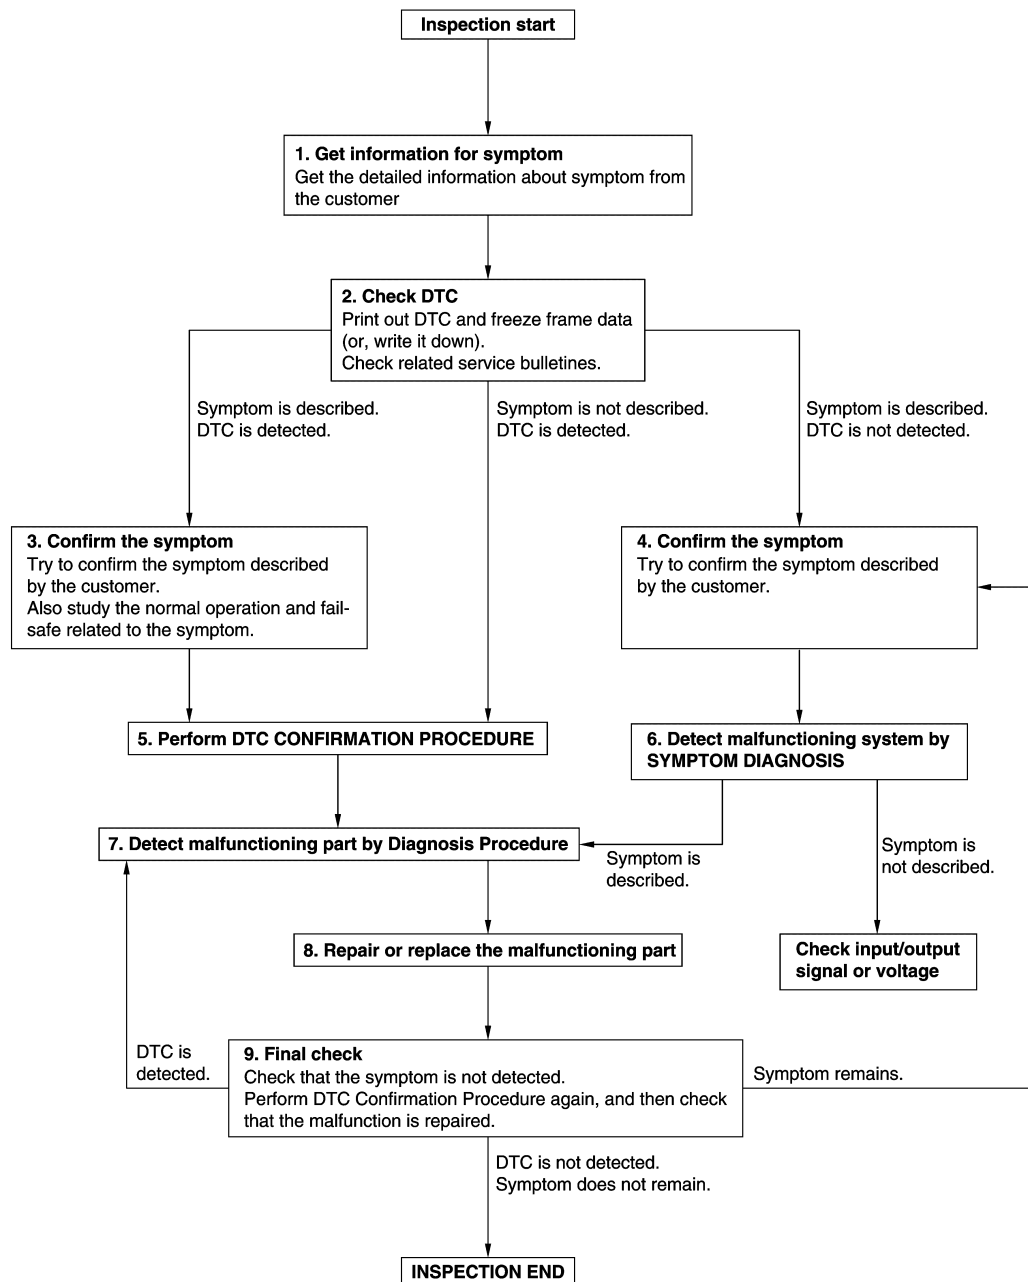

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

JMKIA8652GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-50. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-47. "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-47. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ECM

ECM : Description

INFOID:0000000011154309

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one*.

*: New one means an ECM that has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

NOTE:

- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

ECM : Work Procedure

INFOID:0000000011154310

1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Contact backside of registered Intelligent key* to push-button ignition switch, then turn ignition switch to ON.
*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the ON position for at least 5 seconds.
4. Turn ignition switch to OFF.
5. Check that the engine starts.

>> GO TO 2.

2.PERFORM ADDITIONAL SERVICE WHEN REPLACING ECM

Perform [EC-156, "Work Procedure"](#) (USA and Canada) or [EC-657, "Work Procedure"](#) (Mexico).

>> END

BCM

BCM : Description

INFOID:0000000011154311

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS). Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

BCM : Work Procedure

INFOID:0000000011154312

1.SAVING VEHICLE SPECIFICATION

ⓈCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-65, "CONFIGURATION \(BCM\) : Description"](#).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2.REPLACE BCM

Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

>> GO TO 3.

3.WRITING VEHICLE SPECIFICATION

CONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-65, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

4.INITIALIZE BCM (NATS)

Perform BCM initialization. (NATS) Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> WORK END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DTC/CIRCUIT DIAGNOSIS

P1610 LOCK MODE

Description

INFOID:0000000011154313

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal.

DTC Logic

INFOID:0000000011154314

DTC DETECTION LOGIC

NOTE:

- If DTC P1610 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC P1610 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects a communication malfunction between ECM and BCM 5 times or more.	—

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-78, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154315

1. CHECK ENGINE START FUNCTION

1. Check that there are no DTC's except for DTC P1610 detected.
If detected, erase the DTC after fixing.
2. Turn ignition switch OFF.
3. Contact the registered Intelligent Key backside to push-button ignition switch and wait 5 seconds.
4. Turn ignition switch ON.
5. Turn ignition switch OFF and wait 5 seconds.
6. Repeat steps 3 and 5 twice (a total of 3 times).
7. Check that engine can start.

>> Inspection End.

P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1611 ID DISCORD, IMMU-ECM

DTC Logic

INFOID:0000000011154316

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMU-ECM	The ID verification results between BCM and ECM are NG.	• Harness or connectors (The CAN communication line is open or shorted.) • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-79, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154317

1.PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 2.

2.CHECK SELF DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "ENGINE" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC P1611. Refer to [SEC-79, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 4.

4.REPLACE ECM

1. Replace ECM. Refer to [EC-526, "Removal and Installation"](#) (USA and Canada) or [EC-916, "Removal and Installation"](#) (Mexico).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-156, "Work Procedure"](#) (USA and Canada) or [EC-657, "Work Procedure"](#) (Mexico).

>> Inspection End.

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1612 CHAIN OF ECM-IMMU

DTC Logic

INFOID:0000000011154318

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	• Harness or connectors (The CAN communication line is open or shorted.) • ECM • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-80, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154319

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2.CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-190, "Diagnosis Procedure"](#) (USA and Canada) or [EC-684, "Diagnosis Procedure"](#) (Mexico).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the harness.

3.PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-80, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#)
NO >> Inspection End.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1614 CHAIN OF IMMU-KEY

DTC Logic

INFOID:0000000011154320

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	CHAIN OF IMMU-KEY	Inactive communication between NATS antenna amp. and BCM	• Harness or connectors (NATS antenna amp. circuit is open or shorted.) • NATS antenna amp. • BCM • Intellegent Key fob

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key back side to push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-81. "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-81. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154321

Regarding Wiring Diagram information, refer to [SEC-44. "Wiring Diagram"](#).

SEC

1.CONNECTOR INSPECTION

1. Disconnect BCM and NATS antenna amp.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace as necessary.

2.CHECK NATS ANTENNA AMP. CIRCUIT

1. Disconnect BCM connector and NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M80	126	M21	3	Yes
	127		1	

3. Check continuity between BCM harness connector and ground.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M80	126		No
	127		



Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK NATS ANTENNA AMP INPUT SIGNAL

- Turn ignition switch ON.
- Check signal between BCM harness connector and ground using oscilloscope.

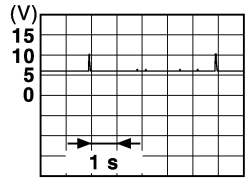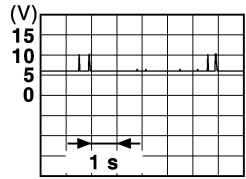(+) BCM		(-)	Condition	Signal (Reference value)
Connector	Terminal			
M80	126, 127	Ground	When Intelligent Key is in the antenna detection area	 JMKIA3839GB
			When Intelligent Key is not in the antenna detection area	 JMKIA5951GB

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Replace NATS antenna amp. Refer to [SEC-151, "Removal and Installation"](#).

B210B STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210B STARTER CONTROL RELAY

DTC Logic

INFOID:0000000011154323

DTC DETECTION LOGIC

NOTE:

- If DTC B210B is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B210B is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210B	START CONT RLY ON	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the ON position for 1 second or more: • Starter control relay signal (CAN) from BCM. • Starter relay status signal (CAN) from BCM. • Starter control relay and starter relay status signal (IPDM E/R input). • Starter control relay control signal (IPDM E/R output).	• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to start under the following conditions and wait for at least 1 second:
 - CVT selector lever is in the P (Park) or N (Neutral) position.
 - Depress the brake pedal.
2. Check "Self Diagnostic Result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-83, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154324

1.INSPECTION START

Perform "Self Diagnostic Result" of "IPDM E/R" using CONSULT.

Is display history of DTC B210B CRNT?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
- NO >> Refer to [GI-47, "Intermittent Incident"](#).

B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210C STARTER CONTROL RELAY

DTC Logic

INFOID:0000000011154326

DTC DETECTION LOGIC

NOTE:

- If DTC B210C is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B210C is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210C may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210C	START CONT RLY OFF CIRC	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the OFF position for 1 second or more: • Starter control relay signal (CAN) from BCM. • Starter relay status signal (CAN) from BCM. • Starter control relay and starter relay status signal (IPDM E/R input). • Starter control relay control signal (IPDM E/R output).	• IPDM E/R • BCM • Battery

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to start under the following conditions and wait for at least 1 second:
 - CVT selector lever is in the P (Park) or N (Neutral) position.
 - Depress the brake pedal.
2. Check "Self Diagnostic Result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-84, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154327

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.PERFORM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "IPDM E/R" using CONSULT.

Is display history of DTC B210C CRNT?

- YES >> GO TO 2.
NO >> Refer to [GI-47, "Intermittent Incident"](#).

2.CHECK STARTER CONTROL RELAY CONTROL CIRCUITS VOLTAGE

Check voltage between IPDM E/R connectors and ground.

IPDM E/R		Ground	Voltage (Approx.)
Connector	Terminal		
E119	33	—	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
NO >> GO TO 3.

B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3. CHECK STARTER CONTROL RELAY CONTROL CIRCUIT CONTINUITY

1. Disconnect IPDM E/R connector E119 and BCM connector M18.
2. Check continuity between IPDM E/R connector E119 and BCM connector M18.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E119	33	M18	62	Yes

3. Check continuity between IPDM E/R connector E119 and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	33	—	No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

B210D STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210D STARTER RELAY

DTC Logic

INFOID:0000000011154329

DTC DETECTION LOGIC

NOTE:

- If DTC B210D is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B210D is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).
- If DTC B210D is displayed with DTC B2617, first perform the trouble diagnosis for DTC B2617. Refer to [SEC-131, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210D	STARTER RELAY ON CIRC	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the ON position for 5 second or more: • Starter control relay signal (CAN) from BCM. • Starter relay status signal (CAN) from BCM. • Starter control relay and starter relay status signal (IPDM E/R input). • Starter control relay control signal (IPDM E/R output).	• Harness or connectors (starter motor relay control circuit open or short). • IPDM E/R • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Ignition switch ON under the following conditions and wait for at least 1 second:
 - CVT selector lever is in the P (Park) or N (Neutral) position.
 - Do not depress the brake pedal.
2. Check "Self Diagnostic Result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-86, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154330

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1. PERFORM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "IPDM E/R" using CONSULT.

Is display history of DTC B210D CRNT?

- YES >> GO TO 2.
NO >> Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK STARTER CONTROL RELAY CONTROL CIRCUITS VOLTAGE

Check voltage between IPDM E/R connectors and ground.

IPDM E/R		Ground	Voltage (Approx.)
Connector	Terminal		
E119	33	—	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
NO >> GO TO 3.

B210D STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3. CHECK STARTER CONTROL RELAY CONTROL CIRCUIT CONTINUITY

1. Disconnect IPDM E/R connectors E119 and BCM connector M19.
2. Check continuity between IPDM E/R connector E119 and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	33	—	No

Is the inspection result normal?

- YES >> Refer to [SEC-129. "Diagnosis Procedure"](#).
NO >> Repair or replace harness or connectors.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210E STARTER RELAY

DTC Logic

INFOID:0000000011154332

DTC DETECTION LOGIC

NOTE:

- If DTC B210E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B210E is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210F may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210E	STARTER RELAY OFF	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the OFF position for 5 second or more: • Starter control relay signal (CAN) from BCM. • Starter relay status signal (CAN) from BCM. • Starter control relay and starter relay status signal (IPDM E/R input). • Starter control relay control signal (IPDM E/R output).	• IPDM E/R • BCM • Battery

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for at least 1 second:
 - CVT selector lever is in the P (Park) or N (Neutral) position.
 - Do not depress the brake pedal.
2. Check "Self Diagnostic Result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-88, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154333

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1. PERFORM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "IPDM E/R" using CONSULT.

Is display history of DTC B210E CRNT?

- YES >> GO TO 2.
NO >> Refer to [GI-47, "Intermittent Incident"](#).

2. CHECK STARTER CONTROL RELAY CONTROL CIRCUITS VOLTAGE

Check voltage between IPDM E/R connectors and ground.

IPDM E/R		Ground	Voltage (Approx.)
Connector	Terminal		
E119	33	—	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
NO >> GO TO 3.

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3. CHECK STARTER CONTROL RELAY CONTROL CIRCUIT CONTINUITY

1. Disconnect IPDM E/R connector E119 and BCM connector M19
2. Check continuity between IPDM E/R connector E119 and BCM connector M19.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E119	33	M19	62	Yes

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B210F TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210F TRANSMISSION RANGE SWITCH

Description

INFOID:0000000011154334

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:0000000011154335

DTC DETECTION LOGIC

NOTE:

- If DTC B210F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#)
- If DTC B210F is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210F	TRANSMISSION RANGE SWITCH	IPDM E/R detects a mismatch between the signals below for 1 second or more. • Transmission range switch input signal • Shift position signal from BCM (CAN)	• Harness or connectors • Transmission range switch circuit is open or shorted • Transmission range switch

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for at least 1 second.
 - CVT selector lever is in the P (Park) or N (Neutral) position
 - Do not depress the brake pedal
2. Check "Self-diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-90, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154336

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#) or [PCS-21, "Wiring Diagram"](#).

1.CHECK DTC WITH BCM

Refer to [BCS-52, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK TRANSMISSION RANGE SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector E119 terminal 37 and ground under following condition.

B210F TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		Ground	Condition		Voltage (V)
Connector	Terminal				
E119	37	Ground	CVT selector lever	P (Park) or N (Neutral)	Battery voltage
				Other than above	0

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).

NO >> GO TO 3.

3. CHECK TRANSMISSION RANGE SWITCH CIRCUIT FOR CONTINUITY

- Turn ignition switch OFF.
- Check continuity between IPDM E/R harness connector terminals 63 and 66.

IPDM E/R			Condition		Continuity
Connector	Terminals				
F24	63	66	Transmission range switch	P or N	Yes
				Other	No

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

4. CHECK TRANSMISSION RANGE SWITCH CIRCUIT FOR SHORT

Check continuity between IPDM E/R harness connector terminals 63, 66 and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F24	63	Ground	No
	66		

Is the inspection result normal?

YES >> Replace the IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).

NO >> Repair or replace harness.

5. CHECK TRANSMISSION RANGE SWITCH INPUT SIGNAL CIRCUIT

- Disconnect transmission range switch harness connector.
- Check continuity between transmission range switch and IPDM E/R harness connectors.

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F36	7	F24	63	Yes
	10		66	

- Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F36	7	Ground	No
	10		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

B210F TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

6. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

B2110 TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2110 TRANSMISSION RANGE SWITCH

Description

INFOID:0000000011154337

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:0000000011154338

DTC DETECTION LOGIC

NOTE:

- If DTC B2110 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2110 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2110	TRANSMISSION RANGE SWITCH	IPDM E/R detects mismatch between the signal below for 1 second or more. • Transmission range switch input signal	• Harness or connectors • Transmission range switch circuit is open or shorted • Transmission range switch

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch ON under the following conditions and wait for at least 1 second.
 - CVT selector lever is in the P (Park) or N (Neutral) position
 - Do not depress the brake pedal
2. Check "Self-diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-93, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154339

SEC

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#) or [PCS-21, "Wiring Diagram"](#).

1.CHECK DTC WITH BCM

Refer to [BCS-52, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK TRANSMISSION RANGE SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector E119 terminal 37 and ground under following condition.

B2110 TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		Ground	Condition		Voltage (V)
Connector	Terminal				
E119	37	Ground	CVT selector lever	P (Park) or N (Neutral)	Battery voltage
				Other than above	0

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).

NO >> GO TO 3.

3.CHECK TRANSMISSION RANGE SWITCH CIRCUIT FOR CONTINUITY

1. Turn ignition switch OFF.
2. Check continuity between IPDM E/R harness connector terminals 63 and 66.

IPDM E/R			Condition		Continuity
Connector	Terminals				
F24	63	66	Transmission range switch	P or N	Yes
				Other	No

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

4.CHECK TRANSMISSION RANGE SWITCH CIRCUIT FOR SHORT

Check continuity between IPDM E/R harness connector terminals 63, 66 and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F24	63	Ground	No
	66		

Is the inspection result normal?

YES >> Replace the IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).

NO >> Repair or replace harness.

5.CHECK TRANSMISSION RANGE SWITCH INPUT SIGNAL CIRCUIT

1. Disconnect transmission range switch harness connector.
2. Check continuity between transmission range switch and IPDM E/R harness connectors.

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F36	7	F24	63	Yes
	10		66	

3. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F36	7	Ground	No
	10		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK INTERMITTENT INCIDENT

B2110 TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Refer to [GI-47. "Intermittent Incident"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2190 NATS ANTENNA AMP.

Description

INFOID:0000000011154340

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed.
Prohibits starting of the engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:0000000011154341

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190	NATS ANTENNA AMP	Inactive communication between NATS antenna amp. and BCM.	• Harness or connectors (The NATS antenna amp. circuit is open or shorted) • NATS antenna amp. • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key back side to push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-96, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-96, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154342

Regarding Wiring Diagram information, refer to [SEC-44, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Disconnect BCM and NATS antenna amp.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace as necessary.

2.CHECK NATS ANTENNA AMP. CIRCUIT

1. Disconnect BCM connector and NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M80	126	M21	3	Yes
	127		1	

3. Check continuity between BCM harness connector and ground.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M80	126		No
	127		



Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK NATS ANTENNA AMP INPUT SIGNAL 1

- Turn ignition switch ON.
- Check signal between BCM harness connector and ground using oscilloscope.

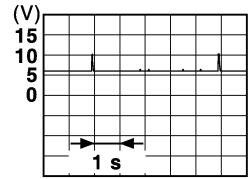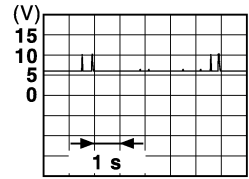(+) BCM		(-)	Condition	Signal (Reference value)
Connector	Terminal			
M80	126, 127	Ground	When Intelligent Key is in the antenna detection area	 JMKIA3839GB
			When Intelligent Key is not in the antenna detection area	 JMKIA5951GB

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Replace NATS antenna amp. Refer to [SEC-151, "Removal and Installation"](#).

B2191, P1615 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2191, P1615 DIFFERENCE OF KEY

Description

INFOID:0000000011154343

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed.
Prohibits starting of the engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:0000000011154344

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191 P1615	DIFFERENCE OF KEY	The ID verification results between BCM and Intelligent Key are NG. The registration is necessary.	Intelligent Key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Place the back side of the Intelligent Key up to the push-button ignition switch.
- Press the push-button ignition switch.
- Check "Self-Diagnostic Result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-98, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154345

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered Intelligent Key?

- YES >> Intelligent Key was unregistered.
NO >> Intelligent Key fob is malfunctioning.
 - Replace Intelligent Key fob.
 - Perform initialization again.

B2192 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2192 ID DISCORD, IMMU-ECM

DTC Logic

INFOID:0000000011154346

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG.	• Harness or connectors (The CAN communication line is open or shorted.) • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-99, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154347

1.PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 2.

2.CHECK SELF-DIAGNOSIS RESULT

1. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2192. Refer to [SEC-99, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 4.

4.REPLACE ECM

1. Replace ECM. Refer to [EC-526, "Removal and Installation"](#) (USA and Canada) or [EC-916, "Removal and Installation"](#) (Mexico).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-156, "Work Procedure"](#) (USA and Canada) or [EC-657, "Work Procedure"](#) (Mexico).

>> Inspection End.

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

DTC Logic

INFOID:0000000011154348

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	• Harness or connectors (The CAN communication line is open or shorted.) • ECM • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-100, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154349

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2.CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-190, "Diagnosis Procedure"](#) (USA and Canada) or [EC-684, "Diagnosis Procedure"](#) (Mexico).

Is the inspection result normal?

- YES >> Replace ECM. Refer to [EC-526, "Removal and Installation"](#) (USA and Canada) or [EC-916, "Removal and Installation"](#)(Mexico). GO TO 3.
NO >> Repair or replace the harness.

3.PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-100, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#)
NO >> Inspection End.

B2195 ANTI-SCANNING

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2195 ANTI-SCANNING

DTC Logic

INFOID:0000000011154350

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2195	ANTI-SCANNING	ID verification between BCM and ECM that is out of the designated specification is detected.	ID verification request out of the designated specification

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-101, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154351

1.CHECK SELF-DIAGNOSTIC RESULT 1

1. Select "Self-Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2195. Refer to [SEC-101, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 2.
NO >> Inspection End.

2.CHECK EQUIPMENT OF THE VEHICLE

Check that unspecified accessory part related to engine start is not installed.

Is unspecified accessory part related to engine start installed?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK SELF DIAGNOSTIC RESULT 2

1. Obtain the customers approval to remove unspecified accessory part related to engine start, and then remove it.
2. Select "Self-Diagnostic Result" of "BCM" using CONSULT.
3. Erase DTC.
4. Perform DTC CONFIRMATION PROCEDURE for DTC B2195. Refer to [SEC-101, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 4.
NO >> Inspection End.

4.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2196 DONGLE UNIT

Description

INFOID:0000000011154352

BCM performs ID verification between BCM and dongle unit.
When verification result is OK, BCM permits cranking.

DTC Logic

INFOID:0000000011154353

DTC DETECTION LOGIC

NOTE:

- If DTC B2196 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2196 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2196	DONGLE NG	The ID verification results between BCM and dongle unit is NG.	• Harness or connectors (Dongle unit circuit is open or shorted.) • Dongle unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Turn ignition switch ON.
4. Check "Self-diagnosis result" using CONSULT.

Is the DTC detected?

- YES >> Refer to [SEC-102, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154354

Regarding Wiring Diagram information, refer to [SEC-44, "Wiring Diagram"](#).

1.PERFORM INITIALIZATION

1. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.
2. Start the engine.

Dose the engine start?

- YES >> Inspection End.
NO >> GO TO 2.

2.CHECK DONGLE UNIT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and dongle unit connector.
3. Check continuity between BCM harness connector and dongle unit harness connector.

BCM		Dongle unit		Continuity
Connector	Terminal	Connector	Terminal	
M19	52	M29	1	Yes

4. Check continuity between BCM harness connector and ground.

B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M19	52		No

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK DONGLE UNIT GROUND CIRCUIT

Check continuity between dongle unit harness connector and ground.

Dongle unit		Ground	Continuity
Connector	Terminal		
M29	4		Yes

Is the inspection result normal?

YES >> Replace dongle unit.

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2198 NATS ANTENNA AMP.

DTC Logic

INFOID:0000000011154355

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2198	NATS ANTENNA AMP	Inactive communication between NATS antenna amp. and BCM.	• Harness or connectors (The NATS antenna amp. circuit is open or shorted) • NATS antenna amp. • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key back side to push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-104. "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> GO TO [SEC-104. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154356

Regarding Wiring Diagram information, refer to [SEC-44. "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Disconnect BCM and NATS antenna amp.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace as necessary.

2.CHECK NATS ANTENNA AMP. CIRCUIT

1. Disconnect BCM connector and NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M80	126	M21	3	Yes
	127		1	

3. Check continuity between BCM harness connector and ground.

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M80	126		No
	127		



Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK NATS ANTENNA AMP INPUT SIGNAL

- Turn ignition switch ON.
- Check signal between BCM harness connector and ground using oscilloscope.

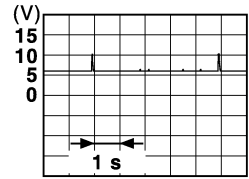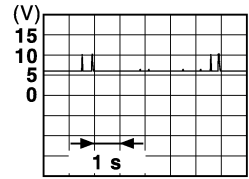(+) BCM		(-)	Condition	Signal (Reference value)
Connector	Terminal			
M80	126, 127	Ground	When Intelligent Key is in the antenna detection area	 JMKIA3839GB
			When Intelligent Key is not in the antenna detection area	 JMKIA5951GB

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Replace NATS antenna amp. Refer to [SEC-151, "Removal and Installation"](#).

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2555 STOP LAMP

DTC Logic

INFOID:0000000011154357

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2555	STOP LAMP	BCM makes a comparison between the upper voltage and lower voltage of stop lamp switch. It judges from their values to detect the malfunctioning circuit.	• Harness or connectors (Stop lamp switch circuit is open or shorted.) • Stop lamp switch • Fuse • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Depress the brake pedal and wait 1 second or more.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-106, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154358

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1. CHECK POWER SOURCE (STOP LAMP SWITCH)

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check voltage between stop lamp switch connector E38 terminal 1 and ground.

Stop lamp switch		Ground	Voltage
Connector	Terminal		
E38	1		Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Check the following:
 - Harness for short or open between fuse block (J/B) and stop lamp switch
 - 10A fuse (No. 10, located in fuse block [J/B])

2.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [SEC-108, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

3.CHECK GROUND CIRCUIT (STOP LAMP RELAY)

1. Remove the stop lamp relay.
2. Check continuity between stop lamp relay connector E39 terminal 2 and ground.

Stop lamp relay		Ground	Continuity
Connector	Terminal (+)		
E39	2		Yes

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4.CHECK HARNESS BETWEEN STOP LAMP RELAY AND BCM

1. Check continuity between stop lamp relay connector E39 terminal 5 and BCM connector M18 terminal 27.

BCM		stop lamp relay		Continuity
Connector	Terminal	Connector	Terminal	
M18	27	E39	5	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK HARNESS BETWEEN STOP LAMP SWITCH AND STOP LAMP RELAY

1. Check continuity between stop lamp relay connector E39 terminal 1 and stop lamp switch connector E38 terminal 2.

Stop lamp switch		Stop lamp relay		Continuity
Connector	Terminal	Connector	Terminal	
E38	2	E39	1	Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

6.CHECK GROUND CIRCUIT (STOP LAMP RELAY)

1. Remove the stop lamp relay.
2. Check continuity between stop lamp relay connector E39 terminal 2 and ground.

Stop lamp relay		Ground	Continuity
Connector	Terminal (+)		
E39	2		Yes

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts.

7.CHECK POWER SOURCE (STOP LAMP RELAY)

1. Check voltage between stop lamp relay connector E39 terminal 3 and ground.

Stop lamp relay		Ground	Continuity
Connector	Terminal (+)		
E39	3		Battery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace damaged parts.

8.CONNECTOR INSPECTION

Check BCM connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace as necessary.

9.REPLACE BCM

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

10.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011154359

1.CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch terminals.

Stop lamp switch		Condition		Continuity
Terminal				
1	2	Brake pedal	Not depressed	No
			Depressed	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2556 PUSH-BUTTON IGNITION SWITCH

DTC Logic

INFOID:0000000011154360

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2556	PUSH-BTN IGN SW	BCM detects the push-button ignition switch stuck at ON for 100 seconds or more.	• Harness or connectors (Push-button ignition switch circuit is shorted.) • Push-button ignition switch • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following condition:
 - Brake pedal: Not depressed
2. Release push-button ignition switch and wait 100 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-109. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154361

Regarding Wiring Diagram information, refer to [SEC-27. "Wiring Diagram"](#).

1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M17	8	Ground	12

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	8	M18	1	Yes

3. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M17	8		No

B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

4.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [SEC-110, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace push-button ignition switch. Refer to [SEC-152, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011154362

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal				
4	8	Push-button ignition switch	Pressed	Yes
			Not pressed	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace push-button ignition switch. Refer to [SEC-152, "Removal and Installation"](#).

B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2557 VEHICLE SPEED

DTC Logic

INFOID:0000000011154363

DTC DETECTION LOGIC

NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects one of the following conditions for 10 seconds continuously. • Vehicle speed signal from combination meter is 10 km/h (6.2 MPH) or more, and vehicle speed signal from ABS actuator and electric unit (control unit) is 4 km/h (2.5 MPH) or less. • Vehicle speed signal from combination meter is 4 km/h (2.5 MPH) or less, and vehicle speed signal from ABS actuator and electric unit (control unit) is 10 km/h (6.2 MPH) or more.	• Harness or connectors (The CAN communication line is open or shorted.) • Combination meter • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 10 seconds or more.
2. Drive the vehicle at a vehicle speed of 10 km/h (6.2 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-111, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154364

1.CHECK DTC OF "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-47, "DTC Index"](#) (Type 1) or [BRC-176, "DTC Index"](#) (Type 2).
NO >> GO TO 2.

2.CHECK DTC OF "COMBINATION METER"

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-29, "DTC Index"](#).
NO >> GO TO 3.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#) .

>> Inspection End.

B2560 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2560 STARTER CONTROL RELAY

Description

INFOID:0000000011154365

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in N (Neutral) or P (Park) position.

DTC Logic

INFOID:0000000011154366

DTC DETECTION LOGIC

NOTE:

- If DTC B2560 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2560 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2560	STARTER CONTROL RELAY	BCM detects a mismatch between the OFF request of starter control relay to IPDM E/R and the feedback. (The feedback is ON instead of OFF.)	• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for at least 2 seconds:
 - CVT selector lever is in the P (Park) position.
 - Depress the brake pedal.
2. Check "Self-Diagnostic Result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-112, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154367

1.CHECK DTC WITH IPDM E/R

Check "Self Diagnostic Result" with CONSULT. Refer to [PCS-20, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2601 SHIFT POSITION

DTC Logic

INFOID:0000000011154368

DTC DETECTION LOGIC

NOTE:

- If DTC B2601 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2601 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2601	SHIFT POSITION	When there is a difference between P (Park) range signal from CVT shift selector (park position switch) and P (Park) position signal from IPDM E/R (CAN).	• Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors [CVT shift selector (park position switch) circuit is open or shorted.] • CVT shift selector (park position switch) • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P (Park) position.
2. Turn ignition switch ON and wait 2 seconds or more.
3. Shift the selector lever to any position other than P (Park) and wait 2 seconds or more.
4. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-113, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154369

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "DETE/CANCEL SW" and "DETENT SW - IPDM" in DATA MONITOR mode with CONSULT.
3. Check "DETE/CANCEL SW" and "DETENT SW - IPDM" indication under the following conditions.

Monitor item	Condition		Indication
DETE/CANCEL SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON
DETENT SW - IPDM	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON

Is the inspection result normal?

- YES >> Refer to [GI-47, "Intermittent Incident"](#).
NO-1 >> If DETE/CANCEL SW function is incorrect. GO TO 2.
NO-2 >> If DETENT SW - IPDM function is incorrect. GO TO 5.

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

2. CHECK CVT SHIFT SELECTOR CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M78	6	M18	20	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M78	6		No

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CONNECTOR INSPECTION

1. Disconnect BCM.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. REPLACE BCM

1. Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

5. CHECK CVT SHIFT SELECTOR CIRCUIT (IPDM E/R)

Check continuity between CVT shift selector (park position switch) harness connector and IPDM E/R harness connector.

CVT shift selector (park position switch)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M78	6	E119	31	Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CONNECTOR INSPECTION

1. Disconnect IPDM E/R.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace as necessary.

7. REPLACE IPDM E/R

1. Replace IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

>> Inspection End.

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:0000000011154370

1. CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (park position switch) terminals.

CVT shift selector (park position switch)		Condition		Continuity
Terminal				
5	6	Selector lever	P (Park) position	No
			Other than above	Yes

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#) (RE0F10E) or [TM-407, "Removal and Installation"](#) (RE0F10J).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2602 SHIFT POSITION

DTC Logic

INFOID:0000000011154371

DTC DETECTION LOGIC

NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. • Selector lever is in the P (Park) position • Vehicle speed is 4 km/h (2.5 MPH) or more • Ignition switch is in the ON position	• Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors [CVT shift selector (park position switch) circuit is open or shorted.] • CVT shift selector (park position switch) • Combination meter • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine.
2. Drive vehicle at a speed of 4 km/h (2.5 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-116, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154372

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "DETE/CANCEL SW" and "VEH SPEED 1" in DATA MONITOR mode with CONSULT.
3. Check "DETE/CANCEL SW" and "VEH SPEED 1" indication under the following conditions.

Monitor item	Condition		Indication
DETE/CANCEL SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON
VEH SPEED 1	Vehicle not moving		0
	Vehicle moving		Varies

Is the inspection result normal?

- YES >> Refer to [GI-47, "Intermittent Incident"](#).
NO-1 >> If DETE/CANCEL SW is incorrect. GO TO 4.
NO-2 >> If VEH SPEED 1 is incorrect. GO TO 2.

2.CHECK DTC OF COMBINATION METER

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-29, "DTC Index"](#).
NO >> GO TO 3.

3.CHECK DTC OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-47, "DTC Index"](#) (Type 1) or [BRC-176, "DTC Index"](#) (Type 2).
NO >> GO TO 6.

4.CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M78	6	M18	20	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M78	6		No

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5.CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

Refer to [SEC-117, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#) (RE0F10E) or [TM-407, "Removal and Installation"](#) (RE0F10J).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011154373

1.CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (park position switch) terminals.

CVT shift selector (park position switch)		Condition		Continuity
Terminal				
5	6	Selector lever	P (Park) position	No
			Other than above	Yes

Is the inspection result normal?

- YES >> Inspection End.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NO >> Replace CVT shift selector. Refer to [TM-192. "Removal and Installation"](#) (RE0F10E) or [TM-407. "Removal and Installation"](#) (RE0F10J).

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2603 SHIFT POSITION

DTC Logic

INFOID:0000000011154374

DTC DETECTION LOGIC

NOTE:

- If DTC B2603 is displayed with DTC B2601, first perform the trouble diagnosis for DTC B2601. Refer to [SEC-113, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2603	SHIFT POSI STATUS	BCM detects the following status when ignition switch is in the ON position. - P (Park) position signal from TCM: approx. 0 V - CVT shift selector (park position switch) signal: approx. 0 V	- Harness or connector [CVT shift selector (park position switch) circuit is open or shorted.] - Harness or connectors (TCM circuit is open or shorted.) - CVT shift selector (park position switch) - CVT assembly (TCM) - BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

- Shift the selector lever to the P (Park) position.
- Turn ignition switch ON and wait 1 second or more.
- Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> Go to [SEC-119, "Diagnosis Procedure"](#).

NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

- Shift the selector lever to any position other than P (Park) and wait 1 second or more.
- Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> Go to [SEC-119, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154375

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

- Turn ignition switch ON.
- Select "DETE/CANCEL SW" and "SFT PN/N SW" in DATA MONITOR mode with CONSULT.
- Check "DETE/CANCEL SW" and "SFT PN/N SW" indication under the following conditions.

Monitor item	Condition		Indication
DETE/CANCEL SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON
SFT PN/N SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON

Is the inspection result normal?

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

- YES >> Refer to [GI-47, "Intermittent Incident"](#).
NO-1 >> If DETE/CANCEL SW is incorrect. GO TO 6.
NO-2 >> If SFT PN/N SW is incorrect. GO TO 2.

2.CHECK BCM INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M18	39	Ground	Selector lever	P or N position	12
				Other than above	0

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

3.CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect transmission range switch connector.
4. Check continuity between transmission range switch harness connector and BCM harness connector.

Transmission range switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F36	10	M18	39	Yes

5. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F36	10		No

Is the inspection result normal?

- YES >> Refer to [GI-47, "Intermittent Incident"](#).
NO >> GOT TO 5.

4.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

5.CHECK DTC OF TCM

Check DTC in "Self Diagnostic Result" mode of "TCM" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-63, "DTC Index"](#) (RE0F10E) or [TM-277, "DTC Index"](#) (RE0F10J).
NO >> Perform the trouble diagnosis related to the TCM power and ground circuits. Refer to [TM-170, "Diagnosis Procedure"](#) (RE0F10E) or [TM-385, "Diagnosis Procedure"](#) (RE0F10J).

6.CHECK CVT SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector (park position switch) connector.
3. Check voltage between CVT shift selector (park position switch) harness connector and ground.

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
CVT shift selector (park position switch)			
Connector	Terminal		
M78	5	Ground	12

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7. CHECK CVT SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M78	5	M19	69	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M78	5		No

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8. CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M78	6	M18	20	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M78	6		No

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace harness.

9. CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

Refer to [SEC-122, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#) (RE0F10E) or [TM-407, "Removal and Installation"](#) (RE0F10J).

10. REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

>> Inspection End.

Component Inspection

INFOID:0000000011154376

1. CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (park position switch) terminals.

CVT shift selector (park position switch)		Condition		Continuity
Terminal				
5	6	Selector lever	P (Park) position	No
			Other than above	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#) (RE0F10E) or [TM-407, "Removal and Installation"](#) (RE0F10J).

B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2604 SHIFT POSITION

DTC Logic

INFOID:0000000011154377

DTC DETECTION LOGIC

NOTE:

- If DTC B2604 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2604 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2604	PNP/CLUTCH SW	The following states are detected for 5 seconds while ignition switch is ON: • P/N position signal is sent from TCM but shift position signal input (CAN) from TCM is other than P (Park) and N (Neutral) • P/N position signal is not sent from TCM but shift position signal input (CAN) from TCM is P (Park) or N (Neutral)	• Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors (TCM circuit is open or shorted.) • TCM • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P (Park) position.
2. Turn ignition switch ON and wait 5 seconds or more.
3. Shift the selector lever to the N (Neutral) position and wait 5 seconds or more.
4. Shift the selector lever to any position other than P (Park) and N (Neutral) and wait 5 seconds or more.
5. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-123, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154378

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "SFT P -MET", "SFT N -MET" and "SFT PN/N SW" in DATA MONITOR mode with CONSULT.
3. Check "SFT P -MET", "SFT N -MET" and "SFT PN/N SW" indication under the following conditions.

Monitor item	Condition		Indication
SFT P -MET	CVT Shift selector	Selector lever is in any position except the P (Park) position	OFF
		Selector lever is in the P (Park) position	ON

B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Monitor item	Condition		Indication
SFT N -MET	CVT Shift selector	Selector lever is in any position except the N (Neutral) position	OFF
		Selector lever is in the N (Neutral) position	ON
SFT PN/N SW	CVT Shift selector	Selector lever is in and position except the P (Park) or N (Neutral) position	OFF
		Selector lever is in the P (Park) or N (Neutral) position	ON

Is the inspection result normal?

YES >> Refer to [GI-47, "Intermittent Incident"](#).

NO-1 >> If SFT N -MET or SFT P -MET is incorrect. GO TO 7.

NO-2 >> If SFT PN/N SW is incorrect. GO TO 2.

2.CHECK DTC OF TCM

Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-63, "DTC Index"](#) (RE0F10E) or [TM-277, "DTC Index"](#) (RE0F10J).

NO >> GO TO 3.

3.CHECK BCM INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M18	39	Ground	Selector lever	P (Park) or N (Neutral) position	12
				Other than above	0

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

4.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

5.CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Disconnect BCM connector.
4. Check continuity between transmission range switch harness connector and BCM harness connector.

B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Transmission range switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F36	10	M18	39	Yes

5. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F36	10		No

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

7.CHECK CVT SHIFT SELECTOR RANGE SWITCH FUNCTION (METER)

1. Turn ignition switch ON.
2. Select "SHIFT IND" in DATA MONITOR mode (METER) with CONSULT.
3. Check "SHIFT IND" indication under the following conditions.

Monitor item	Condition		Indication
SHIFT IND	CVT Shift selector	P (Park) position	P
		N (Neutral) position	N

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [TM-108, "Component Inspection"](#) (RE0F10E) or [TM-322, "Component Inspection"](#) (RE0F10J).

SEC

B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2605 SHIFT POSITION

DTC Logic

INFOID:0000000011154379

DTC DETECTION LOGIC

NOTE:

- If DTC B2605 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2605 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2605	PNP/CLUTCH SW	When ignition switch is ON, P/N position signal input from TCM and P/N position signal (CAN) input from IPDM E/R do not match.	• Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors (TCM circuit is open or shorted.) • IPDM E/R • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P (Park) position.
2. Turn ignition switch ON and wait 1 second or more.
3. Shift the selector lever to the N (Neutral) position and wait 1 second or more.
4. Shift the selector lever to any position other than P (Park) and N (Neutral) and wait 1 second or more.
5. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-126, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154380

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "SFT PN-IPDM" and "SFT PN/N SW" in DATA MONITOR mode with CONSULT.
3. Check "SFT PN-IPDM" and "SFT PN/N SW" indication under the following conditions.

Monitor item	Condition		Indication
SFT PN-IPDM	CVT Shift selector	Any position other than P (Park) or N (Neutral) position	OFF
		P (Park) or N (Neutral) position	ON
SFT PN/N SW	CVT Shift selector	Any position other than P (Park) or N (Neutral) position	OFF
		P (Park) or N (Neutral) position	ON

Is the inspection result normal?

- YES >> Refer to [GI-47, "Intermittent Incident"](#).

B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NO-1 >> If SFT PN-IPDM is incorrect. GO TO 2.

NO-2 >> If SFT PN/N SW is incorrect. GO TO 5.

2.CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
IPDM E/R					
Connector	Terminal				
F24	66	Ground	Selector lever	P (Park) or N (Neutral) position	12
				Other than above	0

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

NO >> GO TO 3.

3.CHECK IPDM E/R INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between IPDM E/R harness connector and transmission range switch harness connector.

IPDM E/R		Transmission range switch		Continuity
Connector	Terminal	Connector	Terminal	
E119	37	F36	10	Yes

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	37		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.REPLACE IPDM E/R

1. Replace IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

>> Inspection End.

5.CHECK BCM INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M18	39	Ground	Selector lever	P (Park) or N (Neutral) position	12
				Other than above	0

Is the inspection result normal?

YES >> GO TO 6.

B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NO >> GO TO 7.

6. REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

7. CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Disconnect BCM connector.
4. Check continuity between transmission range switch harness connector and BCM harness connector.

Transmission range switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F36	10	M18	39	Yes

5. Check continuity between TCM harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F36	10		No

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2608 STARTER RELAY

DTC Logic

INFOID:0000000011154381

DTC DETECTION LOGIC

NOTE:

- If DTC B2608 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2608 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2608	STARTER RELAY	BCM outputs starter motor relay OFF signal but BCM receives starter motor relay ON signal from IPDM E/R (CAN).	• Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors (Starter relay circuit is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine.
 - Shift selector lever: In the P (Park) position
 - Brake pedal: Depressed
2. Wait 1 second after engine started.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-129, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154382

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

SEC

1.CHECK DTC OF IPDM E/R

Check DTC in "Self-Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [PCS-20, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+) BCM		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
M19	62	Ground	Selector lever	N (Neutral) or P (Park) position	12
				Other than above	0

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3. CHECK STARTER RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect BCM connector.
4. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E119	33	M19	62	Yes

5. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	33		No

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

NO >> Repair or replace harness.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

>> Inspection End.

B2617 STARTER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2617 STARTER RELAY CIRCUIT

Description

INFOID:0000000011154383

Located in IPDM E/R, it runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:0000000011154384

DTC DETECTION LOGIC

NOTE:

- If DTC B2617 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B2617 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2617	STARTER RELAY CIRCUIT	• An immediate operation of starter relay is requested by BCM, but there is no response for more than 1 second • BCM is not commanding starter relay activation, but BCM detects starter relay output is active	• Harness or connectors (Starter relay circuit is open or shorted.) • IPDM E/R • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for at least 1 second.
 - CVT selector lever is in the P (Park) position.
 - Do not depress the brake pedal.
2. Check "Self-Diagnostic Result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-131, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154385

SEC

Regarding Wiring Diagram information, refer to [SEC-27, "Wiring Diagram"](#).

1.CHECK STARTER RELAY

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground under the following condition.

BCM		Ground	Condition	Voltage (V)
Connector	Terminal			
M19	62	Ground	Ignition switch cranking	0
			Ignition switch ON (Park or Neutral)	Battery voltage
			Other than above	0

Is the measurement value within the specification.

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK STARTER RELAY CIRCUIT

B2617 STARTER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector and IPDM E/R harness connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E119	33	M19	62	Yes

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	33	Ground	No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).
NO >> Repair harness or connector.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

>> Inspection End.

B261E VEHICLE TYPE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B261E VEHICLE TYPE

Description

INFOID:0000000011154386

There are two types of vehicles.

- HEV
- Conventional

DTC Logic

INFOID:0000000011154387

DTC DETECTION LOGIC

NOTE:

- If DTC B261E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B261E is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261E	VEHICLE TYPE	Difference of BCM configuration.	• BCM mis-configuration • Wrong ECM installed

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Shift selector lever is in the P (Park) or N (Neutral) position
 - Do not depress brake pedal
2. Check "Self-Diagnostic Result" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-133, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154388

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure. Refer to [SEC-133, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 2.
NO >> Inspection End.

2.PERFORM BCM CONFIGURATION.

Perform the BCM configuration. Refer to [BCS-65, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 3.

3.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
Refer to [SEC-133, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 4.
NO >> Inspection End.

B261E VEHICLE TYPE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4. CONFIRM ECM PART NUMBER.

Confirm the part number of the installed ECM is correct.

Is the ECM part number correct?

YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

NO >> Replace ECM. Refer to [EC-526, "Removal and Installation"](#) (USA and Canada) or [EC-916, "Removal and Installation"](#) (Mexico).

B26F3 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B26F3 STARTER CONTROL RELAY

DTC Logic

INFOID:0000000011154389

DTC DETECTION LOGIC

NOTE:

- If DTC B26F3 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B26F3 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F3	START CONT RLY ON	BCM requests IPDM E/R to turn starter control relay OFF, but BCM cannot receive starter control relay OFF state signal from IPDM E/R (CAN).	• Harness or connectors (CAN communication line is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine:
 - Shift selector lever: In the P (Park) position
 - Brake pedal: Depressed
2. Wait 2 seconds after engine started.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-135, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154390

1.CHECK DTC OF IPDM E/R

Check DTC in "Self-Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

- YES >> Perform the diagnosis procedure related to the detected DTC. Refer to [PCS-20, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

B26F4 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B26F4 STARTER CONTROL RELAY

DTC Logic

INFOID:0000000011154391

DTC DETECTION LOGIC

NOTE:

- If DTC B26F4 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC B26F4 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F4	START CONT RELAY OFF	BCM requests IPDM E/R to turn starter control relay ON, but BCM cannot receive starter control relay ON state signal from IPDM E/R.	• Harness or connectors (CAN communication line is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Shift selector lever: In the P (Park) position
 - Brake pedal: Depressed
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-136, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154392

1.CHECK DTC OF IPDM E/R

Check DTC in "Self-Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

- YES >> Perform the diagnosis procedure related to the detected DTC. Refer to [PCS-20, "DTC Index"](#).
- NO >> GO TO 2.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

B26F7 BCM**DTC Logic**

INFOID:0000000011154393

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F7	BCM	Inside key antenna output circuit in BCM is malfunctioning.	BCM

DTC CONFIRMATION PROCEDURE**1.PERFORM DTC CONFIRMATION PROCEDURE**

1. Press door request switch.
2. Turn ignition switch ON.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-137, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154394

1.INSPECTION START

1. Turn ignition switch ON.
2. Select "Self-Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B26F7. Refer to [SEC-137, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 2.
NO >> Inspection End.

2.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

B26F8 BCM

DTC Logic

INFOID:0000000011154395

DTC DETECTION LOGIC

NOTE:

DTC B26F8 can be detected even though the related circuit is not used in this vehicle.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F8	BCM	Starter control replay control signal and feedback circuit signal (inside BCM) does not match.	BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON and wait 1 second.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-138, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011154396

1.INSPECTION START

1. Turn ignition switch ON.
2. Select "Self-Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B26F8.
Refer to [SEC-138, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 2.
 NO >> Inspection End.

2.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HEADLAMP FUNCTION

Component Function Check

INFOID:0000000011154397

1.CHECK FUNCTION

1. Perform HEAD LAMP(HI) in ACTIVE TEST mode of THEFT ALM of BCM using CONSULT.
2. Check headlamps operation.

Test item		Description	
HEAD LAMP (HI)	ON	Headlamps (Hi)	Light
	OFF		Does not light

Is the inspection result normal?

- YES >> Inspection End.
NO >> Refer to [SEC-139, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011154398

1.CHECK HEADLAMP FUNCTION

Refer to [SEC-139, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

SEC

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HOOD SWITCH

Component Function Check

INFOID:0000000011154399

1.CHECK FUNCTION

1. Select HOOD SW in Data Monitor mode of IPDM E/R using CONSULT.
2. Check HOOD SW indication under the following condition.

Monitor item	Condition		Indication
HOOD SW	Hood	Open	ON
		Close	OFF

Is the indication normal?

YES >> Hood switch is OK.

NO >> Go to [SEC-140, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011154400

Regarding Wiring Diagram information, refer to [SEC-56, "Wiring Diagram"](#).

1.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

(+)		(-)	Voltage (V)
Hood switch			
Connector	Terminal		
E205	1	Ground	Battery voltage
	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

IPDM E/R		Hood switch		Continuity
Connector	Terminal	Connector	Terminal	
E218	94	E205	1	Yes
	96		2	

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E218	94		No
	96		

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).

NO >> Repair or replace harness.

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

Hood switch		Ground	Continuity
Connector	Terminal		
E205	3		Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK HOOD SWITCH

Refer to [SEC-141, "Component Inspection"](#) .

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood switch. Refer to [DLK-300, "HOOD LOCK : Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000011154401

1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

Hood switch		Condition		Continuity
Terminal				
1	3	Hood switch	Press	Yes
			Release	No
2			Press	No
			Release	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace hood switch. Refer to [DLK-300, "HOOD LOCK : Removal and Installation"](#).

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Component Function Check

INFOID:0000000011154402

1.CHECK FUNCTION

1. Perform VEHICLE SECURITY HORN in ACTIVE TEST mode of THEFT ALM of BCM using CONSULT.
2. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 0.5 sec)

Is the operation normal?

- YES >> Inspection End.
NO >> Go to [SEC-56. "Wiring Diagram"](#).

Component Inspection

INFOID:0000000011154403

1.CHECK HORN RELAY

1. Turn ignition switch OFF.
2. Disconnect horn relay.
3. Check voltage between horn relay terminal and ground under the following conditions.

(+)	(-)	Condition	Voltage (V) (Approx.)
horn relay Terminal			
3	Ground	12 V direct current supply between terminals 1 and 2	12
		No current supply	0

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace horn relay.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP

Component Function Check

INFOID:0000000011154404

1.CHECK FUNCTION

1. Perform THEFT IND in ACTIVE TEST mode of IMMU of BCM using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> Inspection End.
NO >> Go to [SEC-143, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011154405

Regarding Wiring Diagram information, refer to [SEC-56, "Wiring Diagram"](#).

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V)
Combination meter			
Connector	Terminal		
M24	22	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 13, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V)
BCM			
Connector	Terminal		
M18	18	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4. CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M24	6	M18	18	Yes

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M24	6		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-85. "Removal and Installation"](#).
NO >> Repair or replace harness.

SYMPTOM DIAGNOSIS

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

Description

INFOID:0000000011154406

Engine does not start when push-button ignition switch is pressed while carrying Intelligent Key.

NOTE:

- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- The engine start function, door lock function, power distribution system, and NATS-NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000011154407

1.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support in “INTELLIGENT KEY”.

Refer to [BCS-21, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSIS RESULT

Perform Self-Diagnosis Result in “BCM”, and check whether or not DTC of inside key antenna is detected.

Is DTC detected?

YES >> Refer to [BCS-52, "DTC Index"](#).

NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-78, "Component Function Check"](#).

Is the operation normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

Description

INFOID:0000000011154408

Security indicator lamp does not blink when ignition switch is in a position other than ON

NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-73, "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

Ignition switch is not in the ON position.

Diagnosis Procedure

INFOID:0000000011154409

1.CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-143, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM CANNOT BE SET INTELLIGENT KEY

INTELLIGENT KEY : Description

INFOID:0000000011154410

ARMED phase is not activated when door is locked using Intelligent Key.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of SECURITY ALARM SET is ON in WORK SUPPORT mode of THEFT ALM of BCM using CONSULT.

INTELLIGENT KEY : Diagnosis Procedure

INFOID:0000000011154411

1.CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [DLK-23. "DOOR LOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function). Refer to [DLK-240. "Diagnosis Procedure"](#).

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-140. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR REQUEST SWITCH

DOOR REQUEST SWITCH : Description

INFOID:0000000011154412

ARMED phase is not activated when door is locked using door request switch.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of SECURITY ALARM SET is ON in WORK SUPPORT mode of THEFT ALM of BCM using CONSULT.

DOOR REQUEST SWITCH : Diagnosis Procedure

INFOID:0000000011154413

1.CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-23. "DOOR LOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-237. "ALL DOOR REQUEST SWITCHES : Diagnosis Procedure"](#).

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-140, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR KEY CYLINDER

DOOR KEY CYLINDER : Description

INFOID:0000000011154414

ARMED phase is not activated when door is locked using mechanical key.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of SECURITY ALARM SET is ON in WORK SUPPORT mode of THEFT ALM of BCM using CONSULT.

DOOR KEY CYLINDER : Diagnosis Procedure

INFOID:0000000011154415

1.CHECK POWER DOOR LOCK SYSTEM

Lock/unlock door with mechanical key.

Refer to [DLK-20, "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check power door lock system. Refer to [DLK-236, "Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

Description

INFOID:0000000011154416

Alarm does not operate when alarm operating condition is satisfied.

NOTE:

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

Confirm the setting of “SECURITY ALARM SET” is ON in “WORK SUPPORT” mode of “THEFT ALM” of “BCM” using CONSULT.

Diagnosis Procedure

INFOID:0000000011154417

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-172, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch.

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-140, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CHECK HORN FUNCTION

Check horn function.

Refer to [SEC-142, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK HEADLAMP FUNCTION

Check headlamp function.

Refer to [SEC-139, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

PANIC ALARM FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

PANIC ALARM FUNCTION DOES NOT OPERATE

Description

INFOID:0000000011154418

NOTE:

- Before performing the diagnosis following procedure, check “Work Flow”. Refer to [SEC-73, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis and check each symptom.

CONDITIONS OF VEHICLE (OPERATION CONDITIONS)

- Ignition switch is in OFF or LOCK position.
- Intelligent Key is removed from key slot.

Diagnosis Procedure

INFOID:0000000011154419

1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Does door lock/unlock with Intelligent Key button?

- YES >> GO TO 2.
- NO >> Go to [DLK-240, "Diagnosis Procedure"](#).

2.CHECK VEHICLE SECURITY ALARM OPERATION

Check vehicle security alarm operation.

Does alarm (headlamps and horns) active?

- YES >> GO TO 3.
- NO >> Go to [SEC-14, "VEHICLE SECURITY SYSTEM : System Description"](#).

3.CHECK “PANIC ALARM SET” SETTING IN “WORK SUPPORT”

Check “PANIC ALARM SET” setting in “WORK SUPPORT”.

Refer to [BCS-21, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Set “PANIC ALARM SET” setting in “WORK SUPPORT”.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?


- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> GO TO 1.

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Exploded View

INFOID:0000000011154420

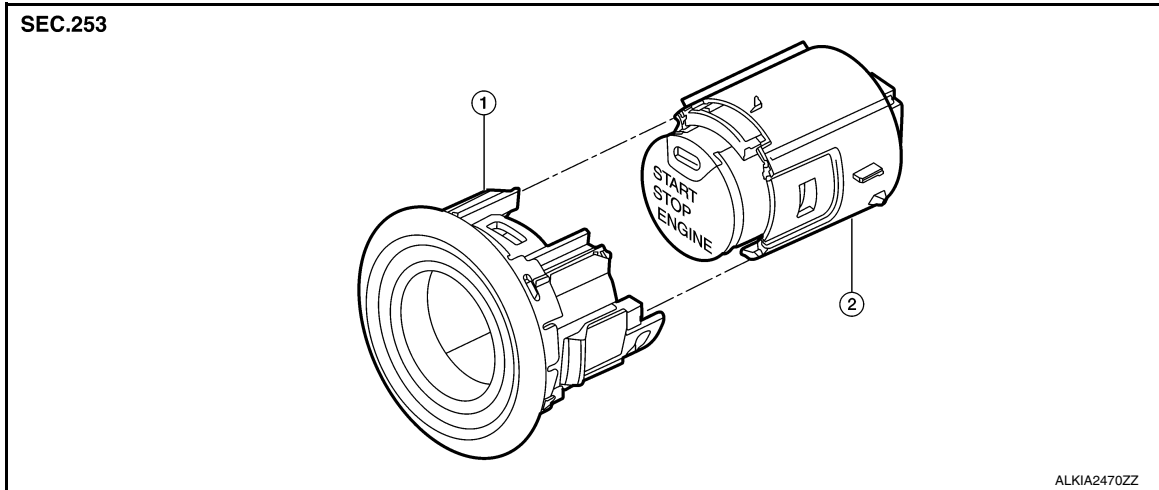

1. NATS antenna amp.

2. Push-button ignition switch

Removal and Installation

INFOID:0000000011154421

REMOVAL

1. Remove the instrument lower panel LH. Refer to [IP-25. "Removal and Installation"](#).
2. Disconnect the harness connector from the NATS antenna amp and the push button ignition switch.
3. Release the pawl on each side of NATS antenna amp and remove from the instrument pad (LH).
4. Release the pawl on each side and remove the NATS antenna amp from the push-button ignition switch.

INSTALLATION

Installation is in the reverse order of removal.

SEC

PUSH-BUTTON IGNITION SWITCH


< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Exploded View

INFOID:0000000011154422

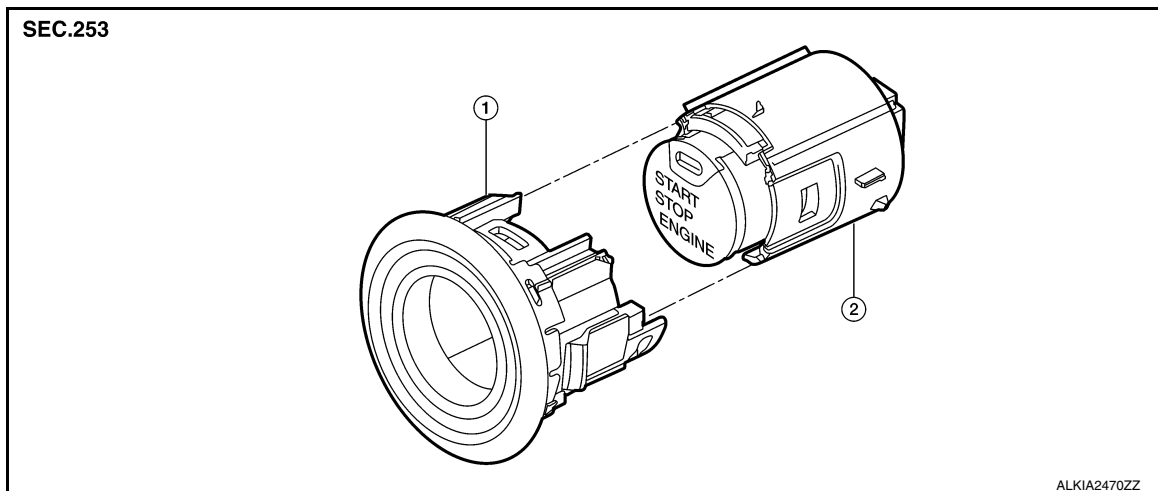

1. NATS antenna amp.

2. Push-button ignition switch

Removal and Installation

INFOID:0000000011154423

REMOVAL

1. Remove the instrument lower panel LH. Refer to [IP-25. "Removal and Installation"](#).
2. Disconnect the harness connector from the NATS antenna amp and the push button ignition switch.
3. Release the pawl on each side of NATS antenna amp and remove from the instrument pad (LH).
4. Release the pawl on each side and remove the NATS antenna amp from the push-button ignition switch.

INSTALLATION

Installation is in the reverse order of removal.

IMMOBILIZER CONTROL MODULE

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

IMMOBILIZER CONTROL MODULE

Removal and Installation

INFOID:0000000011154424

The immobilizer control module is integrated into the body control module (BCM). For removal and installation, refer to [BCS-80. "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P