

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-25
 ABS actuator BR-29
 ABS circuit diagram BR-48
 ABS component parts and connector
 locations..... BR-45
 ABS control unit BR-29
 ABS hydraulic circuit BR-25
 ABS input/output signal inspection BR-67
 ABS self-diagnosis..... BR-36, 40
 ABS symptom chart BR-38
 ABS system components..... BR-26
 ABS trouble diagnoses BR-35
 ABS wheel sensors..... BR-28
 ABS wiring diagram BR-30
 A/C air flow..... HA-11
 A/C circuit diagram..... HA-38
 A/C component layout..... HA-10
 A/C compressor clutch removal and
 installation..... HA-71
 A/C compressor description..... HA-13
 A/C compressor mounting HA-69
 A/C compressor precaution HA-4
 A/C compressor special service tool HA-4
 A/C control linkage adjustment..... HA-60
 A/C control operation HA-12
 A/C diagnostic work flow..... HA-19
 A/C harness layout..... HA-36
 A/C HFC134a (R134a) system
 precaution..... HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-62
 A/C HFC134a (R134a) system service
 tools HA-5
 A/C HFC134a system service equip-
 ment precaution..... HA-7
 A/C lubricant (R134a) HA-64
 A/C operational check..... HA-20
 A/C performance chart..... HA-32
 A/C performance test diagnoses HA-30
 A/C push control HA-70
 A/C relay HA-59
 A/C service data specification..... HA-75
 A/C symptom chart HA-22
 A/C trouble diagnoses..... HA-18
 A/C wiring diagram..... HA-39
 Accelerator control system FE-2
 Accelerator wire adjustment..... FE-2
 Air bag..... RS-5
 Air bag disposal RS-13
 Air bag module..... RS-9
 Air bag precautions GI-2
 Air bag removal and installation RS-9
 Air bleeding for brake system BR-6
 Air cleaner filter replacement..... MA-13
 Air conditioner cut control EC-17
 Air flow meter - See Mass air flow
 sensor..... EC-105

Air mix door control linkage adjustment..... HA-60
 Air mix. door motor HA-60
 Air spoiler, front - See Front air spoiler BT-37
 Air spoiler, rear - See Rear air spoiler..... BT-37
 Alternator EL-38
 Anti-freeze coolant mixture ratio..... MA-9
 ASCD (automatic speed control device) EL-138
 A/T control DTC:P0600..... EC-229
 AT control unit AT-97
 AT diagnosis communication line..... EC-281
 AT fluid temperature sensor AT-101
 AT removal and installation AT-122
 AT self-diagnoses..... AT-41
 AT shift lock system..... AT-112
 AT trouble diagnoses AT-13
 Audio EL-121
 Audio and A/C control removal and
 installation - See Instrument panel BT-14
 Automatic transmission fluid
 replacement..... MA-18
 Automatic transmission number..... GI-35
 Axle housing (rear)..... RA-8

B

Back-up lamp..... EL-56
 Back-up lamp switch (MT) MT-5
 Ball joint front axle FA-15
 Battery..... EL-23
 Baulk ring (MT) MT-9
 Belt inspection (drive belt) MA-10
 Bi-level door control linkage adjustment..... HA-61
 Blower motor HA-58
 Blower resistor HA-58
 Board-on lift..... GI-37
 Body alignment..... BT-38
 Boring/horning cylinder block EM-39
 Brake booster BR-11
 Brake control valve (Proportioning
 valve) BR-4
 Brake fluid change BR-5
 Brake fluid level MA-19
 Brake fluid level and line check..... BR-5
 Brake hydraulic line..... BR-3
 Brake inspection MA-20
 Brake lines and cables inspection..... MA-19
 Brake master cylinder BR-8
 Brake pedal BR-7
 Bumper, front - See Front bumper BT-6
 Bumper, rear - See Rear bumper..... BT-8

C

Camshaft inspection EM-25
 Camshaft position sensor (CMPS) EC-173
 Camshaft position sensor inspection EC-176
 Center bearing assembly (propeller
 shaft)..... PD-8

ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft)..... PD-8
 Charging system..... EL-34
 Chassis and body maintenance MA-17
 Cigarette lighter..... EL-112
 Circuit breaker..... EL-19
 Clearance lamp..... EL-54
 Clock..... EL-112
 Closed loop control..... EC-141
 Closed throttle position switch..... EC-225
 Clutch cover..... CL-10
 Clutch disc..... CL-10
 Clutch fluid level..... MA-17
 Clutch master cylinder..... CL-6
 Clutch operating cylinder..... CL-7
 Clutch pedal..... CL-4
 Clutch pedal free play..... CL-4
 Clutch pedal height..... CL-4
 Clutch release bearing..... CL-8
 Clutch withdrawal lever..... CL-8
 Coil spring (front)..... FA-13
 Coil spring (rear)..... RA-20
 Combination lamp, front, removal and installation..... BT-6
 Combination lamp, rear, removal and installation..... BT-22
 Combination meter..... EL-78
 Combination meter removal and installation - See Instrument panel..... BT-14
 Combination switch..... EL-39
 Compression pressure..... EM-9
 Compressor clutch removal and installation..... HA-71
 Compressor description..... HA-13
 Compressor mounting..... HA-69
 Compressor precaution..... HA-4
 Compressor special service tool..... HA-4
 Connecting rod..... EM-38
 Connecting rod bearing clearance..... EM-41
 Connecting rod bushing clearance..... EM-42
 Console box - See Instrument panel..... BT-14
 CONSULT for ABS..... BR-39
 CONSULT general information..... GI-32
 Control lever (MT)..... MT-10
 Control valve (AT)..... AT-145
 Converter housing installation..... AT-124
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-7
 Cooling fan..... LC-13
 Cooling fan control..... EC-284
 Cooling fan motor inspection..... EC-295
 Cooling fan relay inspection..... EC-295
 Counter gear (MT)..... MT-9
 Coupling sleeve (MT)..... MT-9
 Crank angle sensor built into distributor - See Camshaft position sensor..... EC-173
 Crankshaft assembly..... EM-44
 Crankshaft bearing clearance..... EM-40
 Crankshaft inspection..... EM-39
 Crankshaft position sensor (OBD) DTC0802, P0335..... EC-169

Crankshaft position sensor (OBD) DTC0802, P0335 inspection..... EC-172
 Cylinder block..... EM-35
 Cylinder block boring..... EM-39
 Cylinder head..... EM-23
 Cylinder head bolt tightening..... EM-19

GI

MA

D

Daytime running light - See Daytime light system..... EL-45
 Detonation sensor - See Knock sensor..... EC-166
 Differential carrier assembly (except FF)..... PD-26
 Differential carrier disassembly (except FF)..... PD-14
 Differential gear oil replacement..... MA-19
 Dimensions..... GI-36
 Distributor ignition (DI) system..... EC-16
 Dome light - See Interior lamp..... EL-74
 Door glass..... BT-10
 Door glass Fitting Adjustment..... BT-10
 Door lock..... BT-10
 Door mirror..... BT-36
 Door trim..... BT-19
 Door, front - See Front door..... BT-10
 Drive pinion diff. inspection (except FF)..... PD-18
 Drive plate runout..... EM-43
 Drive shaft (rear)..... RA-12
 Dropping resistor (AT)..... AT-103

EM

LC

EC

FE

CL

MT

AT

PD

E

ECCS basic inspection..... EC-62
 ECCS component parts location..... EC-10
 ECCS on board diagnostic system..... EC-32
 ECCS symptom matrix chart..... EC-84, 87
 ECCS system diagram and chart..... EC-9
 ECM input/output signal inspection..... EC-95
 EGR control (EGRC) - BPT valve..... EC-185
 EGR control (EGRC) - solenoid valve..... EC-254
 EGR valve & EVAP canister purge control solenoid valve inspection..... EC-257
 EGRC - BPT valve inspection..... EC-186
 EGRC-solenoid valve inspection..... EC-257
 Electric sun roof..... EL-135
 Electrical units location..... EL-214
 Engine compartment..... BT-38
 Engine coolant temperature sensor (ECTS)..... EC-122
 Engine coolant temperature sensor (ECTS) P0115, DTC0103..... EC-122
 Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection..... EC-125
 Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection..... EC-135
 Engine coolant temperature sensor (ECTS) P0125, DTC0908..... EC-131

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Engine oil filter replacement MA-14
 Engine oil precautions GI-5
 Engine oil replacement MA-14
 Engine outer component parts EM-7
 Engine removal EM-33
 Engine room - See Engine
 compartment BT-38
 Engine serial number GI-35
 EVAP canister EC-19
 EVAP canister inspection EC-19
 EVAP canister purge control EC-19
 EVAP canister purge control solenoid
 valve EC-199
 EVAP canister purge control valve EC-199
 EVAP canister purge control valve
 inspection EC-206
 EVAP canister purge volume control
 valve EC-268
 EVAP canister vent control valve EC-207
 EVAP control system (small leak)
 diagnosis EC-190
 EVAP control system pressure
 sensor EC-110, 212
 EVAP control system purge flow moni-
 toring diagnosis EC-274
 EVAP shut valve EC-20
 EVAP vapor lines inspection MA-16
 Evaporative emission (EVAP) system EC-19
 Exhaust gas recirculation (EGR)
 system EC-177
 Exhaust gas recirculation (EGR) valve EC-177
 Exhaust system FE-7
 Exhaust system inspection MA-17
 Exterior BT-22
 Exterior lamp EL-54

F

Fan switch HA-58
 Fifth position switch EC-316
 Final drive disassembly (except FF) PD-14
 Final drive pre-inspection (except FF) PD-14
 Floor trim BT-17
 Fluid temperature sensor (AT) AT-101
 Fluids MA-8
 Flywheel runout EM-43
 Fog lamp, front, removal and installation BT-6
 Fork rod (MT) MT-10
 Forward clutch AT-164
 Front air spoiler BT-37
 Front axle FA-8
 Front bumper BT-6
 Front combination lamp removal and
 installation BT-6
 Front disc brake BR-13
 Front door BT-10
 Front fog lamp EL-58
 Front fog lamp removal and installation BT-6
 Front oxygen sensor (O2S) EC-136
 Front passenger air bag RS-10

Front seat BT-27
 Front seat belt RS-3
 Front suspension FA-12
 Front washer EL-103
 Front wiper EL-103
 Fuel cut control (at no load & high
 engine speed) EC-18
 Fuel filler lid BT-8
 Fuel filter replacement MA-13
 Fuel gauge EL-79, 80
 Fuel injection system EC-150, 155
 Fuel line inspection MA-12
 Fuel precautions GI-6
 Fuel pressure check EC-24
 Fuel pressure release EC-24
 Fuel pump EC-301
 Fuel pump control EC-301
 Fuel pump inspection EC-305
 Fuel pump relay inspection EC-305
 Fuel system FE-3
 Fuse EL-19
 Fusible link EL-19

G

Garage jack and safety stand GI-38
 Gauges EL-77
 Gears (MT) MT-9
 Glass BT-10
 Grease MA-8
 Grille - See Exterior BT-22
 Ground distribution EL-20

H

Harness connector EL-5
 Harness layout EL-217
 Hazard warning lamp EL-61
 Headlamp EL-42
 Headlamp removal and installation BT-6
 Heated oxygen sensor (HO2S) heater
 (rear) EC-149
 Heated oxygen sensor (rear) EC-145
 Height (Dimensions) GI-36
 HFC134a (R134a) system precaution HA-2
 HFC134a (R134a) system service
 procedure HA-62
 HFC134a (R134a) system service tools HA-5
 HFC134a system service equipment
 precaution HA-7
 High clutch AT-162
 Hood BT-6
 Horn EL-112
 How to follow flow chart in trouble
 diagnoses GI-29
 How to perform efficient diagnosis for
 an electrical incident GI-18
 How to read wiring diagrams GI-9

ALPHABETICAL INDEX

How to use this manual GI-7

I

IACV - air regulator inspection EC-311
 IACV - FICD solenoid valve inspection EC-315
 IACV-AAC valve inspection EC-224
 IACV-FICD solenoid valve EC-312
 Identification plate GI-35
 Idle air control valve (IACV) - air
 regulator EC-309
 Idle mixture ratio inspection EC-26
 Idle speed inspection EC-26
 Ignition coil inspection EC-249
 Ignition timing inspection EC-26
 Illumination EL-69
 Inhibitor switch AT-102
 Injector inspection EC-298
 Injector removal and installation EC-25
 Instrument panel BT-14
 Intake air temperature sensor EC-117
 Intake air temperature sensor
 inspection EC-121
 Intake door control linkage adjustment HA-61
 Interior BT-17
 Interior lamp EL-69

J

Jacking points GI-38

K

Keyless entry system - See Multi-re-
 mote control system EL-173
 Knock sensor (KS) EC-166
 Knock sensor (KS) inspection EC-168
 Knuckle spindle FA-8

L

Length (Dimensions) GI-36
 License lamp EL-54
 Line pressure solenoid valve AT-101
 Line pressure test (AT) AT-107
 Location of electrical units EL-214
 Lock, door - See Door lock BT-10
 Low and reverse brake AT-168
 Lower ball joint (rear susp.) RA-21
 Lubricant (R134a) A/C HA-64
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches MA-22

M

Magnet clutch HA-71
 Main drive gear (MT) MT-9
 Mainshaft (MT) MT-9
 Maintenance (engine) MA-10
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic MA-5
 Maintenance schedule (1) MA-6
 Maintenance schedule (2) MA-7
 Manual steering gear ST-13
 Manual transmission number GI-35
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-239
 Mass air flow sensor (MAFS) EC-105
 Mass air flow sensor inspection EC-109
 Master cylinder (brake) BR-8
 Master cylinder (clutch) CL-6
 Meter and gauges EL-77
 Mirror, door - See Door mirror BT-36
 Mirror, out side - See Out side mirror BT-36
 Misfire EC-162
 Mode door control linkage adjustment HA-60
 Model variation GI-33
 Molding - See Exterior BT-22
 MT overhaul MT-8
 MT removal and installation MT-6
 Mud guard - See Exterior BT-22
 Multi link/lower ball joint (rear) RA-21
 Multi-remote control system EL-173
 Multiport fuel injection (MFI) system EC-14
 Multiport fuel injection precautions GI-4

N

Neutral position switch (MT) MT-5

O

Oil pan (engine) EM-10
 Oil pressure (engine) LC-4
 Oil pressure relief valve (engine) LC-6
 Oil pump (AT) AT-141
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Operating cylinder (clutch) CL-7
 Out side mirror BT-36
 Overdrive control switch AT-102
 Overrun clutch AT-164
 Overrun clutch solenoid valve AT-101
 Oversize piston EM-39

ALPHABETICAL INDEX

Oxygen sensor (O2S) (front) EC-136

P

Park/Neutral position switch..... EC-234
 Parking brake control BR-23
 Pilot bushing replacement EM-45
 Pinion bearing preload diff. (except FF) PD-20
 Pinion gear height diff. (except FF) PD-20
 Piston assembly..... EM-43
 Piston pin inspection..... EM-37
 Piston ring inspection EM-37
 Piston to bore clearance..... EM-38
 Power antenna..... EL-121
 Power door lock..... EL-167
 Power door mirror..... EL-136
 Power steering fluid level..... MA-20, ST-6
 Power steering hydraulic pressure ST-8
 Power steering oil pressure switch EC-306
 Power steering oil pressure switch
 inspection..... EC-308
 Power steering oil pump..... ST-23
 Power steering system bleeding ST-7
 Power supply routing EL-8
 Power transistor & ignition coil EC-245
 Power transistor inspection..... EC-249
 Power window..... EL-162
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-10
 Pressure test (AT) AT-107
 Propeller shaft PD-5
 Propeller shaft on vehicle service..... PD-6
 Propeller shaft vibration PD-6

R

Rack retainer adjustment..... ST-6
 Radiator LC-10
 Radio - See Audio EL-121
 Rear air spoiler BT-37
 Rear axle (disc brake type)..... RA-8
 Rear bumper..... BT-8
 Rear combination lamp removal and
 installation BT-22
 Rear disc brake..... BR-16
 Rear heated oxygen sensor (HO2S) EC-145
 Rear heated oxygen sensor (HO2S)
 heater EC-149
 Rear seat BT-29
 Rear seat belt..... RS-4
 Rear suspension RA-18
 Rear window BT-34
 Rear window defogger EL-113
 Rear window signal..... EC-318
 Refrigerant connection precaution HA-3
 Refrigerant general precaution HA-2
 Refrigerant lines HA-66
 Refrigeration cycle HA-9

Release bearing (clutch) CL-8
 Resistor inspection..... EC-249
 Reverse clutch..... AT-158
 Reverse gear (MT) MT-9
 Reverse idler shaft (MT) MT-9
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT)..... MT-5
 Revolution sensor (AT)..... AT-103
 Ring gear diff. Inspection (except FF) PD-18
 Road wheel size..... GI-36
 Roof trim BT-20

S

SAE J1930 terminology list..... GI-42
 Seal - See Exterior BT-22
 Seat belt inspection MA-22
 Seat belt, front - See Front seat belt RS-3
 Seat belt, rear - See Rear seat belt RS-4
 Seat, front - See Front seat..... BT-27
 Seat, rear - See Rear seat..... BT-29
 Shift control (MT) MT-10
 Shift fork (MT) MT-10
 Shift lock system AT-112
 Shift schedule..... AT-33
 Shift solenoid valve (AT) AT-101
 Shock absorber (rear)..... RA-20
 Side bearing preload diff. (except FF) PD-19
 Side trim..... BT-17
 Side window - See Rear side window..... BT-35
 SMJ (super multiple junction)..... Foldout
 Spark plug replacement..... MA-15
 Speedometer EL-79
 Spiral cable RS-9
 Spot lamp..... EL-74
 Spring (Wheelarch) height..... FA-5
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS Trouble diagnoses RS-17
 SRS Wiring diagram RS-18
 Stabilizer bar (front) FA-14
 Stabilizer bar (rear) RA-22
 Stall test (AT)..... AT-104
 Standardized relay EL-6
 Starter EL-33
 Starting system EL-27
 Steering gear and linkage inspection MA-20
 Steering gear oil level..... MA-20
 Steering linkage ST-13
 Steering switch EL-41
 Steering wheel and column ST-9
 Steering wheel play ST-5
 Steering wheel turning force..... ST-7
 Stop lamp..... EL-54
 Striking rod (MT) MT-10
 Strut (front)..... FA-13
 Sun roof, electric - See Electric sun
 roof EL-135
 Sunroof BT-30
 Supplemental Restraint System..... RS-5

ALPHABETICAL INDEX

Symbols and abbreviations GI-8
Synchronizer (MT)..... MT-9

T

Tachometer EL-79
Tail lamp..... EL-54
Tank fuel temperature sensor EC-159
Tension rod (front) FA-14
Theft warning system EL-186
Thermo control amp..... HA-58
Thermostat..... LC-9
Three way catalyst EC-187
Three way catalyst precautions GI-5
Throttle position sensor (TPS) EC-126
Throttle position sensor inspection EC-62, 130
Throttle position switch..... AT-103
Throwout bearing - See Clutch release bearing CL-8
Thrust washer selection diff. (except FF) PD-26
Tie-rod..... ST-17
Tightening torque of standard bolts GI-41
Timing chain..... EM-12
Tire rotation..... MA-19
Tire size GI-36
Tooth contact diff. (except FF) PD-25
Torque converter clutch solenoid valve..... AT-101
Torque converter installation AT-124
Tow truck towing..... GI-39
Towing point GI-40
Transmission case (MT)..... MT-8
Transmission serial number GI-35
Transverse link (front)..... FA-15
Tread-FR&RR (Dimensions) GI-36
Trim BT-17
Triple pressure switch HA-9, 59
Trunk lid BT-8
Trunk lid opener - See Trunk lid BT-8
Trunk lid trim BT-21
Trunk room lamp..... EL-74
Trunk room trim BT-21
Turn signal lamp EL-61
Two-pole lift GI-39

U

Under body BT-40

V

Vacuum cut valve EC-267
Vacuum cut valve bypass valve..... EC-263
Vacuum hose (brake system) BR-12
Vacuum hose drawing (ECCS) EC-12
Valve clearance..... EM-30
Valve guide inspection EM-26
Valve seat inspection EM-28
Valve spring inspection EM-29
Vehicle identification number GI-34
Vehicle speed sensor (VSS) EC-216
Viscosity number (SAE)..... MA-8

W

Warning buzzer..... EL-84
Warning lamps EL-84
Water pump LC-8
Water temperature gauge..... EL-79, 80
Weatherstrip - See Exterior BT-22
Wheel alignment (front) FA-6
Wheel alignment (rear) RA-5
Wheel balance MA-19
Wheel bearing (front axle) FA-5
Wheel bearing (rear) RA-5
Wheel hub (front) FA-8
Wheel hub (rear) RA-8
Wheel hub and steering knuckle FA-8
Wheel sensors (ABS)..... BR-28
Wheel size..... GI-36
Wheelarch height..... FA-5
Wheelbase (Dimensions) GI-36
Wide open & closed throttle position (CTP) switch EC-126
Width (Dimensions) GI-36
Window, door BT-10
Window, rear - See Rear window BT-34
Window, side - See Rear side window BT-35
Windshield BT-34
Windshield washer - See Front washer EL-103
Windshield wiper - See Front wiper EL-103
Wiper and washer..... EL-103
Withdrawal lever (clutch) CL-8

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX