

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-26
 ABS actuator BR-30
 ABS circuit diagram BR-35
 ABS component parts and connector
 locations BR-34
 ABS control unit BR-30
 ABS hydraulic circuit BR-26
 ABS input/output signal inspection BR-70
 ABS self-diagnosis BR-41, 45
 ABS system components BR-27
 ABS trouble diagnoses BR-32
 ABS wheel sensors BR-29
 ABS wiring diagram BR-36
 A/C air flow HA-13
 A/C component layout HA-12
 A/C compressor clutch removal and
 installation HA-72
 A/C compressor description HA-15
 A/C compressor mounting HA-70
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment
 (manual A/C) HA-61
 A/C control operation (manual A/C) HA-14
 A/C diagnostic work flow (manual A/C) HA-21
 A/C harness layout (manual A/C) HA-38
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure HA-63
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution HA-9
 A/C lubricant (R134a) HA-65
 A/C operational check HA-22
 A/C performance chart HA-34
 A/C performance test diagnoses HA-32
 A/C push control HA-71
 A/C relay HA-60
 A/C service data specification HA-76
 A/C symptom chart (manual A/C) HA-24
 A/C trouble diagnoses (manual A/C) HA-21
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-13
 Air bag module RS-9
 Air bag precautions GI-2
 Air bleeding for brake system BR-6
 Air cleaner filter replacement MA-13
 Air conditioner cut control EC-18
 Air flow meter - See Mass air flow
 sensor EC-94
 Air mix door control linkage adjustment HA-61
 Air mix. door motor HA-61
 1296 Air spoiler, front BT-24

Air spoiler, rear BT-24
 Alternator EL-34
 Angular tightening application EM-2
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control device) EL-131
 A/T control DTC:P0600 EC-226
 AT control unit AT-51
 AT diagnosis communication line EC-278
 AT fluid temperature sensor AT-63
 AT removal and installation AT-135
 AT self-diagnoses AT-21
 AT shift lock system AT-125
 Audio EL-114
 Audio and A/C control removal and
 installation - See Instrument panel BT-16
 Automatic transmission fluid
 replacement MA-18
 Automatic transmission number GI-37
 Axle housing (rear) RA-8

B

Back-up lamp EL-53
 Back-up lamp switch (MT) MT-6
 Ball joint front axle FA-15
 Battery EL-20
 Baulk ring (MT) MT-10
 Belt inspection (drive belt) MA-10
 Bi-level door control linkage adjustment HA-62
 Blower motor HA-59
 Blower resistor HA-59
 Board-on lift GI-39
 Body alignment BT-41
 Boring/horning cylinder block EM-39
 BPT valve EC-181
 Brake booster BR-11
 Brake control valve
 (Proportioning valve) BR-4
 Brake fluid change BR-5
 Brake fluid level MA-19
 Brake fluid level and line check BR-5
 Brake hydraulic line BR-3
 Brake inspection MA-20
 Brake lines and cables inspection MA-19
 Brake master cylinder BR-8
 Brake pedal BR-7
 Bumper, front BT-6
 Bumper, rear BT-9

C

Camshaft inspection EM-25
 Camshaft position sensor (CMPS) EC-168
 Canister-See EVAP canister EC-20
 Center bearing assembly
 (propeller shaft) PD-8
 Center bearing disassembly
 (propeller shaft) PD-8

ALPHABETICAL INDEX

Charging system..... EL-30
 Chassis and body maintenance MA-17
 Cigarette lighter EL-104
 Circuit breaker EL-16
 Clock EL-104
 Closed loop control EC-131
 Closed throttle position switch EC-222
 Clutch cover..... CL-10
 Clutch disc CL-10
 Clutch fluid level MA-17
 Clutch master cylinder CL-6
 Clutch operating cylinder CL-7
 Clutch pedal..... CL-4
 Clutch pedal free play CL-4
 Clutch pedal height..... CL-4
 Clutch release bearing CL-8
 Clutch withdrawal lever CL-8
 Coil spring (front) FA-13
 Coil spring (rear) RA-20
 Collision diagnosis RS-37
 Combination lamp, rear, removal and
 installation BT-24
 Combination meter EL-75
 Combination meter removal and
 installation - See Instrument panel BT-16
 Combination switch..... EL-35
 Compression pressure..... EM-9
 Compressor clutch removal and
 installation..... HA-72
 Compressor description HA-15
 Compressor mounting..... HA-70
 Compressor precaution..... HA-6
 Compressor special service tool..... HA-6
 Connecting rod EM-38
 Connecting rod bearing clearance EM-41
 Connecting rod bushing clearance..... EM-42
 Console box - See Instrument panel..... BT-16
 CONSULT general information..... GI-34
 Control lever (MT) MT-11
 Control valve (AT) AT-157
 Converter housing installation..... AT-137
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-7
 Cooling fan LC-13
 Cooling fan control EC-281
 Cooling fan motor..... EC-292
 Cooling fan relay EC-292
 Counter gear (MT) MT-10
 Coupling sleeve (MT)..... MT-10
 Crank angle sensor built into distributor
 - See Camshaft position sensor..... EC-168
 Crankshaft..... EM-39
 Crankshaft position sensor (OBD)
 DTC0802, P0335..... EC-164
 Crankshaft position sensor (OBD)
 DTC0802, P0335 inspection EC-167
 Cruise control - See ASCD..... EL-131
 Cylinder block EM-35
 Cylinder block boring..... EM-39
 Cylinder head..... EM-23

Cylinder head bolt tightening EM-19

D

Daytime running light - See Daytime
 light system EL-41
 Detonation sensor - See Knock sensor..... EC-161
 Differential carrier assembly
 (except FF) PD-26
 Differential carrier disassembly
 (except FF) PD-14
 Differential gear oil replacement..... MA-19
 Dimensions..... GI-38
 Distributor ignition (DI) system..... EC-17
 Dome light - See Interior lamp EL-71
 Door glass BT-11
 Door glass Fitting Adjustment..... BT-12
 Door lock BT-11
 Door mirror..... BT-40
 Door trim BT-21
 Door, front BT-11
 Drive pinion diff. inspection (except FF) PD-18
 Drive plate runout EM-43
 Drive shaft (rear) RA-12
 Dropping resistor (AT)..... AT-90

E

ECCS basic inspection EC-71
 ECCS component parts location EC-11
 ECCS on board diagnostic system..... EC-33
 ECCS symptom matrix chart EC-76
 ECCS system diagram and chart EC-10
 ECM input/output signal..... EC-84
 EGR control (EGRC) - BPT valve..... EC-180
 EGR control (EGRC) - solenoid valve EC-251
 EGRC-solenoid valve..... EC-254
 EGRC-solenoid valve inspection EC-254
 Electric sun roof EL-128
 Electrical unit..... Foldout
 Electrical units location EL-208
 Engine compartment..... BT-41
 Engine coolant temperature sensor
 (ECTS) EC-111
 Engine oil filter replacement MA-14
 Engine oil precautions..... GI-5
 Engine oil replacement MA-14
 Engine outer component parts EM-7
 Engine removal..... EM-33
 Engine room - See Engine
 compartment BT-41
 Engine serial number GI-37
 EVAP canister EC-20
 EVAP canister inspection..... EC-20
 EVAP canister purge control valve EC-195
 EVAP canister purge control valve
 inspection..... EC-202

ALPHABETICAL INDEX

EVAP canister purge volume control valve	EC-265
EVAP canister vent control valve	EC-203
EVAP control system (small leak) diagnosis	EC-185
EVAP control system pressure sensor	EC-99, 209
EVAP control system purge flow monitoring diagnosis	EC-271
EVAP vapor lines inspection	MA-16
Evaporative emission (EVAP) system	EC-20
Exhaust gas recirculation (EGR) valve	EC-172
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior	BT-24
Exterior lamp	EL-51

F

Fan switch	HA-59
Fifth position switch	EC-313
Final drive disassembly (except FF)	PD-14
Final drive pre-inspection (except FF)	PD-14
Finisher, interior - See Trim	BT-19
Finisher, rear panel	BT-23
Floor trim	BT-19
Fluid temperature sensor (AT)	AT-63
Fluids	MA-8
Flywheel runout	EM-43
Fork rod (MT)	MT-11
Forward clutch	AT-176
Freeze frame data	EC-35, 55
Front air spoiler	BT-24
Front axle	FA-8
Front bumper	BT-6
Front disc brake	BR-13
Front door	BT-11
Front fog lamp	EL-55
Front heated oxygen sensor (HO2S)	EC-126
Front passenger air bag	RS-10
Front seat	BT-31
Front seat belt	RS-3
Front suspension	FA-12
Front washer	EL-95
Front wiper	EL-95
Fuel cut control (at no load & high engine speed)	EC-19
Fuel filler lid	BT-9
Fuel filter replacement	MA-13
Fuel gauge	EL-76
Fuel injection system	EC-143, 148
Fuel line inspection	MA-12
Fuel precautions	GI-6
Fuel pressure check	EC-25
Fuel pressure release	EC-25
Fuel pump	EC-298, 302
Fuel pump relay	EC-302
Fuel system	FE-3
1200	EL-16

Fusible link	EL-16
--------------------	-------

G

Garage jack and safety stand	GI-40
Gauges	EL-74
Gears (MT)	MT-10
Glass	BT-11
Grease	MA-8
Ground distribution	EL-17

H

Harness connector	EL-3
Harness layout	EL-211
Hazard warning lamp	EL-58
Headlamp	EL-38
Headlamp removal and installation	BT-6
Headlining - See Roof trim	BT-22
Heated oxygen sensor (HO2S) (front)	EC-126
Heated oxygen sensor (rear)	EC-135
Height (Dimensions)	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-63
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution	HA-9
High clutch	AT-174
Hood	BT-6
Horn	EL-104
How to erase DTC for ECCS OBD system	EC-42
How to follow flow chart in trouble diagnoses	GI-31
How to perform efficient diagnosis for an electrical incident	GI-19
How to read wiring diagrams	GI-9
How to use this manual	GI-7

I

IACV - air regulator	EC-308
IACV - FICD solenoid valve	EC-312
IACV-AAC valve inspection	EC-221
IACV-FICD solenoid valve	EC-309
Identification plate	GI-37
Idle air control valve (IACV) - air regulator	EC-306
Idle mixture ratio	EC-27
Idle speed	EC-27
Ignition coil	EC-246
Ignition timing	EC-27
Illumination	EL-66
Inhibitor switch	AT-59
Injector	EC-295
Injector removal and installation	EC-26

ALPHABETICAL INDEX

Instrument panel BT-16
 Intake air temperature sensor EC-106
 Intake air temperature sensor
 inspection EC-110
 Intake door control linkage adjustment HA-61
 Intake manifold EM-8
 Interior BT-19
 Interior lamp EL-66

J

Jacking points GI-40

K

Keyless entry system - See Multi-re-
 mote control system EL-164
 Knock sensor (KS) EC-161, 163
 Knuckle spindle FA-8

L

Length (Dimensions) GI-38
 License lamp EL-51
 Line pressure solenoid valve AT-79, 87, 90
 Line pressure test (AT) AT-123
 Liquid gasket application EM-2
 Location of electrical units EL-208
 Lock, door BT-11
 Low and reverse brake AT-180
 Lower ball joint (rear susp.) RA-21
 Lubricant (R134a) A/C HA-65
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches MA-22

M

Magnet clutch HA-72
 Main drive gear (MT) MT-10
 Mainshaft (MT) MT-10
 Maintenance (engine) MA-10
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic MA-5
 Maintenance schedule (1) MA-6
 Maintenance schedule (2) MA-7
 Manual steering gear ST-13
 Manual transmission number GI-37
 Manual transmission oil replacement MA-17
 MAP/BARO switch solenoid valve EC-236
 Mass air flow sensor (MAFS) EC-94
 Master cylinder (brake) BR-8
 Master cylinder (clutch) CL-6

Meter EL-74
 MIL & Data link connectors circuit EC-317
 Mirror, door BT-40
 Mirror, out side BT-40
 Misfire EC-157
 Mode door control linkage adjustment HA-61
 Model variation GI-35
 Molding - See Exterior BT-24
 MT overhaul MT-9
 MT removal and installation MT-7
 Mud guard - See Exterior BT-24
 Multi link/lower ball joint (rear) RA-21
 Multi-remote control system EL-164
 Multiport fuel injection (MFI) system EC-15
 Multiport fuel injection precautions GI-4

N

Neutral position switch (MT) MT-6

O

Oil pan (engine) EM-10
 Oil pressure (engine) LC-4
 Oil pressure relief valve (engine) LC-6
 Oil pump (AT) AT-153
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-21
 Oil seal replacement
 (front of final drive) PD-9
 Oil seal replacement
 (side of final drive) PD-9
 Operating cylinder (clutch) CL-7
 Out side mirror BT-40
 Overdrive control switch AT-59
 Overrun clutch AT-176
 Overrun clutch solenoid valve AT-79, 87, 100
 Oversize piston EM-39

P

Park/Neutral position switch EC-231
 Parking brake control BR-24
 Parking lamp EL-51
 Pilot bushing replacement EM-45
 Pinion bearing preload diff. (except FF) PD-20
 Pinion gear height diff. (except FF) PD-20
 Piston assembly EM-43
 Piston pin inspection EM-37
 Piston ring inspection EM-37
 Piston to bore clearance EM-38
 Power antenna EL-122
 Power door lock EL-158
 Power door mirror EL-129
 Power steering fluid level MA-21, ST-6
 Power steering hydraulic pressure ST-6

ALPHABETICAL INDEX

Power steering oil pressure switch..... EC-303, 305
 Power steering oil pump..... ST-23
 Power steering system bleeding..... ST-7
 Power supply routing..... EL-6
 Power transistor & ignition coil..... EC-242
 Power transistor..... EC-246
 Power window..... EL-153
 Precautions (General)..... GI-2
 Pressure plate - See Clutch cover..... CL-10
 Pressure test (AT)..... AT-123
 Propeller shaft..... PD-5
 Propeller shaft on vehicle service..... PD-6
 Propeller shaft vibration..... PD-6

R

Rack retainer adjustment..... ST-6
 Radiator..... LC-10
 Radio - See Audio..... EL-114
 Rear air spoiler..... BT-24
 Rear axle (disc brake type)..... RA-8
 Rear bumper..... BT-9
 Rear combination lamp removal and
 installation..... BT-24
 Rear disc brake..... BR-17
 Rear heated oxygen sensor (HO2S)..... EC-135
 Rear panel finisher..... BT-23
 Rear seat..... BT-33
 Rear seat belt..... RS-4
 Rear side window..... BT-39
 Rear suspension..... RA-18
 Rear window..... BT-38
 Rear window defogger..... EL-106
 Refrigerant connection precaution..... HA-3
 Refrigerant general precaution..... HA-2
 Refrigerant lines..... HA-67
 Refrigeration cycle..... HA-11
 Release bearing (clutch)..... CL-8
 Resistor..... EC-246
 Reverse clutch..... AT-170
 Reverse gear (MT)..... MT-10
 Reverse idler shaft (MT)..... MT-10
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT)..... MT-6
 Revolution sensor (AT)..... AT-65
 Ring gear diff. Inspection (except FF)..... PD-18
 Road wheel size..... GI-38
 Roof trim..... BT-22

S

SAE J1930 terminology list..... GI-44
 Seal - See Exterior..... BT-24
 Seat belt inspection..... MA-22
 Seat belt, front..... RS-3
 Seat belt, rear..... RS-4
 Seat, front..... BT-31
 1300i, rear..... BT-33

Shift control (MT)..... MT-11
 Shift fork (MT)..... MT-11
 Shift lock system..... AT-125
 Shift schedule..... AT-44
 Shift solenoid
 valve (AT)..... AT-69, 72, 74, 79, 87, 92, 95
 Shock absorber (rear)..... RA-20
 Side bearing preload diff. (except FF)..... PD-19
 Side trim..... BT-19
 Side window - See Rear side window..... BT-39
 Smart entrance control unit..... EL-204
 SMJ (super multiple junction)..... Foldout
 Spark plug replacement..... MA-15
 Speedometer..... EL-76
 Spiral cable..... RS-9
 Spot lamp..... EL-71
 Spring (Wheelarch) height..... FA-5
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS Trouble diagnoses..... RS-17
 SRS Wiring diagram..... RS-20
 Stabilizer bar (front)..... FA-14
 Stabilizer bar (rear)..... RA-22
 Stall test (AT)..... AT-120
 Standardized relay..... EL-4
 Starter..... EL-29
 Starting system..... EL-24
 Steering gear and linkage inspection..... MA-20
 Steering gear oil level..... MA-21
 Steering linkage..... ST-13
 Steering switch..... EL-37
 Steering wheel and column..... ST-9
 Steering wheel play..... ST-5
 Steering wheel turning force..... ST-7
 Stop lamp..... EL-51
 Striking rod (MT)..... MT-11
 Strut (front)..... FA-13
 Sun roof, electric..... EL-128
 Sunroof..... BT-34
 Supplemental Restraint System..... RS-5
 Symbols and abbreviations..... GI-8
 Synchronizer (MT)..... MT-10
 System readiness test (SRT) code..... EC-35

T

Tachometer..... EL-76
 Tail lamp..... EL-51
 Tank fuel temperature sensor..... EC-153
 Tension rod (front)..... FA-14
 Theft warning system..... EL-178
 Thermostat..... LC-9
 Three way catalyst..... EC-182
 Three way catalyst precautions..... GI-5
 Throttle bodies..... EM-8
 Throttle position sensor (TPS)..... EC-116
 Throttle position switch..... AT-60
 Throwout bearing - See Clutch release
 bearing..... CL-8

ALPHABETICAL INDEX

Thrust washer selection diff.
 (except FF) PD-26
 Tie-rod ST-17
 Tightening torque of standard bolts GI-43
 Timing chain EM-12
 Tire rotation MA-19
 Tire size GI-38
 Tooth contact diff. (except FF) PD-25
 Torque converter clutch solenoid
 valve AT-79, 82, 87
 Torque converter installation AT-137
 Tow truck towing GI-41
 Towing point GI-42
 Transmission case (MT) MT-9
 Transmission serial number GI-37
 Transverse link (front) FA-15
 Tread-FR&RR (Dimensions) GI-38
 Trim BT-19
 Triple pressure switch HA-11, 60
 Trunk lid BT-9
 Trunk lid opener - See Trunk lid BT-9
 Trunk room lamp EL-71
 Trunk room trim BT-23
 Turn signal lamp EL-58
 Two trip detection logic EC-33
 Two-pole lift GI-41

U

Under body BT-43

V

Vacuum cut valve EC-264
 Vacuum cut valve bypass valve EC-260
 Vacuum hose (brake system) BR-12
 Vacuum hose drawing (ECCS) EC-13
 Valve clearance EM-30

Valve guide EM-26
 Valve seat EM-28
 Valve spring EM-29
 Vehicle identification number GI-36
 Vehicle speed sensor (VSS) EC-213
 Viscosity number (SAE) MA-8

W

Warning buzzer EL-86
 Warning lamps EL-81
 Water pump LC-8
 Water temperature gauge EL-76
 Weatherstrip - See Exterior BT-24
 Wheel alignment (front) FA-6
 Wheel alignment (rear) RA-5
 Wheel balance MA-19
 Wheel bearing (front axle) FA-5
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-8
 Wheel hub (rear) RA-8
 Wheel hub and steering knuckle FA-8
 Wheel sensors (ABS) BR-29
 Wheel size GI-38
 Wheelarch height FA-5
 Wheelbase (Dimensions) GI-38
 Wide open & closed throttle position
 (CTP) switch EC-116
 Width (Dimensions) GI-38
 Window, rear BT-38
 Window, rear side BT-39
 Window, side - See Rear side window BT-39
 Windshield BT-38
 Windshield washer - See Front washer EL-95
 Windshield wiper - See Front wiper EL-95
 Wiper and washer EL-95
 Withdrawal lever (clutch) CL-8

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX