

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-291
 ABS (anti-lock brake system) BR-28
 ABS input/output signal inspection BR-72
 A/C - Wiring diagram HA-40
 A/C air flow..... HA-19
 A/C component layout..... HA-18
 A/C compressor clutch removal and
 installation..... HA-71
 A/C compressor description..... HA-12
 A/C compressor mounting HA-70
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment HA-61
 A/C control operation HA-20
 A/C diagnostic work flow..... HA-21
 A/C harness layout..... HA-38
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-63
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution..... HA-9
 A/C lubricant (R134a) HA-65
 A/C operational check..... HA-22
 A/C performance chart..... HA-34
 A/C performance test diagnoses HA-32
 A/C push control HA-75
 A/C relay HA-60
 A/C service data specification..... HA-76
 A/C symptom chart HA-24
 A/C trouble diagnoses..... HA-21
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-8
 Air bag disposal RS-16
 Air bag precautions GI-2
 Air bleeding (hydraulic clutch) CL-6
 Air bleeding for brake system BR-7
 Air cleaner filter replacement..... MA-13
 Air conditioner - Wiring diagram HA-41
 Air conditioner cut control EC-18
 Air flow meter - See Mass air flow
 sensor EC-102
 Air mix door control linkage adjustment..... HA-61
 Air mix. door motor HA-61
 Air spoiler, front..... BT-24
 Air spoiler, rear BT-24
 Alternator EL-30
 Angular tightening application EM-2
 Antenna - See Power antenna EL-116
 AP/SEN - Wiring diagram..... EC-111
 ASCD (automatic speed control device) EL-124
 ASCD - Wiring diagram..... EL-128
 A/T - Wiring diagram AT-11
 A/T diagnosis communication line EC-405

A/T fluid temperature sensor AT-85, 149
 A/T self-diagnoses..... AT-40
 A/T shift lock system AT-174
 A/T shift lock system - Wiring diagram AT-175
 AT/C - Wiring diagram..... EC-303
 ATDIAG - Wiring diagram EC-405
 Audio EL-111
 AUDIO - Wiring diagram..... EL-112
 Audio and A/C control removal and
 installation - See Instrument panel..... BT-16
 Automatic speed control system - See
 ASCD EL-124
 Automatic transmission fluid
 replacement..... MA-18
 Automatic transmission number..... GI-38
 Auxiliary air control (AAC) valve EC-291
 Axle housing (rear)..... RA-9

B

Back-up lamp EL-49
 Back-up lamp switch (M/T) MT-7, 10
 BACK/L - Wiring diagram EL-49
 Ball joint front axle FA-16
 Battery EL-16
 Baulk ring (M/T) MT-11
 Bi-level door control linkage adjustment..... HA-62
 Blower motor HA-59
 Blower resistor HA-59
 Board-on lift GI-40
 Body alignment BT-42
 Boring/horning cylinder block EM-41
 BPT valve EC-255
 Brake booster BR-12
 Brake control valve (Proportioning
 valve) BR-5
 Brake fluid change BR-6
 Brake fluid level MA-19
 Brake fluid level and line check BR-6
 Brake hydraulic line..... BR-4
 Brake inspection MA-20
 Brake lines and cables inspection MA-20
 Brake master cylinder BR-9
 Brake pedal BR-8
 Bulb specifications EL-217
 Bumper, front BT-6
 Bumper, rear BT-9
 BUZZER - Wiring diagram..... EL-83
 BYPS/V - Wiring diagram EC-383

C

Camshaft inspection EM-27
 CANI/V - Wiring diagram EC-393
 Canister-See EVAP canister EC-20
 Center bearing assembly (propeller
 shaft)..... PD-9

ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft)..... PD-9
 CHARGE - Wiring diagram..... EL-27
 Charging system..... EL-26
 Chassis and body maintenance..... MA-17
 CIGAR - Wiring diagram..... EL-101
 Cigarette lighter..... EL-101
 Circuit breaker..... EL-12
 CKPS - Wiring diagram..... EC-232, 324
 Clock..... EL-102
 CLOCK - Wiring diagram..... EL-102
 Clutch cover..... CL-11, 12
 Clutch disc..... CL-11
 Clutch fluid level..... MA-17
 Clutch master cylinder..... CL-7
 Clutch operating cylinder..... CL-8
 Clutch pedal..... CL-4, 5
 Clutch release bearing..... CL-9
 Clutch release mechanism..... CL-9
 Clutch withdrawal lever..... CL-9
 CMPS - Wiring diagram..... EC-237
 Coil spring (front)..... FA-14
 Coil spring (rear)..... RA-21
 Collision diagnosis..... RS-43
 Combination lamp, rear, removal and installation..... BT-24
 Combination meter..... EL-70
 Combination meter removal and installation - See Instrument panel..... BT-16
 Combination switch..... EL-31
 Compression pressure..... EM-11
 Compressor clutch removal and installation..... HA-71
 Compressor description..... HA-12
 Compressor mounting..... HA-70
 Compressor precaution..... HA-6
 Compressor special service tool..... HA-6
 Connecting rod..... EM-40
 Connecting rod bearing clearance..... EM-43
 Connecting rod bushing clearance..... EM-44
 Connector inspection..... GI-18
 Console box - See Instrument panel..... BT-16
 CONSULT for ECCS..... EC-54
 CONSULT general information..... GI-34
 Control lever (M/T)..... MT-12
 Control valve (A/T)..... AT-206
 Converter housing installation..... AT-186
 Coolant mixture ratio..... MA-9
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-7
 Cooling fan..... LC-13
 Cooling fan motor..... EC-424
 Cooling fan relay..... EC-424
 Counter gear (M/T)..... MT-11
 Coupling sleeve (M/T)..... MT-11
 Crank angle sensor built into distributor - See Camshaft position sensor..... EC-237
 Crankcase emission control system - See positive crankcase ventilation..... EC-25
 Crankcase ventilation system - See Positive crankcase ventilation..... EC-25

Crankshaft..... EM-41
 Crankshaft position sensor (OBD)..... EC-232
 Cruise control - See ASCD..... EL-124
 Cylinder block..... EM-37
 Cylinder block boring..... EM-41
 Cylinder head..... EM-25
 Cylinder head bolt tightening..... EM-21

D

Daytime running light - See Daytime light system..... EL-39
 DEF - Wiring diagram..... EL-104
 Detonation sensor - See Knock sensor..... EC-229
 Diagnosis sensor unit..... RS-11
 Diagnostic trouble code (DTC) inspection priority chart..... EC-76
 Differential carrier assembly..... PD-29
 Differential carrier disassembly..... PD-15
 Differential gear oil replacement..... MA-19
 Dimensions..... GI-39
 Distributor..... EC-17
 Distributor ignition (DI) system..... EC-17
 D/LOCK - Wiring diagram..... EL-153
 Dome light - See Interior lamp..... EL-66
 Door glass..... BT-11
 Door glass Fitting Adjustment..... BT-12
 Door lock..... BT-11
 Door mirror..... BT-41
 Door trim..... BT-21
 Door, front..... BT-11
 Drive belt inspection..... MA-10
 Drive pinion diff. inspection..... PD-19
 Drive plate runout..... EM-45
 Drive shaft (rear)..... RA-13
 Dropping resistor (A/T)..... AT-127
 DTRL - Wiring diagram..... EL-42

E

ECCS basic inspection..... EC-73
 ECCS circuit diagram..... EC-9
 ECCS component parts location..... EC-10
 ECCS fail-safe system..... EC-77
 ECCS on board diagnostic system..... EC-34
 ECCS symptom matrix chart..... EC-78
 ECCS system diagram and chart..... EC-12
 ECM input/output signal..... EC-86
 ECTS - Wiring diagram..... EC-125, 141
 EGR control (EGRC) - BPT valve..... EC-251
 EGR control (EGRC) - solenoid valve..... EC-329
 EGR control valve..... EC-249, 345
 EGR temperature sensor..... EC-334
 EGR/TS - Wiring diagram..... EC-334
 EGRC/V - Wiring diagram..... EC-329
 EGRC1 - Wiring diagram..... EC-243
 Electric sun roof..... EL-121
 Electrical diagnoses..... GI-21

ALPHABETICAL INDEX

Electrical ignition system..... EC-17
 Electrical unit..... Foldout
 Electrical units location..... EL-200
 Engine compartment..... BT-42
 Engine control module (ECM)..... EC-306
 Engine coolant temperature sensor
 (ECTS)..... EC-125
 Engine oil filter replacement..... MA-14
 Engine oil precautions..... GI-5
 Engine oil replacement..... MA-14
 Engine outer component parts..... EM-9
 Engine removal..... EM-35
 Engine room - See Engine
 compartment..... BT-42
 Engine serial number..... GI-38
 EVAP canister..... EC-20
 EVAP canister purge control solenoid
 valve..... EC-393, 398
 EVAP canister purge control valve..... EC-393, 398
 EVAP canister purge volume control
 valve..... EC-20, 271, 358
 EVAP canister vent control valve..... EC-365, 378
 EVAP vapor lines inspection..... MA-16
 Evaporative emission (EVAP) system..... EC-20
 Exhaust gas recirculation (EGR) valve..... EC-243
 Exhaust system..... FE-7
 Exhaust system inspection..... MA-17
 Exterior..... BT-24
 Exterior lamp..... EL-47

F

Fan switch..... HA-59
 F/FOG - Wiring diagram..... EL-52
 FICD - Wiring diagram..... EC-443
 Fifth position switch..... EC-448
 Final drive disassembly..... PD-15
 Final drive pre-inspection..... PD-15
 Finisher, interior - See Trim..... BT-19
 Finisher, rear panel..... BT-23
 Floor trim..... BT-19
 Flow charts..... GI-31
 Fluid temperature sensor (A/T)..... AT-85, 149
 Fluids..... MA-8
 Flywheel (clutch)..... CL-12
 Flywheel runout..... EM-45
 Fog lamp, front..... EL-51
 Fork rod (M/T)..... MT-12
 Forward clutch..... AT-225
 F/PUMP - Wiring diagram..... EC-431
 FRO2 - Wiring diagram..... EC-146
 FRO2/H - Wiring diagram..... EC-177
 Front air spoiler..... BT-24
 Front axle..... FA-9
 Front bumper..... BT-6
 Front disc brake..... BR-14
 Front door..... BT-11
 Front fog lamp..... EL-51
 Front oxygen sensor (O2S) monitor..... EC-46
 Front passenger air bag..... RS-13

Front seat..... BT-31
 Front seat belt..... RS-3
 Front suspension..... FA-13
 Front washer..... EL-90
 Front wiper..... EL-90
 FUEL - Wiring diagram..... EC-210, 215
 Fuel cut control (at no load & high
 engine speed)..... EC-19
 Fuel filler lid..... BT-9
 Fuel filter..... EC-26
 Fuel filter replacement..... MA-13
 Fuel line inspection..... MA-12
 Fuel precautions..... GI-6
 Fuel pressure check..... EC-26
 Fuel pressure release..... EC-26
 Fuel pump..... EC-431
 Fuel system..... FE-3
 Fuel tank vacuum relief valve..... EC-21
 Fuse..... EL-12
 Fusible link..... EL-12

G

Garage jack and safety stand..... GI-41
 Gauges..... EL-69
 Gear components (M/T)..... MT-11
 Generic scan tool (GST)..... EC-67
 Glass..... BT-11
 Grease..... MA-8
 Ground distribution..... EL-13

H

Harness connector..... EL-3
 Harness connector inspection..... GI-18
 Harness layout..... EL-203
 Hazard warning lamp..... EL-54
 Headlamp..... EL-34
 Headlamp removal and installation..... BT-6
 Headlining - See Roof trim..... BT-22
 Heated oxygen sensor heater..... EC-156, 162, 170
 Height (Dimensions)..... GI-39
 HFC134a (R134a) system precaution..... HA-2
 HFC134a (R134a) system service
 procedure..... HA-63
 HFC134a (R134a) system service tools..... HA-7
 HFC134a system service equipment
 precaution..... HA-9
 High clutch..... AT-223
 H/LAMP - Wiring diagram..... EL-35
 Hood..... BT-6
 Horn..... EL-100
 HORN - Wiring diagram..... EL-100

I

IACV - air regulator..... EC-442

ALPHABETICAL INDEX

IACV-AAC valve EC-291
 IACV-FICD solenoid valve EC-443
 IATS - Wiring diagram EC-119
 Identification plate GI-38
 Idle air control valve (IACV) EC-291
 Idle air control valve (IACV) - air
 regulator..... EC-440
 Idle mixture ratio EC-28
 Idle speed..... EC-28
 IGN/SG - Wiring diagram EC-318
 Ignition timing EC-28
 Ignition wire inspection EC-228
 ILL - Wiring diagram EL-63
 Illumination EL-61
 Inhibitor switch..... AT-81
 INJECT - Wiring diagram EC-425
 Injector..... EC-427
 Injector removal and installation EC-27
 Instrument panel BT-16
 INT/L - Wiring diagram EL-67
 Intake air temperature sensor EC-119
 Intake door control linkage adjustment HA-61
 Intake manifold EM-10
 Interior..... BT-19

J

Jacking points..... GI-41

K

Keyless entry system - See Multi-
 remote control system..... EL-158
 Knock sensor (KS) EC-229
 Knuckle spindle..... FA-9
 KS - Wiring diagram..... EC-229

L

Length (Dimensions) GI-39
 License lamp..... EL-47
 Line pressure solenoid valve AT-112, 123, 127
 Line pressure test (A/T) AT-59
 Liquid gasket application EM-2
 Location of electrical units EL-200
 Lock, door BT-11
 Low and reverse brake AT-229
 Lower ball joint (rear susp.) RA-22
 Lubricant (R134a) A/C HA-65
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches..... MA-22

M

MAFS - Wiring diagram EC-102
 Magnet clutch..... HA-71
 MAIN - Wiring diagram EC-97
 Main drive gear (M/T) MT-11
 Mainshaft (M/T) MT-11
 Maintenance MA-1
 Maintenance (engine) MA-10
 MAJOR OVERHALL..... AT-187
 Malfunction indicator lamp (MIL) EC-46
 Manual transmission number GI-38
 Manual transmission oil replacement MA-17
 Mass air flow sensor (MAFS)..... EC-102
 Master cylinder (brake) BR-9
 Master cylinder (clutch) CL-7
 Meter EL-69
 METER - Wiring diagram EL-71
 MIL & Data link connectors circuit EC-452
 MIL/DL - Wiring diagram EC-452
 MIRROR - Wiring diagram EL-122
 Mirror, door BT-41
 Mirror, out side..... BT-41
 Misfire..... EC-224
 Mode door control linkage adjustment..... HA-61
 Model variation GI-36
 Molding - See Exterior BT-24
 M/T major overhaul MT-10
 M/T removal and installation MT-8
 Mud guard - See Exterior BT-24
 MULTI - Wiring diagram..... EL-161
 Multi link/lower ball joint (rear) RA-22
 Multi-remote control system EL-158
 Multiport fuel injection (MFI) system..... EC-15
 Multiport fuel injection precautions..... GI-4

N

Neutral position switch (M/T) MT-7, 10
 NVH troubleshooting (BR) BR-3
 NVH troubleshooting (CL) CL-3
 NVH troubleshooting (FA)..... FA-4
 NVH troubleshooting (M/T) MT-5
 NVH troubleshooting (PD) PD-5
 NVH troubleshooting (RA) RA-4
 NVH troubleshooting (ST) ST-5

O

Oil pan (engine) EM-12
 Oil pressure (engine)..... LC-4
 Oil pressure relief valve (engine) LC-6
 Oil pump (A/T)..... AT-202
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine)..... LC-6
 Oil seal replacement (engine) EM-23

ALPHABETICAL INDEX

Oil seal replacement (front of final drive)..... PD-10
 Oil seal replacement (side of final drive)..... PD-10
 Operating cylinder (clutch) CL-8
 Out side mirror BT-41
 Overdrive control switch..... AT-172
 Overrun clutch AT-225
 Overrun clutch solenoid valve..... AT-112, 123, 144
 Oversize piston EM-41

P

P/ANT - Wiring diagram..... EL-117
 Park/Neutral position switch..... EC-408
 Parking brake control BR-26
 Parking lamp EL-47
 PCV (positive crankcase ventilation) EC-25
 PGC/V - Wiring diagram EC-271, 358
 Pilot bushing replacement EM-47
 Pinion bearing preload diff. PD-21
 Pinion gear height diff. PD-21
 Piston assembly..... EM-45
 Piston pin inspection..... EM-39
 Piston ring inspection EM-39
 Piston to bore clearance..... EM-40
 PNP/SW - Wiring diagram EC-408
 POWER - Wiring diagram EL-7
 Power door lock..... EL-152
 Power door mirror..... EL-122
 Power steering fluid level..... MA-21, ST-7
 Power steering gear ST-15
 Power steering hydraulic pressure ST-9
 Power steering oil pressure switch EC-436
 Power steering oil pump ST-25
 Power steering system bleeding ST-8
 Power supply routing EL-6
 Power transistor & ignition coil EC-318
 Power window..... EL-147
 PRE/SE - Wiring diagram EC-282
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-11, 12
 Pressure test (A/T)..... AT-59
 Propeller shaft PD-6
 Propeller shaft on vehicle service..... PD-7
 Propeller shaft vibration PD-7
 PST/SW - Wiring diagram..... EC-436

R

Rack retainer adjustment..... ST-7
 Radiator LC-10
 Radio - See Audio EL-111
 Rear air spoiler BT-24
 Rear axle (disc brake type)..... RA-9
 Rear bumper..... BT-9
 Rear combination lamp removal and installation BT-24

Rear disc brake BR-19
 Rear panel finisher BT-23
 Rear seat BT-33
 Rear seat belt..... RS-4
 Rear side window BT-40
 Rear suspension RA-19
 Rear window BT-38
 Rear window defogger..... EL-103
 Refrigerant connection precaution HA-3
 Refrigerant general precaution HA-2
 Refrigerant lines HA-67
 Refrigeration cycle..... HA-11
 Release bearing (clutch) CL-9
 Removal and installation (A/T) AT-184
 Reverse clutch..... AT-219
 Reverse idler shaft (M/T)..... MT-11
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) MT-7, 10
 Reverse main gear (M/T) MT-11
 Revolution sensor (A/T) AT-88
 Ring gear diff. inspection PD-19
 Road wheel size..... GI-39
 Roof trim BT-22
 Room lamp - See Interior lamp EL-66
 RRO2 - Wiring diagram EC-181
 RRO2/H - Wiring diagram EC-206

S

SAE J1930 terminology list GI-45
 Seal - See Exterior BT-24
 Seat belt inspection..... MA-22, RS-5
 Seat belt, front..... RS-3
 Seat belt, rear RS-4
 Seat, front BT-31
 Seat, rear BT-33
 Self-diagnostic results EC-46
 SHIFT - Wiring diagram AT-175
 Shift control components (M/T)..... MT-12
 Shift fork (M/T) MT-12
 Shift lever MT-12
 Shift lock system AT-174
 Shift schedule..... AT-262
 Shift solenoid valve A (A/T) AT-95, 104, 112, 123, 130
 Shift solenoid valve B (A/T) AT-95, 100, 112, 123, 134
 Shock absorber (rear) RA-21
 Side bearing preload diff. PD-20
 Side trim..... BT-19
 Side window - See Rear side window..... BT-40
 Smart entrance control unit EL-196
 SMJ (super multiple junction)..... Foldout
 Spark plug replacement..... MA-15
 Spiral cable RS-12
 Spot lamp..... EL-66
 Spring (Wheelarch) height..... FA-6
 SROOF - Wiring diagram EL-121
 SRS - See Supplemental Restraint System..... RS-8

ALPHABETICAL INDEX

SRS - Wiring diagram	RS-25
SRS Trouble diagnoses	RS-20
S/SIG - Wiring diagram	EC-428
Stabilizer bar (front)	FA-15
Stabilizer bar (rear)	RA-23
Stall test (A/T)	AT-56
Standardized relay	EL-4
START - Wiring diagram	EL-22
Starter	EL-25
Starting system	EL-20
Steering gear and linkage inspection	MA-20
Steering linkage	ST-15
Steering switch	EL-33
Steering wheel and column	ST-11
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-47
Striking rod (M/T)	MT-12
Strut (front)	FA-14
Sub-gear (M/T)	MT-11
Sun roof, electric	EL-121
Sunroof	BT-34
Supplemental Restraint System	RS-8
Supplemental restraint system - Wiring diagram	RS-25
SW/V - Wiring diagram	EC-308
Symbols and abbreviations	GI-8
Synchronizer (M/T)	MT-11

T

Tail lamp	EL-47
TAIL/L - Wiring diagram	EL-47
TCM circuit diagram	AT-10
TCM inspection table	AT-74
Tension rod (front)	FA-15
TFTS - Wiring diagram	EC-220
THEFT - Wiring diagram	EL-177
Theft warning system	EL-172
Thermostat	LC-9
Three way catalyst precautions	GI-5
Throttle bodies	EM-10
Throttle position sensor (TPS)	EC-130
Throttle position sensor adjustment	EC-73
Throttle position switch	AT-141, 173
Throwout bearing - See Clutch release bearing	CL-9
Thrust washer selection diff.	PD-27
Tie-rod	ST-19
Tightening torque of standard bolts	GI-44
Timing chain	EM-14
Tire rotation	MA-19
Tire size	GI-39
Tooth contact diff.	PD-26
Torque converter installation	AT-186
Torque convertor clutch solenoid valve	AT-112, 116, 123
Tow truck towing	GI-42
TP/SW - Wiring diagram	EC-298
TPS - Wiring diagram	EC-130

Transmission case (M/T)	MT-10
Transmission serial number	GI-38
Transverse link (front)	FA-16
Tread-FR&RR (Dimensions)	GI-39
Trim	BT-19
Triple pressure switch	HA-11, 60
Trunk lid	BT-9
Trunk lid opener - See Trunk lid	BT-9
Trunk room lamp	EL-66
Trunk room trim	BT-23
TURN - Wiring diagram	EL-57
Turn signal lamp	EL-54
Two-pole lift	GI-42

U

Under body	BT-44
------------------	-------

V

Vacuum cut valve	EC-392
Vacuum hose (brake system)	BR-13
Vacuum hose drawing (ECCS)	EC-13
Valve clearance	EM-32
Valve guide	EM-28
Valve seat	EM-30
Valve spring	EM-31
Vehicle identification number	GI-37
Vehicle speed sensor (VSS)	EC-287
VENT/V - Wiring diagram	EC-277
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-287

W

WARN - Wiring diagram	EL-77
Warning buzzer	EL-81
Warning lamps	EL-76
Washer, front	EL-90
Water pump	LC-8
Weatherstrip - See Exterior	BT-24
Wheel alignment (front)	FA-7
Wheel alignment (rear)	RA-6
Wheel balance	MA-19
Wheel bearing (front axle)	FA-6
Wheel bearing (rear)	RA-6
Wheel hub (front)	FA-9
Wheel hub (rear)	RA-9
Wheel sensors (ABS)	BR-31
Wheel size	GI-39
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-39
Wide open & closed throttle position switch	EC-130
Width (Dimensions)	GI-39
WINDOW - Wiring diagram	EL-149
Window, rear	BT-38

ALPHABETICAL INDEX

Window, rear side	BT-40
Window, side - See Rear side window	BT-40
Windshield	BT-38
WIPER - Wiring diagram	EL-92
Wiper, front	EL-90
Wiring Diagram (Cell code) list	EL-218
Wiring diagrams	GI-9
Withdrawal lever (clutch)	CL-9