

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-168
ABS - Wiring diagram	BR-40
ABS sensor rotor	AX-11
A/C air flow	HA-17
A/C component layout.....	HA-15
A/C compressor clutch removal and installation	HA-81
A/C compressor description	HA-14
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-10
A/C control linkage adjustment (manual A/C)	HA-35, 58, 61
A/C control operation (manual A/C)	HA-16
A/C diagnostic work flow (manual A/C).....	HA-27
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-77
A/C HFC134a (R134a) system service tools.....	HA-11
A/C HFC134a system service equip- ment precaution	HA-7
A/C lubricant (R134a).....	HA-79
A/C operational check	HA-28
A/C performance chart	HA-46
A/C performance test diagnoses	HA-44
A/C push control.....	HA-95
A/C relay.....	HA-75
A/C service data specification	HA-98
A/C trouble diagnoses (manual A/C)	HA-19
A/C, M - Wiring diagram	HA-23
Accelerator control system	FE-3
Accelerator wire adjustment	FE-3
Air bag	RS-7
Air bag disposal.....	RS-16
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-6
Air bleeding for brake system	BR-8
Air cleaner filter	EM-17
Air conditioner cut control	EC-21
Air flow meter - See Mass air flow sensor	EC-98
Air mix door control linkage adjustment.....	HA-58
Air mix. door motor.....	HA-52
Alternator	SC-22
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-104
Anti-lock brake system - Wiring diagram	BR-40
A/T - Wiring diagram - AT - MAIN.....	AT-86
A/T - Wiring diagram - AT - VSS A/T	AT-91
A/T control	EC-148
A/T fluid temperature sensor.....	AT-131
A/T mode switch.....	AT-197
A/T self-diagnoses.....	AT-37
A/T shift lock system	AT-198
A/T shift lock system - Wiring diagram	AT-199

A/T trouble diagnoses	AT-42
A/T Wiring diagram - AT - ENG SS	AT-133
A/T Wiring diagram AT - BA/FTS	AT-127
A/T Wiring diagram AT - LPSV	AT-138
A/T Wiring diagram AT - NONDTC	AT-146
A/T Wiring diagram AT - OVRCSV.....	AT-117
A/T Wiring diagram AT - SSV/A	AT-108
A/T Wiring diagram AT - SSV/B	AT-113
A/T Wiring diagram AT - TCV	AT-122
A/T Wiring diagram AT - TPS.....	AT-100
A/T Wiring diagram AT - VSSMTR.....	AT-96
AT/C - Wiring diagram.....	EC-150
Audio	EL-103
AUDIO - Wiring diagram	EL-103
Audio and A/C control removal and installation - See Instrument panel	BT-22
Automatic transmission number	GI-39
Axle housing (rear)	AX-11

B

Back-up lamp	EL-38
Back-up lamp switch (M/T)	MT-8
BACK/L - Wiring diagram.....	EL-38
Ball joint (front)	SU-12
Ball Joint (rear).....	SU-22
Basic inspection	EC-50
Battery	SC-3
Baulk ring (M/T)	MT-31, 36
Blower and cooling unit.....	HA-89
Blower motor	HA-37
Blower resistor.....	HA-37
Blower unit.....	HA-88
Board-on lift	GI-41
Body alignment	BT-53
Boring/horning cylinder block.....	EM-72
Brake booster	BR-17
Brake control valve (Proportioning valve).....	BR-11
Brake fluid change	BR-6
Brake fluid level and line check	BR-6
Brake hydraulic line	BR-9
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-175
Bumper, front	BT-6
Bumper, rear	BT-10

C

Camshaft inspection	EM-43
Camshaft position sensor (CMPS).....	EC-90
Canister-See EVAP canister	EC-22
CHARGE - Wiring diagram	SC-20
Charging system	SC-19
CHIME - Wiring diagram.....	EL-81
CIGAR - Wiring diagram.....	EL-94
Cigarette lighter.....	EL-94

ALPHABETICAL INDEX

Circuit breaker.....EL-14
 Clutch cover.....CL-15
 Clutch disc.....CL-15
 Clutch master cylinder.....CL-7
 Clutch operating cylinder.....CL-10
 Clutch pedal.....CL-5, 6
 Clutch release bearing.....CL-13
 Clutch withdrawal lever.....CL-13
 CMPS - Wiring diagram.....EC-93
 Coil spring (front).....SU-9
 Coil spring (rear).....SU-20
 Collision diagnosis.....RS-46
 Combination lamp, rear, removal and
 installation.....BT-34
 Combination meter.....EL-58
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-22
 Combination switch.....EL-26
 Component Location (manual A/C).....HA-19
 Compressor clutch removal and
 installation.....HA-81
 Compressor description.....HA-14
 Compressor precaution.....HA-7
 Compressor special service tool.....HA-10
 Connecting rod.....EM-71
 Connecting rod bearing clearance.....EM-75
 Connecting rod bushing clearance.....EM-76
 Console box - See Instrument panel.....BT-22
 CONSULT for ABS.....BR-43
 CONSULT for engine.....EC-39
 Control valve (A/T).....AT-230
 Converter housing installation.....AT-209
 COOL/F - Wiring diagram.....EC-123
 Coolant mixture ratio.....MA-9
 Cooling circuit (engine).....LC-10
 Cooling fan control.....EC-120
 Cooling fan motor.....EC-136
 Cooling fan relay.....EC-135
 Counter gear (M/T).....MT-36
 Coupling sleeve (M/T).....MT-31, 36
 "Crankcase emission control system -
 See positive crankcase ventilation".....EC-25
 Crankshaft.....EM-73
 Cylinder block.....EM-68
 Cylinder block boring.....EM-72
 Cylinder head.....EM-38

D

Data link connector for Consult.....EC-39
 DEF - Wiring diagram.....EL-97
 Detonation sensor - See Knock sensor.....EC-137
 Diagnosis sensor unit.....RS-10
 Diagnostic trouble code (DTC) for OBD
 system.....EC-4
 Differential carrier assembly.....PD-27
 Differential carrier disassembly.....PD-17
 Dimensions.....GI-40
 D/LOCK - Wiring diagram.....EL-121
 Dome light - See Interior lamp.....EL-47

Door glass.....BT-14, 16
 Door lock.....BT-20
 Door mirror.....BT-52
 Door trim.....BT-29
 Door, front.....BT-13
 Door, rear.....BT-13
 Drive belt.....EM-16
 Drive pinion diff. inspection.....PD-19
 Drive pinion height.....PD-21
 Drive plate runout.....EM-77
 Drive shaft (rear).....AX-15
 Dropping resistor (A/T).....AT-141
 Dual pressure switch.....HA-74

E

ECM input/output signal.....EC-76
 ECTS - Wiring diagram.....EC-107
 Electric sun roof.....EL-106
 Electrical diagnoses.....GI-20
 Electrical ignition system.....EC-20
 Electrical load signal circuit.....EC-218
 Electrical unit.....Foldout
 Electrical units location.....EL-154
 Engine compartment.....BT-54
 Engine control circuit diagram.....EC-14
 Engine control component parts
 location.....EC-11
 Engine control system diagram and
 chart.....EC-15
 Engine coolant temperature sensor
 (ECTS).....EC-105
 Engine fail-safe system.....EC-67
 Engine oil precautions.....GI-7
 Engine outer component parts.....EM-12
 Engine removal.....EM-65
 Engine room - See Engine
 compartment.....BT-54
 Engine serial number.....GI-39
 EVAP canister.....EC-23
 EVAP canister purge volume control
 solenoid valve.....EC-22
 Evaporative emission (EVAP) system.....EC-22
 Exhaust system.....FE-11
 Exhaust system inspection.....FE-11
 Exterior.....BT-34

F

Fan switch.....HA-37
 FICD - Wiring diagram.....EC-210
 Final drive disassembly.....PD-16
 Final drive pre-inspection.....PD-16
 Final drive removal and installation.....PD-16
 Finisher, interior - See Trim.....BT-26
 Finisher, trunk lid.....BT-33
 Floor trim.....BT-26
 Fluid temperature sensor (A/T).....AT-131

ALPHABETICAL INDEX

Fluids.....MA-8
Flywheel (clutch).....CL-16
Flywheel runout.....EM-77
Fork rod (M/T).....MT-40
Forward clutch.....AT-249
F/PUMP - Wiring diagram.....EC-205
FRO2 - Wiring diagram.....EC-153
FRO2/H - Wiring diagram.....EC-159
Front axle.....AX-2
Front bumper.....BT-6
Front combination lamp removal and
installation.....BT-6
Front disc brake.....BR-20
Front door.....BT-13
Front heated oxygen sensor (HO2S).....EC-152
Front heated oxygen sensor (HO2S)
heater.....EC-158
Front seat.....BT-38
Front seat belt.....RS-4
Front suspension.....SU-2
Front washer.....EL-87
Front wiper.....EL-87
Fuel cut control (at no load & high
engine speed).....EC-22
Fuel filter replacement.....FE-4
Fuel gauge.....EL-58
Fuel injector.....EC-194
Fuel line inspection.....FE-4
Fuel precautions.....GI-8
Fuel pressure check.....EC-27
Fuel pressure regulator.....EC-28
Fuel pressure release.....EC-27
Fuel pump.....EC-203
Fuel pump and gauge.....FE-8
Fuel pump relay.....EC-203
Fuel system.....FE-4
Fuel tank vacuum relief valve.....EC-23
Fuse.....EL-14
Fuse block.....Foldout
Fusible link.....EL-14

G

Garage jack and safety stand.....GI-42
Gauges.....EL-58
Gear components (M/T).....MT-31, 36
Generator - See Alternator.....SC-22
Glass.....BT-14
Grease.....MA-8
Ground distribution.....EL-15

H

Harness connector.....EL-4
Harness layout.....EL-158
Hazard warning lamp.....EL-39
Headlamp.....EL-28
Headlamp removal and installation.....BT-6

Headlining - See Roof trim.....BT-31
Heated oxygen sensor (HO2S) (front).....EC-152
Heated oxygen sensor (HO2S) heater
(front).....EC-158
Heater unit (heater core).....HA-86
Height (Dimensions).....GI-40
HFC134a (R134a) system precaution.....HA-2
HFC134a (R134a) system service
procedure.....HA-77
HFC134a (R134a) system service tools.....HA-11
HFC134a system service equipment
precaution.....HA-7
High clutch.....AT-246
H/LAMP - Wiring diagram.....EL-29
Hood.....BT-6
Horn.....EL-93
HORN - Wiring diagram.....EL-93
How to erase DTC for OBD system.....EC-33
Hydraulic lash adjuster inspection.....EM-48

I

IACV-FICD solenoid valve.....EC-209
Identification plate.....GI-39
IGN/SG - Wiring diagram.....EC-112
Ignition control system.....EC-110
ILL - Wiring diagram.....EL-44
Illumination.....EL-43
INJECT - Wiring diagram.....EC-195
Injector removal and installation.....EC-28
Instrument panel.....BT-22
Intake door control linkage adjustment.....HA-35
Intake door motor.....HA-32
Intake manifold.....EM-36
Intake valve timing control solenoid
valve.....EC-173
Interior.....BT-26
Interior lamp.....EL-47
Interior lamp on-off control.....EL-48
IVC - Wiring diagram.....EC-175

J

Jacking points.....GI-42
Junction box (J/B).....Foldout

K

Knock sensor (KS).....EC-137, 138
Knuckle spindle.....AX-5

L

Length (Dimensions).....GI-40
License lamp.....EL-35

ALPHABETICAL INDEX

Lifting pointsGI-43
 Line pressure solenoid valveAT-136
 Line pressure test (A/T)AT-51
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-219
 Location of electrical unitsEL-154
 Lock, doorBT-20
 Low and reverse brakeAT-253
 Lubricant (R134a) A/CHA-79
 LubricantsMA-8
 Lubrication circuit (engine)LC-3

M

MAFS - Wiring diagramEC-101
 Magnet clutchHA-81
 MAIN - Wiring diagramEC-83
 Main drive gear (M/T)MT-9, 29
 MAJOR OVERHALLAT-211
 Malfunction indicator lamp (MIL)EC-35
 Manual air conditioner - Wiring diagramHA-23
 Mass air flow sensor (MAFS)EC-98
 Master cylinder (brake)BR-14
 Master cylinder (clutch)CL-7
 MeterEL-58
 METER - Wiring diagramEL-63
 MIL & Data link connectors circuitEC-224
 MIL/DL - Wiring diagramEC-224
 MIRROR - Wiring diagramEL-110
 Mirror defoggerEL-96
 Mirror, doorBT-52
 Mode door control linkage adjustmentHA-61
 Mode door motorHA-59, 62
 Model variationGI-37
 Molding - See ExteriorBT-34
 M/T major overhaulMT-15
 M/T oil replacementMT-7
 M/T removal and installationMT-12
 Multiport fuel injection (MFI) systemEC-18
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system)EL-134
 NATS (Nissan anti-theft system) precautionsGI-3
 NATS - Wiring diagramEL-136
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-5
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-6
 NVH troubleshooting (PD)PD-3
 NVH troubleshooting (ST)ST-5
 NVH troubleshooting (SU)SU-14
 NVIS (Nissan vehicle immobilizer system) precautionsGI-3

O

Oil pan (engine)EM-20
 Oil pressure (engine)LC-3
 Oil pump (A/T)AT-226
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine)EM-34
 Oil seal replacement (front of final drive)PD-12
 Oil seal replacement (side of final drive)PD-13
 On board diagnostic systemEC-33
 Operating cylinder (clutch)CL-10
 Overdrive control switchAT-196
 Overrun clutchAT-249
 Overrun clutch solenoid valveAT-116
 Oversize pistonEM-72

P

Park/neutral position switch (A/T)AT-196
 Park/neutral position switch (M/T)MT-8
 Parking brake controlBR-33
 Parking lampEL-35
 PCV (positive crankcase ventilation)EC-25
 Pilot bushing replacementEM-76
 Pinion gear height diff.PD-21
 Piston assemblyEM-78
 Piston pin inspectionEM-70
 Piston ring inspectionEM-70
 Piston to bore clearanceEM-72
 PNP/SW - Wiring diagramEC-187
 POWER - Wiring diagramEL-8
 Power antennaEL-104
 Power door lockEL-120
 Power door mirrorEL-110
 Power steering fluid levelST-7
 Power steering gearST-15
 Power steering hydraulic pressureST-9
 Power steering oil pressure switchEC-213
 Power steering oil pumpST-25
 Power steering system bleedingST-8
 Power supply routingEL-7
 Power transistor & ignition coilEC-110
 Power windowEL-111
 Precautions for Leak detection dyeHA-3
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-15
 Pressure test (A/T)AT-51
 Propeller shaftPD-2
 Propeller shaft on vehicle servicePD-4
 Propeller shaft vibrationPD-5
 PST/SW - Wiring diagramEC-214

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

R

Rack retainer adjustment.....	ST-7
Radiator	LC-14
Radiator fan - See Cooling fan.....	LC-15
Radio - See Audio.....	EL-103
Rear axle	AX-9
Rear axle (disc brake type)	AX-11
Rear bumper	BT-10
Rear combination lamp removal and installation	BT-34
Rear door	BT-13
Rear drum brake	BR-27
Rear seat	BT-39
Rear seat belt.....	RS-5
Rear suspension	SU-14
Rear window	BT-48
Rear window defogger.....	EL-96
Refrigerant connection precaution	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-90
Refrigeration cycle.....	HA-14
Release bearing (clutch).....	CL-13
Removal and installation (A/T).....	AT-208
Reverse clutch.....	AT-243
Reverse idler shaft (M/T)	MT-25
Reverse main gear (M/T)	MT-31
Revolution sensor (A/T)	AT-93
Ring gear diff. inspection.....	PD-19
Road wheel size	GI-40
Roof trim	BT-31
Room lamp - See Interior lamp	EL-47
ROOM/L - Wiring diagram	EL-49

S

SAE J1930 terminology list	GI-46
Seal - See Exterior	BT-34
Seat belt pre-tensioner.....	RS-2
Seat belt pre-tensioner disposal	RS-16
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front	BT-38
Seat, rear	BT-39
SHIFT - Wiring diagram	AT-199
Shift control components (M/T)	MT-11
Shift fork (M/T)	MT-40
Shift lever.....	MT-11
Shift lock system	AT-198
Shift schedule.....	AT-288
Shift solenoid valve A (A/T).....	AT-106
Shift solenoid valve B (A/T).....	AT-111
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-20
Side bearing preload diff.	PD-23
Side trim.....	BT-26
SMJ (super multiple junction).....	Foldout
Sodium-filled exhaust valve disposal.....	EM-3

Spare tire size	GI-40
Spark plug.....	EM-18
Speedometer.....	EL-58
Spiral cable.....	RS-12
Spot lamp.....	EL-57
SROOF - Wiring diagram	EL-107
SRS - See Supplemental Restraint System.....	RS-7
SRS - Wiring diagram	RS-26
S/SIG - Wiring diagram	EC-200
Stabilizer bar (rear)	SU-22
Stall test (A/T)	AT-48
Standardized relay	EL-5
START - Wiring diagram	SC-13
Start signal	EC-199
Starter.....	SC-15
Starting system.....	SC-12
Steering linkage	ST-15
Steering wheel and column.....	ST-11
Steering wheel play	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-37
STOP/L - Wiring diagram.....	EL-37
Striking rod (M/T)	MT-16
Strut (front)	SU-9
Strut (rear)	SU-18
Sun roof, electric.....	EL-106
Sunroof.....	BT-40
Supplemental Restraint System.....	RS-7
Supplemental restraint system - Wiring diagram.....	RS-26
Symbols and abbreviations	GI-10
Symptom matrix chart	EC-68
Synchronizer (M/T).....	MT-31, 36

T

Tachometer	EL-58
Tail lamp.....	EL-35
TAIL/L - Wiring diagram	EL-35
TCM circuit diagram.....	AT-12
TCM inspection table	AT-82
Thermal protector.....	HA-74, 85
Thermo control amp	HA-74
Thermostat.....	LC-13
Three way catalyst precautions.....	GI-6
Throttle position sensor (TPS)	EC-141
Throttle position sensor adjustment.....	EC-50
Throttle position switch	AT-105, 197
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	ST-15
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-45
Timing chain.....	EM-25
Tire size	GI-40
Tooth contact diff.	PD-26
Torque converter installation	AT-209
Torque convertor clutch solenoid valve.....	AT-120
Tow truck towing.....	GI-43

ALPHABETICAL INDEX

TPS - Wiring diagram.....	EC-144
Transaxle serial number	GI-39
Transmission case (M/T).....	MT-15
Tread-FR&RR (Dimensions).....	GI-40
Trim	BT-26
Trouble diagnoses	GI-30
Trunk lid	BT-10
Trunk lid finisher.....	BT-33
Trunk lid opener - See Trunk lid	BT-10
Trunk room lamp.....	EL-57
Trunk room trim.....	BT-33
Turbocharger	EM-58
TURN - Wiring diagram	EL-39
Turn signal lamp	EL-39
Two-pole lift	GI-43

U

Under body	BT-56
UNIFIED METER CONTROL UNIT (TIME CONTROL SYSTEM).....	EL-131

V

Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (Engine control)	EC-16
Valve guide.....	EM-45
Valve seat.....	EM-46
Valve spring.....	EM-48
Ventilation air filter	HA-96
Viscosity number (SAE)	MA-9
VSS - Wiring diagram	EC-163

W

WARN - Wiring diagram	EL-74	GI
Warning buzzer	EL-79	MA
Warning chime	EL-79	EM
Warning lamps	EL-73	EM
Washer, front.....	EL-87	EM
Wastegate valve control solenoid valve	EC-185	LC
Water pump	LC-12	LC
Water temperature gauge	EL-58	LC
Weatherstrip - See Exterior	BT-34	EC
Wheel alignment (front)	SU-6	EC
Wheel alignment (rear).....	SU-16	FE
Wheel bearing (front).....	AX-4	CL
Wheel bearing (rear)	AX-10	CL
Wheel hub (front).....	AX-5	FE
Wheel hub (rear).....	AX-11	CL
Wheel sensors (ABS).....	BR-54	CL
Wheelbase (Dimensions)	GI-40	CL
Wide open & closed throttle position switch	EC-141	MT
Width (Dimensions)	GI-40	MT
WINDOW - Wiring diagram.....	EL-114	AT
Window, rear	BT-48	AT
Windshield.....	BT-48	PD
WIPER - Wiring diagram	EL-89	PD
Wiper, front.....	EL-87	PD
Wiring Diagram (Cell code) list.....	EL-176	AX
Wiring diagrams	GI-11	AX
Withdrawal lever (clutch)	CL-13	AX
Wrist pin - See Piston pin inspection.....	EM-70	SU

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES