

SERVICE MANUAL

DATSUN 280Z
MODEL S30 SERIES



NISSAN MOTOR CO., LTD.
TOKYO, JAPAN

SECTION AT

AUTOMATIC TRANSMISSION

AT

DESCRIPTION	AT- 2
HYDRAULIC CONTROL SYSTEM	AT- 4
REMOVAL AND INSTALLATION	AT-33
MAJOR REPAIR OPERATION	AT-36
TROUBLE DIAGNOSES AND ADJUSTMENT	AT-48
SERVICE DATA AND SPECIFICATIONS	AT-59
SPECIAL SERVICE TOOLS	AT-62

Automatic Transmission

DESCRIPTION

The model 3N71B automatic transmission is a fully automatic unit consisting primarily of 3-element hydraulic torque converter and two planetary gear sets. Two multiple-disc clutches, a multiple-disc brake, a band brake and a one way sprag clutch provide the friction elements required to obtain the desired function of the two planetary gear sets.

The two planetary gear sets give three forward ratios and one reverse. Changing of the gear ratios is fully automatic in relation to vehicle speed and engine torque input. Vehicle speed and engine manifold vacuum signals are constantly fed to the transmission to provide the proper gear ratio for maximum efficiency and performance at all throttle openings.

The model 3N71B has six selector positions: P, R, N, D, 2, 1

"P" – Park position positively locks the output shaft to the transmission case by means of a locking pawl to prevent the vehicle from rolling in either direction

This position should be selected whenever the driver leaves the vehicle.

The engine may be started in Park position.

"R" – Reverse range enables the vehicle to be operated in a reverse direction.

"N" – Neutral position enables the engine to be started and run without driving the vehicle.

"D" – Drive range is used for all normal driving conditions

Drive range has three gear ratios, from the starting ratio to direct drive

"2" – "2" range provides performance for driving on slippery surfaces "2" range can also be used for engine braking.

"2" range can be selected at any vehicle speed, and prevents the transmission from shifting out of second gear.

"1" – "1" range can be selected at any vehicle speed and the transmission will shift to second gear and remain in second until vehicle speed is reduced to approximately 40 to 50 km/h (25 to 31 MPH).

"1" range position prevents the transmission from shifting out of low gear. This is particularly beneficial for maintaining maximum engine braking when continuous low gear operation is desirable.

The torque converter assembly is of welded construction and can not be disassembled for service.

FLUID RECOMMENDATION

Use automatic transmission fluid having "DEXRON" identifications only in the 3N71B automatic transmission

IDENTIFICATION NUMBER

Stamped position:

The plate is attached to the right hand side of transmission case as shown in Figure AT-1

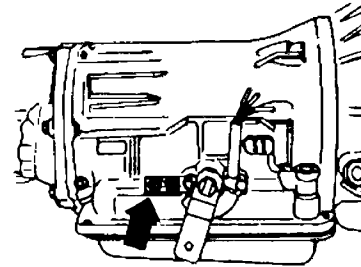


Fig AT-1 Identification number

Identification of number Arrangements:

See below

Model code


JAPAN AUTOMATIC TRANSMISSION CO., LTD.	
MODEL	X2710
NO.	4912345

Unit number

Number designation

4 9 1 2 3 4 5

Serial production number for the month
Month of production (X: Oct., Y: Nov., Z: Dec.)
Last figure denoting the year (A.D.)

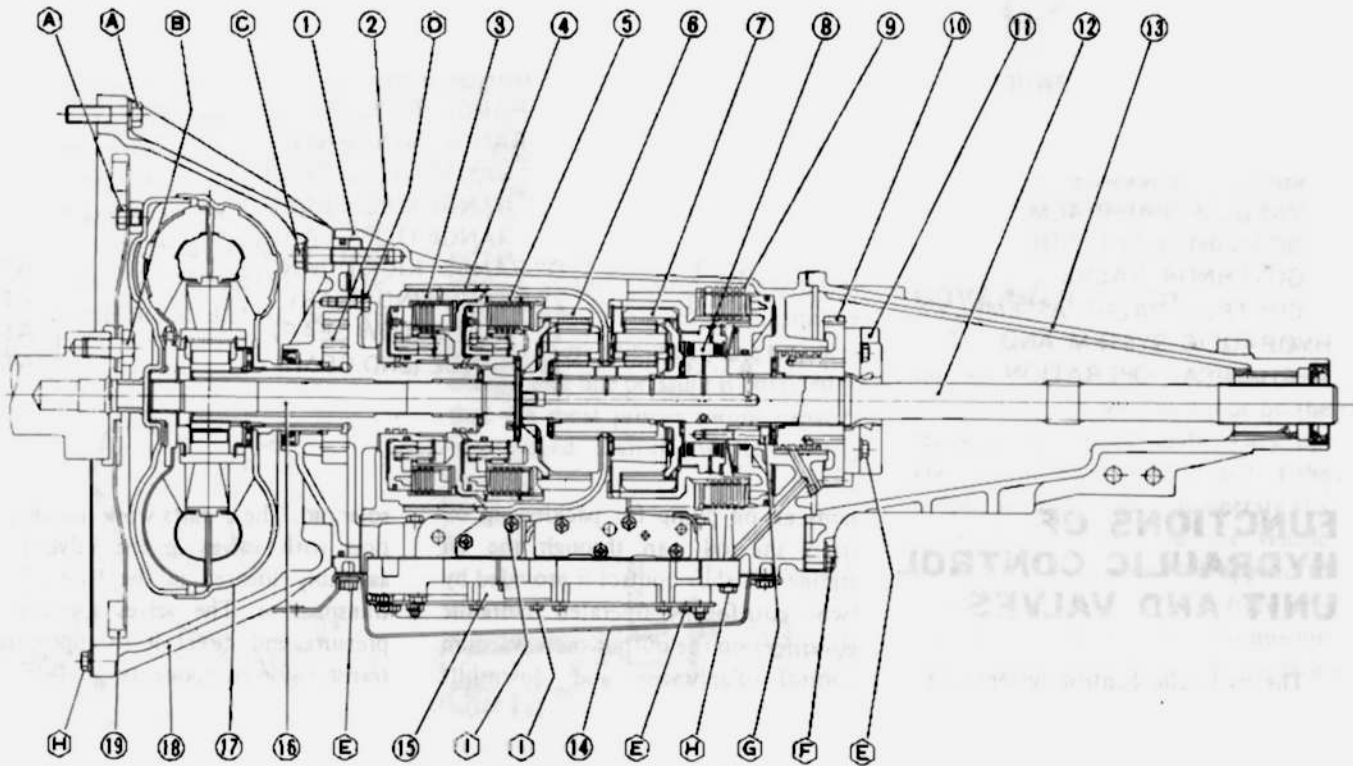

AT312

- 1 Transmission case
- 2 Oil pump
- 3 Front clutch
- 4 Band brake
- 5 Rear clutch
- 6 Front planetary gear
- 7 Rear planetary gear
- 8 One-way clutch
- 9 Low & Reverse brake
- 10 Oil distributor

- 11 Governor
- 12 Output shaft
- 13 Rear extension
- 14 Oil pan
- 15 Control valve
- 16 Input shaft
- 17 Torque converter
- 18 Converter housing
- 19 Drive plate

Tightening torque (T) of bolts and nuts kg-m (ft-lb)

- A T: 4 to 5 (29 to 36)
- B T: 14 to 16 (101 to 116)
- C T: 4.5 to 5.5 (33 to 40)
- D T: 0.6 to 0.8 (4.3 to 5.8)
- E T: 0.5 to 0.7 (3.6 to 5.1)
- F T: 2.0 to 2.5 (14 to 18)
- G T: 1.3 to 1.8 (9.4 to 13.0)
- H T: 0.55 to 0.75 (4.0 to 5.4)
- I T: 0.25 to 0.35 (1.8 to 2.5)

Fig. AT-2 Cross-sectional view of 3N71B automatic transmission

HYDRAULIC CONTROL SYSTEM

CONTENTS

FUNCTIONS OF HYDRAULIC CONTROL

UNIT AND VALVES	AT- 4
OIL PUMP	AT- 4
MANUAL LINKAGE	AT- 4
VACUUM DIAPHRAGM	AT- 5
DOWNSHIFT SOLENOID	AT- 5
GOVERNOR VALVE	AT- 5
CONTROL VALVE ASSEMBLY	AT- 6
HYDRAULIC SYSTEM AND MECHANICAL OPERATION	AT-13


"P" RANGE (PARK)
"R" RANGE (REVERSE)
"N" RANGE (NEUTRAL)
"D ₁ " RANGE (LOW GEAR)
"D ₂ " RANGE (2ND GEAR)
"D ₃ " RANGE (TOP GEAR)
"D" RANGE KICK-DOWN
"2" RANGE (2ND GEAR)
"1 ₁ " RANGE (LOW GEAR)
"1 ₂ " RANGE (2ND GEAR)

FUNCTIONS OF HYDRAULIC CONTROL UNIT AND VALVES

The hydraulic control system con-

tains an oil pump for picking up oil from the oil pan through the oil strainer. A shift control is provided by two centrifugally operated hydraulic governors on the output shaft, vacuum control diaphragm and downshift

solenoid. These parts work in conjunction with valves in the valve assembly located in the base of the transmission. The valves regulate pressure and direct it to appropriate transmission components.

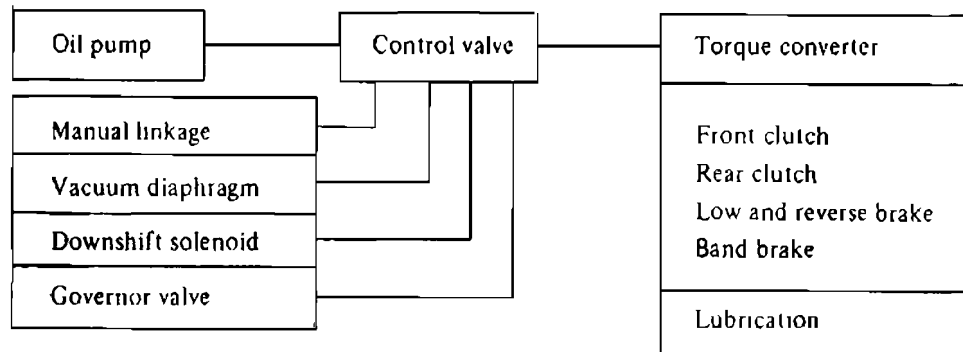

OIL PUMP


The oil pump is the source of control medium (i.e., oil) for the control system.

The oil pump is of an internal, involute gear type. The drive sleeve is a part of the torque converter pump impeller and serves to drive the pump inner gear with the drive sleeve directly coupled with the engine operation.

The oil flows through the following route:

Oil pan — Oil strainer (bottom of the control valve) — Control valve lower

housing delivery port — Transmission case delivery port — Lower body delivery port — Control valve line pressure circuit.

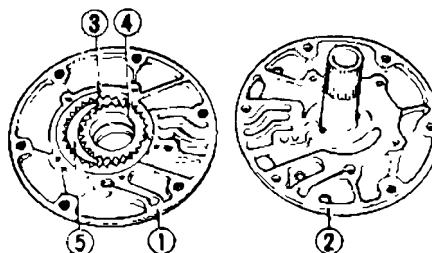

1 Housing

2 Governor

4 Inner gear

5 Governor

MANUAL LINKAGE

The hand lever motion (the lever is located in the driver's compartment), mechanically transmitted through the remote control linkage, is finally transmitted to the inner manual shaft in the transmission case from the selector lever in the right center of the transmission case through the manual shaft. The inner manual lever is thereby turned.

A pin installed on the bottom of the inner manual lever slides the manual valve spool of the control valve, positioning the spool opposite the

plate. The parking rod pin operates the rod at "P" range, and operates the mechanical lock system.

The above described manual shaft is further equipped with an inhibitor switch. A rotor inside the inhibitor switch rotates in response to each range. When the range is selected at "P" or "N", the rotor closes the starter magnet circuit so that the engine can be started. When the range is selected at "R", the rotor closes the back-up lamp circuit, and the back-up lamp lights.

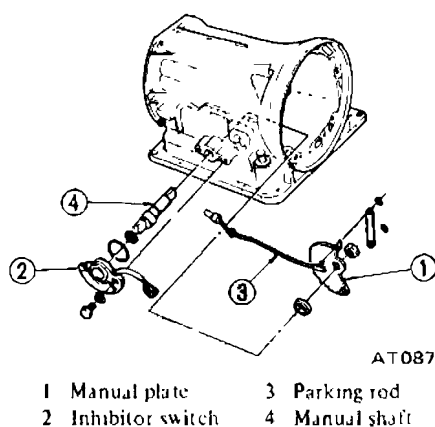


Fig. AT-4 Manual linkage

vacuum reaction increases since the flow velocity of mixture inside the intake manifold is slow. Contrarily, when the engine speed increases and the flow velocity of the mixture increases or when the carburetor is closed, the manifold negative pressure increases (i.e., tends towards vacuum) and the vacuum reaction is reduced.

Thus, a signal to generate hydraulic pressure perfectly suited to the engine loading at the control valve is transmitted from the vacuum diaphragm, and the most suitable timing for speed change and line pressure is obtained so that the most proper torque capacity is obtained against the transmitting torque.

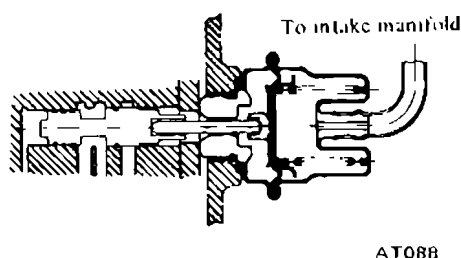


Fig. AT-5 Vacuum diaphragm

VACUUM DIAPHRAGM

The vacuum diaphragm is installed on the left center portion of the transmission case. The internal construction of the vacuum diaphragm is as follows:

A rubber diaphragm forms a partition in the center. The engine intake manifold negative pressure is led through a vacuum tube and spring force is applied to the front surface of the rubber diaphragm while atmospheric pressure is applied to the back surface. The difference between pressure applied to the front and back surfaces causes a vacuum reaction, which activates the throttle valve of the control valve inside the transmission case.

When accelerator pedal is fully depressed and the carburetor is fully opened but the engine speed is not sufficiently increased, the manifold negative pressure lowers (i.e., tends towards atmospheric pressure) and the

DOWNSHIFT SOLENOID

The downshift solenoid is of a magnetic type installed on the left rear portion of the transmission case. When a driver requires accelerating power and depresses the accelerator pedal down to the stopper, a kickdown switch located in the middle of the accelerator link is depressed by a push rod, the kickdown switch closes, current flows to the solenoid, the solenoid push rod is depressed, the downshift valve of the control valve inside the transmission case is depressed, and the speed is changed forcedly from "3rd" to "2nd" within a certain vehicle speed limit.

Note: Since the kickdown switch closes when the accelerator pedal is depressed from 7/8 to 15/16 of the whole stroke, the accelerator pedal should be correctly adjusted so as to afford a complete stroke. The arrangement of the switch varies according to model.

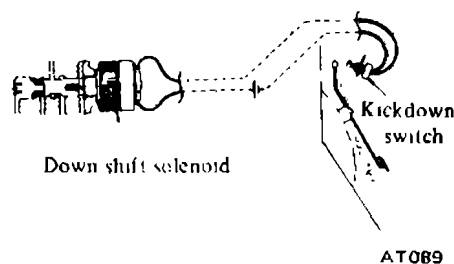


Fig. AT-6 Downshift solenoid

GOVERNOR VALVE

The primary and secondary governor valves are installed separately on the back of the oil distributor on the transmission output shaft. They operate at the same speed as that of the output shaft. (that is, they operate at a speed in proportion to the vehicle speed.) The line pressure is applied to those valves as the input from the control valve, through the transmission case, rear flange and oil distributor. The governor pressure (in proportion to the output shaft speed (vehicle speed)) is led to the shift valve of the control valve through the opposite route of the output. In this manner speed change and line pressure are controlled.

Operation of secondary governor valve

The secondary valve is a control valve which receives line pressure (1) and controls the governor pressure.

When the manual valve is selected at "D", "2" or "1" range, line pressure is applied to the ring shaped area of this valve from circuit (1), and this valve is depressed toward the center. Movement of this valve to a certain position closes the circuit from (1) to (15) while simultaneously making a space from (15) to the center drain port, and pressure in the circuit (15) is lowered.

When the vehicle is stopped and the centrifugal force of this valve is zero, the valve is balanced. At this point, a governor pressure which is balanced with the spring force occurs on (15).

When the vehicle is started and the centrifugal force increases, this valve moves slightly to the outside, and as

Automatic Transmission

the space from (1) to (15) increases, space from (15) to the drain port simultaneously decreases. As a result, governor pressure of (15) increases, and the governor pressure is balanced with the sum of centrifugal force and spring force. The governor pressure thus changes in response to the vehicle speed change (centrifugal force).

Operation of primary governor valve

The valve is an ON-OFF valve which closes the governor pressure (15) regulated by the secondary governor valve when the vehicle reaches the minimum speed, and when the vehicle speed exceeds a certain level, the governor opens and forwards the governor pressure (15) to the control valve.

When the vehicle is stopped, the governor pressure is zero. However, when the vehicle is running slowly, this valve is depressed to the center and the groove to (15) is closed since the governor pressure applied to the ring shaped area is higher than the centrifugal force of this valve. When the governor speed exceeds a certain revolution, the governor pressure in the circuit (15) also increases. However, as the centrifugal force increases and exceeds the governor pressure, this valve moves toward the outside, and the governor pressure is transmitted to the circuit (15).

Two different valves are employed in the governor so that it will independently control the speed at high and low speeds. That is, within the low speed range, the governor pressure is not generated because of the primary valve; whereas at the high speed range above the breaking point, governor pressure is regulated by the secondary valve.

* The breaking point is the point at which the function of one of the

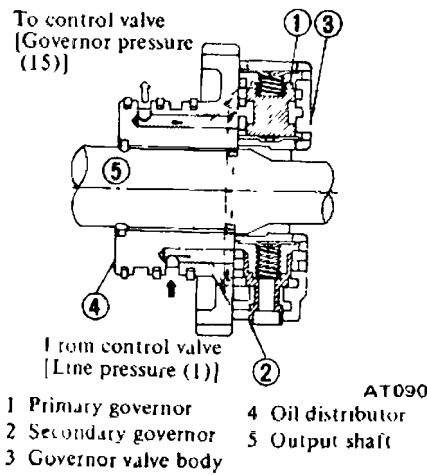


Fig. AT-7 Cross sectional view of governor


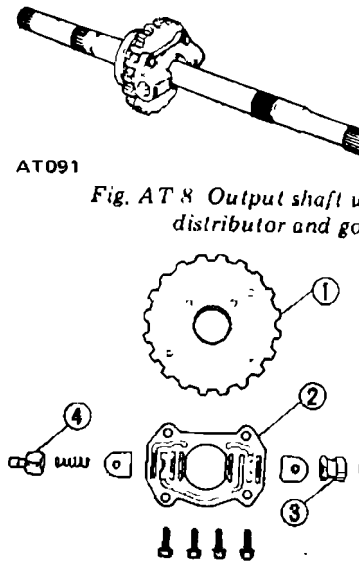


Fig. AT-9 Exploded view of governor

CONTROL VALVE ASSEMBLY

Flow chart of control valve system

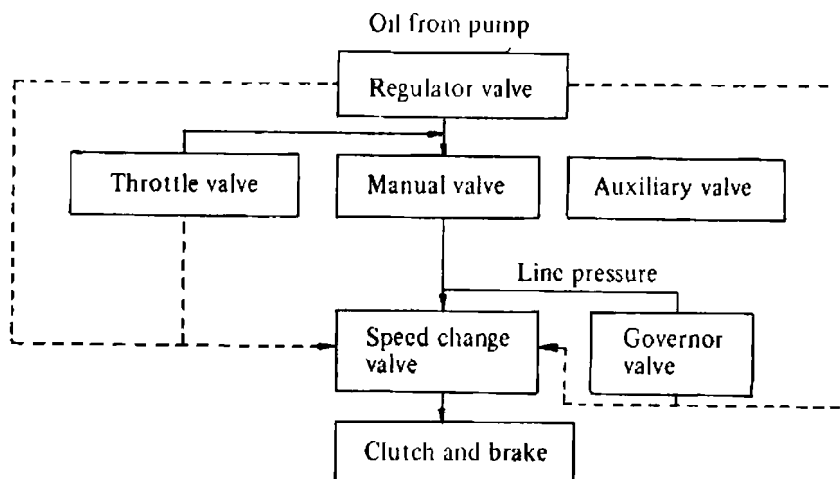

The control valve assembly receives oil from the pump and individual signals from the vacuum diaphragm, and transmits the individual line pressures to the transmission friction element, torque converter circuit, and lubricating system circuit as outputs. More specifically, the oil from the oil pump is regulated by the regulator

tion changeover valves (including OFF valve) and regulator valves newly reformed to a throttle system oil pressure and operate other valves. Finally, the line pressure is transmitted to the required clutch or brake piston unit in response to the individual running conditions after receiving signals from the vacuum diaphragm

The control valve assembly consists of the following valves (See Figure AT-20):

1. Pressure regulator valve (PRV)
2. Manual valve (MNV)
3. 1st-2nd shift valve (FSV)
4. 2nd-3rd shift valve (SSV)
5. Pressure modifier valve (PMV)
6. Vacuum throttle valve (VTV)
7. Throttle back-up valve (TBV)
8. Solenoid downshift valve (SDV)
9. Second lock valve (SLV)
10. 2nd-3rd timing valve (TMV)

Pressure regulator valve (PRV)

The pressure regulator valve receives valve spring force, force from the plug created by the throttle pressure (16) and line pressure (7), and force of the throttle pressure (18). With the interaction of those forces, the PRV regulates the line pressure (7) to that most suitable for individual driving conditions.

The oil from the oil pump is applied to the ring shaped area through orifice (20). As a result, the PRV is depressed downward, and moves from port (7) up to such extent that the space to the next drain port (marked with "X" in Figure AT-10) opens slightly. Thus, the line pressure (7) is balanced with the spring force, thereby balancing the PRV. In this operation, the space from port (7) to the subsequent converter oil pressure (14) circuit has also been opened. As a result, the converter is filled with pressurized oil in circuit (14), and this oil is further used for lubrication of the rear unit. Moreover, part of the oil is branched and used for lubrication of the front unit for the front and rear clutches.

When the accelerator pedal is depressed, the throttle pressure (16) increases as described in the preceding paragraph, oil pressure is applied to the plug through orifice (21), and this pressure is added to the spring force. As a result, the PRV is contrarily forced upward, space to the drain port is reduced, and the line pressure (7) increases.

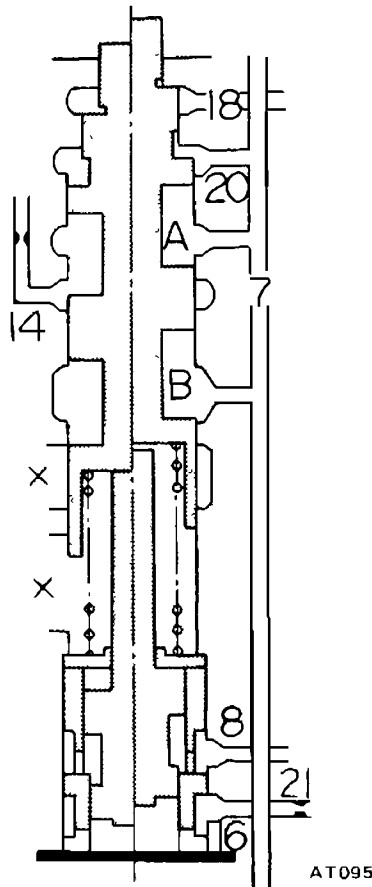


Fig AT 10 Pressure regulator valve

When the range is selected at "R" (Reverse), the line pressure (6) is applied to the plug in a manner identical to the throttle pressure (16) and is added to the spring force. Consequently, the line pressure (7) further increases.

When vehicle speed increases and the governor pressure rises, the throttle pressure (18) is applied to the port on the top of the PRV, and pressure is applied contrarily against the spring force. As a result, the line pressure (7) decreases. Moreover, at individual conditions, the line pressure (7) is equal to

the line pressure (6) and the throttle pressure (16) is equal to (18)

Manual valve (MNV)

The manual lever turning motion is converted to reciprocating motion of the manual valve through a pin, and the MNV is positioned so that the line pressure (7) is distributed to the individual line pressure circuits at each "P", "R", "N", "D", "2" or "1" range as shown below.

"P" range:

- (7) - { (4) - SDV and TBV
(5) - FSV (12) - TBV and Low & reverse brake

"R" range:

- (7) - { (4) - same as above
(5) - same as above
(6) - PRV and SSV - (F.C.) and band release

"N" range: (7) - None

"D" range:

- (7) - { (1) - Governor valve, FSV, and rear clutch
(2) - SLV
(3) - SLV and SSV


"2" range:

- (7) - { (1) - Same as above
(2) - SLV - (9) Band applied
(4) - SDV and TBV

"1" range:

- (7) - { (1) - Same as above
(4) - Same as above
(5) - FSV

Moreover, (1), (2), (3), (4), (5), and (6) are always drained at a position where the line pressure is not distributed from (7)

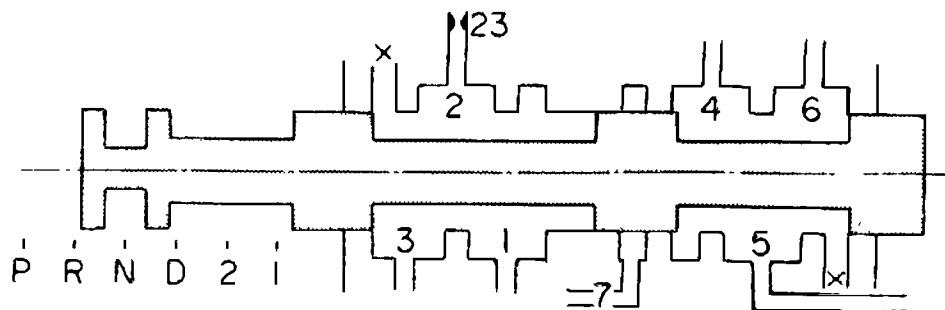

AT096

Fig. AT-11 Manual valve

Automatic Transmission

1st-2nd shift valve (FSV)

The FSV is a transfer valve which shifts gears from low to second. When the vehicle is stopped, the FSV is depressed to the right side by force of a spring located on the left side, putting the FSV in the "Low" position.

When vehicle speed increases, the governor pressure (15) is applied to the right side of the FSV, and the FSV is forced toward the left. Contrarily, the line pressure (1) together with the spring force, force the FSV toward the right opposing the governor pressure (15).

When the vehicle speed exceeds a certain level, the governor pressure (15) exceeds the sum of the throttle pressure and the spring force, and the FSV is forced toward the left.

When the FSV is depressed to a certain position, the line pressure (1) is closed, and only the spring depresses the FSV toward the right, and it is depressed to the end for a moment. As a result, the line pressure (1) is forwarded to (8), the band servo is engaged through the SLV, and the speed is shifted to "2nd". With the accelerator pedal depressed, the FSV remains in the "Low" position unless the governor pressure (15) increases to a high level corresponding to the line pressure (1) since the line pressure (1) increase when the accelerator pedal is depressed.

Contrarily, when vehicle speed decreases, the governor pressure (15) decreases. However, the gear is not shifted to "Low" unless the governor pressure (15) becomes zero, since the force depressing the FSV toward the right is being delivered only by the spring.

"Low" in range "1" is led to the low and reverse clutch from line pressure (5) through line pressure (12), and is simultaneously, led to the left end spring unit. Consequently, although the governor pressure increases, the valve is still forced toward the right, and the FSV is fixed in the "Low" position. When kicked down to

governor pressure (15) is considerably high, the valve is forced completely toward the right, and the FSV is returned to the "Low" position. (This operation is called "Kickdown shift").

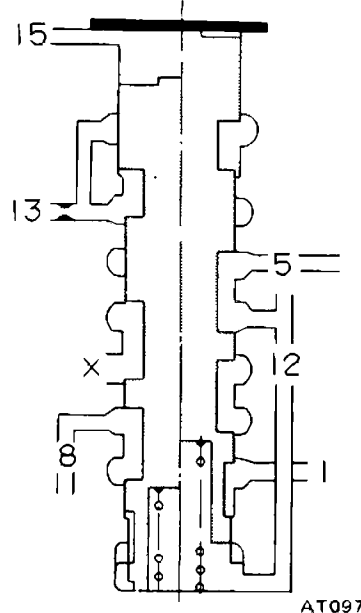


Fig. AT-12 "1st-2nd" shift valve

2nd-3rd shift valve (SSV)

The SSV is a transfer valve which shifts gears from "2nd" to "3rd". When the vehicle is stopped, the SSV is forced toward the right by the spring, and is in the "2nd" position. It is so designed, however, that the FSV can decide to shift either to "Low" or "2nd".

When the vehicle is running, the governor pressure (15) is applied to the right end surface, and the SSV is forced toward the left. Contrarily, the spring force, line pressure (3), and throttle pressure (19) force the SSV toward the right.

When vehicle speed exceeds a certain level, the governor pressure surpasses the sum of the spring force, line pressure, and throttle pressure, and the valve is forced toward the left. The line pressure (3) is then closed. Consequently, the forces being rapidly unbalanced, the force depressing the SSV toward the right decreases, and thus the SSV is depressed to the left end for a moment. With the SSV depressed toward the left, the line

speed is shifted to "3rd".

When the accelerator pedal is pressed, both the line pressure (3) and the throttle pressure (19) are high, and the SSV is thus retained in "3rd" unless the governor pressure (15) exceeds the line pressure (3) and the throttle pressure (19).

In the "3rd" position, force pressing the SSV toward the right is retained only by the throttle pressure (16), and the throttle pressure (16) is slightly lower than that toward the right which is applied while shifting from "2nd" to "3rd".

Consequently, the SSV is returned to the "2nd" position at a slightly lower speed. (Shifting from "3rd" to "2nd" occurs at a speed slightly lower than that for "2nd" to "3rd" shift). When kicked down at "3rd", the line pressure (13) is led from the SDV, and the SSV is forced toward the right. Although the governor pressure is considerably high, the valve is forced completely toward the right, and the SSV is thus returned to "2nd" position. (This operation is called "Kickdown shift").

When the shift lever is shifted to "2" or "1" range at the "3rd" speed, the line pressure (3) is drained at the MNV. Consequently, the front clutch and band servo releasing oils are drained. As a result, the transmission is shifted to "2nd" or "low" speed, although the SSV is in the "3rd" position.

When the speed is shifted to "3rd", a one-way orifice (24) on the top of the SSV relieves oil transmitting velocity from the line pressure (3) to the line pressure (10), and reduces the shock generated from the shifting. Contrarily, when the lever is shifted from "3rd" to "2" or "1" range, the speed is shifted to the "2nd", and the orifice checking valve spring (24) is depressed, the throttle becomes effective, the line pressure (10) is drained quickly, and delay in shifting speeds is thus eliminated.

The throttle of line pressure (10) transmits the oil transmitting velocity from line pressure (6) to line pressure

pressure (6) when shifting from "3rd" to "2nd" at "D" range. Thus, the throttle of line pressure (6) reduces the shock generated from shifting

A plug in the SSV left end readjust the throttle pressure (16) which varies depending on the engine throttle condition, to a throttle pressure (19) suited to the speed change control. Moreover, the plug is a valve which applies line pressure (13), in lieu of the throttle pressure, to the SSV and the FSV when kickdown is performed.


When the throttle pressure (16) is applied to the left side of this plug, and the plug is depressed toward the right, a slight space is formed from the throttle pressure (16) to (19). A throttle pressure (19) which is lower by the pressure loss equivalent to this space is

generated, the pressure loss is added to the spring force, and the plug is thus forced back from the right to the left. When this pressure (19) increases excessively, the plug is further depressed toward the left, space from the throttle pressure (19) to the drain circuit (13) increases, and the throttle pressure (19) decreases. Thus, the plug is balanced, and the throttle pressure (19) is reduced to a certain value against the throttle pressure (16).

When performing kickdown, the SDV moves, a high line pressure is led to the circuit (19) from the line pressure circuit (13) (which had been drained), the plug is forced toward the left, and circuit (19) becomes equal to the line pressure (13).


(16) to circuit (18). This throttle pressure (18) is applied to the top of the PRV, and the force of the line pressure source (7) is reduced. Contrarily, when the vehicle speed decreases and the governor pressure (15) decreases, the force toward the right exceeds the governor pressure, the valve is forced back toward the right, and the throttle pressure (18) is drained to the spring unit.

This valve is switched when the throttle pressure and the governor pressure are high or when they are both low.

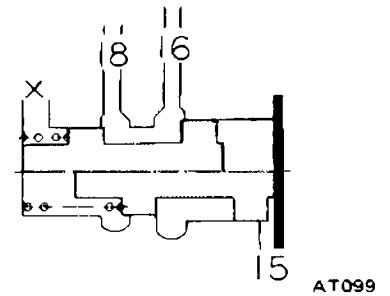

AT099

Fig. AT-14 Pressure modifier valve

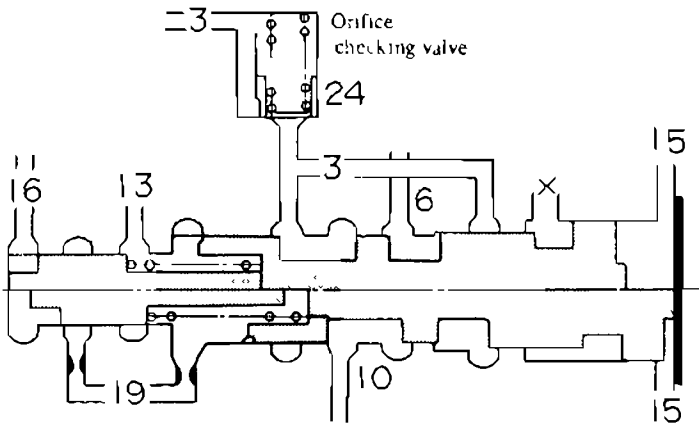

AT098

Fig. AT-13 "2nd-3rd" shift valve

Pressure modifier valve (PMV)

Compared to the operating pressure required in starting the vehicle, the power transmitting capacity of the clutch (that is, required operating pressure) may be lower when the vehicle is once started. When the line pressure is retained at a high level up to a high vehicle speed, shock generated from the shifting increases, and the oil pump loss also increases. In order to prevent this, the throttle pressure must be changed over with the operation of the governor pressure (15) to reduce the line pressure. The PMV is used for this purpose.

When the governor pressure (15) which is applied to the right side of the PMV is low, the valve is forced toward the right by the throttle pressure (16) (applied to the area difference of the valve) and the spring force, and the circuit from circuit (16) to circuit (18) is closed. However, when vehicle speed increases and the governor pressure (15) exceeds a certain level, the governor pressure toward the left (which is applied to the right side) exceeds the spring force and the throttle pressure (16) toward the right, the valve is depressed toward the left, and the throttle pressure is led from circuit

Vacuum throttle valve (VTV)

The vacuum throttle valve is a regulator valve which uses the line pressure (7) for the pressure source and regulates the throttle pressure (16) which is proportioned to the force of the vacuum diaphragm. [The vacuum diaphragm varies depending on the engine throttle condition (negative pressure in the intake line)].

When the line pressure (7) is applied to the bottom through the valve hole and the valve is forced upward, space from the line pressure (7) to the throttle pressure (16) is closed, and the space from the throttle pressure (16) to the drain circuit (17) is about to open. In this operation, the throttle pressure (16) becomes lower than the line pressure (7) by the pressure equivalent of the loss of space, and the force depressing the rod of the vacuum diaphragm is balanced with the throttle pressure (16) applied upward to the bottom.

When the engine torque is high, the negative pressure in the intake line rises (tending toward atmospheric pressure), and the force of the rod to depress the valve increases. As a result, the valve is depressed downward, the

Automatic Transmission

space from the throttle pressure (16) to the drain (17) decreases, and the space from the line pressure (7) to the throttle pressure (16) increases.

Consequently, the throttle pressure (16) increases, and the valve is balanced. Contrarily, when the engine torque lowers and the negative pressure in the intake line lowers (tending toward vacuum), the force of the rod depressing the valve decreases, and the throttle pressure (16) also decreases. When pressure regulated by the throttle back-up valve (described in the subsequent paragraph) is led to circuit (17), a high pressure is applied through the space from the circuit (17) to the throttle pressure (16). Consequently, the VTV is unbalanced, the throttle pressure (16) becomes equal to the back-up pressure (17), and the valve is locked upward.

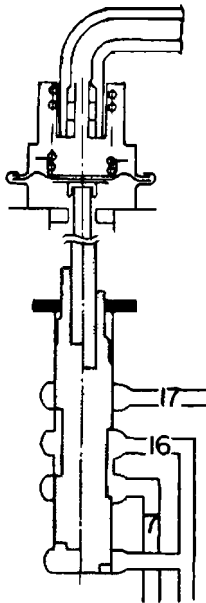


Fig. AT-15 Vacuum throttle valve

Throttle back-up valve (TBV)

Usually, this valve is depressed downward by the spring force, and circuit (17) is drained upward.

As soon as the lever is shifted either to "2" or "1" range, line pressure is led from circuit (4), the line pressure is applied to the area difference of the

(17) to the upper drain about to open, the back-up pressure (17) which is lower than the line pressure (4) by the pressure loss due to the space from circuit (4) to circuit (17) is balanced with the spring force.

Further, when gear is shifted from "2nd" to "Low" at the range "1", line pressure is led from circuit (12), and the line pressure is applied upward to the bottom of the valve through the valve hole. Consequently, the valve is forced upward, and locked. As a result, the space from the line pressure (4) to the back-up pressure (17) is closed completely, and the back-up pressure (17) is drained upward.

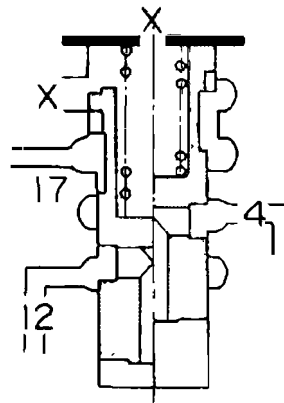


Fig. AT-16 Throttle back-up valve

Solenoid downshift valve (SDV)

This valve is a transfer valve which leads the line pressure (7) to (13) and transmits the same to the FSV and SSV when a kickdown signal is received from the downshift solenoid. Usually, the solenoid push rod and valve are locked upward by the spring in the lower end, and the circuit from line pressure (4) to line pressure (13) is opened.

When kickdown is performed, the push rod operates, the valve is depressed downward, and the circuit from line pressure (7) to line pressure (13) opens. Line pressure (13) opposes

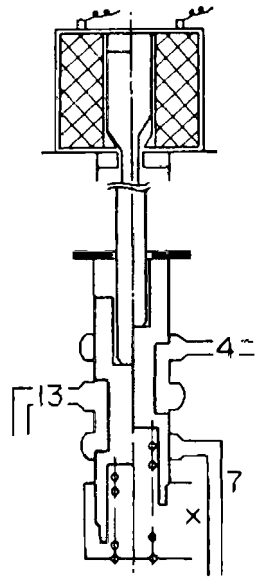


Fig. AT-17 Solenoid downshift valve

Second lock valve (SLV)


This valve is a transfer valve which assists the shift valve in determining the fixed "2nd" speed at the range.

In the "D" range, the sum of the spring force and line pressure applied upward exceeds the line pressure (2) which is applied to the valve area difference as a downward force. As a result, the valve is locked upward, and the circuit from line pressure (9) to line pressure (1) is opened.

Consequently, the FSV becomes the "2nd" speed condition, and line pressure is led to the band servo engaging circuit (9) only when line pressure (1) is released to line pressure (8).

In the "2" range, the upward force is retained only on the spring, and the downward line pressure (2) exceeds the upward force.

As a result, the valve is locked downward, line pressure (2) is released to (9) regardless of the operating condition of the FSV, and the band servo is engaged.

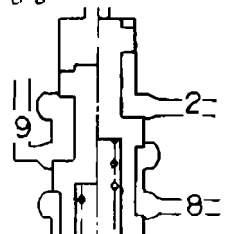

2nd-3rd timing valve (TMV)

This valve is a transfer valve which switches the by-pass circuit of the orifice (22) in the front clutch pressure circuit (11) in response to vehicle speed and throttle condition. A force created when the governor pressure (15) is applied to the bottom of the TMV constitutes the upward force, and a force created when the spring force and the throttle pressure are applied to the top of the TMV constitutes the downward force.

When the throttle pressure (16) is lower than the governor pressure (15),

the upward force exceeds the downward force, the valve is locked upward, and passage from circuit (10) ("2nd" from the "Top") to circuit (11) is closed. Consequently, the line pressure (10) is led to the front clutch circuit (11) through the orifice (22), and the oil pressure is thus transmitted slowly. However, under normal shifting, the throttle pressure (16) has a pressure exceeding a certain level, and the downward force exceeds the upward force. As a result, the valve is locked downward, the passage from circuit (10) to circuit (11) is opened, and the orifice (22) is bypassed.


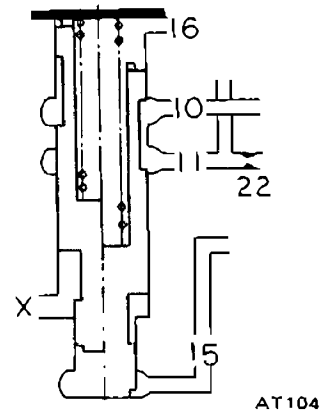


Fig. AT-19 "2nd-3rd" timing valve

Automatic Transmission

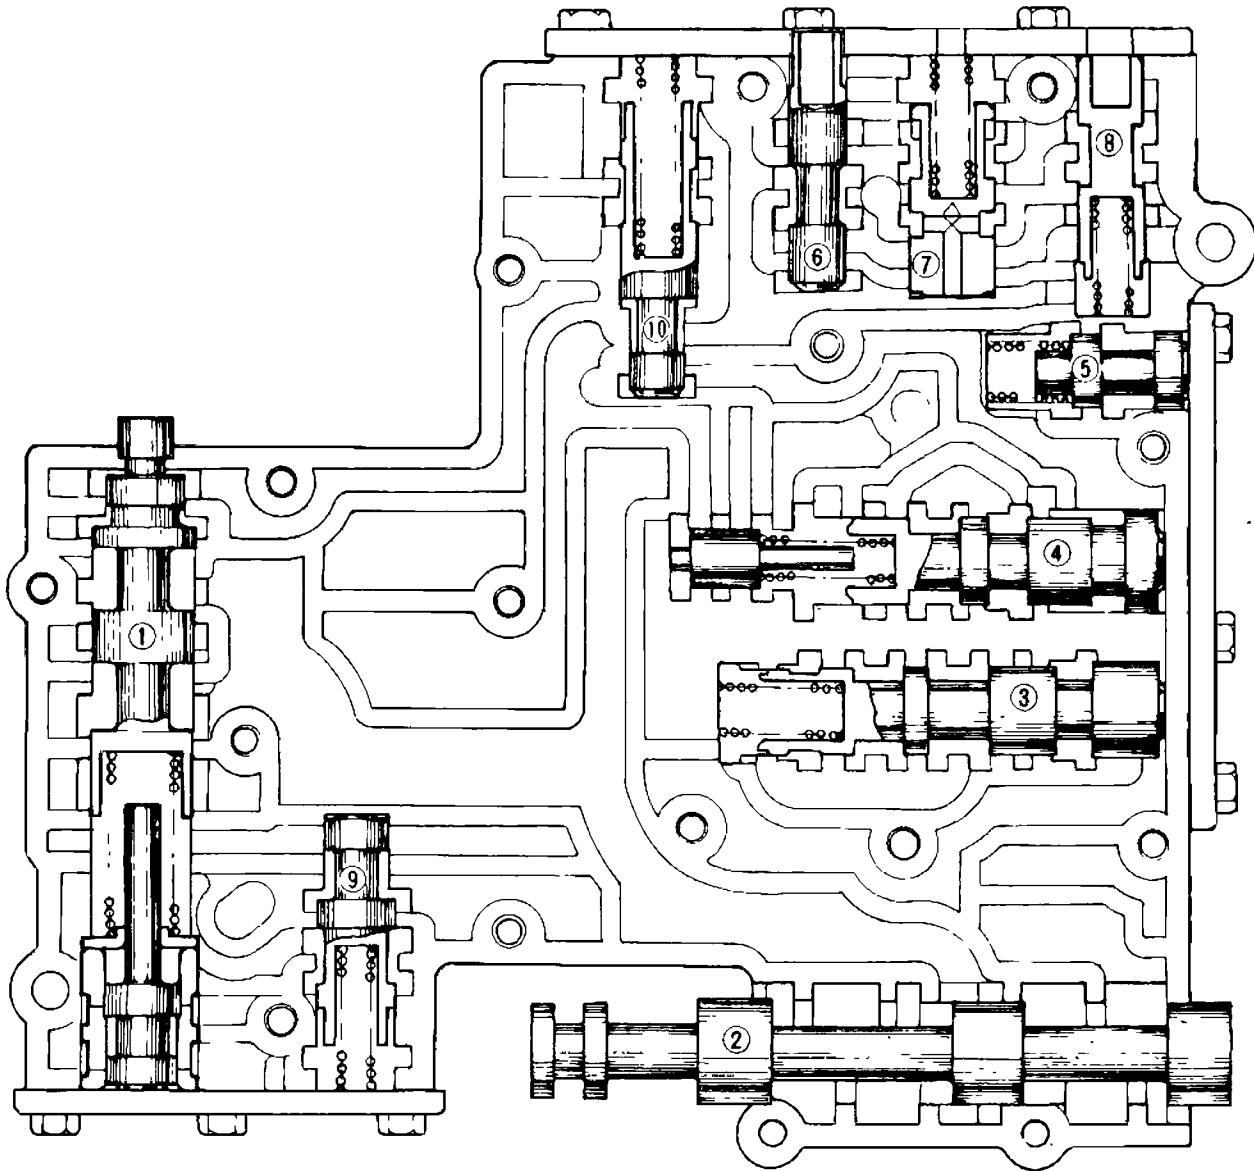

- 1 Pressure regulating valve (PRV)
- 2 Manual valve (MNV)
- 3 1st-2nd shift valve (FSV)
- 4 2nd-3rd shift valve (SSV)
- 5 Pressure modifier valve (PMV)

- 6 Vacuum throttle valve (VTV)
- 7 Throttle back-up valve (TBV)
- 8 Solenoid down shift valve (SDV)
- 9 Second lock valve (SLV)
- 10 2-3 timing valve (TMV)

Fig AT-20 Control

HYDRAULIC SYSTEM AND MECHANICAL OPERATION

The operating system of oil pressure in each range is described below

The oil pressure in each circuit shown in the illustration is classified as follows according to the function.
(The numerals show the circuit numbers)

Pressure source of the line 7


Operating line pressure
for friction elements:

1, 2, 3, 4, 5, 6, 8, 9, 10, 11, 12

Auxiliary line pressure 13


Throttle system pressure
16, 17, 18, 19

Others: 14, 15

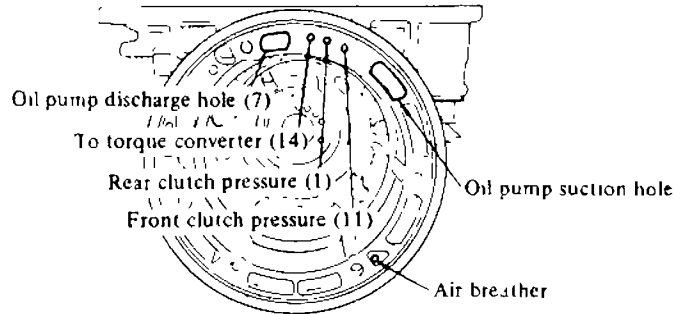


AT106

Fig. AT 22 Identification of oil channels in case front face

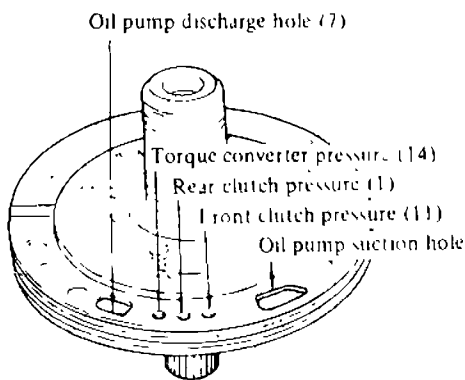

AT105

Fig. AT 21 Identification of oil channels in oil pump

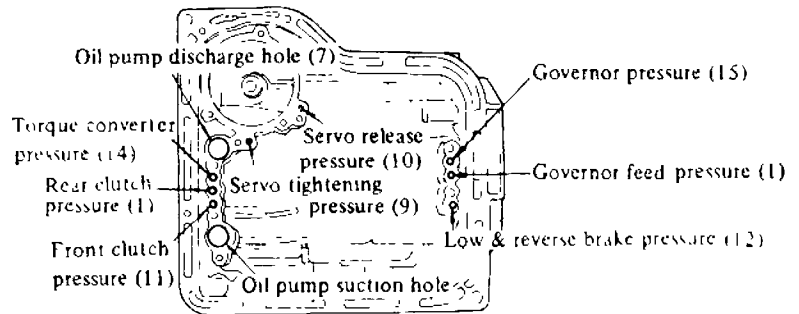

AT107


Fig. AT-23 Identification of oil channels in case face

Automatic Transmission

"P" RANGE (PARK)

The operation of clutches and band are functionally the same as in "Neutral".

In parking, however, when the parking pawl meshes in a gear which is splined to the output shaft, the output shaft is mechanically locked from rotating.

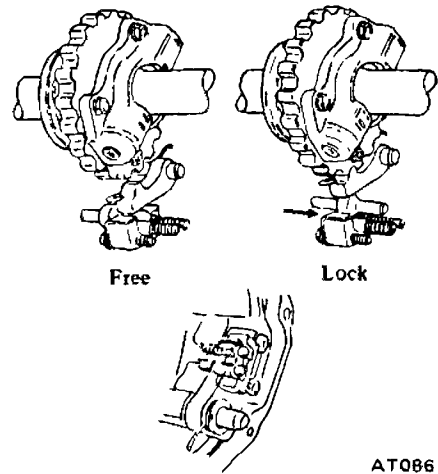

AT086

Fig. AT-24 Parking mechanism

The oil discharged from the oil pump is fed to each part in a similar manner to that of the "N" range. The oil having the line pressure (7) which has been introduced into the manual valve (2) reaches the "1st-2nd" shift valve (3) through the line pressure circuit (5). As the "1st-2nd" shift valve is forced to the right-hand side by the spring, the line pressure (5) and (12) actuates the low and reverse brake through the groove. Also, the parking pawl engages with the outer teeth of the oil distributor by means of the manual lever, mechanically locking the output shaft.

Range		Gear ratio	Clutch		Low & reverse brake	band servo		One way clutch	P
			Front	Rear		Operation	Release		
Park					on				
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2 Second		1.458		on		on			
1	12 Second	1.458		on		on			
	11 Low	2.458		on	on				

"P" range (Park)


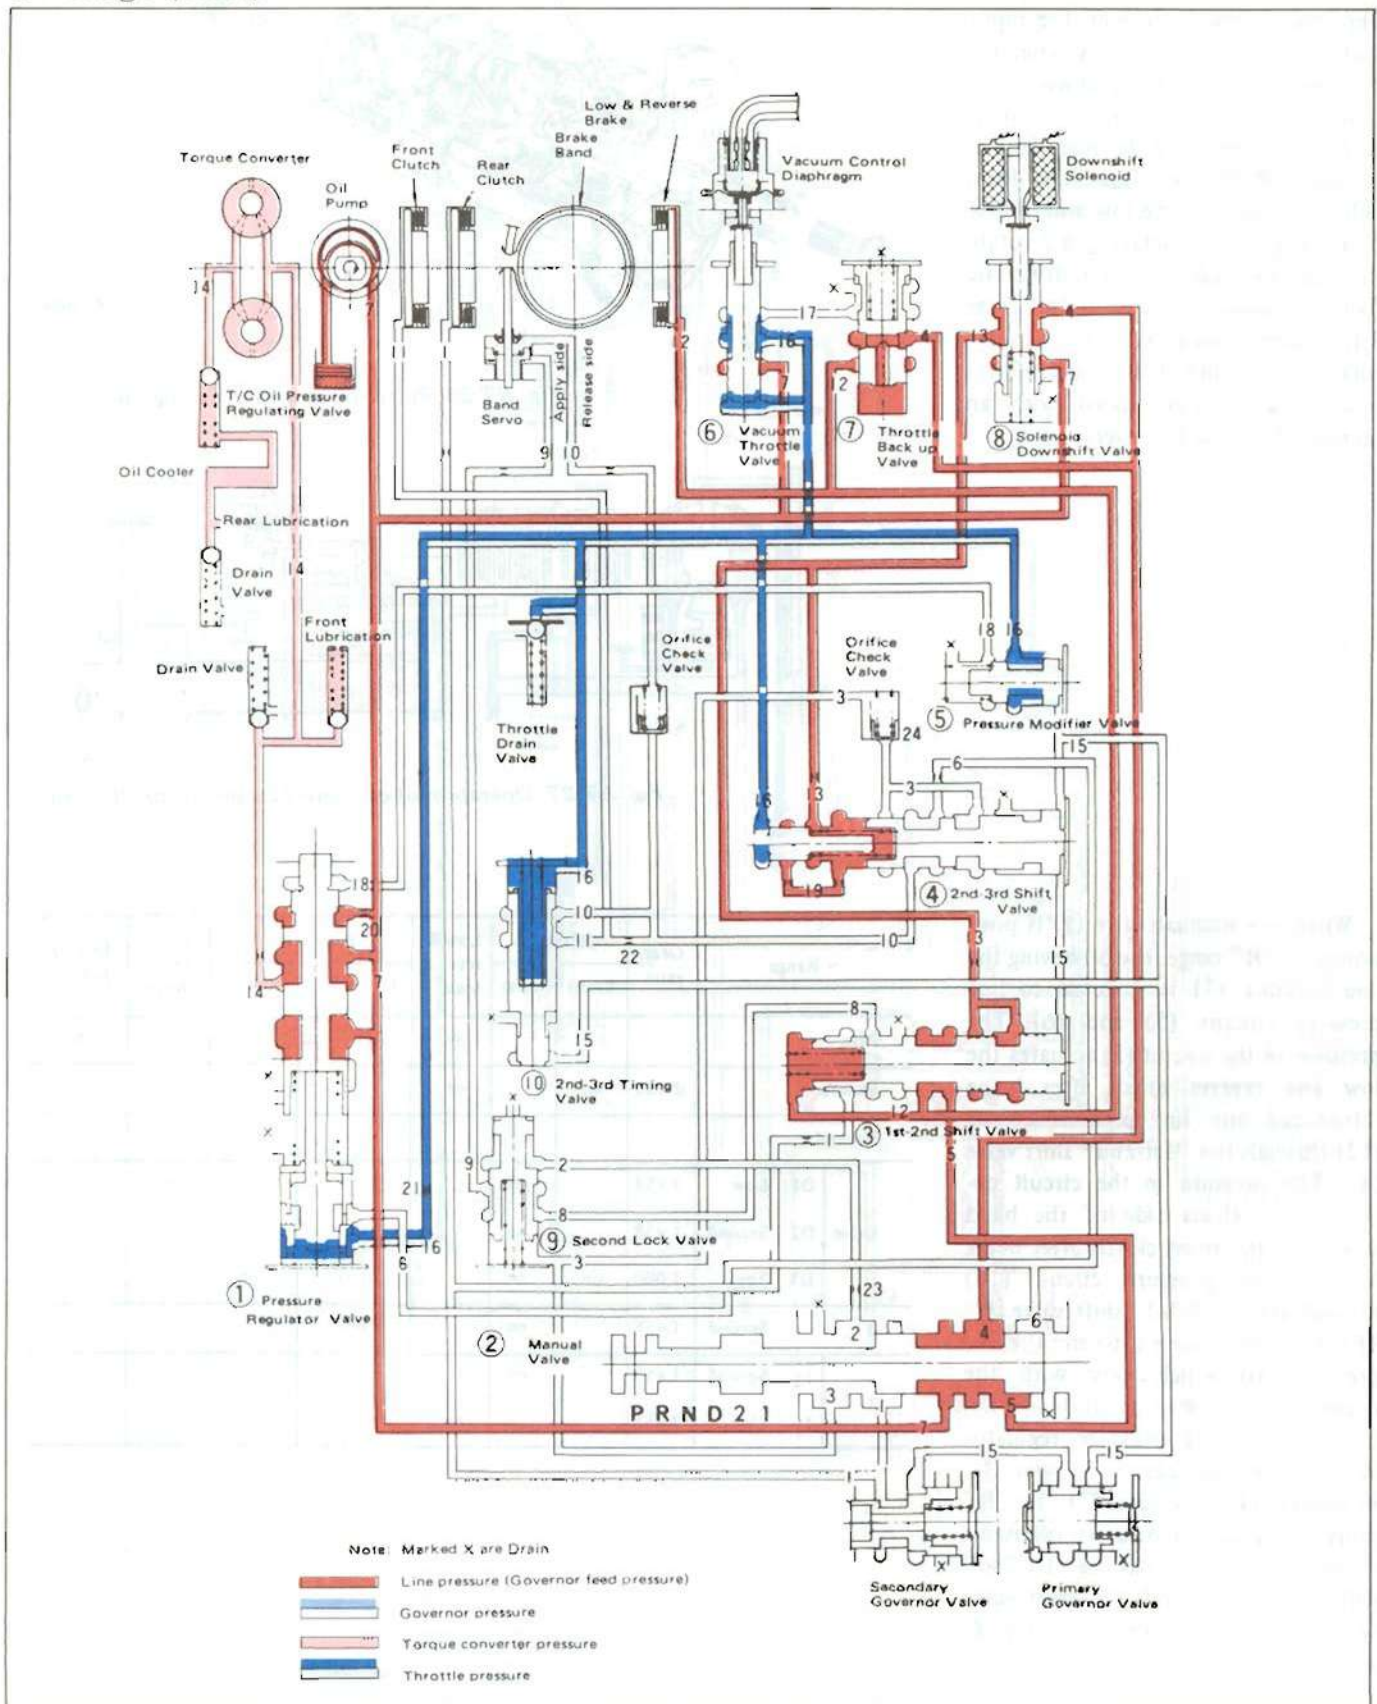


Fig. AT-25 Oil pressure circuit diagram — "P" range (Park)


"R" RANGE (REVERSE)

In "R" range, the front clutch and the low and reverse brake are applied. The power flow is through the input shaft, front clutch, and connecting shell to the sun gear. Clockwise rotation of the sun gear causes counterclockwise rotation of the rear planetary gears. With the connecting drum held stationary by the low and reverse brake, the rear planetary gears rotate the rear internal gear and drive the flange counterclockwise. The rear drive flange splined to the output shaft rotates the output shaft counterclockwise at a reduced speed with an increase in torque for reverse gear.

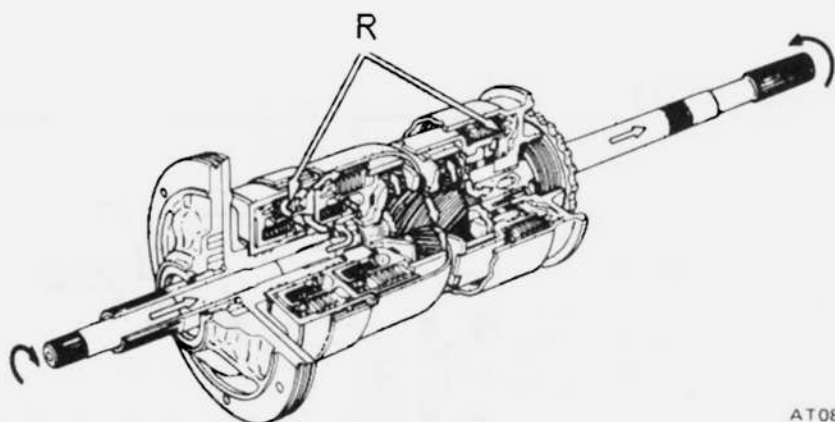

AT084

Fig. AT-26 Power transmission during "R" range

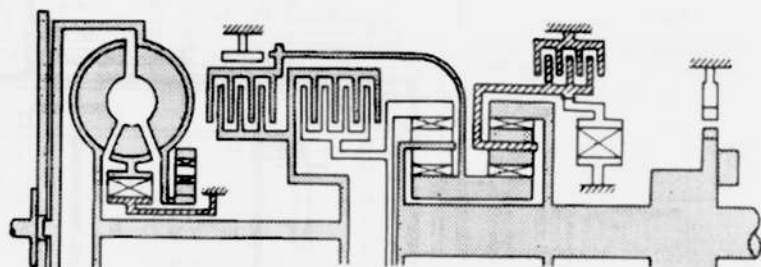

AT085

Fig. AT-27 Operation of each mechanism during "R" range

When the manual valve ② is positioned at "R" range, the oil having the line pressure (7) is directed to line pressure circuits (5) and (6). The pressure in the circuit (5) actuates the low and reverse brake after being introduced into line pressure circuit (12) through the "1st-2nd" shift valve ③. The pressure in the circuit operates the release side of the band servo and the front clutch after being led to line pressure circuit (10) through the "2nd-3rd" shift valve ④. The throttle pressure (16) and the line pressure (6) which vary with the degree of accelerator pedal depression both act on the pressure regulator valve ① and press against its valve ①, increasing line pressure (7). In "R" range, the governor pressure is absent, making all such valves as the "1st-2nd" shift valve ③, "2nd-3rd" shift valve ④, and pressure modifier valve ⑥ inoperative.

Range	Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
		Front	Rear		Operation	Release		
Park				on				on
Reverse	2.182	on		on		on		
Neutral								
Drive	D1 Low		on				on	
	D2 Second		on		on			
	D3 Top	on	on		(on)	on		
2	Second		on		on			
1	12 Second		on		on			
	11 Low		on	on				

"R" range (Reverse)

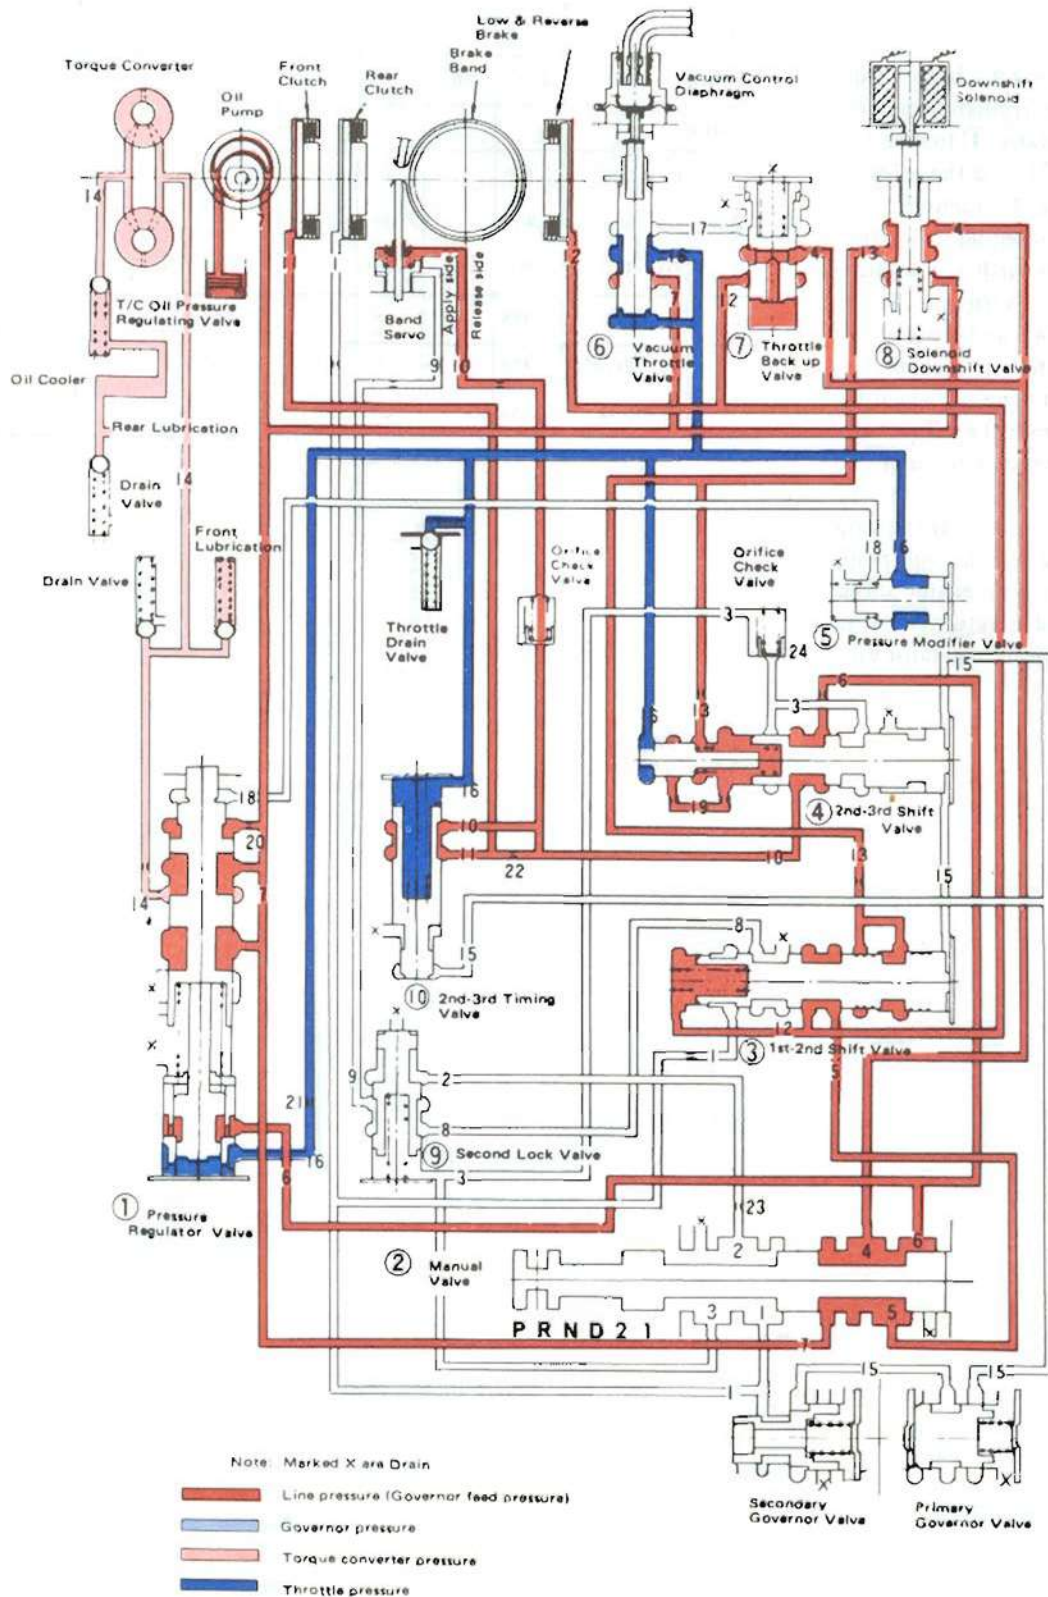


Fig. AT-28 Oil pressure circuit diagram — "R" range (Reverse)

"N" RANGE (NEUTRAL)

In "N" range none of the clutches and band are applied, thus no power is transmitted to the output shaft

The pressure of oil discharged from the oil pump is regulated by the pressure regulator valve (1) to maintain the line pressure (7), and the oil is led to the manual valve (2), vacuum throttle valve (6), and solenoid down shift valve (8). The oil is further introduced into the torque converter at its operating pressure (14), and a portion of this oil is distributed to each part as the front lubricant. The oil which has been discharged from the torque converter is also distributed to each part as the rear lubricant.

As the oil pump rotates at the same speed as the engine, the oil pump discharge increases with engine speed. But the surplus oil is returned to the oil pan by the pressure regulator valve

(1)

Range		Gear ratio	Clutch		Low & reverse brake	Band serve		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2 Second		1.458		on		on			
1	12 Second	1.458		on		on			
	11 Low	2.458		on	on				

"N" range (Neutral)

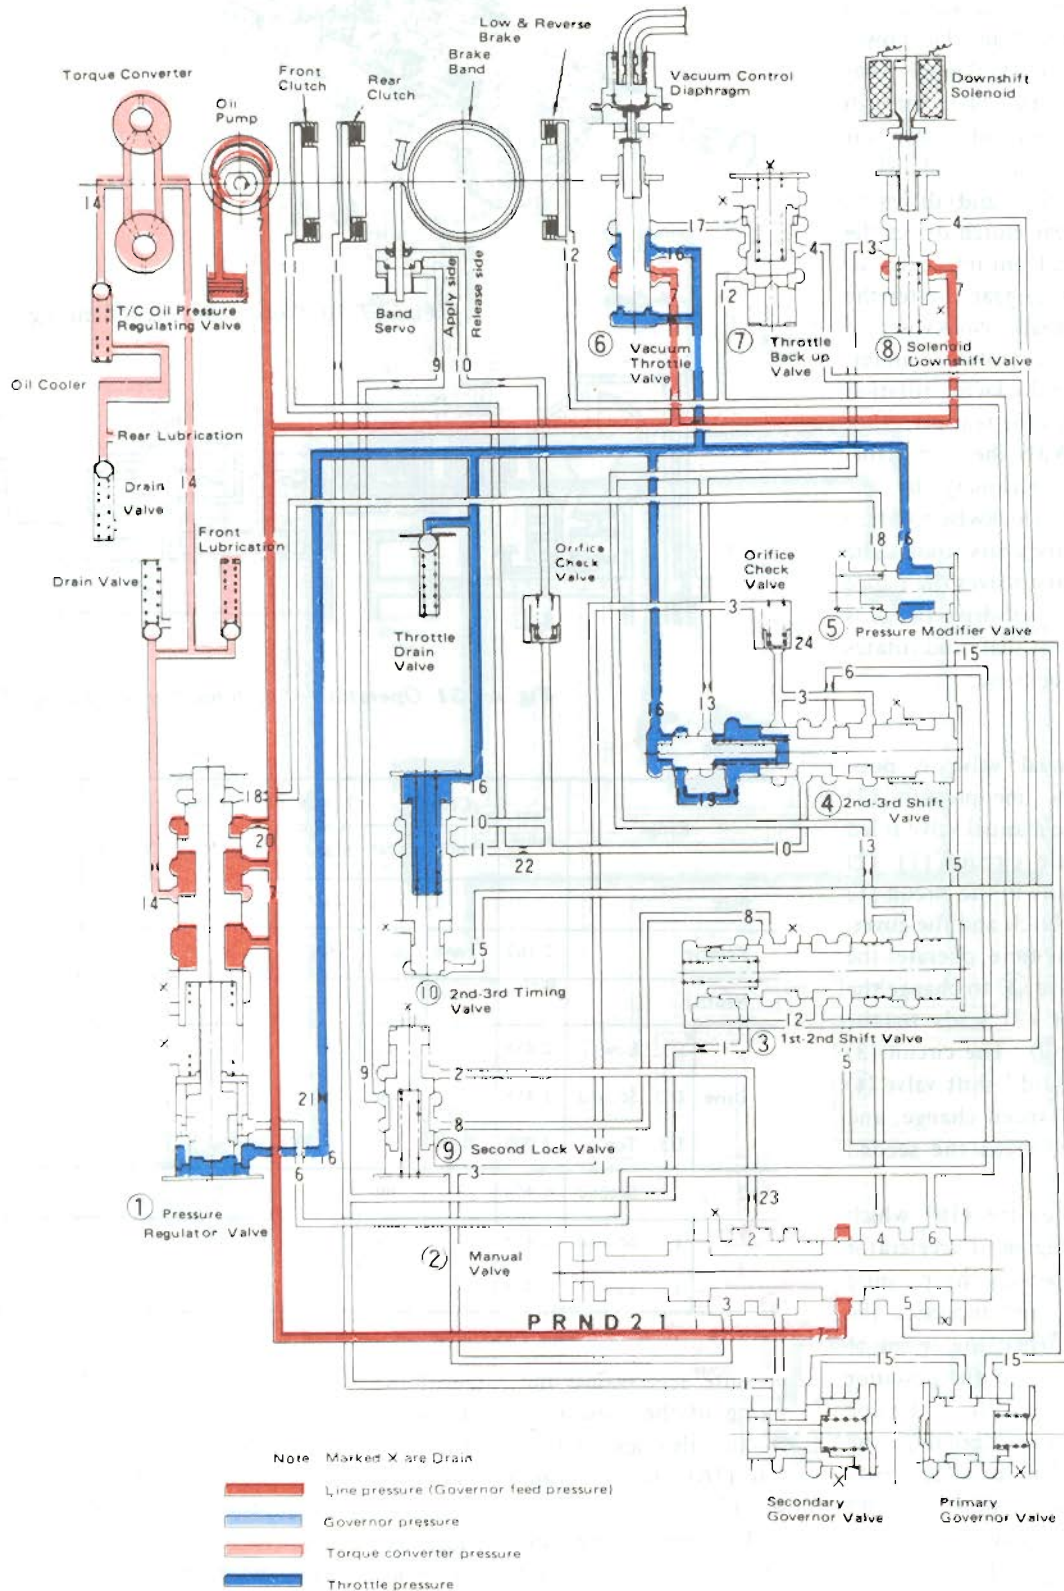


Fig. AT-29 Oil pressure circuit diagram — "N" range (Neutral)

"D," RANGE (LOW GEAR)


The low gear in "D" range is somewhat different from that in "1₁" range.

The rear clutch is applied as in "1₁" range, but the one-way clutch holds the connecting drum. The power flow is the same as in "1₁" range. That is, the power flow takes place through the input shaft and into the rear clutch. The input shaft is splined to the rear clutch drum and drives it. Rotation of the rear clutch drives the rear clutch hub and front internal gear.


The front internal gear rotates the front planetary gears clockwise to cause the sun gear to rotate counterclockwise. Counterclockwise rotation of the sun gear turns the rear planetary gears clockwise. With the rear planetary carrier held stationary by the one-way clutch, the clockwise rotation of the rear planetary gears rotates the rear internal gear and drives the flange clockwise. The internal drive flange is splined to the output shaft and rotates the output shaft clockwise.

When the manual valve is positioned at "D", the line pressure (7) introduced into the manual valve is led to the line pressure circuits (1), (2) and (3). The pressure in the circuit (1) actuates the rear clutch and the governor, and at the same time, operates the "1st-2nd" shift valve (3) to change the speed. The circuit (2) leads to the second lock valve (9). The circuit (3) actuates the "2nd-3rd" shift valve (4) for the "2nd-3rd" speed change, and at the same time, locks the second lock valve (9).

The throttle pressure (16) which changes with the degree of accelerator pedal depression, presses the pressure regulator valve (1) and increases the line pressure (7). When the speed of the vehicle has increased, the governor pressure (15) introduced from the line pressure circuit (1) actuates the "1st-2nd" shift valve (3), "2nd-3rd" shift valve (4) and pressure modifier valve (5). When the governor pressure is high, the pressure modifier valve (5) acts in such a direction as to compress the spring, and the throttle pressure is led to the throttle pressure (18). This

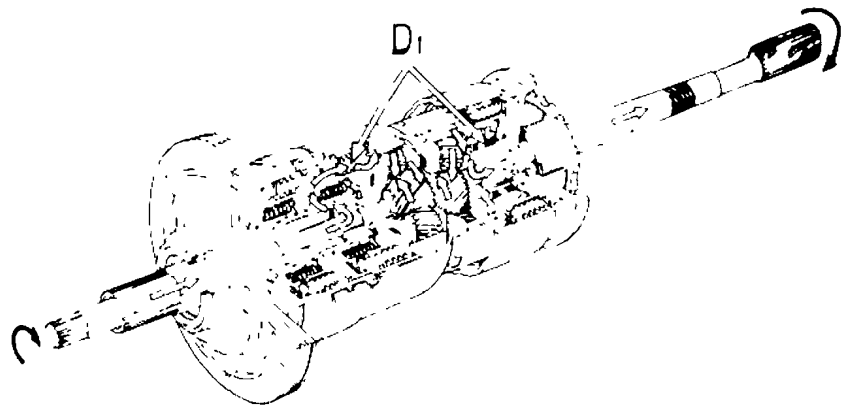

AT080

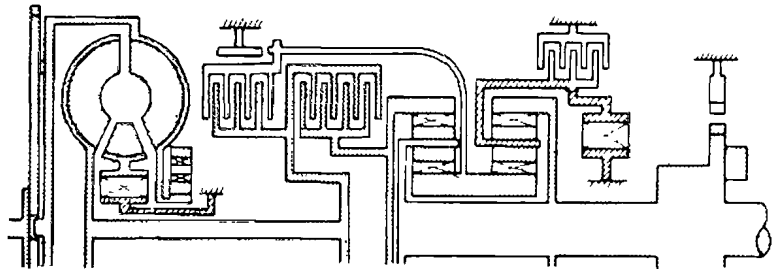Fig AT 30 Power transmission during "D₁" range

AT081

Fig AT 31 Operation of each mechanism during "D₁" range

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		on	on		
2		Second		on		on			
1	1 ₂ Second	1.458		on		on			
	1 ₁ Low	2.458		on	on				

pressure acts against the force of the spring of the pressure regulator valve (1) and also against the throttle pressure (16), thus lowering the line pressure (7).

The governor pressure also increases with the speed of the vehicle, exerting a pressure on one side of the "1st-2nd" shift valve, and counter acts the throttle pressure (19), line pressure

(1), and the spring which are exerting against the governor pressure. Therefore, when the governor pressure exceeds this pressure, the speed is shifted from the "1st" gear to the "2nd" gear. The further the accelerator pedal is depressed, the higher becomes the throttle pressure (19), increasing the governor pressure and shifting the speed change point to the higher side.

"D₁" range (Low gear)


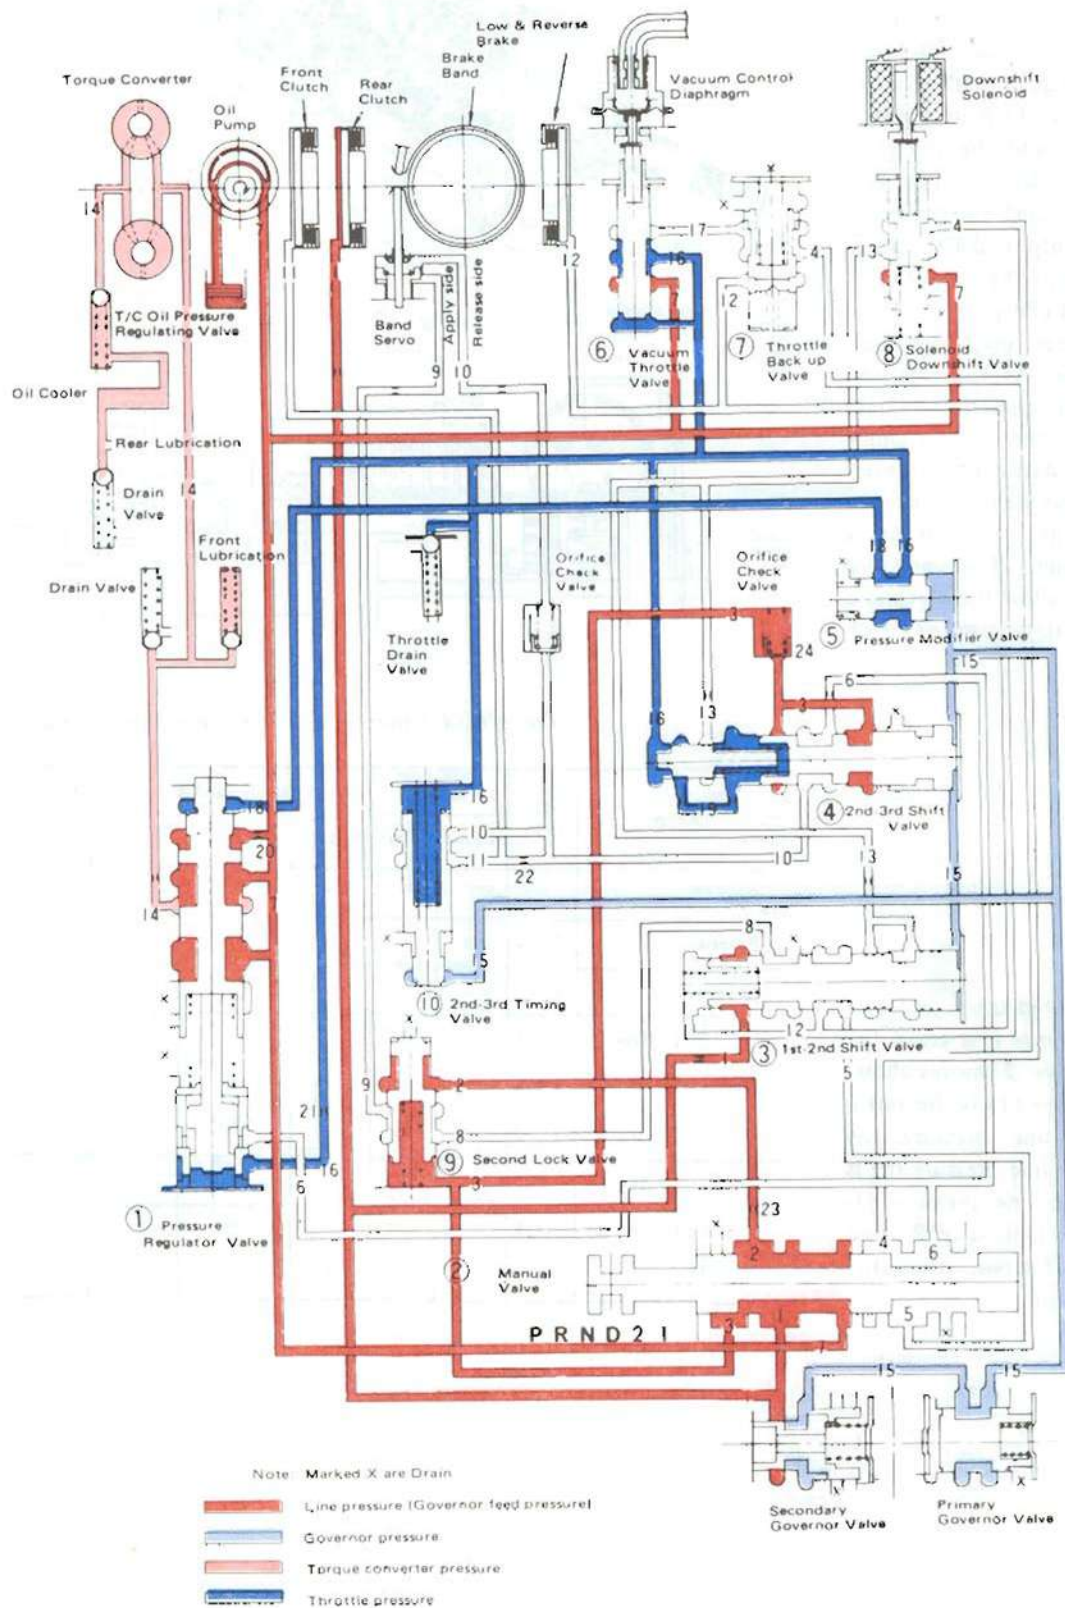


Fig. AT-32 Oil pressure circuit diagram — "D₁" range (Low gear)


"D₂" RANGE (2ND GEAR)

In this case, the rear clutch is applied and the band brake holds the front clutch drum, the connecting shell and the sun gear from rotating.

The power flow takes place through the input shaft into the rear clutch and the front internal gear. With the sun gear held stationary, the front planetary gears rotate around the sun gear, carrying the front planet carrier with them. The front planet carrier, being splined to the output shaft, causes clockwise rotation of the output shaft at a reduced speed compared with the speed of the input shaft, with an increase in torque. As the low and reverse brake is not applied, the clockwise rotation of the output shaft causes clockwise rotation of rear internal gear and the rear planet carrier also rotates around the sun gear in a clockwise direction. The one-way clutch will act to allow the clockwise rotation of connecting drum.

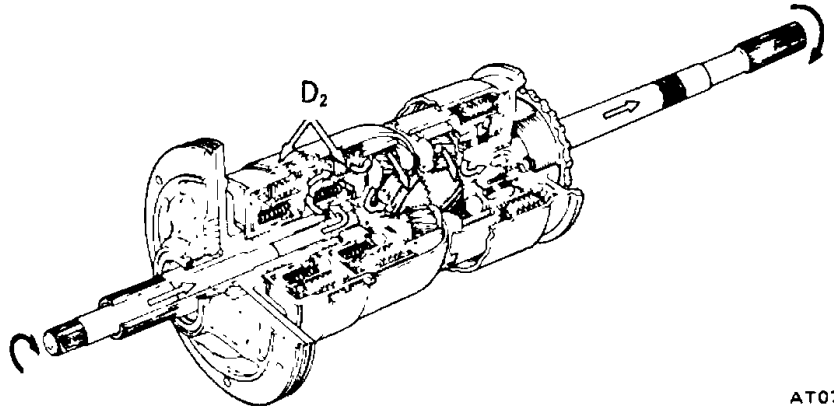

AT078

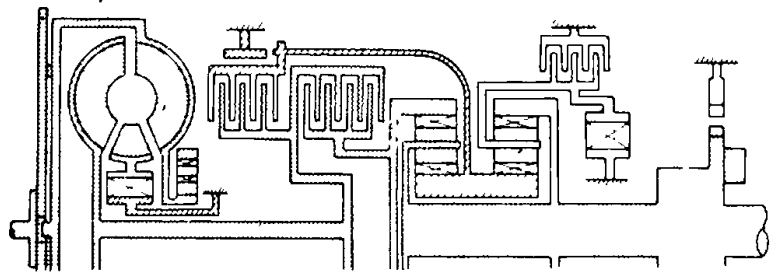Fig AT 33 Power transmission during "D₂" range

AT079

Fig AT-34 Operation of each mechanism during "D₂" range

When the car speed increases while running at "D₁" range (1st gear), the "1st-2nd" shift valve **3** moves allowing the line pressure (1) to be introduced into the line pressure (8) through itself. The line pressure (8) is further led to the line pressure (9) through the second lock valve **9**, and by locking the band servo, obtains the "2nd" gear condition.

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2		Second		on		on			
1	1 ₂ Second	1.458		on		on			
	1 ₁ Low	2.458		on	on				

"D₂" range (2nd gear)


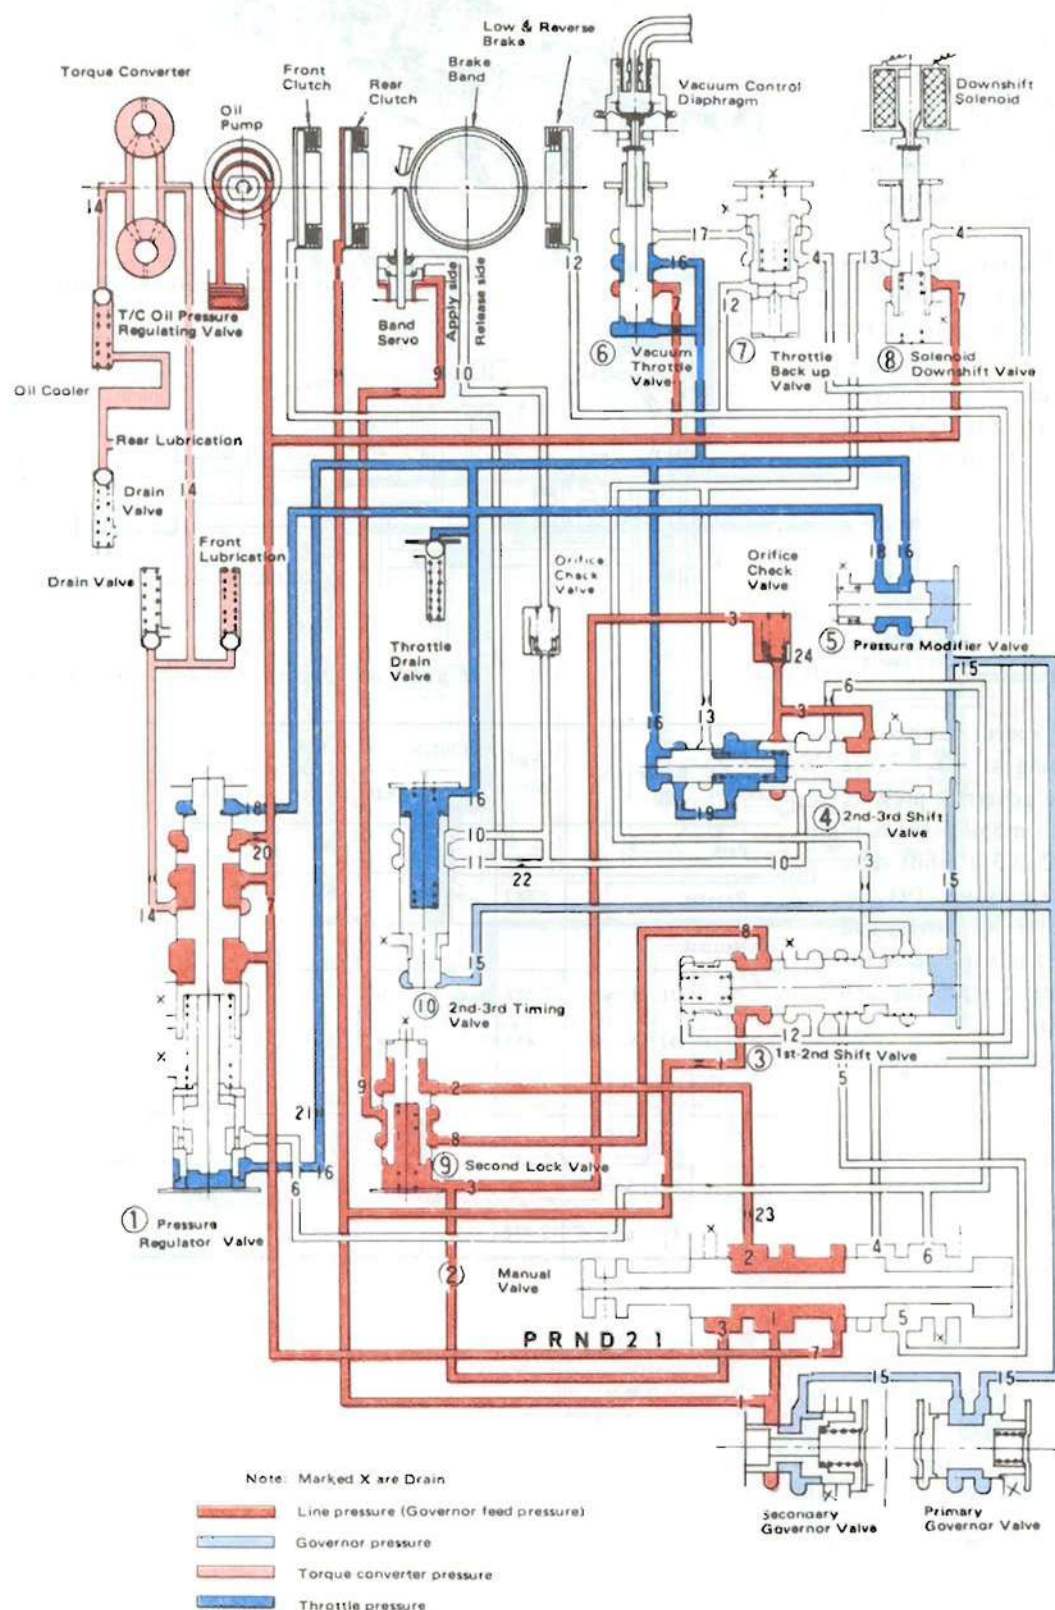


Fig. AT-35 Oil pressure circuit diagram — "D₂" range (2nd gear)


"D₃" RANGE (TOP GEAR)

In 3rd gear position, the front and rear clutches are engaged. The power flow takes place through the input shaft into rear clutch drum. The rear clutch drum rotates the steel drive plates of the rear clutch and the lined drive plates of the rear clutch and the lined drive plates of the front clutch. The rear clutch directs the power flow through the rear clutch hub and front internal gear to the front planet carrier.

The front clutch directs the power flow through the connecting shell to the sun gear. With the sun gear and the rear clutch hub driven at the same speed, the front planet assembly is forced to rotate the output shaft at the same speed in the direction to provide the top gear.

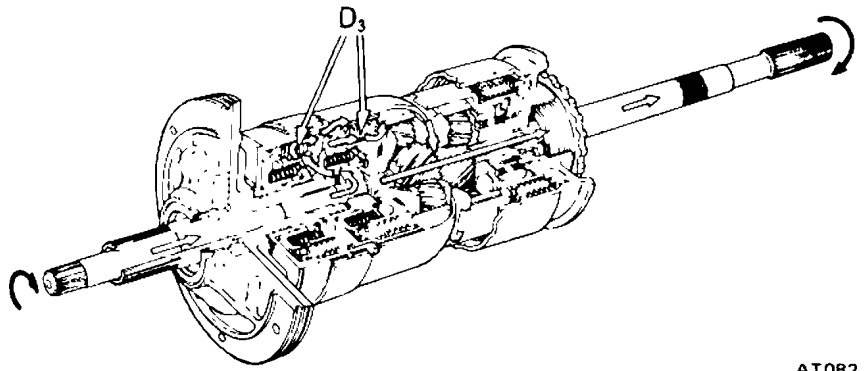

AT082

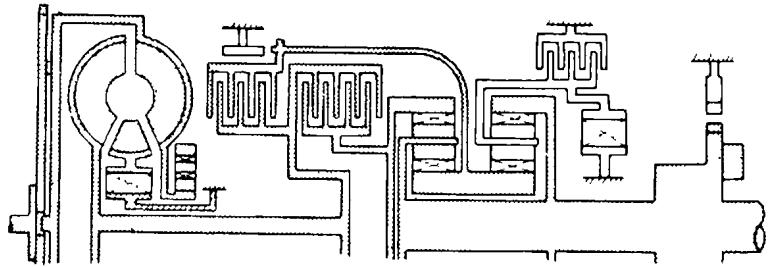Fig AT-36 Power transmission during "D₃" range

AT083

Fig AT-37 Operation of each mechanism "D₃" range

When the car speed further increases while running at "D₂" range (2nd gear) and the governor pressure (15) exceeds the combined force of the spring of the "2nd-3rd" shift valve (4) and the throttle pressure (19), the "2nd-3rd" shift valve (4) moves, and the line pressure (8) acts to release the front clutch and band servo through the line pressure (10).

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2	Second	1.458		on		on			
1	1 ₂ Second	1.458		on		on			
	1 ₁ Low	2.458		on	on				

"D₃" range (Top gear)

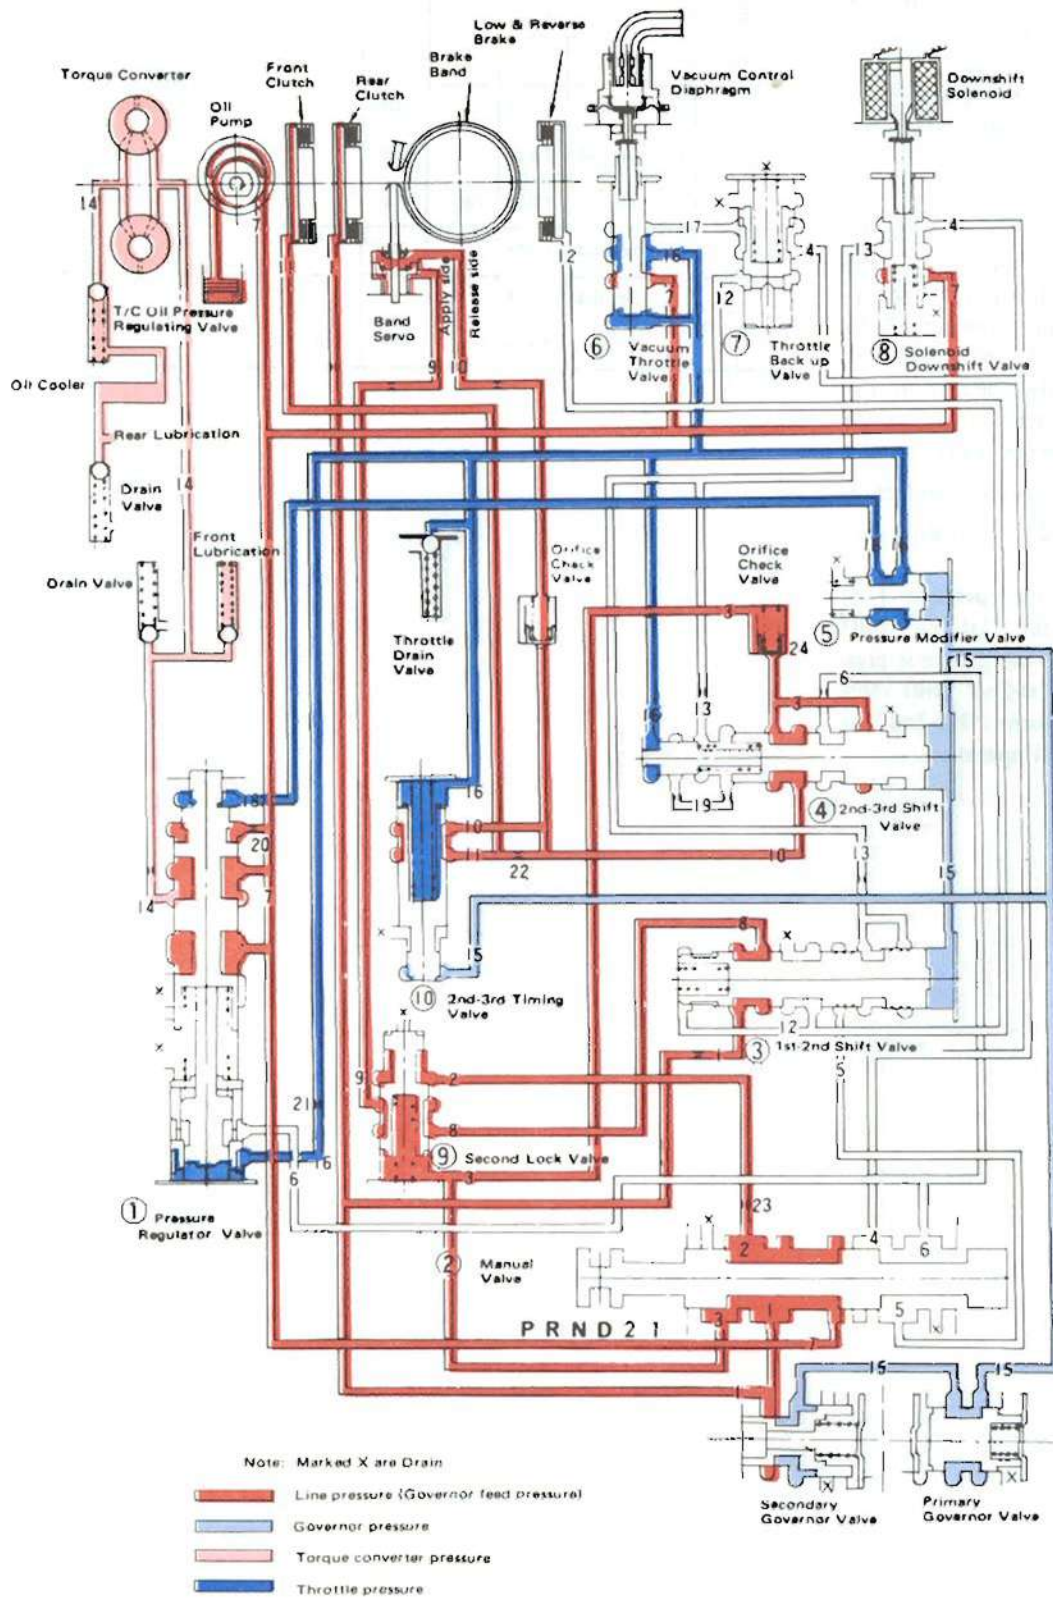


Fig. AT-38 Oil pressure circuit diagram — "D₃" range (Top gear)

Automatic Transmission

"D" RANGE KICKDOWN

While operating at speeds below approximately 90 to 100 km/h (56 to 63 MPH), a kick "3rd-2nd" downshift can be accomplished by fully depressing the accelerator.

A kick "3rd-1st" or "2nd-1st" downshift can also be accomplished below approximately 40 to 50 km/h (25 to 31 MPH).

When kickdown is performed, the push rod operates by the solenoid, the valve is depressed downward, and the circuit from the line pressure (7) to the line pressure (13) opens. The line pressure (13), (3) plus the force of the "2nd-3rd" shift valve spring oppose the governor pressure (15) at the "2nd-3rd" shift valve ④, and thus, performs "3rd-2nd" downshift operation.

Moreover, the line pressure (13) plus the force of the "1st-2nd" shift valve spring oppose the governor pressure (15) at the "1st-2nd" shift valve ③, and thus, perform "3rd-2nd" or "2nd-1st" downshift operation.

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One-way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2 Second		1.458		on		on			
1	12 Second	1.458		on		on			
	11 Low	2.458		on	on				

"D" range kickdown (shift valves in 2nd gear position)


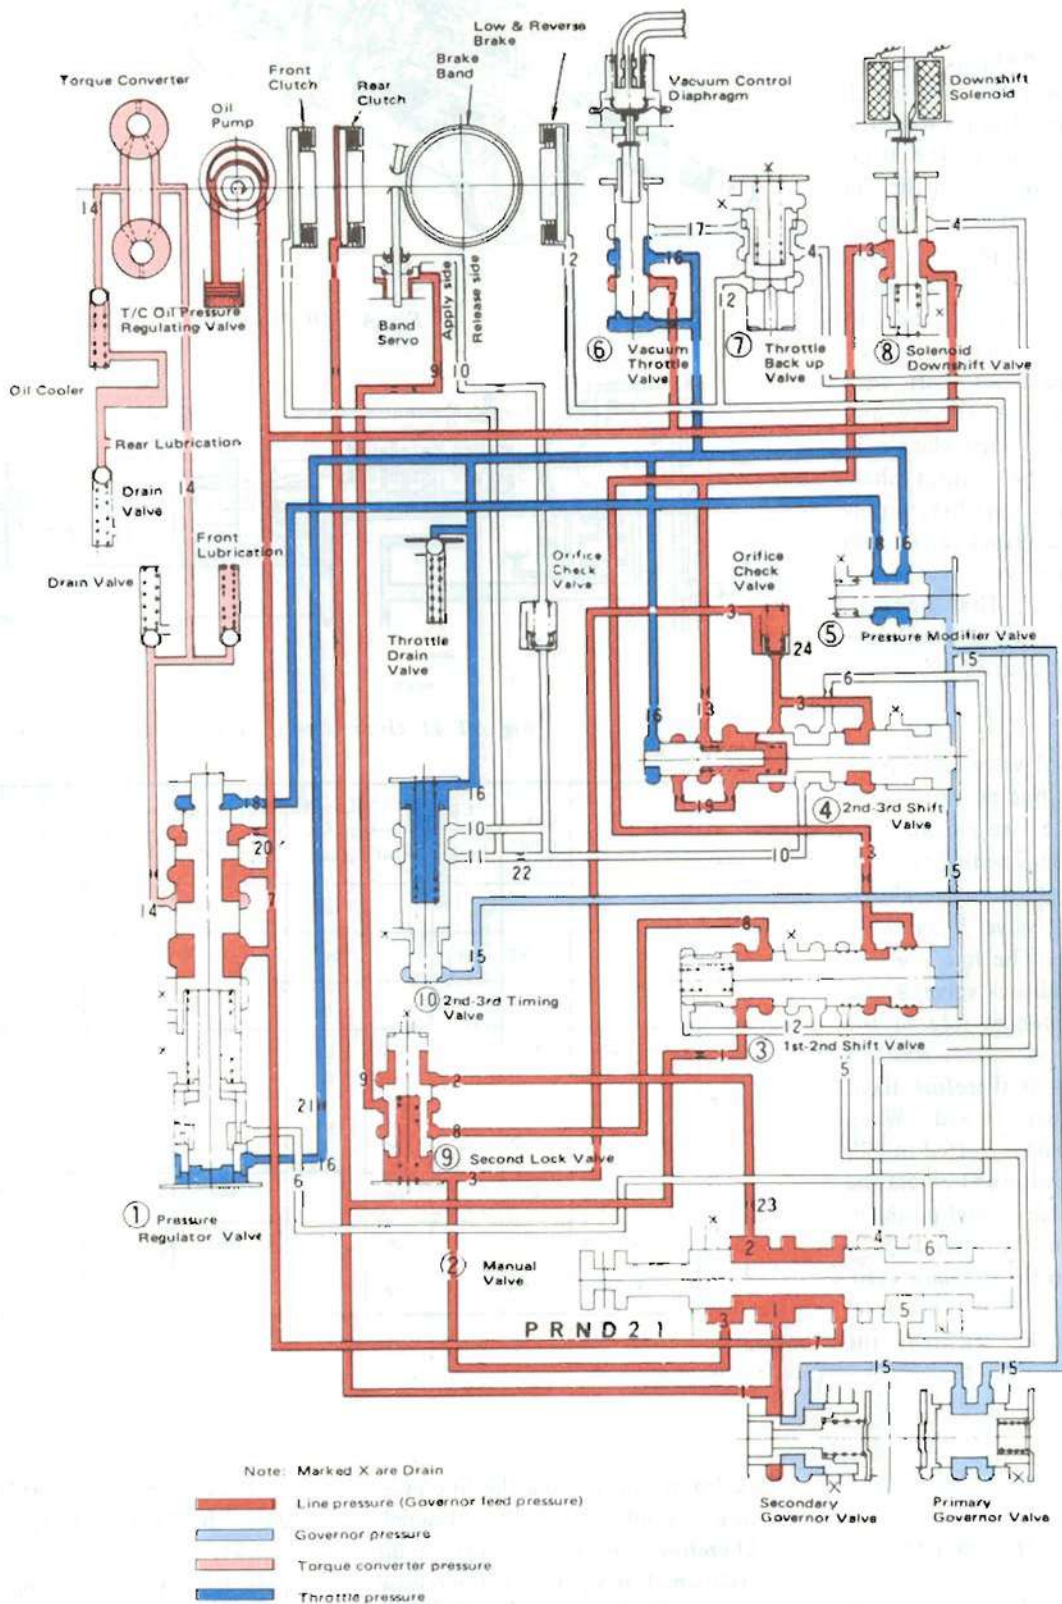


Fig. AT-39 Oil pressure circuit diagram — "D" range kickdown (shift valves in 2nd gear position)

"2" RANGE (2ND GEAR)


In "2" range the gear ratio is locked in the 2nd forward speed. In this case, the rear clutch is engaged and the band brake holds the front clutch drum, the connecting shell and sun gear from rotating.

The power flow takes place through the input shaft into the rear clutch and the front internal gear. With the sun gear held stationary, the front planetary gears rotate around the sun gear, carrying the front planet carrier with them. The front planet carrier, being splined to the output shaft, causes clockwise rotation of the output shaft at a reduced speed compared to the speed of the input shaft, with an increase in torque. As the low and reverse brake is not engaged, the clockwise rotation of the output shaft causes clockwise rotation of rear internal gear and the rear planet carrier also rotates around the sun gear in a clockwise direction. The one-way clutch will act to allow clockwise rotation of connecting drum.

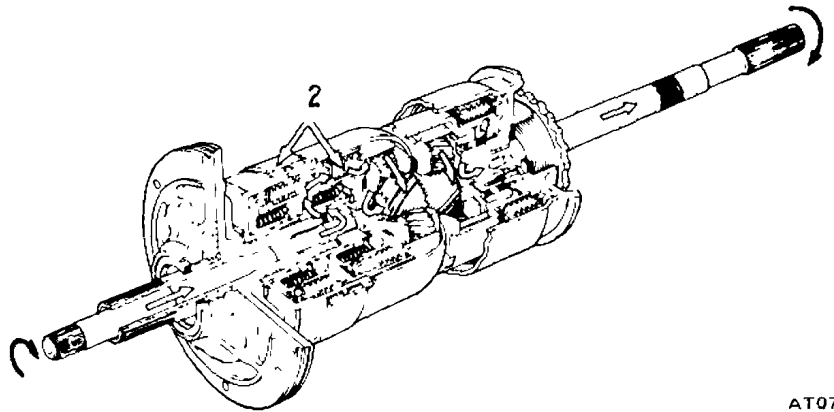

AT078

Fig. AT-40 Power transmission during "2" range

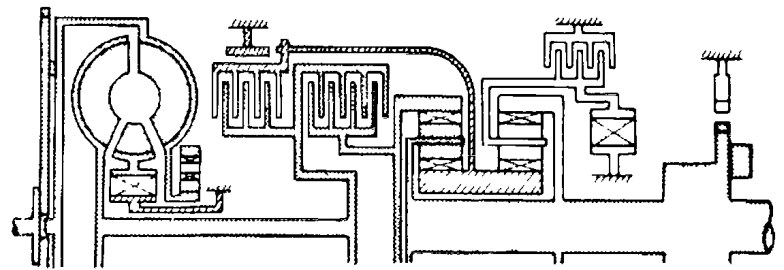

AT079

Fig. AT-41 Operation of each mechanism during "2" range

When the manual valve (2) is positioned at "2", the line pressure (7) is introduced into the line pressure circuits (1), (2) and (4). The line pressure (1) is led to the governor, rear clutch and "1st-2nd" shift valve (3) as in the case of "D" range. The line pressure (2) locks the second lock valve (9) and is led to the tightening side of the band servo.

The "2nd" gear is therefore fixed regardless of vehicle speed. When "D₃" range (3rd gear) is shifted to "2" range, the line pressure (4) enters the throttle back up valve (7) and produces a high pressure in the circuit (17), increasing the throttle pressure (16). The line pressure (7) is, therefore, increased and quickly tightens the band.

Note. "D₃" range (3rd gear) to "2" range.

If "D₃" range (3rd gear) is shifted to "2" range during operation, the manual valve (2) is also shifted to

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2		Second		on		on			
1	12 Second	1.458		on		on			
	11 Low	2.458		on	on				

"2" position, causing the line pressure circuit (3) to be drained. Therefore, the line pressure circuit (10) which is situated at the release side of the front clutch and servo is also drained through the "2nd-3rd" shift valve (4), forcing the speed to

decrease from "3rd gear" to "2nd gear." In this case the speed change quickly takes place because the line pressure (7) and other pressure are heightened by the action of the line pressure (4), in the same manner as described under "2" range.

"2" range (2nd gear)

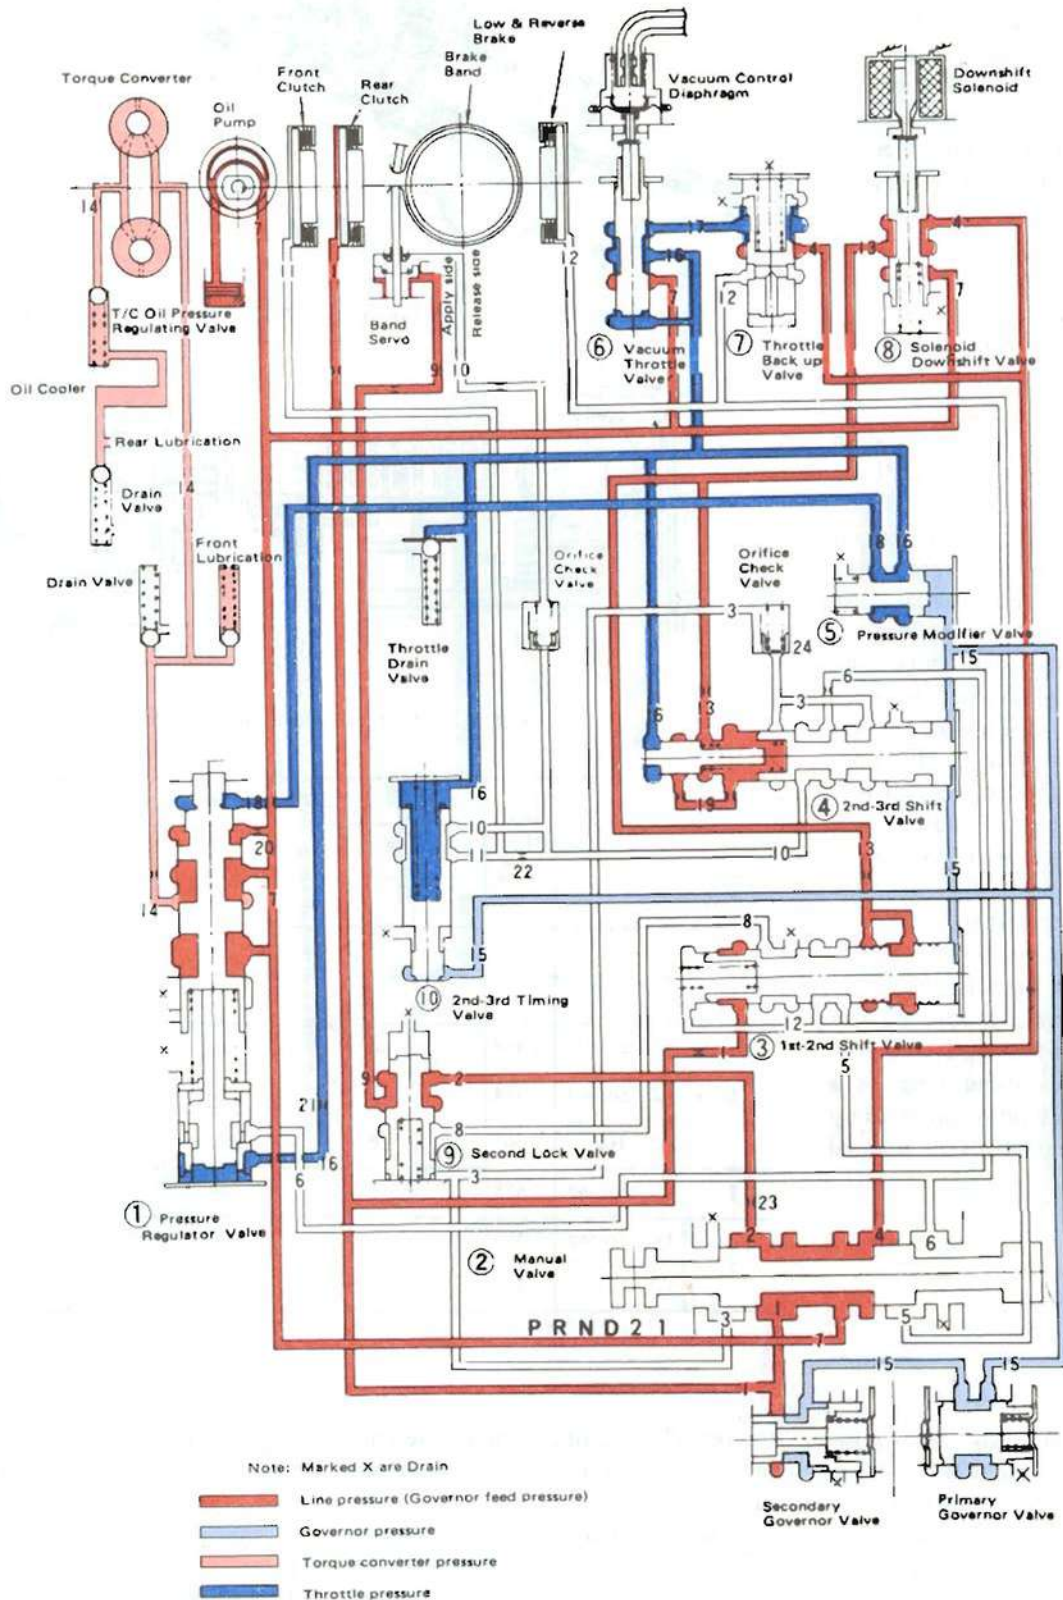


Fig. AT-42 Oil pressure circuit diagram — "2" range (2nd gear)

"1," RANGE (LOW GEAR)


When starting in "1" range, the driving gear is locked to the low gear ratio.

In "1" range, the rear clutch is engaged and the low and reverse brake holds the connecting drum and rear planet carrier from rotating. The power flow takes place through the input shaft and into the rear clutch. Rotation of the rear clutch drives the rear clutch hub and front internal gear. The front internal gear rotates the front planetary gears clockwise to cause the sun gear to rotate counter-clockwise.

Counterclockwise rotation of the sun gear turns the rear planetary gear clockwise.


The rear planet carrier splined to the connecting drum is held from rotating by the low and reverse brake.

The clockwise rotation of the rear planetary gears therefore rotates the rear internal gear and internal drive flange. The internal drive flange is splined to the output shaft and rotates the output shaft clockwise. However, the output shaft rotates at a lower speed compared to that of the input shaft. This is caused by the fact that the front planet carrier rotates at the same speed as the output shaft in the same direction since the carrier is splined to the output shaft. The front internal gear and planetary gear assembly are rotating in the same direction, but the planet carrier is rotating at a speed slower than the ring gear. So the gear ratio of this speed range is a combination of the ratios provided by the front and rear planetary gear assemblies.

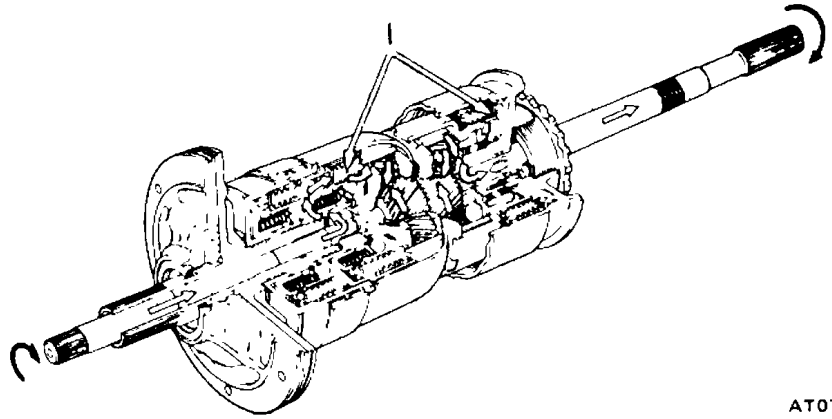

AT076

Fig. AT-43 Power transmission during "1" range

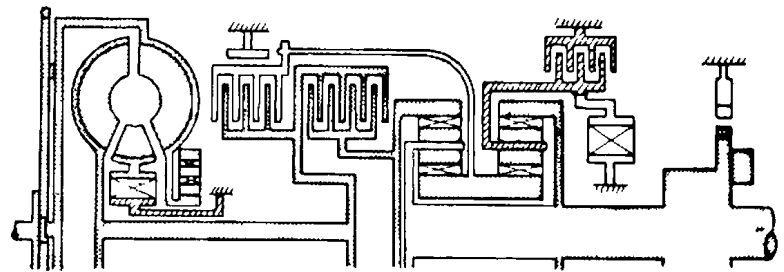

AT077

Fig. AT-44 Operation of each mechanism during "1" range

Range		Gear ratio	Clutch		Low & reverse brake	Band servo		One way clutch	Parking pawl
			Front	Rear		Operation	Release		
Park					on				on
Reverse		2.182	on		on		on		
Neutral									
Drive	D1 Low	2.458		on				on	
	D2 Second	1.458		on		on			
	D3 Top	1.000	on	on		(on)	on		
2		Second		on		on			
1	1 ₂ Second	1.458		on		on			
	1 ₁ Low	2.458		on	on				

When the manual valve (2) is positioned at "1", the line pressure (7) is applied into the line pressure circuits (1), (4) and (5). The oil pressure in (5) actuates the low and reverse brake after being introduced into the circuit (12) through the "1st-2nd" shift valve (3), and the line pressure (1) acts on

the rear clutch and governor. The line pressure (4) acts in the same manner as in "2" range.

Similar to that of the "D" range, the line pressure increases with the degree of accelerator pedal depression, and the line pressure decreases with the increase of car speed. The governor

pressure (15) which acts on the "1st-2nd" shift valve does not increase until it overcomes the combined force of the line pressure (12) and the spring, causing no "1st-2nd" speed change.

"1" range (Low gear)

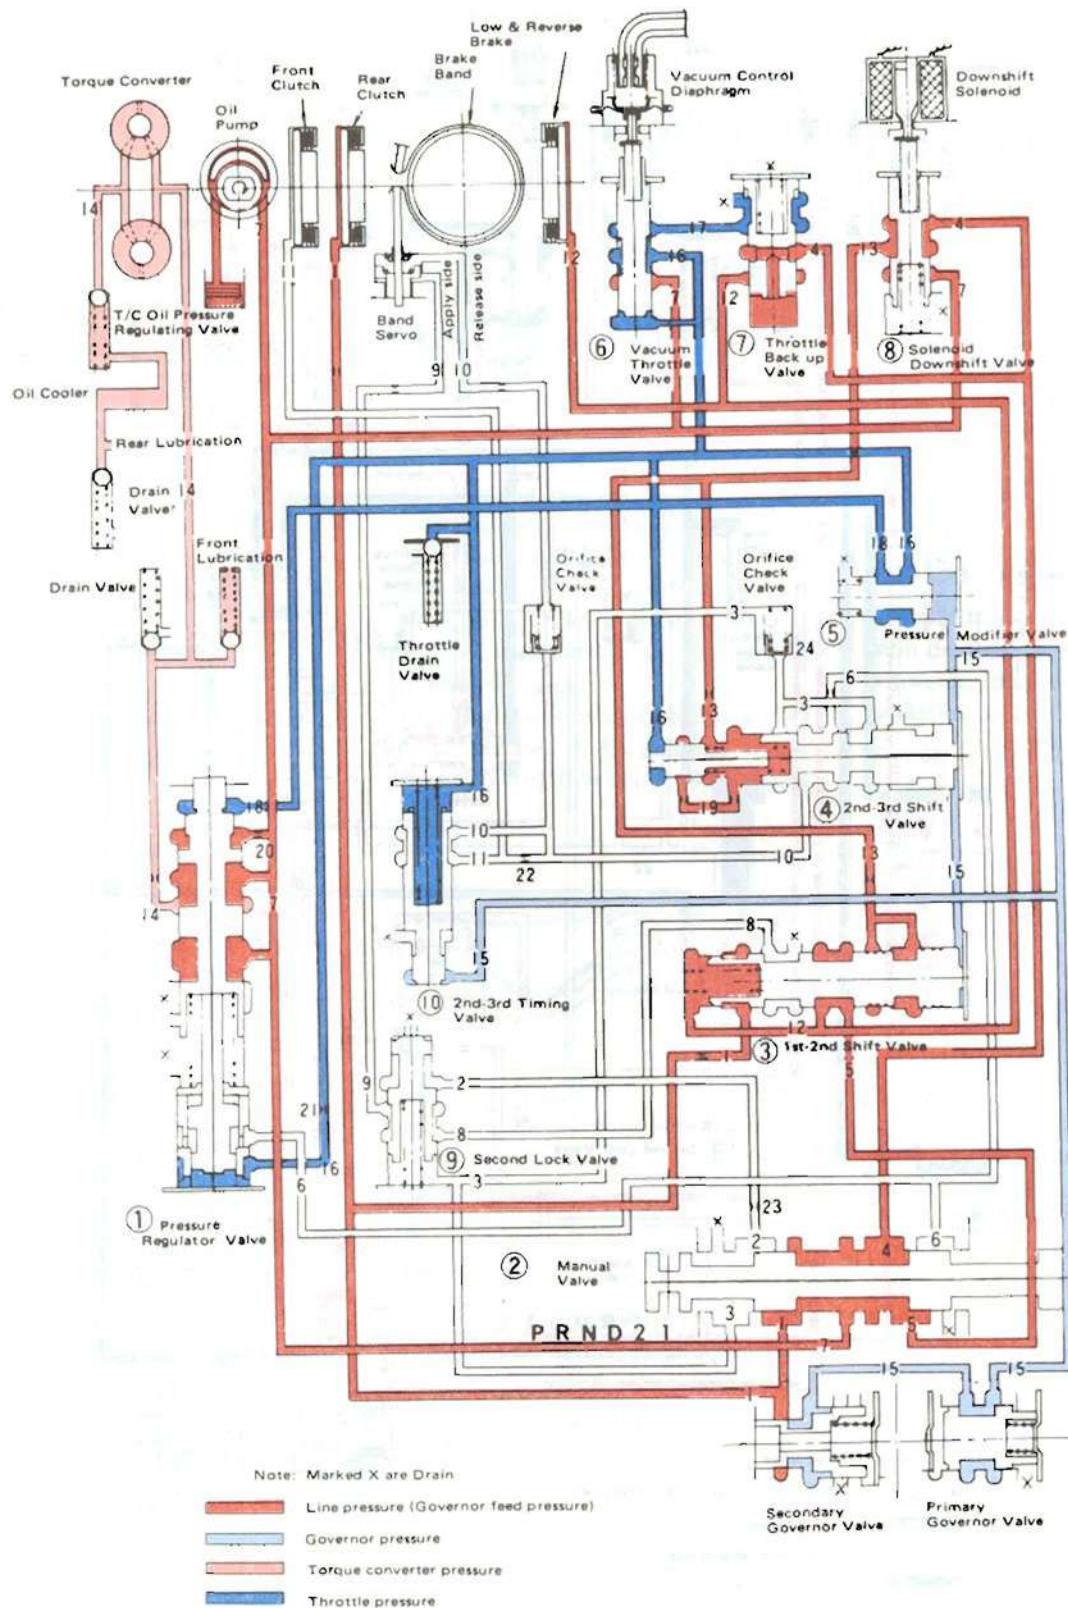


Fig. AT-45 Oil pressure circuit diagram — "1" range (Low gear)

"1₂" range (2nd gear)

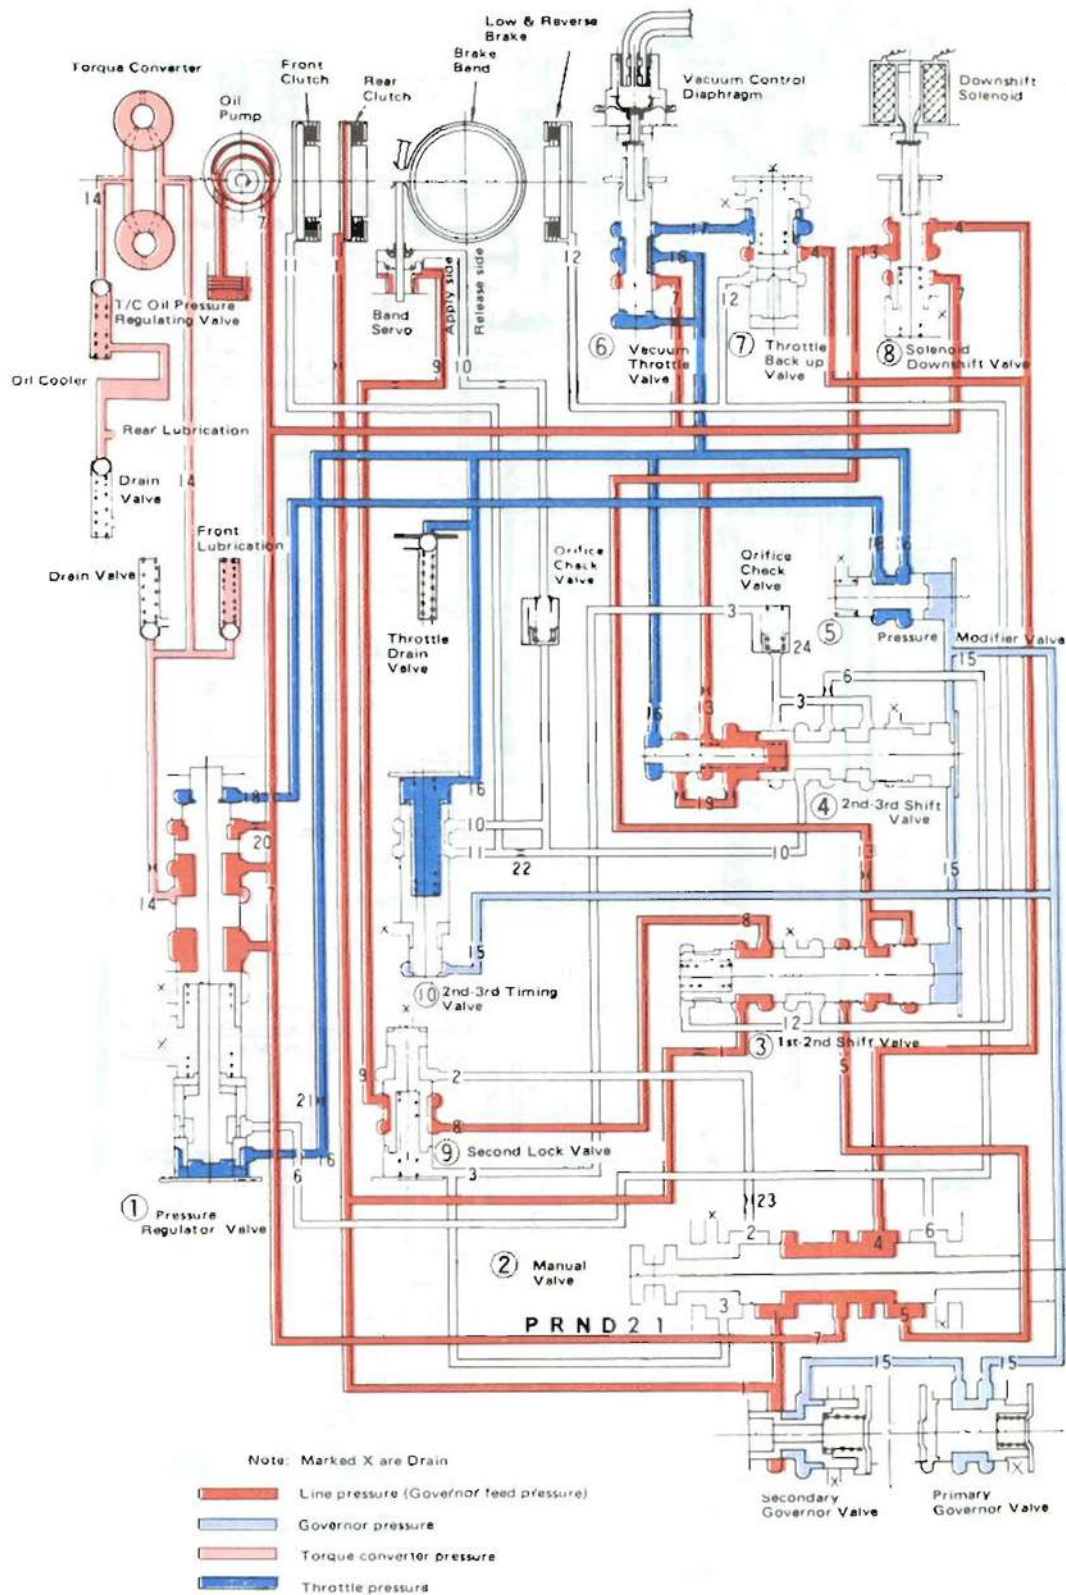


Fig AT-46 Oil pressure circuit diagram — "1₂" range (2nd gear)

REMOVAL AND INSTALLATION

CONTENTS

TRANSMISSION ASSEMBLY	AT-33	TRANSMISSION CONTROL LINKAGE	AT-35
REMOVAL	AT-33	REMOVAL AND INSTALLATION	AT-35
INSTALLATION	AT-33	ADJUSTMENT	AT-35

TRANSMISSION
ASSEMBLY

When dismantling the automatic transmission from a car, pay attention to the following points

1. Before dismantling the transmission, rigidly inspect it by aid of the "Trouble-shooting Chart", and dismount it only when considered to be necessary.
2. Dismount the transmission with utmost care; and when mounting, observe the tightening torque indicated on another table, not to exert excessive force

REMOVAL

In dismantling automatic transmission from car, proceed as follows.

1. Disconnect battery ground cable from terminal.
2. Disengage torsion shaft from accelerator linkage
3. Jack up vehicle and support its weight on safety stands. Recommend a hydraulic hoist or open pit be utilized, if available.


Make sure that safety is insured

4. Remove propeller shaft

Note: Plug up the opening in the rear extension to prevent oil from flowing out.

5. Disconnect front exhaust tube
6. Disconnect selector range lever from manual shaft.
7. Disconnect wire connections at inhibitor switch.

8. Disconnect vacuum tube from vacuum diaphragm, and wire connections at downshift solenoid
9. Disconnect speedometer cable from rear extension.
10. Disconnect oil charging pipe
11. Disconnect oil cooler inlet and outlet tubes at transmission case.
12. Support engine by locating a jack under oil pan with a wooden block used between oil pan and jack. Support transmission by means of a transmission jack.
13. Detach converter housing dust cover. Remove bolts securing torque converter to drive plate. See Figure AT-47.

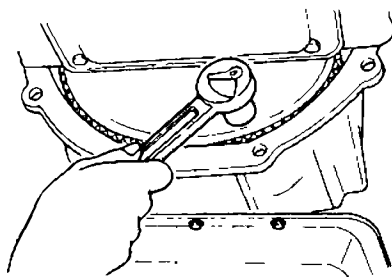

AT261

Fig AT-47 Removing torque converter attaching bolts

Note: Before removing torque converter, scribe match marks on two parts so that they may be replaced in their original positions at assembly.

14. Remove rear engine mount securing bolts and crossmember mounting bolts.
15. Remove starter motor.
16. Remove bolts securing transmission to engine. After removing these

bolts, support engine and transmission with jack, and lower the jack gradually until transmission can be removed and take out transmission under the car

Note: Plug up the opening such as oil charging pipe, oil cooler tubes, etc.

INSTALLATION


Installation of automatic transmission on car is reverse order of removal. However, observe the following installation notes.

1. Drive plate runout

Turn crankshaft one full turn and measure drive plate runout with indicating finger of a dial gauge rested against plate. See Figure AT-48.

[Replace drive plate if in excess of 0.5 mm (0.0197 in).]

- Maximum allowable runout:
0.3 mm (0.0118 in)

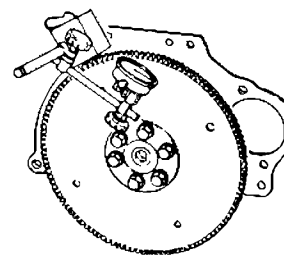


AT268

Fig AT-48 Measuring drive plate runout

2. Installation of torque converter
Line up notch in torque converter with that in oil pump. Be extremely careful not to cause undue stresses in parts in installing torque converter. See Figure AT-49.

Automatic Transmission

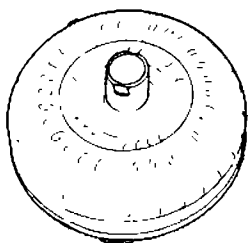


AT116

Fig. AT-49 Torque converter aligning cut

3. When connecting torque converter to transmission, measure distance "A" to be certain that they are correctly assembled. See Figure AT-50.

Distance "A":

More than 21.5 mm (0.846 in)

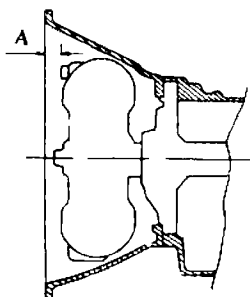

AT117

Fig. AT-50 Installing torque converter

4. Bolt converter to drive plate.

Note: Align chalk marks painted across both parts during disassembling processes.

5. After converter is installed, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.

6. Pour recommended automatic transmission fluid up to correct level through oil charge pipe.

7. Connect manual lever to shift rod. Operation should be carried out with manual and selector levers in "N"

8. Connect inhibitor switch wires

Notes:

a. Refer to covering topic under "Checking and adjusting inhibitor switch" on page AT-49.

b. Inspect and adjust switch as above whenever it has to be removed for service.

9. Check inhibitor switch for operation.

Starter should be brought into operation only when selector lever is "P" and "N" positions (it should be started when lever is in "D", "L" and "R" positions).

Back-up lamp should also light when selector lever is placed in "R" position.

10. Check level of oil in transmission. For detailed procedure, see page AT-48.

11. Move selector lever through positions to be sure that transmission operates correctly.

With hand brake applied, rotate engine at idling. Without disturbing the above setting, move selector lever through "N" to "D", to "2", to "1" and to "R". A slight shock should be felt by hand gripping selector lever time transmission is shifted.

Note: See page AT-49 for checking engine idling.

12. Check to be sure that line pressure is correct. To do this, refer to relative topic under "Testing line pressure" on page AT-52.

13. Perform stall test as per instructions on page AT-50.

TRANSMISSION CONTROL LINKAGE

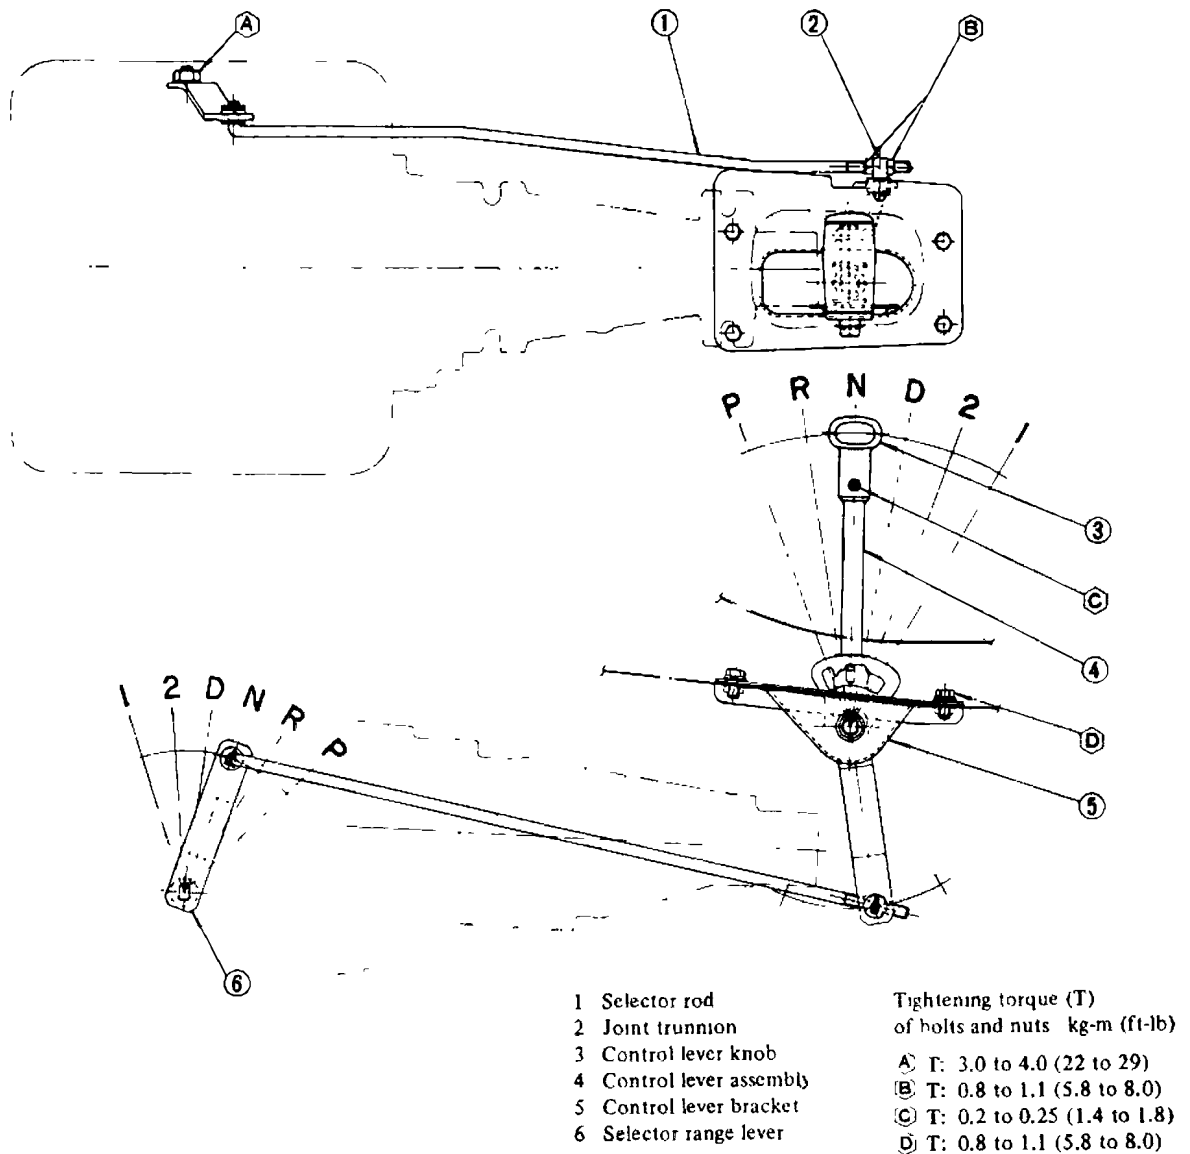


Fig. AT-51 Control linkage system

REMOVAL AND
INSTALLATION

1. Disconnect control knob from control lever by removing two(2) screws.
2. Remove console box.
3. Remove selector rod, selector range lever and control lever assembly with bracket.

To install, reverse the order of removal.

ADJUSTMENT

The adjustment of linkage is as

important as "Inspection of oil level" for the automatic transmission.

Therefore, great care should be exercised because faulty adjustment will result in the breakdown of the transmission.

1. Loosen adjust nuts (B). See Figure AT-51.
2. Set control lever (4) and selector range lever (6) at "N" position. See Figure AT-51.

3. Set selector rod (1) to trunnion (2) by turning in or out adjust nuts. See Figure AT-51.

After adjusting, make sure that control lever can be set in any position correctly and that selector lever operates properly without any binding.

If levers do not operate satisfactorily, readjust or replace parts as necessary.

MAJOR REPAIR OPERATION

CONTENTS

SERVICE NOTICE FOR DISASSEMBLY

AND ASSEMBLY	AT-36
TORQUE CONVERTER	AT-36
INSPECTION	AT-36
TRANSMISSION	AT-36
DISASSEMBLY	AT-36
INSPECTION	AT-38
ASSEMBLY	AT-38

COMPONENT PARTS

FRONT CLUTCH	AT
REAR CLUTCH	AT
LOW & REVERSE BRAKE	AT
SERVO PISTON	AT
GOVERNOR	AT
OIL PUMP	AT
PLANETARY CARRIER	AT
CONTROL VALVE	AT

SERVICE NOTICE FOR DISASSEMBLY AND ASSEMBLY

1. It is advisable that repair operations be carried out in a dust-proof room.
2. Due to the differences of the engine capacities, the specifications of component parts for each model's transmission may be different. They do, however, have common adjustment and repair procedures as well as cleaning and inspection procedures, outlined hereinafter.
3. During repair operations, refer to "Service Data and Specifications" section for the correct parts for each model.
4. Before removing any of subassemblies, thoroughly clean the outside of the transmission to prevent dirt from entering the mechanical parts.
5. Do not use a waste rag. Use a nylon or paper cloth.
6. After disassembling, wash all disassembled parts, and examine them to see if there are any worn, damaged or defective parts, and how they are affected. Refer to "Service Data" for the extent of damage that justifies replacement.
7. As a rule, packings, seals and similar parts once disassembled should be replaced with new ones.

TORQUE CONVERTER

INSPECTION

1. Check torque converter for any sign of damage, bending, oil leak or deformation. If necessary, replace.
2. Remove rust from pilots and bosses completely.


If torque converter oil is fouled or contaminated due to burnt clutch, flush the torque converter as follows:

- (1) Drain oil in torque converter
- (2) Pour non lead gasoline or kerosene into torque converter [approximately 0.5 liter (1 1/4 U.S. pt., 3/4 Imp. pt.)].
- (3) Blow air into torque converter and flush and drain out gasoline.
- (4) Fill torque converter with torque converter oil [approximately 0.5 liter (1 1/4 U.S. pt., 3/4 Imp. pt.)].
- (5) Again blow air into torque converter, and drain torque converter oil

TRANSMISSION

DISASSEMBLY

1. Drain oil from the end of rear extension. Mount transmission on Transmission Case Stand ST07870000 or ST07860000. Remove oil pan. See Figure AT-52.

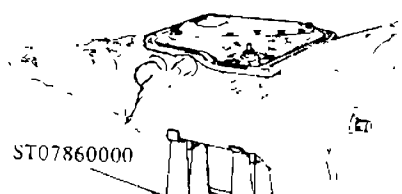

2. Remove bolts securing converter housing to transmission case. Remove torque converter.
3. Remove speedometer pinion sleeve bolt. Withdraw pinion.
4. Remove downshift solenoid vacuum diaphragm. Do not leave phragm rod at this stage of assembly. Rod is assembled in top vacuum diaphragm. See Figure AT-53.

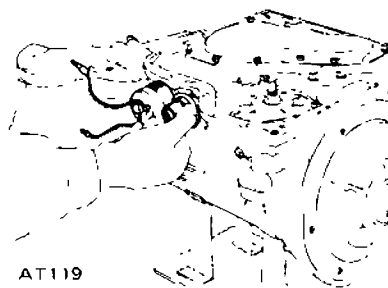


Fig AT 53 Downshift solenoid vacuum diaphragm

5. Remove bolts which hold valve body to transmission case. See Figure AT-54.

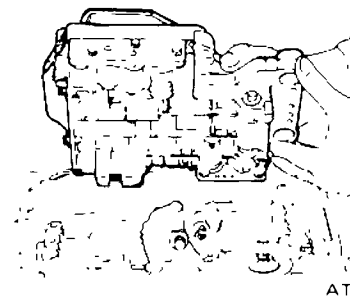


Fig AT 54 Removing valve body

6. Loosen lock nut (2) on piston rod (1) as shown in Figure AT-55.

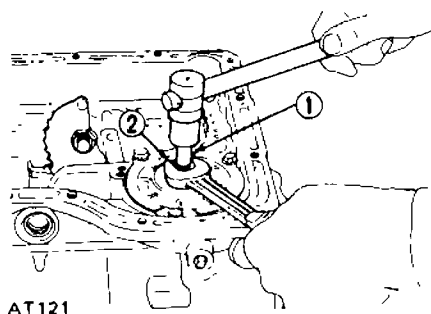


Fig AT-55 Loosening band servo

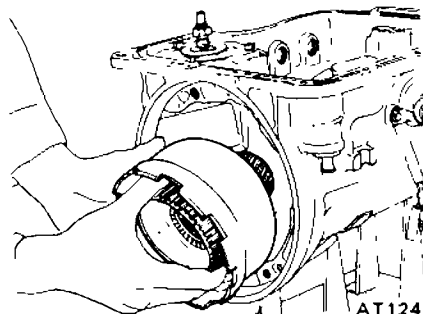


Fig AT-58 Removing connecting shell

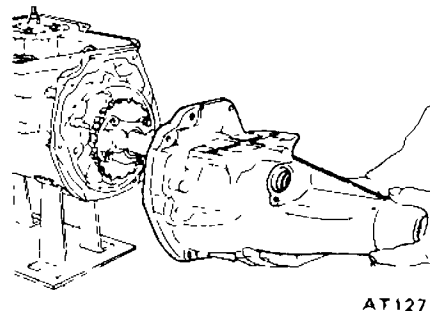


Fig AT-61 Removing rear extension

- 7 Pull out input shaft
- 8 Withdraw oil pump using Sliding Hammer ST25850000. Do not allow front clutch to come out of position and drop onto floor. See Figure AT-56.

- 12 With the aid of Snap Ring Remover HT69860000, pry snap ring off output shaft. See Figure AT-59.

- 16 Pull out output shaft, remove oil distributor ② together with governor valve ①. See Figure AT-62.

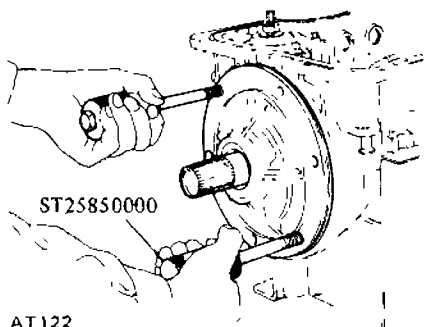


Fig AT-56 Removing oil pump

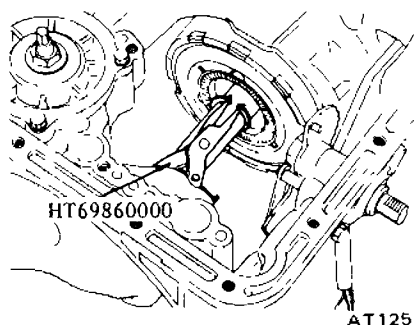


Fig AT-59 Removing snap ring

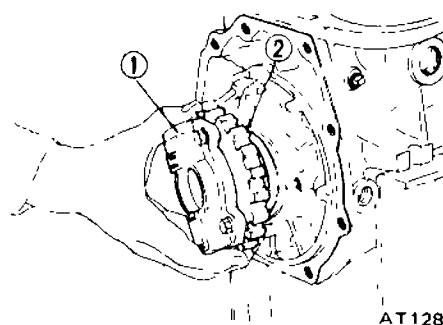


Fig AT-62 Removing governor and oil distributor

- 9 Remove band strut. This can be done by loosening piston stem further. See Figure AT-57.

- 13 Remove connecting drum and inner gear of rear planetary carrier as an assembly. See Figure AT-60.

- 17 Pry off snap ring using a pair of pliers. Remove retaining plate, drive plate, driven plate and dish plate in that order. See Figure AT-63.

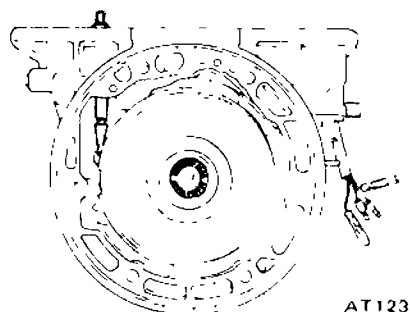


Fig AT-57 Removing band strut

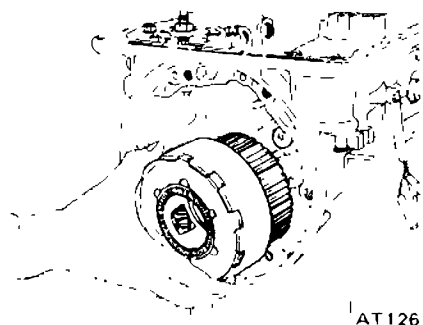


Fig AT-60 Removing connecting drum

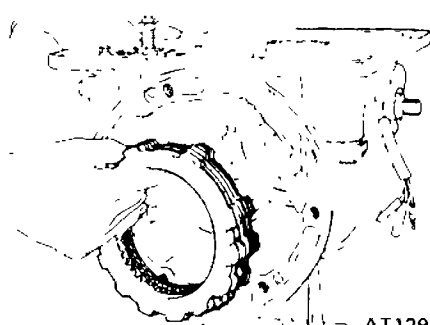


Fig AT-63 Removing drive and driven plates

- 10 Remove brake band, front clutch and rear clutch as an assembled unit.

- 14 Remove snap rings and then remove rear planetary carrier, internal gear, connecting drum, one-way clutch outer race and one-way clutch in that order

- 18 Reaching through back side of transmission case, remove hex-head slotted bolts as shown in Figure AT-64. To do this, use Hex-head Extension ST25570001 (ST25570000). One-way clutch inner race, thrust washer, piston return spring and thrust spring ring can now be removed.

- 11 Remove connecting shell, rear clutch hub and front planetary carrier as a unit. See Figure AT-58.

- 15 Remove rear extension by loosening securing bolts. See Figure AT-61.

Automatic Transmission

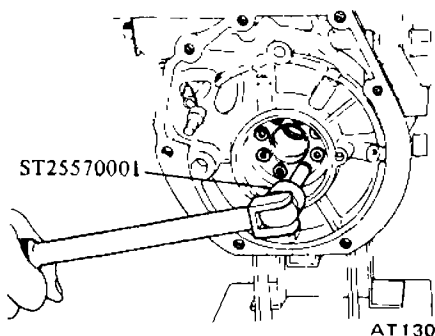


Fig. AT-64 Removing hex-head slotted bolt

19. Blow out low and reverse brake piston by directing a jet of air into hole in cylinder. See Figure AT-65.

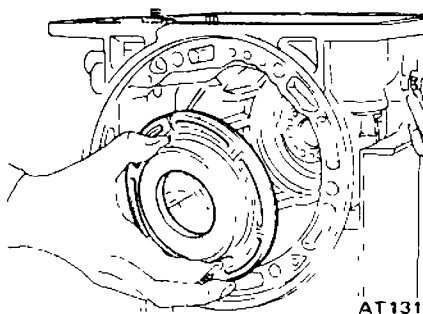


Fig. AT-65 Removing piston

20. Remove band servo loosening attaching bolts.

Note: If difficulty is encountered in removing retainer, direct a jet of air toward release side as shown in Figure AT-66.

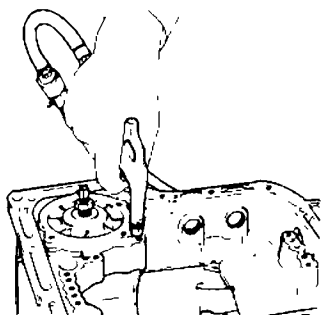


Fig. AT-66 Removing band servo

21. Pry snap rings ① from both ends of parking brake lever ② and remove the lever. Back off manual

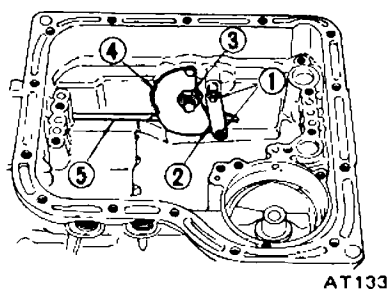


Fig. AT-67 Removing manual plate

22. Remove inhibitor switch and manual shaft by loosening two securing bolts.

INSPECTION

Torque converter housing, transmission case and rear extension

1. Check for damage or cracking; if necessary, replace
2. Check for dents or score marks on mating surfaces. Repair as necessary
3. Check for score marks or signs of burning on extension bushing, if necessary, replace.

Gaskets and O-ring

1. Always use new gaskets when the units are to be disassembled.
2. Check O-rings for burrs or cracking. If necessary, replace with new rings.

Oil distributor

1. Check for signs of wear on seal ring and ring groove, replacing with new ones if found worn beyond use.
2. Check that clearance between seal ring and ring groove is correct. If out of specification, replace whichever is

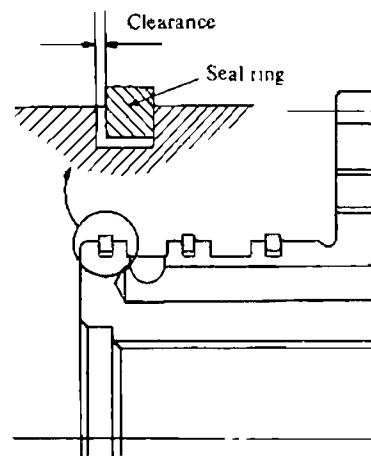


Fig. AT-68 Measuring seal ring groove clearance

ASSEMBLY

Assembly is in reverse order of disassembly. However, observe the following assembly notes.

1. After installing piston of low and reverse brake, assemble thrust snap ring, return spring, thrust washer and one-way clutch inner race. Torque hex-head slotted bolt to 1.3 to 1.8 (9.4 to 13 ft-lb), using Hex-head Torque Wrench GG91060000 Socket Extension ST25490000 (ST25512001). See Figure AT-69.

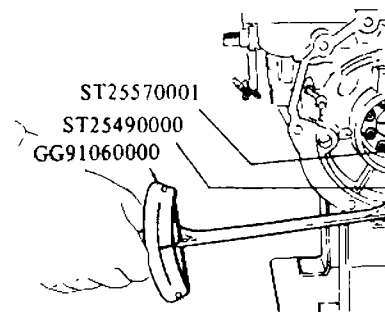


Fig. AT-69 Installing one way clutch inner race

2. After low and reverse brake has been assembled, measure the clearance between snap ring ① and retaining plate ②. Select proper thickness of retaining plate to give correct ring plate clearance. See Figure AT-70.

• Low and reverse brake

Automatic Transmission

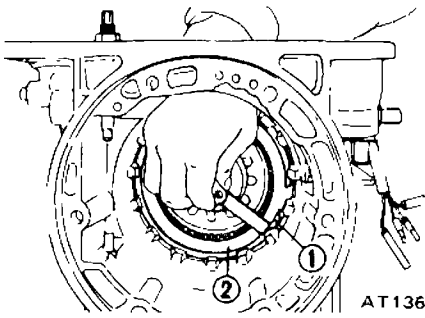


Fig. AT-70 Measuring ring to plate clearance

Available retaining plate

No.	Thickness mm (in)
1	7.8 (0.307)
2	8.0 (0.315)
3	8.2 (0.323)
4	8.4 (0.331)
5	8.6 (0.339)
6	8.8 (0.346)

For inspection procedure for low and reverse brake, see page AT-42 for Assembly.

3. Install one-way clutch so that the arrow mark "→" is toward front of vehicle. It should be free to rotate only in clockwise direction. See Figure AT-71.

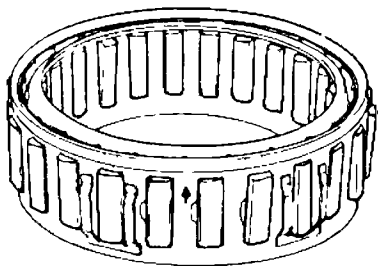


Fig. AT-71 One way clutch

4. After installing rear extension, torque attaching bolts to 2.0 to 2.5 kg-m (14 to 18 ft-lb). Place manual lever in "P" range and check to be sure that rear output shaft is securely blocked.

5. Tighten servo retainer temporarily at this stage of assembly.

6. Place rear clutch assembly with needle bearing on front assembly.

7. Install rear clutch hub and front planetary carrier as shown in Figure AT-72.

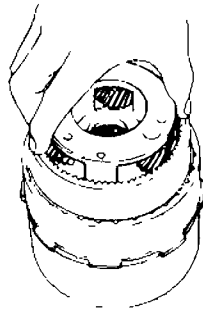


Fig. AT-72 Installing planetary carrier

8. Assemble connecting shell and other parts up to front clutch in reverse order of disassembly.


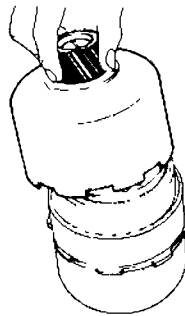


Fig. AT-73 Installing connecting shell

9. Adjust total end play and front end play as follows:

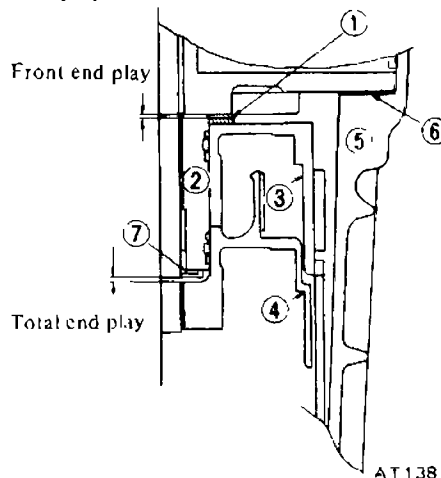

- | | |
|------------------------------|-------------------------------|
| 1 Front clutch thrust washer | 5 Transmission case |
| 2 Oil pump cover | 6 Oil pump gasket |
| 3 Front clutch | 7 Oil pump cover bearing race |
| 4 Rear clutch | |

Fig. AT-74 End play

(1) Measure the distance "A" and "C" by vernier calipers as shown in Figure AT-75

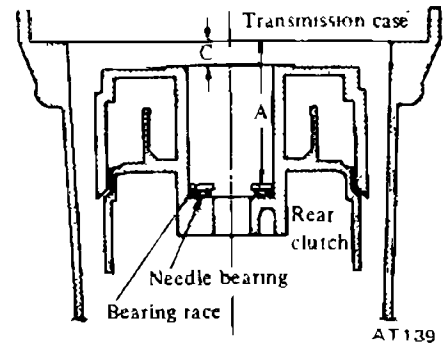


Fig. AT-75 Measuring the distance "A" and "C"

(2) Measure the distance "B" and "D" of oil pump cover as shown in Figure AT-76.

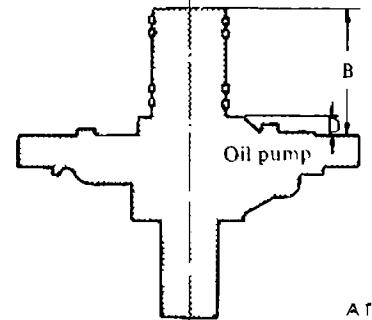


Fig. AT-76 Measuring the distance "B" and "D"

Adjustment of total end play

Select oil pump cover bearing race by calculating the following formula:

$$T_T = A - B + W$$

where,

T_T	Required thickness of oil pump cover bearing race	mm (in)
A	Measured distance A	mm (in)
B	Measured distance B	mm (in)
W	Thickness of bearing race temporarily inserted	mm (in)

Available oil pump cover bearing race

Thickness mm (in)
1.2 (0.047)
1.4 (0.055)
1.6 (0.063)
1.8 (0.071)
2.0 (0.079)
2.2 (0.087)

Specified total end play
0.25 to 0.50 mm
(0.010 to 0.020 in)

Automatic Transmission

Adjustment of front end play

Select front clutch thrust washer by calculating the following formula

$$T_F = C - D - 0.2 \text{ (mm)}$$

where,

- T_F : Required thickness of front clutch thrust washer mm (in)
 C : Measured distance C mm (in)
 D : Measured distance D mm (in)

Available front clutch thrust washer

Thickness mm (in)
1.5 (0.059)
1.7 (0.067)
1.9 (0.075)
2.1 (0.083)
2.3 (0.091)
2.5 (0.098)
2.7 (0.106)

Specified front end play:

0.5 to 0.8 mm
 (0.020 to 0.031 in)

Notes:

- Correct thickness of bearing race and thrust washer is always the one which is nearest the calculated one.
- Installed thickness of oil pump gasket is 0.4 mm (0.016 in).

10. Check to be sure that brake servo piston moves freely. For detailed procedure, refer to page AT-42 for Servo Piston. Use care to prevent piston from coming out of place during testing since servo retainer is not tightened at this point of assembly.

11. Make sure that brake band strut is correctly installed. Torque piston stem to 1.2 to 1.5 kg-m (8.7 to 11

12. After inhibitor switch is installed, check to be sure that it operates properly in each range. For detailed procedure, refer to page AT-49 for Checking and Adjusting Inhibitor Switch.

13. Check the length "L" between case end to rod end of vacuum throttle valve fully pushed in. Then select adequate diaphragm rod of corresponding measured length. See Figure AT-77.

Available diaphragm rod

Distance measured "L" mm (in)	Diaphragm rod length mm (in)
Under 25.55 (1.006)	29.0 (1.142)
25.65 to 26.05 (1.010 to 1.026)	29.5 (1.161)
26.15 to 26.55 (1.030 to 1.045)	30.0 (1.181)
26.65 to 27.05 (1.049 to 1.065)	30.5 (1.201)
Over 27.15 (1.069)	31.0 (1.220)

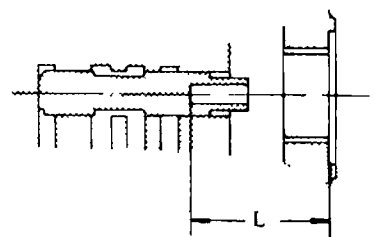



Fig. AT-77 Measuring the distance

COMPONENT PARTS

The transmission consists of many small parts that are quite alike in construction yet machined to very close tolerances. When disassembling parts, be sure to place them in order in part rack so they can be restored in the unit in their proper positions. It is also very important to perform functional test whenever it is designated

FRONT CLUTCH

Disassembly

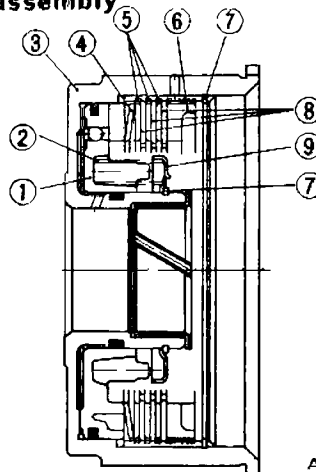

- 1 Piston 6 Retaining plate
 2 Coil spring 7 Snap ring
 3 Front clutch drum 8 Drive plate
 4 Retaining plate 9 Servo retainer pin

1. Pry off snap ring ① with suitable screwdriver or a pair of pliers. Remove a retaining plate ②, drive plate ③, driven plate ④ and diaphragm plate ⑤ in the order listed, as shown in Figure AT-78.

2. Compress clutch springs, using Clutch Spring Compressor ST25420001 (or ST25420000). Remove snap ring ⑥ from spring retainer, using Snap Ring Remover ST25320001. See Figure AT-79.


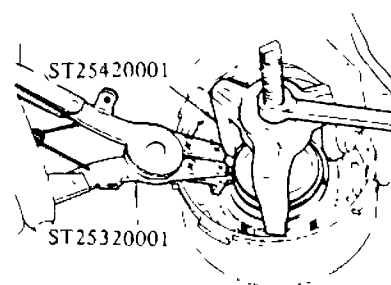


Fig. AT-79 Removing snap

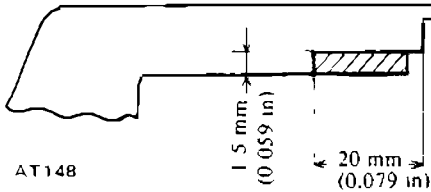


AT148

Cut off hatched portion

Fig. AT-80 Modifying coil spring compressor

3. Take out spring retainer ⑦ and spring ⑧. See Figure AT-78
4. Blow out piston by directing a jet of air into hole in clutch drum. See Figure AT-81.

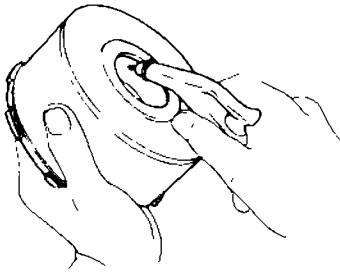

AT149

Fig. AT-81 Blowing out piston

Inspection


1. Check for signs of wear or damage to clutch drive plate facing. If found worn or damaged excessively, discard. See "Service Data" for limits.
2. Check for wear on snap ring and for weakened or broken coil spring.

If necessary, replace with new ones
Spring retainer should also be inspected for warpage.

Assembly

1. Assembly is in reverse the order of disassembly. Dip all parts in clean automatic transmission fluid before installing.
2. Line up driven plates so that stripped arcs are properly aligned, paying particular attention to the location of oil holes in clutch drum. See Figure AT-82.

Note: The number of drive and driven plates varies with the type of vehicle. For detailed information, see "Service Data & Specifications."

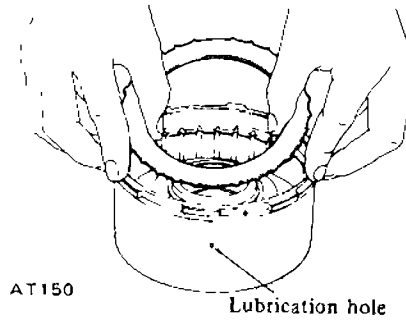

AT150

Lubrication hole

Fig. AT-82 Inserting clutch plate


3. After clutch is assembled, make sure that clearance between snap ring ① and retaining plate ② is held within specified limits. If necessary, try with other plates having different thickness until correct clearance is obtained. See Figure AT-83.

Specified clearance
1.6 to 1.8 mm
(0.063 to 0.071 in)

Available retaining plate

Thickness mm (in)

10.6 (0.417)
10.8 (0.425)
11.0 (0.433)
11.2 (0.441)
11.4 (0.449)
11.6 (0.457)

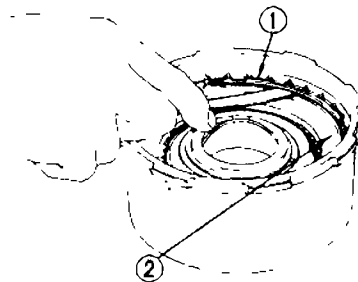


AT151

Fig. AT-83 Measuring ring to plate clearance

4. Testing front clutch

With front clutch assembled on oil pump cover, direct a jet of air into hole in clutch drum. See Figure AT-84.

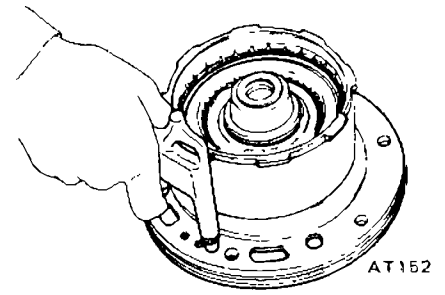


AT152

Fig. AT-84 Testing front clutch

REAR CLUTCH

Disassembly

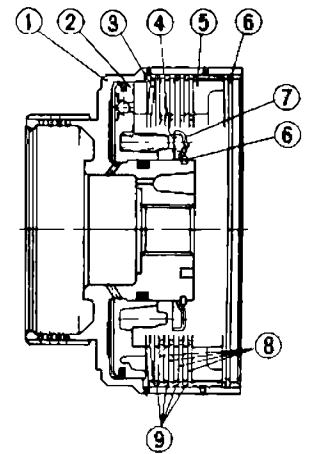

AT313

- | | |
|--------------------|-------------------|
| 1 Rear clutch drum | 6 Snap ring |
| 2 Piston | 7 Spring retainer |
| 3 Dished plate | 8 Drive plate |
| 4 Coil spring | 9 Driven plate |
| 5 Retaining plate | |

Fig. AT-85 Sectional view of rear clutch

1. Take out snap ring ⑤, retaining plate ⑥, drive plate ⑨, driven plate ⑩ and dished plate ③. Same technique can be applied as in disassembling front clutch. See Figure AT-85.

2. Remove snap ring from coil spring retainer. See Figure AT-86.

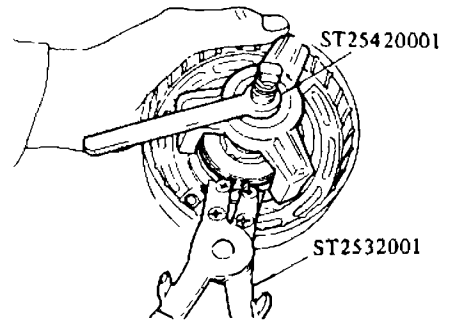


Fig. AT-86 Removing snap ring

Automatic Transmission

3. Blow out piston by directing a jet of air into hole in clutch drum. See Figure AT-87.

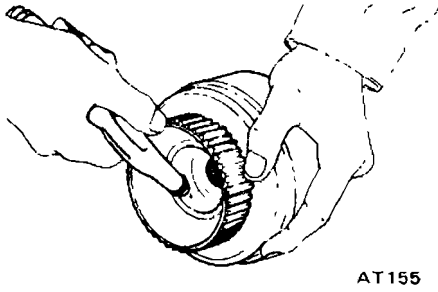


Fig. AT-87 Blowing out piston

Inspection

Refer to page AT-41 for Inspection of Front Clutch.

Assembly

Assemble in reverse the order of disassembly. Dip all parts in clean automatic transmission fluid before assembling. Note that the number of drive and driven plates varies with type of vehicle. For details, refer to "Service Data & Specifications".

1. After rear clutch is assembled, check to be sure that clearance between snap ring ① and retaining plate ② is held within prescribed tolerances. See Figure AT-88.

Specified clearance:
1.0 to 1.5 mm
(0.039 to 0.059 in)

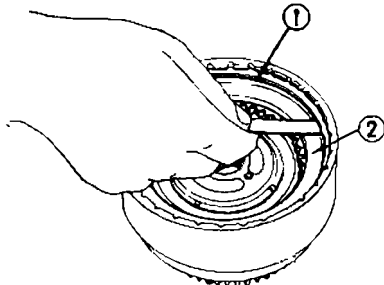


Fig. AT-88 Measuring ring to plate clearance

2. Testing rear clutch
Install rear clutch on oil pump cover.

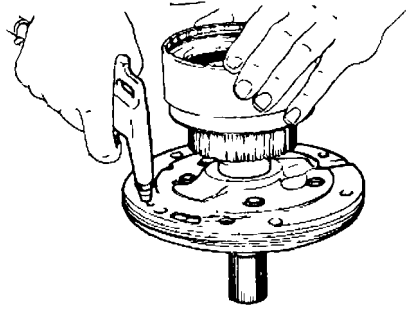


Fig. AT-89 Testing rear clutch

LOW & REVERSE BRAKE

Disassembly

1. Follow steps as described in page AT-37 for Transmission Disassembly.
2. Blow out piston by directing a jet of air into oil hole in clutch piston.

Inspection

1. Check drive plate facing for wear or damage; if necessary, replace. Refer to "Service Data & Specifications" for tolerances.
2. Test piston return spring for weakness. Discard if weakened beyond use.
3. Replace defective parts with new ones.

Assembly

1. After low & reverse piston is installed, assemble thrust spring ring, return spring, thrust washer and one-way clutch inner race. Using Hex-head Extension ST25570001 (ST25570000), torque hex-head slotted bolt 1.3 to 1.8 kg-m (9.4 to 13 ft-lb).
2. Insert dished plate, driven plate, drive plate and retaining plate into transmission case in that order. Install snap ring to secure the installation.

Note: The number of drive and driven

3. Without disturbing the above setting, check to be sure that clearance between snap ring and retaining plate is within specified limits. If necessary, use other plates of different thickness until correct clearance is obtained.

Specified clearance:
0.80 to 1.05 mm
(0.031 to 0.041 in)

4. Blow compressed air into oil hole in low & reverse brake to test definite brake operation as shown Figure AT-90.

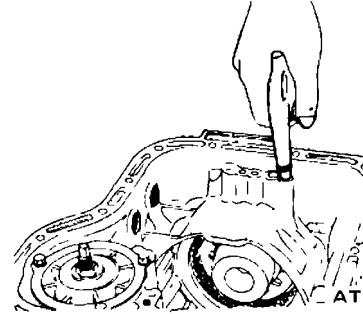


Fig. AT-90 Testing low & reverse brake


SERVO PISTON

Disassembly

1. Blow out piston by directing a jet of air into hole in release-side piston.
2. Remove servo piston return spring.

Inspection

Check piston for wear, damage or other defects which might interfere with proper brake operation.

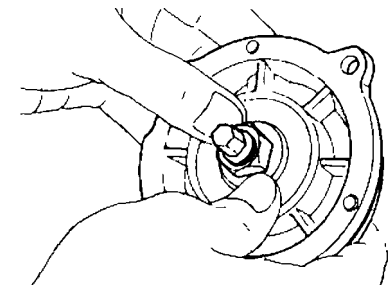

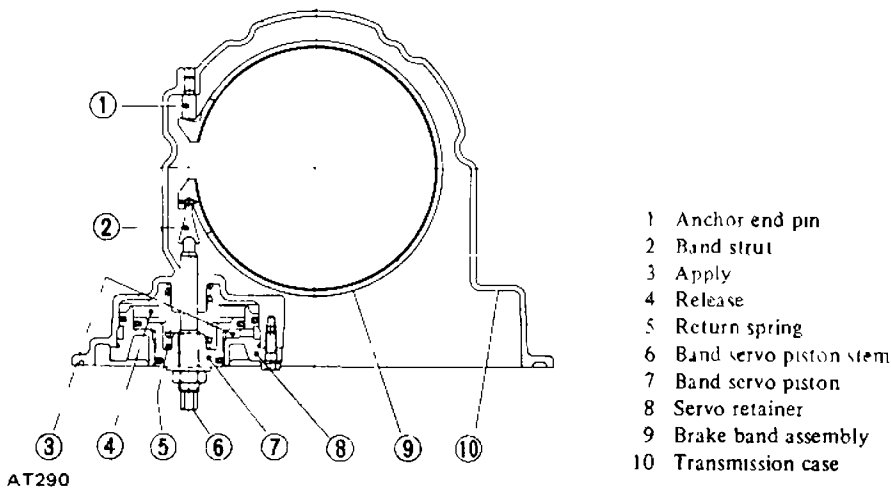


Fig. AT-92 Sectional view of servo piston

Assembly

1. Prior to assembly, dip all parts in clean automatic transmission fluid.
Reverse disassembly procedure to assemble brake.
2. Use extreme care to avoid damaging rubber ring when installing seal lace.
3. Blow compressed air from apply-side of piston to test for definite piston operation as shown in Figure AT-93.

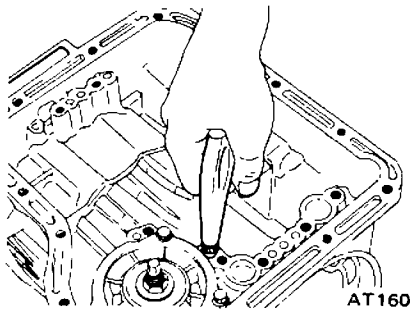


Fig. AT-93 Testing piston (Apply side)

4. With apply-side of piston plugged with thumb, blow compressed air into cylinder from release-side as shown in Figure AT-94. If retainer is raised a little, it is an indication that attaching bolts are loose, calling for retightening.

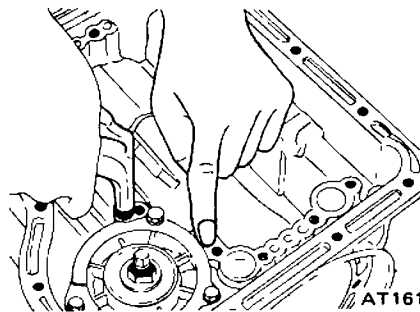



Fig. AT-94 Testing piston (Release side)

GOVERNOR

Disassembly

1. Separate governor from oil distributor by unscrewing attaching bolts.
2. To disassemble secondary governor, remove spring seat, spring and secondary governor valve from valve body in that order as shown in Figure AT-95.

To control valve
[Governor
pressure (15)]

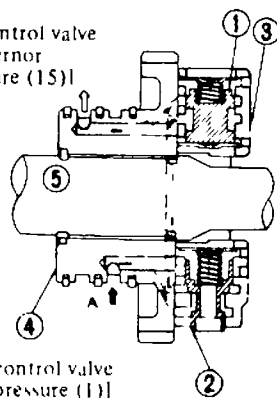

From control valve
[Line pressure (1)]

- 1 Primary governor
- 2 Secondary governor
- 3 Governor valve body
- 4 Oil distributor
- 5 Output shaft

Fig. AT-95 Testing secondary governor

3. If primary governor is to be disassembled for any purpose, remove spring seat, primary governor valve, spring and spring seat.

Inspection

1. Check valve for defective condition. Replace spring if found weakened beyond use. Defective piston should also be replaced with a new one.
2. Examine to see if primary governor slides freely without binding.
3. To determine if secondary governor is in good condition, blow air under light pressure into hole at "A" and listen for noise like that of a model plane.

Assembly

Reverse disassembly procedure to assemble governor.

Note. Do not confuse primary governor with secondary governor. After installation, check that spring is not deflected.

OIL PUMP

Disassembly

1. Free pump cover from pump housing by removing attaching bolts.
2. Take out inner and outer gears from pump housing.

Inspection

1. Inspect for wear or damage to gear teeth. Replace rubber ring if found damaged beyond use.
2. Using a straight edge and feelers, measure pump and gear clearances as follows:

- Clearance between inner (or outer) gear and pump cover. See Figure AT-96.

Standard clearance.

0.02 to 0.04 mm
(0.0008 to 0.0016 in)

[Replace if over 0.08 mm (0.0031 in).]

Automatic Transmission

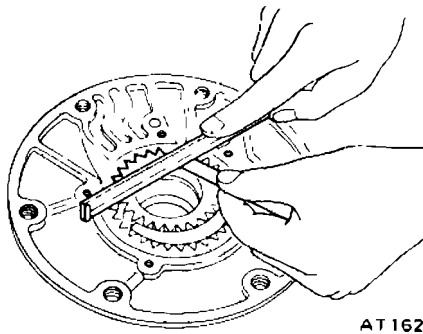


Fig. AT-96 Measuring clearance

- Clearance between seal ring and ring groove. See Figure AT-97.

Standard clearance:
0.04 to 0.16 mm
(0.0016 to 0.0063 in)

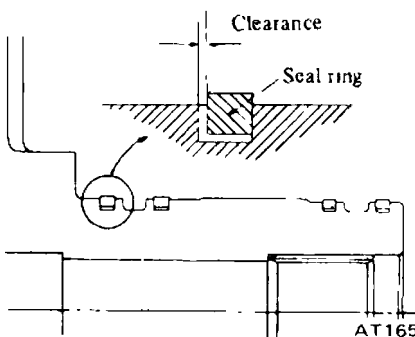


Fig. AT-97 Measuring clearance

Assembly

1. Set up pump housing with inner and outer pump gears on it.
2. Using Oil Pump Assembling Gauge ST25580000, install pump cover to pump housing as shown in Figure AT-98.

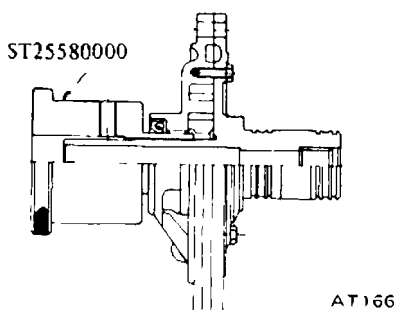


Fig. AT-98 Centering oil pump

3. Temporarily tighten pump securing bolts.

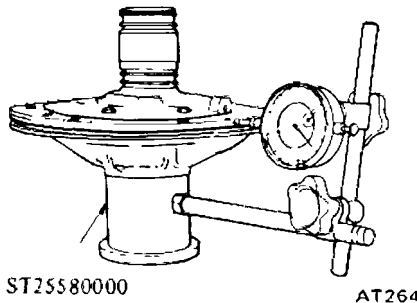


Fig. AT-99 Measuring runout

5. Tighten pump securing bolts to specified torque 0.6 to 0.8 kg-m (4.3 to 5.8 ft-lb).

Note: Be sure to align converter housing securing bolt holes.

6. Again, check the runout of oil pump cover.

Note: When former Oil Pump Assembling Gauge is to be used, make a screw hole in side of it.

PLANETARY CARRIER


The planetary carrier cannot be divided into its individual components.

If any part of component is defective, replace the carrier as a unit.

Inspection

Check clearance between pinion washer and planetary carrier with a feeler. See Figure AT-100

- Standard clearance.
0.20 to 0.70 mm
(0.008 to 0.028 in)

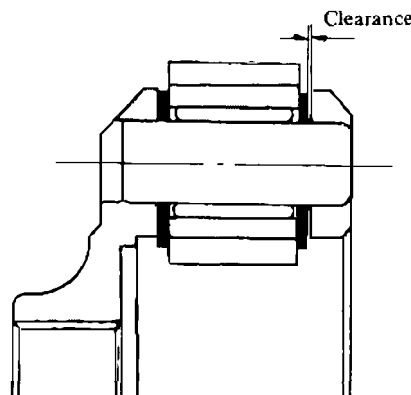

[Replace if over 0.80 mm (0.031 in).]

CONTROL VALVE

The control valve assembly consists of many precision parts and requires extreme care when it has to be removed and serviced. It is good practice to place parts in a part rack so that they can be reassembled in valve body in their proper positions. Added care should also be exercised to prevent springs and other small parts from being scattered and lost.

Before assembly, dip all parts in clean automatic transmission fluid and check to be certain that they are free of lint and other minute particles. If clutch or band is burnt or if becomes fouled, the control valve assembly should be disassembled and flushed.

Disassembly

1. Remove bolts and nuts which retain oil strainer. Bolts may be removed with a screwdriver, but it is recommended that Hexagon Wrench HT61000800 and Spinner Handle HT62350000 be used. See Figure AT-101.

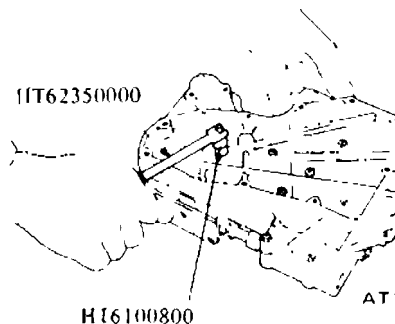


Fig. AT-101 Disassembling valve body

2. Remove attaching bolts. With bolts removed, lower valve body, separate plate, and upper valve body are free for removal. See Figure AT-102

Note: Do not allow orifice check


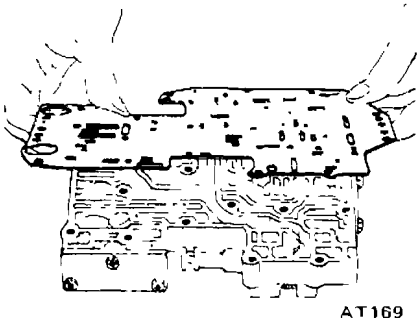


Fig. AT-102 Removing separate plate


3. Pull out manual valve as shown in Figure AT-103.

4. Remove side plate. Take out "1st-2nd" shift valve, "2nd-3rd" shift valve, pressure modifier valve and three valve springs. See Figure AT-104.

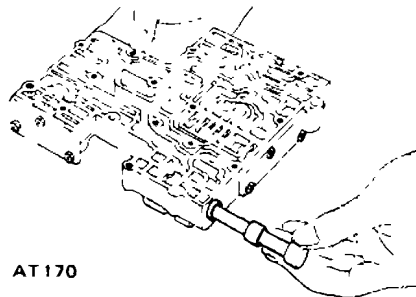

AT 170

Fig. AT-103 Removing manual valve

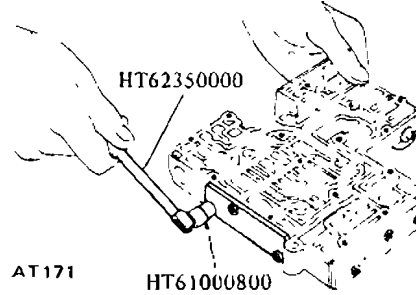

AT 171

Fig. AT-104 Removing side plate

Note: Do not work it off with screwdrivers. To avoid damaging machine screws do not work it off with screwdriver.

5. Remove side plate; pull out pressure regulator valve, second lock valve, pressure regulator plug and two valve springs

6. Remove side plate. With side plate removed, solenoid downshift valve; throttle back-up valve, vacuum throttle valve, "2nd-3rd" tuning valve and three valve springs are free for removal

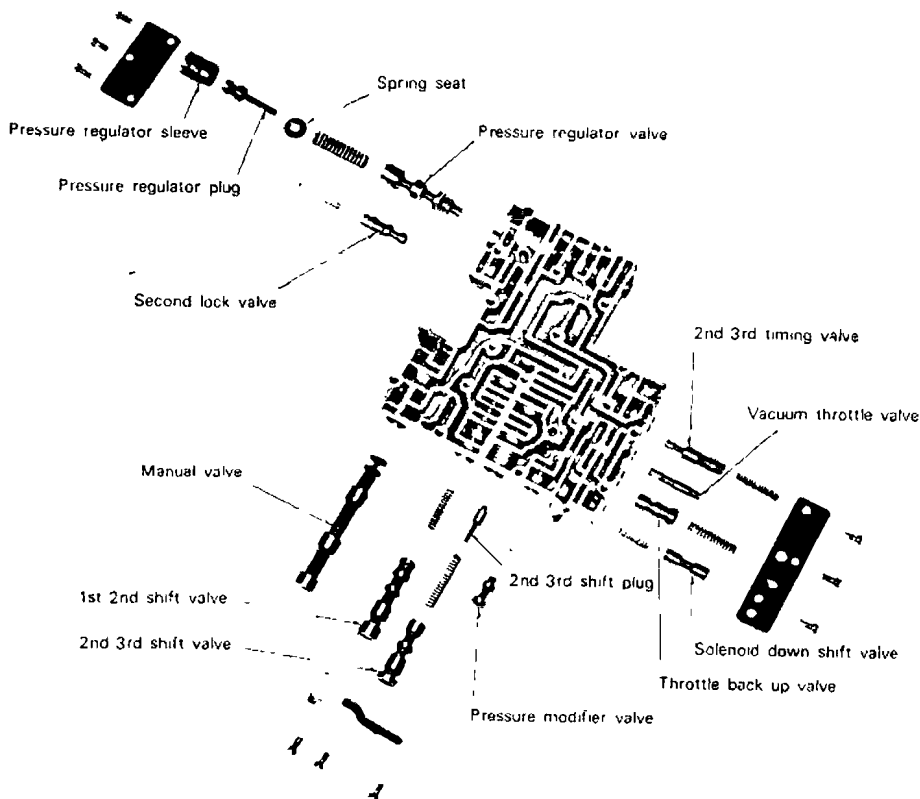


Fig AT 105 Components parts of control valve

Inspection

1. Check valves for sign of burning and, if necessary, replace.
2. Check to be certain that oil strainer is in good condition. If found damaged in any manner, discard.
3. Test valve springs for weakened

tension; if necessary replace.

4. Examine for any sign of damage or score marks on separate plate. If left unheeded, oil will bypass correct oil passages causing many types of abnormalities in the system.


5. Check oil passages in valve body for sign of damage and other conditions which might interfere with proper valve operation.

6. Check bolts for stripped threads. Replace as required.

Automatic Transmission

Valve spring chart

Valve spring	Wire dia. mm (in)	Mean coil dia. mm (in)	No. of active coil	Free length mm (in)	Installed	
					Length mm (in)	Load kg (lb)
Manual detent	1.3 (0.051)	6.0 (0.236)	15.0	32.4 (1.276)	26.5 (1.043)	5.5 (12)
Pressure regulator	1.2 (0.047)	10.5 (0.413)	13.0	43.0 (1.693)	23.5 (0.925)	2.8 (6.2)
Pressure modifier	0.4 (0.0157)	8.0 (0.315)	5.0	18.5 (0.728)	9.0 (0.354)	0.1 (0.2)
1st - 2nd shift	0.6 (0.0236)	6.0 (0.236)	16.0	32.0 (1.260)	16.0 (0.630)	0.625 (1.4)
2nd - 3rd shift	0.7 (0.0276)	6.2 (0.244)	18.0	41.0 (1.614)	17.0 (0.669)	1.40 (3.1)
2nd - 3rd timing	0.7 (0.0276)	5.5 (0.217)	15.0	32.5 (1.280)	27.0 (1.063)	0.55 (1.2)
Throttle back-up	0.8 (0.0315)	6.5 (0.256)	14.0	36.0 (1.417)	18.8 (0.740)	1.92 (4.2)
Solenoid downshift	0.55 (0.0217)	5.0 (0.197)	12.0	22.0 (0.866)	12.5 (0.492)	0.60 (1.3)
Second lock	0.55 (0.0217)	5.0 (0.197)	16.0	33.5 (1.319)	21.0 (0.827)	0.60 (1.3)
Throttle relief	0.9 (0.0354)	5.6 (0.220)	14.0	26.8 (1.055)	19.0 (0.748)	2.19 (4.8)
Orifice check	0.23 (0.009)	4.77 (0.188)	12.0	15.5 (0.610)	11.5 (0.453)	0.01 (0.02)
Primary governor	0.45 (0.0177)	8.3 (0.327)	5.0	21.8 (0.858)	7.5 (0.295)	0.215 (0.5)
Secondary governor	0.7 (0.0276)	8.5 (0.335)	5.5	25.2 (0.992)	10.5 (0.413)	1.10 (2.4)

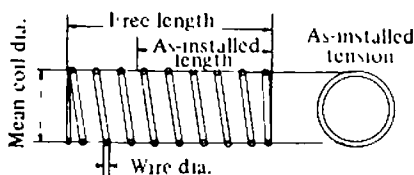

Assembly

Assemble in reverse order of disassembly. However, observe the following assembly notes. Refer to "Valve Spring Chart" and illustration in as-


ifications when designated.

1. Slide valve into valve body and particularly careful that they are forced in any way.
2. Install side plates using Tor-

Automatic Transmission

Tightening torque:

0.25 to 0.35 kg-m
(1.9 to 2.5 ft-lb)

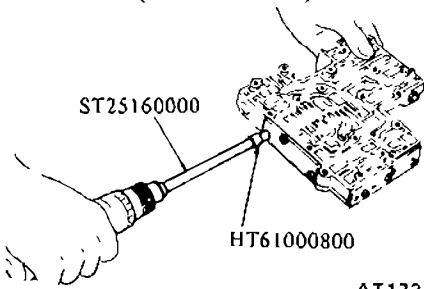

AT173

Fig. AT-107 Installing side plate

3. Install orifice check valve, valve spring, throttle relief valve spring and steel ball in valve body.

Note: Install check valve and relief spring so that they are properly positioned in valve body.


4. Install upper and lower valves. See Figure AT-108.

Tightening torque:

0.25 to 0.35 kg-m
(1.8 to 2.5 ft-lb)

Reamer bolt tightening torque:

0.5 to 0.7 kg-m
(3.6 to 5.1 ft-lb)

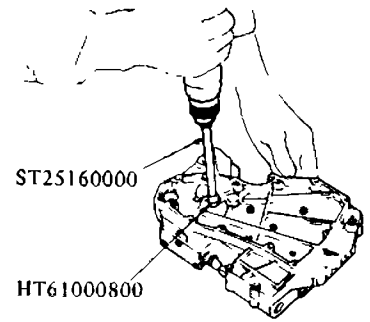

AT174

Fig. AT-108 Installing valve body

5. Install oil strainer.

Tightening torque:

0.25 to 0.35 kg-m
(1.8 to 2.5 ft-lb)

TROUBLE DIAGNOSIS AND ADJUSTMENT

CONTENTS

INSPECTION AND ADJUSTMENT BEFORE TROUBLE DIAGNOSIS	AT-48
TESTING INSTRUMENT FOR INSPECTION ..	AT-48
CHECKING OIL LEVEL	AT-48
INSPECTION AND REPAIR OF OIL LEAKAGE	AT-49
CHECKING ENGINE IDLING REVOLUTION	AT-49
CHECKING AND ADJUSTING KICKDOWN SWITCH AND DOWNSHIFT SOLENOID ..	AT-49
INSPECTION AND ADJUSTMENT OF MANUAL LINKAGE	AT-49
CHECKING AND ADJUSTING INHIBITOR SWITCH	AT-49
STALL TEST	AT-50
STALL TEST PROCEDURES	AT-50
JUDGEMENT	AT-50

ROAD TEST	AT-50
CAR SPEED AT GEAR SHIFT	AT-50
CHECKING SPEED CHANGING CONDITION	AT-50
CHECKING ITEMS DURING SPEED CHANGE	AT-50
SHIFT SCHEDULE	AT-50
LINE PRESSURE TEST	AT-50
LINE PRESSURE (governor feed pressure) ..	AT-50
JUDGEMENT IN MEASURING LINE PRESSURE	AT-50
TROUBLE SHOOTING CHART	AT-50
INSPECTING ITEMS	AT-50
TROUBLE SHOOTING CHART FOR 3N71B AUTOMATIC TRANSMISSION	AT-50
TROUBLE SHOOTING GUIDE FOR 3N71B AUTOMATIC TRANSMISSION	AT-50

Since most automatic transmission troubles can be repaired by simple adjustment, do not disassemble immediately.

Firstly inspect and adjust the automatic transmission in place utilizing the "Trouble Shooting Chart".

If the trouble can not be solved by this procedure, remove and disassemble the automatic transmission. It is advisable to check, overhaul and repair each part in the order listed in the "Trouble Shooting Chart".

1. In the "Trouble Shooting Chart" the diagnosis items are arranged according to difficulty from easy to difficult, therefore please follow these items. The transmission should not be removed, unless necessary.

2. Tests and adjustments should be made on the basis of standard values and the data should be recorded.

INSPECTION AND ADJUSTMENT BEFORE TROUBLE DIAGNOSIS

TESTING INSTRUMENT FOR

3. Oil pressure gauge

It is convenient to install these instruments in a way that allows measurements to be made from the driver's seat.

CHECKING OIL LEVEL

In checking the automatic transmission the oil level and the condition of oil around the oil level gauge should be examined every 5,000 km (3,000 miles). This is an easy and effective trouble shooting procedure since some changes in oil condition are often linked with developed troubles.

For instance:

Lack of oil causes defective operation by making the clutches and brakes slip, resulting in severe wear.

This is because the oil pump sucks air causing oil foaming, thus rapidly deteriorating the oil quality and producing sludge and varnish.

Excessive oil is also bad because of oil foaming caused by the gears stirring up the oil. During high speed driving excessive oil in the transmission often blows out from the breather

ing temperatures [oil temperature to 80°C (122 to 176°F). Approximately ten-minute of operation raise the temperature to this range and engine idling conditions are stabilized. Then, apply the brakes, move the transmission shift lever through all drive positions and place in "park" "P" position. In this inspection, the car must be placed on a level surface.

The amount of the oil varies with the temperature. As a rule the oil level must be measured after its temperature becomes sufficiently high

1. Fill the oil to the line "H". The difference of capacities between the "H" and "L" is approximately 1 liter (1/4 U.S.pt., 1/2 Imp.pt.) therefore, do not to fill beyond the line "H".

2. When topping-up and changing oil, care should be taken to prevent mixing the oil with dust and water.

Inspecting oil condition

The condition of oil sticking to the level gauge indicates whether to overhaul and repair the transmission or look for the defective part.

If the oil has deteriorated

In these cases, the transmission must be replaced.

Notes:

- In checking oil level, use special paper cloth to handle the level gauge and be careful not to let the scraps of paper and cloth stick to the gauge.
- Insert the gauge fully and take it out quickly before splashing oil adheres to the gauge. Then observe the level.
- Use automatic transmission fluid having "DEXRON" identifications only in the 3N71B automatic transmission.
- Pay attention because the oil to be used differs from that used in the Nissan Full Automatic Transmission 3N71A. Never mix the oils.

INSPECTION AND REPAIR OF OIL LEAKAGE

When oil leakage takes place, the portion near the leakage is covered with oil, presenting difficulty in detecting the spot. Therefore, the places where oil seals and gaskets are equipped are enumerated below

- Converter housing
 - Rubber ring of oil pump housing.
 - Oil seal of oil pump housing.
 - Oil seal of engine crankshaft.
 - Bolts of converter housing to case.
- Transmission and rear extension
 - Junction of transmission and rear extension.
 - Oil cooler tube connectors.
 - Oil pan.
 - Oil-pressure inspection holes (Refer to Figure AT-112.).
 - Mounting portion of vacuum diaphragm and downshift solenoid.
 - Breather and oil charging pipe.
 - Speedometer pinion sleeve.
 - Oil seal of rear extension.

To exactly locate the place of oil leakage, proceed as follows:

- Place the vehicle in a pit, and by sampling the leaked oil, determine if it is the torque converter oil. The torque converter oil has a color like red wine, so it is easily distinguished from engine oil or gear oil

- Wipe off the leaking oil and dust and detect the spot of oil leakage. Use nonflammable organic solvent such as carbon tetrachloride for wiping.

- Raise the oil temperature by operating the engine and shift the lever to "D" to increase the oil pressure. The spot of oil leakage will then be found more easily.

Note: As oil leakage from the breather does not take place except when running at high speed, it is impossible to locate this leakage with vehicle stationary.

CHECKING ENGINE IDLING REVOLUTION

The engine idling revolution should be properly adjusted.

If the engine revolution is too low, the engine does not operate smoothly, and if too high, a strong shock or creep develops when changing over from "N" to "D" or "R"

CHECKING AND ADJUSTING KICKDOWN SWITCH AND DOWNSHIFT SOLENOID

When the kickdown operation is not made properly or the speed changing point is too high, check the kickdown switch, downshift solenoid, and wiring between them. When the ignition key is positioned at the 1st stage and the accelerator pedal is depressed deeply, the switch contact should be closed and the solenoid should click. If it does not click, it indicates a defect. Then check each part with the testing instruments. See Figure AT-109

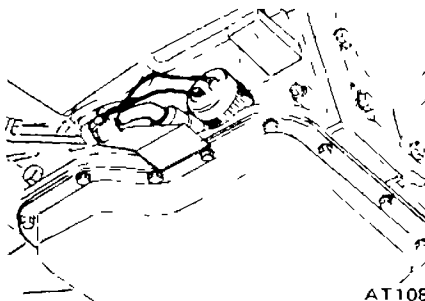


Fig AT-109 Downshift solenoid

Note: Watch for oil leakage from transmission case.

INSPECTION AND ADJUSTMENT OF MANUAL LINKAGE

The adjustment of manual linkage is equally important as "Inspection of Oil Level" for the automatic transmission. Therefore, great care should be exercised because incorrect adjustment will result in the breakdown of the transmission.

Inspection

Pull the selector lever toward you and turn it as far as "P" to "1" range, where clicks will be felt by the hand. This is the detent of manual valve in the valve body, and indicates the correct position of the lever.


Inspect whether the pointer of selector dial corresponds to this point, and also whether the lever comes in alignment with the stepping of position plate when it is released

Adjustment

This procedure can be accomplished by referring to page AT-34 for Removal and Installation

CHECKING AND ADJUSTING INHIBITOR SWITCH

The inhibitor switch lights the reverse lamp in the range "R" of the transmission operation and also rotates the starter motor in the ranges "N" and "P".

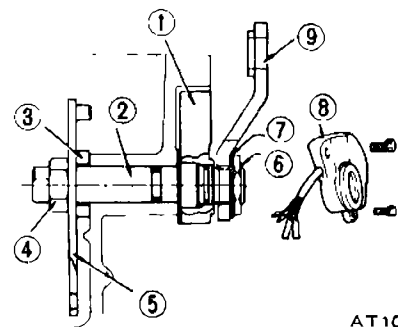

- | | |
|--------------------|----------------------|
| 1 Inhibitor switch | 6 Nut |
| 2 Manual shaft | 7 Washer |
| 3 Washer | 8 Inhibitor switch |
| 4 Nut | 9 Range select lever |
| 5 Manual plate | |

Fig AT-110 Construction of inhibitor switch

Automatic Transmission

Check whether the reverse lamp and the starter motor operate normally in these ranges. If there is any trouble, first check the linkage. If no defect is found in the linkage, check the inhibitor switch.

Separate the manual lever from the remote control selector rod and turn the range select lever to "N".

Note: In the position "N" the slot of the manual shaft is vertical.

Using the tester, check the two black-yellow (BY) wires from the inhibitor switch in the ranges "N" and "P" and the two red-black (RB) wires in the range "R" for continuity. Turn range select lever in both directions from each lever set position and check each continuity range. It is normal if the electricity is on while the lever is within an angle of about 3° on both sides from each lever set line. However, if its continuity range is obviously unequal on both sides, adjustment is required.

If any malfunction is found, unscrew the fastening nut of the range selector lever and two fastening bolts of the switch body and then remove the machine screw under the switch body. Adjust the manual shaft correctly to the position "N" by means of the selector lever. (When the slot of the shaft becomes vertical, the detent works to position the shaft correctly with a clicking sound.)

Move the switch slightly aside so that the screw hole will be aligned with the pin hole of the internal rotor combined with the manual shaft and check their alignment by inserting a 1.5 mm (0.0591 in) diameter pin into the holes. If the alignment is correct, fasten the switch body with the bolts, pull out the pin, tighten up the screw in the hole, and fasten the selector lever as before. Check the continuity again with the tester. If the malfunction still remains, replace the inhibitor switch.

STALL TEST

vehicle is held in a stalled condition. The carburetor is in full throttle operation with the selector lever in ranges "D", "2" and "1" respectively. Compare the measured results with the standard values.

Components to be tested and test items

1. Clutches, brake and band in transmission for slipping
2. Torque converter for proper functioning
3. Engine for overall properly

STALL TEST PROCEDURES

Before testing, check the engine oil and torque converter oil, warm up the engine cooling water to suitable temperature by running at 1,200 rpm with the selector lever in the range "P" for several minutes. Warm up the torque converter oil to suitable temperature [60 to 100°C (140 to 212°F)].

1. Mount the engine tachometer at a location that allows good visibility from the driver's seat and put a mark on specified revolutions on the meter
2. Secure the front and rear wheels with chocks and apply the hand brake. Be sure to depress the brake pedal firmly with the left foot before depressing the accelerator pedal.
3. Throw the selector lever into the range "D".
4. Slowly depress the accelerator pedal until the throttle valve is fully opened. Quickly read and record the engine revolution when the engine begins to rotate steadily and then release the accelerator pedal.
5. Shift the selector lever to "N" and operate the engine at approximately 1,200 rpm for more than one minute to cool down the torque converter oil and coolant.
6. Make similar stall tests in ranges "2", "1" and "R".

Note: The stall test operation as specified in item (4) should be made within five seconds. If it takes too

test for the four ranges "D", "2", "1" and "R".

JUDGEMENT

1. High stall revolution more than standard revolution

If the engine revolution in stalled condition is higher than the standard values, it indicates that one or more clutches in the transmission are slipping and, therefore, no further test is required.

For the following abnormalities, the respective causes are presumed

- High rpm in all ranges . . . Low oil pressure
- High rpm in "D", "2" and "1" . . . normal rpm in "R" . . . Rear clutch slipping
- High rpm in "D" and "2" . . . normal rpm in "1" . . . One-way clutch slipping
- High rpm in "R" only . . . Front clutch or low and reverse brake slipping

To determine which is slipping, front clutch or low and reverse brake, a road test is needed.

If, while coasting, after starting with the lever in "1" range, engine braking does not work properly, low and reverse brake is slipping. Otherwise, the front clutch is slipping.

Slipping of the band brake is difficult to ascertain. However, if it occurs with the lever in "2" range, engine revolution increases up to the same level as in "1st" range. It is impossible to check it in the stall test.

2. Standard stall revolution

If the engine revolution in stalled condition is within the standard values, the control elements are normally operating in the ranges "D", "2", "1" and "R".

Also, the engine and one-way clutch of the torque converter are normal in performance and operation.

The one-way clutch of the torque converter, however, sometimes sticks. This is determined in the road test.

3. Lower stall revolution than standard

values, it indicates that the engine is in abnormal condition or the torque converter's one-way clutch is slipping.

4. Others

(1) If the accelerating performance is poor until vehicle speed of approximately 50 km/h (30 MPH) is attained and then normal beyond that speed, it can be judged that the torque converter's one-way clutch is slipping.

(2) If the torque converter's one-way clutch sticks, vehicle speed can not exceed approximately 80 km/h (50 MPH) in the road test. In such a case, the torque converter oil temperature rises abnormally and so special care is required.

(3) If the transmission does not operate properly at all vehicle speeds, it indicates poor engine performance.

ROAD TEST

An accurate knowledge of the automatic transmission is required for an exact diagnosis.

It is recommended that a diagnosis guide chart with the standard vehicle speeds for each stage of the up- and down-shiftings be prepared. Measured vehicle speeds are to be filled in the adjoining column after each testing.

Also it is advisable to mount a stopper for positioning the throttle opening.

CAR SPEED AT GEAR SHIFT

Throttle opening (-mmHg)	Gear shift	Car speed ** km/h (MPH)	Propeller shaft rpm
Kickdown (0)	D ₁ → D ₂	57 to 73 (35 to 45)	1,720 to 2,220
	D ₂ → D ₃	101 to 117 (63 to 73)	3,060 to 3,560
	D ₃ → D ₂	106 to 90 (66 to 56)	3,220 to 2,720
	D ₂ → D ₁	57 to 41 (35 to 25)	1,730 to 1,230
Half throttle (200)	D ₁ → D ₂	13 to 30 (8 to 19)	400 to 900
	D ₂ → D ₃	47 to 63 (29 to 39)	1,410 to 1,910
	D ₃ → D ₂ or	38 to 22 (24 to 14)	1,160 to 660
	D ₃ → D ₁		
	D ₂ → D ₁	23 Max. (14 Max.)	700 Max.
Full throttle (0)	I ₂ → I ₁ *	59 to 43 (37 to 27)	1,800 to 1,300
Minimum throttle (450)	I ₂ → I ₁ *	59 to 43 (37 to 27)	1,800 to 1,300

*1 Reduce the speed by shifting to "I" range from "D" range (output shaft 2,000 rpm).

Note: Car speed can be calculated by the following formula;

$$V = \frac{2 \times \pi \times r \times N_p \times 60}{R_1 \times 1,000}$$

where, V = Car speed (km/h)

N_p = Propeller shaft revolution (rpm)

R₁ = Final gear ratio

r = Tire effective radius (m)

π = The ratio of circumference of a circle to its diameter: 3.14

** R_F = 3.545

r = 0.306

SHIFT SCHEDULE

Fig AT 112 Measuring line press

LINE PRESSURE (GOVERNOR FEED PRESSURE)

Range	Throttle opening Unit: mmHg	At cut back point [under approximately 15 km/h (9 MPH)] Unit: kg/cm ² (psi)	After cut back [over approximately 40 km/h (25 MPH)] Unit: kg/cm ² (psi)
"D"	Full throttle 0	11.0 to 13.0 (156 to 185)	7.5 to 8.5 (107 to 121)
	Minimum throttle 450	3.0 to 4.0 (43 to 57)	3.0 to 4.0 (43 to 57)
"2"	Full throttle 0	12.0 to 14.0 (171 to 199)	7.5 to 9.0 (107 to 128)
	Minimum throttle 450	7.5 to 14.0 (107 to 199)	7.5 to 9.0 (107 to 128)
"R"	Full throttle 0	21.0 to 24.0 (299 to 341)	21.0 to 24.0 (299 to 341)
	Minimum throttle 450	3.0 to 7.5 (43 to 107)	3.0 to 7.5 (43 to 107)

- Notes: a. The line pressure during idling corresponds to the oil pressure before cut down at minimum throttle.
b. The oil pressure "After cut back" means that after the pressure modifier valve has operated.

JUDGEMENT IN MEASURING LINE PRESSURE

1. Low idling line pressure in the ranges "D", "2", "1", "R" and "P".

This can be attributed to trouble in the pressure supply system or too low output of power caused by

- (1) A worn oil pump
- (2) An oil pressure leak in the oil pump, valve body or case
- (3) A sticking regulator valve

2. Low idling, line pressure in certain ranges only

This is presumably caused by an oil leak in the devices or circuits connected to the relevant ranges.

- (1) When there is an oil leak in the rear clutch and governor, the line pressure in "D", "2" and "1" are low but the pressure is normal in "R".
- (2) When an oil leak occurs in the low and reverse brake circuit, the line pressure in "R" and "P" are low but the pressure is normal in "D", "2" and "1".

3. High idling line pressure

This is presumably caused by an increased vacuum throttle pressure owing to a leak in the vacuum tube or diaphragm or by an increased line

pressure due to a sticking regulator valve.

Vacuum leakage is checked by directly measuring the negative pressure after removing the vacuum pipe.

A puncture of the vacuum diaphragm can be easily ascertained because the torque converter oil is absorbed into the engine and the exhaust pipe emits white smoke.

4. Items to be checked when the line pressure is increasing

In this check, the line pressure should be measured with vacuums of 450 mmHg and 0 mmHg in accordance with the stall test procedure.

(1) If the line pressure do not increase despite the vacuum decrease, check whether the vacuum rod is incorporated.

(2) If the line pressure do not meet the standard, it is caused mostly by a sticking pressure regulating valve, pressure regulating valve plug, or amplifier

TROUBLE-SHOOTING CHART**INSPECTING ITEMS**

1. Inspection with automatic transmission on vehicle

- A Oil level
- B Range select linkage
- C Inhibitor switch and wiring
- D Vacuum diaphragm and piping
- E Downshift solenoid, kickdown switch and wiring
- F Engine idling rpm
- G Oil pressure (throttle)
- H Engine stall rpm
- I Rear lubrication
- J Control valve (manual)
- K Governor valve
- L Band servo
- M Transmission air check
- N Oil quantity
- O Ignition switch and starter motor
- P Engine adjustment and brake inspection

2. Inspection after inspecting automatic transmission on vehicle.

- m Rear clutch
- n Front clutch
- q Band brake
- r Low and reverse brake
- s Oil pump
- t Leakage of oil passage
- u One-way clutch of torque converter
- v One-way clutch of transmission
- w Front clutch check ball
- x Parking linkage
- y Planetary gear

Automatic Transmission

TROUBLE-SHOOTING CHART FOR 3N71B AUTOMATIC TRANSMISSION

(The number shown below indicates the sequence in which the checks should be taken up.)

Trouble	A B C D	E F G H	I J K L	M N O P	m n q r	s t u v	w x y
Engine does not start in "N", "P" ranges.	. 2 3 .			. . 1 .			. .
Engine starts in other range than "N" and "P".	. 1 2 .						. .
Sharp shock in shifting from "N" to "D" range.	. . . 2	. 1 3 .	. 4 . .		⑤		. .
Vehicle will not run in "D" range (but runs in "2", "1" and "R" ranges).	. 1 . .	. . 2 .	. 3 . .			. . . ④ .	. .
Vehicle will not run in "D", "1", "2" ranges (but runs in "R" range). Clutch slips. Very poor acceleration.	1 2 . .	. . 4 .	. 5 . .	6 3 . 7	⑧	. ⑨	
Vehicle will not run in "R" range (but runs in "D", "2" and "1" ranges.) Clutch slips. Very poor acceleration.	1 2 . .	. . 3 .	. 5 . .	6 4 . .	⑨⑧. ⑦ .	. ⑩ . . .	⑪ .
Vehicle will not run in any range.	1 2 . .	. . 3 .	. 5 . .	6 4 . .		⑦⑧ . . .	. ⑨ .
Clutches or brakes slip somewhat in starting.	1 2 . 6	. . 3 .	. 5 . .	7 4 . .		⑧⑨ . . .	
Vehicle runs in "N" range.	. 1 . .		. 3 . .	. 2 . .	④		
Maximum speed not attained. Acceleration poor.	1 2 . .	. . 4 5	. 7 . 6	. 3 . 8	⑪⑫⑨⑩	⑬	
Vehicle braked by throwing lever into "R" range.			. . . 3	2 1 . .	④. ⑤ .		. ⑥ .
Excessive creep.		. 1 . .					
No creep at all.	1 2 . .	. 3 . .	. 5 . .	. 4 . .	⑧⑨ . . .	⑥⑦ . . .	
Failure to change gear from "2nd" to "3rd".	. 1 . 2	3 . . .	. 5 6 8	7 4 . .	. . ⑨ .	. ⑩ . . .	
Failure to change gear from "1st" to "2nd".	. 1 . 2	3 . . .	. 5 6 8	7 4 . .	. ⑨ . . .	. ⑩ . . .	⑪ . .
Too high a gear change point from "1st" to "2nd", from "2nd" to "3rd".	. . . 1	2 . 3 .	. 5 6 .	. 4 . .		. ⑦ . . .	
Gear change directly from "1st" to "3rd" occurs.			. 2 4 .	3 1 . .	. . ⑤ .	. ⑥ . . .	

Automatic Transmission

Trouble	A B C D	E F G H	I J K L	M N O P	m n q r	s t u v	w x y
Too sharp a shock in change from "1st" to "2nd".	. . . 1	. . . 2	. 4 . 5	. 3 . .	. . ⑥ .		
Too sharp a shock in change from "2nd" to "3rd".	. . . 1	2 . 3 .	. 3 . 5	4 . . .	. ⑥ . .		
Almost no shock or clutches slipping in change from "1st" to "2nd".	1 2 . 3	. . 4 .	. 6 . 8	7 5 . .	. . ⑨ .	. ⑩ . .	
Almost no shock or slipping in change from "2nd" to "3rd". Engine races extremely.	1 2 . 3	. . 4 .	. 6 . 8	7 5 . .	. ⑨ . .	. ⑩ . .	⑪ . .
Vehicle braked by gear change from "1st" to "2nd".			. 2 . .	. 1 . .	. ④ . ③	. . . ⑤	
Vehicle braked by gear change from "2nd" to "3rd".			. 3 . 2	. 1 . .	. . ④ .		
Failure to change gear from "3rd" to "2nd".	. . . 1		. 3 4 6	5 2 . .	. ⑦ ⑧ .	. ⑨ . .	
Failure to change gear from "2nd" to "1st" or from "3rd" to "1st".	. . . 1		. 3 4 6	5 2 . .	. . ⑦ .	. . . ⑧	
Gear change shock felt during deceleration by releasing accelerator pedal.	. 1 . 2	3 . 4 .	. 5 6 .			. ⑦ . .	
Too high a change point from "3rd" to "2nd", from "2nd" to "1st".	. 1 . 2	3 . 4 .	. 5 6 .			. ⑦ . .	
Kickdown does not operate when depressing pedal in "3rd" within kickdown vehicle speed.	. . . 2	1 . . .	. 4 5 .	. 3 . .	. . ⑥ .	. ⑦ . .	
Kickdown operates or engine over-runs when depressing pedal in "3rd" beyond kickdown vehicle speed limit	. 1 . 2	. . 3 .	. 5 6 .	7 4 . .	. ⑧ . .	. ⑨ . .	
Races extremely or slips in changing from "3rd" to "2nd" when depressing pedal	. . . 1	. . 2 .	. 4 . 6	5 3 . .	. ⑦ ⑧ .	. ⑨ . .	⑩ . .
Failure to change from "3rd" to "2nd" when changing lever into "2" range.	. 1 . .	. . 2 .	. 4 . 5	. 3 . .	. . ⑥ .	. ⑦ . .	
Gear change from "2nd" to "1st" or from "2nd" to "3rd" in "2" range.	. 1 . .	. . 2 .	. 3 . .				

Automatic Transmission

Trouble	A B C D	E F G H	I J K L	M N O P	m n q r	s t u v	w x y
No shock at change from "1" to "2" range or engine races extremely.	1 2 . 3	. 4 . 1	. 6 . .	7 5 . .	. . ⑨ .	⑩ . . .	. .
Failure to change from "3rd" to "2nd" when shifting lever into "1" range.	. 1 . .	. . 2 .	. 4 5 7	6 3 . .	. ⑧ ⑨ .	. ⑩ . .	. .
Engine brake does not operate in "1" range.	. 1 . .	. . 2 .	. 4 . .	5 3 . .	. . . ⑥	. ⑦ .	. .
Gear change from "1st" to "2nd" or from "2nd" to "3rd" in "1" range.	. 1 . .		. 2 . .			. ③ . .	. .
Does not change from "2nd" to "1st" in "1" range.	1 2 . .		. 4 5 6	7 3 . .	. . . ⑧	⑨ . .	. .
Large shock changing from "2nd" to "1st" in "1" range.	. . . 1	. . . 2	. 4 . .	. 3 . .	. . . ⑤		. .
Vehicle moves when changing into "P" range or parking gear does not disengage when shifted out of "P" range.	. 1 . .						. ②
Transmission overheats.	1 . . .	. . 3 4	2 6 . 8	7 5 . .	. ⑨ ⑩ ⑪	⑫ ⑬ ⑭ .	. . ①
Oil shoots out during operation. White smoke emitted from exhaust pipe during operation.	1 . . 3	. . 5 6	2 7 . .	8 4 . .	. ⑨ ⑩ ⑪	⑫ ⑬ ⑭ .	. . ①
Offensive smell at oil charging pipe.	1 . . .			. 2 . .	③ ④ ⑤ ⑥	⑦ ⑧ ⑨ .	. . ①
Transmission noise in "P" and "N" ranges.	1 . . .	. . 2 .				③ . . .	. .
Transmission noise in "D", "2", "1" and "R" ranges.	1 . . .	. . 2 .			③ . . .	④ . . ⑤	. . ①

TROUBLE-SHOOTING GUIDE FOR 3N71B AUTOMATIC TRANSMISSION

Order	Test item	Procedure
Checking	1. Oil level gauge 2. Downshift solenoid 3. Manual linkage 4. Inhibitor switch 5. Engine idling rpm. 6. Vacuum pressure of vacuum pipe. 7. Operation in each range. 8. Creep of vehicle.	Check gauge for oil level and leakage before and after each test. Check for sound of operating solenoid when depressing accelerator pedal fully with ignition key "ON". Check by shifting into "P", "R", "N", "D", "2" and "1" ranges with selector lever. Check whether starter operates in "N" and "P" ranges only and whether reverse lamp operates in "R" range only. Check whether idling rpm meet standard. Check whether vacuum pressure is more than 450 mmHg in idling and whether it decreases with increasing rpm. Check whether transmission engages positively by shifting "N"→"D", "N"→"2", "N"→"1" and "N"→"R" range while idling with brake applied. Check whether there is any creep in "D", "2", "1" and "R" ranges.
Stall test	1. Oil pressure before testing. 2. Stall test. 3. Oil pressure after testing	Measure line pressures in "D", "2", "1" and "R" range while idling. Measure engine rpm and line pressure in "D", "2", "1" and "R" ranges during full throttle operation. Notes: a. Temperature of torque converter oil used in test should be from 60° to 100°C (140° to 212°F) i.e., sufficiently warmed up but not overheated. b. To cool oil between each stall test for "D", "2", "1" and "R" ranges, idle engine, i.e., rpm at about 1,200 rpm for more than 1 minute in "P" range. Measurement time must not be more than 5 seconds. Same as item 1.
Road test	1. Slow acceleration, 1st→2nd 2nd→3rd 2. Quick acceleration, 1st→2nd 2nd→3rd 3. Kick-down operation, 3rd→2nd or 2nd→1st	Check vehicle speeds and engine rpm in shifting up 1st→2nd range and 2nd→3rd range while running with lever in "D" range and engine vacuum pressure of about 200 mmHg. Same as item 1 above except with engine vacuum pressure of 0 mmHg (i.e., in position just before kickdown.). Check whether the kickdown operates and measure the time delays while running at 30, 40, 50, 60, 70 km/h (19, 25, 31, 38, 44 MPH) in "D₃" range.

Automatic Transmission

Order	Test item	Procedure
	4. Shift down, $D_3 \rightarrow D_2 \rightarrow D_1$ 5. Shift down, $D_3 \rightarrow 1_2 \rightarrow 1_1$ 6. Shift down, $D_3 \rightarrow 2$ 7. Shift up, $1_1 \rightarrow 1_2$ 8. Shift up or down when starting in "2" range. 9. Parking.	Check vehicle speeds and engine rpm in shifting down from 3rd $\rightarrow$ 2nd $\rightarrow$ 1st (sequentially) while coasting with accelerator pedal released in "D₃" range and engine vacuum pressure of about 450 mmHg. Check for shifting down $D_3 \rightarrow 1_2$ and engine braking, and further for shifting down $1_2 \rightarrow 1_1$ and engine braking, after shifting the lever into "1" range with the accelerator pedal released and the engine vacuum pressure of 0 mmHg while driving at about 50 km/h (31 MPH) in "D₃" range. Check for quick shifting down $D_3 \rightarrow 2$ and engine braking after shifting the lever into "2" range while driving at about 50 km/h (31 MPH) in "D₃" range. Further, check for locking of the transmission in 2nd gear ratio regardless of vehicle speed. Check for failure of the transmission to shift up during acceleration, when starting in "1" range. Check the transmission for not shifting up or down during acceleration or deceleration, when starting in "2" range. Confirm that vehicle will not move on grade when shifted to "P" range.
Others	Abnormal shock, oil leakage.	Enter into record conditions observed during these tests, such as gear noise, abnormal clutch noise and acceleration performance.

SERVICE DATA AND SPECIFICATIONS

General specifications

Automatic transmission model	3N71B
Stall torque ratio	2.0 : 1
Transmission gear ratio	
1st	2.458
2nd	1.458
Top	1.000
Reverse	2.182
Oil	Automatic transmission fluid "Dexron" type
Oil capacity	5.5 liters (5 $\frac{3}{4}$ US qts, 4 Imp qts) Approximately 2.7 liters (2 $\frac{3}{4}$ US qts, 2 $\frac{3}{8}$ Imp qts) in torque converter

Specifications and adjustment

Automatic transmission assembly	
Model code number	X2710
Torque converter assembly	
Stamped mark on the T/C	20-D
Front clutch	
Number of drive plates	3
Number of driven plates	3
Clearance mm (in)	1.6 to 1.8 (0.063 to 0.071)
Thickness of retaining plate mm (in)	10.6 (0.417)
	10.8 (0.425)
	11.0 (0.433)
	11.2 (0.441)
	11.4 (0.449)
	11.6 (0.457)
Rear clutch	
Number of drive plates	5
Number of driven plates	5
Clearance mm (in)	1.0 to 1.5 (0.039 to 0.059)
Thickness of retaining plate mm (in)	8.35 (0.329)

Automatic Transmission

Low & reverse brake

Number of drive plates		5
Number of driven plates		5
Clearance	mm (in)	0.80 to 1.05 (0.0315 to 0.0413)
Thickness of retaining plate	mm (in)	7.8 (0.307)
		8.0 (0.315)
		8.2 (0.323)
		8.4 (0.331)
		8.6 (0.339)
		8.8 (0.346)

Brake band

Piston size	mm (in)	
Big dia.		72 (2.83)
Small dia.		44 (1.73)

Control valve assembly

Stamped mark on strainer		N5
--------------------------	-------	----

Governor assembly

Stamped mark on governor body		M33
-------------------------------	-------	-----

Engine idling and stall revolution

Idling revolution	rpm		700 at "D" position
Stall revolution	rpm		2,100 to 2,400

Tightening torque

kg·m(ft·lb)

Drive plate to crankshaft		14.0 to 16.0	(101 to 116)
Drive plate to torque converter		4.0 to 5.0	(29 to 36)
Converter housing to engine		4.0 to 5.0	(29 to 36)
Transmission case to converter housing		4.5 to 5.5	(33 to 44)
Transmission case to rear extension		2.0 to 2.5	(14 to 18)
Oil pan to transmission case		0.5 to 0.7	(3.6 to 5.1)
Servo piston retainer to transmission case		0.5 to 0.7	(3.6 to 5.1)
Piston stem (when adjusting band brake)		*1.2 to 1.5	(8.7 to 10.8)
Piston stem lock nut		1.5 to 4.0	(11 to 29)
One-way clutch inner race to transmission case		1.3 to 1.8	(9.4 to 13)
Control valve body to transmission case		0.55 to 0.75	(4.0 to 5.4)





Automatic Transmission

Oil strainer to lower valve body	0.25 to 0.35	(1.8 to 2.5)
Governor valve body to oil distributor	0.5 to 0.7	(3.6 to 5.1)
Oil pump housing to oil pump cover	0.6 to 0.8	(4.3 to 5.8)
Inhibitor switch to transmission case	0.5 to 0.7	(3.6 to 5.1)
Manual shaft lock nut	3.0 to 4.0	(22 to 29)
Oil cooler pipe to transmission case	3.0 to 5.0	(22 to 36)
Test plug (oil pressure inspection hole)	1.4 to 2.1	(10 to 15)
Support actuator (parking rod inserting position) to rear extension	0.8 to 1.1	(5.8 to 8.0)





* Turn back two turns after tightening.

Automatic Transmission


 

SPECIAL SERVICE TOOLS

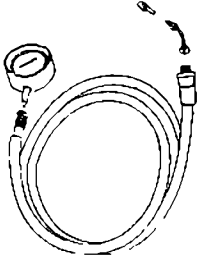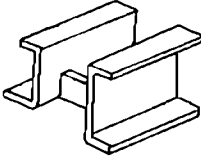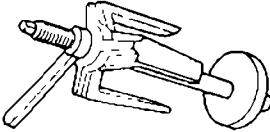No.	Tool number & tool name	Description	For use on	Referen page or figure N
1.	ST2505S001 (ST25050001) Oil pressure gauge set	Use for checking hydraulic pressure  SE 119	3N71B and 3N71A A/T	Fig. AT-6
2.	ST07870000 Transmission case stand	Use for setting transmission  SE 120	3N71B A/T	Page AT-6
3.	ST25850000 Sliding hammers	Use for removing oil pump  SE 121	3N71B and 3N71A A/T	Fig. AT-6
4.	ST25420001 (ST25420000) Clutch spring compressor	Use for assembling or disassembling front and rear clutch  SE 122	3N71B and 3N71A A/T	Fig. AT-6 Fig. AT-6
5.	GG91060000 Torque wrench	Use for tightening correct torque Max. torque: 4.6 kg-m (0.33 ft-lb) Drive angle 3/8" square 	3N71B and 3N71A A/T	Fig. AT-6

   Automatic Transmission

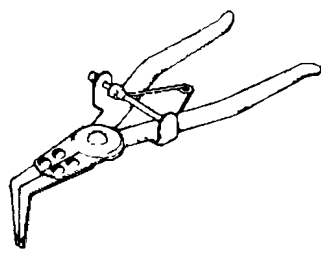No.	Tool number & tool name	Description	For use on	Reference page or figure No.
6.	ST25490000 (ST25512001) Socket extension	Socket extension to connect torque wrench (GC91060000) with ½" square socket wrench  SE124	3N71B A/T	Fig. AT-69
7.	ST25160000 Torque driver	Use for tightening correct torque Max. torque: 1.04 kg-m (90 ft-lb)  SE125	3N71B A/T and 3N71A	Fig. AT-107 Fig. AT-108
8.	HT69860000 Snap ring remover	Use for removing and replacing snap ring  SE126	3N71B and 3N71A A/T	Fig. AT-59
9.	ST25320001 Snap ring remover	Use for removing and replacing snap ring  SE305	3N71B and 3N71A A/T	Fig. AT-79 Fig. AT-86
10.	ST25570001 (ST25570000) Hex-head extension	Use for removing and installing one-way clutch inner race with torque wrench. Drive angle ½" square and 6 mm (across flat width)  SE128	3N71B A/T	Fig. AT-64 Fig. AT-69 Page AT-42

  Automatic Transmission

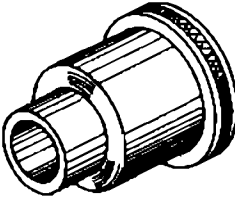No.	Tool number & tool name	Description	For use on	Referen- page or figure N
11.	HT62350000 Spinner handle	Use for disassembling and assembling control valve  SE129	3N71B and 3N71A A/T	Fig. AT- Fig. AT-
12.	HT61000800 Hexagon wrench	Use for disassembling and assembling control valve  SE130	3N71B and 3N71A A/T	Fig. AT- Fig. AT- Fig. AT- Fig. AT-
13.	ST25580000 Oil pump assembling gauge	Use for centering oil pump  SE131	3N71B and 3N71A A/T	Fig. AT- Fig. AT-