

DAS

SECTION

DRIVER ASSISTANCE SYSTEM

CONTENTS

DCA		
BASIC INSPECTION	8	
DIAGNOSIS AND REPAIR WORK FLOW	8	
Work Flow	8	
INSPECTION AND ADJUSTMENT	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT)	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT) : Description	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT) : Special Repair Requirement	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL AS- SEMBLY)	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL AS- SEMBLY) : Description	10	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL AS- SEMBLY) : Special Repair Requirement	10	
ACTION TEST	10	
ACTION TEST : Description	11	
ACTION TEST : Special Repair Requirement (Distance Control Assist)	11	
SYSTEM DESCRIPTION	12	
DISTANCE CONTROL ASSIST SYSTEM	12	
System Diagram	12	
System Description	12	
Component Parts Location	18	
Component Description	18	
DIAGNOSIS SYSTEM (ICC SENSOR INTE- GRATED UNIT)	20	
Diagnosis Description	20	
CONSULT Function (ICC/ADAS)	21	
DIAGNOSIS SYSTEM (ACCELERATOR PEDAL ACTUATOR)	29	
CONSULT Function (ACCELE PEDAL ACT)	29	
DTC/CIRCUIT DIAGNOSIS	31	
C1A00 CONTROL UNIT	31	
Description	31	
DTC Logic	31	
Diagnosis Procedure	31	
Special Repair Requirement	31	
C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2	33	
Description	33	
DTC Logic	33	
Diagnosis Procedure	33	
Special Repair Requirement	33	
C1A03 VEHICLE SPEED SENSOR	35	
Description	35	
DTC Logic	35	
Diagnosis Procedure	35	
Special Repair Requirement	36	
C1A04 ABS/TCS/VDC SYSTEM	37	
Description	37	
DTC Logic	37	
Diagnosis Procedure	37	
Special Repair Requirement	37	
C1A05 BRAKE SW/STOP LAMP SW	39	
Description	39	
DTC Logic	39	
Diagnosis Procedure	39	
Component Inspection (ICC Brake Switch)	42	
Component Inspection (Stop Lamp Switch)	42	

Special Repair Requirement	42	C1A16 RADAR STAIN	71
C1A06 OPERATION SW	44	Description	71
Description	44	DTC Logic	71
DTC Logic	44	Diagnosis Procedure	71
Diagnosis Procedure	44	Special Repair Requirement	71
Component Inspection	45	C1A18 LASER AIMING INCMP	73
Special Repair Requirement	46	Description	73
C1A08 PRESSURE SENSOR	47	DTC Logic	73
Description	47	Diagnosis Procedure	73
DTC Logic	47	Special Repair Requirement	73
Diagnosis Procedure	47	C1A21 UNIT HIGH TEMP	75
Special Repair Requirement	48	Description	75
C1A09 BOOSTER SOLENOID	49	DTC Logic	75
Description	49	Diagnosis Procedure	75
DTC Logic	49	Special Repair Requirement	75
Diagnosis Procedure	49	C1A22 BCU CIRCUIT	77
Component Inspection	50	Description	77
Special Repair Requirement	50	DTC Logic	77
C1A10 RELEASE SWITCH	52	Diagnosis Procedure	77
Description	52	Special Repair Requirement	79
DTC logic	52	C1A24 NP RANGE	81
Diagnosis Procedure	52	Description	81
Component Inspection	53	DTC Logic	81
Special Repair Requirement	54	Diagnosis Procedure	81
C1A11 PRESSURE CONTROL	55	Special Repair Requirement	82
Description	55	C1A28 BCU POWER SUPPLY CIRCUIT,	
DTC Logic	55	C1A29 BCU POWER SUPPLY CIRCUIT2	83
Diagnosis Procedure	55	Description	83
Component Inspection	56	DTC Logic	83
Special Repair Requirement	56	Diagnosis Procedure	83
C1A12 LASER BEAM OFF CENTER	58	Special Repair Requirement	83
Description	58	C1A30 BCU CAN COMM CIRC	85
DTC Logic	58	Description	85
Diagnosis Procedure	58	DTC Logic	85
Special Repair Requirement	58	Diagnosis Procedure	85
C1A13 STOP LAMP RELAY	59	Special Repair Requirement	85
Description	59	C1A31 BCU INTERNAL MALF	86
DTC Logic	59	Description	86
Diagnosis Procedure	59	DTC Logic	86
Component Inspection	64	Diagnosis Procedure	86
Special Repair Requirement	64	Special Repair Requirement	86
C1A14 ECM	66	C1A32 IBA FLAG STUCK	88
Description	66	Description	88
DTC Logic	66	DTC Logic	88
Diagnosis Procedure	66	Diagnosis Procedure	88
Special Repair Requirement	66	Special Repair Requirement	88
C1A15 GEAR POSITION	68	C1A33 CAN TRANSMISSION ERROR	90
Description	68	Description	90
DTC Logic	68	DTC Logic	90
Diagnosis Procedure	68	Diagnosis Procedure	90
Special Repair Requirement	69	Special Repair Requirement	90

C1A34 COMMAND ERROR	92	Diagnosis Procedure	109	
Description	92	Special Repair Requirement	109	A
DTC Logic	92			
Diagnosis Procedure	92			
Special Repair Requirement	92			
C1A35 ACCELERATOR PEDAL ACTUATOR...	94	C1F05 ACCELERATOR PEDAL ACTUATOR		
Description	94	POWER SUPPLY CIRCUIT	111	B
DTC Logic	94	Description	111	
Diagnosis Procedure	94	DTC Logic	111	
Special Repair Requirement	94	Diagnosis Procedure	111	C
		Special Repair Requirement	111	
C1A36 ACCELERATOR PEDAL ACTUATOR		C1F06 CAN CIRCUIT2	113	
CAN COMM	95	Description	113	D
Description	95	DTC Logic	113	
DTC Logic	95	Diagnosis Procedure	113	E
Diagnosis Procedure	95	Special Repair Requirement	113	
Special Repair Requirement	95	C1F07 CAN CIRCUIT1	115	F
C1A37 ACCELERATOR PEDAL ACTUATOR		Description	115	
CAN 2	97	DTC Logic	115	
Description	97	Diagnosis Procedure	115	
DTC Logic	97	Special Repair Requirement	115	G
Diagnosis Procedure	97	U0121 VDC CAN 2	117	
Special Repair Requirement	97	Description	117	
		DTC Logic	117	
C1A38 ACCELERATOR PEDAL ACTUATOR		Diagnosis Procedure	117	H
CAN 1	99	Special Repair Requirement	117	
Description	99	U0126 STRG SEN CAN 1	119	I
DTC Logic	99	Description	119	
Diagnosis Procedure	99	DTC Logic	119	
Special Repair Requirement	99	Diagnosis Procedure	119	J
		Special Repair Requirement	119	
C1A39 STEERING ANGLE SENSOR	101	U0129 BCU CAN 2	121	
Description	101	Description	121	K
DTC Logic	101	DTC Logic	121	
Diagnosis Procedure	101	Diagnosis Procedure	121	
Special Repair Requirement	101	Special Repair Requirement	121	L
C1A40 SYSTEM SWITCH CIRCUIT	103	U0401 ECM CAN 1	123	
Description	103	Description	123	
DTC Logic	103	DTC Logic	123	M
Diagnosis Procedure	103	Diagnosis Procedure	123	
Component Inspection (IBA OFF Switch)	104	Special Repair Requirement	123	
Special Repair Requirement	105	U0402 TCM CAN 1	125	N
C1F01 ACCELERATOR PEDAL ACTUATOR.	106	Description	125	
Description	106	DTC Logic	125	
DTC Logic	106	Diagnosis Procedure	125	
Diagnosis Procedure	106	Special Repair Requirement	125	DAS
Special Repair Requirement	106	U0415 VDC CAN 1	127	
C1F02 ACCELERATOR PEDAL ACTUATOR.	108	Description	127	P
Description	108	DTC Logic	127	
DTC Logic	108	Diagnosis Procedure	127	
Diagnosis Procedure	108	Special Repair Requirement	127	
Special Repair Requirement	108	U0418 BCU CAN 1	129	
C1F03 ACCELERATOR PEDAL ACTUATOR.	109	Description	129	
Description	109	DTC Logic	129	
DTC Logic	109			

Diagnosis Procedure	129	ICC WARNING CHIME CIRCUIT	141
Special Repair Requirement	129	Description	141
U0428 STRG SEN CAN 2	131	Component Function Check	141
Description	131	Diagnosis Procedure	141
DTC Logic	131	Component Inspection	142
Diagnosis Procedure	131	ECU DIAGNOSIS INFORMATION	143
Special Repair Requirement	131	ICC SENSOR INTEGRATED UNIT	143
U1000 CAN COMM CIRCUIT	133	Reference Value	143
ICC SENSOR INTEGRATED UNIT	133	Wiring Diagram - DISTANCE CONTROL ASSIST	
ICC SENSOR INTEGRATED UNIT : Description ..	133	-	147
ICC SENSOR INTEGRATED UNIT : DTC Logic ..	133	Fail-Safe	157
ICC SENSOR INTEGRATED UNIT : Diagnosis		DTC Inspection Priority Chart	158
Procedure	133	DTC Index	158
ICC SENSOR INTEGRATED UNIT : Special Re-		BRAKE BOOSTER CONTROL UNIT	161
pair Requirement	133	Reference Value	161
ACCELERATOR PEDAL ACTUATOR	134	ACCELERATOR PEDAL ACTUATOR	163
ACCELERATOR PEDAL ACTUATOR : Descrip-		Reference Value	163
tion	134	Wiring Diagram - DISTANCE CONTROL ASSIST	
ACCELERATOR PEDAL ACTUATOR : DTC Log-		-	165
ic	134	DTC Inspection Priority Chart	175
ACCELERATOR PEDAL ACTUATOR : Diagnosis		DTC Index	176
Procedure	134	SYMPTOM DIAGNOSIS	177
ACCELERATOR PEDAL ACTUATOR : Special		DISTANCE CONTROL ASSIST SYSTEM	
Repair Requirement	135	SYMPTOMS	177
U1010 CONTROL UNIT (CAN)	136	Symptom Table	177
ICC SENSOR INTEGRATED UNIT	136	SWITCH DOES NOT TURN ON / SWITCH	
ICC SENSOR INTEGRATED UNIT : Description ..	136	DOES NOT TURN OFF	178
ICC SENSOR INTEGRATED UNIT : DTC Logic ..	136	Description	178
ICC SENSOR INTEGRATED UNIT : Diagnosis		Diagnosis Procedure	178
Procedure	136	DCA SYSTEM SETTING CANNOT BE	
ICC SENSOR INTEGRATED UNIT : Special Re-		TURNED ON/OFF FROM THE NAVIGATION	
pair Requirement	136	SCREEN	180
ACCELERATOR PEDAL ACTUATOR	136	Description	180
ACCELERATOR PEDAL ACTUATOR : Descrip-		Diagnosis Procedure	180
tion	136	DCA SYSTEM NOT ACTIVATED (SWITCH IS	
ACCELERATOR PEDAL ACTUATOR : DTC Log-		ON)	182
ic	137	Description	182
ACCELERATOR PEDAL ACTUATOR : Diagnosis		Diagnosis Procedure	182
Procedure	137	CHIME DOES NOT SOUND	184
ACCELERATOR PEDAL ACTUATOR : Special		Description	184
Repair Requirement	137	Diagnosis Procedure	184
POWER SUPPLY AND GROUND CIRCUIT ..	138	NO FORCE GENERATED FOR PUTTING	
ICC SENSOR INTEGRATED UNIT	138	BACK THE ACCELERATOR PEDAL	186
ICC SENSOR INTEGRATED UNIT : Diagnosis		Description	186
Procedure	138	Diagnosis Procedure	186
BRAKE BOOSTER CONTROL UNIT	138	FREQUENTLY CANNOT DETECT THE VEHI-	
BRAKE BOOSTER CONTROL UNIT : Diagnosis		CLE AHEAD / DETECTION ZONE IS SHORT..	187
Procedure	138	Description	187
ACCELERATOR PEDAL ACTUATOR	139	Diagnosis Procedure	187
ACCELERATOR PEDAL ACTUATOR : Diagnosis			
Procedure	139		

THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALL	188	ICC SENSOR INTEGRATED UNIT	217	
Description	188	Reference Value	217	A
Diagnosis Procedure	188	Wiring Diagram - FORWARD COLLISION WARNING -	221	
NORMAL OPERATING CONDITION	189	Fail-Safe	227	B
Description	189	DTC Inspection Priority Chart	228	
PRECAUTION	192	DTC Index	228	
PRECAUTIONS	192	LANE CAMERA UNIT	231	C
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	192	Reference Value	231	
Precautions for Removing Battery Terminal	192	Wiring Diagram - FORWARD COLLISION WARNING -	233	D
Precautions For Harness Repair	192	Fail-safe	239	
DCA System Service	193	DTC Inspection Priority Chart	240	E
REMOVAL AND INSTALLATION	194	DTC Index	240	
ICC SENSOR INTEGRATED UNIT	194	SYMPTOM DIAGNOSIS	241	
Exploded View	194	FORWARD COLLISION WARNING SYSTEM SYMPTOMS	241	F
Removal and Installation	194	Symptom Table	241	
BRAKE BOOSTER CONTROL UNIT	195	FCW SYSTEM IS NOT ACTIVATED	242	G
Exploded View	195	Description	242	
Removal and Installation	195	Diagnosis Procedure	242	H
ICC WARNING CHIME	196	NORMAL OPERATING CONDITION	243	
Exploded View	196	Description	243	I
Removal and Installation	196	PRECAUTION	244	
ACCELERATOR PEDAL ASSEMBLY	197	PRECAUTIONS	244	J
Exploded View	197	Precautions for Removing Battery Terminal	244	
DYNAMIC DRIVER ASSISTANCE SWITCH ..	198	Precaution for FCW System Service	244	
Exploded View	198	REMOVAL AND INSTALLATION	245	K
FCW		WARNING SYSTEMS SWITCH	245	
BASIC INSPECTION	199	Exploded View	245	L
DIAGNOSIS AND REPAIR WORK FLOW	199	LDW & LDP		
Work Flow	199	BASIC INSPECTION	246	
SYSTEM DESCRIPTION	201	DIAGNOSIS AND REPAIR WORK FLOW	246	M
FORWARD COLLISION WARNING SYSTEM ..	201	Work Flow	246	
System Diagram	201	Diagnostic Work Sheet	247	
System Description	201	PRE-INSPECTION FOR DIAGNOSIS	249	N
Component Parts Location	203	Inspection Procedure	249	
Component Description	203	ACTION TEST	250	DAS
DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)	205	Description	250	
Diagnosis Description	205	Inspection Procedure	250	
CONSULT Function (ICC/ADAS)	206	INSPECTION AND ADJUSTMENT	253	P
DIAGNOSIS SYSTEM (LANE CAMERA UNIT)	214	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT)	253	
CONSULT Function (LANE CAMERA)	214	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT) : Description	253	
ECU DIAGNOSIS INFORMATION	217			

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT) : Spe- cial Repair Requirement	253	Description	285
CAMERA AIMING ADJUSTMENT	253	DTC Logic	285
CAMERA AIMING ADJUSTMENT : Description ..	253	Diagnosis Procedure	285
CAMERA AIMING ADJUSTMENT : Special Re- pair Requirement (Preparation)	253	U0100 CONTROL UNIT (CAN)	286
CAMERA AIMING ADJUSTMENT : Special Re- pair Requirement (Target Setting)	254	DTC Logic	286
CAMERA AIMING ADJUSTMENT : Special Re- pair Requirement (Camera Aiming Adjustment) ...	256	Diagnosis Procedure	286
CAMERA AIMING ADJUSTMENT : Special Re- pair Requirement (Target Mark Sample)	257	U0122 VDC CAN CIR1 (LDP)	287
SYSTEM DESCRIPTION	259	DTC Logic	287
LANE DEPARTURE WARNING (LDW) SYS- TEM	259	Diagnosis Procedure	287
System Diagram	259	U0416 VDC CAN CIR2 (LDP)	289
System Description	259	DTC Logic	289
Component Parts Location	262	Diagnosis Procedure	289
Component Description	262	C1B00 LDP) CAMERA MALF	291
LANE DEPARTURE PREVENTION (LDP) SYSTEM	264	DTC Logic	291
System Diagram	264	Diagnosis Procedure	291
System Description	264	C1B04 LDP) ICC STG SW MALF	292
Component Parts Location	269	DTC Logic	292
Component Description	269	Diagnosis Procedure	292
DIAGNOSIS SYSTEM (LANE CAMERA UNIT)	271	C1B05 LDP) APP SEN MALF	293
CONSULT Function (LANE CAMERA)	271	DTC Logic	293
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	274	Diagnosis Procedure	293
CONSULT Function	274	C1B06 LDP) TCM MALF	294
DTC/CIRCUIT DIAGNOSIS	280	DTC Logic	294
C1B00 CAMERA UNIT MALF	280	Diagnosis Procedure	294
DTC Logic	280	U0100 LDP) ECM CAN CIR2	295
Diagnosis Procedure	280	DTC Logic	295
C1B01 CAM AIMING INCOMP	281	Diagnosis Procedure	295
DTC Logic	281	U0101 LDP) TCM CAM CAN CIR2	296
Diagnosis Procedure	281	DTC Logic	296
C1B02 VHCL SPD DATA MALF	282	Diagnosis Procedure	296
DTC Logic	282	U0104 LDP) ICC CAM CAN CIR2	297
Diagnosis Procedure	282	DTC Logic	297
C1B03 ABNRML TEMP DETECT	283	Diagnosis Procedure	297
DTC Logic	283	U0405 LDP) ICC CAM CAN CIR1	298
Diagnosis Procedure	283	DTC Logic	298
C1B07 ABS DIAGNOSIS	284	Diagnosis Procedure	298
DTC Logic	284	U1500 LDP) CAM CAN CIR1	299
Diagnosis Procedure	284	DTC Logic	299
U1000 CAN COMM CIRCUIT	285	Diagnosis Procedure	299
		U1501 LDP) CAM CAN CIR2	300
		DTC Logic	300
		Diagnosis Procedure	300
		POWER SUPPLY AND GROUND CIRCUIT ...	301
		LANE CAMERA UNIT	301
		LANE CAMERA UNIT : Diagnosis Procedure	301
		WARNING SYSTEMS SWITCH CIRCUIT	302
		Component Function Check	302

Diagnosis Procedure	302	LDW & LDP SYSTEM SYMPTOMS	331	
Component Inspection	303	Symptom Table	331	A
WARNING SYSTEMS ON INDICATOR CIRCUIT	304	NORMAL OPERATING CONDITION	333	
Component Function Check	304	Description	333	B
Diagnosis Procedure	304	PRECAUTION	335	
LANE DEPARTURE WARNING BUZZER CIRCUIT	306	PRECAUTIONS	335	C
Component Function Check	306	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	335	D
Diagnosis Procedure	306	Precautions for Removing Battery Terminal	335	
ECU DIAGNOSIS INFORMATION	308	Precaution for LDW/LDP System Service	335	
LANE CAMERA UNIT	308	REMOVAL AND INSTALLATION	337	E
Reference Value	308	LANE CAMERA UNIT	337	
Wiring Diagram - LDW & LDP -	311	Exploded View	337	F
Fail-safe	316	Removal and Installation	337	
DTC Inspection Priority Chart	317	WARNING SYSTEMS SWITCH	338	G
DTC Index	317	Exploded View	338	
ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	318	Removal and Installation	338	
Reference Value	318	LANE DEPARTURE WARNING BUZZER	339	H
Wiring Diagram - BRAKE CONTROL SYSTEM -..	323	Exploded View	339	
Fail-Safe	328	Removal and Installation	339	
DTC Index	329	DYNAMIC DRIVER ASSISTANCE SWITCH ..	340	I
SYMPTOM DIAGNOSIS	331	Exploded View	340	J
				K
				L
				M
				N
				P


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000010576416

OVERALL SEQUENCE

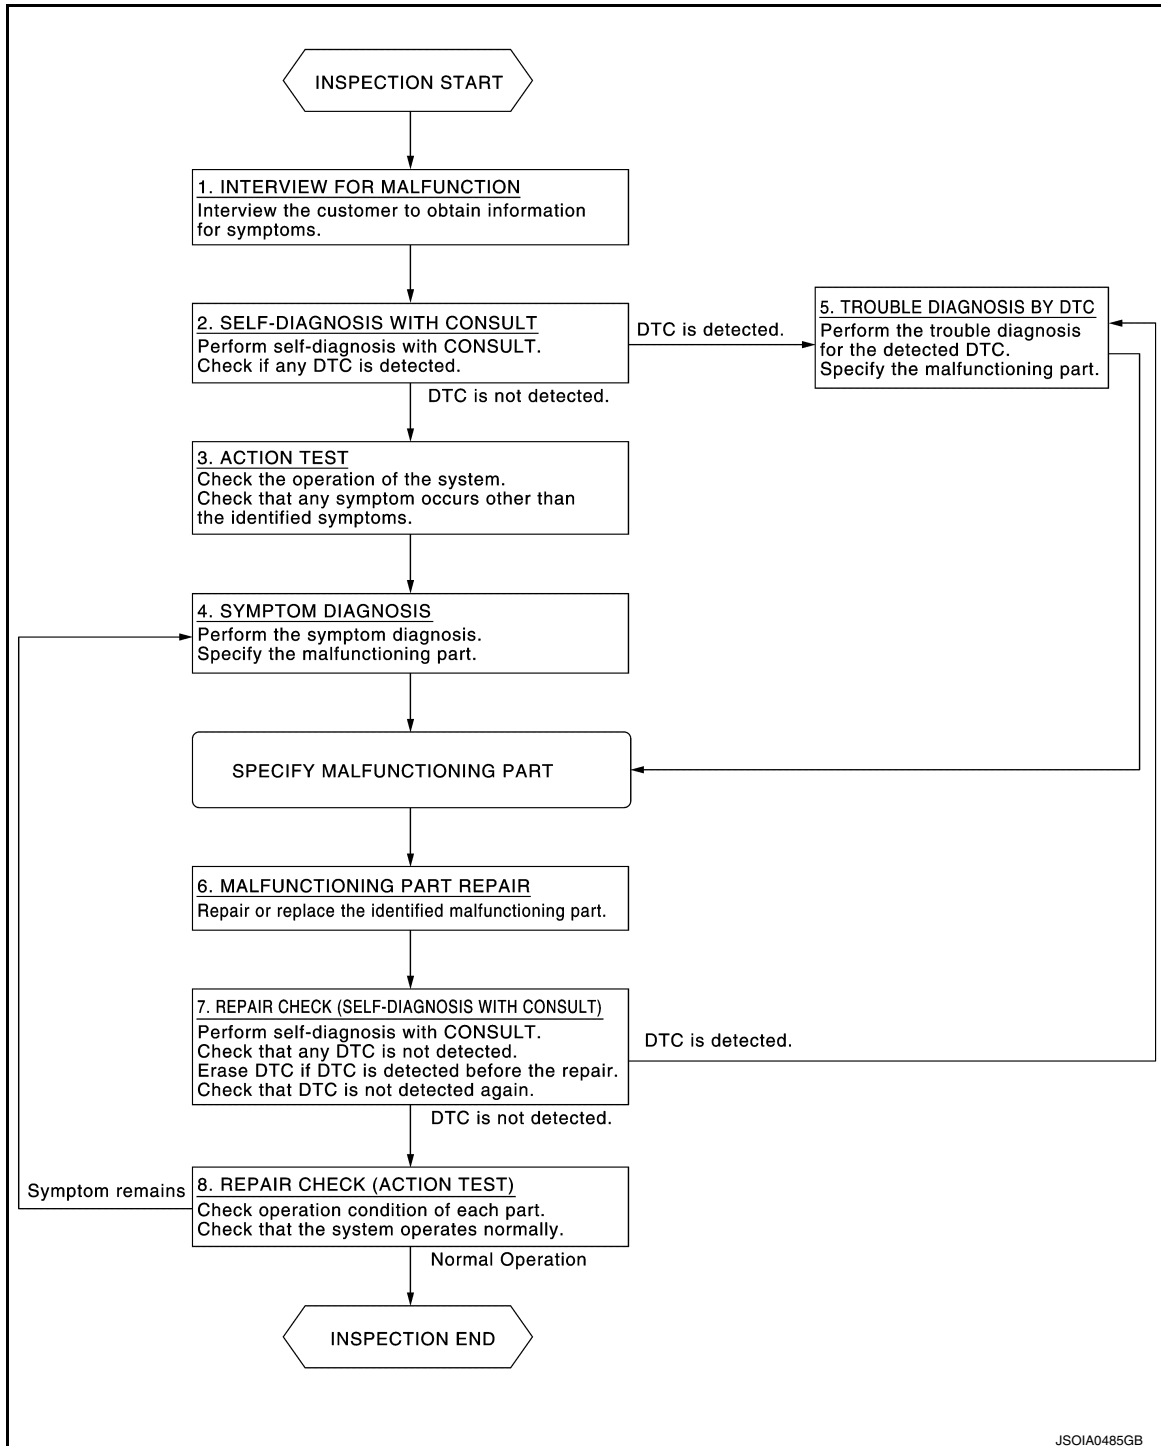

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

It is also important to clarify the customer concerns before starting the inspection. Interview the customer about the concerns carefully and understand the symptoms fully.

NOTE:

DIAGNOSIS AND REPAIR WORK FLOW

[DCA]

< BASIC INSPECTION >

The customers are not professionals. Never assume that “maybe the customer means…” or “maybe the customer mentioned this symptom”.

>> GO TO 2.

2.SELF-DIAGNOSIS WITH CONSULT

1. Perform “All DTC Reading” with CONSULT.
2. Check if the DTC is detected on the self-diagnosis results of “ICC/ADAS” and/or “ACCELE PEDAL ACT”.

Is any DTC detected?

- YES >> GO TO 5.
NO >> GO TO 3.

3.ACTION TEST

Perform DCA system action test to check the operation status. Refer to [DAS-11, "ACTION TEST : Description"](#).

Check if any other malfunctions occur.

>> GO TO 4.

4.SYMPTOM DIAGNOSIS

Perform the applicable diagnosis according to the diagnosis chart by symptom. Refer to [DAS-177, "Symptom Table"](#).

>> GO TO 6.

5.TROUBLE DIAGNOSIS BY DTC

1. Check the DTC in the self-diagnosis results.
2. Perform trouble diagnosis for the detected DTC. Refer to [DAS-158, "DTC Index"](#) (ICC/ADAS) and/or [DAS-176, "DTC Index"](#) (ACCELE PEDAL ACT).

NOTE:

If “DTC: U1000” is detected, first diagnose the CAN communication system or ITS communication system.

>> GO TO 6.

6.MALFUNCTIONING PART REPAIR

Repair or replace the identified malfunctioning parts.

>> GO TO 7.

7.REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

1. Erases self-diagnosis results.
2. Perform “All DTC Reading” again after repairing or replacing the specific items.
3. Check if any DTC is detected in self-diagnosis results of “ICC/ADAS” and “ACCELE PEDAL ACT”.

Is any DTC detected?

- YES >> GO TO 5.
NO >> GO TO 8.

8.REPAIR CHECK (ACTION TEST)

Perform the DCA system action test. Check that the malfunction symptom is solved or no other symptoms occur.

Is there a malfunction symptom?

- YES >> GO TO 4.
NO >> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT) : Description

INFOID:0000000010576417

- Always perform the laser beam aiming adjustment after removing and installing or replacing the ICC sensor integrated unit. Refer to [DAS-10, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ICC SENSOR INTEGRATED UNIT\) : Special Repair Requirement"](#).

CAUTION:

The system does not operate normally unless the laser beam aiming adjustment is performed. Always perform it.

- Perform the DCA system action test check that the DCA system operates normally.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ICC SENSOR INTEGRATED UNIT) : Special Repair Requirement

INFOID:0000000010576418

1. LASER BEAM AIMING ADJUSTMENT

Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2. DCA SYSTEM ACTION TEST

1. Perform the DCA system action test. Refer to [DAS-11, "ACTION TEST : Description"](#).
2. Check that the DCA system operates normally.

>> INSPECTION END

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL ASSEMBLY)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL ASSEMBLY) : Description

INFOID:0000000010576419

- Always perform accelerator pedal released position learning when replacing the accelerator pedal assembly or disconnecting the accelerator pedal position sensor connector. Refer to [DAS-10, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ACCELERATOR PEDAL ASSEMBLY\) : Special Repair Requirement"](#).
- Perform the DCA system action test check that the DCA system operates normally.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ACCELERATOR PEDAL ASSEMBLY) : Special Repair Requirement

INFOID:0000000010576420

1. ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2. DCA SYSTEM ACTION TEST

1. Perform the DCA system action test. Refer to [DAS-11, "ACTION TEST : Description"](#).
2. Check that the DCA system operates normally.

>> INSPECTION END

ACTION TEST

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[DCA]

ACTION TEST : Description

INFOID:0000000010576421

Always perform the DCA system action test to check that the system operates normally after replacing the ICC sensor integrated unit, replacing the accelerator pedal assembly, or repairing any DCA system malfunction. Refer to [DAS-11, "ACTION TEST : Special Repair Requirement \(Distance Control Assist\)"](#).

CAUTION:

Perform the DCA system action test after checking that the ICC system operates normally because the DCA system shares components with the ICC system.

ACTION TEST : Special Repair Requirement (Distance Control Assist)

INFOID:0000000010576422

NOTE:

When the ICC system is set, the information display changes to the ICC system display.

1. ICC SYSTEM ACTION TEST

Perform the ICC system action test. Refer to [CCS-12, "ACTION TEST : Description"](#).

>> GO TO 2.

2. CHECK DCA SYSTEM SETTING

1. Start the engine.
2. Check that the DCA system setting can be enabled/disabled on the navigation screen.
3. Turn OFF the ignition switch and wait for 5 seconds or more.
4. Check that the previous setting is saved when the engine starts again.


>> GO TO 3.

3. CHECK DYNAMIC DRIVER ASSISTANCE SWITCH

1. Start the engine.
2. After starting the engine wait for 5 seconds or more.
3. Enable the setting of the DCA system on the navigation screen.
4. Press the dynamic driver assistance switch (1).
5. Check that the DCA system switch indicator (2) on the information display illuminates.
6. Check that the DCA system switch indicator turns off when the system is turned OFF by pressing the dynamic driver assistance switch.
7. Check that the DCA system switch indicator turns OFF when the engine starts again.

NOTE:

- The DCA system switch indicator does not illuminate even when the dynamic driver assistance switch is turned ON within approximately 5 seconds after starting the engine.
- When the DCA system setting is disabled on the navigation screen, the DCA system switch indicator is not turned ON by pressing the dynamic driver assistance switch.

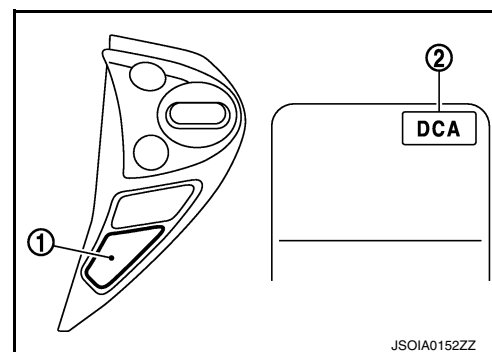

If the accelerator pedal assembly is not replaced>>INSPECTION END

If the accelerator pedal assembly is replaced>>GO TO 4.

4. CHECK DCA SYSTEM OPERATION

Check that the accelerator pedal actuator operates by the "Active Test" items "ACCELERATOR PEDAL ACTUATOR TEST1" and "ACCELERATOR PEDAL ACTUATOR TEST2" of "ACCELE PEDAL ACT" with CONSULT.


>> INSPECTION END

SYSTEM DESCRIPTION

DISTANCE CONTROL ASSIST SYSTEM

System Diagram

INFOID:0000000010576423

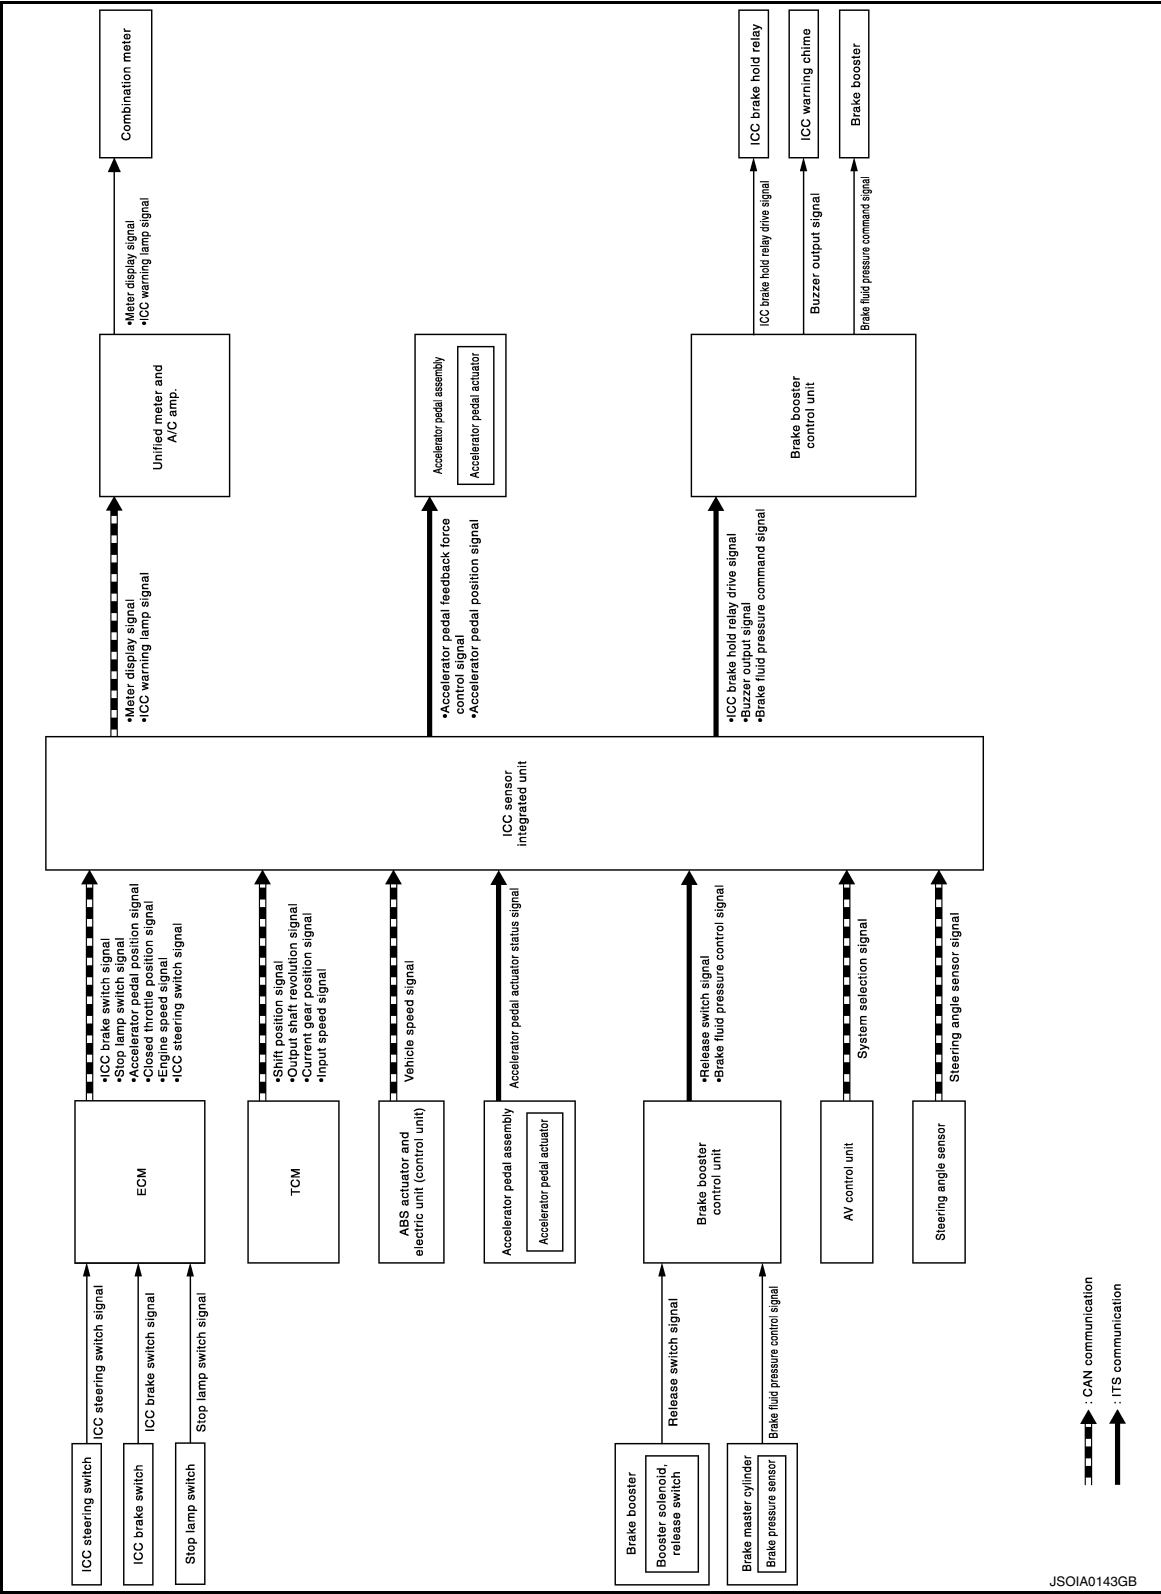

JSOIA0143GB

System Description

INFOID:0000000010576424

FUNCTION DESCRIPTION

DISTANCE CONTROL ASSIST SYSTEM

[DCA]

< SYSTEM DESCRIPTION >

When a vehicle is detected ahead

- The vehicle ahead detection indicator comes on.

When vehicle approaches a vehicle ahead

- If the driver is not depressing the accelerator pedal, the system activates the brakes to decelerate smoothly as necessary. If the vehicle ahead comes to a stop, the vehicle decelerates to a standstill within the limitations of the system.
- If the driver is depressing the accelerator pedal, the system moves the accelerator pedal upward to assist the driver to release the accelerator pedal.

When brake operation by driver is required

- The system alerts the driver by a warning chime and blinking the vehicle ahead detection indicator. If the driver is depressing the accelerator pedal after the warning, the system moves the accelerator pedal upward to assist the driver to switch to the brake pedal.

CAUTION:




If the vehicle ahead comes to a standstill, the vehicle decelerates to a standstill within the limitations of the system. The system will release brake control with a warning chime once it judges the vehicle is at a standstill. To prevent the vehicle from moving, the driver must depress the brake pedal. [The system will resume control automatically once the system reaches 5 km/h (3 MPH)].

NOTE:

- Depending on the position of the accelerator pedal, the system may not be able to assist the driver to release the accelerator pedal appropriately.
- When the driver depresses the accelerator pedal even further while the system is moving the accelerator pedal upward, the accelerator pedal control will be canceled.
- When the driver is depressing the accelerator pedal, the brake control by the system is not operated.
- When the driver is depressing the brake pedal, neither the brake control nor the alert by the system operates.
- When the ICC system is set, the DCA system will be canceled.

OPERATION DESCRIPTION

Calculate the distance and relative speed with the vehicle ahead by ICC sensor integrated unit. Control the accelerator pedal actuator and brake booster control unit based on the calculated value via ITS communication.

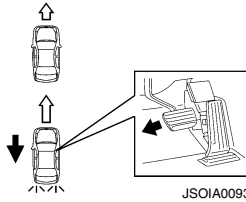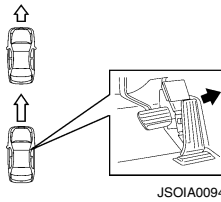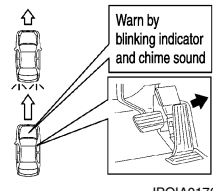When vehicle approaches a vehicle ahead	If the driver is not depressing the accelerator pedal, the system activates the brakes to decelerate smoothly as necessary.	
	If the driver is depressing the accelerator pedal, the system moves the accelerator pedal upward to assist the driver to release the accelerator pedal.	
When brake operation by driver is required	The system alerts the driver by a warning chime and blinking the vehicle ahead detection indicator. If the driver is depressing the accelerator pedal after the warning, the system moves the accelerator pedal upward to assist the driver to switch to the brake pedal.	

DISTANCE CONTROL ASSIST SYSTEM

< SYSTEM DESCRIPTION >

[DCA]

Deceleration control	It transmits the brake fluid pressure command signal to the brake booster control unit via ITS communication and performs the brake control.
Accelerator pedal actuation control	It transmits the accelerator pedal feedback force control signal to the accelerator pedal actuator via ITS communication and controls the accelerator pedal in the upward direction.

NOTE:

DCA system settings can be changed by using the vehicle settings function in the MULTI AV system. When the ignition switch is in ACC position, DCA system settings cannot be changed.

Operation Condition

ICC sensor integrated unit performs the control when the following conditions are satisfied.

- When the DCA system setting on the navigation screen is ON.
- When the dynamic driver assistance switch is turned to ON.
- When the brake pedal is not depressed.
- When the vehicle speed is above approximately 5 km/h (3 MPH).
- When the vehicle ahead is detected.
- When the ICC system is not set.

No Operation Condition

The ICC sensor integrated unit is not operate when the system is under any conditions of the no operation condition.

- When the DCA system setting on the navigation screen is OFF.
- When the brake pedal depressed.
- When the ICC system is set.
- When the system judges that the vehicle comes to a standstill by the system control.
- When the vehicle ahead is not detected.

Operation Cancellation Condition

The ICC sensor integrated unit cancels the operation when the system is under any conditions of the operation cancellation condition.

- When the dynamic driver assistance switch is turned to OFF.
- When the system malfunction occurs.
- When ABS or VDC (including the TCS) operates.
- When the VDC is turned OFF.
- When the snow mode switch is turned ON.
- When driving into a strong light (i.e., sunlight).
- When the ICC sensor integrated unit body window is dirty and the measurement of the distance between the vehicles becomes difficult.


Operation At The Driver Operation

Give priority to the driver operation in the following situation.

- When the accelerator pedal is depressed again.
- When the brake pedal is depressed.

OPERATION AND DISPLAY

Switch and Display

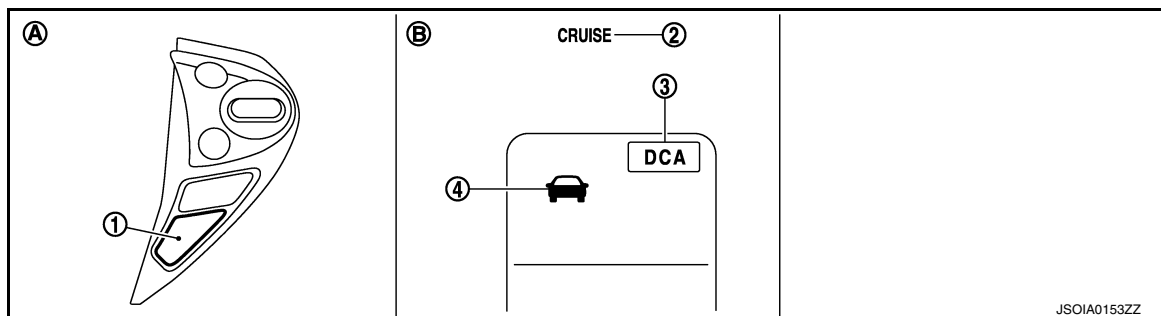

- | | | |
|--------------------------------------|-----------------------------|--------------------------------|
| 1. Dynamic driver assistance switch | 2. ICC system warning lamp | 3. DCA system switch indicator |
| 4. Vehicle ahead detection indicator | | |
| A. On the ICC steering switch | B. On the combination meter | |

DISTANCE CONTROL ASSIST SYSTEM



< SYSTEM DESCRIPTION >

[DCA]

No.	Switch name	Description
1	Dynamic driver assistance switch	Turns the DCA system ON/OFF. (When the setting of the DCA system on the navigation screen is ON.)
2	ICC system warning lamp	This indicates that an abnormal condition is present in the ICC system.
3	DCA system switch indicator	Indicates that the DCA system is ON.
4	Vehicle ahead detection indicator	Indicates whether it detects a vehicle ahead. NOTE: The vehicle ahead detection indicator turns OFF when the no operation condition is satisfied.


System Control Condition Display

The DCA system switch indicator illuminates and the system is turned ON by pressing the dynamic driver assistance switch at the system OFF.

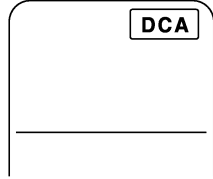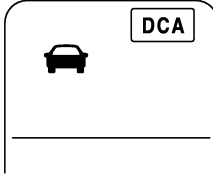Condition		Display on combination meter
Operation status	Vehicle ahead not detected	 JPOIA0163ZZ
	Vehicle ahead detected	 JPOIA0164ZZ

Approach Warning Display

- If own vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with the chime and DCA system display. Decelerate by depressing the brake pedal to maintain a safe vehicle distance if:
 - The chime sounds.
 - The vehicle ahead detection indicator blinks.
- The warning chime may not sound in some cases when there is a short distance between vehicles. Some examples are:
 - When the vehicles are traveling at the same speed and the distance between vehicles is not changing
 - When the vehicle ahead is traveling faster and the distance between vehicles is increasing
 - When a vehicle cuts in near own vehicle
- The warning chime will not sound when own vehicle approaches vehicles that are parked or moving slowly.



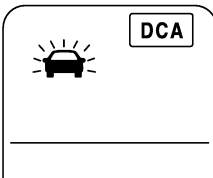
Condition	Display on combination meter
When the system judges that the brake operation by the driver is necessary	 JPOIA0188ZZ

Warning Lamp Display

DISTANCE CONTROL ASSIST SYSTEM

< SYSTEM DESCRIPTION >

[DCA]

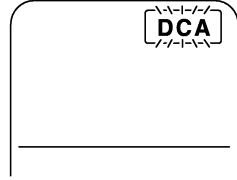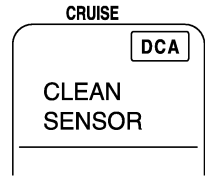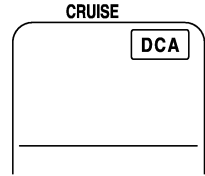Condition		Description	Display on combination meter
Warning display	When the dynamic driver assistance switch is turned ON with settings of DCA system and LDP system OFF	The DCA system is not activated. The DCA system switch indicator blinks.	 JPOIA0165ZZ
	- When the VDC or ABS (including the TCS) operates - When the VDC is turned OFF - When the snow mode switch is turned ON - When driving into a strong light (i.e., sunlight)	The DCA system is automatically canceled. The chime will sound and the DCA system switch indicator will blink. NOTE: The system operates if the dynamic driver assistance switch is turned OFF⇒ON after the condition improves.	
	When the sensor window is dirty, making it impossible to detect a vehicle ahead	The DCA system is automatically canceled. The chime sounds and the ICC system warning lamp will come on and the "CLEAN SENSOR" indicator will appear. NOTE: Stop the vehicle in a safe location and turn the ignition switch OFF. Clean the dirty area with soft cloth. The system returns to normal condition when turning the ignition switch ON again.	 JPOIA0166ZZ
	When the DCA system is not operating properly	The chime sounds and the ICC system warning lamp will come on. NOTE: Turn the ignition switch OFF, and then turn the ignition switch ON again. If there is no malfunction, the system returns to the normal condition.	 JPOIA0167ZZ

NOTE:

When the DCA system is automatically canceled, the cancellation condition can be displayed on "WORK SUPPORT" of CONSULT (ICC/ADAS).

ICC SENSOR INTEGRATED UNIT INPUT/OUTPUT SIGNAL ITEM

Input Signal Item

Transmit unit	Signal name		Description
ECM	Accelerator pedal position signal		Receives the accelerator pedal position signal from ECM via CAN communication.
	ICC brake switch signal		Receives the ICC brake switch signal from ECM via CAN communication.
	Stop lamp switch signal		Receives the stop lamp switch signal from ECM via CAN communication.
	Closed throttle position signal		Receives the closed throttle position signal from ECM via CAN communication.
	Engine speed signal		Receives the engine speed signal from ECM via CAN communication.
	ICC steering switch signal	Dynamic driver assistance switch signal	Receives the ICC steering switch signal (dynamic driver assistance switch signal) from ECM via CAN communication.
TCM	Shift position signal		Receives the shift position signal from TCM via CAN communication.
	Output shaft revolution signal		Receives the output shaft revolution signal from TCM via CAN communication.
	Current gear position signal		Receives the current gear position signal from TCM via CAN communication.
	Input speed signal		Receives the input speed signal from TCM via CAN communication.

DISTANCE CONTROL ASSIST SYSTEM

< SYSTEM DESCRIPTION >

[DCA]

Transmit unit	Signal name	Description
Brake booster control unit	Brake fluid pressure control signal	Receives the brake fluid pressure control signal from the brake booster control unit via ITS communication.
	Release switch signal	Receives the release switch signal from the brake booster control unit via ITS communication.
ABS actuator and electric unit (control unit)	Vehicle speed signal	Receives the vehicle speed signal (wheel speed) from ABS actuator and electric unit (control unit) via CAN communication.
AV control unit	System selection signal	Receives the system selection signal from the AV control unit via CAN communication.
Steering angle sensor	Steering angle sensor signal	Receives the steering angle sensor signal from the steering angle sensor via CAN communication.
Accelerator pedal actuator	Accelerator pedal actuator status signal	Receives the accelerator pedal actuator status signal from the accelerator pedal actuator via ITS communication.

Output Signal Item

Reception unit	Signal name		Description
Combination meter (via unified meter and A/C amp.)	Meter display signal	Vehicle ahead detection indicator signal	Transmits the meter display signal to the combination meter (via unified meter and A/C amp.) via CAN communication.
		DCA system switch indicator signal	
	ICC warning lamp signal		Transmits the ICC warning lamp signal to the combination meter (through unified meter and A/C amp.) via CAN communication.
ICC warning chime	Buzzer output signal		- Transmits the buzzer output signal to the brake booster control unit via ITS communication. - The brake booster control unit outputs the buzzer output signal and operates the ICC warning chime.
ICC brake hold relay	ICC brake hold relay drive signal		- Transmits the ICC brake hold relay drive signal to the brake booster control unit via ITS communication. - The brake booster control unit outputs the ICC brake hold relay drive signal and operates the ICC brake hold relay.
Brake booster control unit	Brake fluid pressure command signal		Transmits the brake fluid pressure command signal to the brake booster control unit via ITS communication.
Accelerator pedal actuator	Accelerator pedal position signal		Transmits the accelerator pedal position signal received from ECM via CAN communication to the accelerator pedal actuator via ITS communication.
	Accelerator pedal feedback force control signal		Transmits the accelerator pedal feedback force control signal to the accelerator pedal actuator via ITS communication.


DISTANCE CONTROL ASSIST SYSTEM

< SYSTEM DESCRIPTION >

[DCA]

Component Parts Location

INFOID:0000000010576425

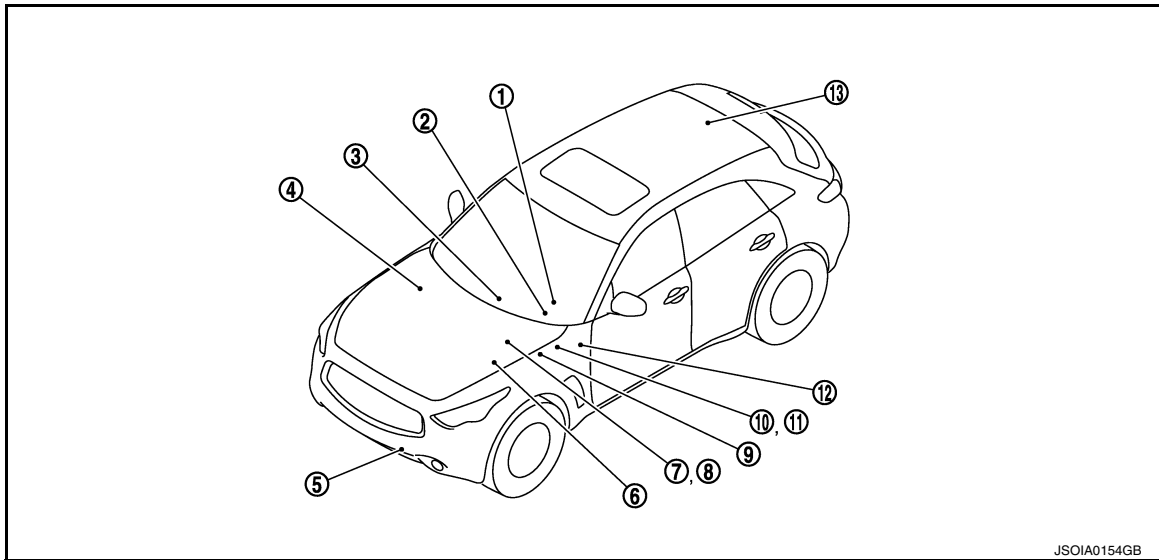

- | | | |
|--|--|--|
| 1. ICC steering switch | 2. Information display, ICC system warning lamp
(On the combination meter) | 3. AV control unit
Refer to AV-153, "Component Parts Location" . |
| 4. ECM
Refer to EC-51, "Component Parts Location" . | 5. ICC sensor integrated unit
Refer to CCS-21, "Component Parts Location" . | 6. ICC brake hold relay
Refer to CCS-21, "Component Parts Location" . |
| 7. Booster solenoid/ Release switch
Refer to CCS-21, "Component Parts Location" . | 8. Brake pressure sensor
Refer to CCS-21, "Component Parts Location" . | 9. Accelerator pedal actuator (accelerator pedal assembly) |
| 10. Stop lamp switch
Refer to CCS-21, "Component Parts Location" . | 11. ICC brake switch
Refer to CCS-21, "Component Parts Location" . | 12. ICC warning chime
Refer to CCS-21, "Component Parts Location" . |
| 13. Brake booster control unit
Refer to CCS-21, "Component Parts Location" . | | |

Component Description

INFOID:0000000010576426

Component	Description
ICC sensor integrated unit	Refer to DAS-31, "Description" .
ECM	Refer to DAS-66, "Description" .
ABS actuator and electric unit (control unit)	Refer to DAS-37, "Description" .
TCM	Refer to DAS-125, "Description" .
Unified meter and A/C amp.	Receives the meter display signal and ICC warning lamp signal from ICC sensor integrated unit via CAN communication and transmits them to the combination meter via the communication line.
Combination meter	- Perform the following operations using the signals received from the unified meter and A/C amp. via the communication line. - Displays the DCA system operation status using the meter display signal. - Illuminates the ICC system warning lamp using the ICC warning lamp signal.
ICC brake switch	Refer to DAS-39, "Description" .
Stop lamp switch	
ICC brake hold relay	Refer to DAS-59, "Description" .
Brake booster control unit	Refer to DAS-77, "Description" .

DISTANCE CONTROL ASSIST SYSTEM

< SYSTEM DESCRIPTION >

[DCA]

Component	Description
Brake booster	Refer to DAS-77, "Description" .
Brake pressure sensor	Refer to DAS-47, "Description" .
Booster solenoid/release switch	- Refer to DAS-49, "Description" for booster solenoid. - Refer to DAS-52, "Description" for release switch.
ICC warning chime	Refer to DAS-141, "Description" .
Steering angle sensor	Refer to DAS-101, "Description" .
Accelerator pedal actuator	Refer to DAS-106, "Description" .
AV control unit	Transmits a system selection signal to the ICC sensor integrated unit via CAN communication.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P


DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

Diagnosis Description

INFOID:000000010576427

The DTC is displayed on the information display by operating the ICC steering switch.

ON BOARD SELF-DIAGNOSIS SYSTEM DIAGRAM

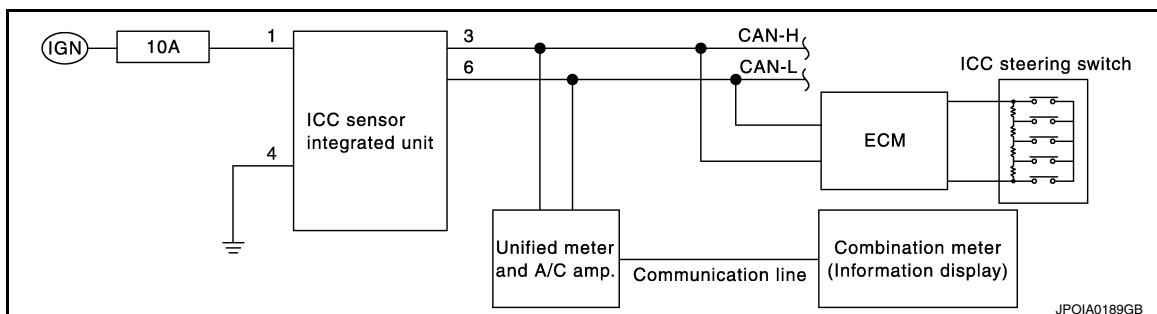

ON BOARD SELF-DIAGNOSIS OPERATION PROCEDURE

CAUTION:


Start condition of on board self-diagnosis

- ICC system OFF
- DCA system OFF
- Vehicle speed 0 km/h (0 MPH)


1. Turn the ignition switch OFF.
2. Start the engine.
3. Wait for 5 seconds after starting the engine. Push up the RESUME/ACCELERATE switch 5 times and push down the SET/COAST switch 5 times within 10 seconds.

NOTE:

If the above operation cannot be performed within 10 seconds after waiting for 5 seconds after starting the engine, repeat the procedure from step 1.

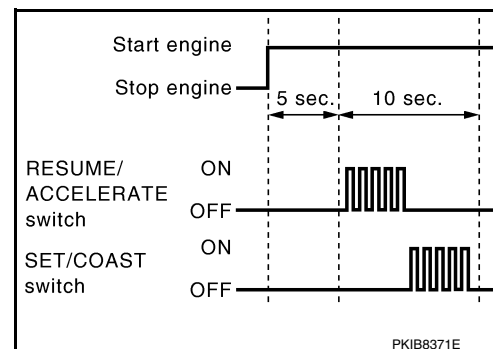

4. The DTC is displayed on the set vehicle speed indicator (1) on the ICC system display on the information display when the on board self-diagnosis starts. Refer to [DAS-228, "DTC Index"](#).

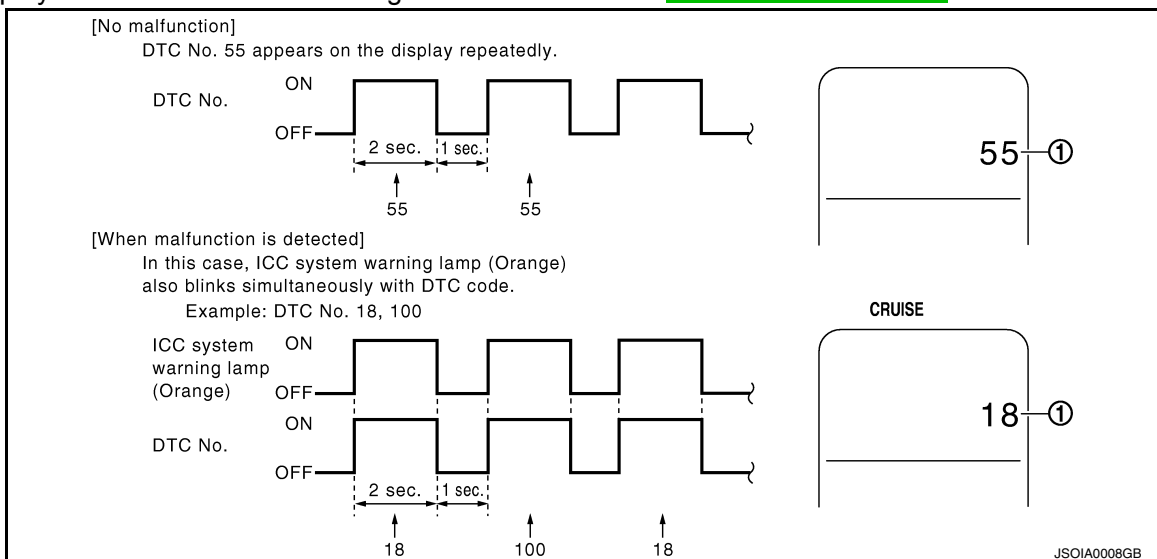

NOTE:

- It displays for up to 5 minutes and then stops.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

- If multiple malfunctions exist, up to 3 DTCs can be stored in memory at the most, and the most recent one is displayed first.

WHEN THE ON BOARD SELF-DIAGNOSIS DOES NOT START

If the on board self-diagnosis does not start, check the following items.

Assumed abnormal part		Inspection item
ICC system display	Combination meter malfunction	Check that the self-diagnosis function of the combination meter operates. Refer to MWI-43, "Diagnosis Description" .
	Unified meter and A/C amp. malfunction	Check power supply and ground circuit of unified meter and A/C amp. Refer to MWI-58, "UNIFIED METER AND A/C AMP. : Diagnosis Procedure" .
	Communication error of the combination meter and the unified meter and A/C amp.	Start the self-diagnosis of the unified meter and A/C amp. and then check the self-diagnosis results. Refer to MWI-117, "DTC Index" .
ICC steering switch malfunction		Perform the inspection for DTC “C1A06”. Refer to CCS-60, "Diagnosis Procedure" .
Harness malfunction between ICC steering switch and ECM		
ECM malfunction		
ICC sensor integrated unit malfunction		• Check power supply and ground circuit of ICC sensor integrated unit. Refer to CCS-134, "ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure". • Perform SELF-DIAGNOSIS for “ICC/ADAS” with CONSULT, and then check the malfunctioning parts. Refer to DAS-228, "DTC Index".

HOW TO ERASE ON BOARD SELF-DIAGNOSIS

- Turn the ignition switch OFF.
- Start the engine, and then start the on board self-diagnosis.
- Press the CANCEL switch 5 times, and then press the DISTANCE switch 5 times under the condition that the on board self-diagnosis starts.

NOTE:


- Complete the operation within 10 seconds after pressing the CANCEL switch first.
- If the operation is not completed within 10 seconds, repeat the procedure from step 1.

- DTC 55 is displayed after erasing.

NOTE:

DTCs for existing malfunction can not be erased.

- Turn ignition switch OFF, and finish the diagnosis.

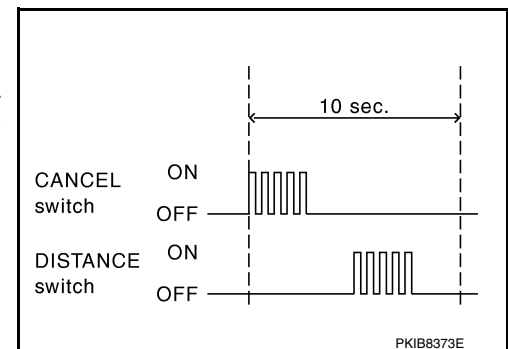

CONSULT Function (ICC/ADAS)

INFOID:0000000010576428

DESCRIPTION

CONSULT performs the following functions via CAN communication using ICC sensor integrated unit.

Diagnosis mode	Description
Work Support	- It can monitor the adjustment direction indication in order to perform the laser beam aiming operation smoothly. - Displays causes of automatic cancellation of the ICC system.
Self Diagnostic Result	Displays malfunctioning system memorized in ICC sensor integrated unit.
Data Monitor	Displays real-time input/output data of ICC sensor integrated unit.
Active Test	Enables operation check of electrical loads by transmitting driving signal to them.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

Diagnosis mode	Description
Ecu Identification	- Displays ICC sensor integrated unit part number. - Displays brake booster control unit part number. - Displays accelerator pedal assembly part number.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

WORK SUPPORT

Work support items	Description
CAUSE OF AUTO-CANCEL	Displays causes of automatic cancellation of the ICC system.
LASER BEAM ADJUST	Outputs laser beam, calculates dislocation of the beam, and indicates adjustment direction.

Display Items For The Cause Of Automatic Cancellation

NOTE:

- Causes of the maximum five cancellations (system cancel) are displayed.
- The displayed cancellation causes display the number of the ignition switch ON/OFF up to 254. It is fixed to 254 if it is over 254. It returns to 0 when the same cancellation cause is detected again.

×: Applicable

Cause of cancellation	Vehicle-to-vehicle distance control mode	Conventional (fixed speed) cruise control mode	DCA system	Description
OPERATING WIPER	×			The wiper operates at HI or LO (it includes when the wiper is operated at LO or HI with the wiper switch INT position)
OPERATING ABS	×		×	ABS function was operated
OPERATING TCS	×	×	×	TCS function was operated
OPERATING VDC	×	×	×	VDC function was operated
ECM CIRCUIT	×	×		ECM did not permit ICC operation
OPE SW VOLT CIRC	×	×	×	The ICC steering switch input voltage is not within standard range.
LASER SUNBEAM	×		×	Intense light such as sunlight entered ICC sensor integrated unit light sensing part
LASER TEMP	×		×	Temperature around ICC sensor integrated unit became low
OP SW DOUBLE TOUCH	×	×		ICC steering switches were pressed at the same time
WHL SPD ELEC NOISE	×	×	×	Wheel speed sensor signal caught electromagnetic noise
VDC/TCS OFF SW	×		×	VDC OFF switch was pressed
SNOW MODE SW	×		×	Snow mode switch was pressed
VHCL SPD UNMATCH	×	×	×	Wheel speed became different from A/T vehicle speed
TIRE SLIP	×	×		Wheel slipped
IGN LOW VOLT	×	×	×	Power supply voltage became low
WHEEL SPD UNMATCH	×	×	×	The wheel speeds of 4 wheels are out of the specified values
VHCL SPD DOWN	×	×	×	Vehicle speed lower than the speed as follows - Vehicle-to-vehicle distance control mode is 24 km/h (15 MPH) - Conventional (fixed speed) cruise control mode is 32 km/h (20 MPH)
CAN COMM ERROR	×	×	×	ICC sensor integrated unit received an abnormal signal with CAN communication
ABS/TCS/VDC CIRC	×	×	×	An abnormal condition occurs in VDC/TCS/ABS system
BCU CIRCUIT	×	×	×	The brake booster control unit is malfunctioning

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

INCHING LOST	×			A vehicle ahead is not detected during the following driving when the vehicle speed is approximately 24 km/h (15 MPH) or less
ASCD VHCL SPD DTAC		×		Vehicle speed is detached from set vehicle speed
ASCD DOUBLE COMD		×		Cancel switch and operation switch are detected simultaneously
PARKING BRAKE ON	×	×		The parking brake is operating
APA HI TEMP			×	The accelerator pedal actuator integrated motor temperature is high
NO RECORD	×	×	×	—

Laser Beam Adjust

Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

SELF DIAGNOSTIC RESULT

Refer to [DAS-228, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

×: Applicable

Monitored item [Unit]	MAIN SIGNAL	Description
MAIN SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
SET/COAST SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
CANCEL SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
RESUME/ACC SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
DISTANCE SW [On/Off]		Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
CRUISE OPE [On/Off]	×	Indicates whether controlling or not (ON means "controlling").
BRAKE SW [On/Off]	×	Indicates [On/Off] status as judged from ICC brake switch signal (ECM transmits ICC brake switch signal through CAN communication).
STOP LAMP SW [On/Off]	×	Indicates [On/Off] status as judged from stop lamp switch signal (ECM transmits stop lamp switch signal through CAN communication).
IDLE SW [On/Off]		Indicates [On/Off] status of idle position read from ICC sensor integrated unit through CAN communication (ECM transmits On/Off status through CAN communication).
SET DISTANCE [Short/Mid/Long]	×	Indicates set distance memorized in ICC sensor integrated unit.
CRUISE LAMP [On/Off]	×	Indicates [On/Off] status of MAIN switch indicator output.
OWN VHCL [On/Off]		Indicates [On/Off] status of own vehicle indicator output.
VHCL AHEAD [On/Off]		Indicates [On/Off] status of vehicle ahead detection indicator output.
ICC WARNING [On/Off]		Indicates [On/Off] status of ICC system warning lamp output.
VHCL SPEED SE [km/h] or [mph]	×	Indicates vehicle speed calculated from ICC sensor integrated unit through CAN communication [ABS actuator and electric unit (control unit) transmits vehicle speed signal (wheel speed) through CAN communication].
SET VHCL SPD [km/h] or [mph]	×	Indicates set vehicle speed memorized in ICC sensor integrated unit.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

Monitored item [Unit]	MAIN SIGNAL	Description
BUZZER O/P [On/Off]		Indicates [On/Off] status of ICC warning chime output.
THRTL SENSOR [deg]	×	NOTE: The item is displayed, but it is not monitored.
ENGINE RPM [rpm]		Indicates engine speed read from ICC sensor integrated unit through CAN communication (ECM transmits engine speed through CAN communication).
WIPER SW [Off/Low/High]		Indicates wiper [Off/Low/High] status (BCM transmits front wiper request signal through CAN communication).
YAW RATE [deg/s]		NOTE: The item is displayed, but it is not monitored.
BA WARNING [On/Off]		Indicates [On/Off] status of IBA OFF indicator lamp output.
FUNC ITEM [FUNC1]		Indicates the equipment status of DCA system and LDP system.
LDP SELECT [On/Off]		Indicates [On/Off] status of LDP system setting displayed on the navigation screen.
DCA SELECT [On/Off]		Indicates [On/Off] status of DCA system setting displayed on the navigation screen.
RELEASE SW NO [On/Off]		Indicates [On/Off] status as judged from release switch signal. ON: When brake pedal is depressed. OFF: When brake pedal is not depressed.
RELEASE SW NC [On/Off]		Indicates [On/Off] status as judged from release switch signal. ON: When brake pedal is not depressed. OFF: When brake pedal is depressed.
STP LMP DRIVE [On/Off]	×	Indicates [On/Off] status of ICC brake hold relay drive output.
PRESS SENS [bar]	×	Indicates brake fluid pressure value calculated from signal voltage of brake pressure sensor.
D RANGE SW [On/Off]		Indicates [On/Off] status of "D" or "DS" or "M" positions read from ICC sensor integrated unit through CAN communication; ON when position "D" or "DS" or "M" (TCM transmits shift position signal through CAN communication).
NP RANGE SW [On/Off]		Indicates shift position signal read from ICC sensor integrated unit through CAN communication (TCM transmits shift position signal through CAN communication).
PKB SW [On/Off]		Parking brake switch status [On/Off] judged from the parking brake switch signal that ICC sensor integrated unit readout via CAN communication is displayed (Unified meter and A/C amp. transmits the parking brake switch signal via CAN communication).
PWR SUP MONI [V]	×	Indicates IGN voltage input by ICC sensor integrated unit.
VHCL SPD AT [km/h] or [mph]		Indicates vehicle speed calculated from A/T vehicle speed sensor read from ICC sensor integrated unit through CAN communication (TCM transmits A/T vehicle speed sensor signal through CAN communication).
THRTL OPENING [%]	×	Indicates throttle position read from ICC sensor integrated unit through CAN communication (ECM transmits accelerator pedal position signal through CAN communication).
GEAR [1, 2, 3, 4, 5, 6, 7]		Indicates A/T gear position read from ICC sensor integrated unit through CAN communication (TCM transmits current gear position signal through CAN communication).
CLUTCH SW SIG [On/Off]	×	NOTE: The item is displayed, but it is not monitored.
NP SW SIG [On/Off]	×	NOTE: The item is displayed, but it is not used.
MODE SIG [OFF, ICC, ASCD]		Indicates the active mode from ICC or ASCD [conventional (fixed speed) cruise control mode].

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

Monitored item [Unit]	MAIN SIGNAL	Description
SET DISP IND [On/Off]		Indicates [On/Off] status of SET switch indicator output.
LDP SYSTEM ON [On/Off]		Indicates [On/Off] status of LDP system.
LDW SYSTEM ON [On/Off]		Indicates [On/Off] status of LDW system.
FCW SYSTEM ON [On/Off]		Indicates [On/Off] status of FCW system.
DISTANCE [m]		Indicates the distance from the vehicle ahead.
RELATIVE SPD [m/s]		Indicates the relative speed of the vehicle ahead.
DCA ON SW [On/Off]	×	NOTE: The item is displayed, but it is not used.
DCA ON IND [On/Off]		The status [On/Off] of DCA system switch indicator output is displayed.
DCA VHL AHED [On/Off]		The status [On/Off] of vehicle ahead detection indicator output in DCA system is displayed.
IBA SW [On/Off]		Status [On/Off] judged from IBA OFF switch signal that ICC sensor integrated unit readout via ITS communication is displayed (Brake booster control unit transmits the IBA OFF switch signal via ITS communication).
DYNA ASIST SW [On/Off]		Indicates [On/Off] status as judged from ICC steering switch signal (dynamic driver assistance switch signal) [ECM transmits ICC steering switch signal (dynamic driver assistance switch signal) through CAN communication].
APA TEMP [°C]		The accelerator pedal actuator integrated motor temperature that the ICC sensor integrated unit readout via ITS communication is displayed (Accelerator pedal actuator transmits the integrated motor temperature via ITS communication).
APA PWR [V]		Accelerator pedal actuator power supply voltage that the ICC sensor integrated unit readout via ITS communication is displayed (Accelerator pedal actuator transmits the power supply voltage via ITS communication).

ACTIVE TEST

CAUTION:

- **Never perform “Active Test” while driving the vehicle.**
- **The “Active Test” cannot be performed when the ICC system warning lamp is illuminated.**
- **Shift the selector lever to “P” position, and then perform the test.**

Test item	Description
METER LAMP	The ICC system warning lamp, MAIN switch indicator, SET switch indicator and IBA OFF indicator lamp can be illuminated by ON/OFF operations as necessary.
DCA INDICATOR	The DCA system switch indicator can be illuminated by ON/OFF operations as necessary.
STOP LAMP	The ICC brake hold relay can be operated by ON/OFF operations as necessary, and the stop lamp can be illuminated.
BOOSTER SOL/V	The booster solenoid can be operated as necessary, and the brake can be operated.
ICC BUZZER	The ICC warning chime can sound by ON/OFF operations as necessary.
ACCELERATOR PEDAL ACTUATOR	The accelerator pedal actuator can be operated as necessary.

METER LAMP

NOTE:

The test can be performed only when the engine is running.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

Test item	Operation	Description	- MAIN switch indicator - SET switch indicator - ICC system warning lamp - IBA OFF indicator lamp
METER LAMP	Off	Stops transmitting the signals below to end the test. - Meter display signal - ICC warning lamp signal - IBA OFF indicator lamp signal	OFF
	On	Transmits the following signals to the unified meter and A/C amp. via CAN communication. - Meter display signal - ICC warning lamp signal - IBA OFF indicator lamp signal	ON

DCA INDICATOR

NOTE:

The test can be performed only when the engine is running.

Test item	Operation	Description	DCA system switch indicator
DCA INDICATOR	Off	Stops transmitting the DCA system switch indicator signal below to end the test.	OFF
	On	Transmits the DCA system switch indicator signal to the unified meter and A/C amp. via CAN communication.	ON

STOP LAMP

Test item	Operation	Description	Stop lamp
STOP LAMP	Off	Stops transmitting the ICC brake hold relay drive signal below to end the test.	OFF
	On	Transmits the ICC brake hold relay drive signal to the brake booster control unit via ITS communication.	ON

BOOSTER SOL/V

NOTE:

The test can be performed only when the engine is running.

Test item	Operation	Description	"PRESS SENS" value
BOOSTER SOL/V	MODE1	Transmits the brake fluid pressure command signal to the brake booster control unit via ITS communication.	10 bar
	MODE2		20 bar
	MODE3		30 bar
	Test start	Starts the tests of "MODE1", "MODE2" and "MODE3".	—
	Reset	Stops transmitting the brake fluid pressure command signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	—


NOTE:

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

The test is finished in 10 seconds after starting.

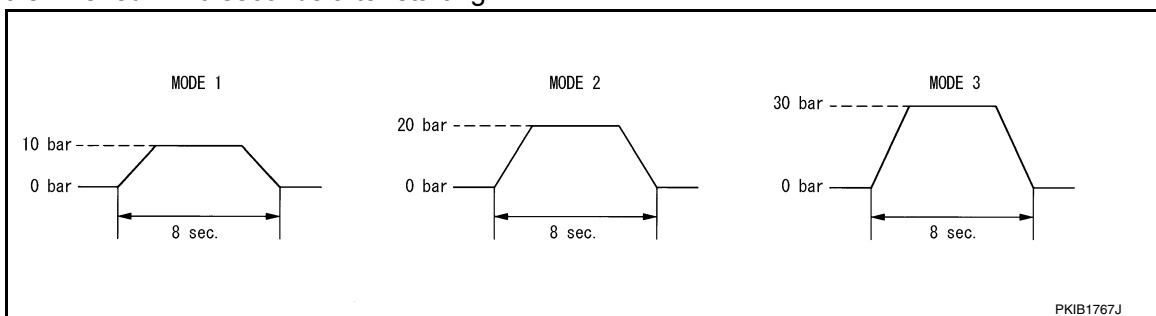

ICC BUZZER

Test item	Operation	Description	ICC warning chime operation sound
ICC BUZZER	MODE1	Transmits the buzzer output signal to the brake booster control unit via ITS communication.	Intermittent beep sound
	MODE2		Continuous beep sound
	MODE3		Beep sound
	Test start	Starts the tests of "MODE1", "MODE2" and "MODE3".	
	Reset	Stops transmitting the buzzer output signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	

ACCELERATOR PEDAL ACTUATOR

CAUTION:

- Shift the selector lever to "P" position, and then perform the test.
- Never depress the accelerator pedal excessively. (The engine speed may rise unexpectedly when finishing the test.)

NOTE:

- Depress the accelerator pedal to check when performing the test.
- The test can be performed only when the engine is running.

Test item	Operation	Description	Accelerator pedal operation
ACCELERATOR PEDAL ACTUATOR	MODE1	Transmit the accelerator pedal feedback force control signal to the accelerator pedal actuator via ITS communication.	Constant with a force of 25 N for 8 seconds
	MODE2		Constant with a force of 15 N for 8 seconds
	MODE3		Change up to a force of 25 N for 8 seconds
	MODE4		Change up to a force of 15 N for 8 seconds
	Test start	Starts the tests of "MODE1", "MODE2", "MODE3", and "MODE4".	—
	Reset	Stops transmitting the accelerator pedal feedback force control signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	—


NOTE:

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[DCA]

The test is finished in 10 seconds after starting.

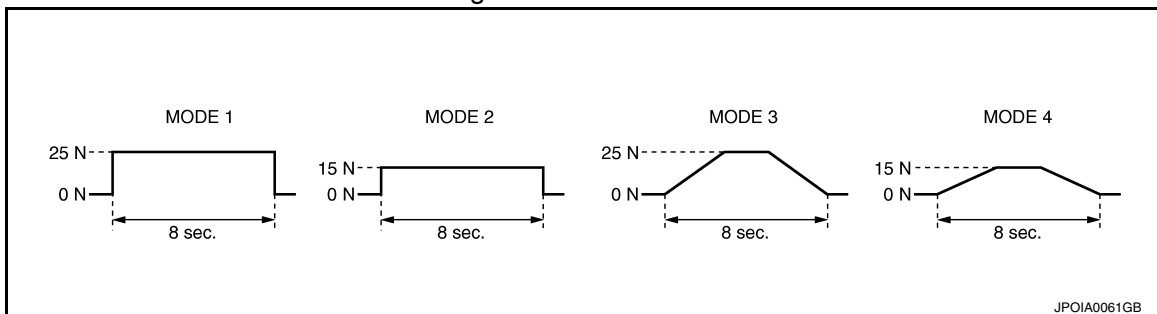

DIAGNOSIS SYSTEM (ACCELERATOR PEDAL ACTUATOR)

< SYSTEM DESCRIPTION >

[DCA]

DIAGNOSIS SYSTEM (ACCELERATOR PEDAL ACTUATOR)

CONSULT Function (ACCELE PEDAL ACT)

INFOID:000000010576429

DESCRIPTION

CONSULT performs the following functions via CAN communication with ICC sensor integrated unit and the communication with accelerator pedal actuator.

Test mode	Function
Self Diagnostic Result	- Displays malfunctioning system memorized in accelerator pedal actuator. - Displays the Freeze Frame Data when the malfunction is detected.
DATA MONITOR	Displays real-time input/output data of accelerator pedal actuator.
ACTIVE TEST	Enables operation check of electrical loads by sending driving signal to them.
ECU identification	Displays accelerator pedal actuator parts number.

SELF DIAGNOSTIC RESULT

Self Diagnostic Result

Refer to [DAS-176, "DTC Index"](#).

FFD (Freeze Frame Data)

The accelerator pedal actuator records the following data when the malfunction is detected.

Freeze Frame Data item [Unit]	Description
TGT FBK FRC [N]	It displays the target accelerator pedal actuation force that the accelerator pedal actuator read out from the accelerator pedal feedback force control signal received via ITS communication at the time when the malfunction is detected.
TGT MOT POSI [%]	It displays the target motor position that the accelerator pedal actuator read out from the accelerator pedal feedback force control signal received via ITS communication at the time when the malfunction is detected.
ACT MOT POSI [%]	It displays the integrated motor position that the accelerator pedal actuator read out at the time when the malfunction is detected.
AP OPEN [%]	It displays the accelerator pedal position signal that the accelerator pedal actuator read out via ITS communication at the time when the malfunction is detected.
APA TEMP [°C]	It displays the integrated motor temperature that the accelerator pedal actuator read out at the time when the malfunction is detected.
APA CURRENT [A]	It displays the integrated motor consumption current that the accelerator pedal actuator read out at the time when the malfunction is detected.
APA PWR [V]	It displays the power supply voltage that the accelerator pedal actuator read out at the time when the malfunction is detected.
APA OPE STATS [On/Off]	It displays the activation permission status of accelerator pedal actuator at the time when the malfunction is detected.
APA STATS [READY/NG/TP NG/INIT]	It displays the condition of accelerator pedal actuator at the time when the malfunction is detected.
IGN Counter ^{Note}	It displays number of ignition switch OFF → ON after the malfunction is detected.

NOTE:

- The number is 0 when is detected now.
- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM (ACCELERATOR PEDAL ACTUATOR)

< SYSTEM DESCRIPTION >

[DCA]

Monitor item [Unit]	FUNCTION DESCRIPTION
TGT FBK FRC [N]	It displays the target accelerator pedal actuation force that the accelerator pedal actuator read out from the accelerator pedal feedback force control signal received via ITS communication. (The ICC sensor integrated unit transmits the accelerator pedal feedback force control signal via ITS communication)
TGT MOT POSI [%]	It displays the target motor position that the accelerator pedal actuator read out from the accelerator pedal feedback force control signal received via ITS communication. (The ICC sensor integrated unit transmits the accelerator pedal feedback force control signal via ITS communication)
ACT MOT POSI [%]	It displays the integrated motor position that the accelerator pedal actuator read out.
AP OPEN [%]	It displays the accelerator pedal position signal that the accelerator pedal actuator read out via ITS communication. (The ICC sensor integrated unit transmits with ITS communication the accelerator pedal position signal that is received from ECM via CAN communication)
APA TEMP [°C]	It displays the accelerator pedal actuator integrated motor temperature.
APA CURRENT [A]	It displays the accelerator pedal actuator integrated motor consumption current.
APA PWR [V]	It displays the power supply voltage that the accelerator pedal actuator read out.
APA OPE STATS [On/Off]	It displays the activation permission status of accelerator pedal actuator.
APA STATS [READY/NG/TP NG/INIT]	It displays the condition of accelerator pedal actuator.

ACTIVE TEST

CAUTION:

Never perform ACTIVE TEST while driving the vehicle.

NOTE:

The active test cannot be performed when the ICC system warning lamp is illuminated.

Item list

Active test item	Description
ACCELERATOR PEDAL ACTUATOR TEST1	Drive the accelerator pedal actuator and generate the constant accelerator pedal actuation force.
ACCELERATOR PEDAL ACTUATOR TEST2	Drive the accelerator pedal actuator and generate the vibration.

ACCELERATOR PEDAL ACTUATOR TEST 1

NOTE:

Check the accelerator pedal by depressing when performing the test.

Active test item	Operation	Description
ACCELERATOR PEDAL AC-TUATOR TEST1	STOP	Finish the test.
	START	Generate the constant accelerator pedal actuation force for accelerator pedal.

ACCELERATOR PEDAL ACTUATOR TEST 2

NOTE:

Check the accelerator pedal by depressing when performing the test.

Active test item	Operation	Description
ACCELERATOR PEDAL AC-TUATOR TEST 2	STOP	Finish the test.
	START	Generate the vibration for accelerator pedal.

ECU IDENTIFICATION

Displays accelerator pedal assembly parts number.

DTC/CIRCUIT DIAGNOSIS

C1A00 CONTROL UNIT

Description

INFOID:0000000010576430

ICC sensor integrated unit function description

- It detects the reflected light from the vehicle ahead by irradiating a laser forward. It calculates the vehicle distance from and relative speed with the vehicle ahead depending on the detected signal.
- It outputs the brake fluid pressure command signal to the brake booster control unit and the accelerator pedal feedback force control signal to the accelerator pedal actuator depending on the signal from various sensors and switches via ITS communication.

DTC Logic

INFOID:0000000010576431

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A00 (0)	CONTROL UNIT	ICC sensor integrated unit internal malfunction	ICC sensor integrated unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Perform "All DTC Reading" with CONSULT.
3. Check if the "C1A00" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A00" detected as the current malfunction?

- YES >> Refer to [DAS-31, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010576432

1.CHECK SELF-DIAGNOSIS RESULTS

Check if any DTC other than "C1A00" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-158, "DTC Index"](#).
 NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576433

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2

Description

INFOID:0000000010576434

The ICC sensor integrated unit controls the system with the ignition power supply.

DTC Logic

INFOID:0000000010576435

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A01 (1)	POWER SUPPLY CIR	ICC sensor integrated unit power supply voltage is excessively low (less than 8 V).	• Connector, harness, fuse • ICC sensor integrated unit
C1A02 (2)	POWER SUPPLY CIR 2	ICC sensor integrated unit power supply voltage is excessively high (more than 19 V).	

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A01" or "C1A02" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A01" or "C1A02" detected as the current malfunction?

YES >> Refer to [DAS-33, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576436

1.CHECK ICC SENSOR INTEGRATED UNIT POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit of ICC sensor integrated unit. Refer to [DAS-138, "ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

NO >> Repair or replace the malfunctioning parts.

Special Repair Requirement

INFOID:0000000010576437

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

C1A03 VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A03 VEHICLE SPEED SENSOR

Description

INFOID:0000000010576438

The ICC sensor integrated unit receives the vehicle speed signal (wheel speed) from ABS actuator and electric unit (control unit) and the A/T vehicle speed sensor signal (output shaft revolution signal) from TCM via CAN communication.

DTC Logic

INFOID:0000000010576439

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A03 (3)	VHCL SPEED SE CIRC	If the vehicle speed signal (wheel speed) from ABS actuator and electric unit (control unit) and the A/T vehicle speed sensor signal (output shaft revolution signal) from TCM, received by the ICC sensor integrated unit via CAN communication, are inconsistent	• Wheel speed sensor • ABS actuator and electric unit (control unit) • Vehicle speed sensor A/T (output speed sensor) • TCM • ICC sensor integrated unit

NOTE:

If DTC "C1A03" is detected along with DTC "U1000" or "C1A04", first diagnose the DTC "U1000" or "C1A04".

- Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#) for DTC "U1000".
- Refer to [DAS-37, "DTC Logic"](#) for DTC "C1A04".

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Drive the vehicle at 30 km/h (19 MPH) or more.

CAUTION:

Always drive safely.

4. Stop the vehicle.
5. Perform "All DTC Reading" with CONSULT.
6. Check if the "C1A03" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A03" detected as the current malfunction?

- YES >> Refer to [DAS-35, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576440

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "C1A04" or "U1000" is detected other than "C1A03" in "Self Diagnostic Result" of "ICC/ADAS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-158, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK DATA MONITOR

1. Start the engine.
2. Drive the vehicle.
3. Check that the value of "VHCL SPD AT" is almost the same as the value of "VHCL SPEED SE" in "DATA MONITOR" of "ICC/ADAS".

CAUTION:

Be careful of the vehicle speed.

C1A03 VEHICLE SPEED SENSOR

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> GO TO 3.

3.CHECK TCM SELF-DIAGNOSIS RESULTS

1. Perform "All DTC Reading".
2. Check if any DTC is detected in "Self Diagnostic Result" of "TRANSMISSION".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [TM-157, "DTC Index"](#).
NO >> GO TO 4.

4.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576441

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A04 ABS/TCS/VDC SYSTEM

Description

INFOID:0000000010576442

ABS actuator and electric unit (control unit) transmits the vehicle speed signal (wheel speed), and VDC/TCS/ABS system operation condition to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576443

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A04 (4)	ABS/TCS/VDC CIRC	If the malfunction occurs in the VDC/TCS/ABS system	ABS actuator and electric unit (control unit)

NOTE:

If DTC "C1A04" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

Diagnosis Procedure

INFOID:0000000010576444

1.CHECK SELF-DIAGNOSIS RESULTS

1. Perform "All DTC Reading" with CONSULT.
2. Check if the "U1000" is detected other than "C1A04" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).

NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576445

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A05 BRAKE SW/STOP LAMP SW

Description

INFOID:0000000010576446

- ICC brake switch is turned OFF and stop lamp switch is turned ON, when depressing the brake pedal.
- ICC brake switch signal and stop lamp switch signal are input to ECM. These signals are transmitted from ECM to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576447

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A05 (5)	BRAKE SE/STOP L SW	If ICC sensor integrated unit receives the ICC brake switch signal ON status during the stop lamp switch signal ON status	• Stop lamp switch circuit • ICC brake switch circuit • Stop lamp switch • ICC brake switch • Incorrect stop lamp switch installation • Incorrect ICC brake switch installation • ECM

NOTE:

If DTC "C1A05" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

Diagnosis Procedure

INFOID:0000000010576448

1.CHECK SELF-DIAGNOSIS RESULTS

1. Perform "All DTC Reading" with CONSULT.
2. Check if the "U1000" is detected other than "C1A05" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH AND ICC BRAKE SWITCH

Check that "STOP LAMP SW" and "BRAKE SW" operate normally in "DATA MONITOR" of "ICC/ADAS".

Is the inspection result normal?

YES >> GO TO 12.

NO-1 >> When "BRAKE SW" operation is malfunctioning: GO TO 3.

NO-2 >> When "STOP LAMP SW" operation is malfunctioning: GO TO 8.

3.CHECK ICC BRAKE SWITCH INSTALLATION

1. Turn ignition switch OFF.
2. Check ICC brake switch for correct installation. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Adjust ICC brake switch installation. Refer to [BR-9, "Inspection and Adjustment"](#).

4.ICC BRAKE SWITCH INSPECTION

1. Disconnect ICC brake switch connector.
2. Check ICC brake switch. Refer to [DAS-42, "Component Inspection \(ICC Brake Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace ICC brake switch.

5.CHECK ICC BRAKE HOLD RELAY

1. Remove ICC brake hold relay.
2. Check for continuity between ICC brake hold relay terminals.

ICC brake hold relay		Continuity
Terminal		
3	4	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace ICC brake hold relay.

6.CHECK HARNESS BETWEEN ICC BRAKE HOLD RELAY AND ICC BRAKE SWITCH

1. Check for continuity between ICC brake hold relay harness connector and ICC brake switch harness connector.

ICC brake hold relay		ICC brake switch		Continuity
Connector	Terminal	Connector	Terminal	
E91	4	E114	1	Existed

2. Check for continuity between ICC brake hold relay harness connector and ground.

ICC brake hold relay		Ground	Continuity
Connector	Terminal		
E91	4		Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair the harnesses or connectors.

7.CHECK HARNESS BETWEEN ECM AND ICC BRAKE SWITCH

1. Disconnect ECM connector.
2. Check for continuity between the ECM harness connector and ICC brake switch harness connector.

ECM		ICC brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M164	126	E114	2	Existed

3. Check for continuity between ECM harness connector and ground.

ECM		Ground	Continuity
Connector	Terminal		
M164	126		Not existed

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair the harnesses or connectors.

8.CHECK STOP LAMP FOR ILLUMINATION

Check the stop lamp for illumination.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair the stop lamp circuit.

9.CHECK ICC BRAKE HOLD RELAY

1. Turn ignition switch OFF.

C1A05 BRAKE SW/STOP LAMP SW

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

2. Remove ICC brake hold relay.
3. Check for continuity between ICC brake hold relay terminals.

ICC brake hold relay		Continuity
Terminal		
3	4	Existed
7	6	Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace ICC brake hold relay.

10. CHECK HARNESS BETWEEN ECM AND ICC BRAKE HOLD RELAY

1. Disconnect ECM, rear combination lamp, and high-mounted stop lamp connectors.
2. Check for continuity between the ECM harness connector and ICC brake hold relay harness connector.

ECM		ICC brake hold relay		Continuity
Connector	Terminal	Connector	Terminal	
M164	122	E91	6	Existed

3. Check for continuity between ECM harness connector and ground.

ECM		Ground	Continuity
Connector	Terminal		
M164	122		Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair the harnesses or connectors.

11. CHECK HARNESS BETWEEN BRAKE BOOSTER CONTROL UNIT AND ICC BRAKE HOLD RELAY

1. Disconnect brake booster control unit connector.
2. Check for continuity between the brake booster control unit harness connector and brake hold relay harness connector.

Brake booster control unit		ICC brake hold relay		Continuity
Connector	Terminal	Connector	Terminal	
B249	47	E91	1	Existed

3. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B249	47		Not existed

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair the harnesses or connectors.

12. PERFORM SELF-DIAGNOSIS OF ECM

1. Connect all connectors again if the connectors are disconnected.
2. Turn ignition switch ON.
3. Perform "All DTC Reading".
4. Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE". Refer to [EC-574. "DTC Index"](#).

Is any DTC detected?

YES >> Repair or replace the malfunctioning parts identified by the self-diagnosis result.

NO >> GO TO 13.

13.CHECK ICC BRAKE HOLD RELAY DRIVE SIGNAL OUTPUT

1. Select the active test item "STOP LAMP" of "ICC/ADAS".
2. Check if "STP LMP DRIVE" is turned ON when operating the test item.

Is the inspection result normal?

- YES >> Replace brake booster control unit.
 NO >> Replace ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Component Inspection (ICC Brake Switch)

INFOID:0000000010576449

1.CHECK ICC BRAKE SWITCH

Check for continuity between ICC brake switch terminals.

Terminal		Condition	Continuity
1	2	When brake pedal is depressed	Not existed
		When brake pedal is released	Existed

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace ICC brake switch.

Component Inspection (Stop Lamp Switch)

INFOID:0000000010576450

1.CHECK STOP LAMP SWITCH

Check for continuity between stop lamp switch terminals.

Terminal		Condition	Continuity
1	2	When brake pedal is depressed	Existed
		When brake pedal is released	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace stop lamp switch.

Special Repair Requirement

INFOID:0000000010576451

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

C1A05 BRAKE SW/STOP LAMP SW

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

>> WORK END

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- P

DAS

C1A06 OPERATION SW

Description

INFOID:0000000010576452

- Turns the DCA system ON/OFF. (When the setting of the DCA system on the navigation screen is ON.)
- The ICC steering switch signal is input to the ECM. It is transmitted from ECM to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576453

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A06 (6)	OPERATION SW CIRC	If the input signal from ICC steering switch is malfunctioning	• ICC steering switch circuit • ICC steering switch • ECM

NOTE:

If DTC "C1A06" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [CCS-131, "DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Wait for approximately 5 minutes after turning the MAIN switch of ICC system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A06" is detected as the current malfunction in "Self Diagnostic Result" of "ICC/ADAS".

Is "C1A06" detected as the current malfunction?

- YES >> Refer to [DAS-44, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576454

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A06" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [CCS-131, "DTC Logic"](#).
 NO >> GO TO 2.

2.CHECK ICC STEERING SWITCH

1. Turn the ignition switch OFF.
2. Disconnect the ICC steering switch connector.
3. Check the ICC steering switch. Refer to [DAS-45, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace the ICC steering switch.

3.CHECK HARNESS BETWEEN SPIRAL CABLE AND ECM

1. Disconnect the ECM connector.
2. Check for continuity between the spiral cable harness connector and ECM harness connector.

Spiral cable		ECM		Continuity
Connector	Terminal	Connector	Terminal	

M36	25	M164	101	Existed
	32		108	

3. Check for continuity between spiral cable harness connector and ground.

Spiral cable		Ground	Continuity
Connector	Terminal		
M36	25		Not existed
	32		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4.CHECK SPIRAL CABLE

Check for continuity between spiral cable terminals.

Spiral cable		Continuity
Terminal		
13	25	Existed
16	32	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace the spiral cable.

5.PERFORM SELF-DIAGNOSIS OF ECM

1. Connect the connectors of ICC steering switch and ECM connector.
2. Turn the ignition switch ON.
3. Perform "All DTC Reading".
4. Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE".

Is any DTC detected?

YES >> Perform self-diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [EC-574, "DTC Index"](#).

NO >> Replace the ICC sensor integrated unit. Refer to [CCS-175, "Exploded View"](#).


Component Inspection

INFOID:0000000010576455

1.CHECK ICC STEERING SWITCH

Check resistance between ICC steering switch terminals.

Terminal	Switch operation	Resistance [Ω]
13 16	When pressing MAIN switch	Approx. 0
	When pressing dynamic driver assistance switch	Approx. 267
	When pressing CANCEL switch	Approx. 615
	When pressing DISTANCE switch	Approx. 1090
	When pressing SET/COAST switch	Approx. 1805
	When pressing RESUME/ACCELERATE switch	Approx. 2985
	When all switches are not pressed	Approx. 5415

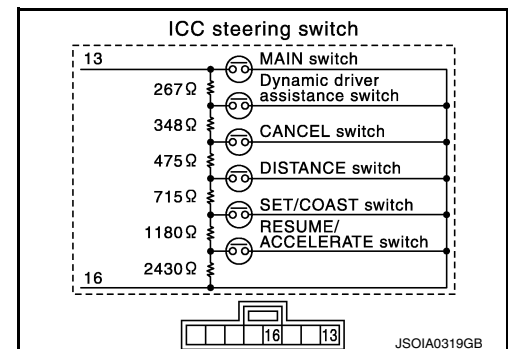

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace the ICC steering switch.

Special Repair Requirement

INFOID:0000000010576456

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A08 PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A08 PRESSURE SENSOR

Description

INFOID:0000000010576457

- The brake pressure sensor detects the brake fluid pressure value in the brake master cylinder and outputs the value to the brake booster control unit.
- The brake booster control unit receives the brake fluid pressure command signal from the ICC sensor integrated unit via ITS communication and controls the brake fluid pressure while feeding back the brake fluid pressure value (brake fluid pressure control signal).

DTC Logic

INFOID:0000000010576458

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A08 (8)	PRESS SEN CIRCUIT	If the brake pressure sensor value that is input to the brake booster control unit is malfunctioning	• Brake pressure sensor circuit • Brake pressure sensor • Brake booster control unit

NOTE:

If DTC "C1A08" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check that the "C1A08" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A08" detected as the current malfunction?

YES >> Refer to [DAS-47, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576459

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A08" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.CHECK HARNESS BETWEEN BRAKE BOOSTER CONTROL UNIT AND BRAKE PRESSURE SENSOR

1. Turn the ignition switch OFF.
2. Disconnect connectors of brake booster control unit and brake pressure sensor.
3. Check for continuity between the brake booster control unit harness connector and brake pressure sensor harness connector.

Brake booster control unit		Brake pressure sensor		Continuity
Connector	Terminal	Connector	Terminal	
B250	8	E45	3	Existed
	17		2	
	24		1	

4. Check for continuity between brake booster control unit harness connector and ground.

C1A08 PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B250	8		Not existed
	17		
	24		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK BRAKE PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Connect connectors of brake booster control unit and brake pressure sensor.
2. Turn the ignition switch ON.
3. Check voltage between brake booster control unit harness connectors.

Terminals			Voltage (Approx.)
(+) (-)			
Brake booster control unit			
Connector	Terminal		
B250	8	24	5 V

Is the inspection result normal?

YES >> Replace the brake pressure sensor.

NO >> Replace the brake booster control unit.

Special Repair Requirement

INFOID:0000000010576460

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A09 BOOSTER SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A09 BOOSTER SOLENOID

Description

INFOID:0000000010576461

- The booster solenoid is integrated with the brake booster.
- The brake booster control unit activates the booster solenoid to operate the brake booster (brake) according to the brake fluid pressure command signal received from ICC sensor integrated unit via ITS communication.

DTC Logic

INFOID:0000000010576462

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A09 (9)	BOOSTER SOL/V CIRC	If the booster solenoid is malfunctioning	• Booster solenoid • Booster solenoid circuit • Brake booster control unit

NOTE:

If DTC "C1A09" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Perform the active test item "BOOSTER SOL/V" with CONSULT.
3. Perform "All DTC Reading".
4. Check if the "C1A09" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A09" detected as the current malfunction?

- YES >> Refer to [DAS-49, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576463

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A09" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK BRAKE BOOSTER CONTROL UNIT POWER SUPPLY CIRCUIT

Check power supply and ground circuit of brake booster control unit. Refer to [DAS-138, "BRAKE BOOSTER CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CHECK HARNESS BETWEEN BRAKE BOOSTER (BOOSTER SOLENOID) AND BRAKE BOOSTER CONTROL UNIT

1. Turn the ignition switch OFF.
2. Disconnect connectors of brake booster control unit and brake booster.
3. Check for continuity between the brake booster control unit harness connector and brake booster harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A09 BOOSTER SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Brake booster control unit		Brake booster		Continuity
Connector	Terminal	Connector	Terminal	
B250	10	E44	4	Existed
	12		6	

4. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B250	10		Not existed
	12		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4.CHECK BOOSTER SOLENOID

Check the booster solenoid. Refer to [DAS-50, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the brake booster control unit.

NO >> Replace the brake booster.

Component Inspection

INFOID:0000000010576464

1.CHECK BRAKE BOOSTER (BOOSTER SOLENOID)


Check resistance between brake booster (booster solenoid) terminals.

Brake booster		Resistance
Terminal		
4	6	Approx. 1.4 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the brake booster.

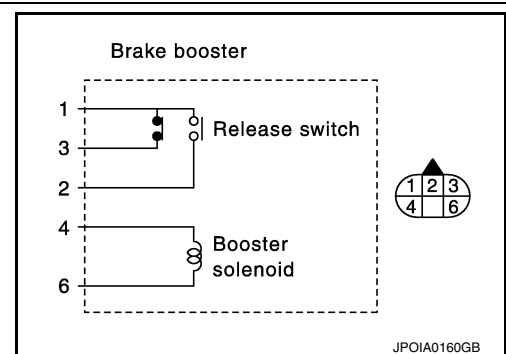

JPOIA0160GB

Special Repair Requirement

INFOID:0000000010576465

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

C1A09 BOOSTER SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A10 RELEASE SWITCH

Description

INFOID:0000000010576466

- The release switch is integrated with the brake booster.
- The release switch detects that the driver depresses the brake pedal, and it outputs the signal to the brake booster control unit.
- The brake booster control unit transmits the release switch signal [release switch NO signal (normal open), release switch NC signal (normal close)] to the ICC sensor integrated unit via ITS communication.

DTC logic

INFOID:0000000010576467

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A10 (10)	RELEASE SW CIRC	If the release switch NO signal and the release switch NC signal, received from the brake booster control unit via ITS communication, are inconsistent	• Release switch • Release switch circuit • Brake booster control unit

NOTE:

If DTC "C1A10" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE (1)

1. Start the engine.
2. Turn the DCA system ON, and wait for 5 minutes or more.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A10" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A10" detected as the current malfunction?

YES >> Refer to [DAS-52, "Diagnosis Procedure"](#).

NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE (2)

1. Depress the brake pedal strongly 10 times or more.
2. Perform "All DTC Reading".
3. Check if the "C1A10" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A10" detected as the current malfunction?

YES >> Refer to [DAS-52, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576468

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A10" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.CHECK HARNESS BETWEEN BRAKE BOOSTER (RELEASE SWITCH) AND BRAKE BOOSTER CONTROL UNIT

1. Turn the ignition switch OFF.
2. Disconnect connectors of brake booster and brake booster control unit.
3. Check for continuity between the brake booster control unit harness connector and brake booster harness connector.

C1A10 RELEASE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Brake booster control unit		Brake booster		Continuity
Connector	Terminal	Connector	Terminal	
B250	6	E44	1	Existed
	15		3	
	22		2	

4. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B250	6		Not existed
	15		
	22		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK RELEASE SWITCH POWER SUPPLY CIRCUIT

1. Connect the brake booster control unit connector.
2. Turn the ignition switch ON.
3. Check voltage between brake booster control unit harness connector and ground.

Terminal		Voltage (Approx.)
(+)	(-)	
Brake booster control unit		Ground
Connector	Terminal	
B250	6	
		10 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the brake booster control unit.

4.CHECK RELEASE SWITCH

Check the release switch. Refer to [DAS-53, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the brake booster control unit.

NO >> Replace the brake booster.

Component Inspection

INFOID:0000000010576469


1.CHECK BRAKE BOOSTER (RELEASE SWITCH)

Check for continuity between brake booster (release switch) terminals.

Condition	1 – 3	1 – 2	2 – 3
Brake pedal not depressed	Continuity	No continuity	No continuity
Brake pedal depressed	No continuity ^{NOTE}	Continuity ^{NOTE}	No continuity

NOTE:

If the depressing force is weak, it may not be changed.

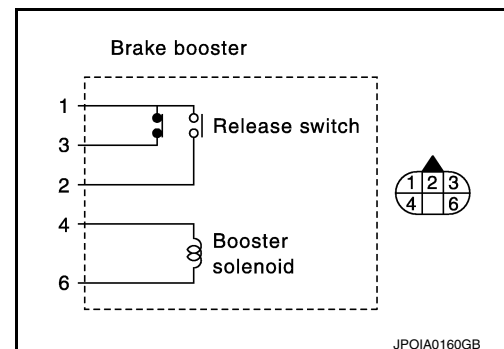

C1A10 RELEASE SWITCH

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace the brake booster.

Special Repair Requirement

INFOID:0000000010576470

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1. LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2. CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A11 PRESSURE CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A11 PRESSURE CONTROL

Description

INFOID:0000000010576471

- The brake booster control unit receives the brake fluid pressure command signal from ICC sensor integrated unit via ITS communication and activates the booster solenoid to operate the brake booster.
- The brake booster adjusts the brake fluid pressure by driving the booster solenoid.
- The brake pedal is controlled when the brake booster adjusts the brake fluid pressure.

DTC Logic

INFOID:0000000010576472

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A11 (11)	PRESSURE CONTROL	If the brake booster is malfunctioning	Brake booster

NOTE:

If DTC "C1A11" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Perform the active test item "BOOSTER SOL/V" with CONSULT.
3. Perform "All DTC Reading".
4. Check if the "C1A11" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A11" detected as the current malfunction?

- YES >> Refer to [DAS-55, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576473

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A11" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK BRAKE OPERATION

Check if the brake operates normally.

Does it operate normally?

- YES >> GO TO 4.
NO >> GO TO 3.

3.BRAKE LINE INSPECTION

1. Check the brake system, and then repair malfunctioning parts.
2. Erases All self-diagnosis results.
3. Perform "BOOSTER SOL/V" on "Active Test" of "ICC/ADAS".

Does it operate normally?

- YES >> INSPECTION END
NO >> GO TO 4.

4.CHECK BOOSTER SOLENOID

Check the booster solenoid. Refer to [DAS-56, "Component Inspection"](#).

C1A11 PRESSURE CONTROL

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace the brake booster.

5.CHECK HARNESS BETWEEN BRAKE BOOSTER (BOOSTER SOLENOID) AND BRAKE BOOSTER CONTROL UNIT

1. Turn the ignition switch OFF.
2. Disconnect connectors of brake booster control unit and brake booster.
3. Check for continuity between the brake booster control unit harness connector and brake booster harness connector.

Brake booster control unit		Brake booster		Continuity
Connector	Terminal	Connector	Terminal	
B250	10	E44	4	Existed
	12		6	

4. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B250	10		Not existed
	12		

Is the inspection result normal?

YES >> Replace the brake booster control unit.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000010576474

1.CHECK BRAKE BOOSTER (BOOSTER SOLENOID)


Check resistance between brake booster (booster solenoid) terminals.

Brake booster		Resistance
Terminal		
4	6	Approx. 1.4 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the brake booster.

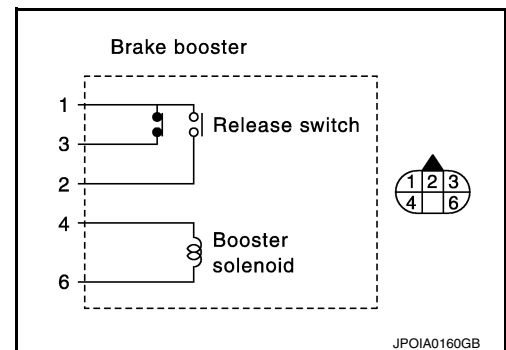

JPOIA0160GB

Special Repair Requirement

INFOID:0000000010576475

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

< DTC/CIRCUIT DIAGNOSIS >

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A12 LASER BEAM OFF CENTER

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A12 LASER BEAM OFF CENTER

Description

INFOID:0000000010576476

ICC sensor integrated unit detects the reflected light from the vehicle ahead by irradiating a laser forward. It calculates the distance from and relative speed with the vehicle ahead based on the detected signal.

DTC Logic

INFOID:0000000010576477

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A12 (12)	LASER BEAM OFFCNTR	Laser beam of ICC sensor integrated unit is off the aiming point	Laser beam is off the aiming point

Diagnosis Procedure

INFOID:0000000010576478

1. ADJUST LASER BEAM AIMING

1. Adjust the laser beam aiming with CONSULT. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).
2. Perform "All DTC Reading".
3. Check if the "C1A12" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is "C1A12" detected?

- YES >> Replace ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576479

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1. LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2. CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A13 STOP LAMP RELAY

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A13 STOP LAMP RELAY

Description

INFOID:0000000010576480

- The ICC sensor integrated unit transmits the ICC brake hold relay drive signal to the brake booster control unit via ITS communication.
- The ICC brake hold relay activates the stop lamp by the ICC brake hold relay drive signal (stop lamp drive signal) outputted by the brake booster control unit.

DTC Logic

INFOID:0000000010576481

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A13 (13)	STOP LAMP RLY FIX	• If the stop lamp is not activated even though the ICC sensor integrated unit is transmitting a ICC brake hold relay drive signal. • If the stop lamp is activated even though the ICC sensor integrated unit is not transmitting a ICC brake hold relay drive signal.	• Stop lamp switch circuit • ICC brake switch circuit • ICC brake hold relay circuit • Stop lamp switch • ICC brake switch • ICC brake hold relay • Incorrect stop lamp switch installation • Incorrect ICC brake switch installation • ECM

NOTE:

If DTC "C1A13" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE (1)

1. Start the engine.
2. Perform the active test item "STOP LAMP" with CONSULT.
3. Perform "All DTC Reading".
4. Check if the "C1A13" is detected as the current malfunction in the self-diagnosis results of "ICC/ADAS".

Is "C1A13" detected as the current malfunction?

YES >> Refer to [DAS-59, "Diagnosis Procedure"](#).

NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE (2)

1. Drive at the vehicle speed of 40 km/h (25 MPH) or more for approximately 20 seconds or more without the brake pedal depressed.

CAUTION:

Always drive safely.

NOTE:

If it is outside the above conditions, repeat the step 1.

2. Perform "All DTC Reading".
3. Check if the "C1A13" is detected as the current malfunction in the self-diagnosis results of "ICC/ADAS".

Is "C1A13" detected as the current malfunction?

YES >> Refer to [DAS-59, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576482

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A13" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

C1A13 STOP LAMP RELAY

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
- NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH AND ICC BRAKE SWITCH

Check that "STOP LAMP SW" and "BRAKE SW" operate normally in "DATA MONITOR" of "ICC/ADAS".

Is the inspection result normal?

- YES >> GO TO 12.
- NO-1 >> When "BRAKE SW" operation is malfunctioning: GO TO 3.
- NO-2 >> When "STOP LAMP SW" operation is malfunctioning: GO TO 9.

3.CHECK ICC BRAKE SWITCH INSTALLATION

1. Turn ignition switch OFF.
2. Check ICC brake switch for correct installation. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Adjust ICC brake switch installation. Refer to [BR-9, "Inspection and Adjustment"](#).

4.CHECK ICC BRAKE SWITCH

1. Disconnect ICC brake switch connector.
2. Check ICC brake switch. Refer to [DAS-42, "Component Inspection \(ICC Brake Switch\)"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace ICC brake switch.

5.CHECK ICC BRAKE HOLD RELAY

1. Remove ICC brake hold relay.
2. Check for continuity between ICC brake hold relay terminals.

ICC brake hold relay		Continuity
Terminal		
3	4	Existed

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Replace ICC brake hold relay.

6.CHECK HARNESS BETWEEN ICC BRAKE HOLD RELAY AND ICC BRAKE SWITCH

1. Check for continuity between ICC brake hold relay harness connector and ICC brake switch harness connector.

ICC brake hold relay		ICC brake switch		Continuity
Connector	Terminal	Connector	Terminal	
E91	4	E114	1	Existed

2. Check for continuity between ICC brake hold relay harness connector and ground.

ICC brake hold relay		Ground	Continuity
Connector	Terminal		
E91	4		Not existed

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair the harnesses or connectors.

7.CHECK HARNESS BETWEEN ECM AND ICC BRAKE SWITCH

1. Disconnect ECM connector.

C1A13 STOP LAMP RELAY

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check for continuity between the ECM harness connector and ICC brake switch harness connector.

ECM		ICC brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M164	126	E114	2	Existed

3. Check for continuity between ECM harness connector and ground.

ECM		Ground	Continuity
Connector	Terminal		
M164	126		Not existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8.CHECK ICC BRAKE HOLD RELAY POWER SUPPLY CIRCUIT

1. Connect ECM connector.
2. Turn the ignition switch ON.
3. Check the voltage between ICC brake hold relay harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
ICC brake hold relay			Ground
Connector	Terminal		
E91	3		
			Battery voltage

Is the inspection result normal?

YES >> GO TO 20.

NO >> Repair ICC brake hold relay power supply circuit.

9.CHECK STOP LAMP FOR ILLUMINATION

1. Turn the ignition switch OFF.
2. Remove ICC brake hold relay.
3. Check that the stop lamp is illuminated by depressing the brake pedal to turn the stop lamp ON.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check the stop lamp circuit, and repair or replace the malfunctioning parts.

10.CHECK ICC BRAKE HOLD RELAY CIRCUIT

1. Connect ICC brake hold relay.
2. Disconnect the stop lamp switch connector.
3. Check that the stop lamp does not illuminate when brake pedal is not depressed.

Is the inspection result normal?

YES >> GO TO 20.

NO >> GO TO 11.

11.CHECK ICC BRAKE HOLD RELAY

1. Remove ICC brake hold relay.
2. Check for continuity between ICC brake hold relay terminals.

ICC brake hold relay		Continuity
Terminal		
7	6	Not existed

Is the inspection result normal?

C1A13 STOP LAMP RELAY

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 20.
NO >> Replace ICC brake hold relay.

12.CHECK HARNESS BETWEEN BRAKE BOOSTER CONTROL UNIT AND ICC BRAKE HOLD RELAY

1. Turn ignition switch OFF.
2. Disconnect brake booster control unit connector and remove ICC brake hold relay.
3. Check for continuity between the brake booster control unit harness connector and ICC brake hold relay harness connector.

Brake booster control unit		ICC brake hold relay		Continuity
Connector	Terminal	Connector	Terminal	
B249	47	E91	1	Existed

4. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B249	47		Not existed

Is the inspection result normal?

- YES >> GO TO 13.
NO >> Repair the harnesses or connectors.

13.CHECK HARNESS BETWEEN ICC BRAKE HOLD RELAY AND GROUND

Check for continuity between ICC brake hold relay harness connector and ground.

ICC brake hold relay		Ground	Continuity
Connector	Terminal		
E91	2		Existed

Is the inspection result normal?

- YES >> GO TO 14.
NO >> Repair the harnesses or connectors.

14.CHECK ICC BRAKE HOLD RELAY

Check resistance between ICC brake hold relay terminals.

ICC brake hold relay		Resistance
Terminal		
1	2	Approx. 75 Ω

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Replace ICC brake hold relay.

15.CHECK BRAKE BOOSTER CONTROL UNIT OUTPUT VOLTAGE

1. Connect the brake booster control unit connector.
2. Turn ignition switch ON.
3. Perform "STOP LAMP" on "Active Test" of "ICC/ADAS", and then check the voltage between ICC brake hold relay harness connector and ground.

C1A13 STOP LAMP RELAY

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
ICC brake hold relay		Active Test item “STOP LAMP”	
Connector	Terminal		
E91	1		
		Ground	
		Off	0 V
		On	Battery voltage

Is the inspection result normal?

YES >> GO TO 16.

NO >> GO TO 21.

16.CHECK ICC BRAKE HOLD RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Check the voltage between ICC brake hold relay harness connector and ground.

Terminal		Voltage (Approx.)
(+)	(-)	
ICC brake hold relay		Ground Battery voltage
Connector	Terminal	
E91	7	

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or replace ICC brake hold relay power supply circuit.

17.CHECK HARNESS BETWEEN ICC BRAKE HOLD RELAY AND ECM

1. Disconnect ECM, rear combination lamp, and high-mounted stop lamp connectors.
2. Check for continuity between ICC brake hold relay harness connector and ECM harness connector.

ICC brake hold relay		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E91	6	M164	122	Existed

3. Check for continuity between ICC brake hold relay harness connector and ground.

ICC brake hold relay		Ground	Continuity
Connector	Terminal		
E91	6		Not existed

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair the harnesses or connectors.

18.CHECK ICC BRAKE HOLD RELAY

1. Connect ECM, rear combination lamp, and high-mounted stop lamp connectors and ICC brake hold relay.
2. Disconnect the stop lamp switch connector.
3. Turn ignition switch ON.
4. Perform "STOP LAMP" on "Active Test" of "ICC/ADAS", and then check the stop lamp for illumination.

Is the inspection result normal?

YES >> GO TO 19.

NO >> Replace ICC brake hold relay.

19.CHECK ICC BRAKE SWITCH STANDARD VOLTAGE

C1A13 STOP LAMP RELAY

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Connect the stop lamp switch connector.
3. Turn ignition switch ON.
4. Perform "STOP LAMP" on "Active Test" of "ICC/ADAS", and then check the voltage between ICC brake switch harness connector and ground.

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
ICC brake switch		Active Test item "STOP LAMP"	Battery voltage
Connector	Terminal		
E114	1	Off	Battery voltage
		On	0 V

Is the inspection result normal?

YES >> GO TO 20.

NO >> Replace ICC brake hold relay.

20.PERFORM SELF-DIAGNOSIS OF ECM

1. Connect all connectors again if the connectors are disconnected.
2. Turn ignition switch ON.
3. Perform "All DTC Reading".
4. Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE". Refer to [EC-574, "DTC Index"](#).

Is any DTC detected?

YES >> Repair or replace the malfunctioning parts identified by the self-diagnosis result.

NO >> GO TO 21.

21.CHECK ICC BRAKE HOLD RELAY DRIVE SIGNAL OUTPUT

1. Select the active test item "STOP LAMP" of "ICC/ADAS".
2. Check that "STP LMP DRIVE" is turned ON when operating the test item.

Is the inspection result normal?

YES >> Replace brake booster control unit.

NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Component Inspection

INFOID:0000000010576483

1.CHECK ICC BRAKE HOLD RELAY

Apply battery voltage to ICC brake hold relay terminals 1 and 2, and then check for continuity under the following conditions.

Condition	Terminal		Continuity
When the battery voltage is applied	3	4	Not exist- ed
	7	6	Existed
When the battery voltage is not ap- plied	3	4	Existed
	7	6	Not exist- ed

Is the inspection result normal?


YES >> INSPECTION END

NO >> Replace ICC brake hold relay.

Special Repair Requirement

INFOID:0000000010576484

DESCRIPTION

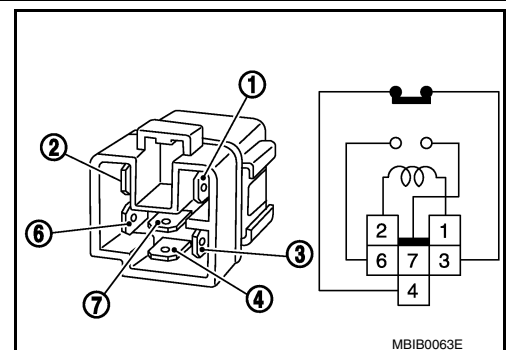

C1A13 STOP LAMP RELAY

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A14 ECM

Description

INFOID:0000000010576485

ECM transmits the accelerator pedal position signal, ICC brake switch signal, stop lamp switch signal, ICC steering switch signal, etc. to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576486

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A14 (14)	ECM CIRCUIT	If ECM is malfunctioning	- Accelerator pedal position sensor - ECM - ICC sensor integrated unit

NOTE:

If DTC "C1A14" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

1. PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine.
 - Operate the ICC system and drive.
- CAUTION:**
Always drive safely.
- Stop the vehicle.
 - Perform "All DTC Reading" with CONSULT.
 - Check if the "C1A14" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A14" detected as the current malfunction?

- YES >> Refer to [DAS-66, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576487

1. CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A14" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS OF ECM

Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [EC-574, "DTC Index"](#).
 NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576488

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A15 GEAR POSITION

Description

INFOID:0000000010576489

ICC sensor integrated unit judges the gear position based on the following signals.

- Shift position signal transmitted from TCM via CAN communication.
- Value of gear ratio calculated from input speed signal transmitted from TCM via CAN communication.
- Value of gear ratio calculated from the vehicle speed signal transmitted from ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:0000000010576490

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A15 (15)	GEAR POSITION	If a mismatch occurs between an shift position signal transmitted from TCM via CAN communication and the gear position calculated by ICC sensor integrated unit	• Input speed sensor • Vehicle speed sensor A/T (output speed sensor) • TCM

NOTE:

If DTC "C1A15" is detected along with DTC "U1000", "C1A03" or "C1A04", first diagnose the DTC "U1000", "C1A03" or "C1A04".

- Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#) for DTC "U1000".
- Refer to [DAS-35, "DTC Logic"](#) for DTC "C1A03".
- Refer to [DAS-37, "DTC Logic"](#) for DTC "C1A04".

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Drive the vehicle at 10 km/h (6 MPH) or faster for approximately 15 minutes or more.
CAUTION:
Always drive safely.
4. Stop the vehicle.
5. Perform "All DTC Reading" with CONSULT.
6. Check if the "C1A15" is detected as the current malfunction in the self-diagnosis results of "ICC/ADAS".

Is "C1A15" detected as the current malfunction?

- YES >> Refer to [DAS-68, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576491

1. CHECK SELF-DIAGNOSIS RESULTS

Check if "C1A03", "C1A04", or "U1000" is detected other than "C1A15" in "Self Diagnostic Result" of "ICC/ADAS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-158, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK VEHICLE SPEED SIGNAL

Check that "VHCL SPEED SE" operates normally in "DATA MONITOR" of "ICC/ADAS".

CAUTION:

Be careful of the vehicle speed.

Is the inspection result normal?

- YES >> GO TO 3.

C1A15 GEAR POSITION

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 7.

3.CHECK GEAR POSITION

Check that "GEAR" operates normally in "DATA MONITOR" of "ICC/ADAS".

CAUTION:

Be careful of the vehicle speed.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK GEAR POSITION SIGNAL

Check that "GEAR" operates normally in "DATA MONITOR" of "TRANSMISSION".

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 6.

5.CHECK INPUT SPEED SENSOR SIGNAL

Check that "INPUT SPEED" operates normally in "DATA MONITOR" of "TRANSMISSION".

Is the inspection result normal?

YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

NO >> GO TO 6.

6.CHECK TCM SELF-DIAGNOSIS RESULTS

1. Perform "All DTC Reading".

2. Check if any DTC is detected in "Self Diagnostic Result" of "TRANSMISSION".

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [TM-157, "DTC Index"](#).

NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

7.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

1. Perform "All DTC Reading".

2. Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).

NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576492

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

C1A15 GEAR POSITION

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

C1A16 RADAR STAIN

Description

INFOID:0000000010576493

ICC sensor integrated unit detects the reflected light from the vehicle ahead by irradiating a laser beam forward. It calculates the distance from and relative speed with the vehicle ahead based on the detected signal.

DTC Logic

INFOID:0000000010576494

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A16 (16)	RADAR STAIN	If any stain occurs to ICC sensor integrated unit body window	- Stain or foreign materials is deposited - Cracks or scratches exist

NOTE:

DTC "C1A16" may be detected under the following conditions. (Explain to the customer about the difference between the contamination detection function and the indication when the error is detected and tell them "This is not malfunction".)

- When contamination or foreign materials adhere on the ICC sensor integrated unit body window
- When driving while it is snowing or when frost forms on the ICC sensor integrated unit body window
- When the ICC sensor integrated unit body window is temporarily fogged

Diagnosis Procedure

INFOID:0000000010576495

1. VISUAL CHECK 1

Check ICC sensor integrated unit body window for contamination and foreign materials.

Does contamination or foreign materials adhere?

- YES >> Wipe out the contamination and foreign materials from the ICC sensor integrated unit body window.
- NO >> GO TO 2.

2. VISUAL CHECK 2

Check ICC sensor integrated unit body window for cracks and scratches.

Is it found?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
- NO >> GO TO 3.

3. INTERVIEW

- Ask if there is any trace of contamination or foreign materials adhering to the ICC sensor integrated unit body window.
- Ask if ICC sensor integrated unit body window was frosted during driving or if vehicle was driven in snow.
- Ask if ICC sensor integrated unit body window was temporarily fogged. (Windshield glass may also tend to fog, etc.)

What is the result of the interview with the customer?

- YES >> Explain to the customer about the difference between the contamination detection function and the indication when the malfunction is detected and tell them "This is not malfunction".
- NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576496

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

-
1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
 2. Check that the DCA system is normal.

>> WORK END

C1A18 LASER AIMING INCMP

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A18 LASER AIMING INCMP

Description

INFOID:0000000010576497

Always perform the laser beam aiming adjustment after replacing the ICC sensor integrated unit.

DTC Logic

INFOID:0000000010576498

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A18 (18)	LASER AIMING IN-CMP	Laser beam aiming of ICC sensor integrated unit is not adjusted	- No laser beam aiming adjustment is performed - Laser beam aiming adjustment has been interrupted

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A18" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A18" detected as the current malfunction?

- YES >> Refer to [DAS-73, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010576499

1.ADJUST LASER BEAM AIMING

1. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).
2. Erase All self-diagnosis results with CONSULT.
3. Perform "All DTC Reading".
4. Check if the "C1A18" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is "C1A18" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576500

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

C1A18 LASER AIMING INCOMP

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A21 UNIT HIGH TEMP

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A21 UNIT HIGH TEMP

Description

INFOID:0000000010576501

ICC sensor integrated unit integrates the temperature sensor.

DTC Logic

INFOID:0000000010576502

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A21 (21)	UNIT HIGH TEMP	If the temperature sensor (integrated in the ICC sensor integrated unit) detects a high temperature	Temperature around ICC sensor integrated unit is excessively high

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch OFF.
2. Wait for 10 minutes or more and cool the ICC sensor integrated unit.
3. Start the engine.
4. Turn the DCA system ON.
5. Perform "All DTC Reading" with CONSULT.
6. Check if the "C1A21" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A21" detected as the current malfunction?

- YES >> Refer to [DAS-75, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576503

1.CHECK ENGINE COOLING SYSTEM

Check for any malfunctions in engine cooling system.

Is engine cooling system normal?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> Repair engine cooling system.

Special Repair Requirement

INFOID:0000000010576504

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

C1A21 UNIT HIGH TEMP

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

>> WORK END

C1A22 BCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A22 BCU CIRCUIT

Description

INFOID:0000000010576505

- The brake booster control unit receives the brake fluid pressure command signal from ICC sensor integrated unit via ITS communication and activates the booster solenoid to operate the brake booster.
- The brake booster adjusts the brake fluid pressure by driving the booster solenoid.
- The brake pedal is controlled when the brake booster adjusts the brake fluid pressure.

DTC Logic

INFOID:0000000010576506

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A22 (22)	BCU CIRCUIT	If the brake booster control unit cannot control the brake booster	• Stop lamp switch circuit • ICC brake switch circuit • Stop lamp switch • ICC brake switch • Incorrect stop lamp switch installation • Incorrect ICC brake switch installation • ECM • Brake booster control unit

NOTE:

If DTC "C1A22" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A22" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A22" detected as the current malfunction?

- YES >> Refer to [DAS-77, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576507

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "C1A05" or "U1000" is detected other than "C1A22" in "Self Diagnostic Result" of "ICC/ADAS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-158, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH AND ICC BRAKE SWITCH

Check that "STOP LAMP SW" and "BRAKE SW" operate normally in "DATA MONITOR" of "ICC/ADAS".

Is the inspection result normal?

- YES >> GO TO 10.
NO-1 >> When "BRAKE SW" operation is malfunctioning: GO TO 3.
NO-2 >> When "STOP LAMP SW" operation is malfunctioning: GO TO 5.

3.CHECK ICC BRAKE SWITCH INSTALLATION

1. Turn the ignition switch OFF.
2. Check ICC brake switch for correct installation. Refer to [BR-9, "Inspection and Adjustment"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A22 BCU CIRCUIT

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4.

NO >> Adjust ICC brake switch installation. Refer to [BR-9, "Inspection and Adjustment"](#).

4. ICC BRAKE SWITCH INSPECTION

1. Disconnect ICC brake switch connector.

2. Check ICC brake switch. Refer to [DAS-42, "Component Inspection \(ICC Brake Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ICC brake switch.

5. CHECK STOP LAMP FOR ILLUMINATION

Check stop lamp illumination.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the stop lamp circuit, and repair or replace the malfunctioning parts.

6. CHECK ICC BRAKE HOLD RELAY

1. Turn the ignition switch OFF.

2. Remove ICC brake hold relay.

3. Check for continuity between ICC brake hold relay terminals.

ICC brake hold relay		Continuity
Terminal		
3	4	Existed
7	6	Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace ICC brake hold relay.

7. CHECK HARNESS BETWEEN ECM AND ICC BRAKE HOLD RELAY

1. Disconnect ECM connector.

2. Check for continuity between the ECM harness connector and ICC brake hold relay harness connector.

ECM		ICC brake hold relay		Continuity
Connector	Terminal	Connector	Terminal	
M164	122	E91	6	Existed

3. Check for continuity between ECM harness connector and ground.

ECM		Ground	Continuity
Connector	Terminal		
M164	122		Not existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8. CHECK HARNESS BETWEEN ECM AND ICC BRAKE SWITCH

1. Check for continuity between the ECM harness connector and ICC brake switch harness connector.

ECM		ICC brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M164	126	E114	2	Existed

2. Check for continuity between ECM harness connector and ground.

C1A22 BCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

ECM		Ground	Continuity
Connector	Terminal		
M164	126		Not existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair the harnesses or connectors.

9.CHECK HARNESS BETWEEN ICC BRAKE SWITCH AND ICC BRAKE HOLD RELAY

1. Disconnect ICC brake switch connector.
2. Check for continuity between ICC brake switch harness connector and ICC brake hold relay harness connector.

ICC brake switch		ICC brake hold relay		Continuity
Connector	Terminal	Connector	Terminal	
E114	1	E91	4	Existed

3. Check for continuity between ICC brake switch harness connector and ground.

ICC brake switch		Ground	Continuity
Connector	Terminal		
E114	1		Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair the harnesses or connectors.

10.PERFORM SELF-DIAGNOSIS OF ECM

1. Connect all connectors again if the connectors are disconnected.
2. Turn the ignition switch ON.
3. Perform "All DTC Reading".
4. Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE".

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [EC-574, "DTC Index"](#).

NO >> Replace the brake booster control unit.

Special Repair Requirement

INFOID:0000000010576508

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A22 BCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

C1A24 NP RANGE

Description

INFOID:0000000010576509

ICC sensor integrated unit judges the NP position status from the shift position signal and current gear position signal received from TCM via CAN communication.

DTC Logic

INFOID:0000000010576510

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A24 (24)	NP RANGE	If the shift position signal and the current gear position signal, transmitted from TCM via CAN communication, are inconsistent	• TCM • Transmission range switch

NOTE:

If DTC "C1A24" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE (1)

1. Start the engine.
2. Turn the DCA system ON.
3. Wait for approximately 5 minutes or more after shifting the selector lever to "P" position.
4. Perform "All DTC Reading" with CONSULT.
5. Check if the "C1A24" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A24" detected as the current malfunction?

- YES >> Refer to [DAS-81, "Diagnosis Procedure"](#).
 NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE (2)

1. Wait for approximately 5 minutes or more after shifting the selector lever to "N" position.
2. Perform "All DTC Reading".
3. Check if the "C1A24" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A24" detected as the current malfunction?

- YES >> Refer to [DAS-81, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576511

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A24" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2.CHECK TCM DATA MONITOR

Check that "SLCT LVR POSI" operates normally in "DATA MONITOR" of "TRANSMISSION".

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Perform diagnosis for transmission range switch circuit and repair or replace the malfunctioning parts. Refer to [TM-75, "DTC Logic"](#).

3.PERFORM TCM SELF-DIAGNOSIS

< DTC/CIRCUIT DIAGNOSIS >

1. Perform "All DTC Reading".
2. Check if any DTC is detected in "Self Diagnostic Result" of "TRANSMISSION".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [TM-157, "DTC Index"](#).
- NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576512

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1. LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2. CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A28 BCU POWER SUPPLY CIRCUIT, C1A29 BCU POWER SUPPLY CIRCUIT2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A28 BCU POWER SUPPLY CIRCUIT, C1A29 BCU POWER SUPPLY CIRCUIT2

Description

INFOID:0000000010576513

The brake booster control unit controls the brake booster, etc. with the battery power supply and ignition power supply.

DTC Logic

INFOID:0000000010576514

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A28 (28)	BCU PWR SUPPLY CIR	The brake booster control unit power supply voltage is excessively low (less than 8 V).	• Brake booster control unit • Harness, connector, fuse
C1A29 (29)	BCU PWR SUPPLY CIR2	The brake booster control unit power supply voltage is excessively high (more than 19 V).	

NOTE:

If DTC "C1A28" or "C1A29" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A28" or "C1A29" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A28" or "C1A29" detected as the current malfunction?

YES >> Refer to [DAS-83, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576515

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A28", "C1A29" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.CHECK BRAKE BOOSTER CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check brake booster control unit power supply and ground circuit. Refer to [DAS-138, "BRAKE BOOSTER CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the brake booster control unit.

NO >> Repair brake booster control unit power supply and ground circuit.

Special Repair Requirement

INFOID:0000000010576516

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

C1A28 BCU POWER SUPPLY CIRCUIT, C1A29 BCU POWER SUPPLY CIRCUIT2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

-
1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
 2. Check that the DCA system is normal.

>> WORK END

C1A30 BCU CAN COMM CIRC

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A30 BCU CAN COMM CIRC

Description

INFOID:0000000010576517

The brake booster control unit communicates with ICC sensor integrated unit for brake booster control via ITS communication.

DTC Logic

INFOID:0000000010576518

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A30 (30)	BCU CAN COMM CIRC	If ICC sensor integrated unit receives the signal for improper condition for brake booster control unit via ITS communication	ITS communication system

Diagnosis Procedure

INFOID:0000000010576519

1.PERFORM THE SELF-DIAGNOSIS

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A30" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A30" detected as the current malfunction?

- YES >> Perform trouble diagnosis for the ITS communication system. Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to [GI-47, "Intermittent Incident"](#).

Special Repair Requirement

INFOID:0000000010576520

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A31 BCU INTERNAL MALF

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A31 BCU INTERNAL MALF

Description

INFOID:0000000010576521

The brake booster control unit inputs the brake fluid pressure control signal and release switch signal and transmits them to ICC sensor integrated unit via ITS communication. Also, it receives the brake fluid pressure command signal from ICC sensor integrated unit via ITS communication and activates the booster solenoid to operate the brake booster (brake).

DTC Logic

INFOID:0000000010576522

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A31 (31)	BCU INTERNAL MALF	Brake booster control unit internal malfunction	Brake booster control unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A31" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A31" detected as the current malfunction?

- YES >> Refer to [DAS-86, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576523

1.CHECK SELF-DIAGNOSIS RESULTS

Check if any DTC other than "C1A31" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-158, "DTC Index"](#).
NO >> Replace the brake booster control unit.

Special Repair Requirement

INFOID:0000000010576524

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

C1A31 BCU INTERNAL MALF

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A32 IBA FLAG STUCK

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A32 IBA FLAG STUCK

Description

INFOID:0000000010576525

ICC sensor integrated unit shares components with the IBA system.

DTC Logic

INFOID:0000000010576526

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A32 (32)	IBA FLAG STUCK	If the control (detection) of IBA is malfunctioning	• ICC sensor integrated unit • Brake booster control unit

NOTE:

If DTC "C1A32" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON, and wait for 5 minutes or more.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A32" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A32" detected as the current malfunction?

- YES >> Refer to [DAS-88, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576527

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A32" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.REPLACE BRAKE BOOSTER CONTROL UNIT

1. Turn the ignition switch OFF.
2. Replace the brake booster control unit.
3. Erases All self-diagnosis results.
4. Perform DTC confirmation procedure. Refer to [DAS-88, "DTC Logic"](#).
5. Perform "All DTC Reading".
6. Check if the "C1A32" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is "C1A32" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576528

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

C1A32 IBA FLAG STUCK

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A33 CAN TRANSMISSION ERROR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A33 CAN TRANSMISSION ERROR

Description

INFOID:0000000010576529

ICC sensor integrated unit transmits the signal required by the DCA system control to ECM via CAN communication.

DTC Logic

INFOID:0000000010576530

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A33 (33)	CAN TRANSMISSION ERROR	If an error occurs in the CAN communication signal that ICC sensor integrated unit transmits to ECM	ICC sensor integrated unit

NOTE:

If DTC "C1A33" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A33" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A33" detected as the current malfunction?

- YES >> Refer to [DAS-90, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576531

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A33" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576532

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

C1A33 CAN TRANSMISSION ERROR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A34 COMMAND ERROR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A34 COMMAND ERROR

Description

INFOID:0000000010576533

ICC sensor integrated unit transmits the command signal required for the ECM control via CAN communication.

DTC Logic

INFOID:0000000010576534

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A34 (34)	COMMAND ERROR	If an error occurs in the command signal that ICC sensor integrated unit transmits to ECM via CAN communication	ICC sensor integrated unit

NOTE:

If DTC "C1A34" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Operate the ICC system and drive.
CAUTION:
Always drive safely.
3. Stop the vehicle.
4. Perform "All DTC Reading" with CONSULT.
5. Check if the "C1A34" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A34" detected as the current malfunction?

- YES >> Refer to [DAS-92, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576535

1. CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A34" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576536

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1. LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

C1A34 COMMAND ERROR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A35 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A35 ACCELERATOR PEDAL ACTUATOR

Description

INFOID:0000000010576537

- The accelerator pedal actuator is integrated into the accelerator pedal assembly.
- The accelerator pedal actuator consists of the control unit and motor.

DTC Logic

INFOID:0000000010576538

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A35 (35)	APA CIR	If the accelerator pedal actuator is malfunctioning	Accelerator pedal actuator

Diagnosis Procedure

INFOID:0000000010576539

1.PERFORM THE SELF-DIAGNOSIS

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A35" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A35" detected as the current malfunction?

- YES >> Replace the accelerator pedal assembly.
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576540

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32. "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A36 ACCELERATOR PEDAL ACTUATOR CAN COMM

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A36 ACCELERATOR PEDAL ACTUATOR CAN COMM

Description

INFOID:0000000010576541

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

DTC Logic

INFOID:0000000010576542

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A36 (36)	APA CAN COMM CIR	If an error occurs in the signal that the accelerator pedal actuator transmits via ITS communication	• ICC sensor integrated unit • Accelerator pedal actuator • ITS communication system

NOTE:

If DTC "C1A36" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A36" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A36" detected as the current malfunction?

- YES >> Refer to [DAS-95, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576543

1.CHECK ICC SENSOR INTEGRATED UNIT SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A36" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK ACCELERATOR PEDAL ACTUATOR SELF-DIAGNOSIS RESULTS

Check if the DTC is detected in "Self Diagnostic Result" of "ACCELE PEDAL ACT".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DAS-176, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576544

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

C1A36 ACCELERATOR PEDAL ACTUATOR CAN COMM

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32. "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A37 ACCELERATOR PEDAL ACTUATOR CAN 2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A37 ACCELERATOR PEDAL ACTUATOR CAN 2

Description

INFOID:0000000010576545

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

DTC Logic

INFOID:0000000010576546

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A37 (133)	APA CAN CIR2	If ICC sensor integrated unit detects an error signal that is received from accelerator pedal actuator via ITS communication	Accelerator pedal actuator malfunction

NOTE:

If DTC "C1A37" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine.
- Turn the DCA system ON.
- Perform "All DTC Reading" with CONSULT.
- Check if the "C1A37" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A37" detected as the current malfunction?

- YES >> Refer to [DAS-97, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576547

1.CHECK ICC SENSOR INTEGRATED UNIT SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A37" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.REPLACE ACCELERATOR PEDAL ASSEMBLY

- Turn the ignition switch OFF.
- Replace the accelerator pedal assembly.
- Turn the ignition switch ON.
- Erases All self-diagnosis results.
- Perform "All DTC Reading" again.
- Check if the DTC "C1A37" is detected in self-diagnosis results of "ICC/ADAS".

Is "C1A37" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576548

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

< DTC/CIRCUIT DIAGNOSIS >

- Removal and installation of ICC sensor integrated unit
 - Replacement of ICC sensor integrated unit
- Check the operation after performing the accelerator pedal released position learning when the following operation is performed.
- Disconnection and connection of accelerator pedal position sensor connector
 - Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT**1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED**

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A38 ACCELERATOR PEDAL ACTUATOR CAN 1

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A38 ACCELERATOR PEDAL ACTUATOR CAN 1

Description

INFOID:0000000010576549

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

DTC Logic

INFOID:0000000010576550

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A38 (132)	APA CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from accelerator pedal actuator via ITS communication	Accelerator pedal actuator malfunction

NOTE:

If DTC "C1A38" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine.
- Turn the DCA system ON.
- Perform "All DTC Reading" with CONSULT.
- Check if the "C1A38" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A38" detected as the current malfunction?

- YES >> Refer to [DAS-99, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576551

1.CHECK ICC SENSOR INTEGRATED UNIT SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A38" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.REPLACE ACCELERATOR PEDAL ASSEMBLY

- Turn the ignition switch OFF.
- Replace the accelerator pedal assembly.
- Erases All self-diagnosis results.
- Perform "All DTC Reading" again.
- Check if the "C1A38" is detected in self-diagnosis results of "ICC/ADAS".

Is "C1A38" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576552

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

< DTC/CIRCUIT DIAGNOSIS >

- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT**1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED**

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32. "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A39 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A39 STEERING ANGLE SENSOR

Description

INFOID:0000000010576553

It measures the rotation amount, rotation speed, and rotation direction of steering wheel, and then transmits them to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576554

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A39 (39)	STRG SEN CIR	If the steering angle sensor is malfunction	Steering angle sensor is malfunction

NOTE:

If DTC "C1A39" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1A39" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "C1A39" detected as the current malfunction?

- YES >> Refer to [DAS-101, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576555

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A39" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576556

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A39 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1A40 SYSTEM SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1A40 SYSTEM SWITCH CIRCUIT

Description

INFOID:0000000010576557

IBA OFF SWITCH

- The IBA ON/OFF operation is performed by IBA OFF switch.
- The IBA OFF switch signal is input to the brake booster control unit and transmits from the brake booster control unit to the ICC sensor integrated unit via ITS communication.

DTC Logic

INFOID:0000000010576558

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1A40 (40)	SYSTEM SW CIRC	If the IBA OFF switch is stuck to ON	• IBA OFF switch circuit • IBA OFF switch • Brake booster control unit

NOTE:

If DTC "C1A40" is displayed along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for approximately 10 minutes or more.
2. Perform "All DTC Reading" with CONSULT.
3. Check if the "C1A40" is detected as the current malfunction in "Self Diagnostic Result" of "ICC/ADAS".

Is "C1A40" detected as the current malfunction?

- YES >> Refer to [DAS-103, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576559

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1A40" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK DATA MONITOR

Check that "IBA SW" operate normally in "DATA MONITOR" of "ICC/ADAS".

Is the inspection result normal?

- YES >> Refer to [GI-47, "Intermittent Incident"](#).
NO >> GO TO 3.

3.CHECK IBA OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect the IBA OFF switch connector.
3. Check the IBA OFF switch. Refer to [DAS-104, "Component Inspection \(IBA OFF Switch\)"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the IBA OFF switch.

4.CHECK HARNESS BETWEEN BRAKE BOOSTER CONTROL UNIT AND IBA OFF SWITCH

1. Disconnect brake booster control unit connector.

C1A40 SYSTEM SWITCH CIRCUIT

[DCA]

< DTC/CIRCUIT DIAGNOSIS >

2. Check for continuity between the brake booster control unit harness connector and IBA OFF switch harness connector.

Brake booster control unit		IBA OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
B249	40	M184	7	Existed

3. Check for continuity between brake booster control unit and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B249	40		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5.CHECK IBA OFF SWITCH GROUND CIRCUIT

Check for continuity between IBA OFF switch harness connector and ground.

IBA OFF switch		Ground	Continuity
Connector	Terminal		
M184	6		Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6.CHECK IBA OFF SWITCH SIGNAL

1. Connect the brake booster control unit connector.
2. Turn the ignition switch ON.
3. Check voltage between brake booster control unit harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Brake booster control unit		Ground	
Connector	Terminal		
B249	40		Battery voltage

Is the inspection result normal?

YES >> Replace ICC sensor integrated unit. Refer to [DAS-194. "Exploded View"](#).

NO >> Replace the brake booster control unit.

Component Inspection (IBA OFF Switch)

INFOID:0000000010576560

1.CHECK IBA OFF SWITCH

Check for continuity of IBA OFF switch.

Terminal		Condition	Continuity
6	7	When the IBA OFF switch is pressed	Existed
		When the IBA OFF switch is released	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the IBA OFF switch.

C1A40 SYSTEM SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Special Repair Requirement

INFOID:0000000010576561

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1F01 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F01 ACCELERATOR PEDAL ACTUATOR

Description

INFOID:0000000010576562

- The accelerator pedal actuator is integrated into the accelerator pedal assembly.
- The accelerator pedal actuator consists of the control unit and motor.

DTC Logic

INFOID:0000000010576563

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F01 (91)	APA MOTOR MALF	If the accelerator pedal actuator motor error is detected	Accelerator pedal actuator integrated motor malfunction

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON.
3. Slowly depress the accelerator pedal completely, and then release it.
4. Repeat step 3 several times.
5. Perform "All DTC Reading" with CONSULT.
6. Check if the DTC "C1F01" is detected as the current malfunction on the self-diagnosis results of "ICC/ADAS" or "ACCELE PEDAL ACT".

Is "C1F01" detected as the current malfunction?

- YES >> Refer to [DAS-106, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576564

1.REPLACE ACCELERATOR PEDAL ASSEMBLY

Perform DTC confirmation procedure. If "C1F01" is detected as the current malfunction, replace the accelerator pedal assembly. Refer to [DAS-106, "DTC Logic"](#).

>> INSPECTION END

Special Repair Requirement

INFOID:0000000010576565

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

C1F01 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1F02 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F02 ACCELERATOR PEDAL ACTUATOR

Description

INFOID:0000000010576566

- The accelerator pedal actuator is integrated into the accelerator pedal assembly.
- The accelerator pedal actuator consists of the control unit and motor.

DTC Logic

INFOID:0000000010576567

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F02 (92)	APA C/U MALF	If the accelerator pedal actuator integrated control unit error is detected	Accelerator pedal actuator integrated control unit malfunction

Diagnosis Procedure

INFOID:0000000010576568

1.PERFORM THE SELF-DIAGNOSIS

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the DTC "C1F02" is detected as the current malfunction on the self-diagnosis results of "ICC/ADAS" or "ACCELE PEDAL ACT".

Is "C1F02" detected as the current malfunction?

YES >> Replace the accelerator pedal assembly.

NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576569

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1F03 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F03 ACCELERATOR PEDAL ACTUATOR

Description

INFOID:0000000010576570

The accelerator pedal actuator is integrated into with a temperature sensor.

DTC Logic

INFOID:0000000010576571

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F03	APA HI TEMP	If the accelerator pedal actuator integrated motor temperature is excessively high	Accelerator pedal actuator integrated motor malfunction

NOTE:

When the accelerator pedal actuator operates excessively, "C1F03" may be detected temporarily.

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch OFF.
2. Wait for 10 minutes or more and cool the accelerator pedal actuator integrated motor.
3. Drive the vehicle with dynamic driver assistance switch ON and operate the system.
CAUTION:
Always drive safely.
4. Stop the vehicle.
5. Perform "All DTC Reading" with CONSULT.
6. Check if the DTC "C1F03" is detected as the current malfunction in self-diagnosis results of "ACCELERATOR PEDAL ACT".

Is "C1F03" detected as the current malfunction?

- YES >> Refer to [DAS-109, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576572

1.REPLACE ACCELERATOR PEDAL ASSEMBLY

Perform DTC confirmation procedure. If "C1F03" is detected, replace the accelerator pedal assembly. Refer to [DAS-109, "DTC Logic"](#).

>> INSPECTION END

Special Repair Requirement

INFOID:0000000010576573

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1F03 ACCELERATOR PEDAL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2. Check that the DCA system is normal.

>> WORK END

C1F05 ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F05 ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT

Description

INFOID:0000000010576574

Power is supplied from ignition power supply and battery power supply to the accelerator pedal actuator.

DTC Logic

INFOID:0000000010576575

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F05 (95)	APA PWR SUPPLY CIR	The voltage input to accelerator pedal actuator is excessively low (approximately 8 V or less) or excessively high (approximately 19 V or more).	• Harness, connector, or fuse • Accelerator pedal actuator

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "C1F05" is detected as the current malfunction on the self-diagnosis results of "ICC/ADAS" or "ACCELE PEDAL ACT".

Is "C1F05" detected as the current malfunction?

YES >> Refer to [DAS-111, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576576

1.CHECK POWER SUPPLY CIRCUIT

Check the accelerator pedal actuator power supply circuit. Refer to [DAS-139, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the accelerator pedal assembly.

NO >> Repair or replace the malfunctioning parts.

Special Repair Requirement

INFOID:0000000010576577

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

C1F05 ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

>> WORK END

C1F06 CAN CIRCUIT2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F06 CAN CIRCUIT2

Description

INFOID:0000000010576578

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

DTC Logic

INFOID:0000000010576579

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F06	CAN CIR 2	If accelerator pedal actuator detects an error signal that is received from ICC sensor integrated unit via ITS communication	ICC sensor integrated unit malfunction

NOTE:

If DTC "C1F06" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine.
- Turn the DCA system ON.
- Perform "All DTC Reading" with CONSULT.
- Check if the "C1F06" is detected as the current malfunction in self-diagnosis results of "ACCELE PEDAL ACT".

Is "C1F06" detected as the current malfunction?

YES >> Refer to [DAS-113, "Diagnosis Procedure"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576580

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1F06" in "Self Diagnostic Result" of "ACCELE PEDAL ACT".

Is "U1000" detected?

YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

NO >> GO TO 2.

2.REPLACE ICC SENSOR INTEGRATED UNIT

- Turn the ignition switch OFF.
- Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
- Erases All self-diagnosis results.
- Perform "All DTC Reading" again.
- Check if the "C1F06" is detected in self-diagnosis results of "ACCELE PEDAL ACT".

Is "C1F06" detected?

YES >> Replace the accelerator pedal assembly.

NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576581

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

< DTC/CIRCUIT DIAGNOSIS >

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT**1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED**

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

C1F07 CAN CIRCUIT1

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

C1F07 CAN CIRCUIT1

Description

INFOID:0000000010576582

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

DTC Logic

INFOID:0000000010576583

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
C1F07	CAN CIR 1	If accelerator pedal actuator detects an error signal that is received from ICC sensor integrated unit via ITS communication	ICC sensor integrated unit malfunction

NOTE:

If DTC "C1F07" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine.
- Turn the DCA system ON.
- Perform "All DTC Reading" with CONSULT.
- Check if the "C1F07" is detected as the current malfunction in self-diagnosis results of "ACCELE PEDAL ACT".

Is "C1F07" detected as the current malfunction?

- YES >> Refer to [DAS-115, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576584

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "C1F07" in "Self Diagnosis Result" of "ACCELE PEDAL ACT".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.REPLACE ICC SENSOR INTEGRATED UNIT

- Turn the ignition switch OFF.
- Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
- Erases All self-diagnosis results.
- Perform "All DTC Reading" again.
- Check if the "C1F07" is detected in self-diagnosis results of "ACCELE PEDAL ACT".

Is "C1F07" detected?

- YES >> Replace the accelerator pedal assembly.
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576585

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

< DTC/CIRCUIT DIAGNOSIS >

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT**1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED**

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0121 VDC CAN 2

Description

INFOID:0000000010576586

ABS actuator and electric unit (control unit) transmits the VDC system signal to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576587

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0121 (127)	VDC CAN CIR2	If ICC sensor integrated unit detects an error signal that is received from ABS actuator and electric unit (control unit) via CAN communication	ABS actuator and electric unit (control unit)

NOTE:

If DTC "U0121" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0121" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0121" detected as the current malfunction?

- YES >> Refer to [DAS-117, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576588

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0121" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576589

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0126 STRG SEN CAN 1

Description

INFOID:0000000010576590

It measures the rotation amount, rotation speed, and rotation direction of steering wheel, and then transmits them to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576591

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0126 (130)	STRG SEN CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from steering angle sensor via CAN communication	Steering angle sensor error

NOTE:

If DTC "U0126" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0126" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0126" detected as the current malfunction?

- YES >> Refer to [DAS-119, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576592

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0126" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
 NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576593

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

U0126 STRG SEN CAN 1

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0129 BCU CAN 2

Description

INFOID:0000000010576594

The brake booster control unit transmits the signal related to brake control to ICC sensor integrated unit via ITS communication.

DTC Logic

INFOID:0000000010576595

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0129 (125)	BCU CAN CIR 2	If ICC sensor integrated unit detects an error signal that is received from brake booster control unit via ITS communication	Brake booster control unit

NOTE:

If DTC "U0129" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0129" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0129" detected as the current malfunction?

- YES >> Refer to [DAS-121, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576596

1. CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0129" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2. REPLACE BRAKE BOOSTER CONTROL UNIT

1. Turn ignition switch OFF.
2. Replace brake booster control unit.
3. Erases All self-diagnosis results.
4. Perform DTC confirmation procedure. Refer to [DAS-121, "DTC Logic"](#).
5. Perform "All DTC Reading".
6. Check if the "U0129" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is "U0129" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
 NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576597

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

-
1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
 2. Check that the DCA system is normal.

>> WORK END

U0401 ECM CAN 1

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

U0401 ECM CAN 1

Description

INFOID:0000000010576598

ECM transmits the signal related to engine control [DCA system] to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576599

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0401 (120)	ECM CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from ECM via CAN communication	ECM

NOTE:

If DTC "U0401" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0401" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0401" detected as the current malfunction?

- YES >> Refer to [DAS-123, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576600

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0401" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK ECM SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ENGINE".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [EC-574, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576601

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0402 TCM CAN 1

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

U0402 TCM CAN 1

Description

INFOID:0000000010576602

TCM transmits the signal related to A/T control to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576603

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0402 (122)	TCM CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from TCM via CAN communication	TCM

NOTE:

If DTC "U0402" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0402" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0402" detected as the current malfunction?

- YES >> Refer to [DAS-125, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576604

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0402" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK TCM SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "TRANSMISSION".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [TM-157, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576605

DAS

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0415 VDC CAN 1

Description

INFOID:0000000010576606

ABS actuator and electric unit (control unit) transmits the signal related to the VDC system to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576607

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0415 (126)	VDC CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from ABS actuator and electric unit (control unit) via CAN communication	ABS actuator and electric unit (control unit)

NOTE:

If DTC "U0415" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0415" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0415" detected as the current malfunction?

- YES >> Refer to [DAS-127, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576608

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0415" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
 NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576609

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the “self-diagnosis results”, and then perform “All DTC Reading” again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U0418 BCU CAN 1

Description

INFOID:0000000010576610

The brake booster control unit transmits the signal related to brake control to ICC sensor integrated unit via ITS communication.

DTC Logic

INFOID:0000000010576611

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0418 (124)	BCU CAN CIR1	If ICC sensor integrated unit detects an error signal that is received from brake booster control unit via CAN communication	Brake booster control unit

NOTE:

If DTC "U0418" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0418" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0418" detected as the current malfunction?

- YES >> Refer to [DAS-129, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576612

1. CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0418" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts.
 Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
 NO >> GO TO 2.

2. REPLACE BRAKE BOOSTER CONTROL UNIT

1. Turn the ignition switch OFF.
2. Replace the brake booster control unit.
3. Erases All self-diagnosis results.
4. Perform DTC confirmation procedure. Refer to [DAS-129, "DTC Logic"](#).
5. Perform "All DTC Reading".
6. Check if the "U0418" is detected in "Self Diagnostic Result" of "ICC/ADAS".

Is "U0418" detected?

- YES >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
 NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000010576613

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT**1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT**

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

-
1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
 2. Check that the DCA system is normal.

>> WORK END

U0428 STRG SEN CAN 2

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

U0428 STRG SEN CAN 2

Description

INFOID:0000000010576614

It detects the rotation amount, rotation speed, and rotation direction of steering wheel, and then transmits them to ICC sensor integrated unit via CAN communication.

DTC Logic

INFOID:0000000010576615

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U0428 (131)	STRG SEN CAN CIR2	If ICC sensor integrated unit detects an error signal that is received from steering angle sensor via CAN communication	Steering angle sensor

NOTE:

If DTC "U0428" is detected along with DTC "U1000", first diagnose the DTC "U1000". Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Turn the DCA system ON.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U0428" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U0428" detected as the current malfunction?

- YES >> Refer to [DAS-131, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576616

1.CHECK SELF-DIAGNOSIS RESULTS

Check if "U1000" is detected other than "U0428" in "Self Diagnostic Result" of "ICC/ADAS".

Is "U1000" detected?

- YES >> Perform the CAN communication system inspection. Repair or replace the malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
NO >> GO TO 2.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in "Self Diagnostic Result" of "ABS".

Is any DTC detected?

- YES >> Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [BRC-120, "DTC Index"](#).
NO >> Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).

Special Repair Requirement

INFOID:0000000010576617

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

U1000 CAN COMM CIRCUIT

ICC SENSOR INTEGRATED UNIT

ICC SENSOR INTEGRATED UNIT : Description

INFOID:0000000010576618

CAN COMMUNICATION

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control units, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H, CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads the required data only.

CAN communication signal chart. Refer to [LAN-35, "CAN Communication Signal Chart"](#).

ITS COMMUNICATION

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

ICC SENSOR INTEGRATED UNIT : DTC Logic

INFOID:0000000010576619

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U1000 (100)	CAN COMM CIRCUIT	If ICC sensor integrated unit is not transmitting or receiving CAN communication signal or ITS communication signal for 2 seconds or more	- CAN communication system - ITS communication system

NOTE:

If "U1000" is detected, first diagnose the CAN communication system.

ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure

INFOID:0000000010576620

1.PERFORM THE SELF-DIAGNOSIS

- Turn the ignition switch ON.
- Turn the DCA system ON, and wait for 30 seconds or more.
- Perform "All DTC Reading" with CONSULT.
- Check if the "U1000" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U1000" detected as the current malfunction?

YES >> Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

ICC SENSOR INTEGRATED UNIT : Special Repair Requirement

INFOID:0000000010576621

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

ACCELERATOR PEDAL ACTUATOR

ACCELERATOR PEDAL ACTUATOR : Description

INFOID:0000000010576622

- ITS communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting ICC sensor integrated unit, brake booster control unit, and accelerator pedal actuator with 2 communication lines.
- ITS communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

CAUTION:

ITS communication uses the twisted pair line. Be careful when repairing the wiring.

ACCELERATOR PEDAL ACTUATOR : DTC Logic

INFOID:0000000010576623

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
U1000	CAN COMM CIRCUIT	If accelerator pedal actuator is not transmitting or receiving ITS communication signal for 2 seconds or more.	ITS communication system

ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure

INFOID:0000000010576624

1.PERFORM THE SELF-DIAGNOSIS

1. Turn ignition switch ON.
2. Turn the DCA system ON, and wait for 2 seconds or more.
3. Perform "All DTC Reading" with CONSULT.
4. Check if the "U1000" is detected as the current malfunction in self-diagnosis results of "ACCELE PEDAL ACT".

Is "U1000" detected as the current malfunction?

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Refer to [LAN-25. "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-47. "Intermittent Incident"](#).

ACCELERATOR PEDAL ACTUATOR : Special Repair Requirement

INFOID:0000000010576625

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

Check the operation after performing the accelerator pedal released position learning when the following operation is performed.

- Disconnection and connection of accelerator pedal position sensor connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.CHECK CONTROL UNIT REPLACED, REMOVED AND/OR INSTALLED

Perform the adjustment work after the replacement or removal and installation of ICC sensor integrated unit, replacement of accelerator pedal assembly, or disconnection or connection of accelerator pedal position sensor connector.

Which is replaced, removed or installed?

ICC sensor integrated unit>>GO TO 2.

Accelerator pedal assembly>>GO TO 3.

2.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 4.

3.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the Accelerator Pedal Released Position Learning. Refer to [EC-32. "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 4.

4.CHECK DCA SYSTEM

1. Erase the self-diagnosis results, and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

DAS

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

U1010 CONTROL UNIT (CAN)

ICC SENSOR INTEGRATED UNIT

ICC SENSOR INTEGRATED UNIT : Description

INFOID:0000000010576626

- CAN controller controls the communication of CAN communication signal and the error detection.
- CAN controller controls the communication of ITS communication signal and the error detection.

ICC SENSOR INTEGRATED UNIT : DTC Logic

INFOID:0000000010576627

DTC DETECTION LOGIC

DTC (On board display)	Trouble diagnosis name	DTC detecting condition	Possible causes
U1010 (110)	CONTROL UNIT (CAN)	If ICC sensor integrated unit detects malfunction by CAN controller initial diagnosis	ICC sensor integrated unit

ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure

INFOID:0000000010576628

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the DCA system ON.
2. Perform "All DTC Reading" with CONSULT.
3. Check if the "U1010" is detected as the current malfunction in self-diagnosis results of "ICC/ADAS".

Is "U1010" detected as the current malfunction?

- YES >> Replace the ICC sensor integrated unit.
NO >> INSPECTION END

ICC SENSOR INTEGRATED UNIT : Special Repair Requirement

INFOID:0000000010576629

DESCRIPTION

Perform the action test after adjusting the laser beam aiming of ICC sensor integrated unit when the following operation is performed.

- Removal and installation of ICC sensor integrated unit
- Replacement of ICC sensor integrated unit

SPECIAL REPAIR REQUIREMENT

1.LASER BEAM AIMING ADJUSTMENT OF ICC SENSOR INTEGRATED UNIT

Adjust the laser beam aiming of the ICC sensor integrated unit. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

ACCELERATOR PEDAL ACTUATOR

ACCELERATOR PEDAL ACTUATOR : Description

INFOID:0000000010576630

CAN controller controls the communication of ITS communication signal and the error detection.

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

ACCELERATOR PEDAL ACTUATOR : DTC Logic

INFOID:0000000010576631

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
U1010	CONTROL UNIT (CAN)	If accelerator pedal actuator detects malfunction by CAN controller initial diagnosis.	Accelerator pedal actuator

ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure

INFOID:0000000010576632

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the DCA system ON.
2. Perform "All DTC Reading" with CONSULT.
3. Check if the DTC "U1010" is detected as the current malfunction in self-diagnosis results of "ACCELERATOR PEDAL ACT".

Is "U1010" detected as the current malfunction?

- YES >> Replace the accelerator pedal assembly.
NO >> INSPECTION END

ACCELERATOR PEDAL ACTUATOR : Special Repair Requirement

INFOID:0000000010576633

DESCRIPTION

The accelerator pedal released position learning is necessary when the following operation is performed.

- Disconnection and connection of accelerator pedal assembly connector
- Replace accelerator pedal assembly

SPECIAL REPAIR REQUIREMENT

1.ACCELERATOR PEDAL RELEASED POSITION LEARNING

Perform the accelerator pedal released position learning. Refer to [EC-32, "ACCELERATOR PEDAL RELEASED POSITION LEARNING : Description"](#).

>> GO TO 2.

2.CHECK DCA SYSTEM

1. Erase the "self-diagnosis results", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> WORK END

DAS

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

POWER SUPPLY AND GROUND CIRCUIT

ICC SENSOR INTEGRATED UNIT

ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure

INFOID:0000000010576634

1.CHECK FUSES

Check if any of the following fuses are blown:

Signal name	Fuse No.
Ignition power supply	45

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK ICC SENSOR INTEGRATED UNIT POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Check voltage between ICC sensor integrated unit harness connector and ground.

Terminal			Voltage (Approx.)
(+)	(-)		
ICC sensor integrated unit		Ground	Battery voltage
Connector	Terminal		
E67	1		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the ICC sensor integrated unit power supply circuit.

3.CHECK ICC SENSOR INTEGRATED UNIT GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the ICC sensor integrated unit connector.
3. Check for continuity between ICC sensor integrated unit harness connector and ground.

ICC sensor integrated unit		Ground	Continuity
Connector	Terminal		
E67	4		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair the ICC sensor integrated unit ground circuit.

BRAKE BOOSTER CONTROL UNIT

BRAKE BOOSTER CONTROL UNIT : Diagnosis Procedure

INFOID:0000000010576635

1.CHECK FUSES

Check if any of the following fuses are blown:

Signal name	Fuse No.
Battery power supply	33
Ignition power supply	45

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

2.CHECK BRAKE BOOSTER CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Check voltage between brake booster control unit harness connector and ground.

Terminal		Condition	Voltage (Approx.)
(+) (−)			
Brake booster control unit		Ignition switch	Battery volt- age
Connector	Terminal		
B250	1	OFF	
	2		
B249	33	ON	
	42		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the brake booster control unit power supply circuit.

3.CHECK BRAKE BOOSTER CONTROL UNIT GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect brake booster control unit connector.
3. Check for continuity between brake booster control unit harness connector and ground.

Brake booster control unit		Ground	Continuity
Connector	Terminal		
B250	19		Existed
	20		
B249	46		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair the brake booster control unit ground circuit.

ACCELERATOR PEDAL ACTUATOR

ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure

INFOID:000000010576636

1.CHECK FUSES

Check if any of the following fuses are blown:

Power supply	Fuse No.
Battery power supply	63
Ignition power supply	45

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the accelerator pedal actuator connector.
3. Check voltage between accelerator pedal actuator harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

Terminals		Condition	Voltage
(+)	(-)		
Accelerator pedal actuator		Ignition switch	Battery voltage
Connector	Terminal		
E115	2	OFF	Battery voltage
	1	ON	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the accelerator pedal actuator power supply circuit.

3.CHECK ACCELERATOR PEDAL ACTUATOR GROUND CIRCUIT

Check for continuity between accelerator pedal actuator harness connector and ground.

Accelerator pedal actuator		Ground	Continuity
Connector	Terminal		
E115	4		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair the accelerator pedal actuator ground circuit.

ICC WARNING CHIME CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

ICC WARNING CHIME CIRCUIT

Description

INFOID:0000000010576637

- The ICC sensor integrated unit transmits the buzzer output signal to the brake booster control unit via ITS communication.
- The brake booster control unit outputs the buzzer output signal to the ICC warning chime.
- A warning chime sounds when the system is canceled or when the vehicle distance from the vehicle ahead is too close.

Component Function Check

INFOID:0000000010576638

1. ICC WARNING CHIME OPERATION INSPECTION

1. Select the active test item "ICC BUZZER" of "ICC/ADAS" with CONSULT.
2. Check if the ICC warning chime sounds when operating each test item.

Does the ICC warning chime sound?

- YES >> The ICC warning chime circuit is normal.
NO >> Refer to [DAS-141, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010576639

1. CHECK ICC WARNING CHIME POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the ICC warning chime connector.
3. Turn ignition switch ON.
4. Check voltage between ICC warning chime harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
ICC warning chime			
Connector	Terminal	Ground	
M17	1		Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the harnesses or connectors.

2. CHECK ICC WARNING CHIME SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect brake booster control unit connector.
3. Check for continuity between the ICC warning chime harness connector and brake booster control unit harness connector.

ICC warning chime		Brake booster control unit		Continuity
Connector	Terminal	Connector	Terminal	
M17	3	B250	21	Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the harnesses or connectors.

3. CHECK ICC WARNING CHIME SIGNAL CIRCUIT SHORT

Check for continuity between ICC warning chime harness connector and ground.

ICC WARNING CHIME CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DCA]

ICC warning chime		Ground	Continuity
Connector	Terminal		
M17	3		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4.CHECK ICC WARNING CHIME

Check the ICC warning chime. Refer to [DAS-142, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the brake booster control unit.

NO >> Replace the ICC warning chime.

Component Inspection

INFOID:0000000010576640

1.ICC WARNING CHIME INSPECTION

Apply the battery voltage between ICC warning chime terminals, and then check if the ICC warning chime sounds.

Terminal		Condition	Warning chime
(+)	(-)		
1	3	When the battery voltage is applied	Sounds
		When the battery voltage is not applied	Does not sound

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ICC warning chime.

ECU DIAGNOSIS INFORMATION

ICC SENSOR INTEGRATED UNIT

Reference Value

INFOID:0000000010576641

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition		Value/Status
MAIN SW	Ignition switch ON	When MAIN switch is pressed	On
		When MAIN switch is not pressed	Off
SET/COAST SW	Ignition switch ON	When SET/COAST switch is pressed	On
		When SET/COAST switch is not pressed	Off
CANCEL SW	Ignition switch ON	When CANCEL switch is pressed	On
		When CANCEL switch is not pressed	Off
RESUME/ACC SW	Ignition switch ON	When RESUME/ACCELERATE switch is pressed	On
		When RESUME/ACCELERATE switch is not pressed	Off
DISTANCE SW	Ignition switch ON	When DISTANCE switch is pressed	On
		When DISTANCE switch is not pressed	Off
CRUISE OPE	Drive the vehicle and operate the ICC system.	When ICC system is controlling	On
		When ICC system is not controlling	Off
BRAKE SW	Ignition switch ON	When brake pedal is depressed	Off
		When brake pedal is not depressed	On
STOP LAMP SW	Ignition switch ON	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
IDLE SW	Engine running	Idling	On
		Except idling (depress accelerator pedal)	Off
SET DISTANCE	- Start the engine and turn the ICC system ON. - Press the DISTANCE switch to change the vehicle-to-vehicle distance setting.	When set to "long"	Long
		When set to "middle"	Mid
		When set to "short"	Short
CRUISE LAMP	Start the engine and press MAIN switch.	ICC system ON (MAIN switch indicator ON)	On
		ICC system OFF (MAIN switch indicator OFF)	Off
OWN VHCL	Start the engine and press MAIN switch.	ICC system ON (Own vehicle indicator ON)	On
		ICC system OFF (Own vehicle indicator OFF)	Off
VHCL AHEAD	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected (vehicle ahead detection indicator ON)	On
		When a vehicle ahead is not detected (vehicle ahead detection indicator OFF)	Off
ICC WARNING	Start the engine and press the MAIN switch.	When ICC system is malfunctioning (ICC system warning lamp ON)	On
		When ICC system is normal (ICC system warning lamp OFF)	Off

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

Monitor item	Condition		Value/Status
VHCL SPEED SE	While driving		Value of vehicle speed signal (wheel speed)
SET VHCL SPD	While driving	When vehicle speed is set	Displays the set vehicle speed.
BUZZER O/P	Engine running	When the buzzer output signal is output	On
		When the buzzer output signal is not output	Off
THRTL SENSOR	NOTE: The item is indicated, but not monitored.		0.0
ENGINE RPM	Engine running		Equivalent to tachometer reading
WIPER SW	Ignition switch ON	Wiper not operating	Off
		Wiper LO operation	Low
		Wiper HI operation	High
YAW RATE	NOTE: The item is indicated, but not monitored.		0.0
BA WARNING	Engine running	IBA OFF indicator lamp ON • When IBA system is malfunctioning • When IBA system is turned to OFF	On
		IBA OFF indicator lamp OFF • When IBA system is normal • When IBA system is turned to ON	Off
FUNC ITEM	Ignition switch ON		FUNC1
LDP SELECT	Ignition switch ON	When the LDP system setting is ON	On
		When the LDP system setting is OFF	Off
DCA SELECT	Ignition switch ON	When the DCA system setting is ON	On
		When the DCA system setting is OFF	Off
RELEASE SW NO	Engine running	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
RELEASE SW NC	Engine running	When brake pedal is depressed	Off
		When brake pedal is not depressed	On
STP LMP DRIVE	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When ICC brake hold relay is activated	On
		When the ICC brake hold relay is not activated	Off
PRESS SENS	Engine running	When brake pedal is not depressed	0.0
		When brake pedal is depressed	Brake fluid pressure value
D RANGE SW	Engine running	When the selector lever is in "D", "DS" position or manual mode	On
		When the selector lever is in any position other than "D", "DS" or manual mode	Off
NP RANGE SW	Engine running	When the selector lever is in "N", "P" position	On
		When the selector lever is in any position other than "N", "P"	Off
PKB SW	Ignition switch ON	When the parking brake is applied	On
		When the parking brake is released	Off
PWR SUP MONI	Engine running		Power supply voltage value of ICC sensor integrated unit

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

Monitor item	Condition		Value/Status
VHCL SPD AT	While driving		Value of A/T vehicle speed sensor signal
THRTL OPENING	Engine running	Depress accelerator pedal	Displays the throttle position.
GEAR	While driving		Displays the shift position.
CLUTCH SW SIG	NOTE: The item is indicated, but not monitored.		Off
NP SW SIG	NOTE: The item is indicated, but not used.		—
MODE SIG	Start the engine and press MAIN switch.	When ICC system is deactivated	Off
		When vehicle-to-vehicle distance control mode is activated	ICC
		When conventional (fixed speed) cruise control mode is activated	ASCD
SET DISP IND	- Start the engine and activate the conventional (fixed speed) cruise control mode. - Press SET/COAST switch.	SET switch indicator lamp ON	On
		SET switch indicator lamp OFF	Off
LDP SYSTEM ON	Engine running	When the LDP system is ON (LDP ON indicator lamp ON)	On
		When the LDP system is OFF (LDP ON indicator lamp OFF)	Off
LDW SYSTEM ON	Ignition switch ON	When the LDW system is ON (Warning systems ON indicator lamp ON)	On
		When the LDW system is OFF (Warning systems ON indicator lamp OFF)	Off
FCW SYSTEM ON	Ignition switch ON	When the FCW system is ON (Warning systems ON indicator lamp ON)	On
		When the FCW system is OFF (Warning systems ON indicator lamp OFF)	Off
DISTANCE	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected	Displays the distance from the preceding vehicle.
		When a vehicle ahead is not detected	0.0
RELATIVE SPD	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected	Displays the relative speed.
		When a vehicle ahead is not detected	0.0
DCA ON SW	NOTE: The item is indicated, but not monitored.		Off
DCA ON IND	Start the engine	DCA system OFF (DCA system switch indicator OFF)	Off
		DCA system ON (DCA system switch indicator ON)	On
DCA VHL AHED	Drive the vehicle and activate the DCA system.	When a vehicle ahead is not detected (vehicle ahead detection indicator OFF)	Off
		When a vehicle ahead is detected (vehicle ahead detection indicator ON)	On
IBA SW	Ignition switch ON	When the IBA OFF switch is not pressed	Off
		When the IBA OFF switch is pressed	On

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P


ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

Monitor item	Condition		Value/Status
DYNA ASIST SW	Ignition switch ON	When the dynamic driver assistance switch is pressed	On
		When the dynamic driver assistance switch is not pressed	Off
APA TEMP	Engine running		Display the accelerator pedal actuator integrated motor temperature
APA PWR	Ignition switch ON		Power supply voltage

TERMINAL LAYOUT

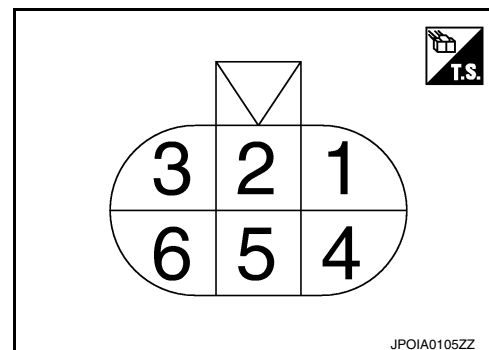

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
1 (R)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
2 (L)		ITS communication-H	Input/ Output	—	—
3 (L)		CAN-H	Input/ Output	—	—
4 (B)		Ground	—	Ignition switch ON	0 V
5 (P)		ITS communication-L	Input/ Output	—	—
6 (P)		CAN-L	Input/ Output	—	—

[DCA]

Wiring Diagram - DISTANCE CONTROL ASSIST -

A
B
C
D
E
F
G
H
I
J
K
L
M
N
DA
P




JROWC2932GB

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

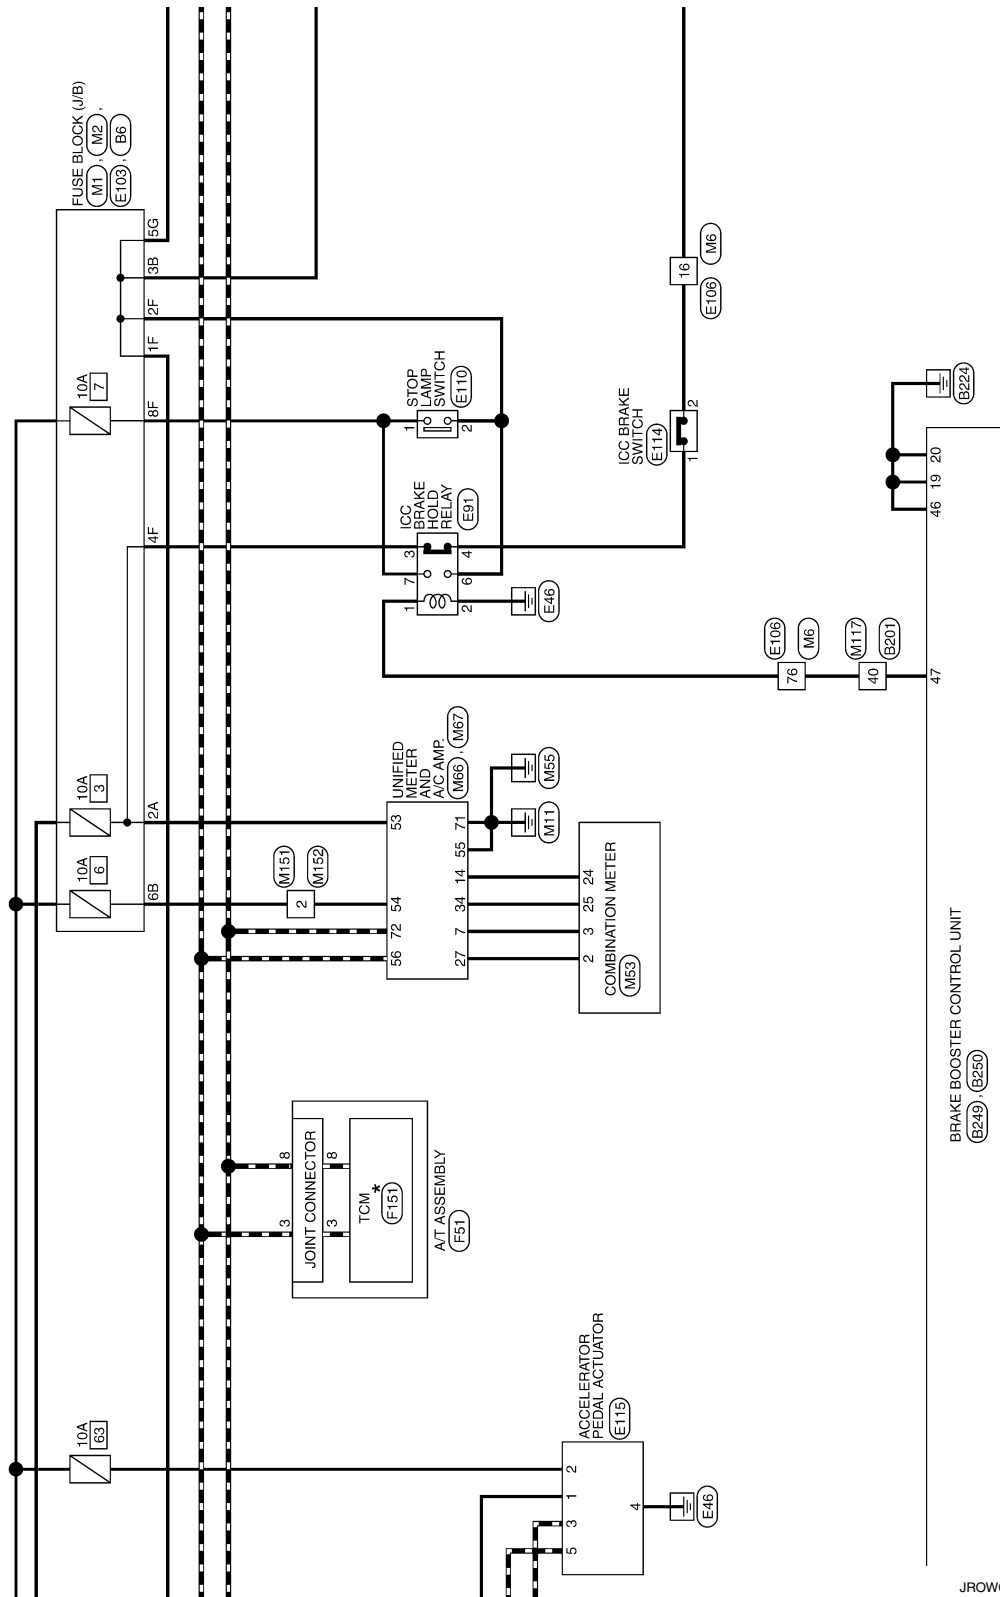


*: This connector is not shown in "Harness Layout".

JROWC2933GB

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

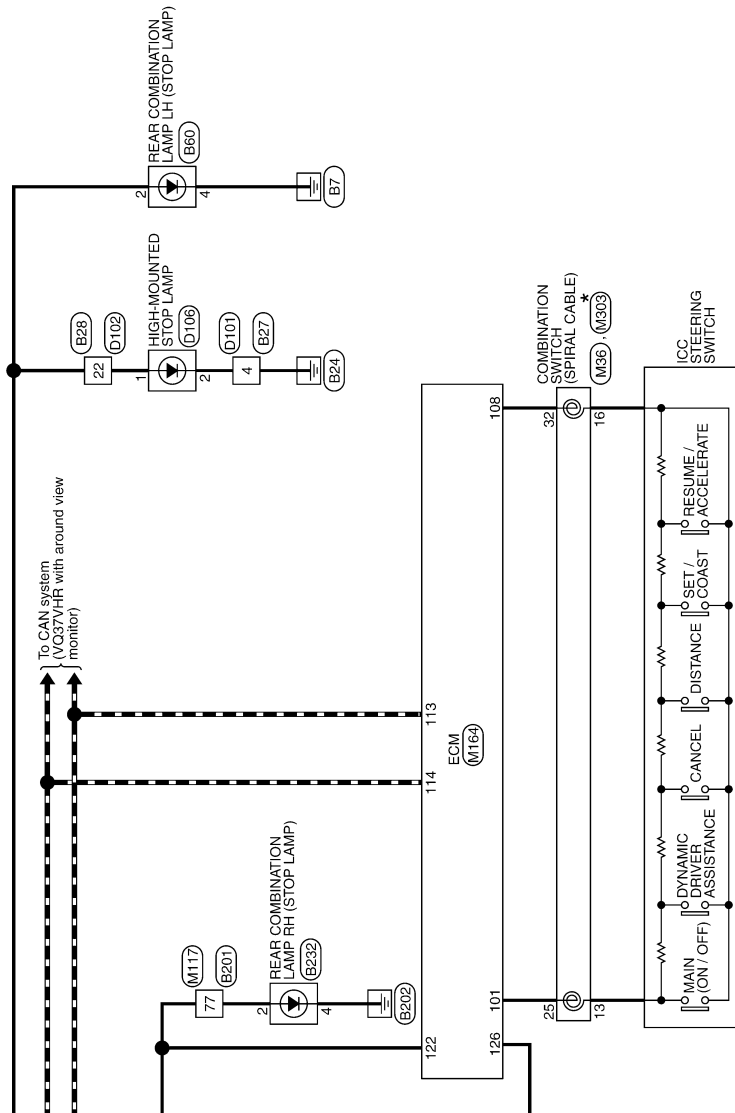

★ : This connector is not shown in "Harness Layout".

JROWC2934GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS2FBR-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10G	W	-
11G	W	-
12G	GR	-
5G	LG	-
7G	BG	-

Connector No.	B27
Connector Name	WIRE TO WIRE
Connector Type	MDSMW-GY-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	W	-
4	B	-
6	BR	-
7	G	-
8	SHIELD	-

Connector No.	B28
Connector Name	WIRE TO WIRE
Connector Type	TH2MW-AH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	W	-
4	SHIELD	-
5	G	-
6	L	-
7	R	-
8	SHIELD	-
9	W	-
10	B	-
11	G	-
12	L	-
13	W	-
14	LG	-
15	BG	-
16	G	-
17	BG	-
18	V	-
19	W	-
20	B	-
21	G	-
22	LG	-
23	R	-
24	BG	-
25	BR	-
26	GR	-
27	L	-
32	BG	-

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	TH4MW-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	B	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	SB	-
6	BG	-
7	GR	-
8	W	-
10	G	-
11	SHIELD	-
20	L	-
21	P	-
22	GR	-
23	LG	-
24	W	-
25	V	-

26	G	-
27	Y	-
28	SHIELD	-
31	W	-
32	GR	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	LG	- [With ICC]
40	V	- [Without ICC]
41	SB	- [With ICC]
41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	B	- [With ICC]
43	BR	- [Without ICC]
44	R	- [With ICC]
45	G	-
46	BG	- [With ICC]
46	SHIELD	- [Without ICC]
47	B	- [Without ICC]
47	L	- [With ICC]
48	P	- [Without ICC]
48	R	- [With ICC]
49	G	- [Without ICC]
49	W	- [With ICC]
50	SHIELD	-
51	W	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BG	-
66	Y	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-

[DCA]

< ECU DIAGNOSIS INFORMATION >


77	LG	-
80	BG	-
82	P	-
83	Y	-
84	R	-
85	SB	-
86	GR	-
87	L	-
91	V	-
92	W	-
93	R	-
94	LG	-
95	GR	-
96	W	-
97	G	-
98	BG	-
99	L	-

Connector No.	B232
Connector Name	REAR COMBINATION LAMP RH
Connector Type	TH04MW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	LG	-
3	V	-
4	B	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBA OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD RLY DRIVE SIGNAL

Connector No.	B250
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BATTERY
2	W	BATTERY
5	P	ITS COMM-L
6	SB	RELEASE SW PWR
8	R	BRAKE PRESSURE SEN PWR
10	G	BOOSTER SOL. PWR
12	R	BOOSTER SOL. GND
14	L	ITS COMM-H
15	V	RELEASE SW (NC)
17	G	BRAKE PRESSURE SEN SIGNAL
19	B	GROUND
20	B	GROUND
21	GR	CHIME SIGNAL
22	BR	RELEASE SW (NO)
23	BC	BRAKE PRESSURE SOL. GND

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	M08FW-GY-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	GR	-
6	L/W	-
7	L/B	-
8	SHIELD	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH

 

Terminal	Color Of Wire	Signal Name [Specification]
1	G	-
2	L	-
3	Y	-
4	SHIELD	-
5	R	-
6	G	-
7	Y	-
8	L	-
9	W	-
10	SHIELD	-
11	G	-
12	L	-
13	W	-


14	LG	-
15	BG	-
16	G	-
17	W	-
18	LG	-
19	BR	-
20	R	-
21	V	-
22	LG	-
23	P	-
24	BG	-
25	BG	-
26	GR	-
27	L	-
32	BG	-

Connector No.	D106
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Type	TB02MW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	R	-

Connector No.	E5
Connector Name	PDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20EW-CS12-M4-1V

 

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E56
Connector Name	ENGINE CONTROL SYSTEM POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FM-N4



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FBAHZ-LH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LBWR
3	R	LBVR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
12	L	VAC
14	P	CANL
15	SHIELD	AGND
19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Connector No.	E44
Connector Name	BRAKE BOOSTER
Connector Type	RV08FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	P	-
3	V	-
4	Y	-
6	BR	-

Connector No.	E45
Connector Name	BRAKE PRESSURE SENSOR
Connector Type	AA203FBZ-S

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	L	-
3	LG	-

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	L	ITS COMA-H
3	L	CAN-H
4	B	GROUND
5	P	ITS COMA-L
6	P	CAN-L

Connector No.	E91
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	MO0FGY-RUS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-
3	G	-
4	G	-
6	W	-
7	L	-


ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10F	L	-
1F	SB	-
2F	W	-
3F	Y	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-

13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
21	Y	- [Without ICC]
22	BR	-
23	R	- [With ICC]
24	V	- [Without ICC]
25	G	- [With ICC]
26	L	- [Without ICC]
27	P	- [With ICC]
28	Y	- [Without ICC]
29	SHIELD	-
30	G	-
31	LG	-
32	BG	-
33	W	-
34	Y	-
35	BG	-
36	GR	-
37	Y	-
38	LG	-
39	LG	-
40	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	BG	-
54	R	-
55	SB	-
56	P	-
57	SB	-
58	V	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	BG	-
66	L	-

70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	BR	-

Connector No.	E114
Connector Name	ICC BRAKE SWITCH
Connector Type	M02FBR-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-

Connector No.	E115
Connector Name	ACCELERATOR PEDAL ACTUATOR
Connector Type	KD206FB

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	BG	BATTERY
3	P	ITS COMM-L
4	B	GROUND
5	L	ITS COMM-H

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >


[DCA]

DISTANCE CONTROL ASSIST


Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	R	IGNITION POWER SUPPLY (BACK-UP)
3	L	CAN-H
4	V	CAN-L
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CAN-L
9	GR	STARTER RELAY (with VQ engine)
9	LG	STARTER RELAY (with VK engine)
10	B	GROUND

 


Connector No.	F51
Connector Name	TCM
Connector Type	SP10FG

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	R	CAN-H
4	O	CAN-L
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CAN-L
9	Y	STARTER RELAY

10	W/B	GROUND
----	-----	--------


Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-AZ

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

 


Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1B	LG	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	L	-
8B	R	-
9B	BR	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH00MW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	LG	- [Without Auto aircon seat]
3	SB	- [With Auto aircon seat]
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	GR	- [Without ICC]
20	W	- [With ICC]
21	BR	- [Without ICC]
21	R	- [With ICC]
22	L	- [Without ICC]
22	R	- [With ICC]
23	G	-
24	L	- [Without ICC]
24	P	- [With ICC]
25	W	- [Without ICC]
25	Y	- [With ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	BG	-
32	W	-

33	Y	-
34	L	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	BG	-
50	LG	-
51	SB	-
52	Y	-
53	BG	-
54	BR	-
55	SB	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	BG	-
69	V	-
70	SHIELD	-
71	BG	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	BG	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

ICC SENSOR INTEGRATED UNIT


< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST


95	G	-
96	W	-
97	W	-
98	S/SHIELD	-
100	Y	-

Connector No.	M17
Connector Name	ICC WARNING CHIME
Connector Type	A03FW

 

Terminal No.	Signal Name [Specification]
1	G
3	W

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Signal Name [Specification]
3	LG
4	B
5	B
6	L
7	GR
8	G
11	SB
12	P
13	L
14	P
16	BG

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-1V




Terminal No.	Signal Name [Specification]
24	P
25	SB
26	B
31	L
32	V
33	B
34	G

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH



Terminal No.	Signal Name [Specification]
1	L
2	P
7	B
8	GR

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH

 

Terminal No.	Signal Name [Specification]
1	BG
2	LG
3	GR
5	B
6	W
7	P
10	G
15	B
16	B
21	R
24	BR
25	Y
26	R
27	V
28	W
29	SB
30	G
31	L
34	B
36	LG
37	SB
38	L
39	P
40	BG

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	Signal Name [Specification]
5	L
6	BG
7	GR
8	L
9	SB
10	W
11	G
14	BR
20	L
23	Y
25	V
26	G
27	LG
28	R
30	V
34	Y
38	L

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



Terminal No.	Signal Name [Specification]
41	V
42	Y
43	R

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Terminal No.	Color Of Wire	Signal Name [Specification]
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	V	GAS SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	BG	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	B	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	IGN MODE SIGNAL
65	BG	ECV SIGNAL
69	L	A/C LAM SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	SHIELD	-
20	R	-
21	G	-
22	GR	-
23	V	-
24	W	-

25	R	-
26	P	-
27	L	-
28	SHIELD	-
31	W	-
32	W	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	V	-
41	SB	- [With ICC]
41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	B	- [With ICC]
43	P	- [Without ICC]
44	R	- [With ICC]
45	G	- [Without ICC]
45	L	- [With ICC]
46	BG	- [Without ICC]
46	SHIELD	- [With ICC]
47	B	- [Without ICC]
47	L	- [With ICC]
48	P	- [Without ICC]
48	R	- [With ICC]
49	G	- [Without ICC]
49	W	- [With ICC]
50	SHIELD	-
51	BG	-
52	GR	-
53	G	-
54	L	-
55	P	-
60	LG	-
61	R	-
62	SB	-
63	V	-
64	Y	-
65	BR	-
66	BG	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	V	-
74	LG	-
75	BR	-
76	V	-

77	LG	-
80	R	-
82	Y	-
83	BG	-
84	W	-
85	SB	-
86	B	-
87	P	-
91	L	-
92	L	-
93	G	-
94	BG	-
95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M152
Connector Name	WIRE TO WIRE
Connector Type	M03MW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M164
Connector Name	ECM
Connector Type	RH24FGY-R28-R1-H-Z

 

Terminal No.	Color Of Wire	Signal Name [Specification]
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	P	ACCELERATOR PEDAL POSITION SENSOR 2 [Without NAVI]
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2 [With NAVI]
99	G	SENSOR POWER SUPPLY [With NAVI]
99	L	SENSOR POWER SUPPLY [Without NAVI]
100	W	SENSOR GROUND
101	SB	ASD/ICC STEERING SWITCH
102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	G	SENSOR POWER SUPPLY [Without NAVI]
103	L	SENSOR POWER SUPPLY [With NAVI]
104	BR	SENSOR GROUND [Without NAVI]
104	GR	SENSOR GROUND [With NAVI]
105	L	REFRIGERANT PRESSURE SENSOR
106	W	FUEL TANK TEMPERATURE SENSOR
107	BG	SENSOR POWER SUPPLY
108	V	SENSOR GROUND
109	G	PNP SIGNAL

ICC SENSOR INTEGRATED UNIT


< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST


Terminal No.	Signal Name [Specification]
110 R	ENGINE SPEED OUTPUT SIGNAL
112 V	SENSOR GROUND (LINE SW) CONTROL SYSTEM PRESSURE SENSOR
113 W	SENSOR GROUND (LINE SW) CONTROL SYSTEM PRESSURE SENSOR
114 P	CAN COMMUNICATION LINE
117 GR	CAN COMMUNICATION LINE
121 LG	DATA LINK CONNECTOR
122 P	EVAP CANISTER VENT CONTROL VALVE
123 B	STOP LAMP SWITCH
124 B	ECM GROUND
125 GR	POWER SUPPLY FOR ECM
126 BR	ASCD/ICC BRAKE SWITCH
127 B	ECM GROUND
128 B	ECM GROUND

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH

 


Terminal No.	Signal Name [Specification]
76 LG	AV COMM (L)
77 SB	AV COMM (H)
78 LG	AV COMM (L)
79 SB	AV COMM (H)
80 P	CAN-L
81 L	CAN-H
82 BR	SW GND
86 SHIELD	SHIELD
87 L	TEL VOICE SIGNAL (+)
88 P	TEL VOICE SIGNAL (-)
92 R	VEHICLE SPEED SIGNAL (8-PULSE)
93 V	PARKING BRAKE SIGNAL
94 BG	REVERSE SIGNAL
95 G	IGNITION SIGNAL
96 SB	DISK EJECT SIGNAL
102 B	AUX GND
103 W	AUX AUDIO LH+
104 R	AUX AUDIO RH+

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH

 

Terminal No.	Signal Name [Specification]
65 V	PARKING BRAKE SIGNAL
67 B	COMPOSITE IMAGE SIGNAL GND
68 R	COMPOSITE IMAGE SIGNAL
71 SHIELD	MICROPHONE SHIELD
72 G	MICROPHONE VCC
73 R	COMM (CONT-2DISP)
74 P	CAN-L
75 LG	AV COMM (L)
76 LG	AV COMM (L)
79 R	ILLUMINATION
80 G	IGNITION SIGNAL
81 BG	REVERSE SIGNAL
82 R	VEHICLE SPEED SIGNAL (8-PULSE)
87 R	MICROPHONE SIGNAL
88 B	SHIELD
89 G	COMM (DISP->CONT)
90 L	CAN-H
91 SB	AV COMM (H)
92 SB	AV COMM (H)

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY

 

Fail-Safe

If a malfunction occurs in the system, a chime sounds a beep, and ICC sensor integrated unit cancels the control. Then the ICC system warning lamp in the combination meter illuminates.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DTC Inspection Priority Chart

INFOID:000000010576644

If multiple DTCs are detected simultaneously, check them one by one depending on the following DTC inspection priority chart.

Priority	Detected items (DTC)
1	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	• C1A31: BCU INTERNAL MALF • C1F02: APA C/U MALF
3	• C1A01: POWER SUPPLY CIR • C1A02: POWER SUPPLY CIR 2 • C1A04: ABS/TCS/VDC CIRC • C1A05: BRAKE SW/STOP L SW • C1A06: OPERATION SW CIRC • C1A08: PRESS SEN CIRCUIT • C1A09: BOOSTER SOL/V CIRC • C1A10: RELEASE SW CIRC • C1A11: PRESSURE CONTROL • C1A12: LASER BEAM OFFCNTR • C1A13: STOP LAMP RLY FIX • C1A14: ECM CIRCUIT • C1A16: RADAR STAIN • C1A18: LASER AIMING INCOMP • C1A21: UNIT HIGH TEMP • C1A22: BCU CIRCUIT • C1A24: NP RANGE • C1A28: BCU PWR SUPPLY CIR • C1A29: BCU PWR SUPPLY CIR2 • C1A30: BCU CAN COMM CIRC • C1A32: IBA FLAG STUCK • C1A33: CAN TRANSMISSION ERROR • C1A34: COMMAND ERROR • C1A35: APA CIR • C1A36: APA CAN COMM CIR • C1A37: APA CAN CIR2 • C1A38: APA CAN CIR1 • C1A39: STRG SEN CIR • C1A40: SYSTEM SW CIRC • C1F01: APA MOTOR MALF • C1F05: APA PWR SUPPLY CIR • U0121: VDC CAN CIR2 • U0126: STRG SEN CAN CIR1 • U0129: BCU CAN CIR2 • U0401: ECM CAN CIR1 • U0402: TCM CAN CIR1 • U0415: VDC CAN CIR1 • U0418: BCU CAN CIR1 • U0428: STRG SEN CAN CIR2
4	• C1A03: VHCL SPEED SE CIRC
5	• C1A15: GEAR POSITION
6	• C1A00: CONTROL UNIT

DTC Index

INFOID:000000010576645

NOTE:

- The details of time display are as per the following.
 - CRNT: A malfunction is detected now
 - PAST: A malfunction was detected in the past
- IGN counter is displayed on FFD (Freeze Frame Data).
- 0: The malfunctions that are detected now
CAN communication system (U1000, U1010)

ICC SENSOR INTEGRATED UNIT

[DCA]

< ECU DIAGNOSIS INFORMATION >

- 1 - 39: It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever the ignition switch OFF → ON. It returns to 0 when a malfunction is detected again in the process.
- If it is over 39, it is fixed to 39 until the self-diagnosis results are erased.
- Other than CAN communication system (Other than U1000, U1010)
- 1 - 49: It increases like 0 → 1 → 2 ... 38 → 49 after returning to the normal condition whenever the ignition switch OFF → ON. It returns to 0 when a malfunction is detected again in the process.
- If it is over 49, it is fixed to 49 until the self-diagnosis results are erased.

NOTE:

IBA system automatically returns to ON, when erasing self diagnosis result.

×: Applicable

DTC		CONSULT display	ICC sys- tem warning lamp	Fail-safe function			Reference
CONSULT	On board display			Vehicle-to-ve- hicle distance control mode	Conven- tional (fixed speed) cruise con- trol mode	IBA sys- tem	
C1A00	0	CONTROL UNIT	×	×	×	×	CCS-47
C1A01	1	POWER SUPPLY CIR	×	×	×	×	CCS-49
C1A02	2	POWER SUPPLY CIR 2	×	×	×	×	CCS-49
C1A03	3	VHCL SPEED SE CIRC	×	×	×	×	CCS-51
C1A04	4	ABS/TCS/VDC CIRC	×	×	×	×	CCS-53
C1A05	5	BRAKE SW/STOP L SW	×	×	×	×	CCS-55
C1A06	6	OPERATION SW CIRC	×	×	×		CCS-60
C1A08	8	PRESS SEN CIRCUIT	×	×	×	×	CCS-63
C1A09	9	BOOSTER SOL/V CIRC	×	×	×	×	CCS-65
C1A10	10	RELEASE SW CIRC	×	×	×	×	CCS-68
C1A11	11	PRESSURE CONTROL	×	×	×	×	CCS-71
C1A12	12	LASER BEAM OFFCNTR	×	×		×	CCS-74
C1A13	13	STOP LAMP RLY FIX	×	×		×	CCS-75
C1A14	14	ECM CIRCUIT	×	×	×		CCS-82
C1A15	15	GEAR POSITION	×	×	×	×	CCS-84
C1A16	16	RADAR STAIN	×	×		×	CCS-87
C1A18	18	LASER AIMING INCOMP	×	×		×	CCS-89
C1A21	21	UNIT HIGH TEMP	×	×	×	×	CCS-91
C1A22	22	BCU CIRCUIT	×	×	×	×	CCS-93
C1A24	24	NP RANGE	×	×	×	×	CCS-97
C1A28	28	BCU PWR SUPPLY CIR	×	×	×	×	CCS-99
C1A29	29	BCU PWR SUPPLY CIR2	×	×	×	×	CCS-99
C1A30	30	BCU CAN COMM CIRC	×	×	×	×	CCS-101
C1A31	31	BCU INTERNAL MALF	×	×	×	×	CCS-102
C1A32	32	IBA FLAG STUCK	×	×	×	×	CCS-104
C1A33	33	CAN TRANSMISSION ERROR	×	×	×	×	CCS-106
C1A34	34	COMMAND ERROR	×	×	×	×	CCS-108
C1A35	35	APA CIR	×	×			DAS-94
C1A36	36	APA CAN COMM CIR	×	×			DAS-95
C1A37	133	APA CAN CIR2	×	×	×		DAS-97
C1A38	132	APA CAN CIR1	×	×	×		DAS-99
C1A39	39	STRG SEN CIR	×	×	×		CCS-110

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

DTC		CONSULT display	ICC system warning lamp	Fail-safe function			Reference
CONSULT	On board display			Vehicle-to-vehicle distance control mode	Conventional (fixed speed) cruise control mode	IBA system	
C1A40	40	SYSTEM SW CIRC	×	×	×	×	CCS-112
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	55	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—	—	—	—	—
C1F01	91	APA MOTOR MALF	×	×			DAS-106
C1F02	92	APA C/U MALF	×	×			DAS-108
C1F05	95	APA PWR SUPPLY CIR	×	×			DAS-111
U0121	127	VDC CAN CIR2	×	×	×	×	CCS-115
U0126	130	STRG SEN CAN CIR1	×	×	×		CCS-117
U0129	125	BCU CAN CIR2	×	×	×	×	CCS-119
U0401	120	ECM CAN CIR1	×	×	×	×	CCS-121
U0402	122	TCM CAN CIR1	×	×	×	×	CCS-123
U0415	126	VDC CAN CIR1	×	×	×	×	CCS-125
U0418	124	BCU CAN CIR1	×	×	×	×	CCS-127
U0428	131	STRG SEN CAN CIR2	×	×	×		CCS-129
U1000	100	CAN COMM CIRCUIT	×	×	×	×	CCS-131
U1010	110	CONTROL UNIT (CAN)	×	×	×	×	CCS-133

BRAKE BOOSTER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


[DCA]

BRAKE BOOSTER CONTROL UNIT

Reference Value

INFOID:0000000010576646

TERMINAL LAYOUT

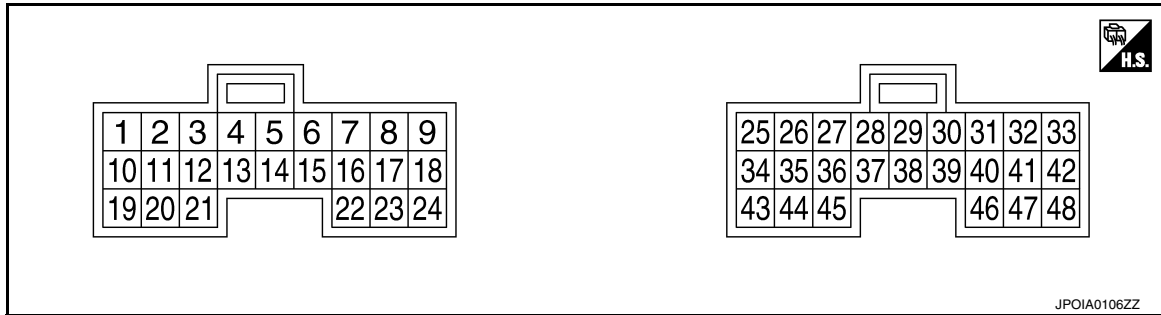

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	—	Ignition switch OFF	—	Battery voltage
2 (W)		Battery power supply	—	Ignition switch OFF	—	Battery voltage
5 (P)		ITS communication-L	Input/ Output	—	—	—
6 (SB)		Release switch power supply	—	Ignition switch ON	—	10 V
8 (R)	24 (BG)	Brake pressure sensor power supply	—	Ignition switch ON	—	5 V
10 (G)	Ground	Booster solenoid pow- er supply	—	Ignition switch ON	—	12 V
12 (R)		Booster solenoid ground	Output	Ignition switch ON	At "BOOSTER SOL/V " test of "Active test"	
14 (L)		ITS communication-H	Input/ Output	—	—	—
15 (V)		Release switch (nor- mal close)	—	Ignition switch ON	Press the brake pedal Brake pedal not depressed	0 V 10 V
17 (G)	24 (BG)	Brake pressure sensor signal	Input	Ignition switch ON	Brake pedal not depressed Press the brake pedal	0.5 V 0.5 - 3.5 V Note: The harder the brake is pressed, the higher the voltage.

BRAKE BOOSTER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DCA]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	—	Signal name	Input/ Output			
19 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
20 (B)		Ground	—	Ignition switch ON	—	0 V
21 (GR)		ICC warning chime signal	Output	Ignition switch ON	ICC warning chime not oper- ating	12 V
					ICC warning chime opera- tion	0 V
22 (BR)		Release switch (normal open)	Input	Ignition switch ON	Brake pedal depressed	10 V
					Brake pedal not depressed	0 V
24 (BG)		Brake pressure sensor ground	—	—	—	—
33 (G)		Ignition power supply	—	Ignition switch ON	—	Battery voltage
40 (SB)		IBA OFF switch	Input	Ignition switch ON	IBA OFF switch pressed	0 V
					IBA OFF switch not pressed	12 V
42 (G)		Ignition power supply	—	Ignition switch ON	—	Battery voltage
46 (B)		Ground	—	Ignition switch ON	—	0 V
47 (LG)		ICC brake hold relay drive signal	Output	Ignition switch ON	—	0 V
					At “STOP LAMP” test of “Ac- tive test”	12 V

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

ACCELERATOR PEDAL ACTUATOR

Reference Value

INFOID:000000010576647


VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition		Value/Status
TGT FBK FRC	Drive the vehicle and operate the DCA system	When the ICC sensor integrated unit is controlling the accelerator pedal actuator	It changes with the demand from the ICC sensor integrated unit.
TGT MOT POSI	NOTE: The item is indicated, but not used.		—
ACT MOT POSI	Engine running	Depress accelerator pedal	It changes according to the depressed amount of accelerator pedal
AP OPEN	Engine running	Depress accelerator pedal	It changes according to the depressed amount of accelerator pedal
APA TEMP	Engine running		Display the accelerator pedal actuator integrated motor temperature
APA CURRENT	Drive the vehicle and operate the DCA system	When the ICC sensor integrated unit is controlling the accelerator pedal actuator	Display the accelerator pedal actuator motor operation consumption current
APA PWR	Ignition switch ON		Battery voltage
APA OPE STATS	Engine running	When the accelerator pedal actuator control is permitted	On
		When the accelerator pedal actuator control is invalid	Off
APA STATS	Engine running	When the accelerator pedal actuator is normal	Ready
		When the accelerator pedal actuator is temporarily malfunctioning	TP NG
		When the accelerator pedal actuator is malfunctioning	NG
		During the accelerator pedal actuator operation preparations	Init

TERMINAL LAYOUT

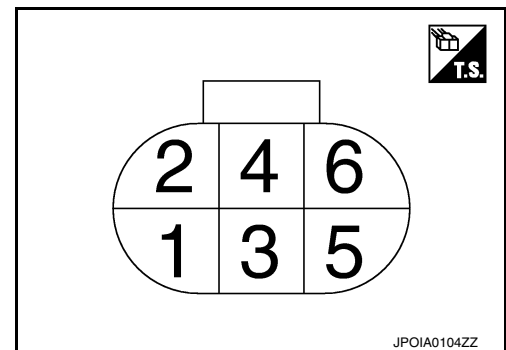

PHYSICAL VALUES

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
1 (R)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
2 (BG)		Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (P)		ITS communication-L	Input/ Output	—	—
4 (B)		Ground	—	Ignition switch ON	0 V
5 (L)		ITS communication-H	Input/ Output	—	—


ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

Wiring Diagram - DISTANCE CONTROL ASSIST -

INFOID:000000010576648

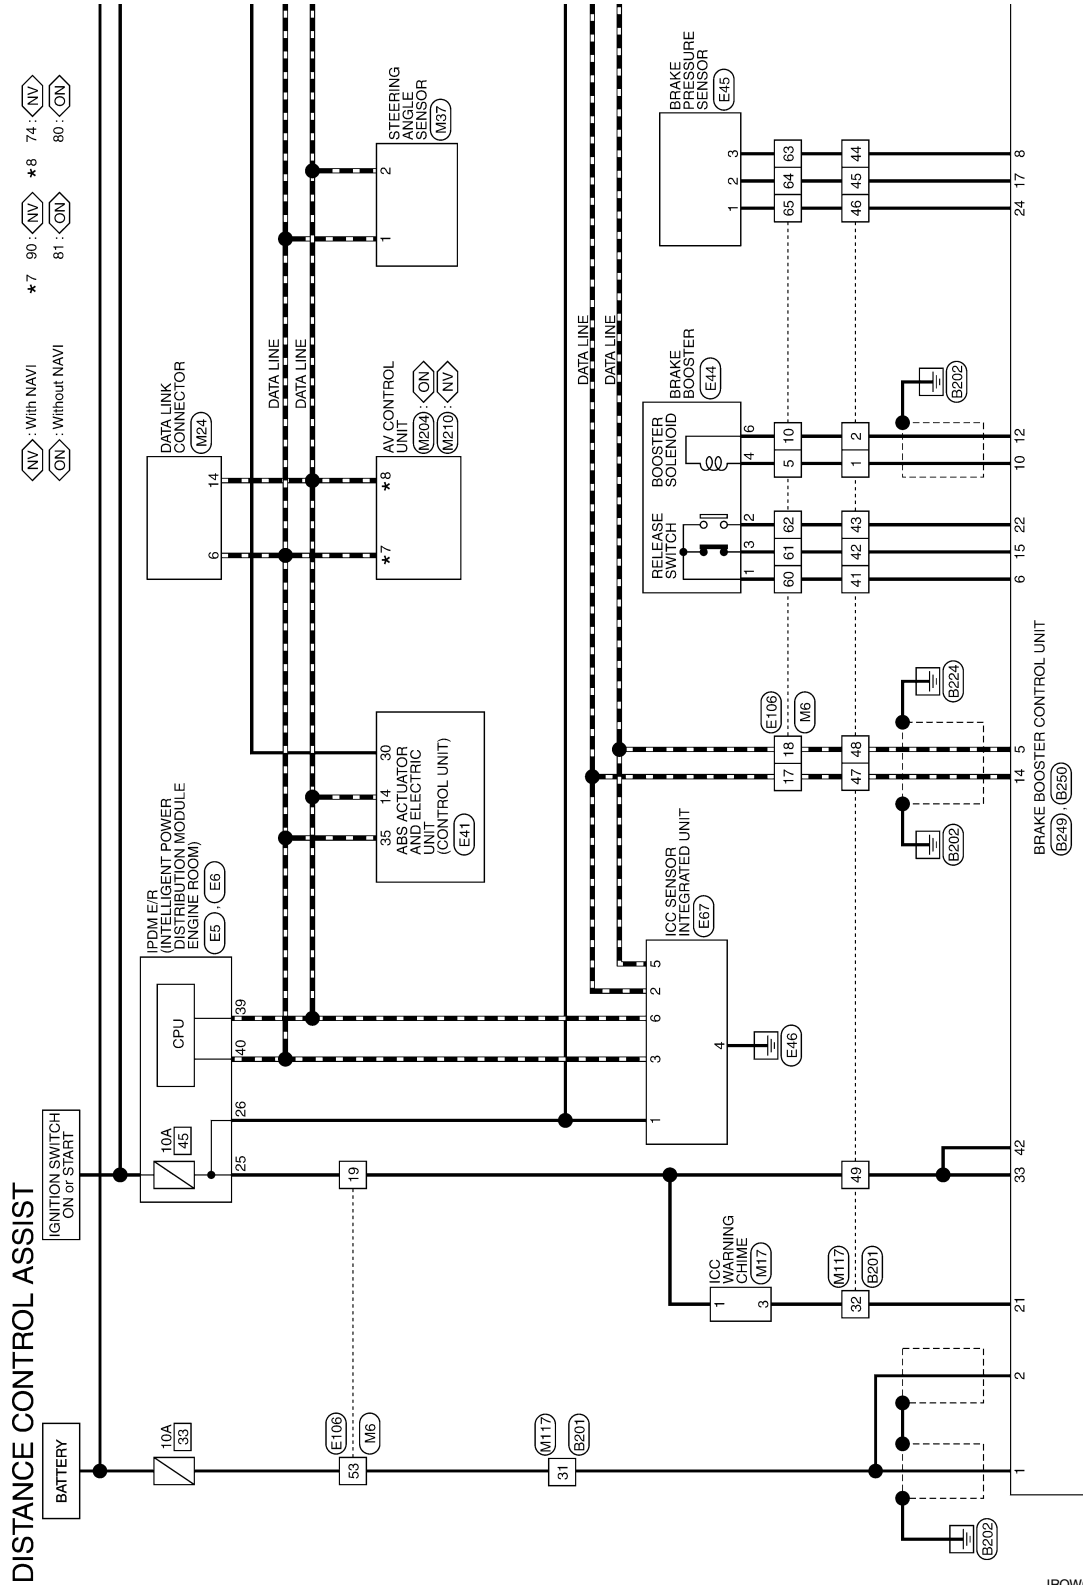

2014/03/18

JROWC2932GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

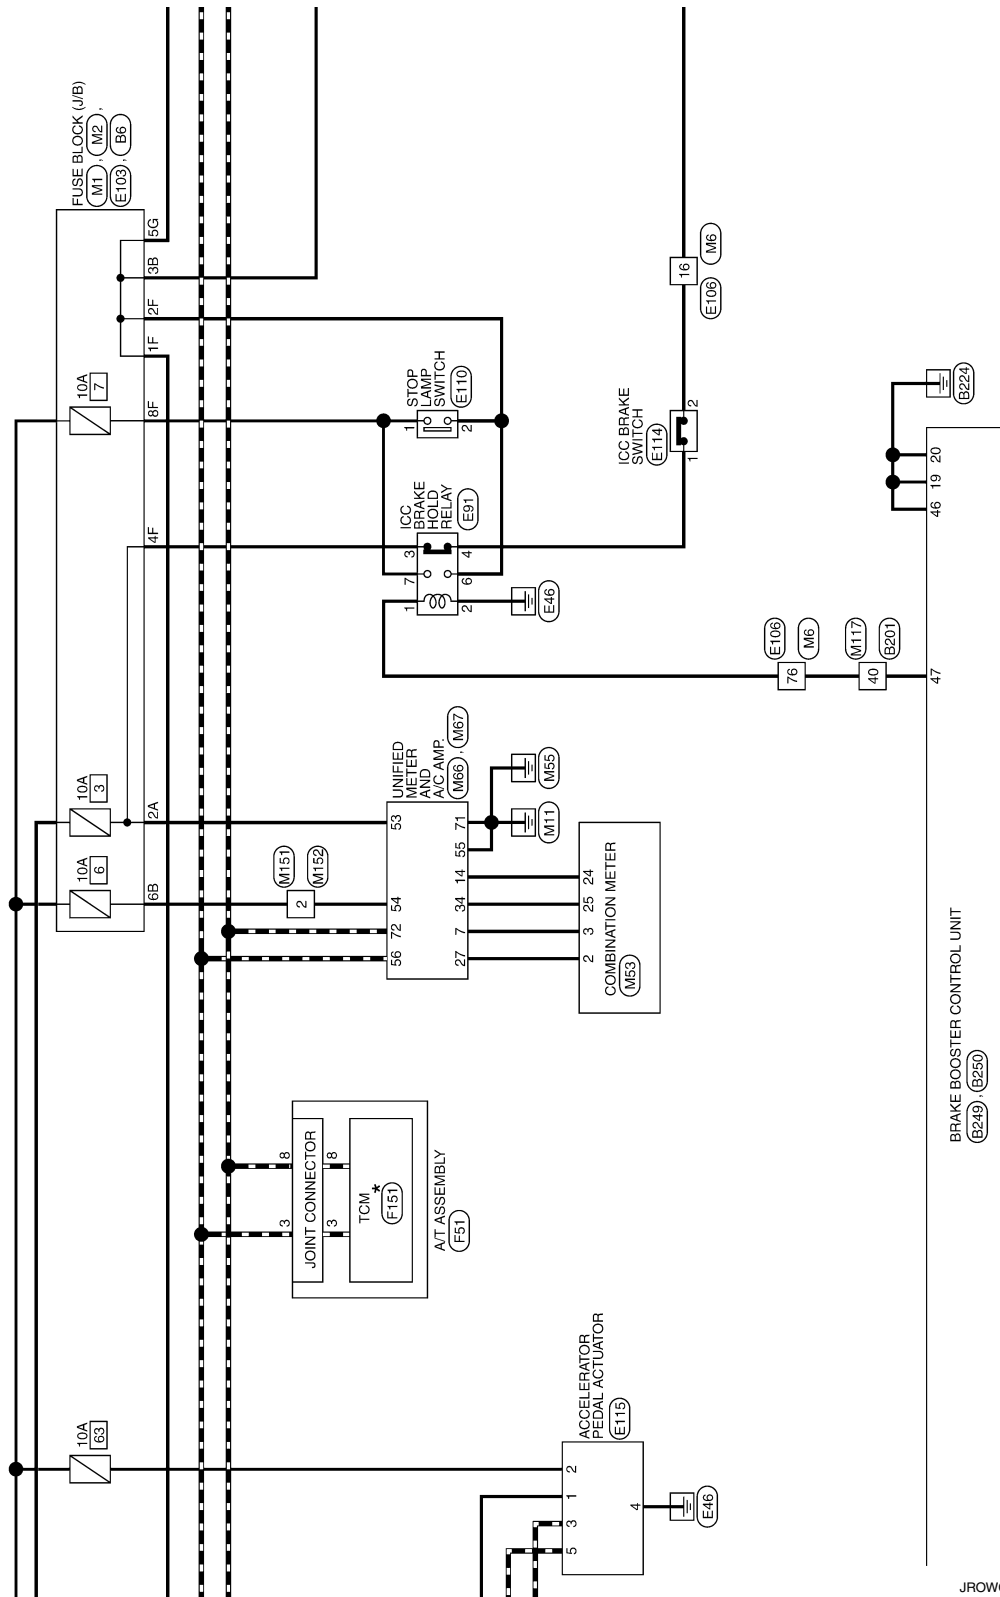


JROWC2933GB

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

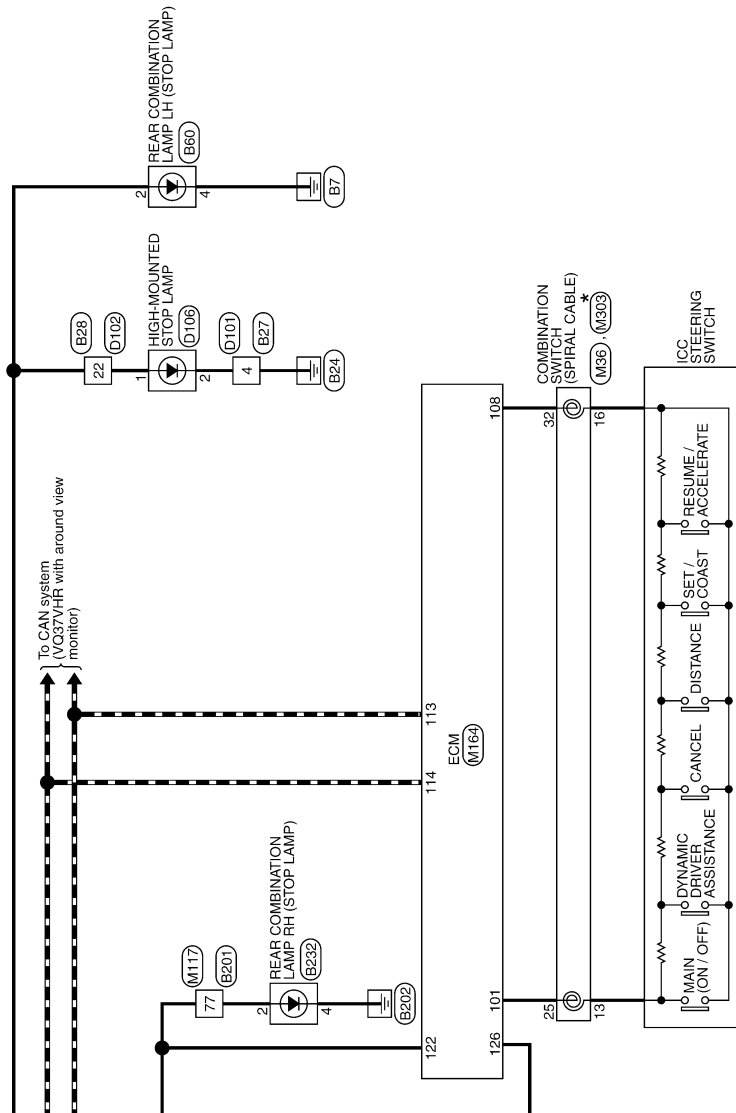

★: This connector is not shown in "Harness Layout".

JROWC2934GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS2FBR-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10G	W	-
11G	W	-
12G	GR	-
5G	LG	-
7G	BG	-

Connector No.	B27
Connector Name	WIRE TO WIRE
Connector Type	MS8MW-GY-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	W	-
4	B	-
6	BR	-
7	G	-
8	SHIELD	-

Connector No.	B28
Connector Name	WIRE TO WIRE
Connector Type	TH2MW-AH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	W	-
4	SHIELD	-
5	G	-
6	L	-
7	R	-
8	SHIELD	-
9	W	-
10	B	-
11	G	-
12	L	-
13	W	-
14	LG	-
15	BG	-
16	G	-
17	BG	-
18	V	-
19	W	-
20	B	-
21	G	-
22	LG	-
23	R	-
24	BG	-
25	BR	-
26	GR	-
27	L	-
32	BG	-

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	TH4MW-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	B	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	SB	-
6	BG	-
7	GR	-
8	W	-
10	G	-
11	SHIELD	-
20	L	-
21	P	-
22	GR	-
23	LG	-
24	W	-
25	V	-

26	G	-
27	Y	-
28	SHIELD	-
31	W	-
32	GR	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	LG	- [With ICC]
40	V	- [Without ICC]
41	SB	- [With ICC]
41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	B	- [With ICC]
43	BR	- [Without ICC]
44	R	- [With ICC]
45	G	-
46	BG	- [With ICC]
46	SHIELD	- [Without ICC]
47	B	- [Without ICC]
47	L	- [With ICC]
48	P	- [Without ICC]
48	R	- [With ICC]
49	G	- [Without ICC]
49	W	- [With ICC]
50	SHIELD	-
51	W	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BG	-
66	Y	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST


Connector No.	B232
Connector Name	REAR COMBINATION LAMP RH
Connector Type	TH44MW-NH
77	LG
80	BG
82	P
83	Y
84	R
85	SB
86	GR
87	L
91	V
92	W
93	R
94	LG
95	GR
96	W
97	G
98	BG
99	L

Connector No.	B232
Connector Name	REAR COMBINATION LAMP RH
Connector Type	TH44MW-NH




Terminal Color Of No.	Wire	Signal Name [Specification]
1	P	-
2	LG	-
3	V	-
4	B	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FGY

 

Terminal Color Of No.	Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBS OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD R/LT DRIVE SIGNAL

Connector No.	B250
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FW

 


Terminal Color Of No.	Wire	Signal Name [Specification]
1	W	BATTERY
2	W	BATTERY
5	P	ITS COMM-L
6	SB	RELEASE SW PWR
8	R	BRAKE PRESSURE SEN PWR
10	G	BOOSTER SOL PWR
12	R	BOOSTER SOL GND
14	L	ITS COMM-H
15	V	RELEASE SW (NO)
17	G	BRAKE PRESSURE SEN SIGNAL
19	B	GROUND
20	B	GROUND
21	GR	CHIME SIGNAL
22	BR	RELEASE SW (NO)
24	BG	BRAKE PRESSURE SEN GND

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	M08FW-GY-LC



Terminal Color Of No.	Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	GR	-
6	LW	-
7	LB	-
8	SHIELD	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH

 

Terminal Color Of No.	Wire	Signal Name [Specification]
1	G	-
2	L	-
3	Y	-
4	SHIELD	-
5	R	-
6	G	-
7	Y	-
8	L	-
9	W	-
10	SHIELD	-
11	G	-
12	L	-
13	W	-

14	LG	-
15	BG	-
16	G	-
17	W	-
18	LG	-
19	BR	-
20	R	-
21	V	-
22	LG	-
23	P	-
24	BG	-
25	BG	-
26	GR	-
27	L	-
32	BG	-

Connector No.	D106
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Type	TB02MW



Terminal Color Of No.	Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E56
Connector Name	ENGINE CONTROL SYSTEM POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FM-N4



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FBAHZ-LH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LBWR
3	R	LBVR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
12	L	VAC
14	P	CANL
15	SHIELD	AGND
19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Connector No.	E44
Connector Name	BRAKE BOOSTER
Connector Type	RV08FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	P	-
3	V	-
4	Y	-
6	BR	-

Connector No.	E45
Connector Name	BRAKE PRESSURE SENSOR
Connector Type	AA203FBZ-S

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	L	-
3	LG	-

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	L	ITS COM+H
3	L	CAN-H
4	B	GROUND
5	P	ITS COM-L
6	P	CAN-L

Connector No.	E91
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	MO0FGY-RUS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-
3	G	-
4	G	-
6	W	-
7	L	-

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



10F	1F	2F	3F	4F	5F	6F	7F	8F	9F
-----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
10F	L	-
1F	SB	-
2F	W	-
3F	Y	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-

13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
21	Y	- [Without ICC]
22	BR	-
23	R	- [With ICC]
24	V	- [Without ICC]
25	G	- [With ICC]
26	L	- [Without ICC]
27	P	- [With ICC]
28	Y	- [Without ICC]
29	SHIELD	-
30	G	-
31	LG	-
32	BG	-
33	W	-
34	Y	-
35	BG	-
36	GR	-
37	Y	-
38	LG	-
39	LG	-
40	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	BG	-
54	R	-
55	SB	-
56	P	-
57	SB	-
58	V	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	BG	-
66	L	-

70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



3	4	1	2
---	---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	BR	-

Connector No.	E114
Connector Name	ICC BRAKE SWITCH
Connector Type	M02FBR-LC



2	1
---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-

Connector No.	E115
Connector Name	ACCELERATOR PEDAL ACTUATOR
Connector Type	KD206FB



4	2	5	3	1
---	---	---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	BG	BATTERY
3	P	ITS COMM-L
4	B	GROUND
5	L	ITS COMM-H

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >


[DCA]

DISTANCE CONTROL ASSIST


Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	R	IGNITION POWER SUPPLY (BACK-UP)
3	L	CAN-H
4	V	CAN-L
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CAN-L
9	GR	STARTER RELAY (with VQ engine)
9	LG	STARTER RELAY (with VK engine)
10	B	GROUND

 


Connector No.	F51
Connector Name	TCM
Connector Type	SP10FG

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	R	CAN-H
4	O	CAN-L
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CAN-L
9	Y	STARTER RELAY


10	W/B	GROUND
----	-----	--------

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-AZ

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1B	LG	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	L	-
8B	R	-
9B	BR	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH00MW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	LG	- [Without Auto aircon seat]
3	SB	- [With Auto aircon seat]
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	GR	- [Without ICC]
20	W	- [With ICC]
21	BR	- [Without ICC]
21	R	- [With ICC]
22	L	- [Without ICC]
22	R	- [With ICC]
23	G	-
24	L	- [Without ICC]
24	P	- [With ICC]
25	W	- [Without ICC]
25	Y	- [With ICC]
26	SHIELD	-
28	GR	-
29	P	-
30	Y	-
30	BG	-
32	W	-

33	Y	-
34	L	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	BG	-
50	LG	-
51	SB	-
52	Y	-
53	BG	-
54	BR	-
55	SB	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	BG	-
69	V	-
70	SHIELD	-
71	BG	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	BG	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

JROWC2939GB

ACCELERATOR PEDAL ACTUATOR


< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST


95	G	-
96	W	-
97	W	-
98	S/SHIELD	-
100	Y	-

Connector No.	M17
Connector Name	ICC WARNING CHIME
Connector Type	A03FW

 

Terminal No.	Signal Name [Specification]
1	G
3	W

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 


Terminal No.	Signal Name [Specification]
3	LG
4	B
5	B
6	L
7	GR
8	G
11	SB
12	P
13	L
14	P
16	BG

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-1V




Terminal No.	Signal Name [Specification]
24	P
25	SB
26	B
31	L
32	V
33	B
34	G

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH

 


Terminal No.	Signal Name [Specification]
1	L
2	P
7	B
8	GR

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH

 


Terminal No.	Signal Name [Specification]
1	BG
2	LG
3	GR
5	B
6	W
7	P
10	G
15	B
16	B
21	R
24	BR
25	Y
26	R
27	V
28	W
29	SB
30	G
31	L
34	B
36	LG
37	SB
38	L
39	P
40	BG

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH

 

Terminal No.	Signal Name [Specification]
5	L
6	BG
7	GR
8	L
9	SB
10	W
11	G
14	BR
20	L
23	Y
25	V
26	G
27	LG
28	R
30	V
34	Y
38	L

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH

 

Terminal No.	Signal Name [Specification]
41	V
42	Y
43	R

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Terminal No.	Color Of Wire	Signal Name [Specification]
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	V	GAS SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	BG	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	B	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	IGN MODE SIGNAL
65	BG	ECV SIGNAL
69	L	A/C CLAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	SHIELD	-
20	R	-
21	G	-
22	GR	-
23	V	-
24	W	-

25	R	-
26	P	-
27	L	-
28	SHIELD	-
31	W	-
32	W	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	V	-
41	SB	- [With ICC]
41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	B	- [With ICC]
43	P	- [Without ICC]
44	R	- [With ICC]
45	G	- [Without ICC]
45	L	- [With ICC]
46	BG	- [Without ICC]
46	SHIELD	- [With ICC]
47	B	- [Without ICC]
47	L	- [With ICC]
48	P	- [Without ICC]
48	R	- [With ICC]
49	G	- [Without ICC]
49	W	- [With ICC]
50	SHIELD	- [Without ICC]
51	BG	-
52	GR	-
53	G	-
54	L	-
55	P	-
60	LG	-
61	R	-
62	SB	-
63	V	-
64	Y	-
65	BR	-
66	BG	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	V	-
74	LG	-
75	BR	-
76	V	-

77	LG	-
80	R	-
82	Y	-
83	BG	-
84	W	-
85	SB	-
86	B	-
87	P	-
91	L	-
92	L	-
93	G	-
94	BG	-
95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M152
Connector Name	WIRE TO WIRE
Connector Type	M03MW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M164
Connector Name	ECM
Connector Type	RH24FGY-R28-R-LH-Z

 

Terminal No.	Color Of Wire	Signal Name [Specification]
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	P	ACCELERATOR PEDAL POSITION SENSOR 2 [Without NAVI]
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2 [With NAVI]
99	G	SENSOR POWER SUPPLY [With NAVI]
99	L	SENSOR POWER SUPPLY [Without NAVI]
100	W	SENSOR GROUND
101	SB	ASD/ICC STEERING SWITCH
102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	G	SENSOR POWER SUPPLY [Without NAVI]
103	L	SENSOR POWER SUPPLY [With NAVI]
104	BR	SENSOR GROUND [Without NAVI]
104	GR	SENSOR GROUND [With NAVI]
105	L	REFRIGERANT PRESSURE SENSOR
106	W	FUEL TANK TEMPERATURE SENSOR
107	BG	SENSOR POWER SUPPLY
108	V	SENSOR GROUND
109	G	PNP SIGNAL

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

DISTANCE CONTROL ASSIST

Terminal No.	Signal Name [Specification]
110 R	ENGINE SPEED OUTPUT SIGNAL
112 V	SENSOR GROUND LINE (AV CONTROL, SYSTEM PRESSURE SENSOR)
113 W	SENSOR GROUND LINE (EVAPORATOR CONTROL, SYSTEM PRESSURE SENSOR)
114 P	CAN COMMUNICATION LINE
117 L	CAN COMMUNICATION LINE
121 GR	DATA LINK CONNECTOR
122 LG	EVAP CANISTER VENT CONTROL VALVE
123 P	STOP LAMP SWITCH
124 B	ECM GROUND
125 GR	ECM GROUND
126 BR	POWER SUPPLY FOR ECM
127 B	ASCD/ICC BRAKE SWITCH
128 B	ECM GROUND

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH



76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----

Terminal No.	Signal Name [Specification]
76 LG	AV COMM (L)
77 SB	AV COMM (H)
78 LG	AV COMM (L)
79 SB	AV COMM (H)
80 P	CAN-L
81 L	CAN-H
82 BR	SW GND
86 SHIELD	SHIELD
87 L	TEL VOICE SIGNAL (+)
88 P	TEL VOICE SIGNAL (-)
92 R	VEHICLE SPEED SIGNAL (8-PULSE)
93 V	PARKING BRAKE SIGNAL
94 BG	REVERSE SIGNAL
95 G	IGNITION SIGNAL
96 SB	DISK EJECT SIGNAL
102 B	AUX GND
103 W	AUX AUDIO LH+
104 R	AUX AUDIO RH+

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH



65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Signal Name [Specification]
65 V	PARKING BRAKE SIGNAL
67 B	COMPOSITE IMAGE SIGNAL GND
68 R	COMPOSITE IMAGE SIGNAL
71 SHIELD	MICROPHONE SHIELD
72 G	MICROPHONE VCC
73 R	COMM (CONT-2DISP)
74 P	CAN-L
75 LG	AV COMM (L)
76 LG	AV COMM (L)
79 R	ILLUMINATION
80 G	IGNITION SIGNAL
81 BG	REVERSE SIGNAL
82 R	VEHICLE SPEED SIGNAL (8-PULSE)
87 R	MICROPHONE SIGNAL
88 B	SHIELD
89 G	COMM (DISP->CONT)
90 L	CAN-H
91 SB	AV COMM (H)
92 SB	AV COMM (H)

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY



20	19	18	17	16	15	14	13
----	----	----	----	----	----	----	----

JROWC2942GB

INFOID:0000000010576649

DTC Inspection Priority Chart

If multiple DTCs are detected simultaneously, check them one by one depending on the following DTC inspection priority chart.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ACCELERATOR PEDAL ACTUATOR

< ECU DIAGNOSIS INFORMATION >

[DCA]

Priority	Detected items (DTC)
1	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	• C1F02: APA C/U MALF
3	• C1F01: APA MOTOR MALF • C1F03: APA HI TEMP • C1F05: APA PWR SUPPLY CIR • C1F06: CAN CIR2 • C1F07: CAN CIR1

DTC Index

INFOID:0000000010576650

NOTE:

- The details of time display are as per the following.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past
- IGN counter is displayed in FFD (Freeze Frame Data).
- 0: The malfunctions that are detected now
- 1 - 39: It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever the ignition switch OFF → ON. It returns to 0 when a malfunction is detected again in the process.
- If it is over 39, it is fixed to 39 until the self-diagnosis results are erased.

×: Applicable

CONSULT display	ICC system warning lamp	Fail-safe function	Reference
C1F01: APA MOTOR MALF	×	×	DAS-106
C1F02: APA C/U MALF	×	×	DAS-108
C1F03: APA HI TEMP	—	—	DAS-109
C1F05: APA PWR SUPPLY CIR	×	×	DAS-111
C1F06: CAN CIR2	×	×	DAS-113
C1F07: CAN CIR1	×	×	DAS-115
U1000: CAN COMM CIRCUIT	×	×	DAS-134
U1010: CONTROL UNIT (CAN)	×	×	DAS-137

DISTANCE CONTROL ASSIST SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[DCA]

SYMPTOM DIAGNOSIS

DISTANCE CONTROL ASSIST SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000010576651

Symptoms		Reference page
Operation	Switch does not turn ON	Refer to DAS-178, "Description" .
	Switch does not turn OFF	
	DCA system setting cannot be turned ON from the navigation screen	Refer to DAS-180, "Description" .
	DCA system setting cannot be turned OFF from the navigation screen	
	DCA system not activated (switch is ON)	Refer to DAS-182, "Description" .
Display/Chime	Information display is not illuminated (vehicle ahead indicator)	Refer to MWI-43, "Diagnosis Description" .
	Chime does not sound	Refer to DAS-184, "Description" .
Control	No force generated for putting back the accelerator pedal	Refer to DAS-186, "Description" .
Detection of lead vehicle	Frequently cannot detect the vehicle ahead	Refer to DAS-187, "Description" .
	Detection zone is short	
	System misidentifies a vehicle even though there is no vehicle ahead	- Adjust laser beam aiming: Refer to CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description". - Perform action test. Refer to DAS-11, "ACTION TEST : Description".
	System misidentifies a vehicle in the next lane	
	System does not detect the vehicle ahead at all	Refer to DAS-188, "Description" .

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

[DCA]

SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF

Description

INFOID:0000000010576652

The switch does not turn ON

- When the DCA system setting is ON, the DCA system switch indicator does not illuminate even if the dynamic driver assistance switch is depressed.

The switch does not turn OFF

- The DCA system switch indicator does not turn off even if the dynamic driver assistance switch is pressed when the DCA system switch indicator illuminates.

NOTE:

The system cannot be operated when setting conventional (fixed speed) cruise control mode.

Diagnosis Procedure

INFOID:0000000010576653

1.CHECK DCA SYSTEM SETTING

Check that DCA system setting on the navigation screen is ON.

Is DCA system setting ON?

YES >> GO TO 2.

NO >> Enable the DCA system setting.

2.PERFORM THE SELF-DIAGNOSIS

1. Perform "All DTC Reading" with CONSULT.

2. Check if the DTC is detected in self-diagnosis results of "ICC/ADAS". Refer to [DAS-158, "DTC Index"](#).

Is any DTC detected?

YES >> GO TO 7.

NO >> GO TO 3.

3.DYNAMIC DRIVER ASSISTANCE SWITCH INSPECTION

1. Start the engine.

2. Check that "DYNA ASIST SW" operates normally in "DATA MONITOR" of "ICC/ADAS" with CONSULT.

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 6.

4.CHECK DCA SYSTEM SWITCH INDICATOR CIRCUIT

1. Start the engine.

2. Select the active test item "DCA INDICATOR" of "ICC/ADAS" with CONSULT.

3. Check if the DCA system switch indicator illuminates when the test item is operated.

Is the inspection result normal?

YES >> Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 5.

5.CHECK DATA MONITOR OF UNIFIED METER AND A/C AMP.

Check that "DCA IND" operates normally in "DATA MONITOR" of "METER/M&A" with CONSULT.

Is the inspection result normal?

YES >> Replace the combination meter.

NO >> Replace the unified meter and A/C amp.

6.CHECK STEERING SWITCH CIRCUIT

Check the steering switch circuit. Refer to [DAS-44, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

7.REPAIR OR REPLACE MALFUNCTIONING PARTS.

SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

[DCA]

Repair or replace malfunctioning parts.

>> GO TO 8.

8.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test.
(Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

DCA SYSTEM SETTING CANNOT BE TURNED ON/OFF FROM THE NAVIGATION SCREEN

< SYMPTOM DIAGNOSIS >

[DCA]

DCA SYSTEM SETTING CANNOT BE TURNED ON/OFF FROM THE NAVIGATION SCREEN

Description

INFOID:0000000010576654

- DCA system setting is not selectable on the navigation screen.

NOTE:

When the ignition switch is in ACC position, DCA system settings cannot be changed.

- Distance Control Assist is not indicated on the navigation screen.
- The switching between ON and OFF cannot be performed by operating the navigation system.
- The item of Distance Control Assist on the navigation screen is not active.
- The DCA system setting differs from the one set at the previous driving.

NOTE:

Turn OFF the ignition switch and wait for 5 seconds or more.

Diagnosis Procedure

INFOID:0000000010576655

1.CHECK DCA SYSTEM SETTING

1. Start the engine.
2. Check that the DCA system settings is selectable on the navigation screen.

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.PERFORM THE SELF-DIAGNOSIS

1. Perform "All DTC Reading" with CONSULT.
2. Check if the DTC is detected in self-diagnosis results of "ICC/ADAS", "MULTI AV" and "METER/M&A". Refer to the following.
 - ICC/ADAS: [DAS-158, "DTC Index"](#)
 - MULTI AV: [AV-195, "DTC Index"](#)
 - METER/M&A: [MWI-117, "DTC Index"](#)

Is any DTC detected?

- YES >> GO TO 5.
- NO >> INSPECTION END

3.CHECK DATA MONITOR OF ICC SENSOR INTEGRATED UNIT

Check that "DCA SELECT" operates normally in "DATA MONITOR" of "ICC/ADAS" with CONSULT.

Is the inspection result normal?

- YES >> Refer to [AV-170, "On Board Diagnosis Function"](#).
- NO >> GO TO 4.

4.CHECK MULTIFUNCTION SWITCH

Operate the multifunction switch to check that the audio, navigation system, and air conditioner operate properly.

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace malfunctioning parts.

5.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts identified by the self-diagnosis result.

>> GO TO 7.

6.REPLACE ICC SENSOR INTEGRATED UNIT

1. Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
2. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

DCA SYSTEM SETTING CANNOT BE TURNED ON/OFF FROM THE NAVIGATION SCREEN

< SYMPTOM DIAGNOSIS >

[DCA]

>> GO TO 7.

7.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test.
(Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check if the DCA system is normal.

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

DCA SYSTEM NOT ACTIVATED (SWITCH IS ON)**Description**

INFOID:0000000010576656

The dynamic driver assistance switch can be turned ON/OFF, but the DCA system does not operate.

NOTE:

Never start the operation under the following conditions.

- No operation condition
- When the brake pedal depressed
- When the ICC system is set
- When the system judges that the vehicle comes to a standstill by the system control
- When the vehicle ahead is not detected
- Operation cancellation condition
- When the dynamic driver assistance switch is turned to OFF
- When the system malfunction occurs
- When ABS or VDC (including the TCS) operates
- When the VDC is turned OFF
- When the snow mode switch is turned ON
- When driving into a strong light (i.e., sunlight)
- When the ICC sensor integrated unit body window is dirty and the measurement of the distance between the vehicles becomes difficult

Diagnosis Procedure

INFOID:0000000010576657

1. CHECK CAUSE OF AUTOMATIC CANCELLATION

Check if there is any cancellation cause in the "CAUSE OF AUTO-CANCEL" on "WORK SUPPORT" of "ICC/ADAS" with CONSULT.

Is it displayed?

- Not displayed>>GO TO 2.
- "VHCL SPD UNMATCH">>Refer to [DAS-35, "DTC Logic"](#).
- "IGN LOW VOLT">>Refer to [DAS-33, "DTC Logic"](#).
- "CAN COMM ERROR">>Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).
- "ABS/TCS/VDC CIRC">>Refer to [DAS-37, "DTC Logic"](#).
- "BCU CIRCUIT">>Refer to [DAS-77, "DTC Logic"](#).
- "APA HI TEMP">>Refer to [DAS-109, "DTC Logic"](#).

2. PERFORM ALL OF THE SELF-DIAGNOSIS

1. Perform "All DTC Reading".
2. Check if any DTC is detected in self-diagnosis results of "ICC/ADAS". Refer to [DAS-158, "DTC Index"](#).

Is any DTC detected?

- YES >> GO TO 3.
- NO >> GO TO 4.

3. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts identified by the self-diagnosis result.

>> GO TO 6.

4. CHECK EACH SWITCH AND VEHICLE SPEED SIGNAL

1. Start the engine.
2. Check that the following items operate normally in "DATA MONITOR" of "ICC/ADAS".
 - "VHCL SPEED SE"
 - "BRAKE SW"
 - "DCA ON SW"

Is there a malfunctioning item?

- All items are normal>>GO TO 5.
- "VHCL SPEED SE">>Refer to [DAS-35, "DTC Logic"](#).
- "BRAKE SW">>Refer to [DAS-39, "DTC Logic"](#).
- "DCA ON SW">>Refer to [DAS-103, "DTC Logic"](#).

DCA SYSTEM NOT ACTIVATED (SWITCH IS ON)

< SYMPTOM DIAGNOSIS >

[DCA]

5.REPLACE ICC SENSOR INTEGRATED UNIT

1. Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
2. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 6.

6.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test.
(Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

CHIME DOES NOT SOUND

Description

INFOID:000000010576658

The warning chime may not sound in some cases when there is a short distance between vehicles. Some examples are:

- When the vehicles are traveling at the same speed and the distance between vehicles is not changing
- When the vehicle ahead is traveling faster and the distance between vehicles is increasing
- When a vehicle cuts in near own vehicle
- The warning chime will not sound when own vehicle approaches vehicles that are parked or moving slowly.
- The warning chime does not sound when the system does not detect any vehicle ahead. (Diagnose the conditions under which the system is detecting the vehicle ahead and when the system is malfunctioning. If there is any malfunction in detecting the vehicle ahead, check the system following the [DAS-187, "Description"](#).)

Diagnosis Procedure

INFOID:000000010576659

1.PERFORM ACTIVE TEST

Check if the warning chime sounds on the active test item "ICC BUZZER" of "ICC/ADAS" with CONSULT.

Does the warning chime sound?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK THE MALFUNCTION SYMPTOM DURING WARNING CHIME OPERATION

1. Understand the vehicle ahead detection condition when the malfunction occurred. If the warning chime should have sounded, replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
2. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 8.

3.CHECK ICC WARNING CHIME CIRCUIT

Check the ICC warning chime circuit. Refer to [DAS-141, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 6.

4.PERFORM THE SELF-DIAGNOSIS

1. Perform "All DTC Reading" with CONSULT.
2. Check if the "U1000" is detected in self-diagnosis results of "ICC/ADAS".

Is "U1000" detected?

YES >> GO TO 5.

NO >> GO TO 7.

5.CAN COMMUNICATIONS INSPECTION

Check the CAN communication and repair or replace malfunctioning parts. Refer to [DAS-133, "ICC SENSOR INTEGRATED UNIT : DTC Logic"](#).

>> GO TO 8.

6.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

>> GO TO 8.

7.REPLACE ICC SENSOR INTEGRATED UNIT

1. Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
2. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

CHIME DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

[DCA]

>> GO TO 8.

8.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test.
(Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check if the DCA system is normal.

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

NO FORCE GENERATED FOR PUTTING BACK THE ACCELERATOR PEDAL

< SYMPTOM DIAGNOSIS >

[DCA]

NO FORCE GENERATED FOR PUTTING BACK THE ACCELERATOR PEDAL

Description

INFOID:0000000010576660

The dynamic driver assistance switch can be turned ON/OFF but the actuation force of accelerator pedal is not generated.

NOTE:

- When the vehicle ahead detection indicator does not illuminate, the control and warning with the system are not performed.
- The actuation force of accelerator pedal may not be generated sufficiently depending on depressing method or depressing amount of accelerator pedal.

Diagnosis Procedure

INFOID:0000000010576661

1.PERFORM THE SELF-DIAGNOSIS

1. Perform "All DTC Reading" with CONSULT.
2. Check if any DTC is detected in self-diagnosis results of "ICC/ADAS" or "ACCELE PEDAL ACT".

Is any DTC detected?

- YES >> GO TO 2.
- NO >> GO TO 3.

2.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts. Refer to [DAS-158. "DTC Index"](#) (ICC/ADAS) or [DAS-176. "DTC Index"](#) (ACCELE PEDAL ACT).

>> GO TO 5.

3.PERFORM ACTIVE TEST

Check if the accelerator pedal actuator operates by the active test items "ACCELERATOR PEDAL ACTUATOR TEST1" and "ACCELERATOR PEDAL ACTUATOR TEST2" of "ACCELE PEDAL ACT" with CONSULT.

Does it operate?

- YES >> GO TO 4.
- NO >> Replace the accelerator pedal assembly.

4.CHECK VEHICLE AHEAD DETECTION PERFORMANCE

Understand the vehicle ahead detection condition when the malfunction occurred. If the detecting function is malfunctioning, check according to [DAS-187. "Description"](#).

>> INSPECTION END

5.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)
2. Check if the DCA system is normal.

>> INSPECTION END

FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT

< SYMPTOM DIAGNOSIS >

[DCA]

FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT

Description

INFOID:0000000010576662

Symptom check: Detection function may become unstable under the following conditions.

- When the reflector of vehicle ahead is broken or dirty.
- When the vehicle is driving on a curve such as S-curve where the curvature changes.
- When the vehicle is driving on up-and-down road or passing the peak or foot of slope or passing the break of the inclination of hill.

Diagnosis Procedure

INFOID:0000000010576663

1.VISUAL CHECK (1)

Check ICC sensor integrated unit body window for contamination and foreign materials.

Do foreign materials adhere?

YES >> GO TO 2.

NO >> GO TO 3.

2.WIPE OUT DIRT AND FOREIGN OBJECTS

Wipe out the contamination and/or foreign materials from the ICC sensor integrated unit body window.

>> GO TO 6.

3.VISUAL CHECK (2)

Check ICC sensor integrated unit body window for cracks and/or scratches.

Are there cracks?

YES >> GO TO 5.

NO >> GO TO 4.

4.LASER BEAM AIMING ADJUSTMENT

1. Adjust the laser beam aiming. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

2. Perform action test. Refer to [DAS-11. "ACTION TEST : Description"](#).

3. Check that the vehicle ahead detection performance improves.

Does it improve?

YES >> INSPECTION END

NO >> GO TO 5.

5.REPLACE ICC SENSOR INTEGRATED UNIT

1. Replace the ICC sensor integrated unit. Refer to [DAS-194. "Exploded View"](#).

2. Adjust the laser beam aiming. Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 6.

6.CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11. "ACTION TEST : Description"](#) for action test.)

2. Check that the DCA system is normal.

>> INSPECTION END

THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALL

< SYMPTOM DIAGNOSIS >

[DCA]

THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALL

Description

INFOID:0000000010576664

When DCA system is active, the DCA system does not perform any control even through there is a vehicle ahead.

Diagnosis Procedure

INFOID:0000000010576665

1. CHECK INFORMATION DISPLAY

1. Start the self-diagnosis mode of combination meter. Refer to [MWI-43, "Diagnosis Description"](#).
2. Check that the segment of information display is displayed normally.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the combination meter.

2. VISUAL CHECK (1)

Check ICC sensor integrated unit body window for contamination and/or foreign materials.

Do foreign materials adhere?

- YES >> GO TO 3.
NO >> GO TO 4.

3. WIPE OUT DIRT AND FOREIGN MATERIALS

Wipe out the contamination and/or foreign materials from the ICC sensor integrated unit body window.

>> GO TO 7.

4. VISUAL CHECK (2)

Check ICC sensor integrated unit body window for cracks and/or scratches.

Are there cracks?

- YES >> GO TO 6.
NO >> GO TO 5.

5. LASER BEAM AIMING ADJUSTMENT

1. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).
2. Perform action test. Refer to [DAS-11, "ACTION TEST : Description"](#).
3. Check that the vehicle ahead detection performance improves.

Does it improve?

- YES >> INSPECTION END
NO >> GO TO 6.

6. REPLACE ICC SENSOR INTEGRATED UNIT

1. Replace the ICC sensor integrated unit. Refer to [DAS-194, "Exploded View"](#).
2. Adjust the laser beam aiming. Refer to [CCS-7, "LASER BEAM AIMING ADJUSTMENT : Description"](#).

>> GO TO 7.

7. CHECK DCA SYSTEM

1. Erase "self-diagnosis result", and then perform "All DTC Reading" again after performing the action test. (Refer to [DAS-11, "ACTION TEST : Description"](#) for action test.)
2. Check that the DCA system is normal.

>> INSPECTION END

NORMAL OPERATING CONDITION

Description

INFOID:000000010576666

PRECAUTIONS FOR DISTANCE CONTROL ASSIST (DCA)SYSTEM

CAUTION:


- If the vehicle ahead comes to a stop, the vehicle decelerates to a standstill within the limitations of the system. The system will cancel once it judges that the vehicle has come to a standstill with a warning chime. To prevent the vehicle from moving, the driver must depress the brake pedal.
- The DCA system will not apply brake control while the driver is depressing the accelerator pedal.
- This system is only an aid to assist the driver and is not a collision warning or avoidance device. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- This system will not adapt automatically to road conditions. Do not use the system on roads with sharp curves, or on icy roads, in heavy rain or in fog.
- The distance sensor will not detect under most conditions.
 - Stationary and slow moving vehicles
 - Pedestrians or objects in the roadway
 - Oncoming vehicles in the same lane
 - Motorcycles traveling offset in the travel lane
- As there is a performance limit to the distance control function, never rely solely on the DCA system. This system does not correct careless, inattentive or absent-minded driving, or overcome poor visibility in rain, fog, or other bad weather. Decelerate the vehicle speed by depressing the brake pedal, depending on the distance to the vehicle ahead and the surrounding circumstances in order to maintain a safe distance between vehicles.
- The system may not detect the vehicle in front of own vehicle in certain road or weather conditions. To avoid accidents, never use the DCA system under the following conditions.
 - On roads with sharp curves
 - On slippery road surfaces such as on ice or snow, etc.
 - During bad weather (rain, fog, snow, etc.)
 - When strong light (for example, at sunrise or sunset) is directly shining on the front of the vehicle
 - When rain, snow or dirt adhere to the system sensor
 - On steep downhill roads (frequent braking may result in overheating the brakes)
 - On repeated uphill and downhill roads
- Do not use the DCA system if own vehicle are towing a trailer. The system may not detect a vehicle ahead.
- In some road or traffic conditions, a vehicle or object can unexpectedly come into the sensor detection zone and cause automatic braking. Driver may need to control the distance from other vehicles using the accelerator pedal. Always stay alert and avoid using the DCA system when it is not recommended in this section.
- The following are some conditions in which the sensor cannot detect the signals.
 - When the reflector of the vehicle ahead is positioned high on the vehicle (trailer, etc.)
 - When the reflector on the vehicle ahead is missing, damaged or covered
 - When the reflector of the vehicle ahead is covered with dirt, snow and road spray
 - When the snow or road spray from traveling vehicles reduces the sensor's visibility
 - When dense exhaust or other smoke (black smoke) from vehicles reduces the sensor's visibility
 - When excessively heavy baggage is loaded in the rear seat or the luggage room of own vehicle
- The DCA system is designed to automatically check the sensor's operation. When the sensor is covered with dirt or is obstructed, the system will automatically be canceled. If the sensor is covered with ice, a transparent or translucent vinyl bag, etc., the DCA system may not detect them. In these instances, the DCA system may not be able to decelerate the vehicle properly. Be sure to check and clean the sensor regularly.
- The DCA system is designed to maintain the proper distance to a vehicle moving ahead. To maintain the distance, the system will decelerate the vehicle as necessary. However, the DCA system can only apply up to 25% of the vehicles total braking power. If a vehicle moves into the traveling lane ahead or if a vehicle traveling ahead rapidly decelerates, the distance between vehicles may become closer because the DCA system cannot decelerate the vehicle quickly enough. If this occurs, the DCA system will sound a warning chime and blink the system display to notify the driver to take necessary action.
- The DCA system does not control vehicle speed or warn when driver approach stationary and slow moving vehicles. Driver must pay attention to vehicle operation to maintain proper distance from vehicles ahead.

NORMAL OPERATING CONDITION


[DCA]

< SYMPTOM DIAGNOSIS >

- The detection zone of the sensor is limited. A vehicle ahead must be in the detection zone for the system to operate.
- A vehicle ahead may move outside of the detection zone due to its position within the same lane of travel. Motorcycles may not be detected in the same lane ahead if they are traveling offset from the center line of the lane. A vehicle that is entering the lane ahead may not be detected until the vehicle has completely moved into the lane. If this occurs, the system may warn driver by blinking the system indicator and sounding the chime. The driver may have to manually control the proper distance away from vehicle traveling ahead.

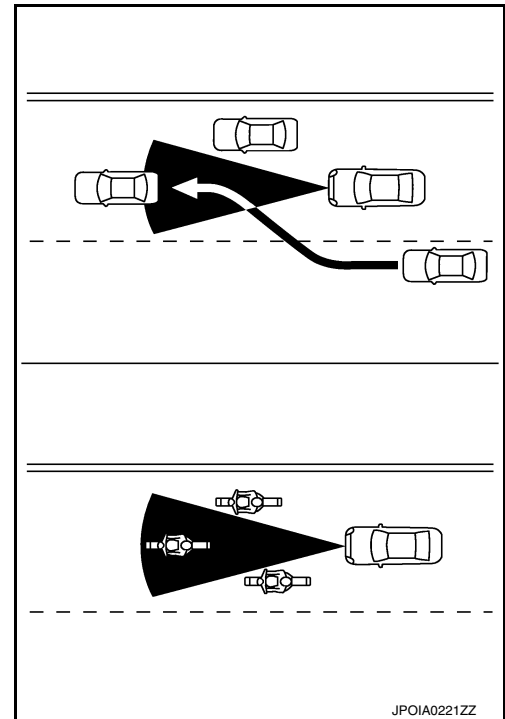

- When driving on some roads, such as winding, hilly, curved, narrow roads, or roads which are under construction, the sensor may detect vehicles in a different lane, or may temporarily not detect a vehicle traveling ahead. This may cause the system to work inappropriately. The detection of vehicles may also be affected by vehicle operation (steering maneuver or traveling position in the lane, etc.) or vehicle condition. If this occurs, the system may warn driver by blinking the system indicator and sounding the chime unexpectedly. The driver will have to manually control the proper distance away from the vehicle traveling ahead.
- The approach warning chime may sound and the system display may blink when the sensor detects some reflectors which are fitted on vehicles in other lanes or on the side of the road. This may cause the DCA system to operate inappropriately. The sensor may detect these reflectors when the vehicle is driven on winding roads, hilly roads or when entering or exiting a curve. The sensor may also detect reflectors on narrow roads or in road construction zones. In these cases driver will have to manually control the proper distance ahead of own vehicle. Also, the sensor sensitivity can be affected by vehicle operation (steering maneuver or driving position in the lane) or traffic or vehicle condition (for example, if a vehicle is being driven with some damage).
- The DCA system automatically decelerates own vehicle to help assist the driver to maintain a following distance from the vehicle ahead. Manually brake when deceleration is required to maintain a safe distance upon sudden braking by the vehicle ahead or when a vehicle suddenly appears in front of own vehicle. Always stay alert when using the DCA system.
- When the vehicle ahead detection indicator lamp is not illuminated, system will not control or warn the driver.
- Never place a foot under the brake pedal. A foot may be caught when the system controls the brake.
- Depending on the position of the accelerator pedal, the system may not be able to assist the driver to release the accelerator pedal appropriately.
- If the vehicle ahead comes to a standstill, the vehicle decelerates to a standstill within the limitations of the system. The system will release brake control with a warning chime once it judges the vehicle

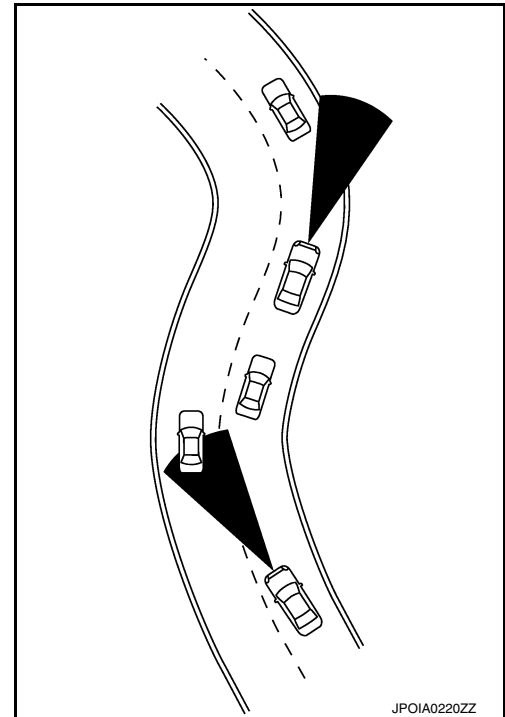

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[DCA]

is at a standstill. To prevent the vehicle from moving, the driver must depress the brake pedal. [The system will resume control automatically once the system reaches 5 km/h (3 MPH)].

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010576667

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000010957844

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

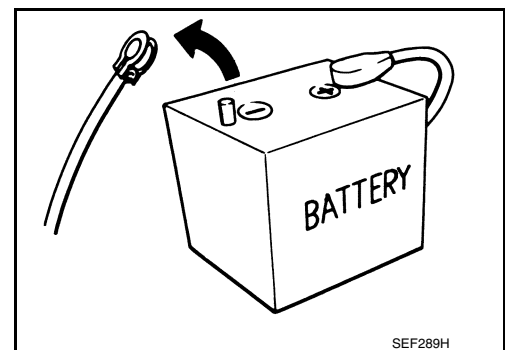

Precautions For Harness Repair

INFOID:0000000010576668

ITS communication uses a twisted pair line. Be careful when repairing it.

PRECAUTIONS


[DCA]

< PRECAUTION >

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

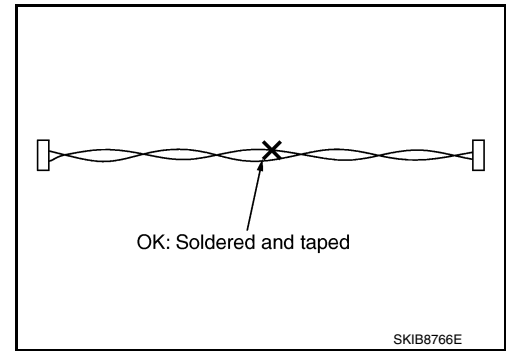

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause ITS communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

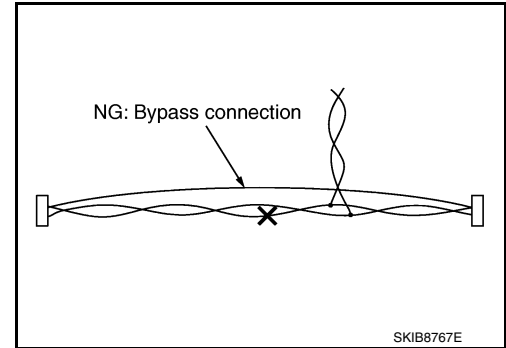

DCA System Service

INFOID:0000000010576669

CAUTION:

- Never look straight into the laser beam discharger when adjusting laser beam aiming.
- Turn the DCA system OFF in conditions similar to driving, such as free rollers or a chassis dynamometer.
- Never use the ICC sensor integrated unit removed from vehicle. Never disassemble or remodel.
- Erase DTC when replacing parts of DCA system, then check the operation of DCA system after adjusting laser beam aiming if necessary.

DAS

REMOVAL AND INSTALLATION


ICC SENSOR INTEGRATED UNIT

Exploded View

INFOID:0000000010576670

CAUTION:

Always perform the laser beam aiming adjustment and check the operation after the replacement, removal and installation of ICC sensor integrated unit.

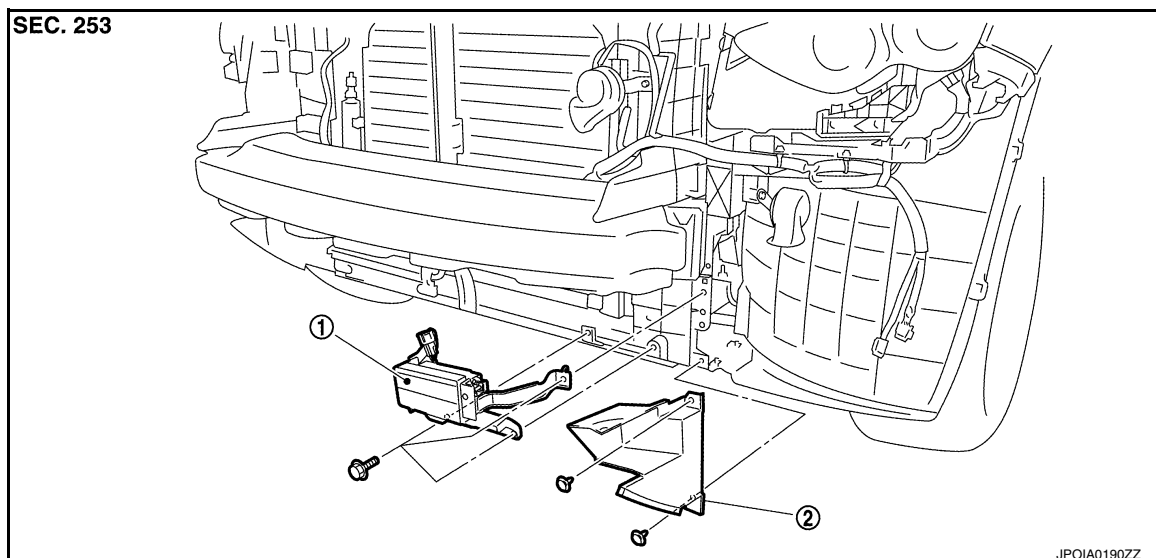

1. ICC sensor integrated unit 2. Air guide lower (LH)

Removal and Installation

INFOID:0000000010576671

REMOVAL

1. Remove front bumper fascia. Refer to [EXT-12. "Exploded View"](#).
2. Remove air guide lower (LH). Refer to [DLK-311. "Exploded View"](#).
3. Disconnect ICC sensor integrated unit connector.
4. Remove mounting bolts from ICC sensor integrated unit.
5. Remove ICC sensor integrated unit.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Always perform the laser beam aiming adjustment and check the operation after the replacement, removal, and installation of ICC sensor integrated unit. Refer to [DAS-10. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ICC SENSOR INTEGRATED UNIT\) : Description"](#).

BRAKE BOOSTER CONTROL UNIT


< REMOVAL AND INSTALLATION >

[DCA]

BRAKE BOOSTER CONTROL UNIT

Exploded View

INFOID:0000000010576672

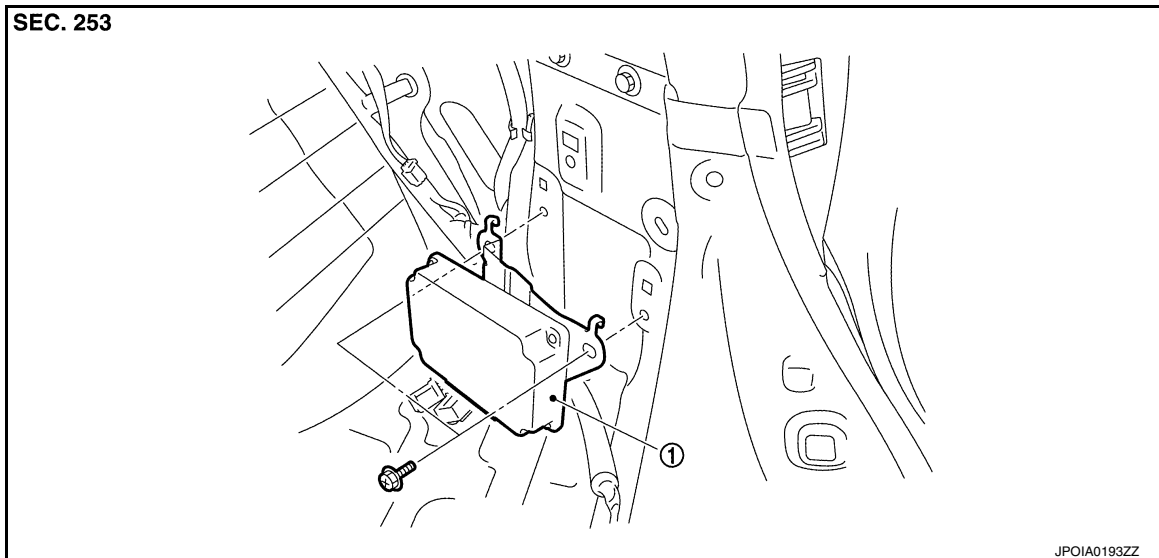

1. Brake booster control unit

Removal and Installation

INFOID:0000000010576673

REMOVAL

1. Remove clips on the back of the luggage side finisher lower (RH) to obtain space for work. Refer to [INT-30, "Exploded View"](#).
2. Disconnect brake booster control unit connector.
3. Remove mounting bolts from brake booster control unit.
4. Remove brake booster control unit.

INSTALLATION

Install in the reverse order of removal.

DAS

ICC WARNING CHIME


< REMOVAL AND INSTALLATION >

[DCA]

ICC WARNING CHIME

Exploded View

INFOID:000000010576674

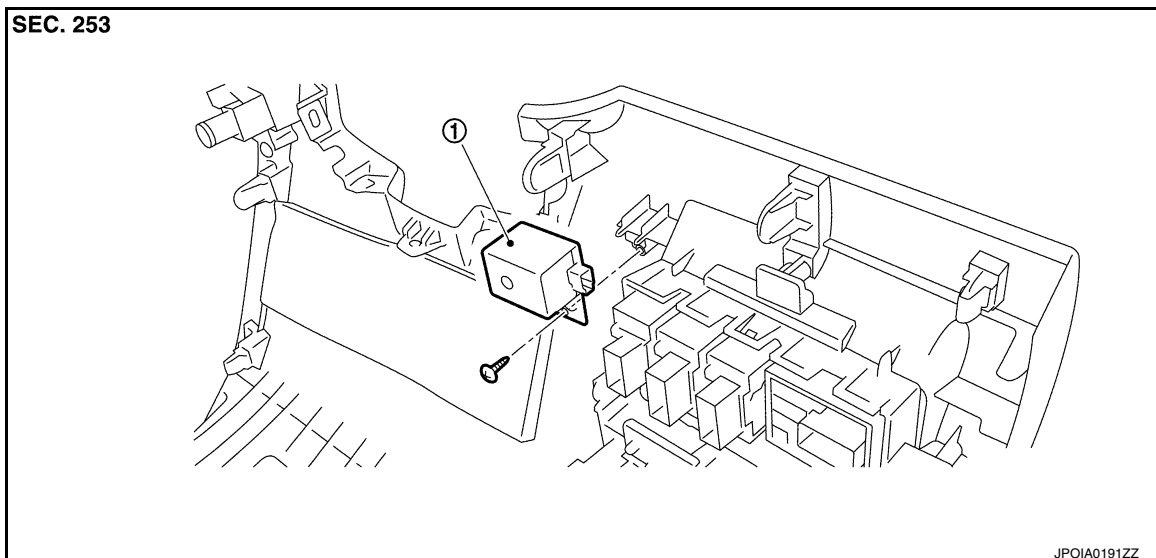

1. ICC warning chime

Removal and Installation

INFOID:000000010576675

REMOVAL

1. Remove the instrument lower panel LH. Refer to [IP-12, "Exploded View"](#).
2. Remove mounting screw from ICC warning chime.
3. Remove ICC warning chime from the instrument lower panel LH.

INSTALLATION

Install in the reverse order of removal.

ACCELERATOR PEDAL ASSEMBLY

< REMOVAL AND INSTALLATION >

[DCA]

ACCELERATOR PEDAL ASSEMBLY

Exploded View

INFOID:0000000010576676

Refer to [ACC-4, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Exploded View"](#).

CAUTION:

Always perform accelerator pedal released position learning after replacement, removal, or installation of accelerator pedal assembly, and then check the DCA system operation. Refer to [DAS-10, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ACCELERATOR PEDAL ASSEMBLY\) : Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DYNAMIC DRIVER ASSISTANCE SWITCH

< REMOVAL AND INSTALLATION >

[DCA]

DYNAMIC DRIVER ASSISTANCE SWITCH

Exploded View

INFOID:0000000010576677

Dynamic driver assistance switch is integrated in the ICC steering switch. Refer to [SR-11, "Exploded View"](#).

NOTE:

Dynamic driver assistance switch is shared with LDP system.


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000010576678

OVERALL SEQUENCE

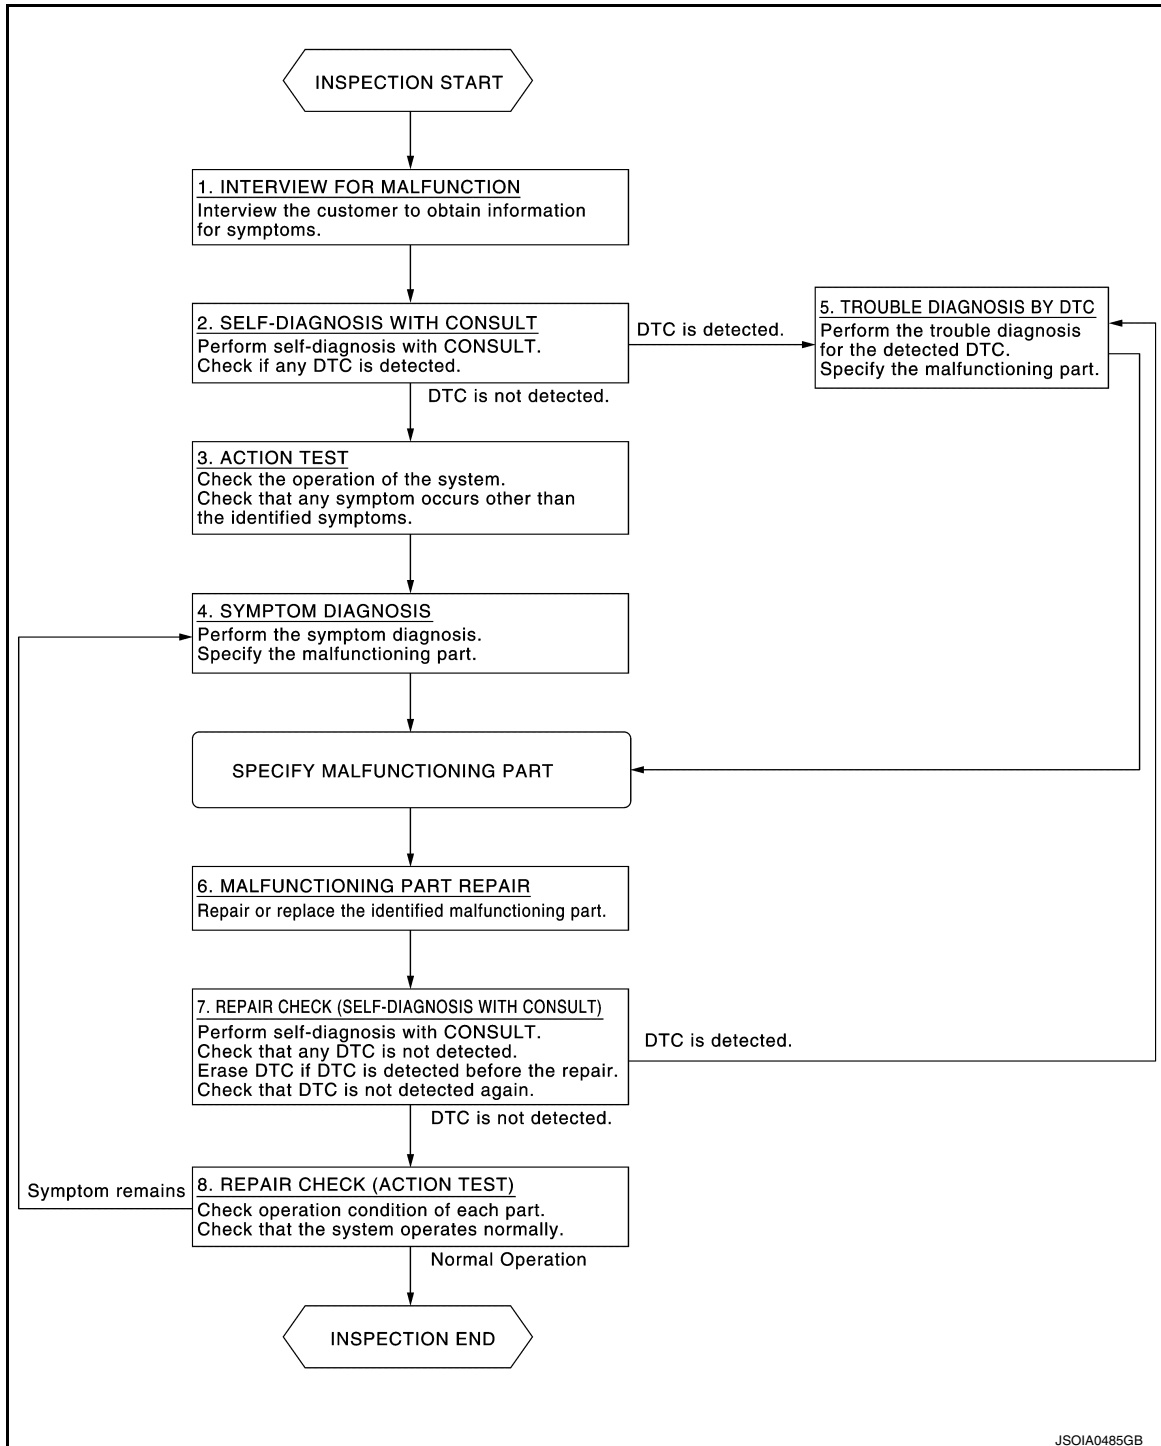

DETAILED FLOW

NOTE:

The FCW system shares component parts with the ICC system. If the FCW system has a malfunction perform diagnosis for the ICC system.

1. INTERVIEW FOR MALFUNCTION

DIAGNOSIS AND REPAIR WORK FLOW

[FCW]

< BASIC INSPECTION >

It is also important to clarify the customer concerns before starting the inspection. Interview the customer about the concerns carefully and understand the symptoms fully.

NOTE:

The customers are not professionals. Never assume that “maybe the customer means…” or “maybe the customer mentioned this symptom”.

>> GO TO 2.

2.SELF-DIAGNOSIS WITH CONSULT

1. Perform “All DTC Reading” with CONSULT.
2. Check if the DTC is detected on the self-diagnosis results of “ICC/ADAS” and/or “LANE CAMERA”.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 3.

3.ACTION TEST

Perform the ICC system action test to check the operation status. Refer to [CCS-12, "ACTION TEST : Description"](#).

>> GO TO 4.

4.SYMPTOM DIAGNOSIS

Perform the applicable diagnosis according to the diagnosis chart by symptom. Refer to [DAS-241, "Symptom Table"](#).

>> GO TO 6.

5.TROUBLE DIAGNOSIS BY DTC

1. Check the DTC in the self-diagnosis results.
2. Perform trouble diagnosis for the detected DTC. Refer to [DAS-228, "DTC Index"](#) (ICC/ADAS) and/or [DAS-317, "DTC Index"](#) (LANE CAMERA).

>> GO TO 6.

6.MALFUNCTIONING PART REPAIR

Repair or replace the identified malfunctioning parts.

>> GO TO 7.

7.REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

1. Erases self-diagnosis results.
2. Perform “All DTC Reading” again after repairing or replacing the specific items.
3. Check if the DTC is detected on the self-diagnosis results of “ICC/ADAS”.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 8.

8.REPAIR CHECK (ACTION TEST)

Perform the ICC system action test. Check that the malfunction symptom is solved or no other symptoms occur.

Is there any malfunction symptom?


YES >> GO TO 4.

NO >> INSPECTION END

SYSTEM DESCRIPTION

FORWARD COLLISION WARNING SYSTEM

System Diagram

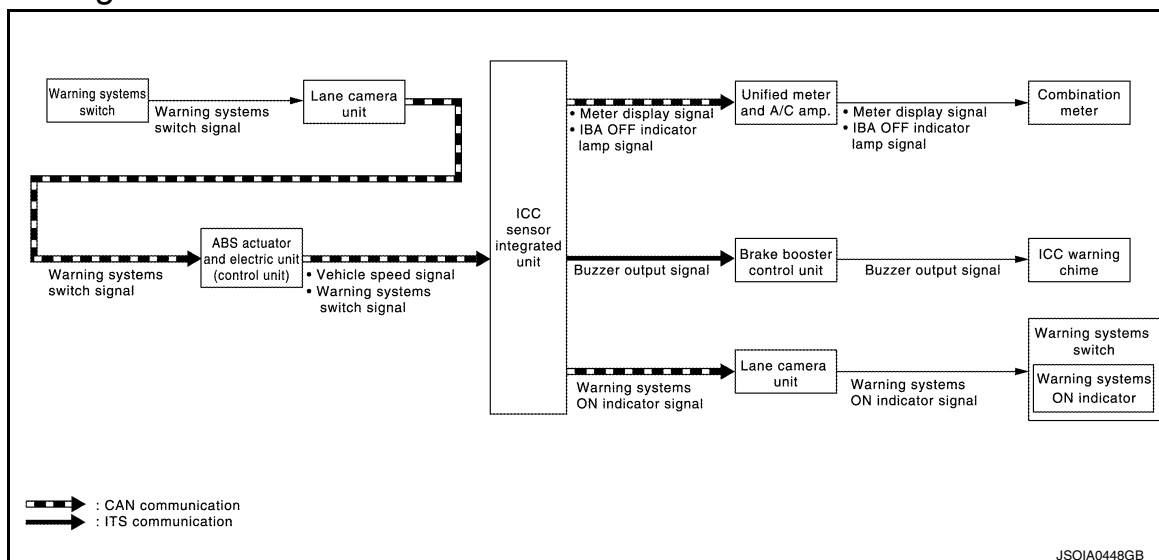

System Description

INFOID:000000010576680

OUTLINE


- The Forward Collision Warning (FCW) system will warn the driver by a warning lamp (vehicle ahead detection indicator) and chime when own vehicle is getting close to the vehicle ahead in the traveling lane.
- The FCW system will function when own vehicle is driven at speeds of approximately 15 km/h (10 MPH) and above.

NOTE:

The FCW system shares the diagnosis function with ICC system.
 They share the ICC sensor integrated unit.

BASIC OPERATIONS

Switches And Indicator/Warning Lamps

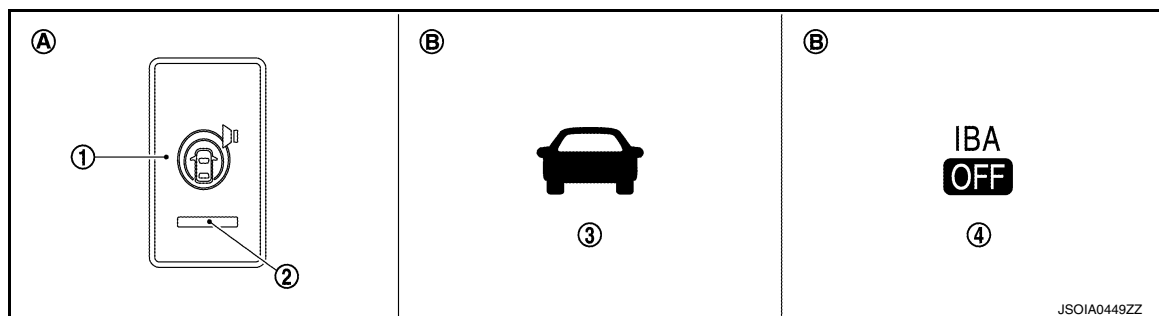

1. Warning systems switch
 2. Warning systems ON indicator
 3. Vehicle ahead detection indicator
 4. IBA OFF indicator lamp
- A. On the instrument driver lower panel B. On the combination meter

Fail-safe Indication

FORWARD COLLISION WARNING SYSTEM

[FCW]

< SYSTEM DESCRIPTION >

Vehicle condition	Indication on the combination meter
- When the FCW system malfunctions - When the sensor window is dirty - When driving into a strong light (i.e. sunlight) NOTE: Check that the IBA system is not OFF. The indicator lamp is shared with IBA system.	 JPOIA0179ZZ

NOTE:

Warning systems ON indicator blinks when "C1B03" is detected.

FCW INITIAL STATE CHANGE

CAUTION:

Never change FCW initial state "ON" ⇒ "OFF" without the consent of the customer.

FCW initial state can be changed.

- FCW initial ON* - FCW function is automatically turned ON, when the ignition switch OFF ⇒ ON.
- FCW initial OFF - FCW function is still OFF when the ignition switch OFF ⇒ ON.

*: Factory setting

How to change FCW initial state

- Turn ignition switch ON.
- Switch FCW and LDP functions to OFF.
- Push and hold warning systems switch for more than 4 seconds.
- Buzzer sounds and blinking of the lane departure warning lamp informs that the FCW initial state change is completed.

FCW OPERATING CONDITION

- Warning systems ON indicator: ON
- Vehicle speed: Approximately 15 km/h (10 MPH) and above.

ICC sensor integrated unit input/output signal item

Input Signal Item

Transmission Unit	Signal Name	Description
ABS actuator and electric unit (control unit)	Vehicle speed signal	Receives the vehicle speed signal (wheel speed) from ABS actuator and electric unit (control unit) via CAN communication
Lane camera unit [through ABS actuator and electric unit (control unit)]	Warning systems switch signal	Receives the warning systems switch signal from lane camera unit [through ABS actuator and electric unit (control unit)] via CAN communication.

Output Signal Item

Reception unit	Signal name		Description
Combination meter (through unified meter and A/C amp.)	Meter display signal	Vehicle ahead detection indicator signal	Transmits the meter display signal to the combination meter (through unified meter and A/C amp.) via CAN communication.
	IBA OFF indicator lamp signal		Transmits the IBA OFF indicator signal to the combination meter (through unified meter and A/C amp.) via CAN communication.
ICC warning chime	Buzzer output signal		- Transmits the buzzer output signal to the brake booster control unit via ITS communication. - The brake booster control unit outputs the buzzer output signal and operates the ICC warning chime.
Lane camera unit	Warning systems ON indicator signal		Transmits the warning systems ON indicator signal to the lane camera unit via CAN communication.


FORWARD COLLISION WARNING SYSTEM

[FCW]

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:0000000010576681

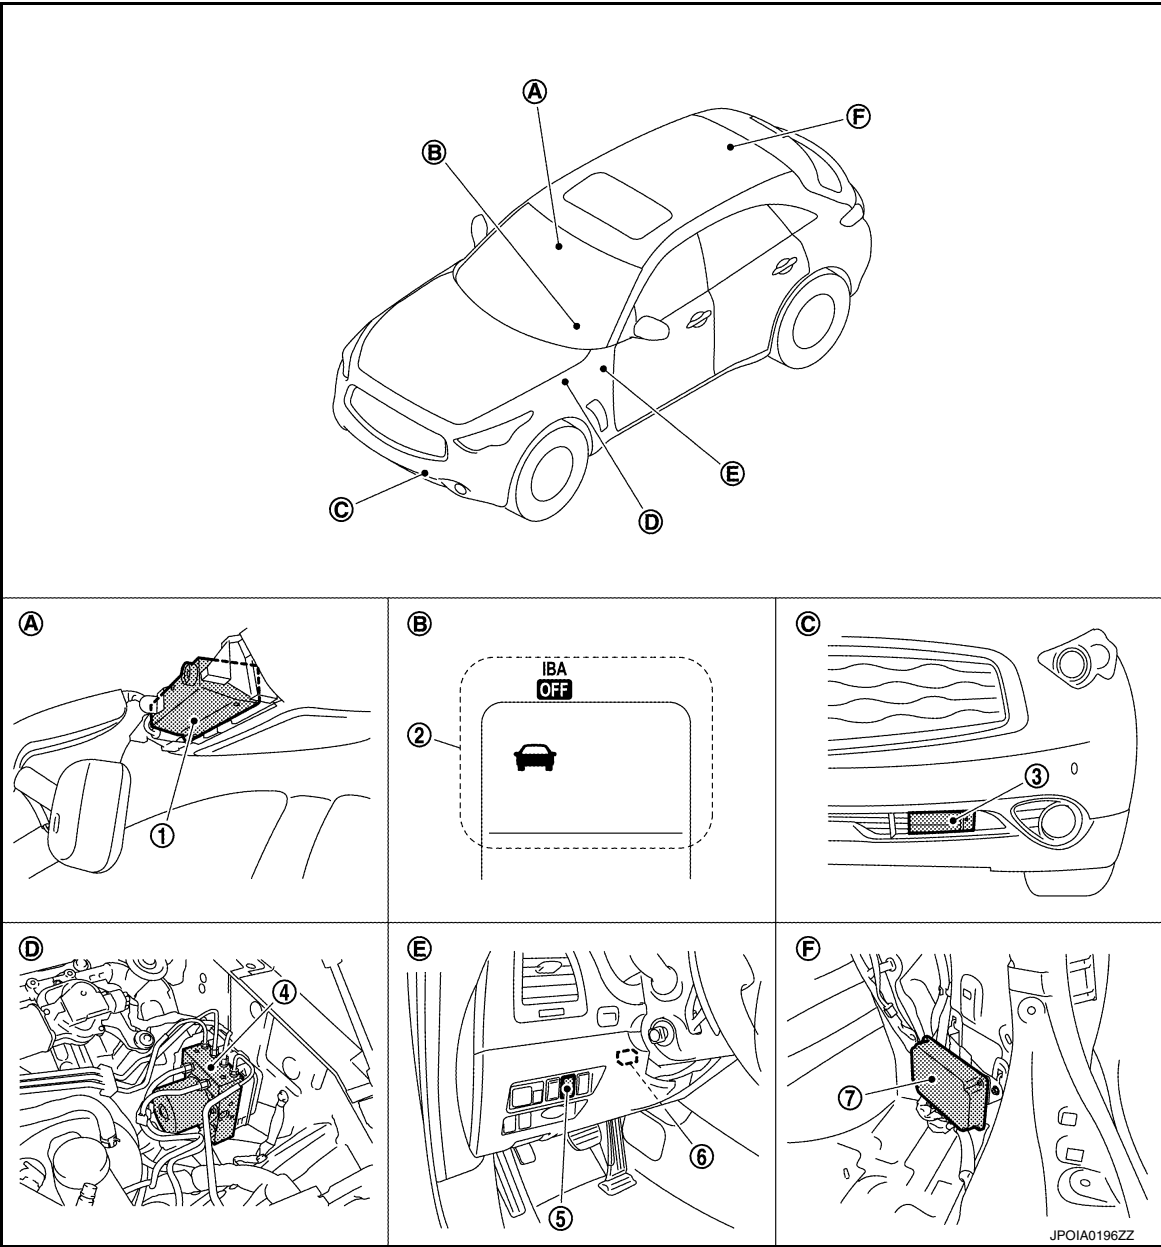

- | | | |
|--|--|-------------------------------|
| 1. Lane camera unit | 2. Information display, IBA OFF indicator lamp | 3. ICC sensor integrated unit |
| 4. ABS actuator and electric unit (control unit) | 5. Warning systems switch | 6. ICC warning chime |
| 7. Brake booster control unit | | |
| A. Front of the map lamp | B. On the combination meter | C. Front bumper (LH) |
| D. Inside the brake master cylinder cover | E. Instrument driver lower panel (LH) | F. Luggage room (RH) |

Component Description

INFOID:0000000010576682

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

FORWARD COLLISION WARNING SYSTEM

< SYSTEM DESCRIPTION >

[FCW]

Component	Description
Lane camera unit	• Transmits warning systems switch signal to ABS actuator and electric unit (control unit) unit via CAN communication. • Controls the warning systems ON indicator when receiving a warning systems ON indicator signal from the ICC sensor integrated unit via CAN communication.
ABS actuator and electric unit (control unit)	• Transmits vehicle speed signal to ICC sensor integrated unit via CAN communication. • Transmits warning systems switch signal to ICC sensor integrated unit via CAN communication.
Warning systems switch	Inputs the switch signal to lane camera unit.
Warning systems ON indicator (On the warning systems switch)	Indicates FCW system status.
Brake booster control unit	• The ICC sensor integrated unit transmits the buzzer output signal to the brake booster control unit via ITS communication. • The brake booster control unit outputs the buzzer output signal to the ICC warning chime.
Unified meter and A/C amp.	Receives the meter display signal, and IBA OFF indicator lamp signal from ICC sensor integrated unit via CAN communication and transmits them to the combination meter via the communication line.
Combination meter	Perform the following operations using the signals received from the unified meter and A/C amp. via the communication line. • Displays the FCW operation status using the meter display signal. • Illuminates the IBA OFF indicator lamp using the IBA OFF indicator lamp signal.
ICC warning chime	Warning chime sounds when the vehicle distance from the vehicle ahead is too close

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]


DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

Diagnosis Description

INFOID:000000010576683

The DTC is displayed on the information display by operating the ICC steering switch.

ON BOARD SELF-DIAGNOSIS SYSTEM DIAGRAM

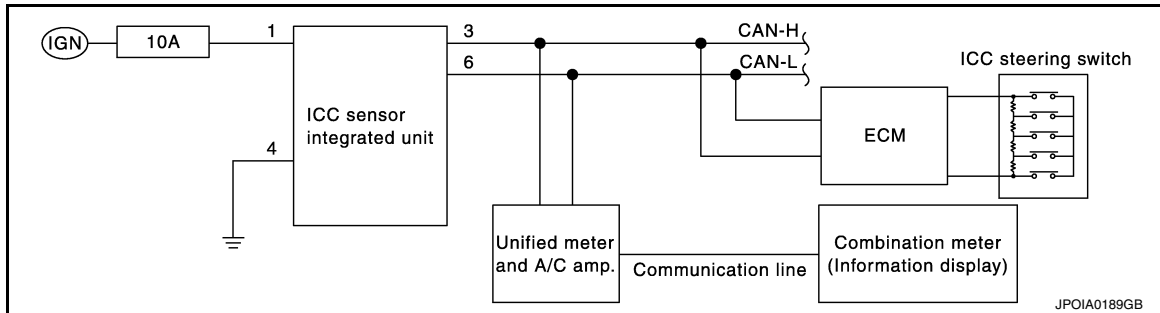

ON BOARD SELF-DIAGNOSIS OPERATION PROCEDURE

CAUTION:


Start condition of on board self-diagnosis

- ICC system OFF
- DCA system OFF
- Vehicle speed 0 km/h (0 MPH)


1. Turn the ignition switch OFF.
2. Start the engine.
3. Wait for 5 seconds after starting the engine. Push up the RESUME/ACCELERATE switch 5 times and push down the SET/COAST switch 5 times within 10 seconds.

NOTE:

If the above operation cannot be performed within 10 seconds after waiting for 5 seconds after starting the engine, repeat the procedure from step 1.

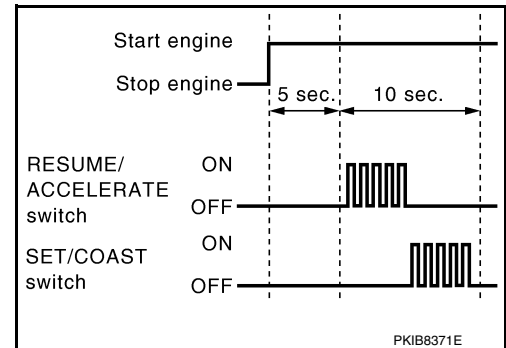

4. The DTC is displayed on the set vehicle speed indicator (1) on the ICC system display on the information display when the on board self-diagnosis starts. Refer to [DAS-228, "DTC Index"](#).

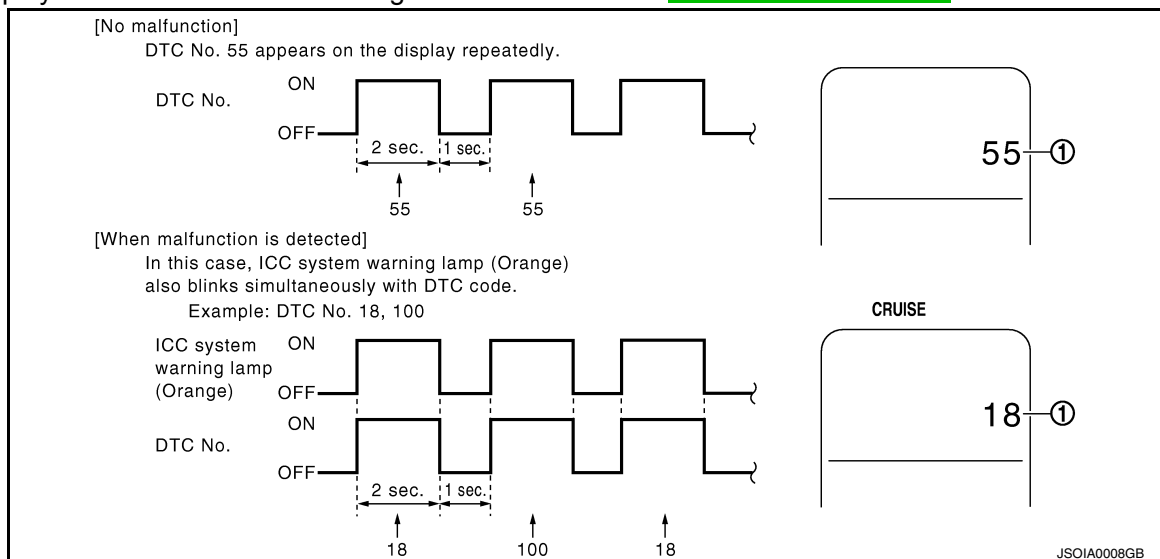

NOTE:

- It displays for up to 5 minutes and then stops.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

[FCW]

< SYSTEM DESCRIPTION >

- If multiple malfunctions exist, up to 3 DTCs can be stored in memory at the most, and the most recent one is displayed first.

WHEN THE ON BOARD SELF-DIAGNOSIS DOES NOT START

If the on board self-diagnosis does not start, check the following items.

Assumed abnormal part		Inspection item
ICC system display	Combination meter malfunction	Check that the self-diagnosis function of the combination meter operates. Refer to MWI-43, "Diagnosis Description" .
	Unified meter and A/C amp. malfunction	Check power supply and ground circuit of unified meter and A/C amp. Refer to MWI-58, "UNIFIED METER AND A/C AMP. : Diagnosis Procedure" .
	Communication error of the combination meter and the unified meter and A/C amp.	Start the self-diagnosis of the unified meter and A/C amp. and then check the self-diagnosis results. Refer to MWI-117, "DTC Index" .
ICC steering switch malfunction	Perform the inspection for DTC "C1A06". Refer to CCS-60, "Diagnosis Procedure" .	
Harness malfunction between ICC steering switch and ECM		
ECM malfunction		
ICC sensor integrated unit malfunction		- Check power supply and ground circuit of ICC sensor integrated unit. Refer to CCS-134, "ICC SENSOR INTEGRATED UNIT : Diagnosis Procedure". - Perform SELF-DIAGNOSIS for "ICC/ADAS" with CONSULT, and then check the malfunctioning parts. Refer to DAS-228, "DTC Index".

HOW TO ERASE ON BOARD SELF-DIAGNOSIS

- Turn the ignition switch OFF.
- Start the engine, and then start the on board self-diagnosis.
- Press the CANCEL switch 5 times, and then press the DISTANCE switch 5 times under the condition that the on board self-diagnosis starts.

NOTE:


- Complete the operation within 10 seconds after pressing the CANCEL switch first.
- If the operation is not completed within 10 seconds, repeat the procedure from step 1.

- DTC 55 is displayed after erasing.

NOTE:

DTCs for existing malfunction can not be erased.

- Turn ignition switch OFF, and finish the diagnosis.

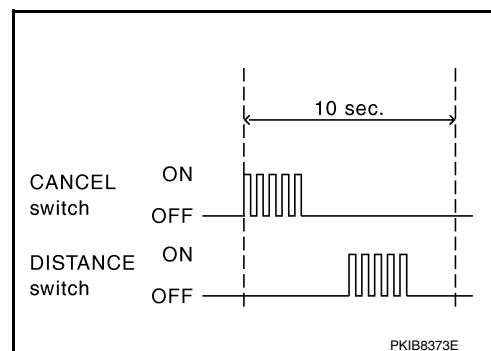

CONSULT Function (ICC/ADAS)

INFOID:0000000010576684

DESCRIPTION

CONSULT performs the following functions via CAN communication using ICC sensor integrated unit.

Diagnosis mode	Description
Work Support	- It can monitor the adjustment direction indication in order to perform the laser beam aiming operation smoothly. - Displays causes of automatic cancellation of the ICC system.
Self Diagnostic Result	Displays malfunctioning system memorized in ICC sensor integrated unit.
Data Monitor	Displays real-time input/output data of ICC sensor integrated unit.
Active Test	Enables operation check of electrical loads by transmitting driving signal to them.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Diagnosis mode	Description
Ecu Identification	- Displays ICC sensor integrated unit part number. - Displays brake booster control unit part number. - Displays accelerator pedal assembly part number.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

WORK SUPPORT

Work support items	Description
CAUSE OF AUTO-CANCEL	Displays causes of automatic cancellation of the ICC system.
LASER BEAM ADJUST	Outputs laser beam, calculates dislocation of the beam, and indicates adjustment direction.

Display Items For The Cause Of Automatic Cancellation

NOTE:

- Causes of the maximum five cancellations (system cancel) are displayed.
- The displayed cancellation causes display the number of the ignition switch ON/OFF up to 254. It is fixed to 254 if it is over 254. It returns to 0 when the same cancellation cause is detected again.

×: Applicable

Cause of cancellation	Vehicle-to-vehicle distance control mode	Conventional (fixed speed) cruise control mode	DCA system	Description
OPERATING WIPER	×			The wiper operates at HI or LO (it includes when the wiper is operated at LO or HI with the wiper switch INT position)
OPERATING ABS	×		×	ABS function was operated
OPERATING TCS	×	×	×	TCS function was operated
OPERATING VDC	×	×	×	VDC function was operated
ECM CIRCUIT	×	×		ECM did not permit ICC operation
OPE SW VOLT CIRC	×	×	×	The ICC steering switch input voltage is not within standard range.
LASER SUNBEAM	×		×	Intense light such as sunlight entered ICC sensor integrated unit light sensing part
LASER TEMP	×		×	Temperature around ICC sensor integrated unit became low
OP SW DOUBLE TOUCH	×	×		ICC steering switches were pressed at the same time
WHL SPD ELEC NOISE	×	×	×	Wheel speed sensor signal caught electromagnetic noise
VDC/TCS OFF SW	×		×	VDC OFF switch was pressed
SNOW MODE SW	×		×	Snow mode switch was pressed
VHCL SPD UNMATCH	×	×	×	Wheel speed became different from A/T vehicle speed
TIRE SLIP	×	×		Wheel slipped
IGN LOW VOLT	×	×	×	Power supply voltage became low
WHEEL SPD UNMATCH	×	×	×	The wheel speeds of 4 wheels are out of the specified values
VHCL SPD DOWN	×	×	×	Vehicle speed lower than the speed as follows - Vehicle-to-vehicle distance control mode is 24 km/h (15 MPH) - Conventional (fixed speed) cruise control mode is 32 km/h (20 MPH)
CAN COMM ERROR	×	×	×	ICC sensor integrated unit received an abnormal signal with CAN communication
ABS/TCS/VDC CIRC	×	×	×	An abnormal condition occurs in VDC/TCS/ABS system
BCU CIRCUIT	×	×	×	The brake booster control unit is malfunctioning

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

INCHING LOST	×			A vehicle ahead is not detected during the following driving when the vehicle speed is approximately 24 km/h (15 MPH) or less
ASCD VHCL SPD DTAC		×		Vehicle speed is detached from set vehicle speed
ASCD DOUBLE COMD		×		Cancel switch and operation switch are detected simultaneously
PARKING BRAKE ON	×	×		The parking brake is operating
APA HI TEMP			×	The accelerator pedal actuator integrated motor temperature is high
NO RECORD	×	×	×	—

Laser Beam Adjust

Refer to [CCS-7. "LASER BEAM AIMING ADJUSTMENT : Description"](#).

SELF DIAGNOSTIC RESULT

Refer to [DAS-228. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

×: Applicable

Monitored item [Unit]	MAIN SIGNAL	Description
MAIN SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
SET/COAST SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
CANCEL SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
RESUME/ACC SW [On/Off]	×	Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
DISTANCE SW [On/Off]		Indicates [On/Off] status as judged from ICC steering switch signal (ECM transmits ICC steering switch signal through CAN communication).
CRUISE OPE [On/Off]	×	Indicates whether controlling or not (ON means "controlling").
BRAKE SW [On/Off]	×	Indicates [On/Off] status as judged from ICC brake switch signal (ECM transmits ICC brake switch signal through CAN communication).
STOP LAMP SW [On/Off]	×	Indicates [On/Off] status as judged from stop lamp switch signal (ECM transmits stop lamp switch signal through CAN communication).
IDLE SW [On/Off]		Indicates [On/Off] status of idle position read from ICC sensor integrated unit through CAN communication (ECM transmits On/Off status through CAN communication).
SET DISTANCE [Short/Mid/Long]	×	Indicates set distance memorized in ICC sensor integrated unit.
CRUISE LAMP [On/Off]	×	Indicates [On/Off] status of MAIN switch indicator output.
OWN VHCL [On/Off]		Indicates [On/Off] status of own vehicle indicator output.
VHCL AHEAD [On/Off]		Indicates [On/Off] status of vehicle ahead detection indicator output.
ICC WARNING [On/Off]		Indicates [On/Off] status of ICC system warning lamp output.
VHCL SPEED SE [km/h] or [mph]	×	Indicates vehicle speed calculated from ICC sensor integrated unit through CAN communication [ABS actuator and electric unit (control unit) transmits vehicle speed signal (wheel speed) through CAN communication].
SET VHCL SPD [km/h] or [mph]	×	Indicates set vehicle speed memorized in ICC sensor integrated unit.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Monitored item [Unit]	MAIN SIGNAL	Description	
BUZZER O/P [On/Off]		Indicates [On/Off] status of ICC warning chime output.	A
THRTL SENSOR [deg]	×	NOTE: The item is displayed, but it is not monitored.	B
ENGINE RPM [rpm]		Indicates engine speed read from ICC sensor integrated unit through CAN communication (ECM transmits engine speed through CAN communication).	C
WIPER SW [Off/Low/High]		Indicates wiper [Off/Low/High] status (BCM transmits front wiper request signal through CAN communication).	
YAW RATE [deg/s]		NOTE: The item is displayed, but it is not monitored.	D
BA WARNING [On/Off]		Indicates [On/Off] status of IBA OFF indicator lamp output.	E
FUNC ITEM [FUNC1]		Indicates the equipment status of DCA system and LDP system.	
LDP SELECT [On/Off]		Indicates [On/Off] status of LDP system setting displayed on the navigation screen.	F
DCA SELECT [On/Off]		Indicates [On/Off] status of DCA system setting displayed on the navigation screen.	G
RELEASE SW NO [On/Off]		Indicates [On/Off] status as judged from release switch signal. ON: When brake pedal is depressed. OFF: When brake pedal is not depressed.	H
RELEASE SW NC [On/Off]		Indicates [On/Off] status as judged from release switch signal. ON: When brake pedal is not depressed. OFF: When brake pedal is depressed.	I
STP LMP DRIVE [On/Off]	×	Indicates [On/Off] status of ICC brake hold relay drive output.	J
PRESS SENS [bar]	×	Indicates brake fluid pressure value calculated from signal voltage of brake pressure sensor.	K
D RANGE SW [On/Off]		Indicates [On/Off] status of "D" or "DS" or "M" positions read from ICC sensor integrated unit through CAN communication; ON when position "D" or "DS" or "M" (TCM transmits shift position signal through CAN communication).	L
NP RANGE SW [On/Off]		Indicates shift position signal read from ICC sensor integrated unit through CAN communication (TCM transmits shift position signal through CAN communication).	M
PKB SW [On/Off]		Parking brake switch status [On/Off] judged from the parking brake switch signal that ICC sensor integrated unit readout via CAN communication is displayed (Unified meter and A/C amp. transmits the parking brake switch signal via CAN communication).	N
PWR SUP MONI [V]	×	Indicates IGN voltage input by ICC sensor integrated unit.	
VHCL SPD AT [km/h] or [mph]		Indicates vehicle speed calculated from A/T vehicle speed sensor read from ICC sensor integrated unit through CAN communication (TCM transmits A/T vehicle speed sensor signal through CAN communication).	
THRTL OPENING [%]	×	Indicates throttle position read from ICC sensor integrated unit through CAN communication (ECM transmits accelerator pedal position signal through CAN communication).	DAS
GEAR [1, 2, 3, 4, 5, 6, 7]		Indicates A/T gear position read from ICC sensor integrated unit through CAN communication (TCM transmits current gear position signal through CAN communication).	P
CLUTCH SW SIG [On/Off]	×	NOTE: The item is displayed, but it is not monitored.	
NP SW SIG [On/Off]	×	NOTE: The item is displayed, but it is not used.	
MODE SIG [OFF, ICC, ASCD]		Indicates the active mode from ICC or ASCD [conventional (fixed speed) cruise control mode].	

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Monitored item [Unit]	MAIN SIGNAL	Description
SET DISP IND [On/Off]		Indicates [On/Off] status of SET switch indicator output.
LDP SYSTEM ON [On/Off]		Indicates [On/Off] status of LDP system.
LDW SYSTEM ON [On/Off]		Indicates [On/Off] status of LDW system.
FCW SYSTEM ON [On/Off]		Indicates [On/Off] status of FCW system.
DISTANCE [m]		Indicates the distance from the vehicle ahead.
RELATIVE SPD [m/s]		Indicates the relative speed of the vehicle ahead.
DCA ON SW [On/Off]	×	NOTE: The item is displayed, but it is not used.
DCA ON IND [On/Off]		The status [On/Off] of DCA system switch indicator output is displayed.
DCA VHL AHED [On/Off]		The status [On/Off] of vehicle ahead detection indicator output in DCA system is displayed.
IBA SW [On/Off]		Status [On/Off] judged from IBA OFF switch signal that ICC sensor integrated unit readout via ITS communication is displayed (Brake booster control unit transmits the IBA OFF switch signal via ITS communication).
DYNA ASIST SW [On/Off]		Indicates [On/Off] status as judged from ICC steering switch signal (dynamic driver assistance switch signal) [ECM transmits ICC steering switch signal (dynamic driver assistance switch signal) through CAN communication].
APA TEMP [°C]		The accelerator pedal actuator integrated motor temperature that the ICC sensor integrated unit readout via ITS communication is displayed (Accelerator pedal actuator transmits the integrated motor temperature via ITS communication).
APA PWR [V]		Accelerator pedal actuator power supply voltage that the ICC sensor integrated unit readout via ITS communication is displayed (Accelerator pedal actuator transmits the power supply voltage via ITS communication).

ACTIVE TEST

CAUTION:

- **Never perform “Active Test” while driving the vehicle.**
- **The “Active Test” cannot be performed when the ICC system warning lamp is illuminated.**
- **Shift the selector lever to “P” position, and then perform the test.**

Test item	Description
METER LAMP	The ICC system warning lamp, MAIN switch indicator, SET switch indicator and IBA OFF indicator lamp can be illuminated by ON/OFF operations as necessary.
DCA INDICATOR	The DCA system switch indicator can be illuminated by ON/OFF operations as necessary.
STOP LAMP	The ICC brake hold relay can be operated by ON/OFF operations as necessary, and the stop lamp can be illuminated.
BOOSTER SOL/V	The booster solenoid can be operated as necessary, and the brake can be operated.
ICC BUZZER	The ICC warning chime can sound by ON/OFF operations as necessary.
ACCELERATOR PEDAL ACTUATOR	The accelerator pedal actuator can be operated as necessary.

METER LAMP

NOTE:

The test can be performed only when the engine is running.

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Test item	Operation	Description	- MAIN switch indicator - SET switch indicator - ICC system warning lamp - IBA OFF indicator lamp
METER LAMP	Off	Stops transmitting the signals below to end the test. - Meter display signal - ICC warning lamp signal - IBA OFF indicator lamp signal	OFF
	On	Transmits the following signals to the unified meter and A/C amp. via CAN communication. - Meter display signal - ICC warning lamp signal - IBA OFF indicator lamp signal	ON

DCA INDICATOR

NOTE:

The test can be performed only when the engine is running.

Test item	Operation	Description	DCA system switch indicator
DCA INDICATOR	Off	Stops transmitting the DCA system switch indicator signal below to end the test.	OFF
	On	Transmits the DCA system switch indicator signal to the unified meter and A/C amp. via CAN communication.	ON

STOP LAMP

Test item	Operation	Description	Stop lamp
STOP LAMP	Off	Stops transmitting the ICC brake hold relay drive signal below to end the test.	OFF
	On	Transmits the ICC brake hold relay drive signal to the brake booster control unit via ITS communication.	ON

BOOSTER SOL/V

NOTE:

The test can be performed only when the engine is running.

Test item	Operation	Description	"PRESS SENS" value
BOOSTER SOL/V	MODE1	Transmits the brake fluid pressure command signal to the brake booster control unit via ITS communication.	10 bar
	MODE2		20 bar
	MODE3		30 bar
	Test start	Starts the tests of "MODE1", "MODE2" and "MODE3".	—
	Reset	Stops transmitting the brake fluid pressure command signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	—


NOTE:

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

< SYSTEM DESCRIPTION >

[FCW]

The test is finished in 10 seconds after starting.

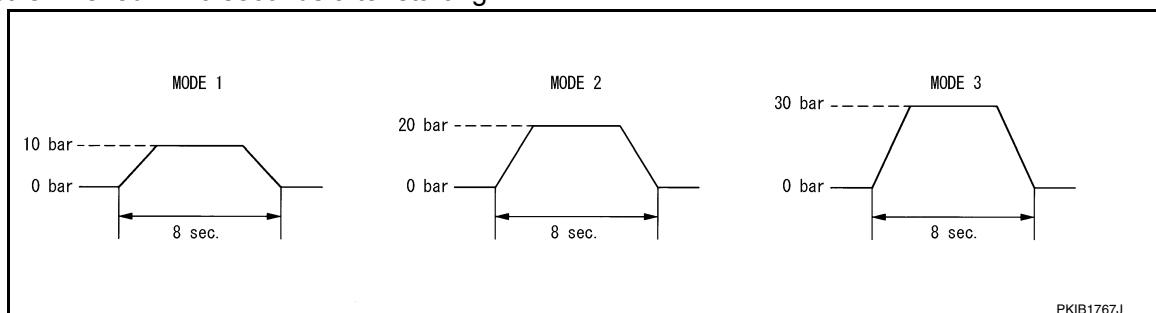

ICC BUZZER

Test item	Operation	Description	ICC warning chime operation sound
ICC BUZZER	MODE1	Transmits the buzzer output signal to the brake booster control unit via ITS communication.	Intermittent beep sound
	MODE2		Continuous beep sound
	MODE3		Beep sound
	Test start	Starts the tests of "MODE1", "MODE2" and "MODE3".	
	Reset	Stops transmitting the buzzer output signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	

ACCELERATOR PEDAL ACTUATOR

CAUTION:

- Shift the selector lever to "P" position, and then perform the test.
- Never depress the accelerator pedal excessively. (The engine speed may rise unexpectedly when finishing the test.)

NOTE:

- Depress the accelerator pedal to check when performing the test.
- The test can be performed only when the engine is running.

Test item	Operation	Description	Accelerator pedal operation
ACCELERATOR PEDAL ACTUATOR	MODE1	Transmit the accelerator pedal feedback force control signal to the accelerator pedal actuator via ITS communication.	Constant with a force of 25 N for 8 seconds
	MODE2		Constant with a force of 15 N for 8 seconds
	MODE3		Change up to a force of 25 N for 8 seconds
	MODE4		Change up to a force of 15 N for 8 seconds
	Test start	Starts the tests of "MODE1", "MODE2", "MODE3", and "MODE4".	—
	Reset	Stops transmitting the accelerator pedal feedback force control signal below to end the test.	—
	End	Returns to the "SELECT TEST ITEM" screen.	—


NOTE:

DIAGNOSIS SYSTEM (ICC SENSOR INTEGRATED UNIT)

[FCW]

< SYSTEM DESCRIPTION >

The test is finished in 10 seconds after starting.

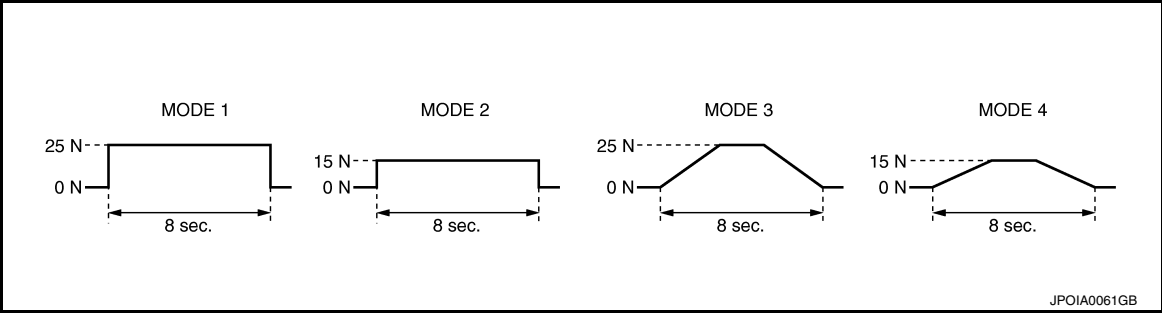

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[FCW]

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

CONSULT Function (LANE CAMERA)

INFOID:0000000010576685

DESCRIPTION

CONSULT performs the following functions by communicating with the lane camera unit.

Select diag mode	Function
Work support	- Performs the camera aiming. - Displays causes of automatic cancellation of the LDP function.
Self Diagnostic Result	Displays memorized DTC in the lane camera unit.
Data Monitor	Displays real-time data of lane camera unit.
Active Test	Enables operation check of electrical loads by sending driving signal to them.
Ecu Identification	Displays part number of lane camera unit.

WORK SUPPORT

Work support item	Function
CAUSE OF AUTO-CANCEL	Indicates causes of automatic cancellation of the LDP.
AUTO AIM	Outputs camera unit, calculates dislocation of the camera, and displays adjustment direction. Refer to DAS-253, "CAMERA AIMING ADJUSTMENT : Description" .

Cause of Auto-Cancel Display Item List

When LDP control is canceled under the operating condition, "CAUSE OF AUTO-CANCEL" is memorized.

- Last five cancel (system cancel) causes are displayed.
- "CAUSE OF AUTO-CANCEL" displays the number of times of ignition switch ON/OFF up to a maximum of "39". "39" is kept even when the number exceeds "39". The number returns to 0 when detecting the same cancellation causes are detected.

Cause of cancellation	Description
NO RECORD	—
Operating VDC/ABS	VDC or ABS function was operated.
Vehicle dynamics	Vehicle behavior exceeds specified value.
Steering speed	Steering speed was more than the specified value in evasive direction.
End by yaw angle	Yaw angle was the end of LDP control.
Departure yaw large	Detected more than the specified value of yaw angle in departure direction.
ICC WARNING	Target approach warning of ICC system or IBA system was activated.
VDC OFF SW	VDC OFF switch was pressed.
CURVATURE	Road curve was more than the specified value.
Steering angle large	Steering angle was more than the specified value.
ICC main SW hold ON	ICC MAIN switch was held ON for more than a certain period.
Brake is operated	Brake pedal was operated.
Lateral offset	Distance of vehicle and lane was detached in lateral direction more than the specified value.
Lane marker lost	Lane camera unit lost the trace of lane marker.
Lane marker unclear	Detected lane marker was unclear.
Bank	Road bank angle was more than the specified value.
Yaw acceleration	Detected yawing speed was more than the specified value.
Deceleration large	Deceleration in a longitudinal direction was more than the specified value.
Accel is operated	Accelerator pedal was depressed.
Departure steering	Steering wheel was steered more than the specified value in departure direction.

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Evasive steering	Steering wheel was steered more than the specified value in the evasive direction.
R range	Selector lever was operated to R range.
Parking brake drift	Rear wheels lock was detected.
Not operating condition	Did not meet the operating condition (vehicle speed, turn signal operation, etc.).

SELF DIAGNOSTIC RESULT

Displays memorized DTC in lane camera unit. Refer to [DAS-317, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item [unit]	Description
LDW SW [On/Off]	Switch status judged from warning systems switch signal
LDW ON LAMP [On/Off]	Signal output status of warning systems ON indicator
LDP ON IND [On/Off]	Request signal status of LDP ON indicator lamp
LANE DPRT W/L [On/Off]	Request signal status of lane departure warning lamp
BUZZER OUTPUT [On/Off]	Signal output status of lane departure warning buzzer
LC INACCURAT [On/Off]	Lane camera unit status
CAM HIGH TEMP [On/Off]	Status of lane camera unit high temperature judgment
VHCL SPD SE [km/h] or [mph]	Vehicle speed received from ABS actuator and electric unit (control unit) via CAN communication
TURN SIGNAL [Off/LH/RH]	Status of "Turn signal" determined from BCM via CAN communication
LANE DETCT LH [On/Off]	Left side lane marker detection
LANE DETCT RH [On/Off]	Right side lane marker detection
CROSS LANE LH [On/Off]	Condition that the vehicle is crossing left lane marker
CROSS LANE RH [On/Off]	Condition that the vehicle is crossing right lane marker
WARN LANE LH [On/Off]	Warning for left lane marker
WARN LANE RH [On/Off]	Warning for right lane marker
VALID POS LH [VLD/INVLD]	Lateral position for left lane marker is valid
VALID POS RH [VLD/INVLD]	Lateral position for right lane marker is valid
AIMING DONE [OK/NG]	Status that camera aiming is done
AIMING RESULT [OK/NOK]	Result of camera aiming
XOFFSET [pixel]	Lane camera unit installation condition
AIM CHECK YAW [deg]	Check result of camera aiming
AIM CHECK ROLL [deg]	Check result of camera aiming
AIM CHECK PITCH [deg]	Check result of camera aiming
FCTRY AIM YAW [deg]	Lane camera unit installation condition
FCTRY AIM ROL [deg]	Lane camera unit installation condition
FCTRY AIM PIT [deg]	Lane camera unit installation condition

ACTIVE TEST

CAUTION:

- Never perform the active test while driving.
- Active test cannot be started while the lane departure warning lamp is illuminated.

Active test item	Operation	Description
BUZZER DRIVE	On	Outputs the voltage to sound the lane departure warning buzzer.
	Off	Stops the voltage to sound the lane departure warning buzzer.

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[FCW]

Active test item	Operation	Description
LDW ON IND	On	Outputs the voltage to illuminate the warning systems ON indicator (on the warning systems switch).
	Off	Stops the voltage to illuminate the warning systems ON indicator.
LDP ON IND	On	Requests the LDP ON indicator lamp ON [on the combination meter (Green)] to combination meter (through unified meter and A/C amp.) via CAN communication.
	Off	Stops the illumination request.
LANE DEPARTURE W/L	On	Requests the lane departure warning lamp ON [on the combination meter (Yellow)] to combination meter (through unified meter and A/C amp.) via CAN communication.
	Off	Stops the illumination request.

NOTE:

"Active test" of indicator/warning lamp cannot be performed when applicable indicator/warning lamp is turned ON.

ECU DIAGNOSIS INFORMATION

ICC SENSOR INTEGRATED UNIT

Reference Value

INFOID:0000000010576886

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition		Value/Status
MAIN SW	Ignition switch ON	When MAIN switch is pressed	On
		When MAIN switch is not pressed	Off
SET/COAST SW	Ignition switch ON	When SET/COAST switch is pressed	On
		When SET/COAST switch is not pressed	Off
CANCEL SW	Ignition switch ON	When CANCEL switch is pressed	On
		When CANCEL switch is not pressed	Off
RESUME/ACC SW	Ignition switch ON	When RESUME/ACCELERATE switch is pressed	On
		When RESUME/ACCELERATE switch is not pressed	Off
DISTANCE SW	Ignition switch ON	When DISTANCE switch is pressed	On
		When DISTANCE switch is not pressed	Off
CRUISE OPE	Drive the vehicle and operate the ICC system.	When ICC system is controlling	On
		When ICC system is not controlling	Off
BRAKE SW	Ignition switch ON	When brake pedal is depressed	Off
		When brake pedal is not depressed	On
STOP LAMP SW	Ignition switch ON	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
IDLE SW	Engine running	Idling	On
		Except idling (depress accelerator pedal)	Off
SET DISTANCE	- Start the engine and turn the ICC system ON. - Press the DISTANCE switch to change the vehicle-to-vehicle distance setting.	When set to "long"	Long
		When set to "middle"	Mid
		When set to "short"	Short
CRUISE LAMP	Start the engine and press MAIN switch.	ICC system ON (MAIN switch indicator ON)	On
		ICC system OFF (MAIN switch indicator OFF)	Off
OWN VHCL	Start the engine and press MAIN switch.	ICC system ON (Own vehicle indicator ON)	On
		ICC system OFF (Own vehicle indicator OFF)	Off
VHCL AHEAD	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected (vehicle ahead detection indicator ON)	On
		When a vehicle ahead is not detected (vehicle ahead detection indicator OFF)	Off
ICC WARNING	Start the engine and press the MAIN switch.	When ICC system is malfunctioning (ICC system warning lamp ON)	On
		When ICC system is normal (ICC system warning lamp OFF)	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

Monitor item	Condition		Value/Status
VHCL SPEED SE	While driving		Value of vehicle speed signal (wheel speed)
SET VHCL SPD	While driving	When vehicle speed is set	Displays the set vehicle speed.
BUZZER O/P	Engine running	When the buzzer output signal is output	On
		When the buzzer output signal is not output	Off
THRTL SENSOR	NOTE: The item is indicated, but not monitored.		0.0
ENGINE RPM	Engine running		Equivalent to tachometer reading
WIPER SW	Ignition switch ON	Wiper not operating	Off
		Wiper LO operation	Low
		Wiper HI operation	High
YAW RATE	NOTE: The item is indicated, but not monitored.		0.0
BA WARNING	Engine running	IBA OFF indicator lamp ON • When IBA system is malfunctioning • When IBA system is turned to OFF	On
		IBA OFF indicator lamp OFF • When IBA system is normal • When IBA system is turned to ON	Off
FUNC ITEM	Ignition switch ON		FUNC1
LDP SELECT	Ignition switch ON	When the LDP system setting is ON	On
		When the LDP system setting is OFF	Off
DCA SELECT	Ignition switch ON	When the DCA system setting is ON	On
		When the DCA system setting is OFF	Off
RELEASE SW NO	Engine running	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
RELEASE SW NC	Engine running	When brake pedal is depressed	Off
		When brake pedal is not depressed	On
STP LMP DRIVE	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When ICC brake hold relay is activated	On
		When the ICC brake hold relay is not activated	Off
PRESS SENS	Engine running	When brake pedal is not depressed	0.0
		When brake pedal is depressed	Brake fluid pressure value
D RANGE SW	Engine running	When the selector lever is in "D", "DS" position or manual mode	On
		When the selector lever is in any position other than "D", "DS" or manual mode	Off
NP RANGE SW	Engine running	When the selector lever is in "N", "P" position	On
		When the selector lever is in any position other than "N", "P"	Off
PKB SW	Ignition switch ON	When the parking brake is applied	On
		When the parking brake is released	Off
PWR SUP MONI	Engine running		Power supply voltage value of ICC sensor integrated unit

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

Monitor item	Condition		Value/Status
VHCL SPD AT	While driving		Value of A/T vehicle speed sensor signal
THRTL OPENING	Engine running	Depress accelerator pedal	Displays the throttle position.
GEAR	While driving		Displays the shift position.
CLUTCH SW SIG	NOTE: The item is indicated, but not monitored.		Off
NP SW SIG	NOTE: The item is indicated, but not used.		—
MODE SIG	Start the engine and press MAIN switch.	When ICC system is deactivated	Off
		When vehicle-to-vehicle distance control mode is activated	ICC
		When conventional (fixed speed) cruise control mode is activated	ASCD
SET DISP IND	- Start the engine and activate the conventional (fixed speed) cruise control mode. - Press SET/COAST switch.	SET switch indicator lamp ON	On
		SET switch indicator lamp OFF	Off
LDP SYSTEM ON	Engine running	When the LDP system is ON (LDP ON indicator lamp ON)	On
		When the LDP system is OFF (LDP ON indicator lamp OFF)	Off
LDW SYSTEM ON	Ignition switch ON	When the LDW system is ON (Warning systems ON indicator lamp ON)	On
		When the LDW system is OFF (Warning systems ON indicator lamp OFF)	Off
FCW SYSTEM ON	Ignition switch ON	When the FCW system is ON (Warning systems ON indicator lamp ON)	On
		When the FCW system is OFF (Warning systems ON indicator lamp OFF)	Off
DISTANCE	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected	Displays the distance from the preceding vehicle.
		When a vehicle ahead is not detected	0.0
RELATIVE SPD	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected	Displays the relative speed.
		When a vehicle ahead is not detected	0.0
DCA ON SW	NOTE: The item is indicated, but not monitored.		Off
DCA ON IND	Start the engine	DCA system OFF (DCA system switch indicator OFF)	Off
		DCA system ON (DCA system switch indicator ON)	On
DCA VHL AHED	Drive the vehicle and activate the DCA system.	When a vehicle ahead is not detected (vehicle ahead detection indicator OFF)	Off
		When a vehicle ahead is detected (vehicle ahead detection indicator ON)	On
IBA SW	Ignition switch ON	When the IBA OFF switch is not pressed	Off
		When the IBA OFF switch is pressed	On

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P


ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

Monitor item	Condition		Value/Status
DYNA ASIST SW	Ignition switch ON	When the dynamic driver assistance switch is pressed	On
		When the dynamic driver assistance switch is not pressed	Off
APA TEMP	Engine running		Display the accelerator pedal actuator integrated motor temperature
APA PWR	Ignition switch ON		Power supply voltage

TERMINAL LAYOUT

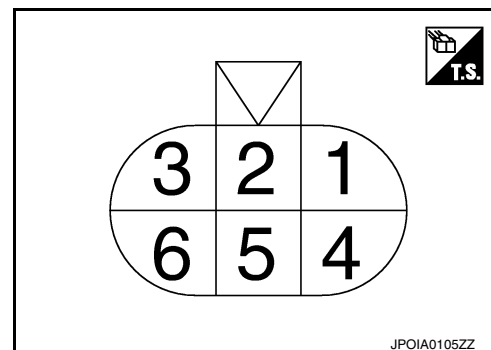

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
1 (R)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
2 (L)		ITS communication-H	Input/ Output	—	—
3 (L)		CAN-H	Input/ Output	—	—
4 (B)		Ground	—	Ignition switch ON	0 V
5 (P)		ITS communication-L	Input/ Output	—	—
6 (P)		CAN-L	Input/ Output	—	—

ICC SENSOR INTEGRATED UNIT


< ECU DIAGNOSIS INFORMATION >

[FCW]

Wiring Diagram - FORWARD COLLISION WARNING -

INFOID:000000010576687

FORWARD COLLISION WARNING

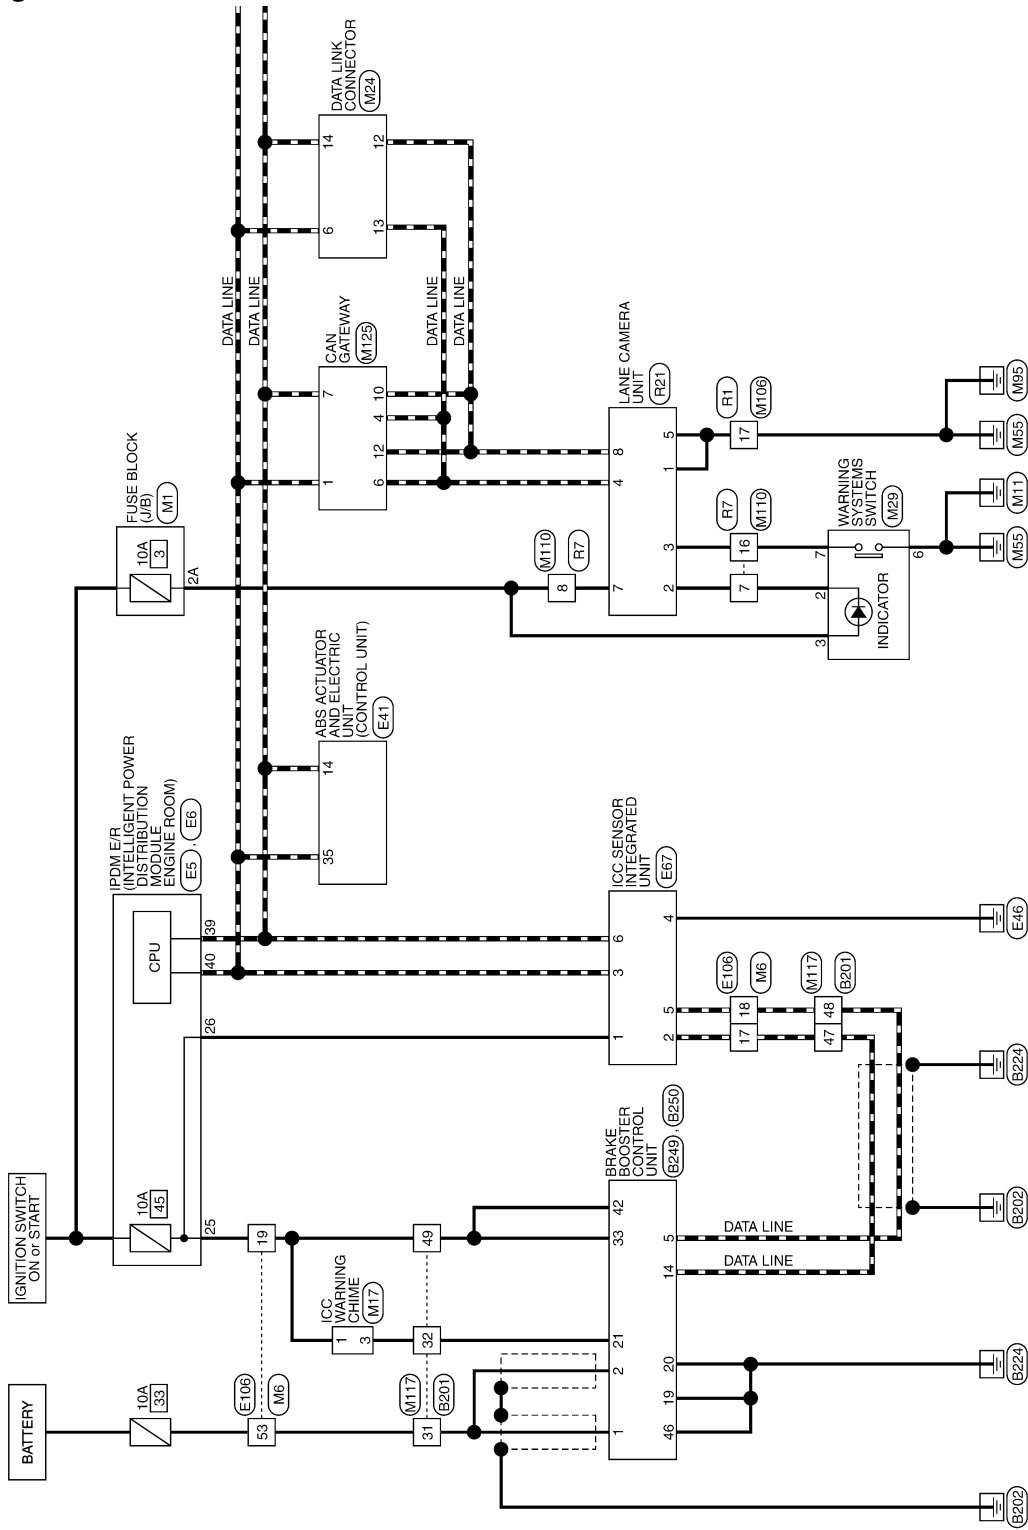


2014/03/18

JROWC2943GB

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

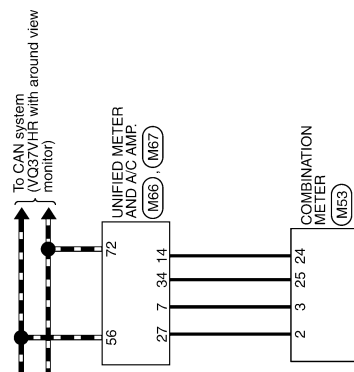

JROWC2944GB

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING


Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH08FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	BR	-
4	SB	-
6	BG	-
7	GR	-
8	W	-
10	G	-
11	SHIELD	-
20	L	-
21	P	-
22	GR	-
23	LG	-
24	W	-
25	V	-
26	G	-
27	Y	-
28	SHIELD	-
31	W	-
32	GR	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	LG	- [With ICC] - [Without ICC]
40	V	- [With ICC] - [Without ICC]
41	SB	- [With ICC] - [Without ICC]
42	V	- [With ICC] - [Without ICC]
42	W	- [With ICC] - [Without ICC]
43	B	- [With ICC] - [Without ICC]
44	BR	- [With ICC] - [Without ICC]
45	G	-


46	BG	- [With ICC] - [Without ICC]
46	SHIELD	- [With ICC] - [Without ICC]
47	B	- [With ICC] - [Without ICC]
47	L	- [With ICC] - [Without ICC]
48	P	- [With ICC] - [Without ICC]
48	R	- [With ICC] - [Without ICC]
49	G	- [With ICC] - [Without ICC]
49	W	- [With ICC] - [Without ICC]
50	SHIELD	-
51	W	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BG	-
66	Y	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-
77	LG	-
80	BG	-
82	P	-
83	Y	-
84	R	-
85	SB	-
86	GR	-
87	L	-
91	V	-
92	W	-
93	R	-
94	LG	-
95	GR	-
96	W	-
97	G	-
98	BG	-
99	L	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBA OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD R/LT DRIVE SIGNAL


Connector No.	B250
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BATTERY
2	W	BATTERY
5	P	ITS COMM-L
6	SB	RELEASE SW PWR
8	R	BRAKE PRESSURE SEN PWR
10	G	BOOSTER SOL PWR
12	R	BOOSTER SOL GND
14	L	ITS COMM-H
15	V	RELEASE SW (NO)
17	G	BRAKE PRESSURE SEN SIGNAL
19	B	GROUND
20	B	GROUND
21	GR	CHIME SIGNAL
22	BR	RELEASE SW (NO)


24	BG	BRAKE PRESSURE SEN GND
----	----	------------------------

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-CS12-M4-1V

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH

 

JROWC2945GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	B4A42FB-4H24-LH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	UBVR
3	R	UBVR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
12	L	VAC
14	P	CAN-L
15	SHIELD	AGND
19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	SB	BLS
31	R	VOC OFF SW
35	L	CAN-H
45	B	BUSH

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	L	ITS COM+H
3	L	CAN-H
4	B	GROUND
5	P	ITS COM+L
6	P	CAN-L

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-DS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-

72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FM-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

JROWC2946GB


ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 


Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
2	BG	-	-
3	LG	-	- [Without Auto aircon seat] - [With Auto aircon seat]
4	SB	-	-
5	GR	-	-
6	W	-	-
7	G	-	-
8	W	-	-
9	P	-	-
10	BR	-	-
11	B	-	-
12	G	-	-
13	R	-	-
14	W	-	-
15	SHIELD	-	-
16	BR	-	-
17	L	-	-
18	P	-	-
19	G	-	-
20	GR	-	- [Without ICC] - [With ICC]
21	BR	-	- [Without ICC] - [With ICC]
22	L	-	- [Without ICC] - [With ICC]
23	G	-	- [Without ICC] - [With ICC]
24	L	-	- [Without ICC] - [With ICC]
25	W	-	- [Without ICC] - [With ICC]
26	Y	-	- [Without ICC] - [With ICC]
28	SHIELD	-	-
29	GR	-	-
30	BG	-	-
32	W	-	-

33	Y	-	-
34	L	-	-
37	G	-	-
38	R	-	-
39	G	-	-
41	L	-	-
42	W	-	-
43	R	-	-
44	LG	-	-
45	GR	-	-
46	W	-	-
47	L	-	-
48	P	-	-
49	BG	-	-
50	LG	-	-
51	SB	-	-
52	Y	-	-
53	BG	-	-
54	BR	-	-
55	SB	-	-
59	SB	-	-
60	SB	-	-
61	V	-	-
62	P	-	-
63	R	-	-
64	L	-	-
65	BG	-	-
69	V	-	-
70	SHIELD	-	-
71	BG	-	-
72	GR	-	-
73	W	-	-
74	SB	-	-
76	V	-	-
77	V	-	-
78	Y	-	-
80	BG	-	-
81	L	-	-
82	W	-	-
83	Y	-	-
84	L	-	-
85	P	-	-
86	BR	-	-
87	P	-	-
88	V	-	-
89	G	-	-
90	P	-	-
91	R	-	-
92	R	-	-
93	GR	-	-


95	G	-	-
96	W	-	-
97	W	-	-
98	SHIELD	-	-
100	Y	-	-

Connector No.	M17
Connector Name	ICC WARNING CHIME
Connector Type	A03FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
3	W	-	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
3	LG	-	-
4	B	-	-
5	B	-	-
6	L	-	-
7	GR	-	-
8	G	-	-
11	SB	-	-
12	P	-	-
13	L	-	-
14	P	-	-
16	BG	-	-

Connector No.	M29
Connector Name	WARNING SYSTEMS SWITCH
Connector Type	TK08FGY



Terminal No.	Color	Wire	Signal Name [Specification]
2	SB	-	-
3	Y	-	-
4	R	-	-
5	R	-	-
6	B	-	-
7	V	-	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	BG	-	BATTERY POWER SUPPLY
2	LG	-	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	-	COMMUNICATION SIGNAL (AMP->METER)
5	B	-	GROUND
6	W	-	ALTERNATOR SIGNAL
7	P	-	AIR BAG SIGNAL
10	G	-	SECURITY INDICATOR SIGNAL
15	B	-	GROUND
16	B	-	METER CONTROL SWITCH GROUND
21	R	-	IGNITION SIGNAL
24	BR	-	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	-	COMMUNICATION SIGNAL (AMP->LCD)
26	R	-	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	-	PARKING BRAKE SWITCH SIGNAL

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH02FM-NH




Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH06FW-NH




Terminal No.	Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
6	B	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP.)
20	L	ION SENSOR SIGNAL
23	V	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	COMMUNICATION SIGNAL (METER->AMP.)
27	LG	PADDLE SHIFTER DOWN SIGNAL
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M105
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

 


Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	GR	-
4	SHIELD	-
5	G	-
6	BR	-
8	P	-
10	G	-
11	Y	-
12	BR	-
13	L	-
14	L	-
15	R	-
16	R	-
17	B	-
20	B	-

Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH

 

Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	P	-
4	B	-
5	W	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH01MW-CS16-TM4

 

Terminal No.	Wire	Signal Name [Specification]
6	GR	-
7	SB	-
8	LG	-
9	SHIELD	-
10	R	-
11	G	-
15	R	-
16	V	-

Terminal No.	Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	SHIELD	-
20	R	-
21	G	-
22	GR	-
23	V	-
24	W	-
25	R	-
26	P	-
27	L	-
28	SHIELD	-
31	W	-
32	W	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	V	-

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

41	SB	- [With ICC]
42	Y	- [Without ICC]
43	V	- [With ICC]
44	W	- [Without ICC]
45	P	- [With ICC]
46	R	- [Without ICC]
47	G	- [With ICC]
48	L	- [Without ICC]
49	B	- [With ICC]
50	SHIELD	- [Without ICC]
51	GR	-
52	GR	-
53	G	-
54	L	-
55	P	-
56	LG	-
57	R	-
58	SB	-
59	Y	-
60	Y	-
61	BR	-
62	BR	-
63	W	-
64	W	-
65	G	-
66	GR	-
67	W	-
68	G	-
69	G	-
70	SB	-
71	SB	-
72	V	-
73	V	-
74	LG	-
75	BR	-
76	V	-
77	LG	-
78	R	-
79	R	-
80	Y	-
81	Y	-
82	Y	-
83	BR	-
84	W	-
85	SB	-
86	B	-
87	P	-
88	P	-
89	L	-
90	L	-
91	L	-
92	G	-
93	G	-
94	BR	-

95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH

1	3	4	5	6
7	9	10	11	12



Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

Terminal No.	Wire	Signal Name [Specification]
1	L	CAN-H
2	GR	BATTERY
3	L	CAN-H
4	L	CAN-H
5	B	GROUND
6	L	CAN-H
7	P	CAN-L
8	LG	IGNITION
9	LG	IGNITION
10	P	CAN-L
11	B	GROUND
12	P	CAN-L

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	NH10FW-GS10

6	5	4	3	2	1
20	19	18	17	16	15
14	13	12	11	10	9
8	7	6	5	4	3



Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	GR	-

4	SHIELD	-
5	G	-
6	BR	-
7	P	-
8	L	-
9	G	-
10	Y	-
11	Y	-
12	BR	-
13	L	-
14	L	-
15	R	-
16	R	-
17	B	-
18	Y	-
19	Y	-
20	Y	-

Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9



Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	P	-
3	B	-
4	B	-
5	BR	-
6	GR	-
7	SB	-
8	Y	-
9	SHIELD	-
10	R	-
11	G	-
12	R	-
13	R	-
14	V	-
15	V	-
16	V	-

Connector No.	R21
Connector Name	LANE CAMERA UNIT
Connector Type	TH08FW-NH



4	3	2	1
8	7	6	5

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	SB	WARNING SYSTEMS ON INDICATOR
3	V	WARNING SYSTEMS SWITCH
4	L	CAN-H
5	B	GROUND
6	R	LANE DEPARTURE WARNING BUZZER
7	Y	IGNITION POWER SUPPLY
8	P	CAN-L

Fail-Safe

If a malfunction occurs in the system, a chime sounds a beep, and ICC sensor integrated unit cancels the control. Then the ICC system warning lamp in the combination meter illuminates.

JR0WC2949GB

INFOID:0000000010576688

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

DTC Inspection Priority Chart

INFOID:000000010576689

If multiple DTCs are detected simultaneously, check them one by one depending on the following DTC inspection priority chart.

Priority	Detected items (DTC)
1	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	• C1A31: BCU INTERNAL MALF • C1F02: APA C/U MALF
3	• C1A01: POWER SUPPLY CIR • C1A02: POWER SUPPLY CIR 2 • C1A04: ABS/TCS/VDC CIRC • C1A05: BRAKE SW/STOP L SW • C1A06: OPERATION SW CIRC • C1A08: PRESS SEN CIRCUIT • C1A09: BOOSTER SOL/V CIRC • C1A10: RELEASE SW CIRC • C1A11: PRESSURE CONTROL • C1A12: LASER BEAM OFFCNTR • C1A13: STOP LAMP RLY FIX • C1A14: ECM CIRCUIT • C1A16: RADAR STAIN • C1A18: LASER AIMING INCOMP • C1A21: UNIT HIGH TEMP • C1A22: BCU CIRCUIT • C1A24: NP RANGE • C1A28: BCU PWR SUPPLY CIR • C1A29: BCU PWR SUPPLY CIR2 • C1A30: BCU CAN COMM CIRC • C1A32: IBA FLAG STUCK • C1A33: CAN TRANSMISSION ERROR • C1A34: COMMAND ERROR • C1A35: APA CIR • C1A36: APA CAN COMM CIR • C1A37: APA CAN CIR2 • C1A38: APA CAN CIR1 • C1A39: STRG SEN CIR • C1A40: SYSTEM SW CIRC • C1F01: APA MOTOR MALF • C1F05: APA PWR SUPPLY CIR • U0121: VDC CAN CIR2 • U0126: STRG SEN CAN CIR1 • U0129: BCU CAN CIR2 • U0401: ECM CAN CIR1 • U0402: TCM CAN CIR1 • U0415: VDC CAN CIR1 • U0418: BCU CAN CIR1 • U0428: STRG SEN CAN CIR2
4	• C1A03: VHCL SPEED SE CIRC
5	• C1A15: GEAR POSITION
6	• C1A00: CONTROL UNIT

DTC Index

INFOID:000000010576690

NOTE:

- The details of time display are as per the following.
 - CRNT: A malfunction is detected now
 - PAST: A malfunction was detected in the past
- IGN counter is displayed on FFD (Freeze Frame Data).
- 0: The malfunctions that are detected now
CAN communication system (U1000, U1010)

ICC SENSOR INTEGRATED UNIT

[FCW]

< ECU DIAGNOSIS INFORMATION >

- 1 - 39: It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever the ignition switch OFF → ON. It returns to 0 when a malfunction is detected again in the process.
- If it is over 39, it is fixed to 39 until the self-diagnosis results are erased.
- Other than CAN communication system (Other than U1000, U1010)
- 1 - 49: It increases like 0 → 1 → 2 ... 38 → 49 after returning to the normal condition whenever the ignition switch OFF → ON. It returns to 0 when a malfunction is detected again in the process.
- If it is over 49, it is fixed to 49 until the self-diagnosis results are erased.

NOTE:

IBA system automatically returns to ON, when erasing self diagnosis result.

x: Applicable

DTC		CONSULT display	ICC sys- tem warning lamp	Fail-safe function			Reference
CONSULT	On board display			Vehicle-to-ve- hicle distance control mode	Conven- tional (fixed speed) cruise con- trol mode	IBA sys- tem	
C1A00	0	CONTROL UNIT	x	x	x	x	CCS-47
C1A01	1	POWER SUPPLY CIR	x	x	x	x	CCS-49
C1A02	2	POWER SUPPLY CIR 2	x	x	x	x	CCS-49
C1A03	3	VHCL SPEED SE CIRC	x	x	x	x	CCS-51
C1A04	4	ABS/TCS/VDC CIRC	x	x	x	x	CCS-53
C1A05	5	BRAKE SW/STOP L SW	x	x	x	x	CCS-55
C1A06	6	OPERATION SW CIRC	x	x	x		CCS-60
C1A08	8	PRESS SEN CIRCUIT	x	x	x	x	CCS-63
C1A09	9	BOOSTER SOL/V CIRC	x	x	x	x	CCS-65
C1A10	10	RELEASE SW CIRC	x	x	x	x	CCS-68
C1A11	11	PRESSURE CONTROL	x	x	x	x	CCS-71
C1A12	12	LASER BEAM OFFCNTR	x	x		x	CCS-74
C1A13	13	STOP LAMP RLY FIX	x	x		x	CCS-75
C1A14	14	ECM CIRCUIT	x	x	x		CCS-82
C1A15	15	GEAR POSITION	x	x	x	x	CCS-84
C1A16	16	RADAR STAIN	x	x		x	CCS-87
C1A18	18	LASER AIMING INCOMP	x	x		x	CCS-89
C1A21	21	UNIT HIGH TEMP	x	x	x	x	CCS-91
C1A22	22	BCU CIRCUIT	x	x	x	x	CCS-93
C1A24	24	NP RANGE	x	x	x	x	CCS-97
C1A28	28	BCU PWR SUPPLY CIR	x	x	x	x	CCS-99
C1A29	29	BCU PWR SUPPLY CIR2	x	x	x	x	CCS-99
C1A30	30	BCU CAN COMM CIRC	x	x	x	x	CCS-101
C1A31	31	BCU INTERNAL MALF	x	x	x	x	CCS-102
C1A32	32	IBA FLAG STUCK	x	x	x	x	CCS-104
C1A33	33	CAN TRANSMISSION ERROR	x	x	x	x	CCS-106
C1A34	34	COMMAND ERROR	x	x	x	x	CCS-108
C1A35	35	APA CIR	x	x			DAS-94
C1A36	36	APA CAN COMM CIR	x	x			DAS-95
C1A37	133	APA CAN CIR2	x	x	x		DAS-97
C1A38	132	APA CAN CIR1	x	x	x		DAS-99
C1A39	39	STRG SEN CIR	x	x	x		CCS-110

ICC SENSOR INTEGRATED UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

DTC		CONSULT display	ICC system warning lamp	Fail-safe function			Reference
CONSULT	On board display			Vehicle-to-vehicle distance control mode	Conventional (fixed speed) cruise control mode	IBA system	
C1A40	40	SYSTEM SW CIRC	×	×	×	×	CCS-112
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	55	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—	—	—	—	—
C1F01	91	APA MOTOR Malf	×	×			DAS-106
C1F02	92	APA C/U Malf	×	×			DAS-108
C1F05	95	APA PWR SUPPLY CIR	×	×			DAS-111
U0121	127	VDC CAN CIR2	×	×	×	×	CCS-115
U0126	130	STRG SEN CAN CIR1	×	×	×		CCS-117
U0129	125	BCU CAN CIR2	×	×	×	×	CCS-119
U0401	120	ECM CAN CIR1	×	×	×	×	CCS-121
U0402	122	TCM CAN CIR1	×	×	×	×	CCS-123
U0415	126	VDC CAN CIR1	×	×	×	×	CCS-125
U0418	124	BCU CAN CIR1	×	×	×	×	CCS-127
U0428	131	STRG SEN CAN CIR2	×	×	×		CCS-129
U1000	100	CAN COMM CIRCUIT	×	×	×	×	CCS-131
U1010	110	CONTROL UNIT (CAN)	×	×	×	×	CCS-133

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

LANE CAMERA UNIT

Reference Value

INFOID:0000000010576691

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
LDW SW	Warning systems switch is ON. (Warning systems ON indicator illuminates.)	On
	Warning systems switch is OFF. (Warning systems ON indicator OFF.)	Off
LDW ON LAMP	Warning systems ON indicator illuminates.	On
	Warning systems ON indicator OFF	Off
LDP ON IND	LDP ON indicator lamp illuminates.	On
	LDP ON indicator lamp OFF	Off
LANE DPRT W/L	Lane departure warning lamp illuminates.	On
	Lane departure warning lamp OFF	Off
BUZZER OUTPUT	Lane departure warning buzzer is sounding.	On
	Lane departure warning buzzer is not sounding.	Off
LC INACCURAT	Lane camera malfunction	On
	Lane camera normal	Off
VHCL SPD SE	While driving	Approximately equivalent to speedometer reading
TURN SIGNAL	Turn signal lamp LH and RH blinking.	LH/RH
	Turn signal lamp LH blinking.	LH
	Turn signal lamp RH blinking.	RH
	Turn signal lamps OFF.	Off
LANE DETCT LH	Left side lane marker is detected.	On
	Left side lane marker is not detected.	Off
LANE DETCT RH	Right side lane marker is detected.	On
	Right side lane marker is not detected.	Off
CROSS LANE LH	The vehicle is crossing left side lane marker.	On
	The vehicle is not crossing left side lane marker.	Off
CROSS LANE RH	The vehicle is crossing right side lane marker.	On
	The vehicle is not crossing right side lane marker.	Off
WARN LANE LH	Warning for left side lane.	On
	Not warning for left side lane.	Off
WARN LANE RH	Warning for right side lane.	On
	Not warning for right side lane.	Off
VALID POS LH	Lateral position for left side lane marker is valid.	VLD
	Lateral position for left side lane marker is invalid.	INVLD
VALID POS RH	Lateral position for right side lane marker is valid.	VLD
	Lateral position for right side lane marker is invalid.	INVLD
AIMING DONE	Camera aiming is completed.	OK
	Camera aiming is not adjusted.	NG

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

Monitor Item	Condition	Value/Status
AIMING RESULT	Camera aiming is completed.	OK
	Camera aiming is not completed.	NOK
XOFFSET	Camera aiming is completed.	Approx. 180 pixel
AIM CHECK YAW	NOTE: The item is indicated, but not used.	—
AIM CHECK ROLL	NOTE: The item is indicated, but not used.	—
AIM CHECK PITCH	NOTE: The item is indicated, but not used.	—
FCTRY AIM YAW	Camera aiming is not completed.	+12.0 deg
	Camera aiming is completed.	0 ± 5.0 deg
FCTRY AIM ROL	Camera aiming is not completed.	0.0 deg
	Camera aiming is completed.	0 ± 5.0 deg
FCTRY AIM PIT	Camera aiming is not completed.	+12.0 deg
	Camera aiming is completed.	0 ± 5.0 deg

TERMINAL LAYOUT

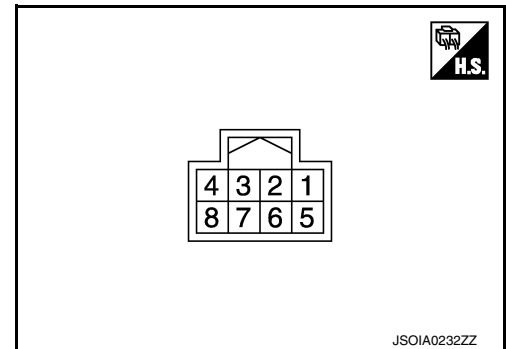

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
1 (B)	Ground	Ground	—	—	0 V
2 (SB)	Ground	Warning systems ON indicator	Output	Warning systems ON indicator	Illuminated 0 V OFF 12 V
3 (V)	Ground	Warning systems switch	Input	Warning systems switch	Pressed 0 V Released 5 V
4 (L)	Ground	CAN-H	—	—	—
5 (B)	Ground	Ground	—	—	0 V
6 (R)	Ground	Lane departure warning buzzer	Output	Lane departure warning buzzer	Sounding 0 V Not sounding 12 V
7 (Y)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
8 (P)	Ground	CAN-L	—	—	—

LANE CAMERA UNIT


[FCW]

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - FORWARD COLLISION WARNING -

INFOID:000000010576692


FORWARD COLLISION WARNING

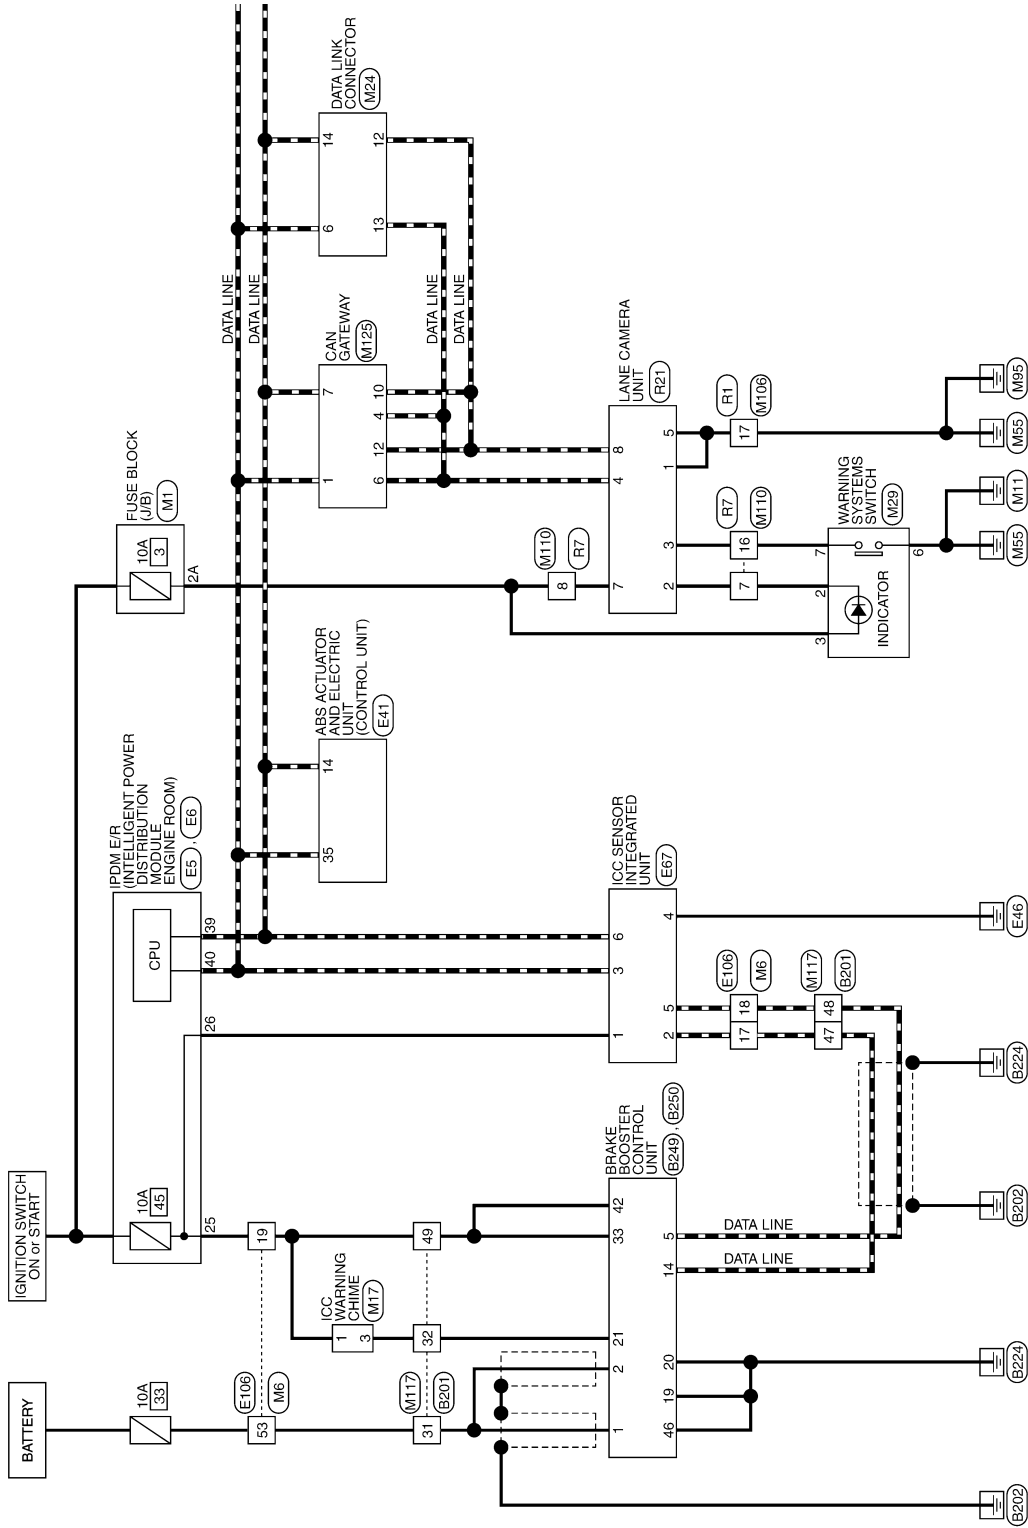

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

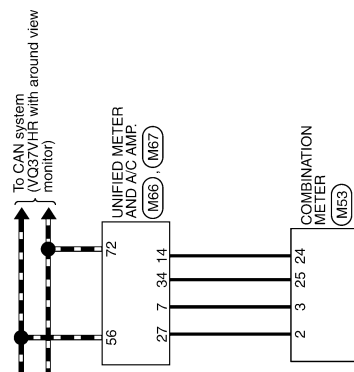

JROWC2944GB

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING


Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	BR	-
4	SB	-
6	BG	-
7	GR	-
8	W	-
10	G	-
11	SHIELD	-
20	L	-
21	P	-
22	GR	-
23	LG	-
24	W	-
25	V	-
26	G	-
27	Y	-
28	SHIELD	-
31	W	-
32	GR	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	LG	- [With ICC] - [Without ICC]
40	V	- [With ICC] - [Without ICC]
41	SB	- [With ICC] - [Without ICC]
42	V	- [With ICC] - [Without ICC]
42	W	- [With ICC] - [Without ICC]
43	B	- [With ICC] - [Without ICC]
44	BR	- [With ICC] - [Without ICC]
45	G	-


46	BG	- [With ICC] - [Without ICC]
46	SHIELD	- [With ICC] - [Without ICC]
47	B	- [With ICC] - [Without ICC]
48	P	- [With ICC] - [Without ICC]
48	R	- [With ICC] - [Without ICC]
49	G	- [With ICC] - [Without ICC]
49	W	- [With ICC] - [Without ICC]
50	SHIELD	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BG	-
66	Y	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-
77	LG	-
80	BG	-
82	P	-
83	Y	-
84	R	-
85	SB	-
86	GR	-
87	L	-
91	V	-
92	W	-
93	R	-
94	LG	-
95	GR	-
96	W	-
97	G	-
98	BG	-
99	L	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBA OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD R/LT DRIVE SIGNAL


Connector No.	B250
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BATTERY
2	W	BATTERY
5	P	ITS COMM-L
6	SB	RELEASE SW PWR
8	R	BRAKE PRESSURE SEN PWR
10	G	BOOSTER SOL PWR
12	R	BOOSTER SOL GND
14	L	ITS COMM-H
15	V	RELEASE SW (NO)
17	G	BRAKE PRESSURE SEN SIGNAL
19	B	GROUND
20	B	GROUND
21	GR	CHIME SIGNAL
22	BR	RELEASE SW (NO)


24	BG	BRAKE PRESSURE SEN GND
----	----	------------------------

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH

 

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

JROWC2945GB

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	B4A42FB-4H24-LH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	UBVR
3	R	UBVR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RL
9	B	DP FR
10	W	DS FR
12	L	VAC
14	P	CAN-L
15	SHIELD	AGND
19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	SB	BLS
31	R	VOC OFF SW
35	L	CAN-H
45	B	BUSH

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS08FB-R



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	L	ITS COM+H
3	L	CAN-H
4	B	GROUND
5	P	ITS COM+L
6	P	CAN-L


Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-

72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FM-M2

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

JROWC2946GB


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 


Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
2	BG	-	-
3	LG	-	- [Without Auto aircon seat] - [With Auto aircon seat]
4	SB	-	-
5	GR	-	-
6	W	-	-
7	G	-	-
8	W	-	-
9	P	-	-
10	BR	-	-
11	B	-	-
12	G	-	-
13	R	-	-
14	W	-	-
15	SHIELD	-	-
16	BR	-	-
17	L	-	-
18	P	-	-
19	G	-	-
20	GR	-	- [Without ICC] - [With ICC]
21	BR	-	- [Without ICC] - [With ICC]
22	R	-	- [Without ICC] - [With ICC]
23	G	-	-
24	L	-	- [With ICC] - [Without ICC]
25	W	-	- [Without ICC] - [With ICC]
26	Y	-	-
28	SHIELD	-	-
29	GR	-	-
30	BG	-	-
32	W	-	-

33	Y	-	-
34	L	-	-
37	G	-	-
38	R	-	-
39	G	-	-
41	L	-	-
42	W	-	-
43	R	-	-
44	LG	-	-
45	GR	-	-
46	W	-	-
47	L	-	-
48	P	-	-
49	BG	-	-
50	LG	-	-
51	SB	-	-
52	Y	-	-
53	BG	-	-
54	BR	-	-
55	SB	-	-
59	SB	-	-
60	SB	-	-
61	V	-	-
62	P	-	-
63	R	-	-
64	L	-	-
65	BG	-	-
69	V	-	-
70	SHIELD	-	-
71	BG	-	-
72	GR	-	-
73	W	-	-
74	SB	-	-
76	V	-	-
77	V	-	-
78	Y	-	-
80	BG	-	-
81	L	-	-
82	W	-	-
83	Y	-	-
84	L	-	-
85	P	-	-
86	BR	-	-
87	P	-	-
88	V	-	-
89	G	-	-
90	P	-	-
91	R	-	-
92	R	-	-
93	GR	-	-


95	G	-	-
96	W	-	-
97	W	-	-
98	SHIELD	-	-
100	Y	-	-

Connector No.	M17
Connector Name	ICC WARNING CHIME
Connector Type	A03FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
3	W	-	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
3	LG	-	-
4	B	-	-
5	B	-	-
6	L	-	-
7	GR	-	-
8	G	-	-
11	SB	-	-
12	P	-	-
13	L	-	-
14	P	-	-
16	BG	-	-

Connector No.	M29
Connector Name	WARNING SYSTEMS SWITCH
Connector Type	TK08FGY



Terminal No.	Color	Wire	Signal Name [Specification]
2	SB	-	-
3	Y	-	-
4	R	-	-
6	R	-	-
6	B	-	-
7	V	-	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	BG	-	BATTERY POWER SUPPLY
2	LG	-	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	-	COMMUNICATION SIGNAL (AMP->METER)
5	B	-	GROUND
6	W	-	ALTERNATOR SIGNAL
7	P	-	AIR BAG SIGNAL
10	G	-	SECURITY INDICATOR SIGNAL
15	B	-	GROUND
16	B	-	METER CONTROL SWITCH GROUND
21	R	-	IGNITION SIGNAL
24	BR	-	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	-	COMMUNICATION SIGNAL (AMP->LCD)
26	R	-	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	-	PARKING BRAKE SWITCH SIGNAL

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH02FM-NH




Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH06FW-NH



Terminal No.	Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
6	B	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP.)
20	L	ION SENSOR SIGNAL
23	V	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	COMMUNICATION SIGNAL (METER->AMP.)
27	LG	COMMUNICATION SIGNAL (METER->AMP.)
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M105
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

 

Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	GR	-
4	SHIELD	-
5	G	-
6	BR	-
8	P	-
10	G	-
11	Y	-
12	BR	-
13	L	-
14	L	-
15	R	-
16	R	-
17	B	-
20	B	-


Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH



Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	P	-
4	B	-
5	W	-

Terminal No.	Wire	Signal Name [Specification]
6	GR	-
7	SB	-
8	LG	-
9	SHIELD	-
10	R	-
11	G	-
15	R	-
16	V	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH01MW-CS16-TM4

 

Terminal No.	Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	SHIELD	-
20	R	-
21	G	-
22	GR	-
23	V	-
24	W	-
25	R	-
26	P	-
27	L	-
28	SHIELD	-
31	W	-
32	W	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	V	-

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

FORWARD COLLISION WARNING

41	SB	- [With ICC]
42	Y	- [Without ICC]
43	V	- [With ICC]
44	W	- [Without ICC]
45	B	- [Without ICC]
46	P	- [With ICC]
47	R	-
48	G	- [Without ICC]
49	L	- [With ICC]
50	BG	- [With ICC]
51	SHIELD	- [Without ICC]
52	B	- [With ICC]
53	L	- [Without ICC]
54	R	- [With ICC]
55	G	- [Without ICC]
56	W	- [With ICC]
57	SHIELD	-
58	BG	-
59	GR	-
60	L	-
61	P	-
62	LG	-
63	R	-
64	SB	-
65	Y	-
66	BR	-
67	BG	-
68	W	-
69	G	-
70	SB	-
71	V	-
72	Y	-
73	LG	-
74	R	-
75	BR	-
76	V	-
77	LG	-
78	R	-
79	Y	-
80	BG	-
81	W	-
82	SB	-
83	P	-
84	L	-
85	BR	-
86	B	-
87	P	-
88	L	-
89	LG	-
90	R	-
91	SB	-
92	Y	-
93	BG	-
94	W	-

95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH

1	3	4	5	6
7	9	10	11	12



Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

Terminal No.	Wire	Signal Name [Specification]
1	L	CAN-H
2	GR	BATTERY
3	L	CAN-H
4	L	CAN-H
5	B	GROUND
6	L	CAN-H
7	P	CAN-L
8	LG	IGNITION
9	P	CAN-L
10	P	CAN-L
11	B	GROUND
12	P	CAN-L

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	NH10FW-GS10

6	5	4	3	2	1
20	19	18	17	16	15
14	13	12	11	10	9
8	7	6	5	4	3



Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	GR	-

4	SHIELD	-
5	G	-
6	BR	-
7	P	-
8	G	-
9	Y	-
10	Y	-
11	Y	-
12	BR	-
13	L	-
14	L	-
15	R	-
16	R	-
17	B	-
18	Y	-
19	Y	-
20	Y	-

Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9



Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	P	-
3	B	-
4	B	-
5	BR	-
6	GR	-
7	SB	-
8	Y	-
9	SHIELD	-
10	R	-
11	G	-
12	R	-
13	R	-
14	V	-

Connector No.	R21
Connector Name	LANE CAMERA UNIT
Connector Type	TH08FW-NH



4	3	2	1
8	7	6	5

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	SB	WARNING SYSTEMS ON INDICATOR
3	V	WARNING SYSTEMS SWITCH
4	L	CAN-H
5	B	GROUND
6	R	LANE DEPARTURE WARNING BUZZER
7	Y	IGNITION POWER SUPPLY
8	P	CAN-L

Fail-safe

FAIL-SAFE CONTROL BY DTC

When any DTC is detected, the LDW/LDP systems do not operate.

TEMPORARY DISABLED STATUS AT HIGH TEMPERATURE

When using LDW

Revision: 2015 February

DAS-239

2015 QX70

JROWC2949GB

INFOID:0000000010576693

DAS

P

A

B

C

D

E

F

G

H

I

J

K

L

M

N

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[FCW]

- If the vehicle is parked in direct sunlight under high temperature conditions [approximately over 104°F (40°C)] and then started, the system may sound a buzzer and cancel automatically. In this case warning systems ON indicator will blink.
- When the interior temperature is reduced, warning systems ON indicator is turned ON.

When using LDP

- If the vehicle is parked in direct sunlight under high temperature conditions [approximately over 104°F (40°C)] and then started, the system may sound a buzzer and cancel automatically. In this case LDP ON indicator lamp will blink.
- When the interior temperature is reduced, LDP ON indicator lamp is turned ON.

DTC Inspection Priority Chart

INFOID:0000000010576694

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	• U0122: VDC CAN CIR1(LDP) • U0416: VDC CAN CIR2(LDP)
3	C1B00: CAMERA UNIT MALF
4	• C1B01: CAM AIMING INCOMP • C1B02: VHCL SPD DATA MALF • C1B03: ABNRML TEMP DETECT • C1B07: ABS DIAGNOSIS

DTC Index

INFOID:0000000010576695

×: Applicable

DTC		Lane departure warning lamp	Warning systems ON indicator	LDP ON indicator lamp	Fail-safe	Reference page
C1B00	CAMERA UNIT MALF	ON	—	—	×	DAS-280
C1B01	CAM AIMING INCOMP	Blink	—	—	×	DAS-281
C1B02	VHCL SPD DATA MALF	ON	—	—	×	DAS-282
C1B03	ABNRML TEMP DETECT	—	Blink (When using LDW)	Blink (When using LDP)	×	DAS-283
C1B07	ABS DIAGNOSIS	ON	—	—	×	DAS-284
U1000	CAN COMM CIRCUIT	ON	—	—	×	DAS-285
U1010	CONTROL UNIT (CAN)	ON	—	—	×	DAS-286
U0122	VDC CAN CIR1 (LDP)	ON	—	—	×	DAS-287
U0416	VDC CAN CIR2 (LDP)	ON	—	—	×	DAS-289

FORWARD COLLISION WARNING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[FCW]

SYMPTOM DIAGNOSIS

FORWARD COLLISION WARNING SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000010576696

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item/Reference page
FCW system is not activated.	Warning systems ON indicator is not turned ON ⇔ OFF when operating warning systems switch.	• Harness between lane camera unit and warning systems switch. • Harness between warning systems switch and ground. • Lane camera unit	Warning systems switch circuit DAS-242

FCW SYSTEM IS NOT ACTIVATED

< SYMPTOM DIAGNOSIS >

[FCW]

FCW SYSTEM IS NOT ACTIVATED

Description

INFOID:0000000010576697

FCW system does not operate by pressing the warning systems ON indicator.

NOTE:

Warning systems ON indicator is shared with LDW system.

Diagnosis Procedure

INFOID:0000000010576698

1.PERFORM THE SELF-DIAGNOSIS

1. Perform "All DTC Reading" with CONSULT.
2. Check if the DTC is detected in self-diagnosis results of "ICC/ADAS" or "LANE CAMERA". Refer to [DAS-228."DTC Index"](#) (ICC/ADAS) or [DAS-317."DTC Index"](#) (LANE CAMERA).

Is any DTC detected?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK WARNING SYSTEMS SWITCH CIRCUIT

Check warning systems switch circuit. Refer to [DAS-302."Component Function Check"](#).

NOTE:

Warning systems switch is shared with LDW system.

Is the inspection result normal?

- YES >> Replace the lane camera unit.
NO >> GO TO 3.

3.REPAIR OR REPLACE THE SPECIFIC ITEMS

Repair or replace malfunctioning items.

>> INSPECTION END

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[FCW]

NORMAL OPERATING CONDITION

Description

INFOID:000000010576699

FORWARD COLLISION WARNING (FCW)

CAUTION:

- FCW system is intended to warn the driver before a collision but will not avoid a collision. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- As there is a performance limit, the FCW system may not provide a warning in certain conditions.
- The FCW system will not detect the following objects.
 - Pedestrians, animals, or obstacles in the roadway.
 - On coming vehicles in the same lane
- FCW system will not detect under the following conditions.
 - When the sensor gets dirty, it is impossible to detect the distance from the vehicle ahead.
 - When driving into a strong light(i.e. sunlight)
- The sensor generally detects signals returned from the reflectors on a vehicle ahead. Therefore, the FCW system may not warn properly under the following conditions:
 - When the reflectors of the vehicle ahead are positioned high or close to each other (including a small vehicle such as motorcycles).
 - When the sensor gets dirty and it is impossible to detect the distance to the vehicle ahead.
 - When the reflectors on the vehicle ahead is missing, damaged or covered.
 - When the reflector of the vehicle ahead is covered with dirt, snow and road spray.
 - When visibility is low (such as rain, fog, snow, etc.).
 - When snow or road spray from traveling vehicles are splashed.
 - When dense exhaust or other smoke (black smoke) from vehicles reduces the sensor visibility.
 - When excessively heavy baggage is loaded in the rear seat or the luggage room of own vehicle.
 - When abruptly accelerating or decelerating.
 - On steep downhill or roads with sharp curves.
 - When there is a highly reflective object near the vehicle ahead.
 - i.e.) very close to other vehicle, signboard, etc.
 - When own vehicle are towing a trailer.
- Depending on certain road conditions (curved, beginning of a curve), vehicle conditions (steering position, vehicle position), or preceding vehicle's conditions (position in lane, etc.), the FCW system may not function properly. The FCW system may detect highly reflective objects such as reflectors, signs, white markers, and other stationary objects on the road or near the traveling lane, and provide unnecessary warning.
- The FCW system may not function in offset conditions.
- The FCW system may not function when the distance to the vehicle ahead is extremely close.
- The FCW system is designed to automatically check the sensor's functionality. If the sensor is covered with ice, a transparent or translucent plastic bag, etc., the system may not detect them. In these instances the FCW system may not be able to warn properly. Be sure to check and clean the sensor regularly.
- Excessive noise will interfere with the warning chime sound, and the chime may not be heard.
- A sudden appearance of the vehicle in front (i.e.: when a vehicle abruptly cuts in) may not be detected and the system may not warn soon enough.
- The FCW system will be canceled automatically with a chime sound and the IBA OFF indicator light will illuminate under the following conditions:
 - When the sensor window is dirty
 - When the FCW system malfunctions

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

PRECAUTION

PRECAUTIONS

Precautions for Removing Battery Terminal

INFOID:0000000010957848

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

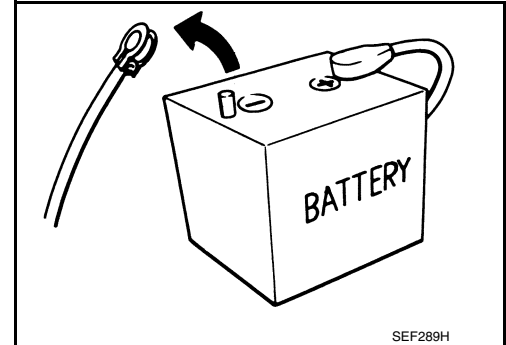

SEF289H

Precaution for FCW System Service

INFOID:0000000010576700

CAUTION:

- Never look straight into the laser beam discharger when adjusting laser beam aiming.
- Turn the warning systems switch OFF in conditions similar to driving, such as free rollers or a chassis dynamometer.
- Never use the ICC sensor integrated unit removed from vehicle. Never disassemble or remodel.
- Erase DTC when replacing parts of ICC system, then check the operation of ICC system after adjusting laser beam aiming if necessary.
- Never change FCW initial state ON $\Rightarrow$ OFF without the consent of the customer.

REMOVAL AND INSTALLATION

WARNING SYSTEMS SWITCH

Exploded View

INFOID:0000000010576701

Refer to [DAS-338, "Exploded View"](#).

NOTE:

Warning systems switch is shared with LDW system.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000010576702

OVERALL SEQUENCE

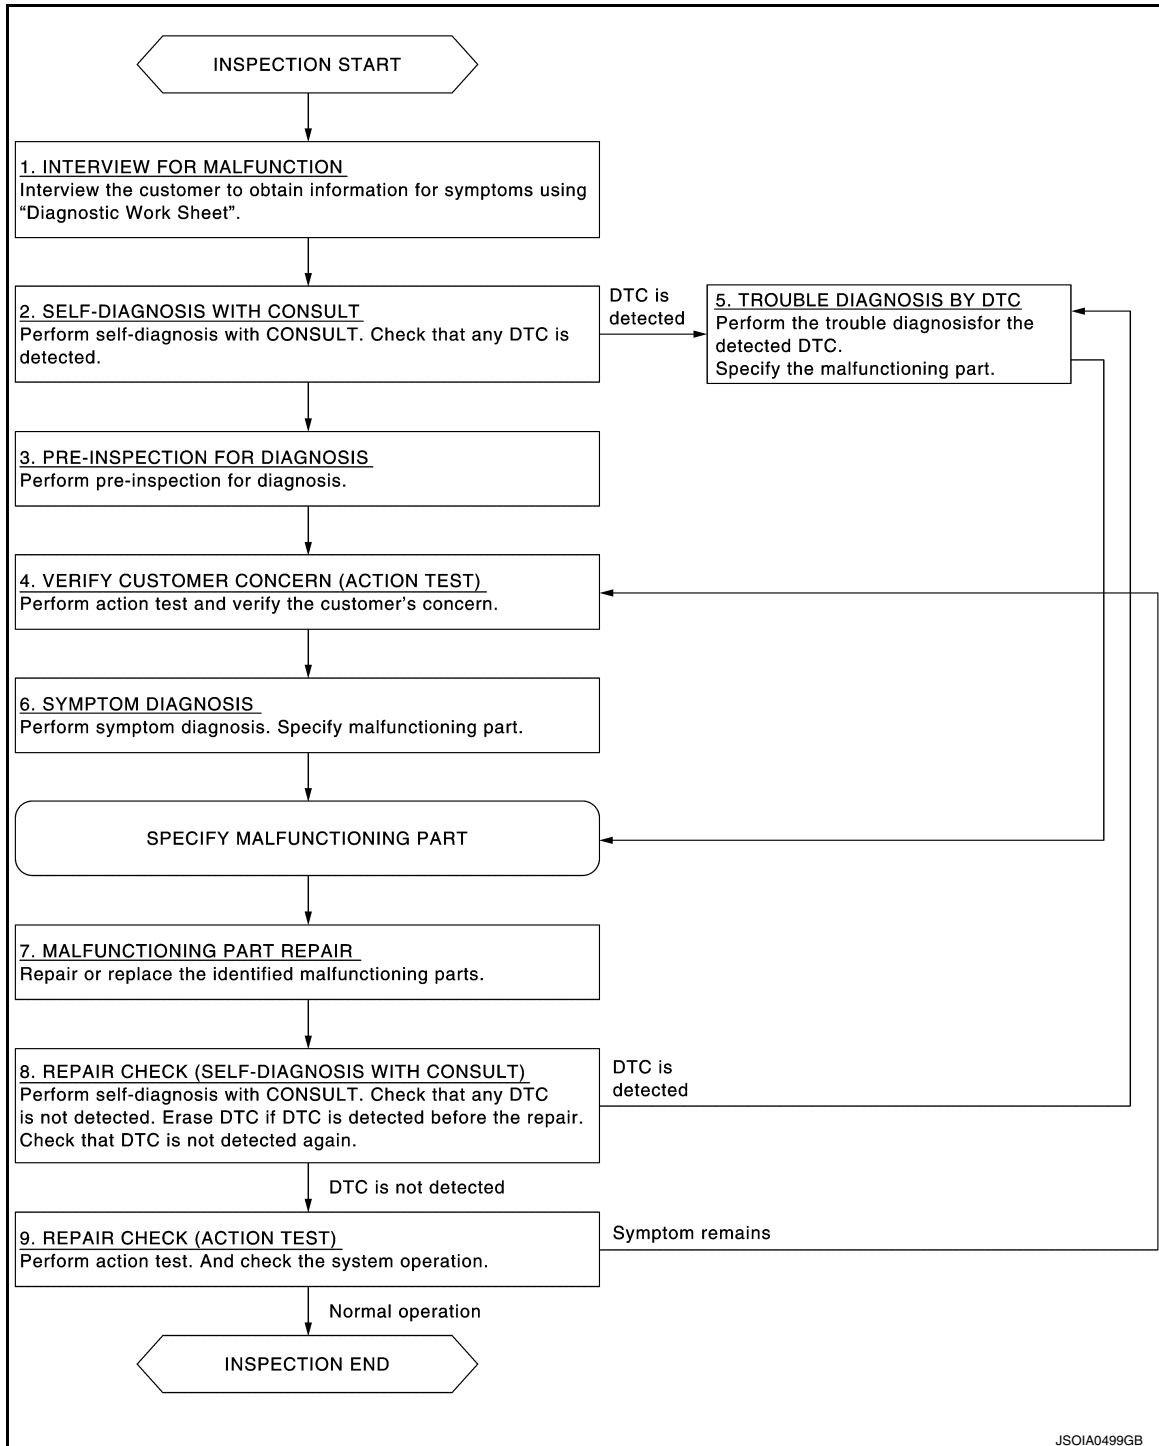

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the customer to obtain information about symptoms using "Diagnostic Work Sheet". (Refer to [DAS-247, "Diagnostic Work Sheet"](#).)

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[LDW & LDP]

>> GO TO 2.

2.SELF-DIAGNOSIS WITH CONSULT

Perform self-diagnosis with CONSULT. Check if any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 3.

3.PRE-INSPECTION FOR DIAGNOSIS

Perform pre-inspection for diagnosis. Refer to [DAS-249. "Inspection Procedure"](#).

>> GO TO 4.

4.VERIFY CUSTOMER CONCERN (ACTION TEST)

Perform action test and verify the customer's information. Refer to [DAS-250. "Description"](#).

>> GO TO 6.

5.TROUBLE DIAGNOSIS BY DTC

Perform trouble diagnosis for the detected DTC. Specify a malfunctioning part. Refer to [DAS-317. "DTC Index"](#) (Lane camera unit) and/or [BRC-120. "DTC Index"](#) [ABS actuator and electric unit (control unit)].

>> GO TO 7.

6.SYMPTOM DIAGNOSIS

Perform symptom diagnosis. Specify malfunctioning part. Refer to [DAS-331. "Symptom Table"](#).

>> GO TO 7.

7.MALFUNCTION PART REPAIR

Repair or replace the identified malfunctioning parts.

>> GO TO 8.

8.REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

Perform self-diagnosis with CONSULT. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 9.

9.REPAIR CHECK (ACTION TEST)

Perform action test. Also check the system operation.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 4.

Diagnostic Work Sheet

INFOID:0000000010576703

DESCRIPTION

In general, each customer feels differently about an incident. It is important to fully understand the symptoms or conditions for a customer complaint.

There are many operating conditions that lead to the malfunction. A good grasp of such conditions can make troubleshooting faster and more accurate.

Some conditions may cause the lane departure warning lamp to stay ON.

Utilize a work sheet sample to organize all of the information for troubleshooting.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

[LDW & LDP]

KEY POINTS

- # WORK SHEET SAMPLE

Customer name MR/MS		Model and Year		VIN
Engine #		Trans.		Mileage
Incident Date		Manuf. Date		In Service Date
Symptoms				
Indicator/Warning lamps	☐ Lane departure warning lamp	☐ Stays ON ☐ Turned ON occasionally	☐ Stays OFF ☐ Others ()	☐ Blinks
	☐ Warning systems ON indicator	☐ Stays ON	☐ Stays OFF ☐ Others ()	☐ Blinks
	☐ LDP ON indicator lamp	☐ Stays ON ☐ Turned ON occasionally	☐ Stays OFF ☐ Others ()	☐ Blinks
	☐ Other lamps ()	☐ Stays ON ☐ Turned ON occasionally	☐ Stays OFF ☐ Others ()	☐ Blinks
Functions	☐ When using LDW ☐ When using LDP			
	☐ All functions do not operate. ☐ Warning function does not operate. (☐ No sound ☐ No indicator) ☐ Yawing function does not operate. (Warning function is operated.)			
	☐ Functions when changing the course in the turn signal direction. ☐ Functions are untimely.			
	☐ Does not function when driving on lane markers. ☐ Functions when driving in a lane. ☐ Functions in a different position from the actual position.			
	☐ Others ()			
Conditions				
Frequency	☐ Continuously ☐ Intermittently			
Light conditions	☐ Not affected ☐ In the daytime ☐ At night ☐ Sunrise/sunset (Strong light) ☐ Direct light ☐ Backlight ☐ Others ()			
Driving conditions	☐ Not affected ☐ Vehicle speed MPH (km/h) ☐ Vehicle is stopped			
Weather conditions	☐ Not affected ☐ Fine ☐ Raining ☐ Snowing ☐ Clouding ☐ Others ()			
Road conditions	☐ Not affected ☐ Highway ☐ In town ☐ Uneven roads ☐ Winding roads ☐ Others ()			
Lane maker conditions	☐ Not affected ☐ Clear ☐ Unclear ☐ Others ()			
Other conditions				

PRE-INSPECTION FOR DIAGNOSIS

< BASIC INSPECTION >

[LDW & LDP]

PRE-INSPECTION FOR DIAGNOSIS

Inspection Procedure

INFOID:0000000010576704

1.CHECK CAMERA LENS AND WINDSHIELD

Are camera lens and windshield contaminated with foreign materials?

YES >> Clean camera lens and windshield.

NO >> GO TO 2.

2.CHECK LANE CAMERA UNIT INSTALLATION CONDITION

Check lane camera unit installation condition (installation position, properly tightened, a bent bracket).

Is it properly installed?

YES >> GO TO 3.

NO >> Install lane camera unit properly, and perform camera aiming. Refer to [DAS-253, "CAMERA AIMING ADJUSTMENT : Description"](#).

3.CHECK VEHICLE HEIGHT

Check vehicle height. Refer to [FSU-22, "Wheel Height"](#) (2WD) or [FSU-42, "Wheel Height"](#) (AWD).

Is vehicle height appropriate?

YES >> INSPECTION END

NO >> Repair vehicle to appropriate height.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ACTION TEST

Description

INFOID:0000000010576705

- Perform action test to verify the customer's concern.
- Perform action test and check the system operation after system diagnosis. Refer to [DAS-250, "Inspection Procedure"](#).

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-335, "Precaution for LDW/LDP System Service"](#).
 - System description for LDW: Refer to [DAS-259, "System Description"](#).
 - System description for LDP: Refer to [DAS-264, "System Description"](#).
 - Normal operating condition: Refer to [DAS-333, "Description"](#).

Inspection Procedure

INFOID:0000000010576706

WARNING:


Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-335, "Precaution for LDW/LDP System Service"](#).
 - System description for LDW: Refer to [DAS-259, "System Description"](#).
 - System description for LDP: Refer to [DAS-264, "System Description"](#).
 - Normal operating condition: Refer to [DAS-333, "Description"](#).

1. ACTION TEST FOR LDW

1. Drive the vehicle.
2. Turn warning systems switch ON (Warning systems ON indicator is ON).
NOTE:
LDP system is OFF.
3. Check the LDW operation according to the following table.

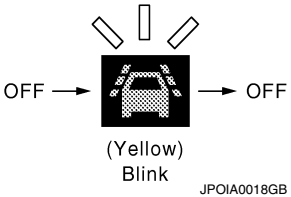Input		Output			
Vehicle speed [km/h (MPH)]	Vehicle condition/ Driver's operation	Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than 60 (40)	Close to lane marker	No action	ON	OFF	—
70 (45) or more	Close to lane marker	Warning • Buzzer sounds • Warning lamp blinks	ON		Short continuous beeps
	• Close to lane marker • Turn signal ON (Deviate side)	No action	ON	OFF	—

>> GO TO 2.

2. CHECK LDP SYSTEM SETTING

1. Start the engine.
2. Check that the LDP system setting can be enabled/disabled on the navigation screen.
3. Turn OFF the ignition switch and wait for 5 seconds or more.
4. Check that the previous setting is saved when the engine starts again.

ACTION TEST

< BASIC INSPECTION >

[LDW & LDP]

>> GO TO 3.

3. ACTION TEST FOR LDP

1. Enable the setting of the LDP system on the navigation screen.
2. Turn dynamic driver assistance switch ON (LDP ON indicator lamp is ON).

NOTE:

LDW system is OFF.

3. Check the LDP operation according to the following table.

Input		Output		
Vehicle speed [km/h (MPH)]	Vehicle condition/ Driver's operation	Action	Indication on the combination meter	Buzzer
Less than 60 (40)	Close to lane marker	No action	 (Green) ON JPOIA0021GB	—





A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ACTION TEST

< BASIC INSPECTION >

[LDW & LDP]

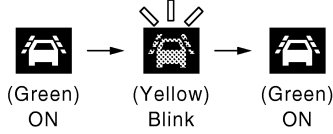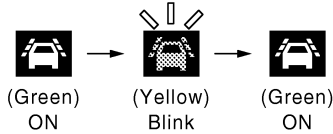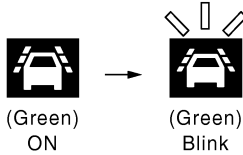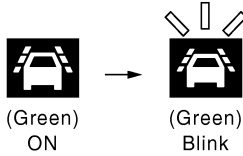Input		Output		
Vehicle speed [km/h (MPH)]	Vehicle condition/ Driver's operation	Action	Indication on the combination meter	Buzzer
70 (45) or more	Close to lane marker	Warning and yawing • Buzzer sounds • Warning lamp blinks • Brake control	 JPOIA0022GB	Short continu- ous beeps
	- Close to lane marker - Turn signal ON (Deviate side)	No action	 JPOIA0021GB	—
	Close to lane marker with soft braking	Warning • Buzzer sounds • Warning lamp blinks	 JPOIA0022GB	Short continu- ous beeps
	VDC OFF switch: OFF ⇒ ON	Cancellation • Buzzer sounds • Indicator lamp blinks NOTE: When dynamic driver assis- tance switch is ON ⇒ OFF, in- dicator lamp is turned OFF.	 JPOIA0023GB	Beep
	Snow mode switch: OFF ⇒ ON (If equipped)	Cancellation • Buzzer sounds • Indicator lamp blinks NOTE: When dynamic driver assis- tance switch is ON ⇒ OFF, in- dicator lamp is turned OFF.	 JPOIA0023GB	Beep

>> WORK END

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT) : Description

INFOID:0000000010576707

Always perform the camera aiming adjustment after replacing the lane camera unit. Refer to [DAS-253, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(LANE CAMERA UNIT\) : Special Repair Requirement"](#).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (LANE CAMERA UNIT) : Special Repair Requirement

INFOID:0000000010576708

1. CAMERA AIMING ADJUSTMENT

Perform the camera aiming adjustment with CONSULT. Refer to [DAS-253, "CAMERA AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

Perform the self-diagnosis of lane camera unit with CONSULT. Check if any DTC is detected.

Is any DTC detected?

YES >> Perform the trouble diagnosis for the detected DTC. Refer to [DAS-317, "DTC Index"](#).

NO >> GO TO 3.

3. LDW/LDP SYSTEM ACTION TEST

1. Perform the LDW/LDP system action test. Refer to [DAS-250, "Description"](#).

2. Check that the LDW/LDP system operates normally.

>> WORK END

CAMERA AIMING ADJUSTMENT

CAMERA AIMING ADJUSTMENT : Description

INFOID:0000000010576709

OUTLINE

Perform the camera aiming every time the lane camera unit is removed and installed. Refer to [DAS-253, "CAMERA AIMING ADJUSTMENT : Special Repair Requirement \(Preparation\)"](#).

CAUTION:

- Place the vehicle on level ground when the camera aiming adjustment is operated.
- Follow the CONSULT when performing the camera aiming. (Camera aiming adjustment cannot be operated without CONSULT.)

CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Preparation)

INFOID:0000000010576710

1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis of lane camera unit.

Is any DTC detected?

Except "C1B01">>Perform diagnosis on the detected DTC and repair or replace the applicable item. Refer to [DAS-317, "DTC Index"](#).

"C1B01" or no DTC>>GO TO 2.

2. PREPARATION BEFORE CAMERA AIMING ADJUSTMENT

1. Perform pre-inspection for diagnosis. Refer to [DAS-249, "Inspection Procedure"](#).

2. Adjust the tire pressure to the specified pressure value.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[LDW & LDP]

3. Maintain no-load in vehicle.
4. Check if coolant and Engine oil are filled up to correct level and fuel tank is full.
5. Shift the selector lever to "P" position and release the parking brake.
6. Clean the windshield.
7. Completely clear off the instrument panel.

>> GO TO 3.


3. PREPARATION OF AIMING ADJUSTMENT JIG

Prepare the aiming adjustment jig according to the following procedure and the figure.

1. Print out the target mark attached in this service manual. Refer to [DAS-257, "CAMERA AIMING ADJUSTMENT : Special Repair Requirement \(Target Mark Sample\)".](#)
2. Stick a printed target mark on the board with a scotch tape or a piece of double-sided tape.

NOTE:

- Use the board that peripheral area of the target is monochrome such as a white-board.
- Notice that the cross of the target is horizontal and vertical.

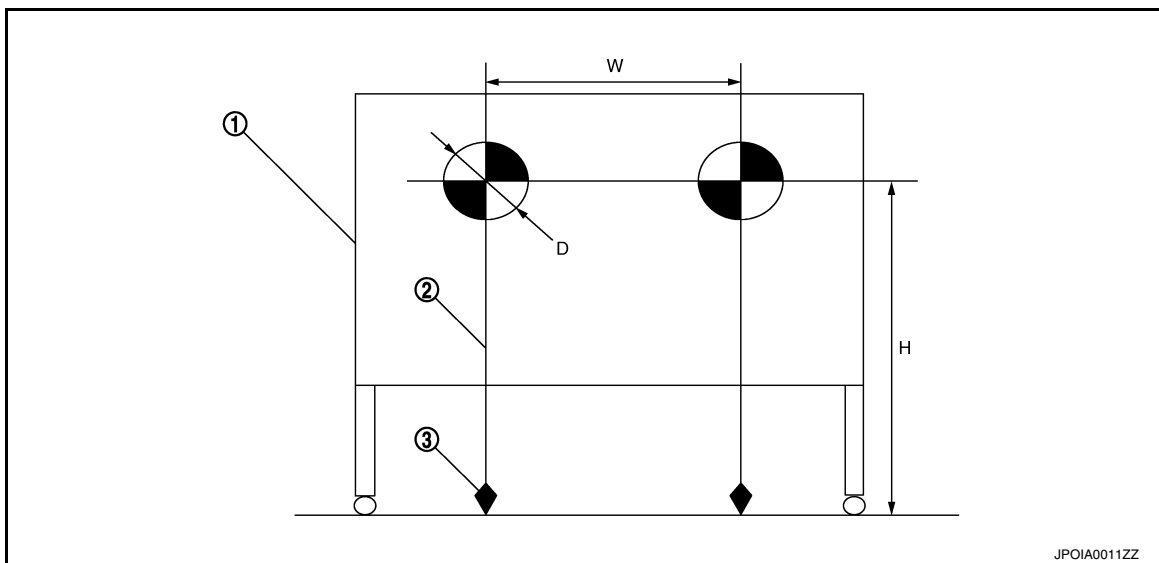

1. Board
2. String
3. Cone

 : Target mark

Diameter of a target (D) : 200 mm (7.87 in)
Height of a target center (H) : 1450 mm (57.09 in)
Width between a right target center from a left target center (W) : 600 mm (23.62 in)

>> Go to [DAS-254, "CAMERA AIMING ADJUSTMENT : Special Repair Requirement \(Target Setting\)".](#)

CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Target Setting)

INFOID:0000000010576711

CAUTION:

- Perform this operation in a horizontal position where there is a clear view for 5 m (16.4 ft) forward and 3 m (9.84 ft) wide.
- Place the target in a well-lighted location. (Poor lighting may make it hard to adjust.)
- The target may not be detected when there is a light source within 1.5 m (4.92 ft) from either side and within 1 m (3.28 ft) upward/downward from the target.
- Check the location of the sun. (Sunlight should not shine directly on the front of the vehicle.)


INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[LDW & LDP]

- The target may not be detected when there is the same pattern of black and white as the target when the pattern is within 1 m (3.28 ft) from either side and upward/downward position from the target. (It is desirable that the vehicle is positioned on the opposite side of a single-color wall.)

1. TARGET SETTING

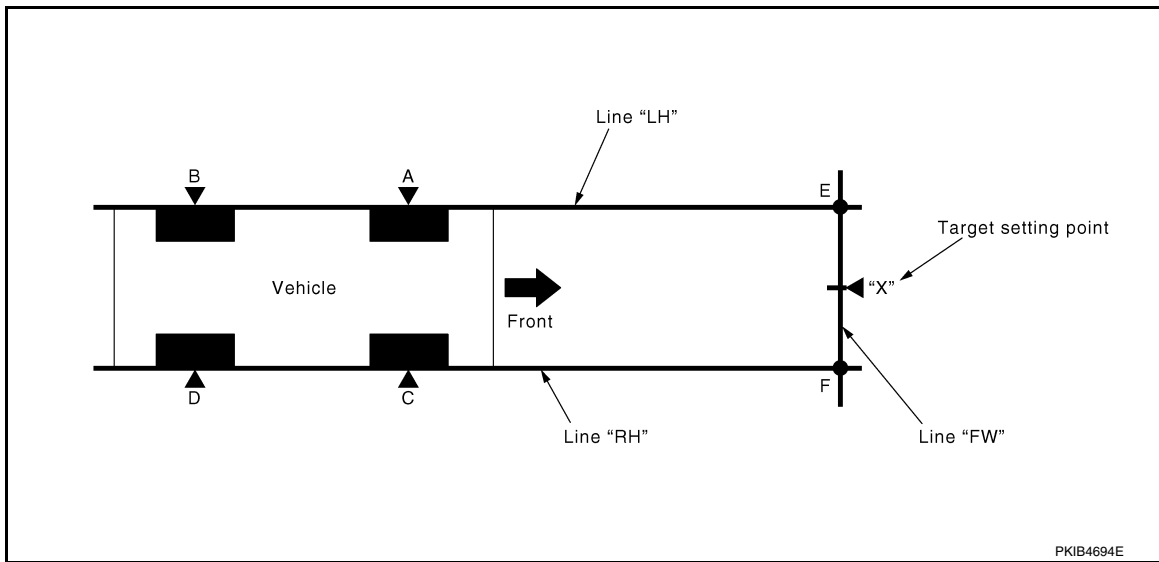

"A" – "E" ("C" – "F") : 3850 mm (151.57 in)

- Mark points "A", "B", "C" and "D" at the center of the lateral surface of each wheels.

NOTE:

Hang a string with a cone from the fender so as to pass through the center of wheel, and then mark a point at the center of the lateral surface of the wheel.

- Draw line "LH" passing through points "A" and "B" on the left side of vehicle.

NOTE:

Approximately 4 m (13.12 ft) or more from the front end of vehicle.

- Mark point "E" on the line "LH" at the positions 3850 mm (151.57 in) from point "A".

- Draw line "RH" passing through points "C" and "D" on the right side of vehicle in the same way as step 2.

NOTE:

Approximately 4 m (13.12 ft) or more from the front end of vehicle.

- Mark point "F" on the line "RH" at the positions 3850 mm (151.57 in) from point "C".


- Draw line "FW" passing through the points "E" and "F" on the front side of vehicle.

- Mark point "X" at the center of point "E" and "F" on the line "FW".


CAUTION:

Make sure that "E" to "X" is equal to "F" to "X".

- Position the center of the right target to point of "X".

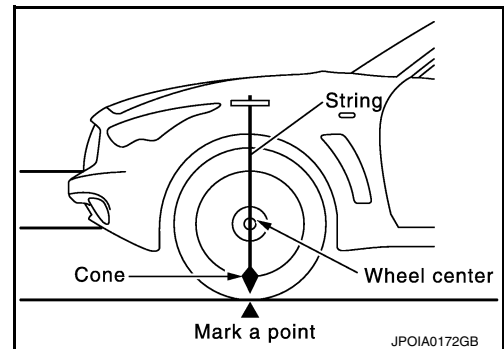

>> Go to [DAS-256. "CAMERA AIMING ADJUSTMENT : Special Repair Requirement \(Camera Aiming Adjustment\)".](#)

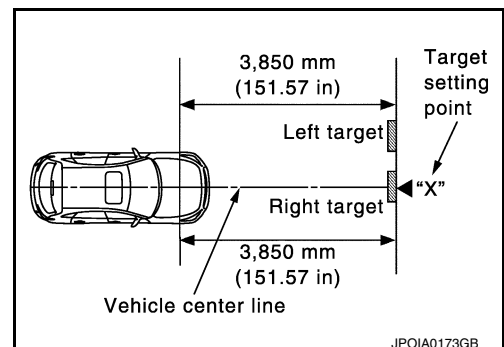

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[LDW & LDP]

CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Camera Aiming Adjustment)

INFOID:000000010576712

CAUTION:

Perform the adjustment under unloaded vehicle condition.

1. CHECK VEHICLE HEIGHT

Measure the wheelarch height. Calculate "Dh".

$$Dh [mm] = (Hfl + Hfr) \div 2 - 831$$

where,

Hfl: Front left wheelarch height [mm]

Hfr: Front right wheelarch height [mm]

NOTE:

"Dh" may be calculated as a minus value.

>> GO TO 2.

2. CAMERA AIMING ADJUSTMENT

CONSULT WORK SUPPORT

CAUTION:

Operate **CONSULT** outside the vehicle, and close all the doors. (To retain vehicle attitude appropriately)

1. Select "Work Support" on "LANE CAMERA" with CONSULT.
2. Select "AUTO AIM".
3. Confirm the following items;
 - The target should be accurately placed.
 - The vehicle should be stopped.
4. Select "Start" to perform camera aiming.

CAUTION:


Never select "Start" when the target is not accurately placed.

5. Input "Dh", and then select "Start".

CAUTION:

Never change "Ht" and "Dt".

6. Confirm the displayed item.
 - "Normally Completed": Select "Completion".
 - "SUSPENSION" or "ABNORMALLY COMPLETED": Perform the following services.

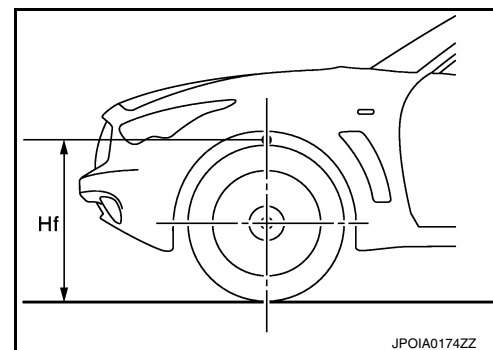

JPOIA0174ZZ

Displayed item		Possible cause	Service procedure
SUSPENSION	00H Routine not activated	- A target is not-yet-placed. (The lane camera unit cannot detect a target.) - Lane camera unit malfunction.	Position the target appropriately again. Perform the aiming again. Refer to DAS-254 , " CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Target Setting) ".
	10H Writing error	- Temporary malfunction in internal processing of the lane camera unit. - Lane camera unit malfunction.	
ABNORMALLY COMPLETED	—	- The position of the target is not correct. - The position of the lane camera unit is not correct. - Inappropriate work environment. - Inappropriate vehicle condition.	Position the target appropriately again. Perform the aiming again. Refer to DAS-253 , " CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Preparation) ".

NOTE:

Replace camera unit if "SUSPENSION" is repeatedly indicated during the above two services are performed.

7. Confirm that "Normally Completed" is displayed and then select "End" to close the aiming adjustment procedure.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[LDW & LDP]

>> GO TO 3.

3.PERFORM SELF-DIAGNOSIS

Perform self-diagnosis of lane camera unit with CONSULT.

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the applicable item. Refer to [DAS-317, "DTC Index"](#).

NO >> GO TO 4.

4.ACTION TEST

Test the LDW/LDP system operation by action test. Refer to [DAS-250, "Description"](#).

>> WORK END

CAMERA AIMING ADJUSTMENT : Special Repair Requirement (Target Mark Sample)

INFOID:0000000010576713

NOTE:

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[LDW & LDP]

Print this illustration so that the diameter of the circle is 200 mm (7.87 in).

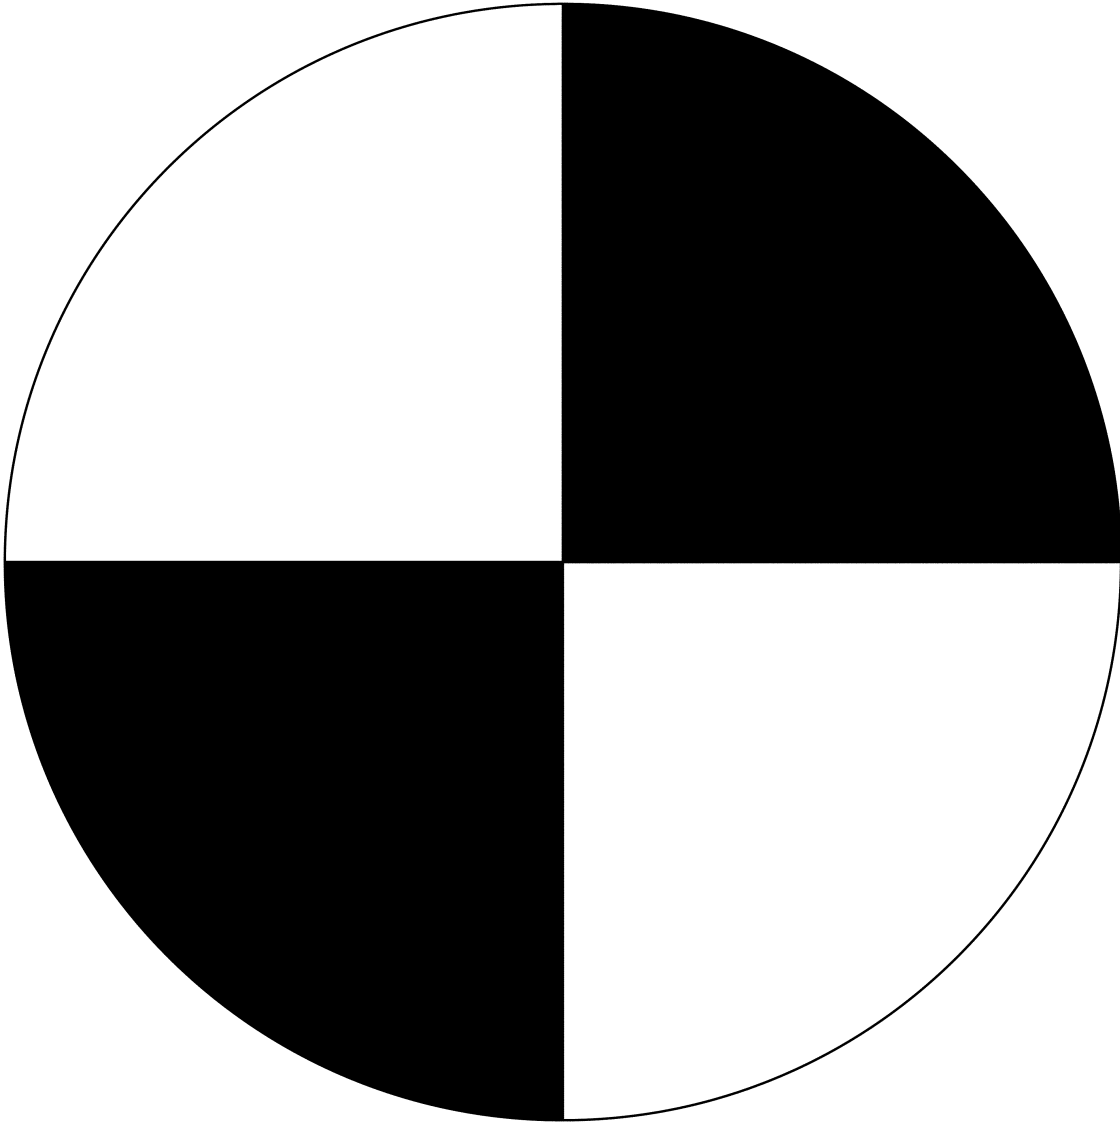

PGIA0105J

LANE DEPARTURE WARNING (LDW) SYSTEM


< SYSTEM DESCRIPTION >

[LDW & LDP]

SYSTEM DESCRIPTION

LANE DEPARTURE WARNING (LDW) SYSTEM

System Diagram

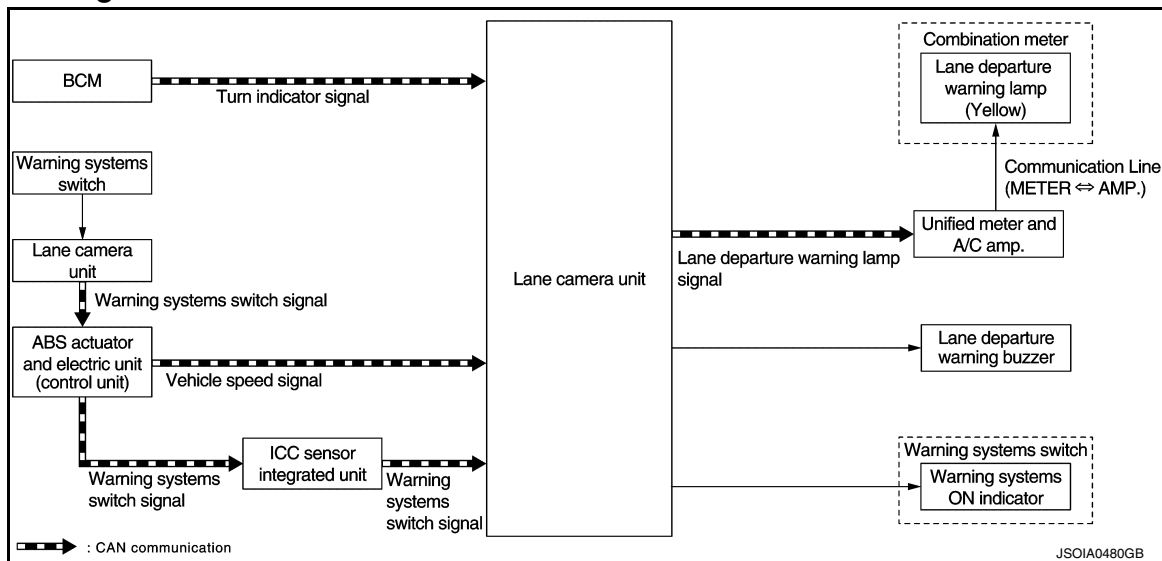


System Description

INFOID:0000000010576715

OUTLINE

- Lane Departure Warning (LDW) system provides a lane departure warning function when the vehicle is driven at speeds of approximately 70 km/h (45 MPH) or more.
- When the vehicle approaches either the left or the right side of the traveling lane, a warning will sound and the lane departure warning lamp (yellow) on the combination meter will blink to alert the driver.
- The warning function will stop when the vehicle returns inside of the lane markers.

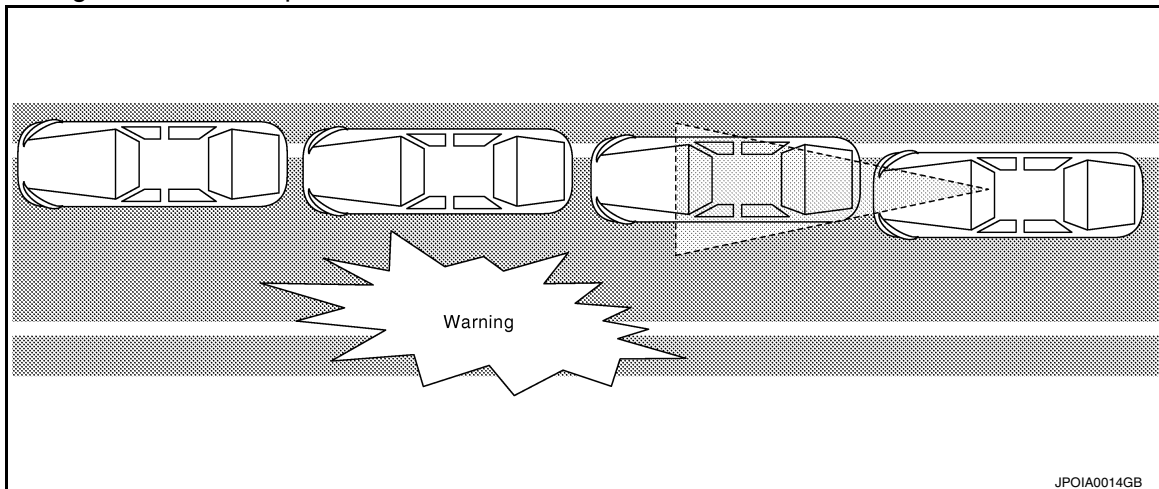


BASIC OPERATIONS

Switches And Indicator/Warning Lamps

LANE DEPARTURE WARNING (LDW) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

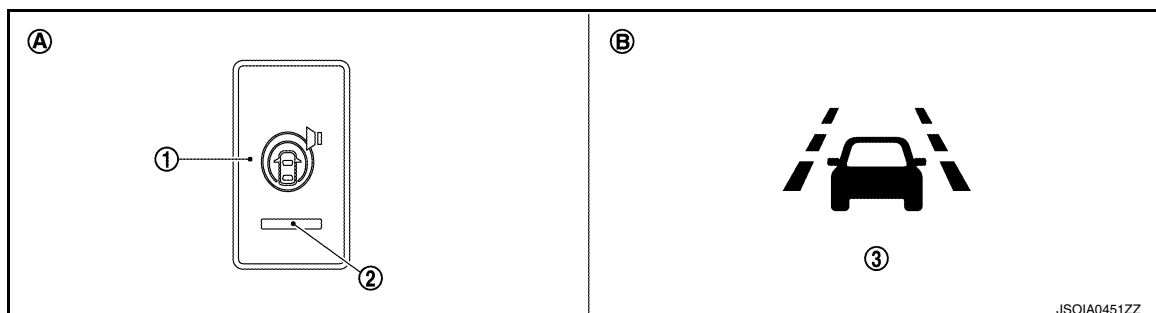

1. Warning systems switch
2. Warning systems ON indicator
3. Lane departure warning lamp (Yellow)

A. On the instrument driver lower panel B. On the combination meter

Bulb Check Action and Fail-safe Indication

Vehicle condition/ Driver's operation	Warning systems ON indicator	Indication on the combination meter
Ignition switch: OFF ⇒ ON	2 sec. ON	OFF →  →  → OFF (Yellow) ON (Green) ON JPOIA0017GB
When DTC is detected (Except "C1B01" and "C1B03")	ON*	OFF →  (Yellow) ON JPOIA0019GB
Camera aiming is not completed ("C1B01" is detected)	ON*	OFF →  (Yellow) Blink JPOIA0020GB
Temporary disabled status at high temperature ("C1B03" is detected)	Blink*	OFF

NOTE:

*: The FCW system operates.

LDW INITIAL STATE CHANGE

CAUTION:

Never change LDW initial state "ON" ⇒ "OFF" without the consent of the customer.

LDW initial state can be changed.

- LDW initial ON* - LDW function is automatically turned ON, when the ignition switch OFF ⇒ ON.
- LDW initial OFF - LDW function is still OFF when the ignition switch OFF ⇒ ON.

*: Factory setting

How to change LDW initial state

1. Turn ignition switch ON.

LANE DEPARTURE WARNING (LDW) SYSTEM

[LDW & LDP]

< SYSTEM DESCRIPTION >

2. Switch LDW and LDP functions to OFF.
3. Push and hold warning systems switch for more than 4 seconds.
4. Buzzer sounds and blinking of the lane departure warning lamp informs that the LDW initial state change is completed.

LDW SYSTEM CONTROL DESCRIPTION

- LDW system is controlled by lane camera unit.
- Lane camera unit monitors lane markers of the traveling lane.
- Combination meter turns the lane departure warning lamp ON/OFF according to the signal from the lane camera unit via CAN communication (through unified meter and A/C amp.).
- When the lane camera unit judges vehicle deviation from the traveling lane, it controls following actions to alert the driver.
 - Requests the lane departure warning lamp activation to combination meter.
 - Controls the lane departure warning buzzer.

LDW OPERATING CONDITION

- Warning systems ON indicator: ON


NOTE:

LDP ON indicator lamp is OFF.

- Vehicle speed: approximately 70 km/h (45 MPH) or more

NOTE:

For details of LDW system operating conditions, refer to normal operating condition [DAS-333, "Description"](#).

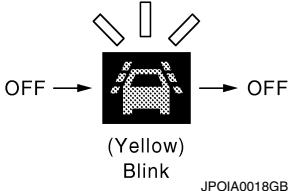Input		Output			
Vehicle speed (Approx.) [km/h (MPH)]	Vehicle condition/ Driver's operation	Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than 60 (40)	Close to lane marker	No action	ON	OFF	—
70 (45) or more	Close to lane marker	Warning • Buzzer sounds • Warning lamp blinks	ON		Short continuous beeps
	• Close to lane marker • Turn signal ON (Deviate side)	No action	ON	OFF	—

SIGNAL INPUT/OUTPUT BY CAN COMMUNICATION

Lane camera unit receives signals via CAN communication. It also detects vehicle conditions that are necessary for LDW control.

Reception Unit	Signal Name	Transmission Unit	Description
Lane camera unit	Vehicle speed signal	ABS actuator and electric unit (control unit)	Detects the vehicle speed
	Turn indicator signal	BCM	Detects operation of turn signals
	Warning systems switch signal	ICC sensor integrated unit	Detects the LDW ON status
Combination meter (through unified meter and A/C amp.)	Lane departure warning lamp signal	Lane camera unit	Turns the lane departure warning lamp ON/OFF according to the request
ICC sensor integrated unit (through ABS actuator and electric unit (control unit))	Warning systems switch signal	Lane camera unit	Detects the warning systems switch status


LANE DEPARTURE WARNING (LDW) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

Component Parts Location

INFOID:0000000010576716

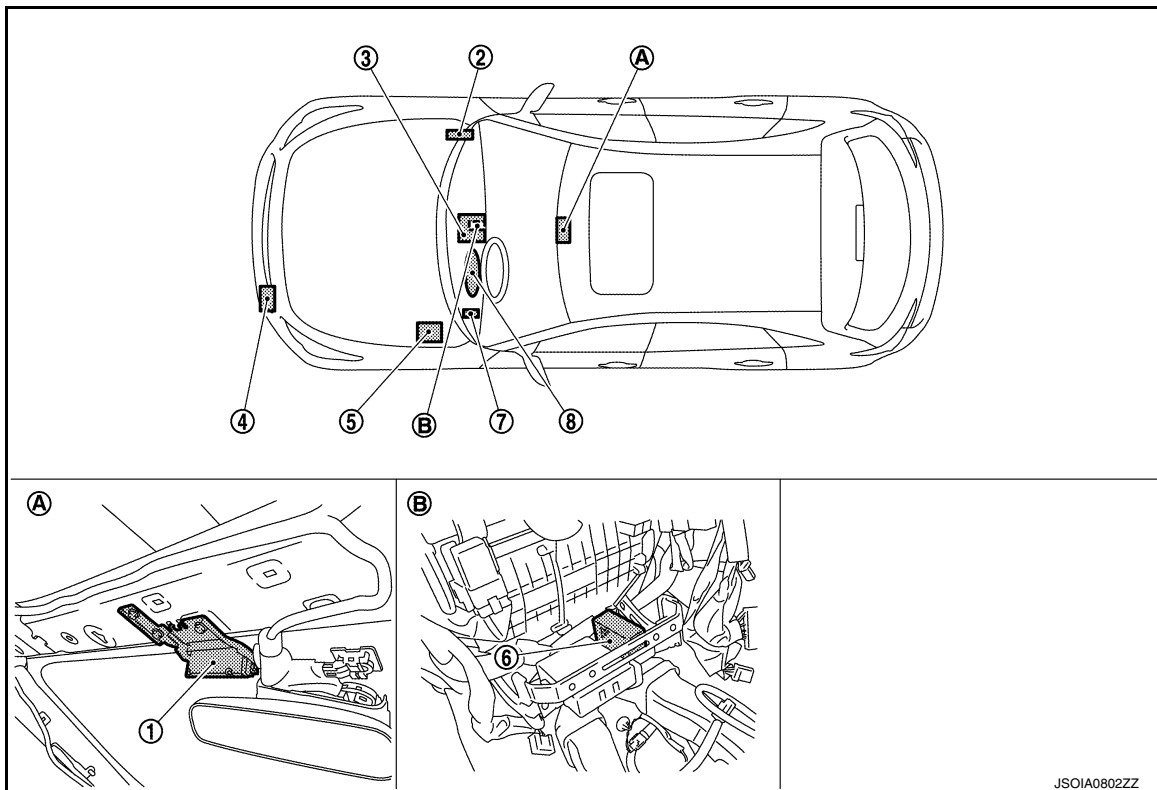

- | | | |
|--|---|---|
| 1. Lane camera unit | 2. BCM
Refer to BCS-10, "Component Parts Location" . | 3. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . |
| 4. ICC sensor integrated unit
Refer to CCS-21, "Component Parts Location" . | 5. ABS actuator and electric unit (control unit)
Refer to BRC-13, "Component Parts Location" . | 6. Lane departure warning buzzer |
| 7. Warning systems switch | 8. Lane departure warning lamp (Yellow)
(On the combination meter) | |
| A. Front of the map lamp | B. Behind the console finisher assembly | |

Component Description

INFOID:0000000010576717

Component	Description
Lane camera unit	• Detects the lane marker by the built-in camera. • Judges the lane departure depending on the lane detection result and each signals. • Controls the lane departure warning buzzer, lane departure warning lamp and warning systems ON indicator. • Transmits warning systems switch signal to ABS actuator and electric unit (control unit) via CAN communication.
ABS actuator and electric unit (control unit)	• Transmits vehicle speed signal to lane camera unit via CAN communication. • Transmits warning systems switch signal to ICC sensor integrated unit via CAN communication.
Warning systems switch	Inputs the switch signal to lane camera unit.
Warning systems ON indicator (On the warning systems switch)	Indicates LDW system status.
Lane departure warning buzzer	Gives a warning according to the direction from lane camera unit.

LANE DEPARTURE WARNING (LDW) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

Component	Description
Combination meter	Turns the lane departure warning lamp and LDP ON indicator lamp ON/OFF according to the signals from the lane camera unit via CAN communication (through unified meter and A/C amp.).
Lane departure warning lamp (Yellow)	• Blinks when LDW is functioning to alert the driver. • Stays ON when LDW system is malfunctioning.
BCM	Transmits turn indicator signal to lane camera unit via CAN communication.
ICC sensor integrated unit	Transmits a warning systems switch signal to the lane camera unit when receiving an warning systems switch signal from the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

LANE DEPARTURE PREVENTION (LDP) SYSTEM


< SYSTEM DESCRIPTION >

[LDW & LDP]

LANE DEPARTURE PREVENTION (LDP) SYSTEM

System Diagram

INFOID:0000000010576718

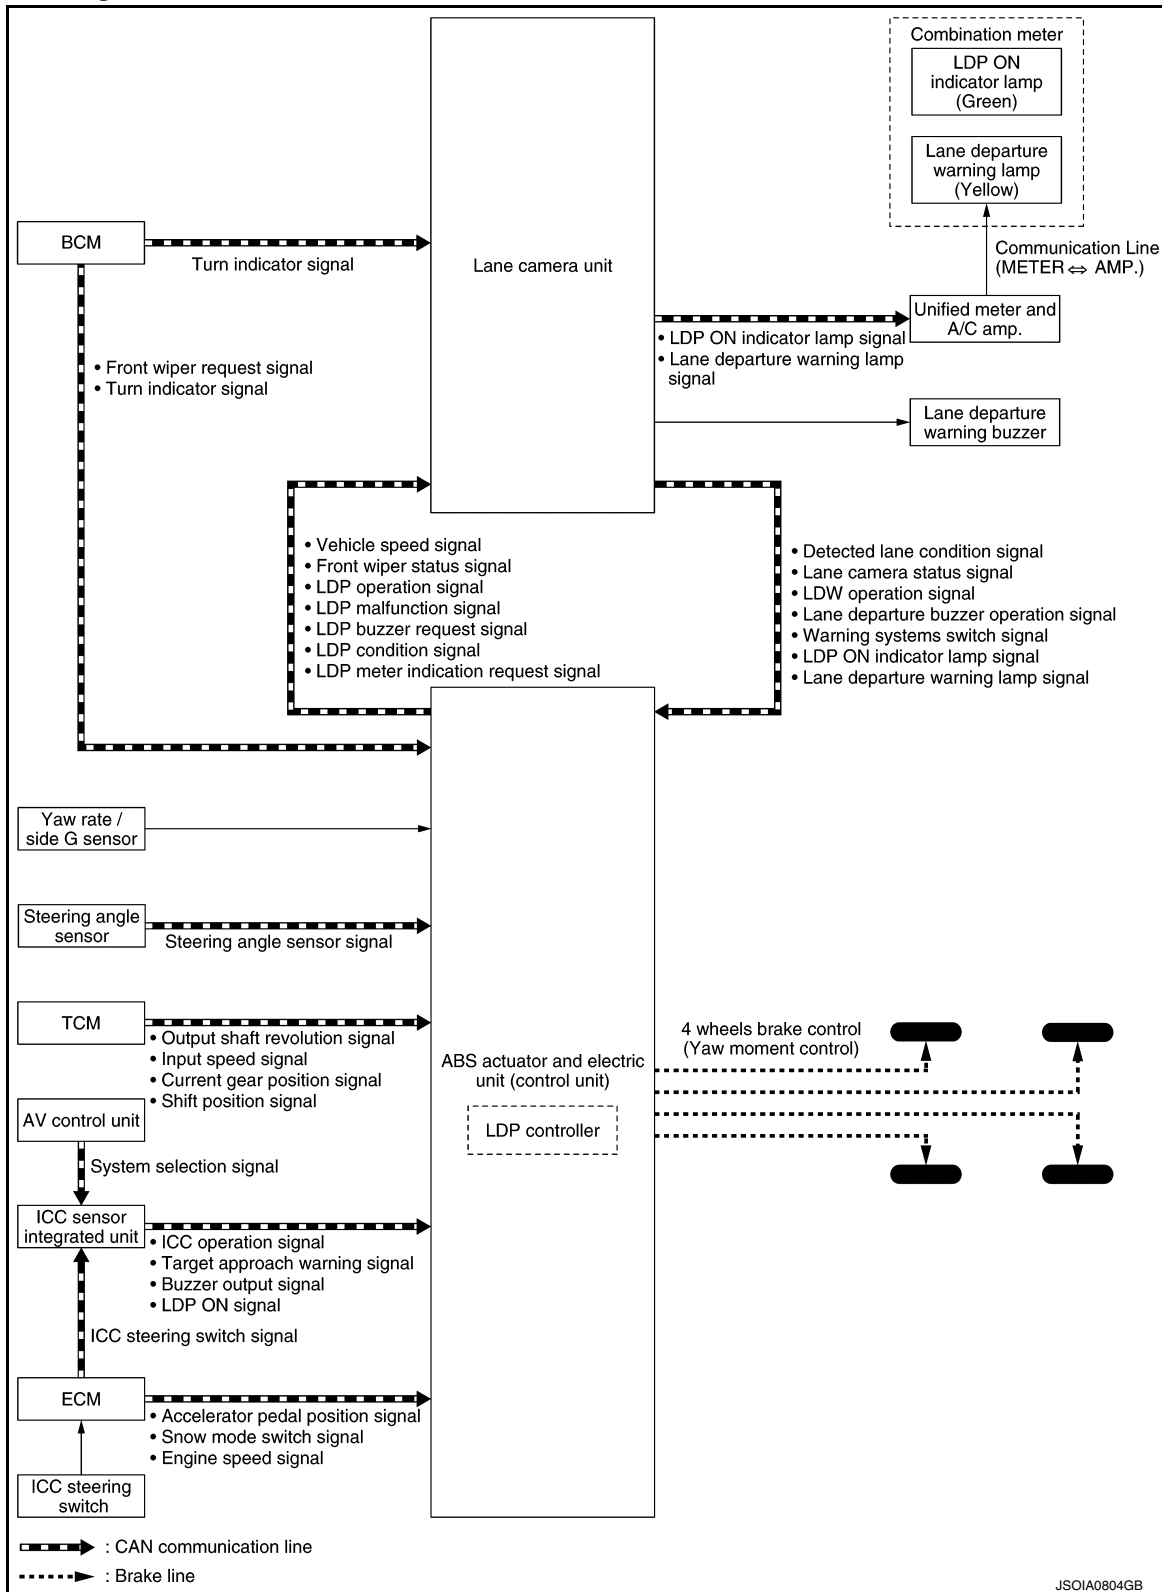

System Description

INFOID:0000000010576719

OUTLINE

LANE DEPARTURE PREVENTION (LDP) SYSTEM


< SYSTEM DESCRIPTION >

[LDW & LDP]

- Lane Departure Prevention (LDP) system provides a lane departure warning and brake control assistance when the vehicle is driven at speeds of approximately 70 km/h (45 MPH) or more.
- When the vehicle approaches either the left or the right side of the traveling lane, a warning sounds and the lane departure warning lamp (yellow) on the combination meter blinks to alert the driver.
- Then, the LDP system automatically applies the brakes for a short period of time to help assist the driver to return the vehicle to the center of the traveling lane.
- The warning and assist functions stop when the vehicle returns to a position inside of the lane marker.


NOTE:

- LDP system settings can be changed by using the vehicle settings function in the navigation system.
- When the ignition switch is in ACC position, LDP system settings cannot be changed.

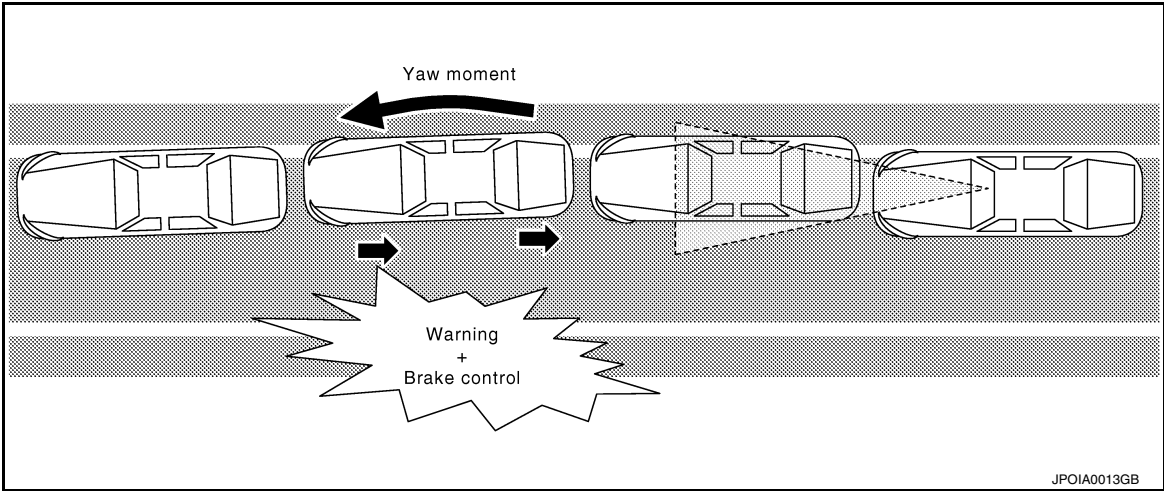

BASIC OPERATIONS

Switches and Indicator/Warning Lamps

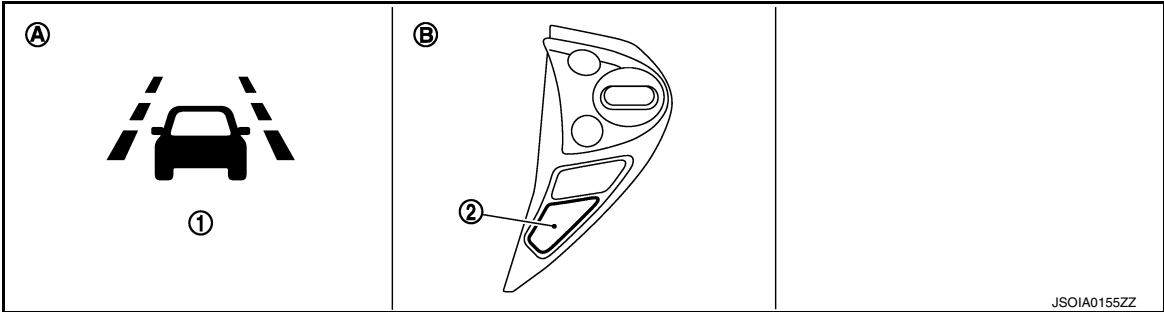

1. • LDP ON indicator lamp (Green)
• Lane departure warning lamp (Yellow)
2. Dynamic driver assistance switch

- A. On the combination meter B. On the ICC steering switch

Bulb Check Action and Fail-safe Indication




DAS

P

LANE DEPARTURE PREVENTION (LDP) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

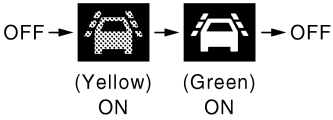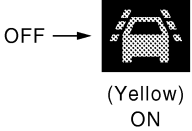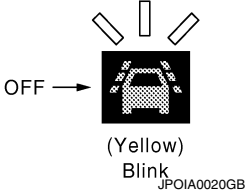Vehicle condition/Driver's operation	Indication on the combination meter
Ignition switch: OFF ⇒ ON	 (Yellow) ON (Green) ON JPOIA0017GB
When DTC is detected (Except "C1B01" or "C1B03")	 (Yellow) ON JPOIA0019GB
Camera aiming is not completed ("C1B01" is detected)	 (Yellow) Blink JPOIA0020GB
Temporary disabled status at high temperature ("C1B03" is detected)	
When the dynamic driver assistance switch is turned ON with settings of DCA system and LDP system OFF	 (Green) Blink JPOIA0036GB

LDP SYSTEM CONTROL DESCRIPTION

- LDP system is controlled by lane camera unit and LDP controller [ABS actuator and electric unit (control unit)].

NOTE:

LDP controller is integrated in the ABS actuator and electric unit (control unit).

- Lane camera unit monitors lane markers of the traveling lane. It transmits the detected lane condition signal to ABS actuator and electric unit (control unit) via CAN communication.
- ABS actuator and electric unit (control unit) detects vehicle conditions depending on each signal.
- Combination meter turns the lane departure warning lamp and LDP ON indicator lamp ON/OFF according to the signals from the lane camera unit via CAN communication (through unified meter and A/C amp.).
- When ABS actuator and electric unit (control unit) judges vehicle deviation from the traveling lane, it controls following actions.
 - Requests warning to the lane camera unit via CAN communication to alert the driver. And then lane camera unit controls the lane departure warning buzzer and it requests the lane departure warning lamp activation to combination meter.
 - Calculates the necessary yaw moment. And then it controls the brake pressure of each wheel individually to generate the intended movement.
- ICC sensor integrated unit receives signals from the AV control unit and the ECM and transmits an LDP ON signal to the ABS actuator and electric unit (control unit).

LDP OPERATING CONDITION

- LDP ON indicator lamp: ON

NOTE:

- When the LDP system setting on the navigation screen is ON.
- Warning systems ON indicator is OFF.
- Vehicle speed: approximately 70 km/h (45 MPH) or more

LANE DEPARTURE PREVENTION (LDP) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

NOTE:

For details of LDP system operating conditions, refer to normal operating condition [DAS-333, "Description"](#).

Input		Output		
Vehicle speed (Approx.) [km/h (MPH)]	Vehicle condition/ Driver's operation	Action	Indication on the combination meter	Buzzer
Less than 60 (40)	Close to lane marker	No action	 (Green) ON JPOIA0021GB	—
	Close to lane marker	Warning and yawing • Buzzer sounds • Warning lamp blinks • Brake control	 →  →  (Green) ON (Yellow) Blink (Green) ON JPOIA0022GB	Short continuous beeps
70 (45) or more	• Close to lane marker • Turn signal ON (Deviate side)	No action	 (Green) ON JPOIA0021GB	—
	Close to lane with soft braking	Warning • Buzzer sounds • Warning lamp blinks	 →  →  (Green) ON (Yellow) Blink (Green) ON JPOIA0022GB	Short continuous beeps
	VDC OFF switch: OFF ⇒ ON	Cancellation • Buzzer sounds • Indicator lamp blinks NOTE: When dynamic driver assistance switch is ON ⇒ OFF, indicator lamp is turned OFF.	 →  (Green) ON (Green) Blink JPOIA0023GB	Beep
	SNOW MODE switch: OFF ⇒ ON (If equipped)	Cancellation • Buzzer sounds • Indicator lamp blinks NOTE: When dynamic driver assistance switch is ON ⇒ OFF, indicator lamp is turned OFF.	 →  (Green) ON (Green) Blink JPOIA0023GB	Beep

SIGNAL INPUT/OUTPUT BY CAN COMMUNICATION

The lane camera unit and ABS actuator and electric unit (control unit) transmit/receive each signals via CAN communication. They also detect the vehicle conditions necessary for LDP control.

LANE DEPARTURE PREVENTION (LDP) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

Reception Unit	Signal Name	Transmission Unit	Description (Reception unit uses...)
Lane camera unit	LDP operation signal	ABS actuator and electric unit (control unit)	Detects the LDP operating condition
	LDP condition signal		Detects the LDP conditions
	LDP buzzer request signal		Controls the lane departure warning buzzer according to the request
	LDP meter indication request signal		Controls the LDP ON indicator lamp and lane departure warning lamp according to the request
	Vehicle speed signal		Detects the vehicle speed
	Front wiper status signal		Detects operation of the front wiper
	Turn indicator signal	BCM	Detects operation of turn signals
ABS actuator and electric unit (control unit)	Detected lane condition signal	Lane camera unit	Detects the lane marker condition
	Lane camera status signal		Detects the lane camera status
	LDW operation signal		Detects the LDW operation
	Lane departure buzzer operation signal		Detects the lane departure warning buzzer operation
	Warning systems switch signal		Detects warning systems switch status
	LDP ON indicator lamp signal		Detects the LDP ON indicator lamp condition
	Lane departure warning lamp signal		Detects the lane departure warning lamp condition
	Snow mode switch signal	ECM	Detects the snow mode status
	Accelerator pedal position signal		Detects vehicle conditions to calculate the acceleration/deceleration of the vehicle
	Engine speed signal		
	Shift position signal	TCM	Detects the transmission conditions
	Output shaft revolution signal		
	Input speed signal		
	Current gear position signal		
	Steering angle sensor signal	Steering angle sensor	Detects the steering angle
	ICC operation signal	ICC sensor integrated unit	Detects ICC system conditions
	Target approach warning signal		
	Buzzer output signal		Detects the LDP ON status
	LDP ON signal		
	Turn indicator signal	BCM	Detects operation of turn signals
	Front wiper request signal		Detects operation of the front wiper
Combination meter (through unified meter and A/C amp.)	LDP ON indicator lamp signal	Lane camera unit	Turns the LDP ON indicator lamp ON/OFF according to the request
	Lane departure warning lamp signal		Turns the lane departure warning lamp ON/OFF according to the request
ICC sensor integrated unit	ICC steering switch signal (Dynamic driver assistance switch signal)	ECM	Detects the dynamic driver assistance switch status
	System selection signal	AV control unit	Detects the LDP system setting status


LANE DEPARTURE PREVENTION (LDP) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

Component Parts Location

INFOID:0000000010576720

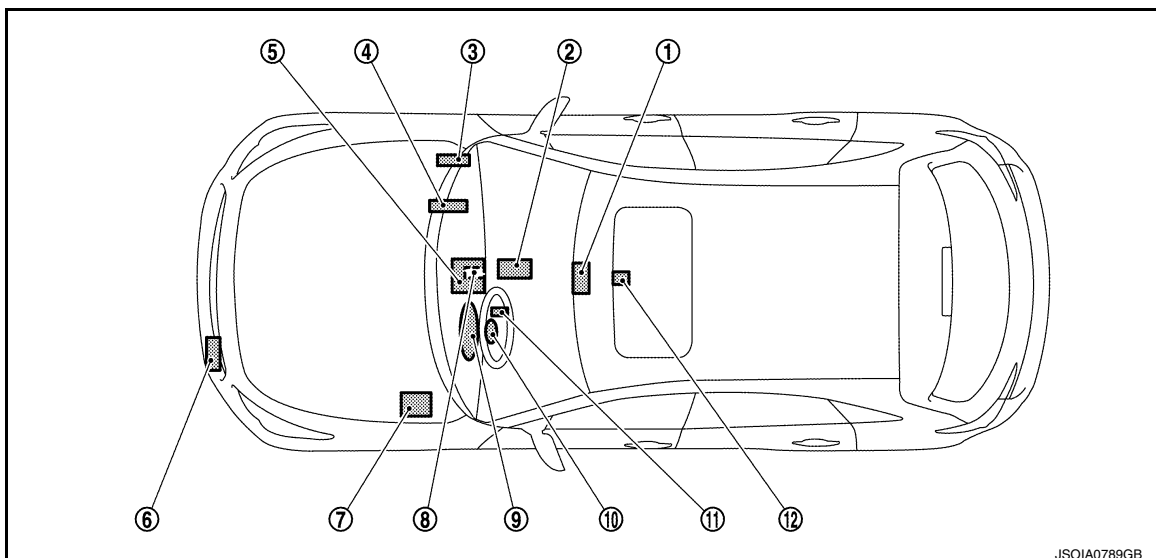

- | | | |
|---|--|--|
| 1. Lane camera unit
Refer to DAS-262, "Component Parts Location" . | 2. TCM
Refer to TM-13, "Component Parts Location" . | 3. BCM
Refer to BCS-10, "Component Parts Location" . |
| 4. ECM
Refer to EC-51, "Component Parts Location" . | 5. AV control unit
Refer to AV-153, "Component Parts Location" . | 6. ICC sensor integrated unit
Refer to CCS-21, "Component Parts Location" . |
| 7. ABS actuator and electric unit (control unit)
Refer to BRC-13, "Component Parts Location" . | 8. Lane departure warning buzzer
Refer to DAS-262, "Component Parts Location" . | 9. • LDP ON indicator lamp (Green)
• Lane departure warning lamp (Yellow) |
| 10. Steering angle sensor
Refer to BRC-13, "Component Parts Location" . | 11. ICC steering switch
(Dynamic driver assistance switch) | 12. Yaw rate/side G sensor
Refer to BRC-13, "Component Parts Location" . |

Component Description

INFOID:0000000010576721

Component	Description
Lane camera unit	• Detects the lane marker by the built-in camera. • Judges the lane departure depending on the lane detection result and each signal. • Transmits the detected lane conditions to ABS actuator and electric unit (control unit) via CAN communication. • Controls the lane departure warning buzzer, lane departure warning lamp, warning systems ON indicator and LDP ON indicator lamp.
ABS actuator and electric unit (control unit)	• Transmits vehicle speed signal to lane camera unit via CAN communication. • Judges necessary yaw moment depending on each signal. • Controls the brake pressure of each wheel individually to generate the intended movement.
Lane departure warning buzzer	Gives a warning according to the direction from lane camera unit.
Dynamic driver assistance switch (On the ICC steering switch)	Inputs the switch signal to ECM.
Combination meter	Turns the lane departure warning lamp and LDP ON indicator lamp ON/OFF according to the signals from the lane camera unit via CAN communication (through unified meter and A/C amp.).
LDP ON indicator lamp (Green)	Indicates LDP system status.
Lane departure warning lamp (Yellow)	• Blinks when LDP is functioning to alert the driver. • Stays ON when LDW/LDP system is malfunctioning.

LANE DEPARTURE PREVENTION (LDP) SYSTEM

< SYSTEM DESCRIPTION >

[LDW & LDP]

Component	Description
BCM	• Transmits turn indicator signal to lane camera unit via CAN communication. • Transmits vehicle conditions to ABS actuator and electric unit (control unit) via CAN communication.
ECM	Transmits vehicle conditions and ICC steering switch signal (dynamic driver assistance switch signal) to ICC sensor integrated unit via CAN communication.
Steering angle sensor	Transmits steering angle sensor signal to ABS actuator and electric unit (control unit) via CAN communication.
TCM	Transmits vehicle conditions to ABS actuator and electric unit (control unit) via CAN communication.
ICC sensor integrated unit	• Transmits ICC system conditions to ABS actuator and electric unit (control unit) via CAN communication. • Transmits LDP ON signal to ABS actuator and electric unit (control unit) via CAN communication.
Yaw rate/side G sensor	Inputs detected yaw rate signal to ABS actuator and electric unit (control unit).
AV control unit	Transmits system selection signal to ICC sensor integrated unit via CAN communication.

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[LDW & LDP]

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

CONSULT Function (LANE CAMERA)

INFOID:0000000010576722

DESCRIPTION

CONSULT performs the following functions by communicating with the lane camera unit.

Select diag mode	Function
Work support	- Performs the camera aiming. - Displays causes of automatic cancellation of the LDP function.
Self Diagnostic Result	Displays memorized DTC in the lane camera unit.
Data Monitor	Displays real-time data of lane camera unit.
Active Test	Enables operation check of electrical loads by sending driving signal to them.
Ecu Identification	Displays part number of lane camera unit.

WORK SUPPORT

Work support item	Function
CAUSE OF AUTO-CANCEL	Indicates causes of automatic cancellation of the LDP.
AUTO AIM	Outputs camera unit, calculates dislocation of the camera, and displays adjustment direction. Refer to DAS-253, "CAMERA AIMING ADJUSTMENT : Description" .

Cause of Auto-Cancel Display Item List

When LDP control is canceled under the operating condition, "CAUSE OF AUTO-CANCEL" is memorized.

- Last five cancel (system cancel) causes are displayed.
- "CAUSE OF AUTO-CANCEL" displays the number of times of ignition switch ON/OFF up to a maximum of "39". "39" is kept even when the number exceeds "39". The number returns to 0 when detecting the same cancellation causes are detected.

Cause of cancellation	Description
NO RECORD	—
Operating VDC/ABS	VDC or ABS function was operated.
Vehicle dynamics	Vehicle behavior exceeds specified value.
Steering speed	Steering speed was more than the specified value in evasive direction.
End by yaw angle	Yaw angle was the end of LDP control.
Departure yaw large	Detected more than the specified value of yaw angle in departure direction.
ICC WARNING	Target approach warning of ICC system or IBA system was activated.
VDC OFF SW	VDC OFF switch was pressed.
CURVATURE	Road curve was more than the specified value.
Steering angle large	Steering angle was more than the specified value.
ICC main SW hold ON	ICC MAIN switch was held ON for more than a certain period.
Brake is operated	Brake pedal was operated.
Lateral offset	Distance of vehicle and lane was detached in lateral direction more than the specified value.
Lane marker lost	Lane camera unit lost the trace of lane marker.
Lane marker unclear	Detected lane marker was unclear.
Bank	Road bank angle was more than the specified value.
Yaw acceleration	Detected yawing speed was more than the specified value.
Deceleration large	Deceleration in a longitudinal direction was more than the specified value.
Accel is operated	Accelerator pedal was depressed.
Departure steering	Steering wheel was steered more than the specified value in departure direction.

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[LDW & LDP]

Evasive steering	Steering wheel was steered more than the specified value in the evasive direction.
R range	Selector lever was operated to R range.
Parking brake drift	Rear wheels lock was detected.
Not operating condition	Did not meet the operating condition (vehicle speed, turn signal operation, etc.).

SELF DIAGNOSTIC RESULT

Displays memorized DTC in lane camera unit. Refer to [DAS-317, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item [unit]	Description
LDW SW [On/Off]	Switch status judged from warning systems switch signal
LDW ON LAMP [On/Off]	Signal output status of warning systems ON indicator
LDP ON IND [On/Off]	Request signal status of LDP ON indicator lamp
LANE DPRT W/L [On/Off]	Request signal status of lane departure warning lamp
BUZZER OUTPUT [On/Off]	Signal output status of lane departure warning buzzer
LC INACCURAT [On/Off]	Lane camera unit status
CAM HIGH TEMP [On/Off]	Status of lane camera unit high temperature judgment
VHCL SPD SE [km/h] or [mph]	Vehicle speed received from ABS actuator and electric unit (control unit) via CAN communication
TURN SIGNAL [Off/LH/RH]	Status of "Turn signal" determined from BCM via CAN communication
LANE DETCT LH [On/Off]	Left side lane marker detection
LANE DETCT RH [On/Off]	Right side lane marker detection
CROSS LANE LH [On/Off]	Condition that the vehicle is crossing left lane marker
CROSS LANE RH [On/Off]	Condition that the vehicle is crossing right lane marker
WARN LANE LH [On/Off]	Warning for left lane marker
WARN LANE RH [On/Off]	Warning for right lane marker
VALID POS LH [VLD/INVLD]	Lateral position for left lane marker is valid
VALID POS RH [VLD/INVLD]	Lateral position for right lane marker is valid
AIMING DONE [OK/NG]	Status that camera aiming is done
AIMING RESULT [OK/NOK]	Result of camera aiming
XOFFSET [pixel]	Lane camera unit installation condition
AIM CHECK YAW [deg]	Check result of camera aiming
AIM CHECK ROLL [deg]	Check result of camera aiming
AIM CHECK PITCH [deg]	Check result of camera aiming
FCTRY AIM YAW [deg]	Lane camera unit installation condition
FCTRY AIM ROL [deg]	Lane camera unit installation condition
FCTRY AIM PIT [deg]	Lane camera unit installation condition

ACTIVE TEST

CAUTION:

- Never perform the active test while driving.
- Active test cannot be started while the lane departure warning lamp is illuminated.

Active test item	Operation	Description
BUZZER DRIVE	On	Outputs the voltage to sound the lane departure warning buzzer.
	Off	Stops the voltage to sound the lane departure warning buzzer.

DIAGNOSIS SYSTEM (LANE CAMERA UNIT)

< SYSTEM DESCRIPTION >

[LDW & LDP]

Active test item	Operation	Description
LDW ON IND	On	Outputs the voltage to illuminate the warning systems ON indicator (on the warning systems switch).
	Off	Stops the voltage to illuminate the warning systems ON indicator.
LDP ON IND	On	Requests the LDP ON indicator lamp ON [on the combination meter (Green)] to combination meter (through unified meter and A/C amp.) via CAN communication.
	Off	Stops the illumination request.
LANE DEPARTURE W/L	On	Requests the lane departure warning lamp ON [on the combination meter (Yellow)] to combination meter (through unified meter and A/C amp.) via CAN communication.
	Off	Stops the illumination request.

NOTE:

"Active test" of indicator/warning lamp cannot be performed when applicable indicator/warning lamp is turned ON.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function

INFOID:0000000010955616

FUNCTION

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT.
Self diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	CONSULT drives some actuators apart from ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.
Specific data monitor	Specific LDP data in the ABS actuator and electric unit (control unit) can be read.

WORK SUPPORT

CAUTION:

Erase DTC memory of the lane camera unit after implementing work support. Refer to [DAS-271, "CONSULT Function \(LANE CAMERA\)"](#).

Item	Description
ST ANGLE SENSOR ADJUSTMENT	Adjusts the neutral position of the steering angle sensor.

SELF DIAGNOSTIC RESULT

Operation Procedure

Before performing the self-diagnosis for "ABS" with CONSULT, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

Display Item List

Refer to [BRC-120, "DTC Index"](#).

How to Erase Self-diagnosis Results

After erasing DTC memory for "ABS" with CONSULT, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC warning lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC warning lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driven at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay in "ON" position.

DATA MONITOR

Display Item List

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed
FR RH SENSOR [km/h (MPH)]	×	×	
RR LH SENSOR [km/h (MPH)]	×	×	
RR RH SENSOR [km/h (MPH)]	×	×	
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)
SLCT LVR POSI	×	×	A/T selector lever position
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate/side G sensor
OFF SW (On/Off)	×	×	VDC OFF switch signal status
ACCEL POS SIG (%)	×	▼	Throttle actuator opening/closing is displayed (Linked with accelerator pedal)
SIDE G-SENSOR (m/s ²)	×	▼	Transverse G detected by yaw rate/side G sensor
STR ANGLE SIG (°)	×	▼	Steering angle detected by steering angle sensor
PRESS SENSOR (bar)	×	▼	Brake fluid pressure detected by pressure sensor
ENGINE RPM [tr/min (rpm)]	×	▼	Engine speed
FR RH IN SOL (On/Off) (Note)	▼	×	Operation status of each solenoid valve
FR RH OUT SOL (On/Off) (Note)	▼	×	
FR LH IN SOL (On/Off) (Note)	▼	×	
FR LH OUT SOL (On/Off) (Note)	▼	×	
RR RH IN SOL (On/Off) (Note)	▼	×	
RR RH OUT SOL (On/Off) (Note)	▼	×	
RR LH IN SOL (On/Off) (Note)	▼	×	
RR LH OUT SOL (On/Off) (Note)	▼	×	
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation
ACTUATOR RLY (On/Off) (Note)	▼	×	Actuator relay operation
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
OFF LAMP (On/Off)	▼	×	VDC OFF indicator lamp
SLIP/VDC LAMP (On/Off)	▼	×	VDC warning lamp
FLUID LEV SW (On/Off)	▼	▼	Brake fluid level switch signal status
PARK BRAKE SW (On/Off)	▼	▼	Parking brake switch signal status
EBD SIGNAL (On/Off)	▼	▼	EBD operation
ABS SIGNAL (On/Off)	▼	▼	ABS operation
TCS SIGNAL (On/Off)	▼	▼	TCS operation
VDC SIGNAL (On/Off)	▼	▼	VDC operation
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal
TCS FAIL SIG (On/Off)	▼	▼	TCS fail-safe signal
VDC FAIL SIG (On/Off)	▼	▼	VDC fail-safe signal
CRANKING SIG (On/Off)	▼	▼	Crank operation
USV[FR-RL] (On/Off) (Note)	▼	▼	VDC switch-over valve
USV[FL-RR] (On/Off) (Note)	▼	▼	
HSV[FR-RL] (On/Off) (Note)	▼	▼	
HSV[FL-RR] (On/Off) (Note)	▼	▼	
BST OPER SIG (On/Off)	▼	▼	Booster operation signal
V/R OUTPUT (On/Off)	▼	▼	Solenoid valve relay activated
M/R OUTPUT (On/Off)	▼	▼	Actuator motor and motor relay activated
LDP) APP SEN (%)	×	×	Accelerator pedal position sensor status received from ECM via CAN communication
LDP) ICC MAIN SW (On/Off)	×	×	ICC main switch status received from ECM via CAN communication
LDP) LDP ON SW (On/Off)	×	×	Dynamic driver assistance switch status received from ECM via CAN communication
LDP) WIPER SIGNAL (Stop/PRTCT/1low/1high/Low/High)	×	×	Front wiper operating condition received from BCM via CAN communication
LDP) BRAKE SW (On/Off)	×	×	Brake switch signal status
LDP) STOP LMP SW (On/Off)	×	×	Stop lamp switch signal status

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
LDP) LDW SW (On/Off)	×	×	Warning systems switch status received from lane camera unit via CAN communication
LDP) SHIFT POSITION (OFF/P/R/N/D/MM 1st – MM 7th)	×	×	Shift position received from TCM via CAN communication
LDP) TURN SIGNAL (Off/LH/RH/LH&RH)	×	×	Turn signal operating condition received from BCM via CAN communication

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ACTIVE TEST

CAUTION:

- **Never perform active test while driving vehicle.**
- **Make sure to completely bleed air from brake system.**
- **The active test cannot be started when ABS warning lamp, VDC warning lamp and brake warning lamp are ON.**
- **ABS warning lamp, VDC warning lamp and brake warning lamp are ON during active test.**
- **Erase memory of the lane camera unit after implementing active test. Refer to [DAS-271, "CONSULT Function \(LANE CAMERA\)"](#).**

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" in "ABS" with CONSULT is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" in "ABS" with CONSULT is displayed, to perform test again.

Test Item

ABS SOLENOID VALVE

- Select "Up", "Keep" and "Down" of "ACTIVE TEST" in "ABS" with CONSULT. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS SOLENOID VALVE (ACT)

- Select “Up”, “ACT UP” and “ACT KEEP” of “ACTIVE TEST” in “ABS” with CONSULT. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Select “On” and “Off” of “ACTIVE TEST” in “ABS” with CONSULT. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

SPECIFIC DATA MONITOR

Specific data monitor displays specific LDP operating conditions.

Monitor item (Unit)	Remarks
YAW RATE SEN (d/s)	Yaw rate detected by yaw rate/side G sensor
LDP) YAW ORDER (×100Nm)	Calculated target yaw moment

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[LDW & LDP]

Monitor item (Unit)	Remarks
LDP) WARN REQ (On/Off)	Status of warning request that transmits to lane camera unit via CAN communication
LDP) WARN control (On/Off)	Status of warning main controller for LDP
LDP) REDY signal (On/Off)	Status of internal judgment by LDP controller [ABS actuator and electric unit (control unit)]
LDP) STATUS signal (STANDBY/WARN/MASK/Off)	Status of internal judgment by LDP controller [ABS actuator and electric unit (control unit)]
LDP) Camera lost (Detect/Deviate/Both)	Lane marker detected condition received from lane camera unit via CAN communication
LDP) Lane unclear (On/Off)	Lane marker condition received from lane camera unit via CAN communication

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1B00 CAMERA UNIT MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

DTC/CIRCUIT DIAGNOSIS

C1B00 CAMERA UNIT MALF

DTC Logic

INFOID:0000000010576724

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B00	CAMERA UNIT MALF	Lane camera unit internal malfunction	Erase DTC with CONSULT	Lane camera unit

Diagnosis Procedure

INFOID:0000000010576725

1.ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "C1B00" erased?

YES >> INSPECTION END

NO >> Replace the lane camera unit.

C1B01 CAM AIMING INCMP

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B01 CAM AIMING INCMP

DTC Logic

INFOID:0000000010576726

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B01	CAM AIMING INCMP	Camera aiming is not completed.	Camera aiming is completed.	- Lane camera aiming is not adjusted. - Lane camera unit

Diagnosis Procedure

INFOID:0000000010576727

1.CAMERA AIMING

Perform the camera aiming. Refer to [DAS-253. "CAMERA AIMING ADJUSTMENT : Description"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSIS OF LANE CAMERA UNIT

Perform the self-diagnosis of lane camera unit with CONSULT.

Is the DTC "C1B01" detected?

- YES >> Replace the lane camera unit.
NO >> INSPECTION END

DAS

C1B02 VHCL SPD DATA MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B02 VHCL SPD DATA MALF

DTC Logic

INFOID:0000000010576728

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B02	VHCL SPD DATA MALF	Lane camera unit detected vehicle speed signal error from ABS actuator and electric unit (control unit).	Erase DTC with CONSULT	- Vehicle speed signal - ABS actuator and electric unit (control unit) - Lane camera unit

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of lane camera unit with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

1. Turn ignition ON.
2. Drive at 40 km/h or more.
3. Stop the vehicle.
4. Perform the self-diagnosis of lane camera unit with CONSULT.

Is the DTC "C1B02" detected?

- YES >> Refer to [DAS-282, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576729

1.PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is any DTC detected?

- YES >> Perform trouble diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-120, "DTC Index"](#).
NO >> Replace the lane camera unit.

C1B03 ABNRML TEMP DETECT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B03 ABNRML TEMP DETECT

DTC Logic

INFOID:0000000010576730

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B03	ABNRML TEMP DETECT	Temperature around lane camera unit is excessively high.	Erase DTC with CONSULT	Interior room temperature is excessively high.

Diagnosis Procedure

INFOID:0000000010576731

1.COOLING LANE CAMERA UNIT

Cooling the lane camera unit.

>> GO TO 2.

2.ERASE DTC

Erase DTC memory of the lane camera unit with self-diagnosis of CONSULT.

Is the DTC "C1B03" erased?

YES >> INSPECTION END

NO >> Replace the lane camera unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1B07 ABS DIAGNOSIS

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B07 ABS DIAGNOSIS

DTC Logic

INFOID:0000000010576732

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B07	ABS DIAGNOSIS	- Lane camera unit received that ABS actuator and electric unit (control unit) is detecting any DTC. - Lane camera unit received that ABS actuator and electric unit (control unit) is performing "Work support" or "Active test" with CONSULT.	Erase DTC with CONSULT	ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000010576733

1.PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is any DTC detected?

YES >> Perform trouble diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-120, "DTC Index"](#).

NO >> GO TO 2.

2.ERASE DTC

Erase DTC memory of the lane camera unit with self-diagnosis of CONSULT.

Is the DTC "C1B07" erased?

YES >> INSPECTION END

NO >> Replace the lane camera unit.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000010576734

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control units, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads the required data only.

CAN Communication Signal Chart. Refer to [LAN-35. "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000010576735

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U1000	CAN COMM CIRCUIT	When lane camera unit is not transmitting or receiving CAN communication signal for 2 seconds or more.	Erase DTC with CONSULT	CAN communication

Diagnosis Procedure

INFOID:0000000010576736

1.ERASE DTC

Erase DTC memory of the lane camera unit with self-diagnosis of CONSULT.

>> GO TO 2.

2.PERFORM SELF-DIAGNOSIS OF LANE CAMERA UNIT

Perform the self-diagnosis of the lane camera unit with CONSULT.

Is the DTC "U1000" displayed?

- YES >> Refer to [LAN-25. "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-47. "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000010576737

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U1010	CONTROL UNIT (CAN)	Lane camera unit detected internal CAN communication circuit malfunction.	Erase DTC with CONSULT	Lane camera unit

Diagnosis Procedure

INFOID:0000000010576738

1. ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "U1010" erased?

YES >> INSPECTION END

NO >> Replace the lane camera unit.

U0122 VDC CAN CIR1 (LDP)

DTC Logic

INFOID:0000000010576739

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0122	VDC CAN CIR1 (LDP)	Lane camera unit detected an error of CAN communication signal that was received from ABS actuator and electric unit (control unit).	Erase DTC with CONSULT	- ABS actuator and electric unit (control unit) - Lane camera unit

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of lane camera unit with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

- Turn ignition switch ON and wait for 2 seconds or more.
- Perform the self-diagnosis of lane camera unit with CONSULT.

Is the DTC "U0122" detected?

- YES >> Refer to [DAS-287, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576740

1.PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) TROUBLE DIAGNOSIS

Perform trouble diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-120, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "U0122" erased?

- YES >> INSPECTION END
 NO >> Replace the lane camera unit.

4.PROVISIONAL REPLACEMENT OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Remove ABS actuator and electric unit (control unit). Install the normal ABS actuator and electric unit (control unit).

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "U0122" erased?

- YES >> Replace ABS actuator and electric unit (control unit).

U0122 VDC CAN CIR1 (LDP)

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

NO >> Replace the lane camera unit.

U0416 VDC CAN CIR2 (LDP)

DTC Logic

INFOID:0000000010576741

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0416	VDC CAN CIR2 (LDP)	Lane camera unit detected an error of CAN communication signal that was received from ABS actuator and electric unit (control unit).	Erase DTC with CONSULT	- ABS actuator and electric unit (control unit) - Lane camera unit

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of lane camera unit with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

- Turn ignition switch ON and wait for 2 seconds or more.
- Perform the self-diagnosis of lane camera unit with CONSULT.

Is the DTC "U0416" detected?

- YES >> Refer to [DAS-289, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576742

1.PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) TROUBLE DIAGNOSIS

Perform trouble diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-120, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "U0416" erased?

- YES >> INSPECTION END
 NO >> Replace the lane camera unit.

4.PROVISIONAL REPLACEMENT OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Remove ABS actuator and electric unit (control unit). Install the normal ABS actuator and electric unit (control unit).

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of lane camera unit with self-diagnosis of CONSULT.

Is the DTC "U0416" erased?

- YES >> Replace ABS actuator and electric unit (control unit).

U0416 VDC CAN CIR2 (LDP)

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

NO >> Replace the lane camera unit.

C1B00 LDP) CAMERA MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B00 LDP) CAMERA MALF

DTC Logic

INFOID:0000000010576743

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B00	LDP) CAMERA MALF	ABS actuator and electric unit (control unit) received that lane camera unit is detecting "C1B00" (Lane camera unit internal malfunction).	Erase DTC with CONSULT	Lane camera unit

Diagnosis Procedure

INFOID:0000000010576744

1. LANE CAMERA UNIT TROUBLE DIAGNOSIS

Perform trouble diagnosis of the lane camera unit for "C1B00 CAMERA UNIT MALF". Refer to [DAS-280, "DTC Logic"](#).

>> GO TO 2.

2. ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "C1B00" erased?

YES >> INSPECTION END

NO >> Replace ABS actuator and electric unit (control unit).

DAS

C1B04 LDP) ICC STG SW MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B04 LDP) ICC STG SW MALF

DTC Logic

INFOID:0000000010576745

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B04	LDP) ICC STG SW MALF	ABS actuator and electric unit (control unit) received ICC steering switch malfunction from ECM.	Erase DTC with CONSULT	• ICC steering switch circuit • ICC steering switch • ECM • ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000010576746

1. ECM TROUBLE DIAGNOSIS

Perform trouble diagnosis of ECM for "P1564 ICC STEERING SWITCH". Refer to [EC-445, "Description"](#).

>> GO TO 2.

2. ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "C1B04" erased?

YES >> INSPECTION END

NO >> Replace ABS actuator and electric unit (control unit).

C1B05 LDP) APP SEN MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B05 LDP) APP SEN MALF

DTC Logic

INFOID:0000000010576747

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B05	LDP) APP SEN MALF	ABS actuator and electric unit (control unit) detects that accelerator pedal position sensor signal is malfunctioning.	Erase DTC with CONSULT	- Accelerator pedal position sensor - Accelerator pedal position sensor circuit - ECM - ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000010576748

1.ECM TROUBLE DIAGNOSIS

Perform trouble diagnosis of ECM for "P2122, P2123 APP SENSOR and P2127, P2128 APP SENSOR". Refer to the following items;

- P2122, P2123 APP SENSOR: [EC-479. "Description"](#)
- P2127, P2128 APP SENSOR: [EC-483. "Description"](#)

>> GO TO 2.

2.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "C1B05" erased?

- YES >> INSPECTION END
NO >> Replace ABS actuator and electric unit (control unit).

C1B06 LDP) TCM MALF

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

C1B06 LDP) TCM MALF

DTC Logic

INFOID:0000000010576749

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
C1B06	LDP) TCM MALF	ABS actuator and electric unit (control unit) detects that TCM has a malfunction.	Erase DTC with CONSULT	- Any of A/T system components - TCM - ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000010576750

1.PERFORM SELF-DIAGNOSIS OF TCM

Perform self-diagnosis of TCM with CONSULT.

Is any DTC detected?

YES >> GO TO 2.

NO >> Replace ABS actuator and electric unit (control unit).

2.TCM TROUBLE DIAGNOSIS

Perform trouble diagnosis of TCM. Refer to [TM-157, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "C1B06" erased?

YES >> INSPECTION END

NO >> Replace ABS actuator and electric unit (control unit).

U0100 LDP) ECM CAN CIR2

DTC Logic

INFOID:0000000010576751

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0100	LDP) ECM CAN CIR2	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from ECM.	Erase DTC with CONSULT	- ECM - ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

- Turn ignition switch ON and wait for 2 seconds or more.
- Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U0100" detected?

- YES >> Refer to [DAS-295, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576752

1.PERFORM SELF-DIAGNOSIS OF ECM

Perform self-diagnosis of ECM with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.ECM TROUBLE DIAGNOSIS

Perform trouble diagnosis of ECM. Refer to [EC-574, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0100" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF ECM

Remove ECM. Install a normal ECM.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0100" erased?

- YES >> Replace ECM.
 NO >> Replace ABS actuator and electric unit (control unit).

U0101 LDP) TCM CAM CAN CIR2**DTC Logic**

INFOID:0000000010576753

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0101	LDP) TCM CAN CIR2	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from TCM.	Erase DTC with CONSULT	• TCM • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE**1.DTC ERASE**

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U0101" detected?

- YES >> Refer to [DAS-296, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576754

1.PERFORM SELF-DIAGNOSIS OF TCM

Perform self-diagnosis of TCM with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.TCM TROUBLE DIAGNOSIS

Perform trouble diagnosis of TCM. Refer to [TM-157, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0101" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF TCM

Remove TCM. Install a normal TCM.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0101" erased?

- YES >> Replace TCM.
 NO >> Replace ABS actuator and electric unit (control unit).

U0104 LDP) ICC CAM CAN CIR2

DTC Logic

INFOID:0000000010576755

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0104	LDP) ICC CAM CAN CIR2	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from ICC sensor integrated unit.	Erase DTC with CONSULT	• ICC sensor integrated unit • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U0104" detected?

- YES >> Refer to [DAS-297, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576756

1.PERFORM SELF-DIAGNOSIS OF ICC SENSOR INTEGRATED UNIT

Perform ICC sensor integrated unit self-diagnosis with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.ICC SENSOR INTEGRATED UNIT TROUBLE DIAGNOSIS

Perform trouble diagnosis of ICC sensor integrated unit. Refer to [CCS-153, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0104" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF ICC SENSOR INTEGRATED UNIT

Remove ICC sensor integrated unit. Install a normal ICC sensor integrated unit.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0104" erased?

- YES >> Replace ICC sensor integrated unit.
 NO >> Replace ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

U0405 LDP) ICC CAM CAN CIR1

DTC Logic

INFOID:0000000010576757

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U0405	LDP) ICC CAM CAN CIR1	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from ICC sensor integrated unit.	Erase DTC with CONSULT	• ICC sensor integrated unit • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U0405" detected?

- YES >> Refer to [DAS-298, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576758

1.PERFORM SELF-DIAGNOSIS OF ICC SENSOR INTEGRATED UNIT

Perform ICC sensor integrated unit self-diagnosis with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.ICC SENSOR INTEGRATED UNIT TROUBLE DIAGNOSIS

Perform trouble diagnosis of ICC sensor integrated unit. Refer to [CCS-153, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0405" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF ICC SENSOR INTEGRATED UNIT

Remove ICC sensor integrated unit. Install a normal ICC sensor integrated unit.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U0405" erased?

- YES >> Replace ICC sensor integrated unit.
 NO >> Replace ABS actuator and electric unit (control unit).

U1500 LDP) CAM CAN CIR1

DTC Logic

INFOID:0000000010576759

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U1500	LDP) CAM CAN CIR1	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from the lane camera unit.	Erase DTC with CONSULT	- Lane camera unit - ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

- Turn ignition switch ON and wait for 2 seconds or more.
- Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U1500" detected?

- YES >> Refer to [DAS-299, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576760

1.PERFORM SELF-DIAGNOSIS OF LANE CAMERA UNIT

Perform self-diagnosis of lane camera unit with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.LANE CAMERA UNIT TROUBLE DIAGNOSIS

Perform trouble diagnosis of the lane camera unit. Refer to [DAS-317, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U1500" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF LANE CAMERA UNIT

Remove the lane camera unit. Install a normal lane camera unit.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U1500" erased?

- YES >> Replace the lane camera unit.
 NO >> Replace ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

U1501 LDP) CAM CAN CIR2

DTC Logic

INFOID:0000000010576761

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	DTC erase conditions	Possible cause
U1501	LDP) CAM CAN CIR2	ABS actuator and electric unit (control unit) detected an error of CAN communication signal that was received from the lane camera unit.	Erase DTC with CONSULT	- Lane camera unit - ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC ERASE

Erase the DTC memory of ABS actuator and electric unit (control unit) with CONSULT.

>> GO TO 2.

2.DTC CONFIRMATION

- Turn ignition switch ON and wait for 2 seconds or more.
- Perform the self-diagnosis of ABS actuator and electric unit (control unit) with CONSULT.

Is the DTC "U1501" detected?

- YES >> Refer to [DAS-300, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010576762

1.PERFORM SELF-DIAGNOSIS OF LANE CAMERA UNIT

Perform self-diagnosis of lane camera unit with CONSULT.

Is any DTC detected?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.LANE CAMERA UNIT TROUBLE DIAGNOSIS

Perform trouble diagnosis of the lane camera unit. Refer to [DAS-317, "DTC Index"](#).

>> GO TO 3.

3.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U1501" erased?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit).

4.PROVISIONAL REPLACEMENT OF LANE CAMERA UNIT

Remove lane camera unit. Install a normal lane camera unit.

>> GO TO 5.

5.ERASE DTC

Erase DTC memory of ABS actuator and electric unit (control unit) with self-diagnosis of CONSULT.

Is the DTC "U1501" erased?

- YES >> Replace the lane camera unit.
 NO >> Replace ABS actuator and electric unit (control unit).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

POWER SUPPLY AND GROUND CIRCUIT

LANE CAMERA UNIT

LANE CAMERA UNIT : Diagnosis Procedure

INFOID:0000000010576763

1.FUSE INSPECTION

Check that the following fuses are not fusing.

Signal name	Connection position	Fuse No.	Capacity
Ignition power supply	FUSE BLOCK (J/B)	3	10 A

Is the fuse fusing?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between the lane camera unit harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Lane camera unit		Ignition switch	
Connector	Terminal		
R21	7	OFF	0 V
		ON	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Check harness between lane camera unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the lane camera unit connector.
3. Check continuity between the lane camera unit harness connectors and ground.

Lane camera unit		Ground	Continuity
Connector	Terminal		
R21	1		Existed
	5		

Does continuity exist?

YES >> Power supply and ground circuit are normal.

NO >> Repair harness or connector.

DAS

WARNING SYSTEMS SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

WARNING SYSTEMS SWITCH CIRCUIT

Component Function Check

INFOID:0000000010576764

1.CHECK WARNING SYSTEMS SWITCH SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn the ignition switch ON.
2. Select "LDW SW" of "LANE CAMERA" data monitor item.
3. With operating the warning systems switch, check the monitor status.

Monitor item	Condition		Monitor status
LDW SW	warning systems switch	Pressed ⇄ Released	On ⇄ Off

Is the item status normal?

- YES >> Warning systems switch circuit is normal.
NO >> Refer to [DAS-302, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010576765

1.CHECK WARNING SYSTEMS SWITCH SIGNAL INPUT

1. Turn the ignition switch ON.
2. With operating the warning systems switch, check the voltage between the lane camera unit harness connector and the ground.

Terminals		Condition	Voltage (Approx.)	
(+)	(-)			
Lane camera unit		Warning systems switch		
Connector	Terminal			
R21	3	Ground	Pressed	0 V
			Released	5 V

Is the measurement value normal?

- YES >> Replace the lane camera unit.
NO >> GO TO 2.

2.CHECK WARNING SYSTEMS SWITCH

1. Turn ignition switch OFF.
2. Remove warning systems switch.
3. Check warning systems switch. Refer to [DAS-303, "Component Inspection"](#).

Is the warning systems switch normal?

- YES >> GO TO 3.
NO >> Replace warning systems switch.

3.CHECK WARNING SYSTEMS SWITCH GROUND CIRCUIT

Check continuity between warning systems switch harness connector terminal and the ground.

Warning systems switch		Ground	Continuity
Connector	Terminal		
M29	6		Existed

Does continuity exist?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK WARNING SYSTEMS SWITCH SIGNAL INPUT CIRCUIT FOR OPEN

WARNING SYSTEMS SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

1. Disconnect the lane camera unit connector.
2. Check continuity between the lane camera unit harness connector and warning systems switch harness connector.

Lane camera unit		Warning systems switch		Continuity
Connector	Terminal	Connector	Terminal	
R21	3	M29	7	Existed

Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5.CHECK WARNING SYSTEMS SWITCH SIGNAL INPUT CIRCUIT FOR SHORT

Check continuity between the lane camera unit harness connector and ground.

Lane camera unit		Ground	Continuity
Connector	Terminal		
R21	3		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace the lane camera unit.

Component Inspection

INFOID:0000000010576766

1.CHECK WARNING SYSTEMS SWITCH

Check continuity of warning systems switch.

Warning systems switch		Condition	Continuity
Terminal		Warning systems switch	
6	7	Pressed	Existed
		Released	Not existed

Is the check result normal?

YES >> Warning systems switch is normal.

NO >> Replace warning systems switch.

DAS

WARNING SYSTEMS ON INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

WARNING SYSTEMS ON INDICATOR CIRCUIT

Component Function Check

INFOID:0000000010576767

1.CHECK WARNING SYSTEMS ON INDICATOR BY CONSULT

CONSULT ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "LDW ON IND" of "LANE CAMERA" active test item.
3. With operating the test item, check the operation.

On : Warning systems ON indicator illuminates.

Off : Warning systems ON indicator is turned OFF.

Does the warning systems ON indicator illuminate?

YES >> Warning systems ON indicator circuit is normal.

NO >> Refer to [DAS-304, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010576768

1.CHECK WARNING SYSTEMS ON INDICATOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect warning systems switch connector.
3. Turn ignition switch ON.
4. Check voltage between warning systems switch harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Warning systems switch			
Connector	Terminal	Ground	
M29	3		Battery voltage

Is the measurement value normal?

YES >> GO TO 2.

NO >> Check harness between fuse and warning systems switch.

2.CHECK WARNING SYSTEMS ON INDICATOR SIGNAL FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the lane camera unit harness connector.
3. Check continuity between the lane camera unit harness connector and warning systems switch harness connector.

Lane camera unit		Warning systems switch		Continuity
Connector	Terminal	Connector	Terminal	
R21	2	M29	2	Existed

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK WARNING SYSTEMS ON INDICATOR SIGNAL CIRCUIT FOR SHORT

Check continuity between the lane camera unit harness connector and ground.

Lane camera unit		Ground	Continuity
Connector	Terminal		
R21	2		Not existed

WARNING SYSTEMS ON INDICATOR CIRCUIT

[LDW & LDP]

< DTC/CIRCUIT DIAGNOSIS >

Does continuity exist?

- YES >> Repair the harnesses or connectors.
NO >> GO TO 4.

4.CHECK WARNING SYSTEMS ON INDICATOR

1. Connect warning systems switch connector.
2. Turn ignition switch ON.
3. Apply ground to warning systems switch terminal 2.
4. Check condition of the warning systems ON indicator.

Does warning systems ON indicator illuminate?

- YES >> Replace the lane camera unit.
NO >> Replace warning systems switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

LANE DEPARTURE WARNING BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

LANE DEPARTURE WARNING BUZZER CIRCUIT

Component Function Check

INFOID:0000000010576769

1.CHECK LANE DEPARTURE WARNING BUZZER BY CONSULT

CONSULT ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "BUZZER DRIVE" of "LANE CAMERA" active test item.
3. With operating the test item, check the operation.

On : Lane departure warning buzzer is activated.

Off : Lane departure warning buzzer is not activated.

Is the lane departure warning buzzer activated?

YES >> Lane departure warning buzzer circuit is normal.

NO >> Refer to [DAS-306, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010576770

1.CHECK LANE DEPARTURE WARNING BUZZER POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the lane departure warning buzzer connector.
3. Turn ignition switch ON.
4. Check voltage between the lane departure warning buzzer harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Lane departure warning buzzer		Ground
Connector	Terminal	
M45	1	
		Battery voltage

Is the measurement value normal?

YES >> GO TO 2.

NO >> Check harness between fuse and lane departure warning buzzer.

2.CHECK LANE DEPARTURE WARNING BUZZER GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between lane departure warning buzzer harness connector and ground.

Lane departure warning buzzer		Ground	Continuity
Connector	Terminal		Existed
M45	3		

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK LANE DEPARTURE WARNING BUZZER SIGNAL CIRCUIT FOR OPEN

1. Disconnect the lane camera unit connector.
2. Check continuity between the lane camera unit harness connector and lane departure warning buzzer harness connector.

Lane camera unit		Lane departure warning buzzer		Continuity
Connector	Terminal	Connector	Terminal	
R21	6	M45	2	Existed

LANE DEPARTURE WARNING BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[LDW & LDP]

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4.CHECK LANE DEPARTURE WARNING BUZZER SIGNAL CIRCUIT FOR SHORT

Check continuity between the lane camera unit harness connector and ground.

Lane camera unit		Ground	Continuity
Connector	Terminal		
R21	6		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 5.

5.CHECK LANE DEPARTURE WARNING BUZZER OPERATION

1. Connect lane departure warning buzzer connector.
2. Turn ignition switch ON.
3. Apply ground to lane departure warning buzzer terminal 2.
4. Check condition of the lane departure warning buzzer.

Does lane departure warning buzzer sound?

YES >> Replace the lane camera unit.

NO >> Replace lane departure warning buzzer.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ECU DIAGNOSIS INFORMATION

LANE CAMERA UNIT

Reference Value

INFOID:0000000010576771

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
LDW SW	Warning systems switch is ON. (Warning systems ON indicator illuminates.)	On
	Warning systems switch is OFF. (Warning systems ON indicator OFF.)	Off
LDW ON LAMP	Warning systems ON indicator illuminates.	On
	Warning systems ON indicator OFF	Off
LDP ON IND	LDP ON indicator lamp illuminates.	On
	LDP ON indicator lamp OFF	Off
LANE DPRT W/L	Lane departure warning lamp illuminates.	On
	Lane departure warning lamp OFF	Off
BUZZER OUTPUT	Lane departure warning buzzer is sounding.	On
	Lane departure warning buzzer is not sounding.	Off
LC INACCURAT	Lane camera malfunction	On
	Lane camera normal	Off
VHCL SPD SE	While driving	Approximately equivalent to speedometer reading
TURN SIGNAL	Turn signal lamp LH and RH blinking.	LH/RH
	Turn signal lamp LH blinking.	LH
	Turn signal lamp RH blinking.	RH
	Turn signal lamps OFF.	Off
LANE DETCT LH	Left side lane marker is detected.	On
	Left side lane marker is not detected.	Off
LANE DETCT RH	Right side lane marker is detected.	On
	Right side lane marker is not detected.	Off
CROSS LANE LH	The vehicle is crossing left side lane marker.	On
	The vehicle is not crossing left side lane marker.	Off
CROSS LANE RH	The vehicle is crossing right side lane marker.	On
	The vehicle is not crossing right side lane marker.	Off
WARN LANE LH	Warning for left side lane.	On
	Not warning for left side lane.	Off
WARN LANE RH	Warning for right side lane.	On
	Not warning for right side lane.	Off
VALID POS LH	Lateral position for left side lane marker is valid.	VLD
	Lateral position for left side lane marker is invalid.	INVLD
VALID POS RH	Lateral position for right side lane marker is valid.	VLD
	Lateral position for right side lane marker is invalid.	INVLD


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Monitor Item	Condition	Value/Status
AIMING DONE	Camera aiming is completed.	OK
	Camera aiming is not adjusted.	NG
AIMING RESULT	Camera aiming is completed.	OK
	Camera aiming is not completed.	NOK
XOFFSET	Camera aiming is completed.	Approx. 180 pixel
AIM CHECK YAW	NOTE: The item is indicated, but not used.	—
AIM CHECK ROLL	NOTE: The item is indicated, but not used.	—
AIM CHECK PITCH	NOTE: The item is indicated, but not used.	—
FCTRY AIM YAW	Camera aiming is not completed.	+12.0 deg
	Camera aiming is completed.	0 ± 5.0 deg
FCTRY AIM ROL	Camera aiming is not completed.	0.0 deg
	Camera aiming is completed.	0 ± 5.0 deg
FCTRY AIM PIT	Camera aiming is not completed.	+12.0 deg
	Camera aiming is completed.	0 ± 5.0 deg

TERMINAL LAYOUT

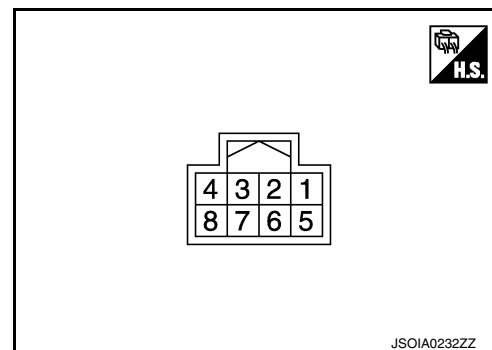

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	—	Signal name	Input/ Output			
1 (B)	Ground	Ground	—	—		0 V
2 (SB)	Ground	Warning systems ON indicator	Output	Warning systems ON indicator	Illuminated	0 V
					OFF	12 V
3 (V)	Ground	Warning systems switch	Input	Warning systems switch	Pressed	0 V
					Released	5 V
4 (L)	Ground	CAN-H	—	—		—
5 (B)	Ground	Ground	—	—		0 V
6 (R)	Ground	Lane departure warning buzzer	Output	Lane departure warning buzzer	Sounding	0 V
					Not sounding	12 V

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
7 (Y)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
8 (P)	Ground	CAN-L	—	—	—


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

INFOID:0000000010576772

Wiring Diagram - LDW & LDP -

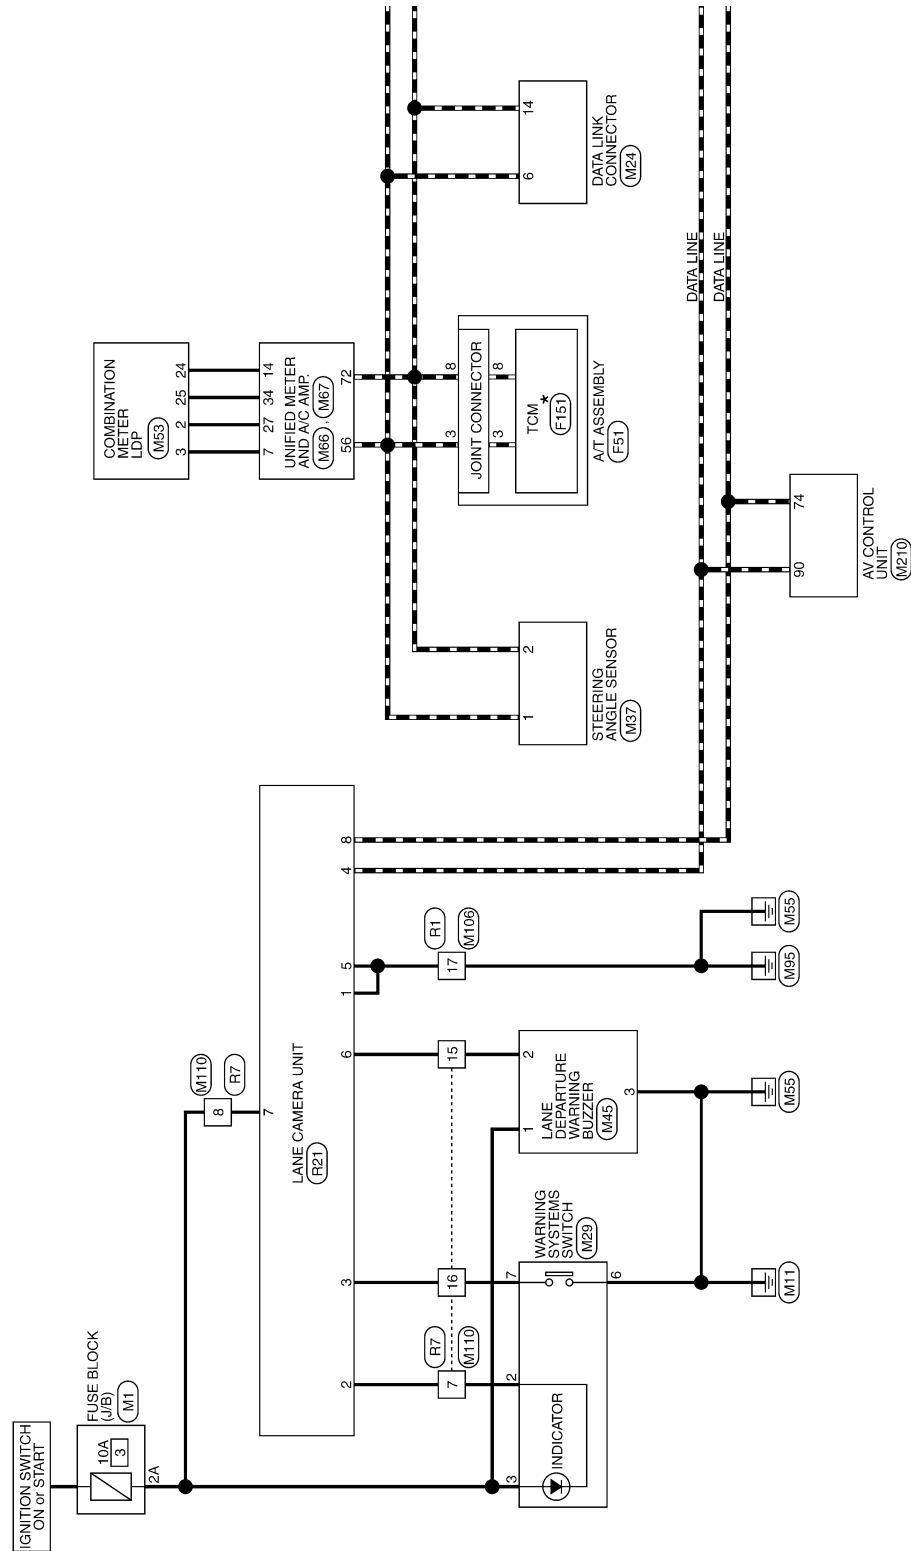

* : This connector is not shown in "Harness Layout".

2014/03/18

JROWC2926GB

LANE DEPARTURE PREVENTION


A
B
C
D
E
F
G
H
I
J
K
L
M
N
OAS
P

DAS

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

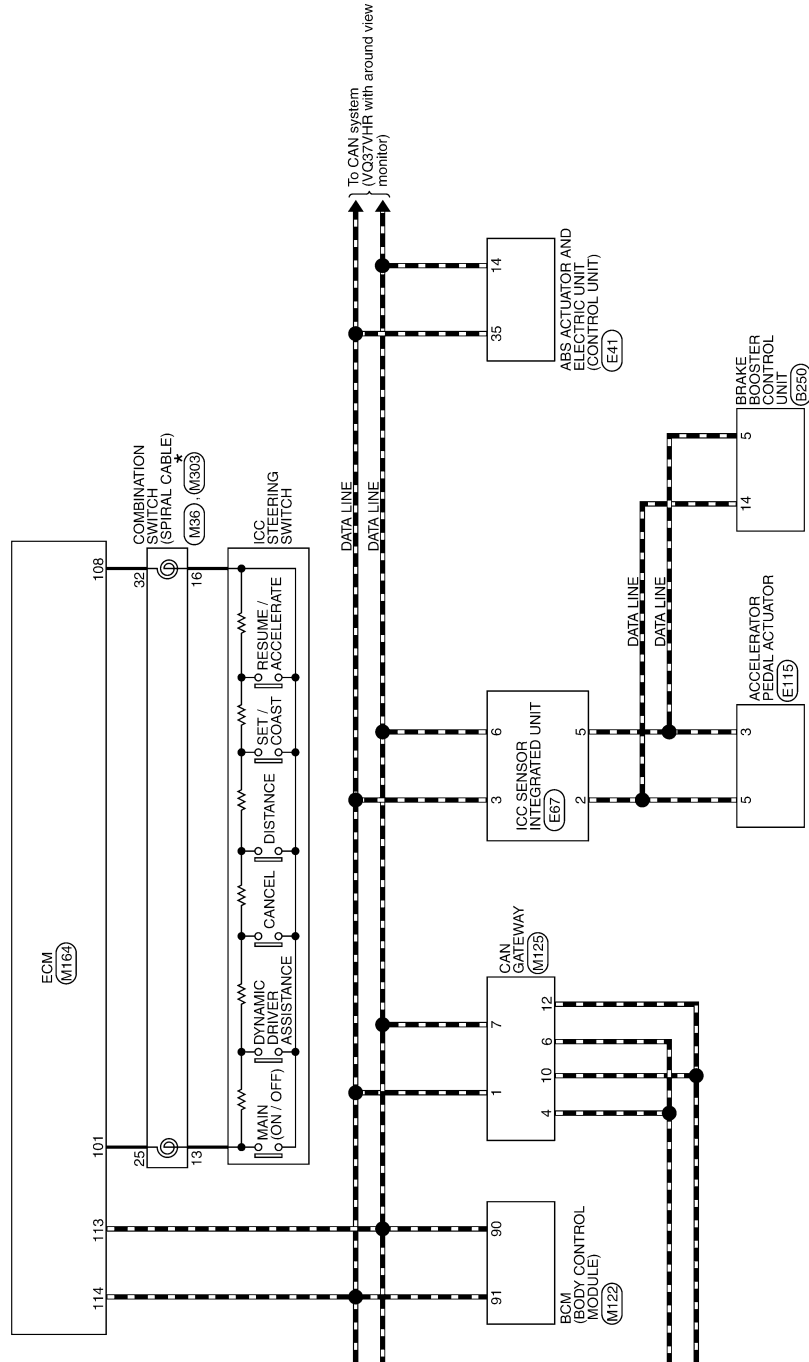

★ : This connector is not shown in "Harness Layout".

JROWC2927GB


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]


LANE DEPARTURE PREVENTION

Connector No.	B250
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	W		BATTERY
2	W		BATTERY
5	P		ITS COM+L
8	SB		RELEASE SW PWR
10	R		BRAKE PRESSURE SEN PWR
12	G		BOOSTER SOL PWR
14	R		BOOSTER SOL GND
15	L		ITS COM+H
17	V		RELEASE SW (NC)
19	G		BRAKE PRESSURE SEN SIGNAL
20	B		GROUND
21	GR		CHIME SIGNAL
22	BR		RELEASE SW (NO)
24	BG		BRAKE PRESSURE SEN GND

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FBAH24-LH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	B		GROUND
2	G		UBNR
3	R		UBVR
4	B		GROUND


5	Y		DS FL
6	BG		DP RL
7	BR		DP RR
9	B		DP FR
10	W		DS FR
12	L		VAC
14	P		CANL
15	SHIELD		AGND
19	P		UST
25	Y		BUS-L
26	R		DP FL
27	GR		DS RL
28	G		LIZ
29	LG		DS BR
30	SB		BLS
31	R		VDC OFF SW
35	L		CAN+H
45	B		BUSH

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS06FB-FR



Terminal No.	Color	Wire	Signal Name [Specification]
1	R		IGNITION
2	L		ITS COM+H
3	L		CAN+H
4	B		GROUND
5	P		ITS COM+L
6	P		CANL

Connector No.	E115
Connector Name	ACCELERATOR PEDAL ACTUATOR
Connector Type	KDZ06FB

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	R		IGNITION
2	BG		BATTERY
3	P		ITS COM+L
4	B		GROUND
5	L		ITS COM+H

Connector No.	F51
Connector Name	AT ASSEMBLY
Connector Type	FK10FG-DGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y		IGNITION POWER SUPPLY
2	R		BATTERY POWER SUPPLY (MEMORY BACKUP)
3	L		CAN+H
4	V		K-LINE
5	B		GROUND
6	Y		IGNITION POWER SUPPLY
7	R		BACK-UP LAMP RELAY
8	P		CANL
9	GR		STARTER RELAY (With VQ engine)
10	LG		STARTER RELAY (With VK engine)
	B		GROUND

Connector No.	F151
Connector Name	TCM
Connector Type	SP10FG



Terminal No.	Color	Wire	Signal Name [Specification]
1	W		IGNITION POWER SUPPLY
2	B		BATTERY POWER SUPPLY (MEMORY BACKUP)
3	R		CAN+H
4	O		K-LINE
5	G		GROUND
6	GR		IGNITION POWER SUPPLY
7	L		BACK-UP LAMP RELAY
8	BR		CANL
9	Y		STARTER RELAY
10	W/B		GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FM-M2



Terminal No.	Color	Wire	Signal Name [Specification]
1A	BG		-
2A	G		-
3A	L		-
4A	R		-
5A	V		-
6A	Y		-
7A	R		-
8A	L		-


LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]


LANE DEPARTURE PREVENTION

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
11	SB	-
12	P	-
13	L	-
14	P	-
16	BG	-

Connector No.	M29
Connector Name	WARNING SYSTEMS SWITCH
Connector Type	TK08FGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	SB	-
3	Y	-
4	R	-
5	R	-
6	B	-
7	V	-

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
24	P	-
25	SB	-
26	B	-
31	L	-
32	V	-
33	B	-
34	G	-

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	B	GROUND
8	GR	IGN

Connector No.	M45
Connector Name	LANE DEPARTURE WARNING BUZZER
Connector Type	NS04FRC-BS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	B	-


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH08FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	P	AIR BAG SIGNAL
10	G	SECURITY INDICATOR SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
21	R	IGNITION SIGNAL
24	BR	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	PASSENGER SEAT BELT WARNING SIGNAL

31	L	WASHER LEVEL SWITCH SIGNAL
34	B	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	SB	ENTER SWITCH SIGNAL
38	L	TRIP AIR RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (+)

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH08FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
6	BG	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP.)
20	L	ION SENSOR SIGNAL
23	Y	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	PADDLE SHIFTER DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER->AMP.)
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	BLOWER MOTOR CONTROL SIGNAL

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

LANE DEPARTURE PREVENTION

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20				

Terminal No.	Color	Wire	Signal Name [Specification]
41	V		ACC POWER SUPPLY
42	Y		FUEL LEVEL SENSOR SIGNAL
43	R		INTAKE SENSOR SIGNAL
44	LG		IN-VEHICLE SENSOR SIGNAL
45	P		AMBIENT SENSOR SIGNAL
46	BG		SUNLOAD SENSOR SIGNAL
47	V		GAS SENSOR SIGNAL
53	G		IGNITION POWER SUPPLY
54	BG		BATTERY POWER SUPPLY
55	B		GROUND
56	L		CAN-H
57	W		BRAKE FLUID LEVEL SWITCH SIGNAL
58	B		FUEL LEVEL SENSOR GROUND
59	GR		INTAKE SENSOR GROUND
60	L		IN-VEHICLE SENSOR GROUND
61	BR		AMBIENT SENSOR GROUND
62	SB		SUNLOAD SENSOR GROUND
63	R		ION MODE SIGNAL
65	BG		ECV SIGNAL
69	L		A/C LAN SIGNAL
70	R		EACH DOOR MOTOR POWER SUPPLY
71	B		GROUND
72	P		CAN-L

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20				

Terminal No.	Color	Wire	Signal Name [Specification]
1	V		
2	BR		
3	GR		
4	SHIELD		
5	G		
6	BR		
9	P		
10	G		
11	Y		
12	BR		
13	L		
14	L		
15	R		
16	R		
17	B		
20	BG		

Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Terminal No.	Color	Wire	Signal Name [Specification]
1	L		
2	P		
4	B		
5	W		

6	GR	-
7	SB	-
8	LG	-
9	SHIELD	-
10	R	-
11	G	-
15	R	-
16	V	-

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

	99	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	00	90	80	70	60	50	40	30	20	10	0
---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---

Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	-
2	P	-
4	BR	-
5	GR	-
7	SL	-
8	Y	-
9	SHIELD	-
10	R	-
11	G	-
15	R	-
16	V	-

Terminal	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	SB	WARNING SYSTEMS ON INDICATOR
3	V	WARNING SYSTEMS SWITCH
4	L	CAN-H
5	B	GROUND
6	R	LANE DEPARTURE WARNING BUZZER
7	Y	IGNITION POWER SUPPLY
8	P	CAN-L

2015 QX70

LANE CAMERA UNIT

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

- If the vehicle is parked in direct sunlight under high temperature conditions [approximately over 104°F (40°C)] and then started, the system may sound a buzzer and cancel automatically. In this case warning systems ON indicator will blink.
- When the interior temperature is reduced, warning systems ON indicator is turned ON.

When using LDP

- If the vehicle is parked in direct sunlight under high temperature conditions [approximately over 104°F (40°C)] and then started, the system may sound a buzzer and cancel automatically. In this case LDP ON indicator lamp will blink.
- When the interior temperature is reduced, LDP ON indicator lamp is turned ON.

DTC Inspection Priority Chart

INFOID:0000000010576774

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	• U0122: VDC CAN CIR1(LDP) • U0416: VDC CAN CIR2(LDP)
3	C1B00: CAMERA UNIT MALF
4	• C1B01: CAM AIMING INCOMP • C1B02: VHCL SPD DATA MALF • C1B03: ABNRML TEMP DETECT • C1B07: ABS DIAGNOSIS

DTC Index

INFOID:0000000010576775

DTC		Lane departure warning lamp	Warning systems ON indicator	LDP ON indicator lamp	Fail-safe	Reference page
C1B00	CAMERA UNIT MALF	ON	—	—	×	DAS-280
C1B01	CAM AIMING INCOMP	Blink	—	—	×	DAS-281
C1B02	VHCL SPD DATA MALF	ON	—	—	×	DAS-282
C1B03	ABNRML TEMP DETECT	—	Blink (When using LDW)	Blink (When using LDP)	×	DAS-283
C1B07	ABS DIAGNOSIS	ON	—	—	×	DAS-284
U1000	CAN COMM CIRCUIT	ON	—	—	×	DAS-285
U1010	CONTROL UNIT (CAN)	ON	—	—	×	DAS-286
U0122	VDC CAN CIR1 (LDP)	ON	—	—	×	DAS-287
U0416	VDC CAN CIR2 (LDP)	ON	—	—	×	DAS-289

×: Applicable

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000010955623

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
SLCT LVR POSI	A/T selector lever position	P position R position N position D position	P R N D
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	Vehicle stopped	Approx. 0 d/s
		Vehicle turning right	Negative value
		Vehicle turning left	Positive value
OFF SW	VDC OFF switch signal status	When VDC OFF switch ON (VDC OFF indicator lamp ON)	On
		When VDC OFF switch OFF (VDC OFF indicator lamp OFF)	Off
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Vehicle turning right	Negative value
		Vehicle turning left	Positive value

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
STR ANGLE SIG	Steering angle detected by steering angle sensor	Driving straight	±2.5°
		Turn 90° to right	Approx. +90°
		Turn 90° to left	Approx. -90°
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	Approx. 0 to 300 bar
ENGINE RPM	With engine running	With engine stopped	0 [tr/min (rpm)]
		Engine running	Almost in accordance with tachometer display
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY (Note 2)	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 3)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
OFF LAMP	VDC OFF indicator lamp (Note 3)	When VDC OFF indicator lamp is ON	On
		When VDC OFF indicator lamp is OFF	Off
SLIP/VDC LAMP	VDC warning lamp (Note 3)	When VDC warning lamp is ON	On
		When VDC warning lamp is OFF	Off
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off
PARK BRAKE SW	Parking brake switch signal status	Parking brake switch is active	On
		Parking brake switch is inactive	Off
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off
USV [FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
USV [FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
HSV [FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV [FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
BST OPER SIG	Booster operation signal	Booster is active	On
		Booster is inactive	Off
V/R OUTPUT (Note 2)	Solenoid valve relay activated	When the solenoid valve relay is active (When ignition switch OFF)	On
		When the solenoid valve relay is not active (in the fail-safe mode)	Off
M/R OUTPUT	Actuator motor and motor relay activated	When the actuator motor and motor relay are active ("ACTIVE TEST" in "ABS" with CONSULT)	On
		When the actuator motor and motor relay are inactive	Off
LDP) APP SEN	Accelerator pedal position sensor status	Accelerator pedal is not depressed (Ignition switch ON)	0 %
		Depress accelerator pedal (Ignition switch ON)	0 - 100 %
LDP) ICC MAIN SW	ICC main switch	ICC main switch is ON	On
		ICC main switch is OFF	Off
LDP) LDP ON SW	Dynamic driver assistance switch	Dynamic driver assistance switch is ON	On
		Dynamic driver assistance switch is OFF	Off
LDP) WIPER SIGNAL	Front wiper operation	Front wiper is OFF.	Stop
		Front wiper stops at fail-safe operation	PRTCT
		Front wiper INT is operating.	1low
		Front wiper LO is operating.	Low
		Front wiper HI is operating.	High
LDP) BRAKE SW	Brake switch signal status	When brake pedal is not depressed	On
		When brake pedal is depressed	Off
LDP) STOP LMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
LDP) LDW SW	Warning systems switch condition	Warning systems switch is ON (Warning systems ON indicator is ON)	On
		Warning systems switch is OFF (Warning systems ON indicator is OFF)	Off
LDP) SHIFT POSITION	Shift position	Shift position is not received	Off
		Selector lever position	P/R/N/D
		When using manual mode	MM 1st – MM 7th

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
LDP) TURN SIGNAL	Turn signal operation	Turn signal is OFF.	Off
		Turn signal lamp RH is blinking.	LH
		Turn signal lamp LH is blinking.	RH
		Turn signal lamp LH and RH are blinking.	LH&RH
LDP)YAW ORDER (Note 4)	Calculated target yaw moment status	LDP is controlling to right side deviation	Negative value
		LDP is controlling to left side deviation	Positive value
LDP) WARN REQ (Note 4)	Lane departure warning request status	Lane departure warning is operating. (When using LDP)	On
		Lane departure warning is not operating.	Off
LDP)WARN CONTROL (Note 4)	Warning main controller status	When using LDP	On
		When using LDW	Off
LDP)REDY SIGNAL (Note 4)	LDP ready status	LDP control is ready.	On
		LDP control is not ready.	Off
LDP)STATUS SIGNAL (Note 4)	LDP control status	LDP control is standby.	STANDBY
		Lane departure warning is operating. (When using LDP)	WARN
		LDP control is stopped.	MASK
		LDP control is OFF.	Off
LDP)CAMERA LOST (Note 4)	Lane marker detected condition	Both side lane markers are detected.	Detect
		Deviate side lane marker is lost.	Deviate
		Both side lane markers are lost.	Both
LDP)LANE UNCLEAR (Note 4)	Lane marker condition	Lane marker is unclear.	On
		Lane marker is clear.	Off

NOTE:

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
 - ABS warning lamp: Refer to [BRC-103, "Description"](#).
 - Brake warning lamp: Refer to [BRC-104, "Description"](#).
 - VDC warning lamp: Refer to [BRC-106, "Description"](#).
 - VDC OFF indicator lamp: Refer to [BRC-107, "Description"](#).
- 4: The item displayed on "SPECIFIC DATA MONITOR".

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

Wiring Diagram - BRAKE CONTROL SYSTEM -

INFOID:000000010955624

BRAKE CONTROL SYSTEM

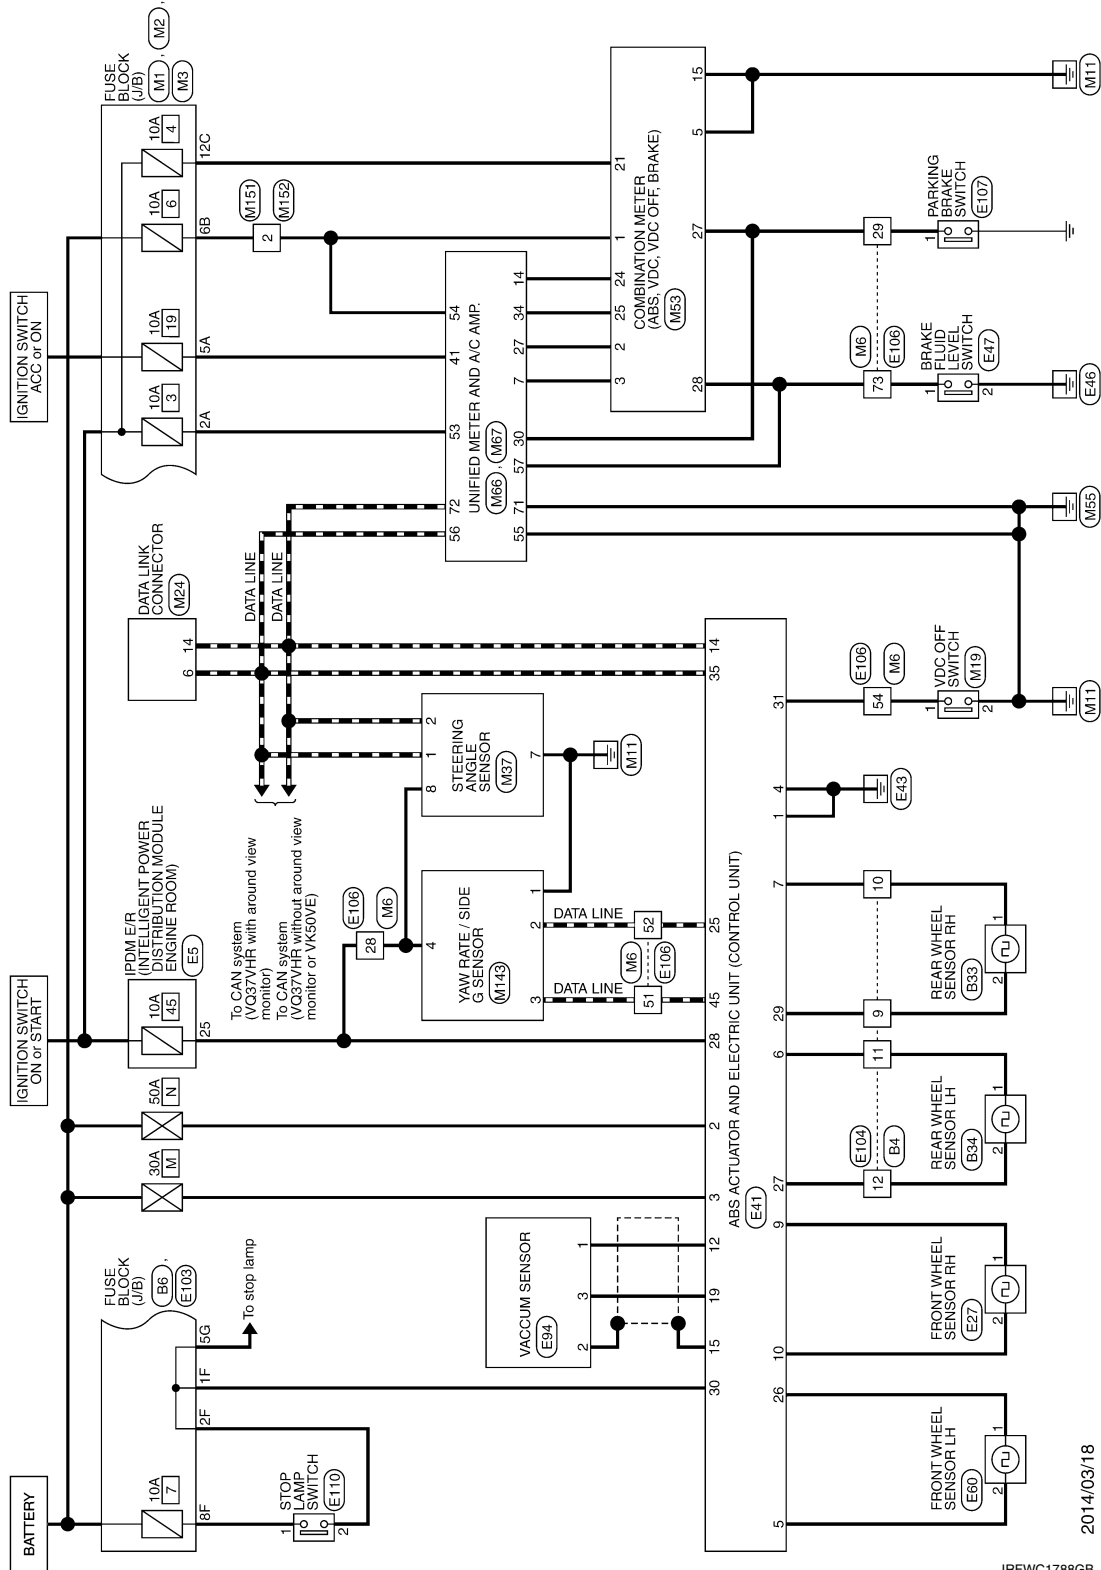

2014/03/18

JRFWC1788GB


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]


BRAKE CONTROL SYSTEM

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	SHIELD	-
4	G	-
5	G	-
6	R	-
7	R	-
8	B	-
9	LG	-
10	BR	-
11	BG	-
12	GR	-

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10G	W	-
11G	W	-
12G	GR	-
5G	LG	-
7G	BG	-

Connector No.	B33
Connector Name	REAR WHEEL SENSOR RH
Connector Type	RH2FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	LG	-

Connector No.	B34
Connector Name	REAR WHEEL SENSOR LH
Connector Type	AA202FB2



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	GR	-

Connector No.	E5
Connector Name	FROM ECU INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FM-CS12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E27
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	AA202FB1



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LBWR
3	R	LBWR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RL
9	B	DP RL
10	W	DS FL
12	L	VAC
14	P	CANL
15	SHIELD	AGND
19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	UZ
29	LG	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CANH
45	B	BUS-H

JRFWC1789GB

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

BRAKE CONTROL SYSTEM

Connector No.	E47
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	YV02FGY



Terminal No.	Wire	Signal Name [Specification]
1	B	-
2	B	-

Connector No.	E60
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	AA202FB1




Terminal No.	Wire	Signal Name [Specification]
1	R	-
2	Y	-

Connector No.	E94
Connector Name	VACUUM SENSOR
Connector Type	RH03FB




Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	SHIELD	-
3	P	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS

 

Terminal No.	Wire	Signal Name [Specification]
10F	L	-
1F	SB	-
2F	W	-
3F	Y	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E104
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS

 

Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	BR	-
3	V	-
4	Y	-
5	R	-
6	P	-
7	R	-
8	SHIELD	-
9	LG	-
10	BR	-
11	BG	-
12	GR	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH00FW-CS16-TM4



Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-

9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
21	Y	- [Without ICC]
22	BR	- [With ICC]
23	R	- [Without ICC]
24	V	- [With ICC]
25	G	- [Without ICC]
26	L	- [With ICC]
27	P	- [Without ICC]
28	Y	- [Without ICC]
29	SHIELD	-
30	G	-
31	LG	-
32	W	-
33	Y	-
34	BG	-
35	Y	-
36	Y	-
37	Y	-
38	GR	-
39	LG	-
40	LG	-
41	V	-
42	R	-
43	G	-
44	GR	-
45	W	-
46	L	-
47	P	-
48	SB	-
49	BR	-
50	B	-
51	Y	-
52	BG	-
53	R	-
54	SB	-
55	P	-
56	SB	-
57	V	-
58	G	-
59	Y	-
60	SB	-
61	V	-
62	P	-

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

BRAKE CONTROL SYSTEM

63	LG	-
64	L	-
65	BG	-
69	L	-
70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	IE107
Connector Name	PARKING BRAKE SWITCH
Connector Type	TB01FW




Terminal No.	1
Color	LG
Wire	-
Signal Name [Specification]	-

Connector No.	IE110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	1
Color	L
Wire	-
Signal Name [Specification]	-
Terminal No.	2
Color	W
Wire	-
Signal Name [Specification]	-
Terminal No.	3
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	4
Color	BR
Wire	-
Signal Name [Specification]	-

Connector No.	M1
Connector Name	FLUSE BLOCK (J/B)
Connector Type	NS06FW-J2

 

Terminal No.	1A
Color	BG
Wire	-
Signal Name [Specification]	-
Terminal No.	2A
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	3A
Color	L
Wire	-
Signal Name [Specification]	-
Terminal No.	4A
Color	R
Wire	-
Signal Name [Specification]	-
Terminal No.	5A
Color	V
Wire	-
Signal Name [Specification]	-
Terminal No.	6A
Color	Y
Wire	-
Signal Name [Specification]	-
Terminal No.	7A
Color	R
Wire	-
Signal Name [Specification]	-
Terminal No.	8A
Color	L
Wire	-
Signal Name [Specification]	-

Connector No.	M2
Connector Name	FLUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	1B
Color	P
Wire	-
Signal Name [Specification]	-
Terminal No.	3B
Color	LG
Wire	-
Signal Name [Specification]	-
Terminal No.	4B
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	5B
Color	BG
Wire	-
Signal Name [Specification]	-
Terminal No.	6B
Color	Y
Wire	-
Signal Name [Specification]	-
Terminal No.	7B
Color	L
Wire	-
Signal Name [Specification]	-
Terminal No.	8B
Color	R
Wire	-
Signal Name [Specification]	-
Terminal No.	9B
Color	BR
Wire	-
Signal Name [Specification]	-

Connector No.	M3
Connector Name	FLUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	10C
Color	L
Wire	-
Signal Name [Specification]	-
Terminal No.	11C
Color	LG
Wire	-
Signal Name [Specification]	-
Terminal No.	12C
Color	R
Wire	-
Signal Name [Specification]	-
Terminal No.	6C
Color	P
Wire	-
Signal Name [Specification]	-
Terminal No.	7C
Color	B
Wire	-
Signal Name [Specification]	-
Terminal No.	9C
Color	BG
Wire	-
Signal Name [Specification]	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	1
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	2
Color	BG
Wire	-
Signal Name [Specification]	-
Terminal No.	3
Color	LG
Wire	-
Signal Name [Specification]	- [Without Auto aircon seat]
Terminal No.	4
Color	SB
Wire	-
Signal Name [Specification]	- [With Auto aircon seat]
Terminal No.	5
Color	LG
Wire	-
Signal Name [Specification]	-
Terminal No.	6
Color	GR
Wire	-
Signal Name [Specification]	-
Terminal No.	7
Color	W
Wire	-
Signal Name [Specification]	-
Terminal No.	8
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	9
Color	P
Wire	-
Signal Name [Specification]	-
Terminal No.	10
Color	BR
Wire	-
Signal Name [Specification]	-
Terminal No.	11
Color	B
Wire	-
Signal Name [Specification]	-
Terminal No.	12
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	13
Color	R
Wire	-
Signal Name [Specification]	-
Terminal No.	14
Color	W
Wire	-
Signal Name [Specification]	-
Terminal No.	15
Color	SHIELD
Wire	-
Signal Name [Specification]	-
Terminal No.	16
Color	BR
Wire	-
Signal Name [Specification]	-
Terminal No.	17
Color	L
Wire	-
Signal Name [Specification]	-
Terminal No.	18
Color	P
Wire	-
Signal Name [Specification]	-
Terminal No.	19
Color	G
Wire	-
Signal Name [Specification]	- [Without ICC]
Terminal No.	20
Color	GR
Wire	-
Signal Name [Specification]	- [With ICC]
Terminal No.	21
Color	BR
Wire	-
Signal Name [Specification]	- [Without ICC]
Terminal No.	22
Color	L
Wire	-
Signal Name [Specification]	- [Without ICC]
Terminal No.	23
Color	R
Wire	-
Signal Name [Specification]	- [With ICC]
Terminal No.	24
Color	G
Wire	-
Signal Name [Specification]	-
Terminal No.	25
Color	L
Wire	-
Signal Name [Specification]	- [Without ICC]
Terminal No.	26
Color	P
Wire	-
Signal Name [Specification]	- [Without ICC]
Terminal No.	27
Color	Y
Wire	-
Signal Name [Specification]	- [With ICC]
Terminal No.	28
Color	SHIELD
Wire	-
Signal Name [Specification]	-
Terminal No.	29
Color	GR
Wire	-
Signal Name [Specification]	-
Terminal No.	30
Color	V
Wire	-
Signal Name [Specification]	-
Terminal No.	31
Color	BG
Wire	-
Signal Name [Specification]	-
Terminal No.	32
Color	W
Wire	-
Signal Name [Specification]	-

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

BRAKE CONTROL SYSTEM

33	Y	-
34	L	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	BG	-
50	LG	-
51	SB	-
52	Y	-
53	BG	-
54	BR	-
55	SB	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	BG	-
69	V	-
70	SHIELD	-
71	BG	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	BG	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-


95	G	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	M19
Connector Name	VOC OFF SWITCH
Connector Type	TK08FGY




14	P	-
16	BG	-

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-AH

 

Terminal No.	Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	B	GROUND
8	GR	IGN

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH08FW-AH

 


Terminal No.	Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
6	BG	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP)
20	L	ION SENSOR SIGNAL
23	Y	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	PADDLE SHIFTER DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER->AMP)
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	BLOWER MOTOR CONTROL SIGNAL

Terminal No.	Wire	Signal Name [Specification]
1	BG	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	P	AIR BAG SIGNAL
10	G	SECURITY INDICATOR SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
21	R	IGNITION SIGNAL
24	BR	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)

Terminal No.	Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
11	SB	-
12	P	-
13	L	-

26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
29	SB	PASSENGER SEAT BELT WARNING SIGNAL
30	G	WASHER LEVEL SWITCH SIGNAL
31	L	ILLUMINATION CONTROL SIGNAL
34	B	SELECT SWITCH SIGNAL
36	LG	ENTER SWITCH SIGNAL
37	SB	TRIP AB RESET SWITCH SIGNAL
38	L	ILLUMINATION CONTROL SWITCH SIGNAL (-)
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (+)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (+)

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH08FW-AH

 

JRFWC1792GB


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]


BRAKE CONTROL SYSTEM

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FM-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	V	GAS SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	BG	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CANH
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	B	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	ION MODE SIGNAL
65	BG	ECV SIGNAL
69	L	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L

Connector No.	M143
Connector Name	YAW RATE / SIDE G SENSOR
Connector Type	AZ204FB-S

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	Y	-
3	SB	-
4	G	-

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M152
Connector Name	WIRE TO WIRE
Connector Type	M03MMW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Fail-Safe

ABS/EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp and VDC warning lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp and VDC warning lamp will turn on. Simultaneously, the VDC/TCS/ABS become one of the following conditions of the fail-safe function.

JRFWC1793GB

INFOID:0000000010955625

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without VDC/TCS/ABS system.

NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without VDC/TCS/ABS/EBD system.

VDC/TCS SYSTEM

If VDC/TCS system malfunction electrically, VDC warning lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC/TCS control.

CAUTION:

If the Fail-Safe function is activated, then perform self-diagnosis for "ABS" with CONSULT.

LDW/LDP SYSTEM

- In case of malfunction in the LDW/LDP system, lane departure warning lamp is turned ON, and the condition of vehicle is the same as the condition of vehicles without LDW/LDP control.
- In case of malfunction in the VDC/TCS/ABS system, lane departure warning lamp is turned ON, and the condition of vehicle is the same as the condition of vehicles without LDW/LDP control.

DTC Index

INFOID:000000010955626

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-37, "DTC Logic"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-40, "DTC Logic"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-45, "DTC Logic"
C1110	CONTROLLER FAILURE	BRC-47, "DTC Logic"
C1111	PUMP MOTOR	BRC-48, "DTC Logic"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-50, "DTC Logic"
C1116	STOP LAMP SW	BRC-55, "DTC Logic"
C1120	FR LH IN ABS SOL	BRC-60, "DTC Logic"
C1121	FR LH OUT ABS SOL	BRC-62, "DTC Logic"
C1122	FR RH IN ABS SOL	BRC-60, "DTC Logic"
C1123	FR RH OUT ABS SOL	BRC-62, "DTC Logic"
C1124	RR LH IN ABS SOL	BRC-60, "DTC Logic"
C1125	RR LH OUT ABS SOL	BRC-62, "DTC Logic"
C1126	RR RH IN ABS SOL	BRC-60, "DTC Logic"
C1127	RR RH OUT ABS SOL	BRC-62, "DTC Logic"
C1130	ENGINE SIGNAL 1	BRC-64, "DTC Logic"
C1140	ACTUATOR RELAY	BRC-66, "DTC Logic"
C1142	PRESS SEN CIRCUIT	BRC-68, "DTC Logic"
C1143	ST ANG SEN CIRCUIT	BRC-70, "DTC Logic"
C1144	ST ANG SEN SIGNAL	BRC-72, "DTC Logic"
C1145	YAW RATE SENSOR	BRC-73, "DTC Logic"
C1146	SIDE G-SEN CIRCUIT	

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[LDW & LDP]

DTC	Items (CONSULT screen terms)	Reference
C1147	USV LINE [FL-RR]	BRC-76, "DTC Logic"
C1148	USV LINE [FR-RL]	
C1149	HSV LINE [FL-RR]	
C1150	HSV LINE [FR-RL]	
C1153	EMERGENCY BRAKE	BRC-47, "DTC Logic"
C1154	PNP POSI SIG	BRC-78, "DTC Logic"
C1155	BR FLUID LEVEL LOW	BRC-80, "DTC Logic"
C1156	ST ANG SEN COM CIR	BRC-83, "DTC Logic"
C1170	VARIANT CORDING	BRC-47, "DTC Logic"
C1185	ACC CONT (Note 2)	BRC-84, "DTC Logic"
C1197	VACUUM SENSOR	BRC-85, "DTC Logic"
C1198	VACUUM SEN CIR	BRC-87, "DTC Logic"
C1199	BRAKE BOOSTER	BRC-89, "DTC Logic"
C119A	VACUUM SEN VOLT	BRC-91, "DTC Logic"
U1000	CAN COMM CIRCUIT	BRC-93, "DTC Logic"
U1002	SYSTEM COMM	BRC-94, "DTC Logic"
U1100	ACC COMM CIRCUIT (Note 2)	BRC-96, "DTC Logic"
C1B00	LDP) CAMERA MALF (Note 3)	DAS-280, "DTC Logic"
C1B04	LDP) ICC STG SW MALF (Note 3)	DAS-292, "DTC Logic"
C1B05	LDP) APP SEN MALF (Note 3)	DAS-293, "DTC Logic"
C1B06	LDP) TCM MALF (Note 3)	DAS-294, "DTC Logic"
U0100	LDP) ECM CAN CIR2 (Note 3)	DAS-295, "DTC Logic"
U0101	LDP) TCM CAM CAN CIR2 (Note 3)	DAS-296, "DTC Logic"
U0104	LDP) ICC CAM CAN CIR2 (Note 3)	DAS-297, "DTC Logic"
U0405	LDP) ICC CAM CAN CIR1 (Note 3)	DAS-298, "DTC Logic"
U1500	LDP) CAM CAN CIR1 (Note 3)	DAS-299, "DTC Logic"
U1501	LDP) CAM CAN CIR2 (Note 3)	DAS-300, "DTC Logic"

NOTE:

- 1: With RAS models
- 2: With ICC models
- 3: With LDP models

LDW & LDP SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[LDW & LDP]

SYMPTOM DIAGNOSIS

LDW & LDP SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000010576780

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item/Reference page
Indicator/warning lamps do not illuminate when ignition switch OFF ⇒ ON.	Lane departure warning lamp (Yellow) does not illuminate.	- Lane departure warning lamp signal (CAN) - Unified meter and A/C amp. - Lane camera unit - Lane departure warning lamp (Combination meter)	- LANE CAMERA Active test "LANE DEPARTURE W/L" - METER/M&A Data monitor "LANE W/L"
	LDP ON indicator lamp (Green) does not illuminate.	- LDP ON indicator lamp signal (CAN) - Unified meter and A/C amp. - Lane camera unit - LDP ON indicator lamp (Combination meter)	- LANE CAMERA Active test "LDP ON IND" - METER/M&A Data monitor "LDP IND"
	Warning systems ON indicator (on the Warning systems switch) does not illuminate.	- Harness between lane camera unit and warning systems switch. - Warning systems ON indicator (Warning systems switch) - Lane camera unit	Warning systems ON indicator circuit DAS-304
	Lane departure warning lamp (Yellow) and LDP ON indicator lamp (Green) do not illuminate.	- Combination meter - Unified meter and A/C amp. - Lane camera unit	—
	All of indicator/warning lamps do not illuminate; - Lane departure warning lamp (Yellow) - LDP ON indicator lamp (Green) - LDW ON indicator	- Power supply and ground circuit of lane camera unit - Lane camera unit	Power supply and ground circuit of lane camera unit DAS-301

LDW & LDP SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[LDW & LDP]

Symptom		Possible cause	Inspection item/Reference page
LDW system is not activated. (Indicator/warning lamps illuminate when ignition switch OFF ⇒ ON.)	Warning systems ON indicator is not turned ON ⇔ OFF when operating warning systems switch.	• Harness between lane camera unit and warning systems switch. • Harness between warning systems switch and ground. • Lane camera unit	Warning systems switch circuit DAS-302
	Lane departure warning buzzer is not sounding. (Lane departure warning lamp is activated.)	• Harness between the fuse and lane departure warning buzzer. • Harness between lane camera unit and lane departure warning buzzer. • Harness between lane departure warning buzzer and ground. • Lane departure warning buzzer • Lane camera unit	Lane departure warning buzzer circuit DAS-306
	Lane departure warning lamp is not activated. (Lane departure warning buzzer is sounding.)	Lane camera unit	—
LDP system setting cannot be turned ON/OFF from the navigation screen.	• LDP system setting is not selectable on the navigation screen. • LDP system setting differs from the one set at the previous driving.	• ICC sensor integrated unit • AV control unit • Unified meter and A/C amp.	ICC Data monitor "LDP SELECT"
LDP system is not activated. (LDW system is functioning normally)	Indicator lamp is not turned ON ⇔ OFF when operating dynamic driver assistance switch.	• Dynamic driver assistance switch (ICC steering switch) • ICC sensor integrated unit	• Dynamic driver assistance switch (ICC steering switch) • ICC Data monitor "LDP SYSTEM ON"
	Warning is functioning but yawing is not functioning.	—	• Cause of auto-cancel DAS-271 • Normal operating condition DAS-333
	Yawing is functioning but warning is not functioning.	• ABS actuator and electric unit (control unit) • Lane camera unit	—
Warning functions are not timely. (Example)		• Camera aiming adjustment • Lane camera unit	Camera aiming adjustment DAS-253
Functions when changing the course in direction of the turn signal.		Turn signal • BCM • Lane camera unit	LANE CAMERA Data monitor "TURN SIGNAL"

NORMAL OPERATING CONDITION

Description

INFOID:0000000010576781

LANE DEPARTURE WARNING (LDW)

- LDW system is only a warning device to inform the driver of a potential unintended lane departure. It does not steer the vehicle or prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of the vehicle at all times.
- LDW system does not operate at speeds below approximately 72 km/h (45 MPH) or if it cannot detect lane markers.
- Excessive noise interfere with the warning sound, and the buzzer may not be heard.
- LDW system may not function properly under the following conditions:
 - On roads where there are multiple parallel lane markers; lane markers that are faded or not painted clearly; yellow painted lane markers; non-standard lane markers; or covered with water, dirt or snow, etc.
 - On roads where the discontinued lane markers are still detectable.
 - On roads where there are sharp curves.
 - On roads where there are sharply contrasting objects, such as shadows, snow, water, wheel ruts, seams or lines remaining after road repairs. (The LDW system could detect these items as lane markers.)
 - On roads where the traveling lane merges or separates.
 - When the vehicle's traveling direction does not align with the lane marker.
 - When traveling close to other vehicle in front of the vehicle, which obstructs the lane camera unit detection range.
 - When rain, snow or dirt adheres to the windshield in front of the lane camera unit.
 - When the headlights are not bright due to dirt on the lens or if the aiming is not adjusted properly.
 - When strong light enters the lane camera unit. (For example, the light directly shines on the front of the vehicle at sunrise or sunset.)
 - When a sudden change in brightness occurs. (For example, when the vehicle enters or exits a tunnel or under a bridge.)

LANE DEPARTURE PREVENTION (LDP)

- LDP system does not steer the vehicle or prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of vehicle at all times.
- LDP system is primarily intended for use on well-developed freeways or highways. It may not detect the lane markers in certain roads, weather or driving conditions.
- Using the LDP system under some conditions of road, lane marker or weather, or when driver changes lanes without using the turn signal could lead to an unexpected system operation. In such conditions, driver needs to correct the vehicle's direction with driver's steering operation to avoid accidents.
- When the LDP system is operating, avoid excessive or sudden steering maneuvers. Otherwise, driver could lose control of the vehicle.
- The LDP system does not operate at speeds below approximately 72 km/h (45 MPH) or if it cannot detect lane markers.
- The LDP system may not function properly under the following conditions, and do not use the LDP system:
 - During bad weather (rain, fog, snow, wind, etc.).
 - When driving on slippery roads, such as on ice or snow, etc.
 - When driving on winding or uneven roads.
 - When there is a lane closure due to road repairs.
 - When driving in a makeshift lane.
 - When driving on roads where the lane width is too narrow.
 - When driving without normal tire conditions (for example, tire wear, low tire pressure, installation of spare tire, tire chains, non-standard wheels).
 - When the vehicle is equipped with non-original brake parts or suspension parts.
- Excessive noise does interfere with the warning sound, and the buzzer may not be heard.
- The functions of the LDP system (warning and brake control assist) may or may not operate properly under the following conditions:
 - On roads where there are multiple parallel lane markers; lane markers that are faded or not painted clearly; yellow painted lane markers; non-standard lane markers or covered with water, dirt or snow, etc.
 - On roads where discontinued lane markers are still detectable.
 - On roads where there are sharp curves.
 - On roads where there are sharply contrasting objects, such as shadows, snow, water, wheel ruts, seams or lines remaining after road repairs (The LDP system could detect these items as lane markers.).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[LDW & LDP]

-
- On roads where the traveling lane merges or separates.
 - When the vehicle's traveling direction does not align with the lane marker.
 - When traveling close to other vehicle in front of the vehicle, which obstructs the lane camera unit detection range.
 - When rain, snow or dirt adheres to the windshield in front of the lane camera unit.
 - When the headlights are not bright due to dirt on the lens or if the aiming is not adjusted properly.
 - When strong light enters the lane camera unit (For example, the light directly shines on the front of the vehicle at sunrise or sunset.)
 - When a sudden change in brightness occurs (For example, when the vehicle enters or exits a tunnel or under a bridge.)
 - While the LDP system is operating, driver may hear a sound of brake operation. This is normal and indicates that the LDP system is operating properly.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010576782

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000010957849

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

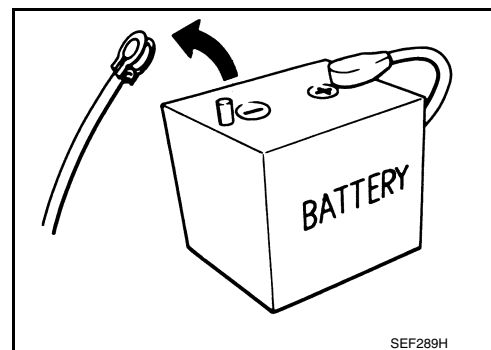

Precaution for LDW/LDP System Service

INFOID:0000000010576783

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Never use the LDP system when driving with free rollers or a chassis dynamometer.

PRECAUTIONS

< PRECAUTION >

[LDW & LDP]


- Never perform the active test while driving.
 - Never disassemble and remodel the lane camera unit.
 - Do not use the lane camera unit that is removed from the vehicle.
 - Never change LDW initial state ON $\Rightarrow$ OFF without the consent of the customer.
- To keep the LDW/LDP system operating properly, be sure to observe the following items:
- Always keep the windshield clean. The sensing capability of the camera unit depends on the condition of the windshield. See “Appearance and care” for cleaning instructions.
 - Never strike or damage the areas around the lane camera unit.
 - Never touch the camera lens.
 - Never attach a sticker (including transparent material) or install an accessory near the lane camera unit.
 - Never place reflective materials, such as a white paper or mirrors on the instrument panel. Reflection of the sunlight may adversely affect the camera unit's lane marker detection capability.

REMOVAL AND INSTALLATION

LANE CAMERA UNIT

Exploded View

INFOID:0000000010576784

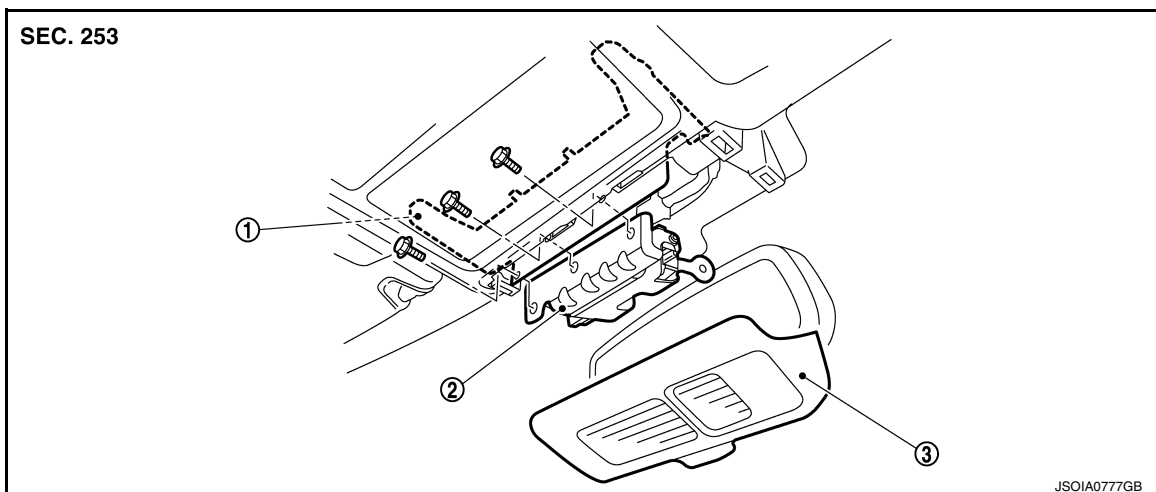

1. Lane camera bracket

2. Lane camera unit

3. Lane camera cover

Removal and Installation

INFOID:0000000010576785

REMOVAL

1. Remove the lane camera cover.
2. Remove the sun-visor holder and front roof finisher. And then disengage front side metal clip of the map lamp assembly. Keep a service area. Refer to [INT-25, "Exploded View"](#).
3. Remove the bolts.
4. Disconnect lane camera unit connector, and remove lane camera unit.

NOTE:

When replace the lane camera bracket, remove the headlining assembly.

INSTALLATION

Installation is the reverse order of removal.

CAUTION:

- Remove the camera lens cap for replacement.
- Never give an impact to the lane camera unit.
- Perform the camera aiming every time the lane camera unit is removed and installed. Refer to [DAS-253, "CAMERA AIMING ADJUSTMENT : Description"](#).

DAS

WARNING SYSTEMS SWITCH


< REMOVAL AND INSTALLATION >

[LDW & LDP]

WARNING SYSTEMS SWITCH

Exploded View

INFOID:0000000010576786

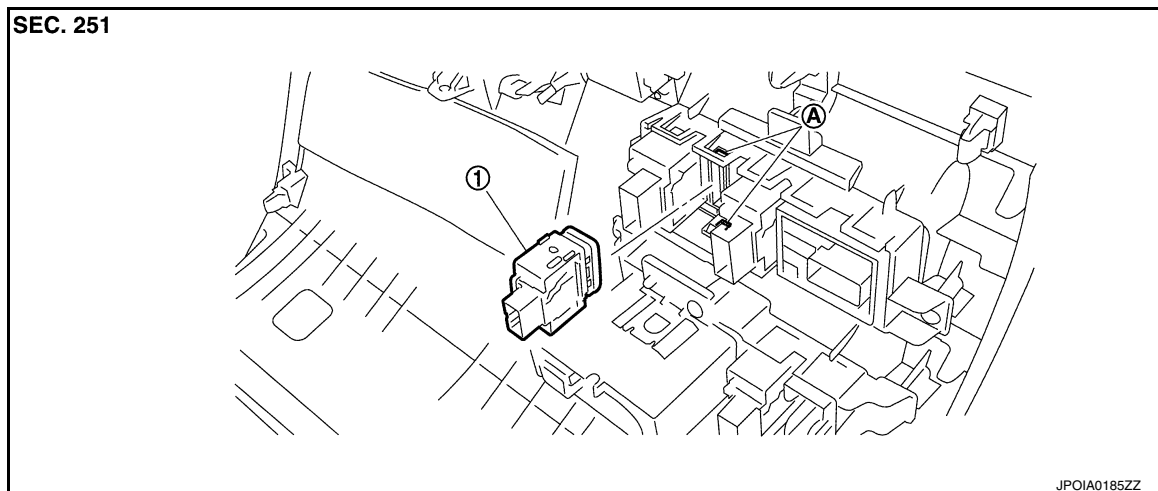

- 1. Warning systems switch
- A. Pawls

Removal and Installation

INFOID:0000000010576787

REMOVAL

1. Remove the instrument driver lower panel. Refer to [IP-12, "Exploded View"](#).
2. Disengage the pawls. Then remove warning systems switch.

INSTALLATION

Install in the reverse order of removal.

LANE DEPARTURE WARNING BUZZER


< REMOVAL AND INSTALLATION >

[LDW & LDP]

LANE DEPARTURE WARNING BUZZER

Exploded View

INFOID:0000000010576788

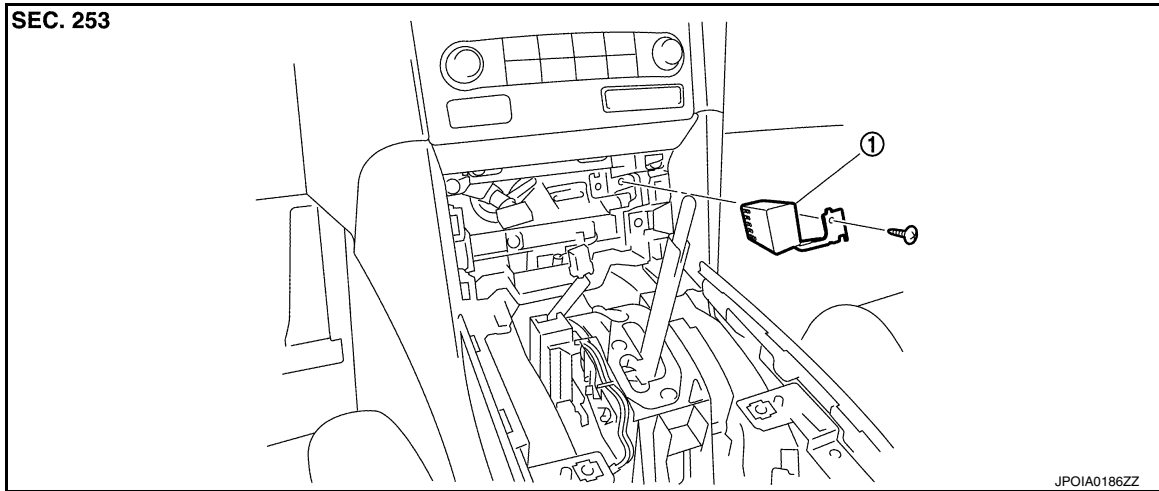

1. Lane departure warning buzzer

Removal and Installation

INFOID:0000000010576789

REMOVAL

1. Remove the console finisher assembly. Refer to [IP-23, "Exploded View"](#).
2. Remove the sonar control unit. Refer to [AV-374, "Exploded View"](#).
3. Remove the screw.
4. Disconnect the connector. And remove lane departure warning buzzer.

INSTALLATION

Installation is the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DYNAMIC DRIVER ASSISTANCE SWITCH

< REMOVAL AND INSTALLATION >

[LDW & LDP]

DYNAMIC DRIVER ASSISTANCE SWITCH

Exploded View

INFOID:0000000010576790

Dynamic driver assistance switch is integrated in the ICC steering switch. Refer to [SR-11, "Exploded View"](#).

NOTE:

Dynamic driver assistance switch is shared with DCA system.