

SECTION PCS

POWER CONTROL SYSTEM

CONTENTS

IPDM E/R	Description	18
SYSTEM DESCRIPTION	DTC Logic	18
	Diagnosis Procedure	18
RELAY CONTROL SYSTEM	POWER SUPPLY AND GROUND CIRCUIT	20
System Diagram	Diagnosis Procedure	20
System Description	ECU DIAGNOSIS INFORMATION	21
Component Parts Location	IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM)	21
POWER CONTROL SYSTEM	Reference Value	21
System Diagram	Wiring Diagram - IPDM E/R -	28
System Description	Fail-safe	31
Component Parts Location	DTC Index	33
SIGNAL BUFFER SYSTEM	PRECAUTION	34
System Diagram	PRECAUTIONS	34
System Description	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	34
Component Parts Location	Precautions for Removing Battery Terminal	34
POWER CONSUMPTION CONTROL SYS- TEM	Precaution for Procedure without Cowl Top Cover....	35
System Diagram	REMOVAL AND INSTALLATION	36
System Description	IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM)	36
Component Parts Location	Exploded View	36
DIAGNOSIS SYSTEM (IPDM E/R)	Removal and Installation	36
Diagnosis Description	POWER DISTRIBUTION SYSTEM	
CONSULT Function (IPDM E/R)	BASIC INSPECTION	38
DTC/CIRCUIT DIAGNOSIS	DIAGNOSIS AND REPAIR WORK FLOW	38
U1000 CAN COMM CIRCUIT	Work Flow	38
Description	SYSTEM DESCRIPTION	41
DTC Logic	POWER DISTRIBUTION SYSTEM	41
Diagnosis Procedure	System Description	41
B2098 IGNITION RELAY ON STUCK		
Description		
DTC Logic		
Diagnosis Procedure		
B2099 IGNITION RELAY OFF STUCK		

Component Parts Location	42	DTC Logic	63
Component Description	43	Diagnosis Procedure	63
DIAGNOSIS SYSTEM (BCM)	44	B261A PUSH-BUTTON IGNITION SWITCH	64
COMMON ITEM	44	Description	64
COMMON ITEM : CONSULT Function (BCM -		DTC Logic	64
COMMON ITEM)	44	Diagnosis Procedure	64
INTELLIGENT KEY	45	POWER SUPPLY AND GROUND CIRCUIT	66
INTELLIGENT KEY : CONSULT Function (BCM -		BCM	66
INTELLIGENT KEY)	45	BCM : Diagnosis Procedure	66
DTC/CIRCUIT DIAGNOSIS	50	PUSH-BUTTON IGNITION SWITCH	67
U1000 CAN COMM CIRCUIT	50	Description	67
BCM	50	Component Function Check	67
BCM : Description	50	Diagnosis Procedure	67
BCM : DTC Logic	50	Component Inspection	69
BCM : Diagnosis Procedure	50	PUSH-BUTTON IGNITION SWITCH POSI-	
IPDM E/R	50	TION INDICATOR	70
IPDM E/R : Description	50	Description	70
IPDM E/R : DTC Logic	50	Component Function Check	70
IPDM E/R : Diagnosis Procedure	50	Diagnosis Procedure	70
U1010 CONTROL UNIT (CAN)	52	POWER DISTRIBUTION SYSTEM	72
BCM	52	Wiring Diagram - PDS (POWER DISTRIBUTION	
BCM : DTC Logic	52	SYSTEM) -	72
BCM : Diagnosis Procedure	52	ECU DIAGNOSIS INFORMATION	81
B2553 IGNITION RELAY	53	BCM (BODY CONTROL MODULE)	81
Description	53	Reference Value	81
DTC Logic	53	Wiring Diagram - BCM -	103
Diagnosis Procedure	53	Fail-safe	118
B260A IGNITION RELAY	55	DTC Inspection Priority Chart	119
Description	55	DTC Index	120
DTC Logic	55	IPDM E/R (INTELLIGENT POWER DISTRI-	
Diagnosis Procedure	55	BUTION MODULE ENGINE ROOM)	122
B2614 ACC RELAY	57	Reference Value	122
Description	57	Wiring Diagram - IPDM E/R -	129
DTC Logic	57	Fail-safe	132
Diagnosis Procedure	57	DTC Index	134
Component Inspection	58	PRECAUTION	135
B2615 BLOWER RELAY CIRCUIT	59	PRECAUTIONS	135
Description	59	Precaution for Supplemental Restraint System	
DTC Logic	59	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
Diagnosis Procedure	59	SIONER"	135
Component Inspection	60	Precautions for Removing Battery Terminal	135
B2616 IGNITION RELAY CIRCUIT	61	Precaution for Procedure without Cowl Top Cover.	136
Description	61	SYMPTOM DIAGNOSIS	137
DTC Logic	61	PUSH-BUTTON IGNITION SWITCH DOES	
Diagnosis Procedure	61	NOT OPERATE	137
Component Inspection	62	Description	137
B2618 BCM	63	Diagnosis Procedure	137
Description	63		

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE.. 138	REMOVAL AND INSTALLATION 139
Diagnosis Procedure 138	PUSH BUTTON IGNITION SWITCH 139
	Removal and Installation 139

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

SYSTEM DESCRIPTION

RELAY CONTROL SYSTEM

System Diagram

INFOID:000000010581739

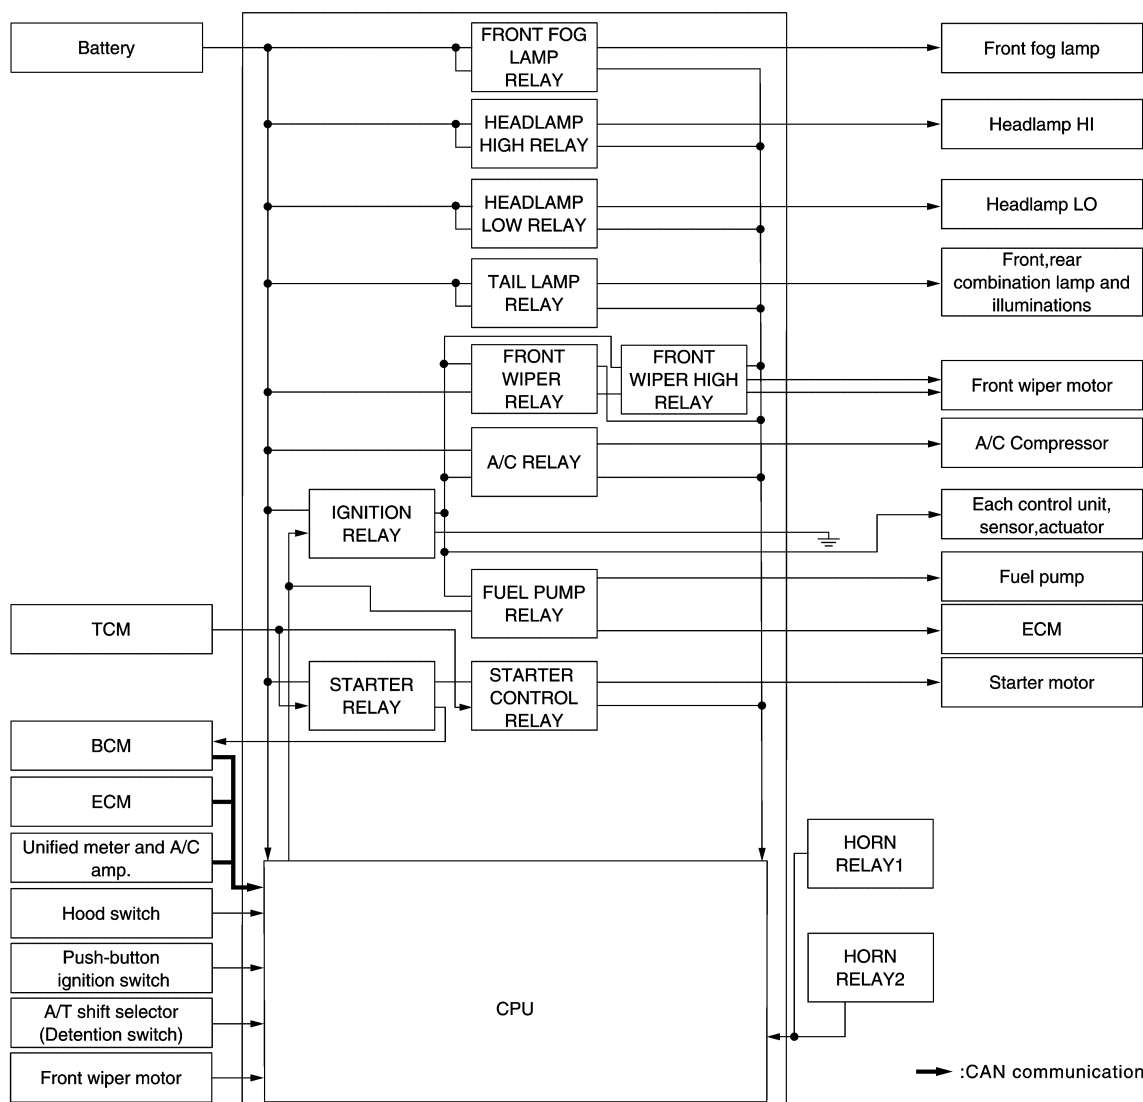

JMMIA0969GB

System Description

INFOID:000000010581740

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]


Control relay	Input/output	Transmit unit	Control part	Reference page
- Headlamp low relay - Headlamp high relay	- Low beam request signal - High beam request signal	BCM (CAN)	- Headlamp low - Headlamp high	EXL-9
Front fog lamp relay	Front fog light request signal	BCM (CAN)	Front fog lamp	EXL-23
Tail lamp relay	Position light request signal	BCM (CAN)	- Parking lamp - Side marker lamp - License plate lamp - Tail lamp	EXL-28
			Illuminations	INL-16
- Front wiper relay - Front wiper high relay	Front wiper request signal	BCM (CAN)	Front wiper	WW-6 (With rain sensor) WW-10 (Without rain sensor)
	Front wiper stop position signal	Front wiper motor		
- Horn relay 1 - Horn relay 2	- Theft warning horn request signal - Horn reminder signal	BCM (CAN)	- Horn (low) - Horn (high)	SEC-19
- Starter relay^{NOTE} - Starter control relay	Starter control relay signal	BCM (CAN)	Starter motor	SEC-83 , SEC-86
	Starter relay control signal	TCM		
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (magnet clutch)	HAC-57
Ignition relay	Ignition switch ON signal	BCM (CAN)	Ignition relay	PCS-16
	Vehicle speed signal	Unified meter and A/C amp. (CAN)		
	Push-button ignition switch signal	Push-button ignition switch		

NOTE:

BCM controls the starter relay.

Component Parts Location

INFOID:0000000010581741

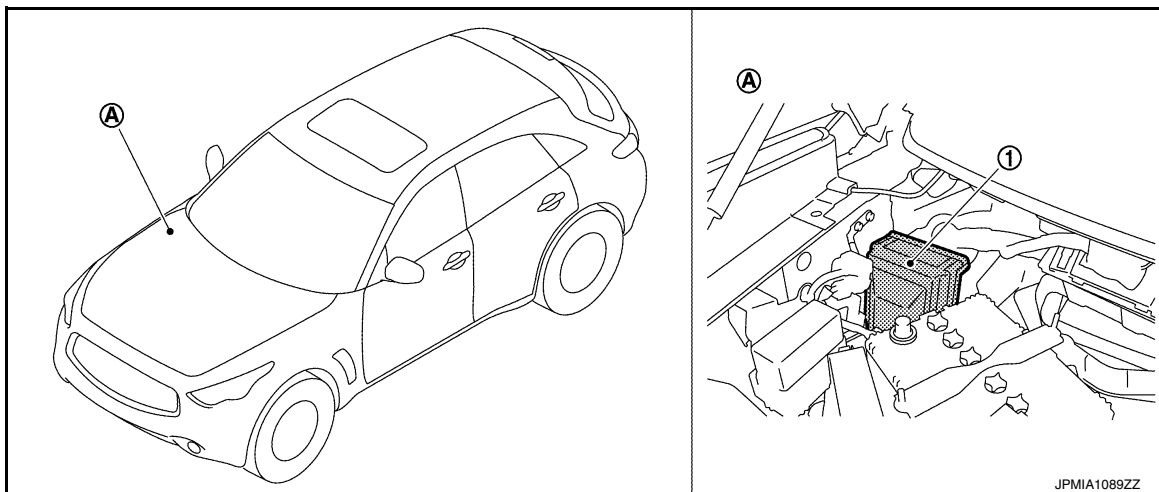


1. IPDM E/R

A. Engine room dash panel (RH)

POWER CONTROL SYSTEM

System Diagram

INFOID:0000000010581742

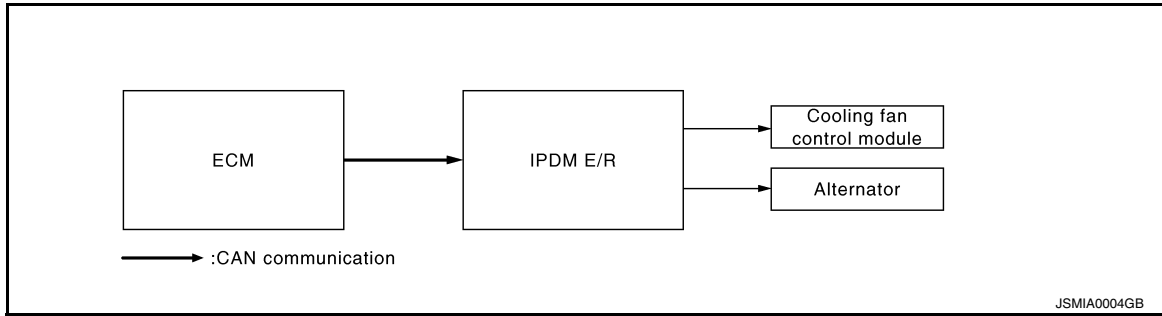

System Description

INFOID:0000000010581743

COOLING FAN CONTROL


IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-100, "System Diagram"](#).

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-12, "System Diagram"](#).

Component Parts Location

INFOID:0000000010581744

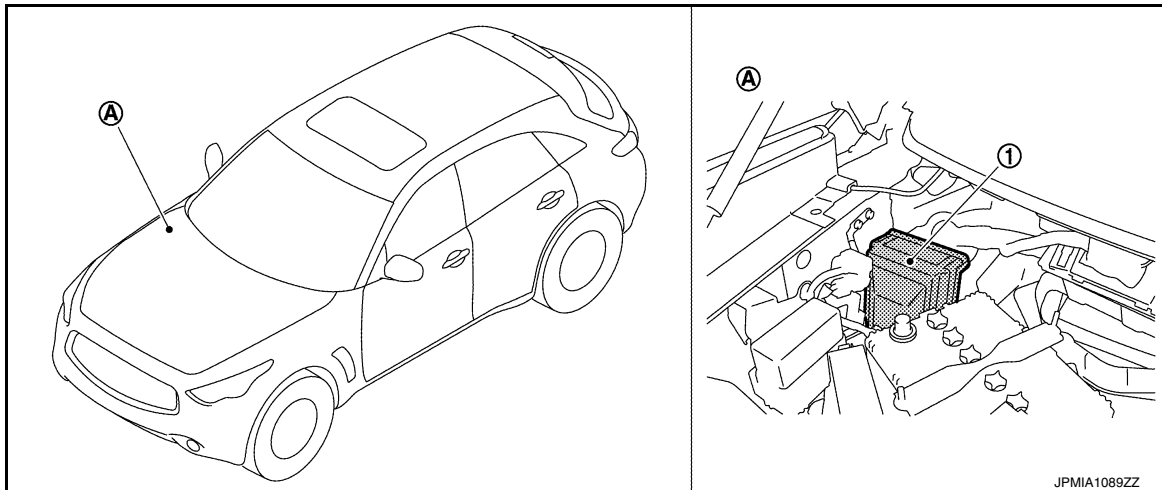

- 1. IPDM E/R
- A. Engine room dash panel (RH)

SIGNAL BUFFER SYSTEM


< SYSTEM DESCRIPTION >

[IPDM E/R]

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:000000010581745

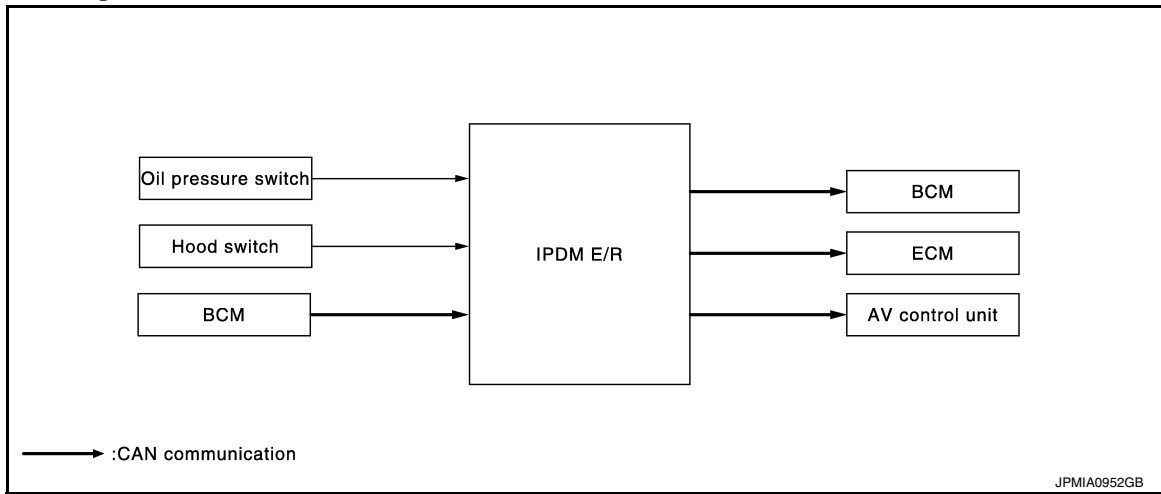


System Description

INFOID:000000010581746

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [MWI-25, "WARNING LAMPS/INDICATOR LAMPS : System Diagram"](#).
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to [SEC-96, "Description"](#).
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to [DEF-4, "System Diagram"](#).

Component Parts Location


INFOID:000000010581747

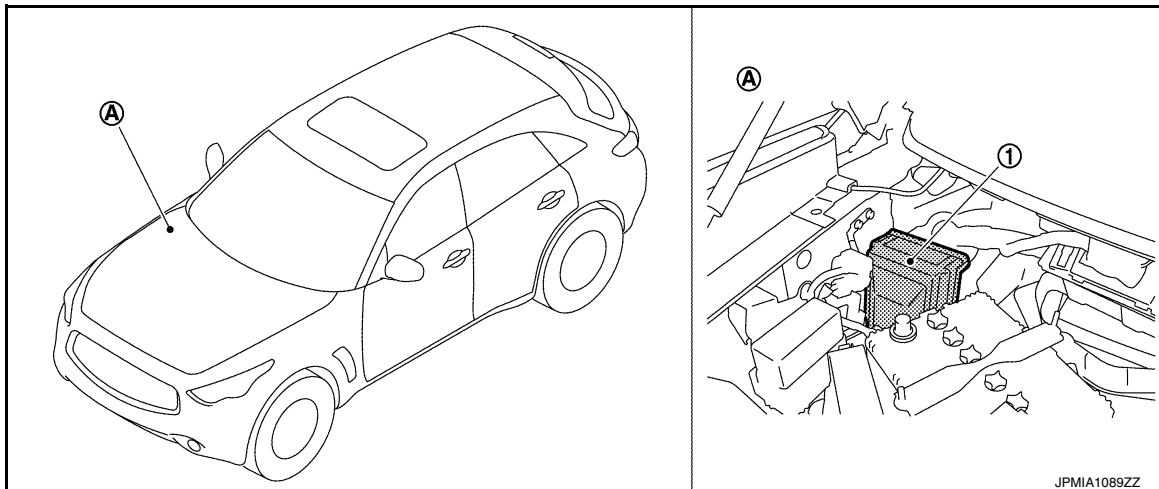

1. IPDM E/R
- A. Engine room dash panel (RH)

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

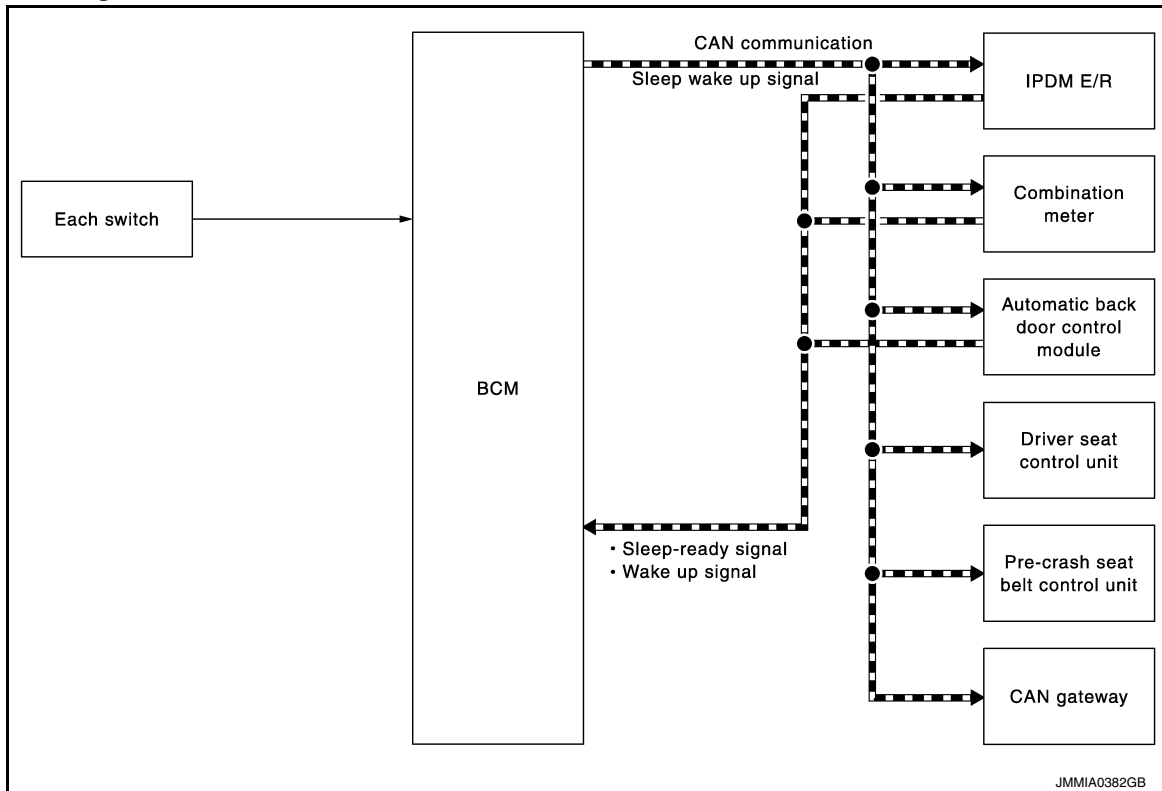

NOTE:

Combination meter is received via unified meter and A/C amp.

System Description

INFOID:0000000010581749

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
 - Outputting signals to actuators
 - Switches or relays operating
 - Hood switch status is kept 50 ms or less.
 - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

POWER CONSUMPTION CONTROL SYSTEM


[IPDM E/R]

< SYSTEM DESCRIPTION >

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
- Ignition switch ON
- The hood switch status changes.
- An output request is received from a control unit via CAN communication.

Component Parts Location

INFOID:0000000010581750

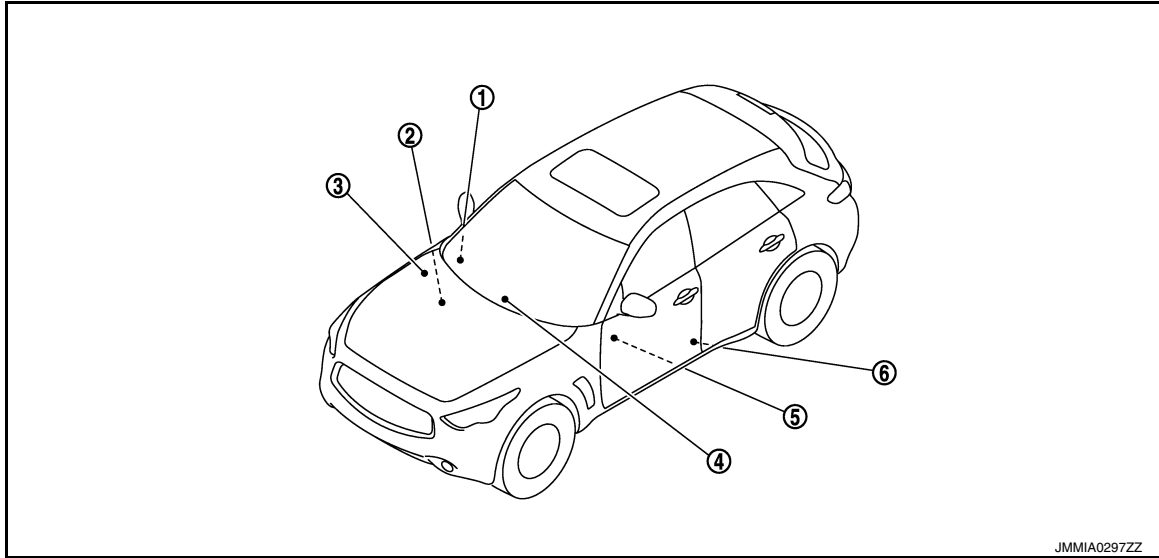

- | | | |
|---|--|---|
| 1. CAN gateway
Refer to LAN-118, "Component Parts Location" . | 2. BCM
Refer to BCS-10, "Component Parts Location" . | 3. IPDM E/R
Refer to PCS-5, "Component Parts Location" . |
| 4. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . | 5. Driver seat control unit
Refer to ADP-15, "AUTOMATIC DRIVE POSITIONER SYSTEM : Component Parts Location" . | 6. Pre-crash seat belt control unit
Refer to SBC-9, "Component Parts Location" . |

PCS

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:0000000010581751

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side marker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-107, "Component Function Check"](#).
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test
1	Front wiper	LO for 5 seconds → HI for 5 seconds
2	• Parking lamps • License plate lamps • Side marker lamps • Tail lamps • Front fog lamps	10 seconds
3	Headlamps	• LO 10 seconds • HI ON ⇔ OFF 5 times
4	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
5*	Cooling fan	MID for 5 seconds → HI for 5 seconds


*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Concept of auto active test

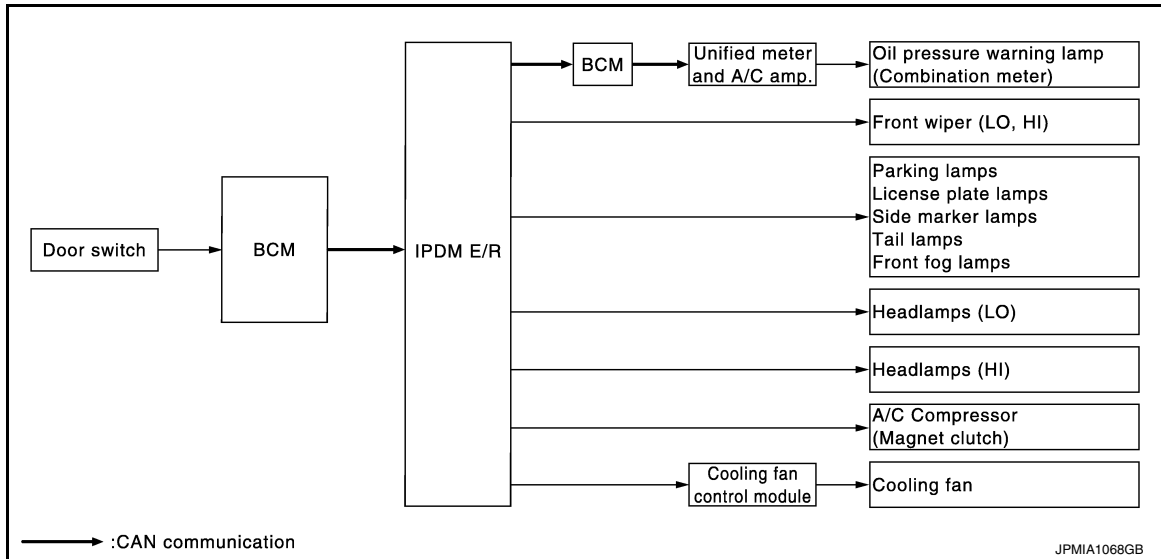

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate • Parking lamps • License plate lamps • Side marker lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES • Unified meter and A/C amp. signal input circuit • CAN communication signal between unified meter and A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and unified meter and A/C amp. • Combination meter

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents		Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	- ECM signal input circuit - CAN communication signal between ECM and IPDM E/R
		NO	- Cooling fan - Harness or connector between cooling fan and cooling fan control module - Cooling fan control module - Harness or connector between IPDM E/R and cooling fan control module - Cooling fan relay - Harness or connector between IPDM E/R and cooling fan relay - IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:0000000010581752

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-33, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	MAIN SIG- NALS	Description
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST /INHI/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.
S/L STATE [LOCK/UNLOCK/UNKWN]		NOTE: The item is indicated, but not monitored.
DTRL REQ [Off]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off]		NOTE: The item is indicated, but not monitored.

ACTIVE TEST

Test item

Test item	Operation	Description
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000010581753

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-35, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000010581754

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

Diagnosis Procedure

INFOID:0000000010581755

1.PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2098 IGNITION RELAY ON STUCK

Description

INFOID:0000000010581756

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000010581757

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON CIRC	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

YES >> Refer to [PCS-16, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581758

1.CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

What is the display history of DTC "B2098"?

"CRNT">> GO TO 2.

"PAST">> GO TO 5.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 1

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 2

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

1. Disconnect IPDM E/R connector.
2. Turn ignition switch ON
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).
NO >> Check the harness of the ignition relay control circuit for a short to power.

4.CHECK IGNITION RELAY CONTROL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

Is the inspection result normal?

- YES >> Perform the diagnosis procedure for DTC B260A. Refer to [PCS-55, "DTC Logic"](#).
NO >> Repair or replace harness.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

PCS

B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2099 IGNITION RELAY OFF STUCK

Description

INFOID:0000000010581759

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000010581760

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF CIRC	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

YES >> Refer to [PCS-18, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581761

1.CHECK FUSE

Check that all of the fuses installed on the downstream of the contact point side circuit of the ignition relay in IPDM E/R are not blown.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after replacing the affected circuit if a fuse is blown.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

Is the inspection result normal?

B2099 IGNITION RELAY OFF STUCK

[IPDM E/R]

< DTC/CIRCUIT DIAGNOSIS >

YES >> Replace IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK BATTERY VOLTAGE

Check battery voltage.

Which is the measurement result?

More than 12.4 V>>GO TO 4.

Less than 12.4 V>>Perform battery inspection. Refer to [PG-3. "How to Handle Battery"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000010581762

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	D
	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E4	1	
		Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	12		Existed
E6	41		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

ECU DIAGNOSIS INFORMATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000010581763

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (light is illuminated)	Front fog lamp switch OFF	Off
		• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]


Monitor Item	Condition		Value/Status
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	• Press the selector button with selector lever in P position • Selector lever in any position other than P	Off
	Release the selector button with selector lever in P position		On
S/L RLY -REQ	NOTE: The item is indicated, but not monitored.		Off
S/L STATE	NOTE: The item is indicated, but not monitored.		UNLOCK
DTRL REQ	NOTE: The item is indicated, but not monitored.		Off
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	Close the hood		Off
	Open the hood		On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	• Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM		On
HORN CHIRP	Not operating		Off
	Door locking with Intelligent Key (horn chirp mode)		On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.		Off

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

TERMINAL LAYOUT

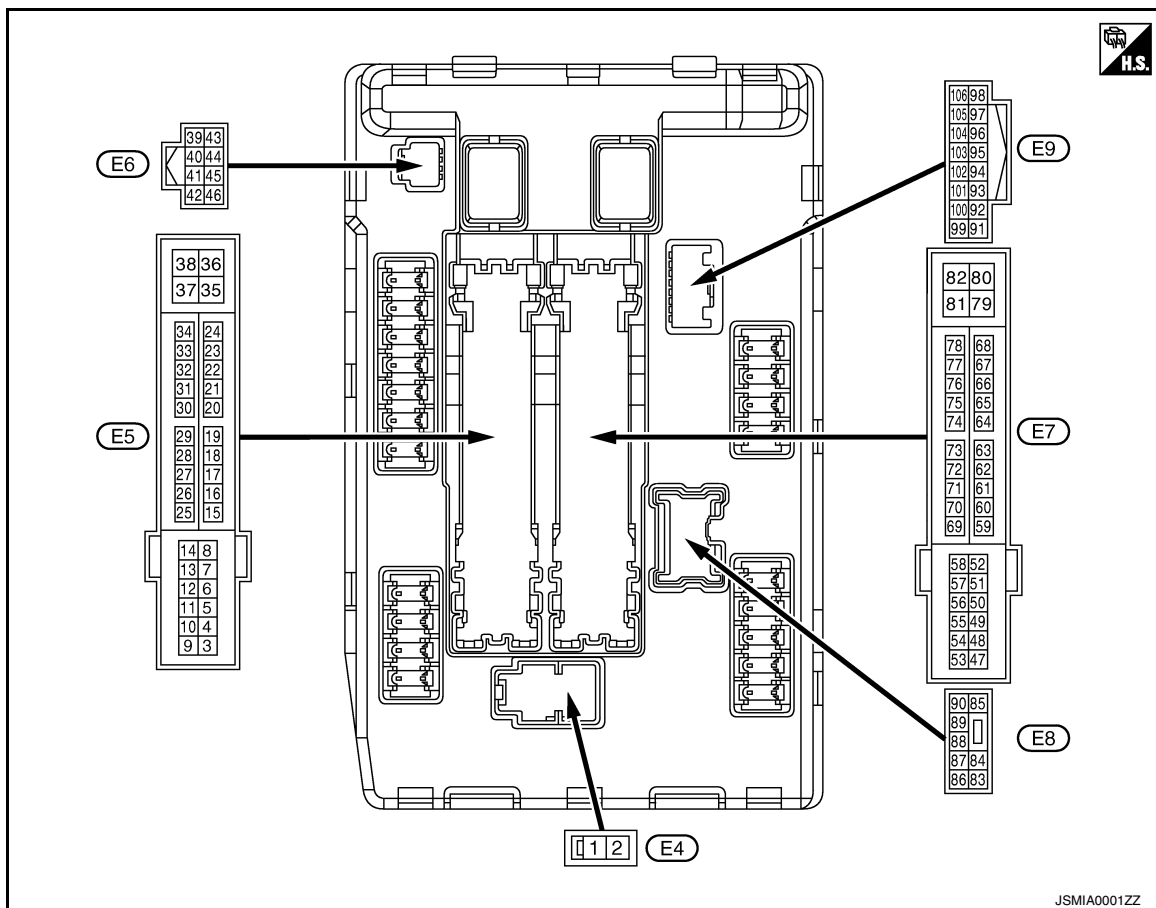

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch HI	Battery voltage
7 (R)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
10*1 (SB)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				- Ignition switch ON - Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)		Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON		0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				- Approximately 1 second after turning the ignition switch ON - Engine running		Battery voltage
16 (LG)	Ground	Front wiper stop position	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
26*2 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (BG)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (GR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B)	Ground	Ground	—	Ignition switch ON		0 V
42 (Y)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC		0 V
				Ignition switch ON		0.7 V
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	- Press the selector button (Selector lever P) - Selector lever in any position other than P	Battery voltage
					Release the selector button (selector lever P)	0 V
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (G)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
49 (W)*1 (SB)*3	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)	Battery voltage
51 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
52 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)	Battery voltage
54 (R)	Ground	Throttle control motor re- lay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)	Battery voltage
55 (BR)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage
56 (BG)*1 (V)*3	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
57 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
69 (W)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)	0 – 1.5 V
70 (BG)	Ground	Throttle control motor re- lay control	Output	Ignition switch ON → OFF	0 – 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 – 1.0 V
74 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
75 (Y)	Ground	Oil pressure switch	Input	Ignition switch ON	0 V
				Engine stopped Engine running	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N




O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

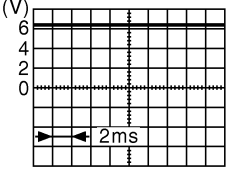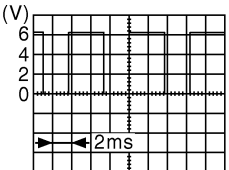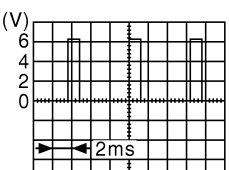Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
76 (P) ^{*1} (V) ^{*3}	Ground	Power generation command signal	Output	Ignition switch ON		 JPMIA0001GB 6.3 V
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0002GB 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0003GB 1.4 V
77 (B) ^{*1} (L) ^{*3}	Ground	Fuel pump relay control	Output	- Approximately 1 second after turning the ignition switch ON - Engine running		0 – 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (W)	Ground	Front fog lamp	Output	Lighting switch 2ND	- Front fog lamp switch ON - Daytime running light activated (Only for Canada)	Battery voltage
					Front fog lamp switch OFF	0 V
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	- Lighting switch HI - Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (Y)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	- Lighting switch HI - Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
91 (P)	Ground	Parking lamp	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 – 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V

*1: VK engine models

*2: Only for the models with ICC system

*3: VQ engine models

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Wiring Diagram - IPDM E/R -

INFOID:000000010581764

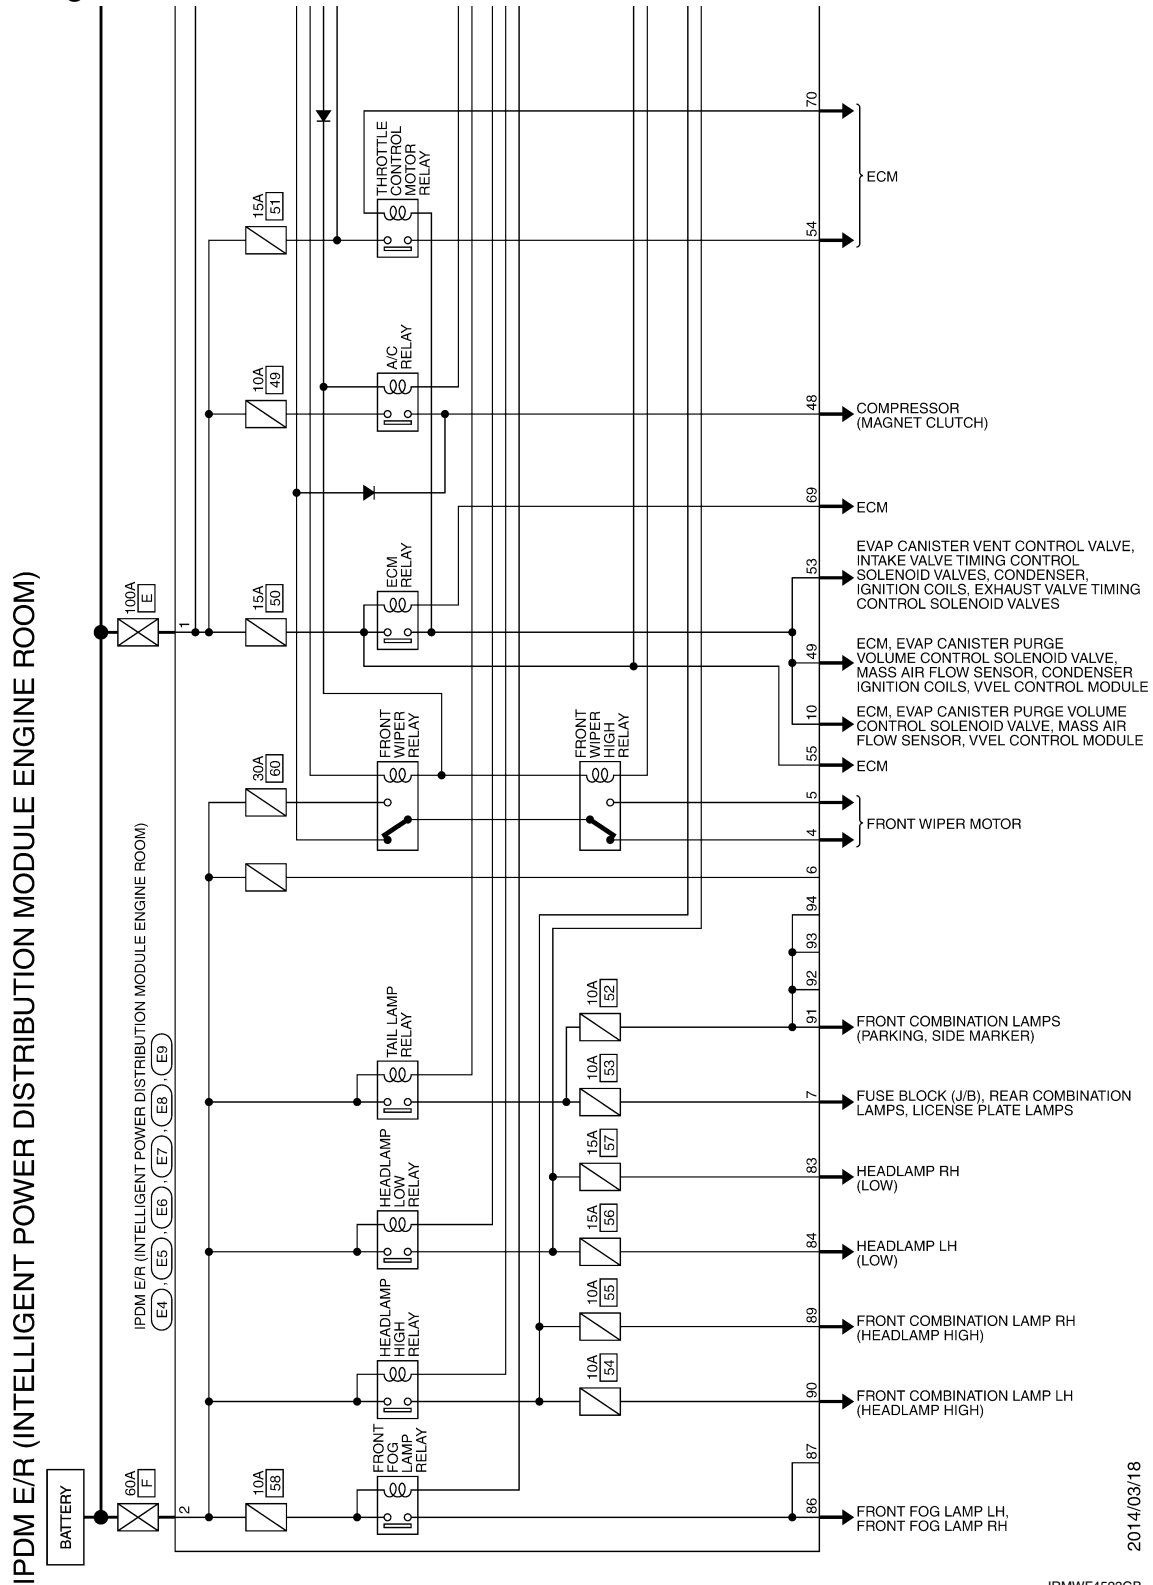


2014/03/18


JRMWF4523GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

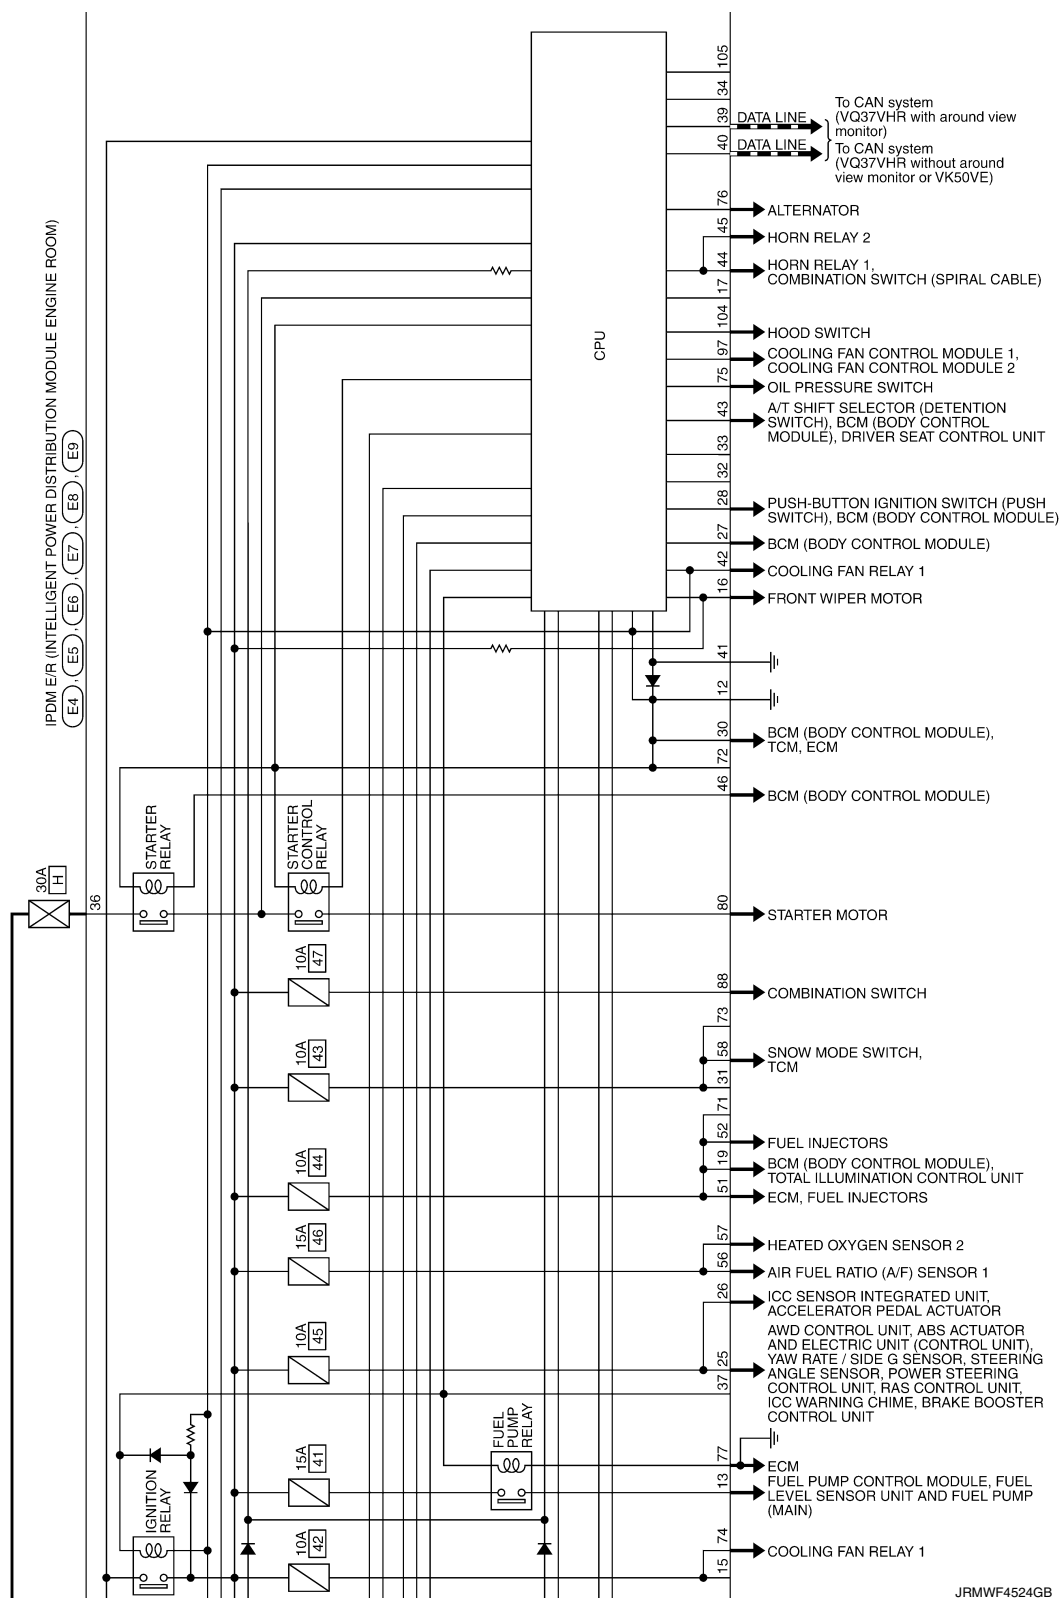

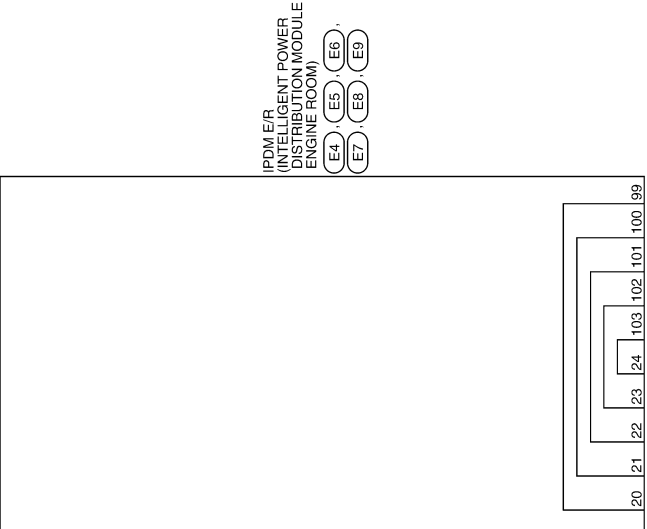


JRMWF4525GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Terminal No.	Color Of Wire	Signal Name [Specification]
91	P	-
97	V	-
104	LG	-


Terminal No.	Color Of Wire	Signal Name [Specification]
58	Y	-
69	W	-
70	BG	-
74	G	-
75	Y	-
76	P	- [With VK engine]
76	V	- [With VQ engine]
77	B	- [With VK engine]
77	L	- [With VQ engine]
80	W	-

Connector No.	Connector Name	Connector Type
E8	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	NS08FM-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	P	-
86	W	-
88	G	-
89	BR	-
90	Y	-

Connector No.	Connector Name	Connector Type
E9	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH16FM-NH

 


Connector No.	Connector Name	Connector Type
E6	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH08FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

Connector No.	Connector Name	Connector Type
E7	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH20FM-CS12-M4

 


Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	SB	- [With VQ engine]
49	W	- [With VK engine]
51	G	-
52	W	-
53	W	-
54	R	-
55	BR	-
56	BG	- [With VK engine]
56	V	- [With VQ engine]
57	LG	-

Connector No.	Connector Name	Connector Type
E4	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	L02FBMC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-

Connector No.	Connector Name	Connector Type
E5	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH20FM-CS12-M4-1V

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

JRMWF4526GB

INFOID:0000000010581765

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Control part	Fail-safe operation
Cooling fan	- Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON - Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	- Turns ON the headlamp low relay when the ignition switch is turned ON - Turns OFF the headlamp low relay when the ignition switch is turned OFF - Headlamp high relay OFF
- Parking lamps - License plate lamps - Side marker lamps - Illuminations - Tail lamps	- Turns ON the tail lamp relay when the ignition switch is turned ON - Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	- The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. - The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	- Detects DTC "B2098: IGN RELAY ON" - Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000010581766

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Reference
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC	—	PCS-18
B210B: STR CONT RLY ON CIRC	—	SEC-83
B210C: STR CONT RLY OFF CIRC	—	SEC-84
B210D: STARTER RLY ON CIRC	—	SEC-86
B210E: STARTER RLY OFF CIRC	—	SEC-88
B210F: INTRLCK/PNP SW ON	—	SEC-90
B2110: INTRLCK/PNP SW OFF	—	SEC-92

PCS

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010581767

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000011008499

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

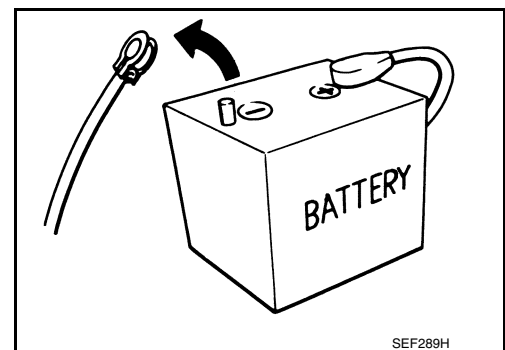

SEF289H

PRECAUTIONS


< PRECAUTION >

[IPDM E/R]

Precaution for Procedure without Cowl Top Cover

INFOID:0000000010581768

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

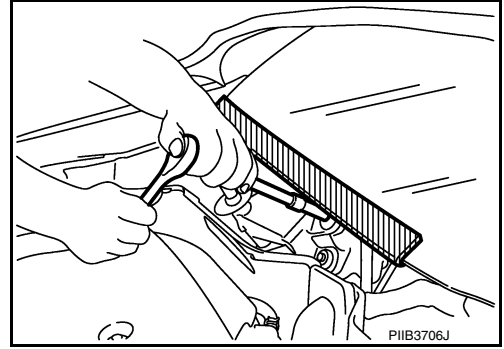

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

REMOVAL AND INSTALLATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

INFOID:0000000010581769

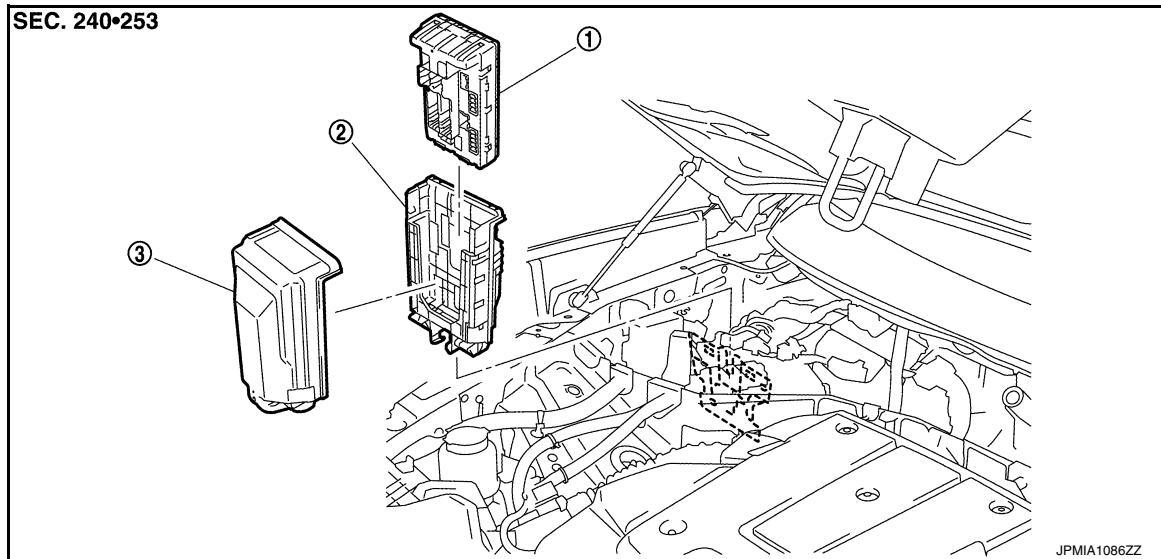

1. IPDM E/R

2. IPDM E/R cover B

3. IPDM E/R cover A

Removal and Installation


INFOID:0000000010581770

CAUTION:

IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove the cowl top cover (RH). Refer to [EXT-22, "Exploded View"](#).
3. Pull up the IPDM E/R assembly while pressing the pawls (A) on the back of the IPDM E/R cover B (1).

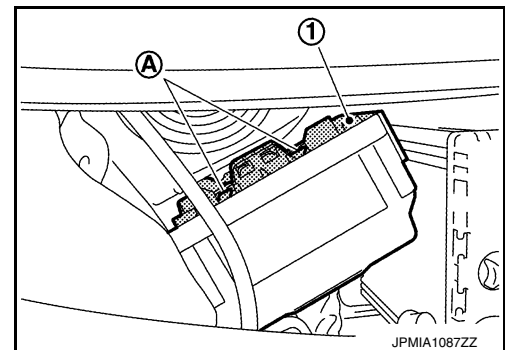


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< REMOVAL AND INSTALLATION >

[IPDM E/R]

4. Remove the IPDM E/R cover A (1) while pressing the pawls (A) at the lower end of the IPDM E/R cover A.
5. Disconnect the harness connector and remove the IPDM E/R (2).
6. Remove the IPDM E/R cover B.

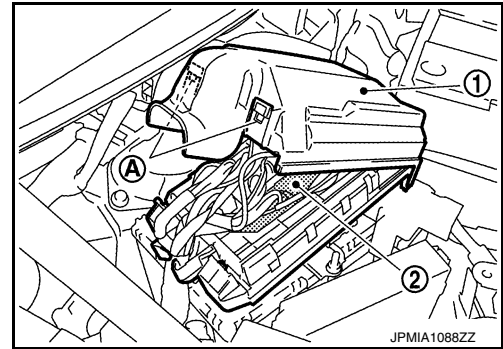

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000010581771

OVERALL SEQUENCE

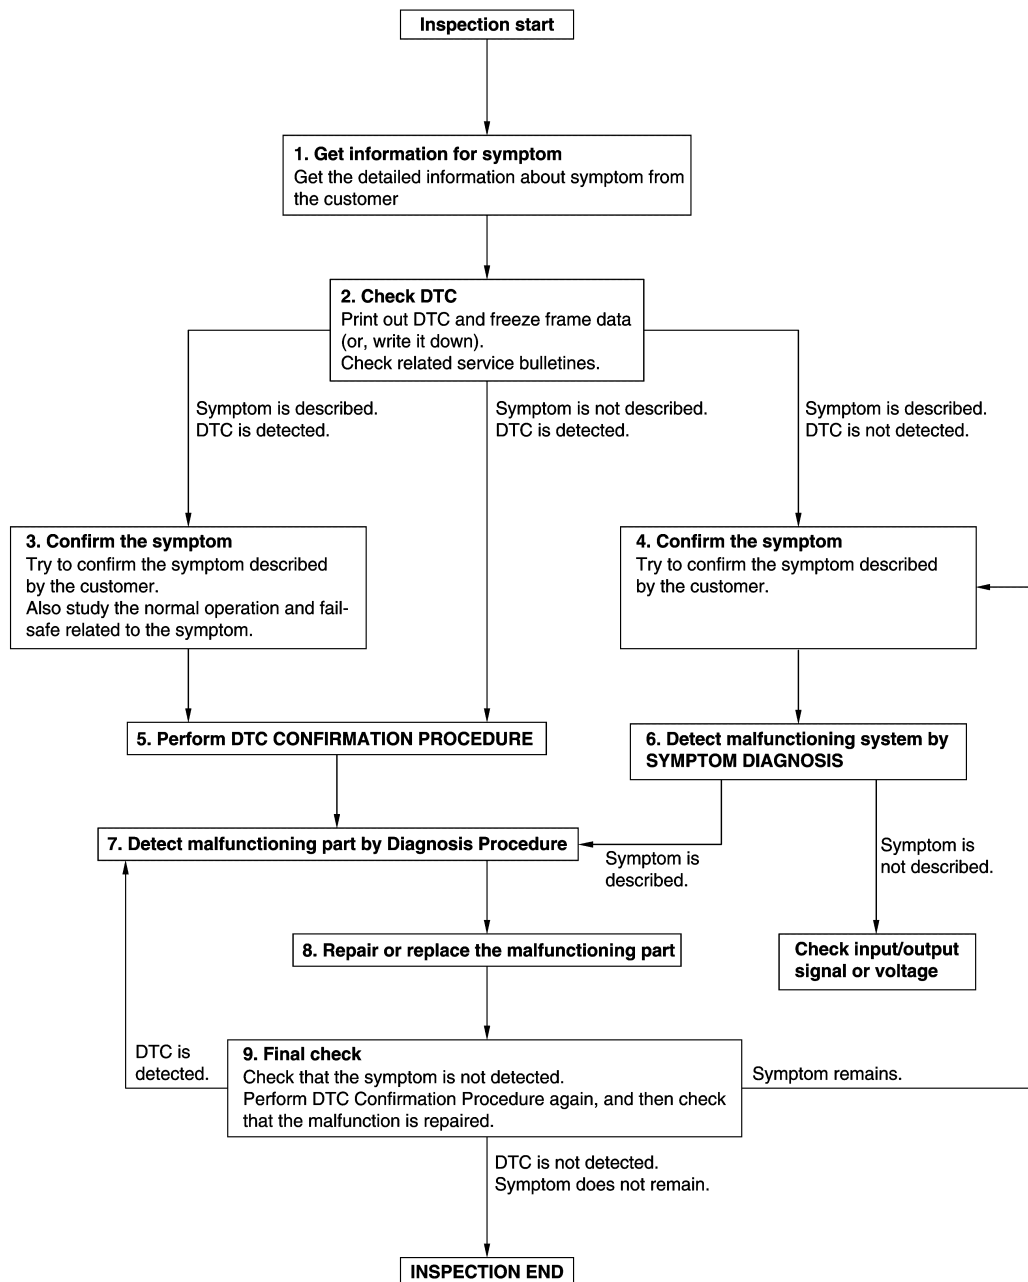

JMKIA8652GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-87, "DTC Inspection Priority Chart"](#), and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-47, "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

Inspect according to Diagnostic Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-47, "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

SYSTEM DESCRIPTION

POWER DISTRIBUTION SYSTEM

System Description

INFOID:0000000010581772

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
 - Intelligent Key is in the detection area of the inside key antenna
 - Insert Intelligent Key into the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
 - Ignition relay (built into IPDM E/R)
 - Ignition relay (inserted into fuse block)
 - ACC relay
 - Blower relay
- The power supply position changes due to the conditions of push-button ignition switch operation, brake pedal, clutch pedal, selector lever and vehicle speed.

NOTE:

- The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

BATTERY SAVER SYSTEM

When all of the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position

Reset Condition of Battery Saver System

If any of the following conditions are met the battery saver system is released and the steering will change automatically to the LOCK position from the OFF position.

- Opening any door
- Operating with door key cylinder on door lock
- Operating with request switch on door lock
- Operating with Intelligent Key on door lock

Press push-button ignition switch and ignition switch will change to the ACC position from the OFF position.

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operations.

Operation Enable Condition

- When an Intelligent Key is within the detection area of inside key antenna or when it is inserted into the key slot, the operation is as per the following.
- When starting the engine, the BCM monitors the following engine start conditions,
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed
- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pressed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→OFF.

Operation Condition

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal	Selector lever position	
LOCK → ACC	Not depressed	Any position	1
LOCK → ACC → ON	Not depressed	Any position	2

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal	Selector lever position	
LOCK → ACC → ON → OFF	Not depressed	Any position	3
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	1 [If the switch is pressed once, the engine starts from any power supply position (LOCK, ACC and ON)]
Engine is running → OFF (Engine stop)	—	P position	1
Engine is running → ACC (Engine stop)	—	Any position other than P (*2)	1
Engine stall return operation while driving	—	N position	1

*1: When the selector lever position is in the N position, the engine start condition is different according to the vehicle speed.


- At a vehicle speed of less than 4 km/h (2.5 MPH), the engine can start only when the brake pedal is depressed.
- At a vehicle speed of 4 km/h (2.5 MPH) or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)

*2: When the selector lever position is in any position other than the P position and when the vehicle speed is 5 km/h (3.1 MPH) or more, the engine stop condition is different.

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent an incorrect operation.)
- Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)

Component Parts Location

INFOID:0000000010581773

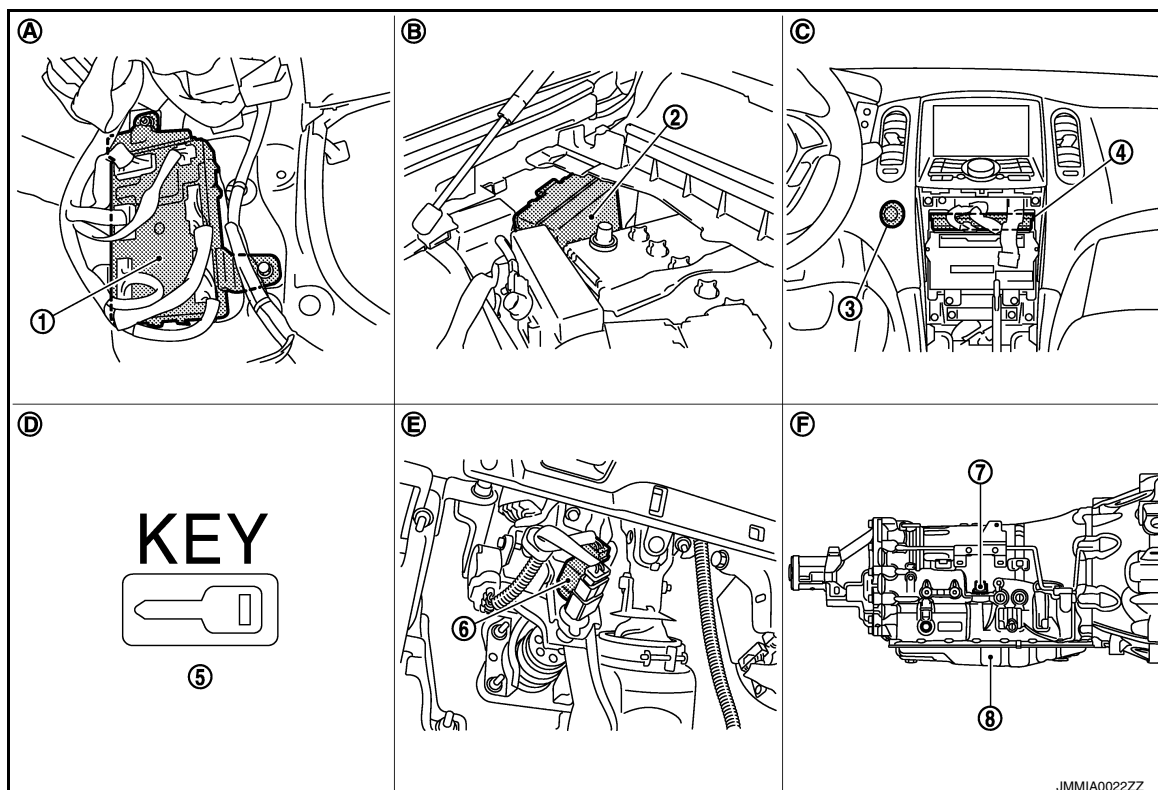

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

- | | | |
|--|---|--|
| 1. BCM M118, M119, M121, M122, M123 | 2. IPDM E/R E5, E6, F7 | 3. Push button ignition switch M50 |
| 4. Unified meter and A/C amp. M66, M67 | 5. Key warning lamp (Combination meter M53) | 6. Stop lamp switch E110 |
| 7. A/T assembly connector F51 | 8. TCM (built in A/T assembly) F151 | |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. View with the cluster lid C removed |
| D. Located on the combination meter | E. Behind the instrument assist lower panel | F. A/T assembly |

Component Description

INFOID:0000000010581774

Component	Reference
IPDM E/R	PCS-4
Ignition relay (built into IPDM E/R)	PCS-53
Ignition relay (inserted into fuse block)	PCS-53
Accessory relay	PCS-57
Blower relay	PCS-59
Stop lamp switch	SEC-55
Transmission range switch	SEC-69
Push-button ignition switch	PCS-67

PCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011008502

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	- Read and save the vehicle specification. - Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
- Intelligent Key system - Engine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)	B
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	C
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"	
	ACC>ON		While turning power supply position from "ACC" to "IGN"	D
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	E
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power supply position from "ACC" to "OFF"	F
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*	
	OFF>ACC		While turning power supply position from "OFF" to "ACC"	G
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*) to low power consumption mode	
	LOCK		Power supply position is "LOCK"*	I
	OFF		Power supply position is "OFF" (Ignition switch OFF)	
	ACC		Power supply position is "ACC" (Ignition switch ACC)	J
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)	
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)	K
	CRANKING		Power supply position is "CRANKING" (At engine cranking)	L
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.		PCS

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:0000000011008509

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. • MODE 1: 1 min. • MODE 2: 5 min. • MODE 3: 30 sec. • MODE 4: 2 min.
WELCOME LIGHT OP SET	Welcome light function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door) mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following in this mode. • MODE 1: 0.5 sec. • MODE 2: Non-operational • MODE 3: 1.5 sec.
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following in this mode. • MODE 1: 3 sec. • MODE 2: Non-operational • MODE 3: 5 sec.
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be supported.
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following in this mode. • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operational
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following in this mode. • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operational
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. • 70 msec. • 100 msec. • 200 msec.
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) in this mode.
WELCOME LIGHT SELECT	Welcome light function mode can be selected from the following in this mode. • Puddle Lamp (ON/OFF) • Room Lamp (ON/OFF) • Head and Tail Lamps (This item is displayed, but cannot be supported.) • Outside Handle (This item is displayed, but cannot be supported.)

SELF-DIAG RESULT

DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

Refer to [BCS-88, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.
CLUCH SW	NOTE: This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of the P position.
SFT PN/N SW	Indicates [ON/OFF] condition of the P or N position.
S/L -LOCK	NOTE: This item is displayed, but cannot be monitored.
S/L -UNLOCK	NOTE: This item is displayed, but cannot be monitored.
S/L RELAY -F/B	NOTE: This item is displayed, but cannot be monitored.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of the P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of the P or N position.
SFT P -MET	Indicates [ON/OFF] condition of the P position.
SFT N -MET	Indicates [ON/OFF] condition of the N position.
ENGINE STATE	Indicates [STOP/START/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	NOTE: This item is displayed, but cannot be monitored.
S/L UNLK-IPDM	NOTE: This item is displayed, but cannot be monitored.
S/L RELAY-REQ	NOTE: This item is displayed, but cannot be monitored.
VEH SPEED 1	Displays the vehicle speed signal received from unified meter and A/C amp. by numerical value [Km/h].
VEH SPEED 2	Displays the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical values starts changing.
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp is activated when "ON" on CONSULT screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down is activated when "ON" on CONSULT screen is touched.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer is activated when "ON" on CONSULT screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. • Takes away warning chime sounds when "TAKE OUT" on CONSULT screen is touched. • Key warning chime sounds when "KEY" on CONSULT screen is touched. • The P position warning chime sounds when "KNOB" on CONSULT screen is touched.
INDICATOR	This test is able to check warning lamp operation. • "KEY" Warning lamp illuminates when "RED ON" on CONSULT screen is touched. • The "KEY" Warning lamp blinks when "RED IND" on CONSULT screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp is activated when "ON" on CONSULT screen is touched.
LCD	This test is able to check meter display information • Engine start information displays when "BP N" on CONSULT screen is touched. • Engine start information displays when "BP I" on CONSULT screen is touched. • Key ID warning displays when "ID NG" on CONSULT screen is touched. • ROTAT: This item is displayed, but cannot be tasted. • The P position warning displays when "SFT P" on CONSULT screen is touched. • Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched. • Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched. • Take away through window warning displays when "NO KY" on CONSULT screen is touched. • Take away warning displays when "OUTKY" on CONSULT screen is touched. • The OFF position warning displays when "LK WN" on CONSULT screen is touched.
TRUNK/GLASS HATCH	NOTE: This item is displayed, but cannot be used.
FLASHER	This test is able to check security hazard lamp operation. The hazard lamps is activated when "LH" or "RH" on CONSULT screen is touched.
HORN	This test is able to check horn operation. The horn will be activated when "ON" on CONSULT screen is touched.
P RANGE	This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched.
LOCK INDICATOR	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (LOCK) illuminates when "ON" on CONSULT screen is touched.
ACC INDICATOR	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (ACC) illuminates when "ON" on CONSULT screen is touched.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Test item	Description
IGNITION ON IND	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (ON) illuminates when "ON" on CONSULT screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination blinks when "ON" on CONSULT screen is touched.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

DTC/CIRCUIT DIAGNOSIS**U1000 CAN COMM CIRCUIT****BCM****BCM : Description**

INFOID:0000000010581777

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-34, "CAN System Specification Chart"](#).

BCM : DTC Logic

INFOID:0000000010581778

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

BCM : Diagnosis Procedure

INFOID:0000000010581779

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

YES >> Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).

NO >> Refer to [GI-47, "Intermittent Incident"](#).

IPDM E/R**IPDM E/R : Description**

INFOID:0000000010581780

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-34, "CAN System Specification Chart"](#).

IPDM E/R : DTC Logic

INFOID:0000000010581781

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

IPDM E/R : Diagnosis Procedure

INFOID:0000000010581782

1.PERFORM SELF DIAGNOSTIC

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

U1010 CONTROL UNIT (CAN)

BCM

BCM : DTC Logic

INFOID:0000000010581783

DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

BCM : Diagnosis Procedure

INFOID:0000000010581784

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-93. "Exploded View"](#).

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2553 IGNITION RELAY

Description

INFOID:0000000010581785

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (located in fuse block)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:0000000010581786

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGN POWER CIRCUIT	BCM detects a difference of signal for 2 seconds or more between the following information. • Ignition relay (fuse block) ON/OFF operation • Ignition relay (fuse block) feedback.	• Harness or connectors (Ignition relay feedback circuit is open or short) • Fuse • Ignition relay • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-53, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581787

1.CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-33, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK FUSE

Check that the following fuse is not blown.

Signal name	Connection position	Fuse No.	Capacity
Ignition power supply	IPDM E/R	44	10A

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.
NO >> GO TO 3.

3.CHECK IGNITION RELAY FEEDBACK INPUT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

(+) BCM		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
M123	123	Ground	Ignition switch	OFF	0
				ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK IGNITION RELAY FEEDBACK CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M123	123	E5	19	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	123		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).

NO >> Repair or replace harness.

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B260A IGNITION RELAY

Description

INFOID:0000000010581788

When the ignition switch is turned ON, the BCM activates the following relays to provide power supply to each ECU.

- Ignition relay (located in fuse block)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:0000000010581789

DTC DETECTION LOGIC

NOTE:

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-50, "BCM : DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-52, "BCM : DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [PCS-64, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. • Ignition relay (IPDM E/R) operation request • Ignition relay feedback from IPDM E/R (CAN).	• Harness or connectors (Ignition relay operation circuit is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-55, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581790

1.CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-33, "DTC Index"](#).

Is DTC detected?

- YES >> Repair or replace the malfunctioning parts.
NO >> GO TO 2.

2.CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M121	47	Ground	Battery voltage

Is the inspection result normal?

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	27	M121	47	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

>> INSPECTION END

B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2614 ACC RELAY

Description

INFOID:0000000010581791

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic

INFOID:0000000010581792

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC RELAY CIRC	An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second.	• Harness or connectors (ACC relay circuit is open or shorted) • ACC relay

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to [PCS-57, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581793

1.CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Accessory relay				
Terminal				
1	Ground	Ignition switch	OFF	0
			ACC	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	95	Existed

4. Check continuity between accessory relay harness connector and ground.

B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Accessory relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair accessory relay ground circuit.

4.CHECK ACCESSORY RELAY

Refer to [PCS-58, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace accessory relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010581794

1.CHECK ACCESSORY RELAY


1. Turn ignition switch OFF.
2. Remove accessory relay.
3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accessory relay.

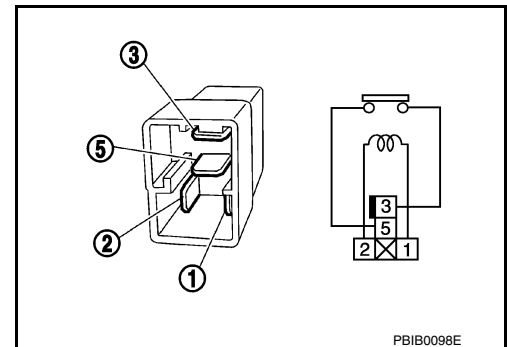

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2615 BLOWER RELAY CIRCUIT

Description

INFOID:0000000010581795

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic

INFOID:0000000010581796

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	BLOWER RELAY CIRC	BCM detects a difference of signal for 1 second or more between the following information. • Blower relay ON/OFF request • Blower relay feedback	• Harness or connectors (Blower relay circuit is open or shorted) • Blower relay

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-59, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581797

1.CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Blower relay				
Terminal				
1	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between blower relay harness connector and BCM harness connector.

Blower relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	102	Existed

4. Check continuity between blower relay harness connector and ground.

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Blower relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK BLOWER RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair blower relay ground circuit.

4.CHECK BLOWER RELAY

Refer to [PCS-60, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace blower relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010581798

1.CHECK BLOWER RELAY


1. Turn ignition switch OFF.
2. Remove blower relay.
3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace blower relay

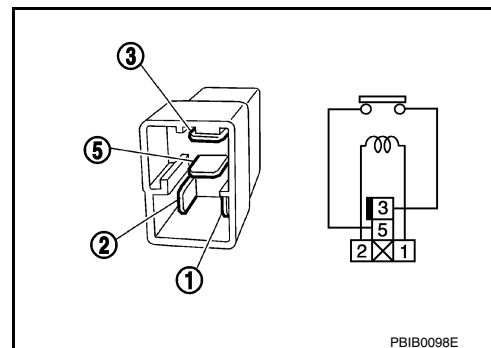

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2616 IGNITION RELAY CIRCUIT

Description

INFOID:0000000010581799

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic

INFOID:0000000010581800

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	IGN RELAY CIRC	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	- Harness or connectors (Ignition relay circuit is open or shorted) - Ignition relay (Fuse block)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to [PCS-61, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581801

1.CHECK IGNITION RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ignition relay.
- Check voltage between ignition relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Ignition relay				
Terminal				
1	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	82	
			Existed

- Check continuity between ignition relay harness connector and ground.

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Ignition relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair ignition relay ground circuit.

4.CHECK IGNITION RELAY

Refer to [PCS-62, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace ignition relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010581802

1.CHECK IGNITION RELAY


1. Turn ignition switch OFF.
2. Remove ignition relay.
3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace Ignition relay.

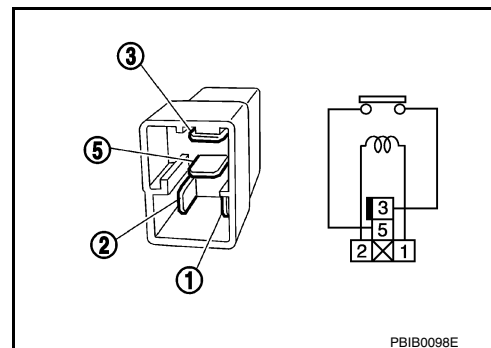

B2618 BCM

Description

INFOID:0000000010581803

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic

INFOID:0000000010581804

DTC DETECTION LOGIC

NOTE:

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-50, "BCM : DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-50, "IPDM E/R : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-63, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581805

1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [PCS-63, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#)
- NO >> INSPECTION END

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B261A PUSH-BUTTON IGNITION SWITCH

Description

INFOID:0000000010581806

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

DTC Logic

INFOID:0000000010581807

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BTN IGNI SW	BCM detects a difference of signal for 1 second or more between the following information. - Power supply position by push-button ignition switch - Power supply position from IPDM E/R (CAN)	Harness or connectors (Push-button ignition switch circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Press the push-button ignition switch under the following conditions, and wait for at least 1 second.
 - Selector lever is in the P or N position.
 - Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-64, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581808

1.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

- YES >> GO TO 2.
NO >> GO TO 4.

2.CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- Disconnect push-button ignition switch connector and BCM connector.
- Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E5	28	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).

3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

- Disconnect IPDM E/R connector.
- Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E5	28	M50	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	28		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground.

(+)		(−)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M122	89	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M122	89	M50	4	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	89		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:0000000010581809

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	L
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Description

INFOID:0000000010581810

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Component Function Check

INFOID:0000000010581811

1.CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
2. Check the push-button ignition switch signal under the following condition.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
	Push-button ignition switch is not pressed	OFF

Is the indication normal?

- YES >> INSPECTION END
NO >> Go to [PCS-67, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010581812

1.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

- YES >> GO TO 2.
NO >> GO TO 4.

2.CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Disconnect push-button ignition switch connector and BCM connector.
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E5	28	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).

3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E5	28	M50	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	28		Not existed

PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace harness.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch connector and IPDM E/R connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M121	60	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace BCM. Refer to [BCS-93. "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M121	60	M50	4	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M121	60		Not existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace harness.

6.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace push-button ignition switch. Refer to [PCS-139. "Removal and Installation"](#).

7.CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M50	1		Existed

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair or replace harness.

8.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

>> INSPECTION END

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Component Inspection

INFOID:0000000010581813

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal				
1	4	Push-button ignition switch	Pressed	Existed
			Not pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace push-button ignition switch. Refer to [PCS-139, "Removal and Installation"](#).

PCS

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:0000000010581814

The switch that changes the power supply position.

BCM maintains the power supply position status.

BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:0000000010581815

1.CHECK FUNCTION

Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

Test item		Description	
LOCK INDICATOR ACC INDICATOR IGNITION ON IND	ON	Position indicator	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [PCS-70, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010581816

1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M50	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the following.

- 10A fuse [No. 6, located in fuse block (J/B)]
- Harness for open or short between push-button ignition switch and fuse
- If NG, repair or replace fuse or harness

2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	BCM		Push-button ignition switch		Continuity
	Connector	Terminal	Connector	Terminal	
LOCK	M123	134	M50	5	Existed
ACC	M119	15		6	
ON	M122	93		7	

3. Check continuity between BCM harness connector and ground.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Indicator	BCM		Ground	Continuity
	Connector	Terminal		
LOCK	M123	134	Ground	Not existed
ACC	M119	15		
ON	M122	93		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

PCS

POWER DISTRIBUTION SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER DISTRIBUTION SYSTEM

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:000000010581817

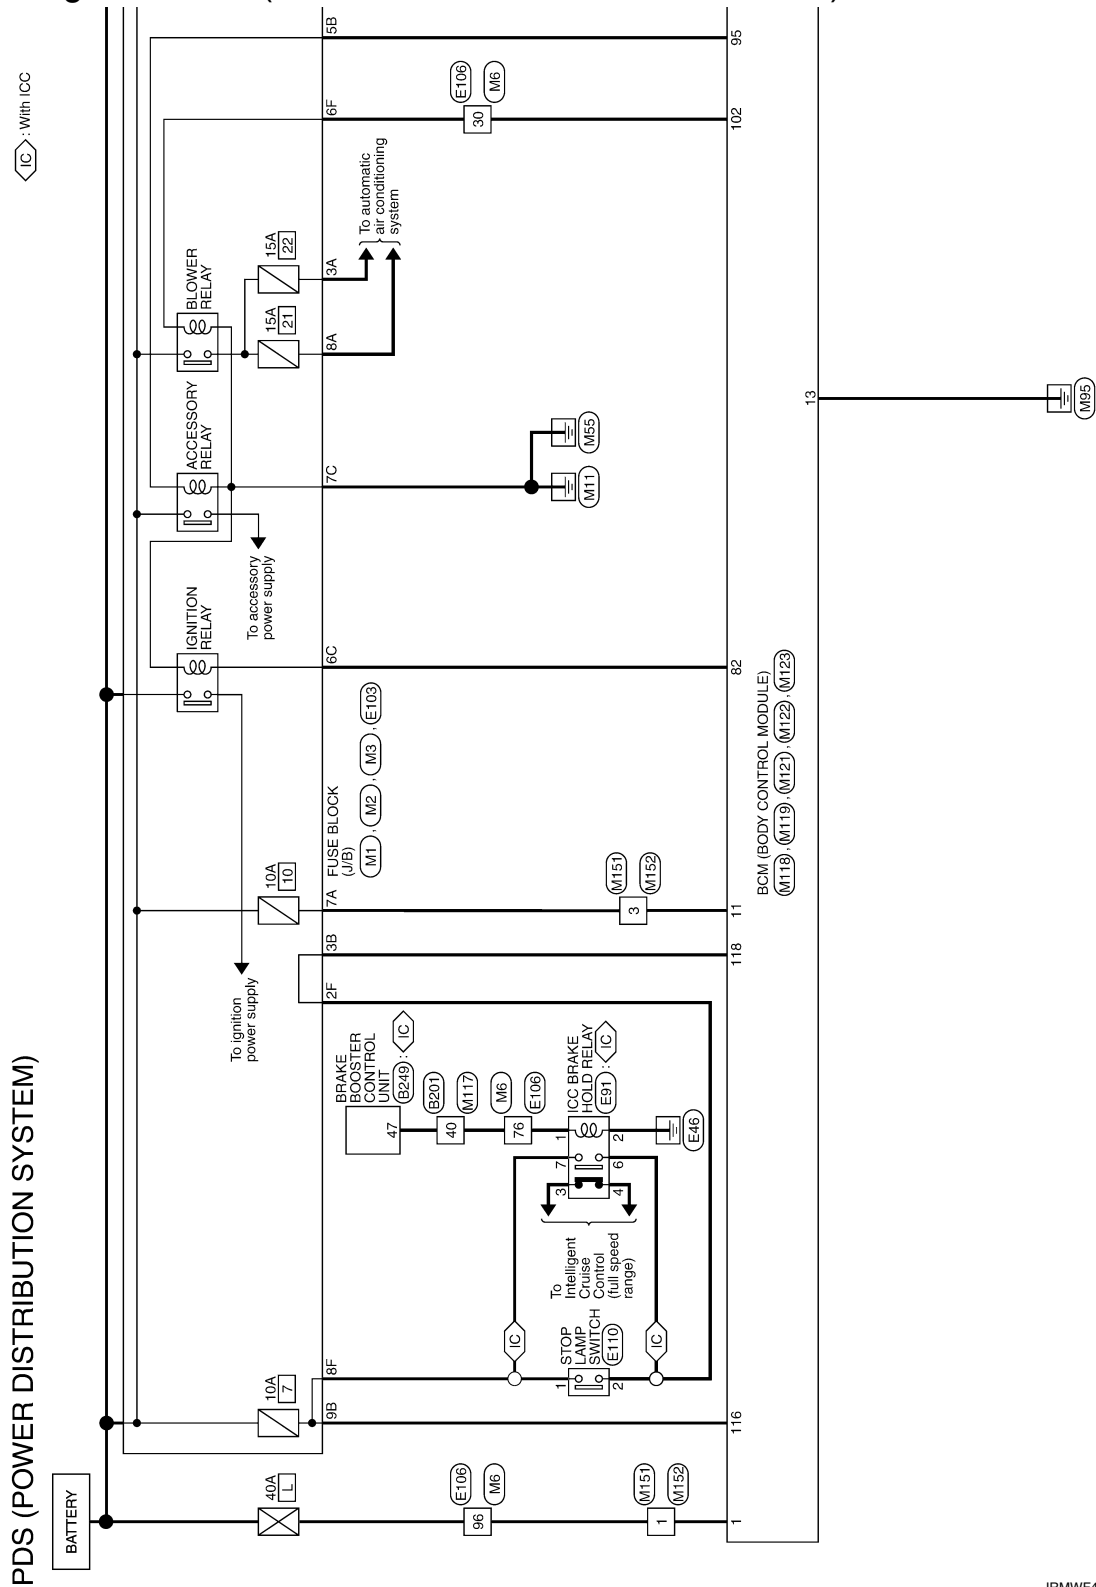


2014/03/18

JRMWF4527GB

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

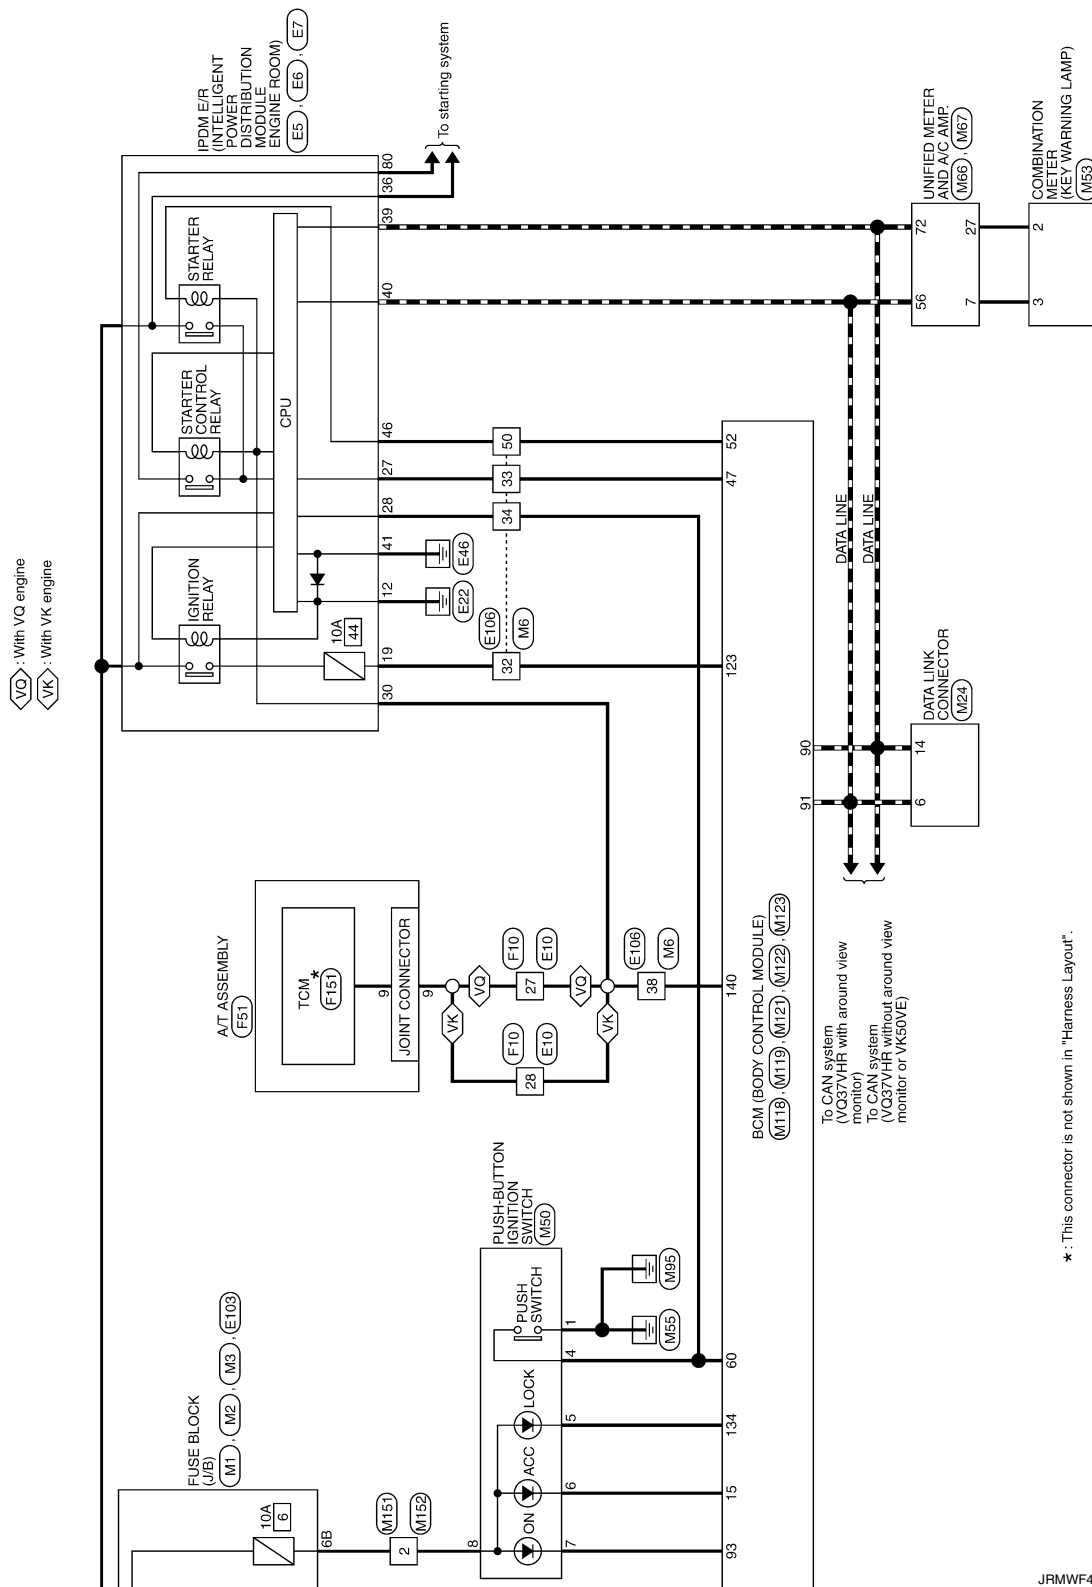

JRMWF4528GB

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)


Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
2	R	-	-
3	BR	-	-
4	SB	-	-
5	BR	-	-
6	BR	-	-
7	GR	-	-
8	W	-	-
9	G	-	-
10	SHIELD	-	-
11	P	-	-
12	GR	-	-
13	LG	-	-
14	W	-	-
15	V	-	-
16	G	-	-
17	Y	-	-
18	SHIELD	-	-
19	W	-	-
20	GR	-	-
21	SB	-	-
22	L	-	-
23	P	-	-
24	W	-	-
25	V	-	-
26	G	-	-
27	Y	-	-
28	SHIELD	-	-
29	W	-	-
30	GR	-	-
31	SB	-	-
32	L	-	-
33	P	-	-
34	W	-	-
35	V	-	-
36	G	-	-
37	Y	-	-
38	SHIELD	-	-
39	W	-	-
40	GR	-	-
41	SB	-	-
42	L	-	-
43	P	-	-
44	W	-	-
45	V	-	-


46	SHIELD	- [With ICC]
47	B	- [Without ICC]
48	P	- [With ICC]
49	R	- [Without ICC]
50	G	- [With ICC]
51	W	- [Without ICC]
52	SHIELD	-
53	R	-
54	G	-
55	L	-
56	SB	-
57	GR	-
58	LG	-
59	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BR	-
66	Y	-
67	W	-
68	G	-
69	SB	-
70	V	-
71	LG	-
72	W	-
73	BR	-
74	Y	-
75	V	-
76	LG	-
77	B	-
78	P	-
79	Y	-
80	R	-
81	SB	-
82	GR	-
83	L	-
84	V	-
85	W	-
86	GR	-
87	L	-
88	V	-
89	W	-
90	R	-
91	LG	-
92	SB	-
93	R	-
94	LG	-
95	GR	-
96	W	-
97	G	-
98	BR	-
99	L	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK24FGY

 


Terminal No.	Color	Wire	Signal Name [Specification]
33	G	-	IGNITION
40	SB	-	IBA OFF SW
42	G	-	IGNITION
46	B	-	GROUND
47	LG	-	BRAKE HOLD RLY DRIVE SIGNAL

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V

 


Terminal No.	Color	Wire	Signal Name [Specification]
4	V	-	-
5	L	-	-
7	R	-	-
10	SB	-	-
12	B	-	-
13	Y	-	-
16	LG	-	-
19	W	-	-
25	G	-	-
26	R	-	-
27	Y	-	-
28	BR	-	-
30	GR	-	-
36	G	-	-

Connector No.	E6
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
39	P	-	-
40	L	-	-
41	B	-	-
42	Y	-	-
43	SB	-	-
44	W	-	-
45	G	-	-
46	BR	-	-

Connector No.	E7
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4

 

Terminal No.	Color	Wire	Signal Name [Specification]
48	L	-	-
49	SB	-	- [With VQ engine]
49	W	-	- [With VK engine]
51	G	-	-
52	W	-	-
53	R	-	-
54	R	-	-
55	BR	-	-
56	BR	-	- [With VK engine]
56	V	-	- [With VQ engine]
57	LG	-	-

POWER DISTRIBUTION SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

58	Y	-	-
69	W	-	-
70	BG	-	-
74	G	-	-
75	Y	-	-
76	P	-	-
76	V	-	-
77	B	-	-
77	L	-	-
80	W	-	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Type	S44351B-RSS-SH23

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [With VQ engine]
1	SHIELD	- [With VK engine]
2	L	- [With VK engine]
2	SHIELD	- [With VQ engine]
3	BR	- [With VQ engine]
3	G	- [With VK engine]
4	BR	- [With VK engine]
4	SHIELD	- [With VQ engine]
5	BR	- [With VQ engine]
5	G	- [With VK engine]
6	BR	- [With VQ engine]
6	R	- [With VK engine]
7	G	- [With VQ engine]
7	W	- [With VK engine]
8	SHIELD	- [With VK engine]
8	W	- [With VQ engine]
9	W	-
10	G	- [With VQ engine]
10	W	- [With VK engine]
11	R	- [With VQ engine]
11	W	- [With VK engine]
12	BR	- [With VQ engine]
12	W	- [With VK engine]
13	L	- [With VQ engine]

13	R	-	-
14	LG	-	-
15	BG	-	-
15	BR	-	-
16	V	-	-
16	W	-	-
17	P	-	-
17	W	-	-
18	W	-	-
19	W	-	-
20	BR	-	-
21	SB	-	-
21	Y	-	-
22	G	-	-
22	W	-	-
23	R	-	-
23	V	-	-
24	G	-	-
24	Y	-	-
25	LG	-	-
26	LG	-	-
27	G	-	-
27	GR	-	-
28	GR	-	-
28	V	-	-
29	P	-	-
30	L	-	-
30	W	-	-
31	G	-	-
31	W	-	-
32	L	-	-
32	V	-	-
33	BG	-	-
33	W	-	-
34	BG	-	-
35	R	-	-
36	SHIELD	-	-
37	SHIELD	-	-
37	Y	-	-
38	L	-	-
38	SHIELD	-	-
39	P	-	-
39	W	-	-
40	R	-	-
40	SHIELD	-	-
41	W	-	-
41	Y	-	-
42	LG	-	-
42	SHIELD	-	-
43	G	-	-
43	W	-	-


44	G	-	-
45	L	-	-
46	G	-	-
46	SHIELD	-	-
47	B	-	-
47	W	-	-
48	BR	-	-
48	R	-	-
49	G	-	-
49	L	-	-
50	B	-	-
50	G	-	-
51	B	-	-
51	SB	-	-
52	R	-	-

Connector No.	E31
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	M06FGY-RUS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-
3	G	-
4	G	-
6	W	-
7	L	-

Connector No.	E103
Connector Name	FUSE BLOCK (JB)
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10F	L	-
10F	SB	-
1F	W	-
2F	Y	-
3F	G	-
4F	BG	-
6F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

Terminal No.	Wire	Signal Name [Specification]
13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
20	Y	- [Without ICC]
21	BR	-
22	R	- [With ICC]
22	V	- [Without ICC]
23	G	-
24	L	- [With ICC]
24	P	- [Without ICC]
25	L	- [With ICC]
25	Y	- [Without ICC]
26	SHIELD	-
28	G	-
29	LG	-
30	BG	-
32	W	-
33	Y	-
34	BG	-
37	Y	-
38	GR	-
39	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	BG	-
54	R	-
55	SB	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	BG	-
69	L	-


Terminal No.	Wire	Signal Name [Specification]
70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	BG	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
95	Y	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	Wire	Signal Name [Specification]
E110	-	-
STOP LAMP SWITCH	-	-
M04FW-LC	-	-



Terminal No.	Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	BR	-

Connector No.	Wire	Signal Name [Specification]
IF10	-	-
WIRE TO WIRE	-	-
ISAA36FB-SB-SH28	-	-

 

Terminal No.	Wire	Signal Name [Specification]
1	G	- [With VQ engine]
1	SHIELD	- [With VK engine]
2	SHIELD	- [With VQ engine]
2	Y	- [With VK engine]
3	BR	- [With VQ engine]
3	G	- [With VK engine]
4	BR	- [With VQ engine]
4	SHIELD	- [With VK engine]
5	B	- [With VQ engine]
5	BR	- [With VK engine]
6	R	- [With VQ engine]
6	W	- [With VK engine]
7	G	- [With VQ engine]
7	R	- [With VK engine]
8	SHIELD	- [With VQ engine]
8	W	- [With VK engine]
9	W	-
10	G	-
11	R	- [With VQ engine]
11	Y	- [With VK engine]
12	P	- [With VQ engine]
12	V	- [With VK engine]
13	L	- [With VQ engine]
13	P	- [With VK engine]
14	L	- [With VQ engine]
14	LG	- [With VK engine]
15	O	- [With VQ engine]
15	R	- [With VK engine]
16	R	- [With VQ engine]
16	Y	- [With VK engine]
17	GR	-
18	G	-
19	O	-
20	R	-
21	V	- [With VQ engine]
21	Y	- [With VK engine]

Terminal No.	Wire	Signal Name [Specification]
22	B	- [With VK engine]
22	G	- [With VQ engine]
23	LG	- [With VK engine]
23	Y	- [With VQ engine]
24	LG	- [With VK engine]
24	Y	- [With VQ engine]
25	V	-
26	O	-
27	GR	- [With VQ engine]
27	SB	- [With VK engine]
28	BR	- [With VQ engine]
28	LG	- [With VK engine]
29	L	- [With VQ engine]
29	P	- [With VK engine]
30	GR	- [With VQ engine]
30	R	- [With VK engine]
31	BR	- [With VQ engine]
31	P	- [With VK engine]
32	G	- [With VQ engine]
32	W	- [With VK engine]
33	L	- [With VQ engine]
33	SB	- [With VK engine]
34	O	-
35	P	-
36	SHIELD	- [With VQ engine]
37	SHIELD	- [With VK engine]
37	Y	- [With VQ engine]
38	SHIELD	- [With VK engine]
38	W	- [With VQ engine]
39	W	- [With VK engine]
39	Y	- [With VQ engine]
40	G	- [With VK engine]
40	SHIELD	- [With VQ engine]
41	B	- [With VK engine]
41	Y	- [With VQ engine]
42	GR	- [With VK engine]
42	SHIELD	- [With VQ engine]
43	R	- [With VK engine]
43	W	- [With VQ engine]
44	LG	-
45	L	-
46	G	- [With VK engine]
46	SHIELD	- [With VQ engine]
47	B	- [With VK engine]
47	W	- [With VQ engine]
48	LG	- [With VK engine]
48	R	- [With VQ engine]
49	G	- [With VK engine]
49	L	- [With VQ engine]
50	B	- [With VQ engine]

JRMWF4531GB

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

50	G	-	[With VK engine]
51	B	-	[With VK engine]
52	R	-	[With VQ engine]

Connector No.	F51
Connector Name	AT ASSEMBLY
Connector Type	IRK10FG-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	R	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	L	CAN-H
4	V	K-LINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CAN-L
9	GR	STARTER RELAY [With VQ engine]
10	B	STARTER RELAY [With VK engine]


Connector No.	F151
Connector Name	TCM
Connector Type	SP10FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	R	CAN-H

4	O	K-LINE
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CAN-L
9	Y	STARTER RELAY
10	W/B	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FW-M2

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	R	-
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1B	LG	-
2B	P	-
3B	G	-
4B	G	-

5B	BG	-
6B	Y	-
7B	L	-
8B	R	-
9B	BR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	R	-
6C	P	-
7C	B	-
9C	BG	-

Connector No.	M6
Connector Name	WIPE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	LG	- [Without Auto aircon seat]
4	SB	- [With Auto aircon seat]
5	LG	-
6	GR	-
7	W	-

7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	GR	- [Without ICG]
21	W	- [With ICG]
22	BR	- [With ICG]
23	R	- [With ICG]
24	L	- [With ICG]
25	W	- [Without ICG]
26	Y	- [With ICG]
27	SHIELD	-
28	GR	-
29	V	-
30	BG	-
31	W	-
32	W	-
33	Y	-
34	L	-
35	G	-
36	R	-
37	G	-
38	R	-
39	G	-
40	L	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	BG	-
50	LG	-
51	SB	-
52	Y	-
53	BG	-
54	BR	-
55	SB	-
56	SB	-
57	SB	-
58	SB	-
59	SB	-

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)


60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	BG	-
69	V	-
70	SHIELD	-
71	BG	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	BG	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-
95	G	-
96	W	-
97	W	-
98	SHIELD	-
100	Y	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color	Wire	Signal Name [Specification]
1	LG	B	-
2	B	B	-
3	B	B	-
4	L	L	-
5	GR	G	-
6	G	G	-
7	SB	S	-
8	P	P	-
9	SB	S	-
10	P	P	-
11	SB	S	-
12	P	P	-
13	L	L	-
14	P	P	-
16	BG	B	-

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FR

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	B	B	-
2	R	R	-
3	BG	B	-
4	SB	S	-
5	GR	G	-
6	Y	Y	-
7	V	V	-
8	P	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	BG	B	BATTERY POWER SUPPLY
2	LG	B	COMMUNICATION SIGNAL (METER->AMP)
3	GR	B	COMMUNICATION SIGNAL (AMP->METER)
5	B	B	GROUND
6	L	L	ALL TERNATOR SIGNAL
7	W	W	AIR BAG SIGNAL
8	P	P	SECURITY INDICATOR SIGNAL
10	G	G	SECURITY INDICATOR SIGNAL
15	B	B	METER CONTROL SWITCH GROUND
16	B	B	IGNITION SIGNAL
21	R	R	COMMUNICATION SIGNAL (LCD->AMP)
24	BR	B	COMMUNICATION SIGNAL (AMP->LCD)
25	Y	Y	VEHICLE SPEED SIGNAL (8-PULSE)
26	R	R	PARKING BRAKE SWITCH SIGNAL
27	V	V	VEHICLE SPEED SIGNAL (8-PULSE)
28	W	W	VEHICLE SPEED SIGNAL (8-PULSE)
29	SB	S	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	G	PASSENGER SEAT BELT WARNING SIGNAL
31	L	L	WASHER LEVEL SWITCH SIGNAL
34	B	B	ILLUMINATION CONTROL SIGNAL
36	LG	B	SELECT SWITCH SIGNAL
37	SB	S	ENTER SWITCH SIGNAL
38	L	L	TRIP AIR RESET SWITCH SIGNAL
39	P	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	B	ILLUMINATION CONTROL SWITCH SIGNAL (+)

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
5	L	L	MANUAL MODE SHIFT UP SIGNAL
6	BG	B	PADDLE SHIFTER UP SIGNAL
7	GR	B	COMMUNICATION SIGNAL (AMP->METER)
8	L	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	S	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	W	MANUAL MODE SIGNAL
11	G	G	NON-MANUAL MODE SIGNAL
14	BR	B	COMMUNICATION SIGNAL (LCD->AMP)
20	L	L	IGNITION SIGNAL
23	Y	Y	AT SNOW SWITCH SIGNAL
25	V	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	G	PADDLE SHIFTER DOWN SIGNAL
27	LG	B	COMMUNICATION SIGNAL (METER->AMP)
28	R	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	V	PARKING BRAKE SWITCH SIGNAL
34	Y	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	L	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
41	V	V	ACC POWER SUPPLY
42	Y	Y	FUEL LEVEL SENSOR SIGNAL
43	R	R	INTAKE SENSOR SIGNAL

JRMWF4533GB

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

Terminal No.	Color	Wire	Signal Name [Specification]
44	LG	R	IN-VEHICLE SENSOR SIGNAL
45	P	P	AMBIENT SENSOR SIGNAL
46	BG	L	SUNLOAD SENSOR SIGNAL
47	V	SHIELD	GAS SENSOR SIGNAL
53	G	W	IGNITION POWER SUPPLY
54	BG	W	BATTERY POWER SUPPLY
55	B	SB	GROUND
56	L	CANH	GROUND
57	W	P	BRAKE FLUID LEVEL SWITCH SIGNAL
58	B	L	FUEL LEVEL SENSOR SIGNAL
59	GR	P	INTAKE SENSOR GROUND
60	L	V	IN-VEHICLE SENSOR GROUND
61	BR	SB	AMBIENT SENSOR GROUND
62	SB	W	SUNLOAD SENSOR GROUND
63	R	W	IGN MODE SIGNAL
65	BG	B	ECV SIGNAL
69	L	B	A/C LAMP SIGNAL
70	R	P	EACH DOOR MOTOR POWER SUPPLY
71	B	W	GROUND
72	P	W	CANL

Connector No.	Signal Name [Specification]
M117	WIRE TO WIRE
Connector Type	Signal Name [Specification]
TH60MW-CS16-TM4	



Terminal No.	Color	Wire	Signal Name [Specification]
1	GR	W	WIRE TO WIRE
2	BR	W	WIRE TO WIRE
3	V	W	WIRE TO WIRE
4	SB	W	WIRE TO WIRE
6	Y	W	WIRE TO WIRE
7	B	W	WIRE TO WIRE
8	W	W	WIRE TO WIRE
10	W	W	WIRE TO WIRE
11	SHIELD	W	WIRE TO WIRE
20	R	W	WIRE TO WIRE
21	G	W	WIRE TO WIRE
22	GR	W	WIRE TO WIRE
23	V	W	WIRE TO WIRE
24	W	W	WIRE TO WIRE

Terminal No.	Color	Wire	Signal Name [Specification]
77	LG	R	IN-VEHICLE SENSOR SIGNAL
80	R	P	AMBIENT SENSOR SIGNAL
82	Y	W	WIRE TO WIRE
83	BG	W	SUNLOAD SENSOR SIGNAL
84	W	W	GAS SENSOR SIGNAL
85	SB	W	IGNITION POWER SUPPLY
86	B	W	BATTERY POWER SUPPLY
87	P	W	GROUND
91	L	CANH	GROUND
92	L	P	BRAKE FLUID LEVEL SWITCH SIGNAL
93	G	L	FUEL LEVEL SENSOR SIGNAL
94	BG	P	INTAKE SENSOR GROUND
95	V	W	IN-VEHICLE SENSOR GROUND
96	G	W	AMBIENT SENSOR GROUND
97	G	W	SUNLOAD SENSOR GROUND
98	L	W	IGN MODE SIGNAL
99	LG	W	ECV SIGNAL

Connector No.	Signal Name [Specification]
M118	BCM (BODY CONTROL MODULE)
Connector Type	Signal Name [Specification]
M03FB-LC	



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	W	BAT (FIL)
2	Y	W	POWER WINDOW POWER SUPPLY (BAT)
3	BG	W	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	Signal Name [Specification]
M119	BCM (BODY CONTROL MODULE)
Connector Type	Signal Name [Specification]
NS16FM-CS	



Terminal No.	Color	Wire	Signal Name [Specification]
4	P	W	NT ROOM LAMP PWR SUPPLY (BAT SAME)
5	V	W	PASSENGER DOOR UNLOCK OUTPUT
7	Y	W	STEP LAMP OUTPUT
8	V	W	ALL DOOR FUEL ID LOCK OUTPUT
9	G	W	DRIVER DOOR FUEL ID UNLOCK OUTPUT
10	BR	W	REAR DOOR UNLOCK OUTPUT
11	R	W	BAT (FUSE)
13	B	W	GROUND
15	Y	W	ACC IND
17	W	W	TURN SIGNAL RH (FRONT)
18	BG	W	TURN SIGNAL LH (FRONT)
19	SB	W	ROOM LAMP TIMER

Connector No.	Signal Name [Specification]
M121	BCM (BODY CONTROL MODULE)
Connector Type	Signal Name [Specification]
TH40FGY-1H	



Terminal No.	Color	Wire	Signal Name [Specification]
34	SB	W	LUGGAGE ROOM ANT-
35	V	W	LUGGAGE ROOM ANT+
38	B	W	BACK DOOR ANT-
39	W	W	BACK DOOR ANT+
47	Y	W	IGN RELAY (PDM) E/F CONT
52	LG	W	STARTER RELAY CONT
60	SB	W	ENG START SW
61	W	W	TRUNK REQUEST SW

POWER DISTRIBUTION SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)


64	L	I-KEY WARN BUZZER (ENG ROOM)
65	BG	REAR WIPER STOP POSITION
66	LG	BACK DOOR SW
67	P	BACK DOOR OPENER SW
68	BR	REAR RH DOOR SW
69	R	REAR LH DOOR SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

 

Terminal No.	Wire	Signal Name [Specification]
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT-
79	BR	ROOM ANT+
80	GR	NATS ANT AMP.
81	W	NATS ANT AMP.
82	P	IGN RELAY (F/B) CONT
83	GR	KEYLESS ENTRY RECEIVER SIGNAL
87	GR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC

 

Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M152
Connector Name	WIRE TO WIRE
Connector Type	M03MW-LC



Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

JRMWF4535GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000011025076

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper volume dial is in a dial position 1 - 7	Wiper volume dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
REVERSE SW	NOTE: The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off
	LOCK button of the Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD	NOTE: The item is indicated, but not monitored.	Off
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off
	PANIC button of the Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed and held	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	NOTE: The item is indicated, but not monitored.	Off
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	NOTE: The item is indicated but not monitored.	Off
S/L -UNLOCK	NOTE: The item is indicated but not monitored.	Off
S/L RELAY-F/B	NOTE: The item is indicated but not monitored.	Off
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	NOTE: The item is indicated but not monitored.	Off
S/L UNLK-IPDM	NOTE: The item is indicated but not monitored.	Off
S/L RELAY-REQ	NOTE: The item is indicated but not monitored.	Off
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O


P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

TERMINAL LAYOUT

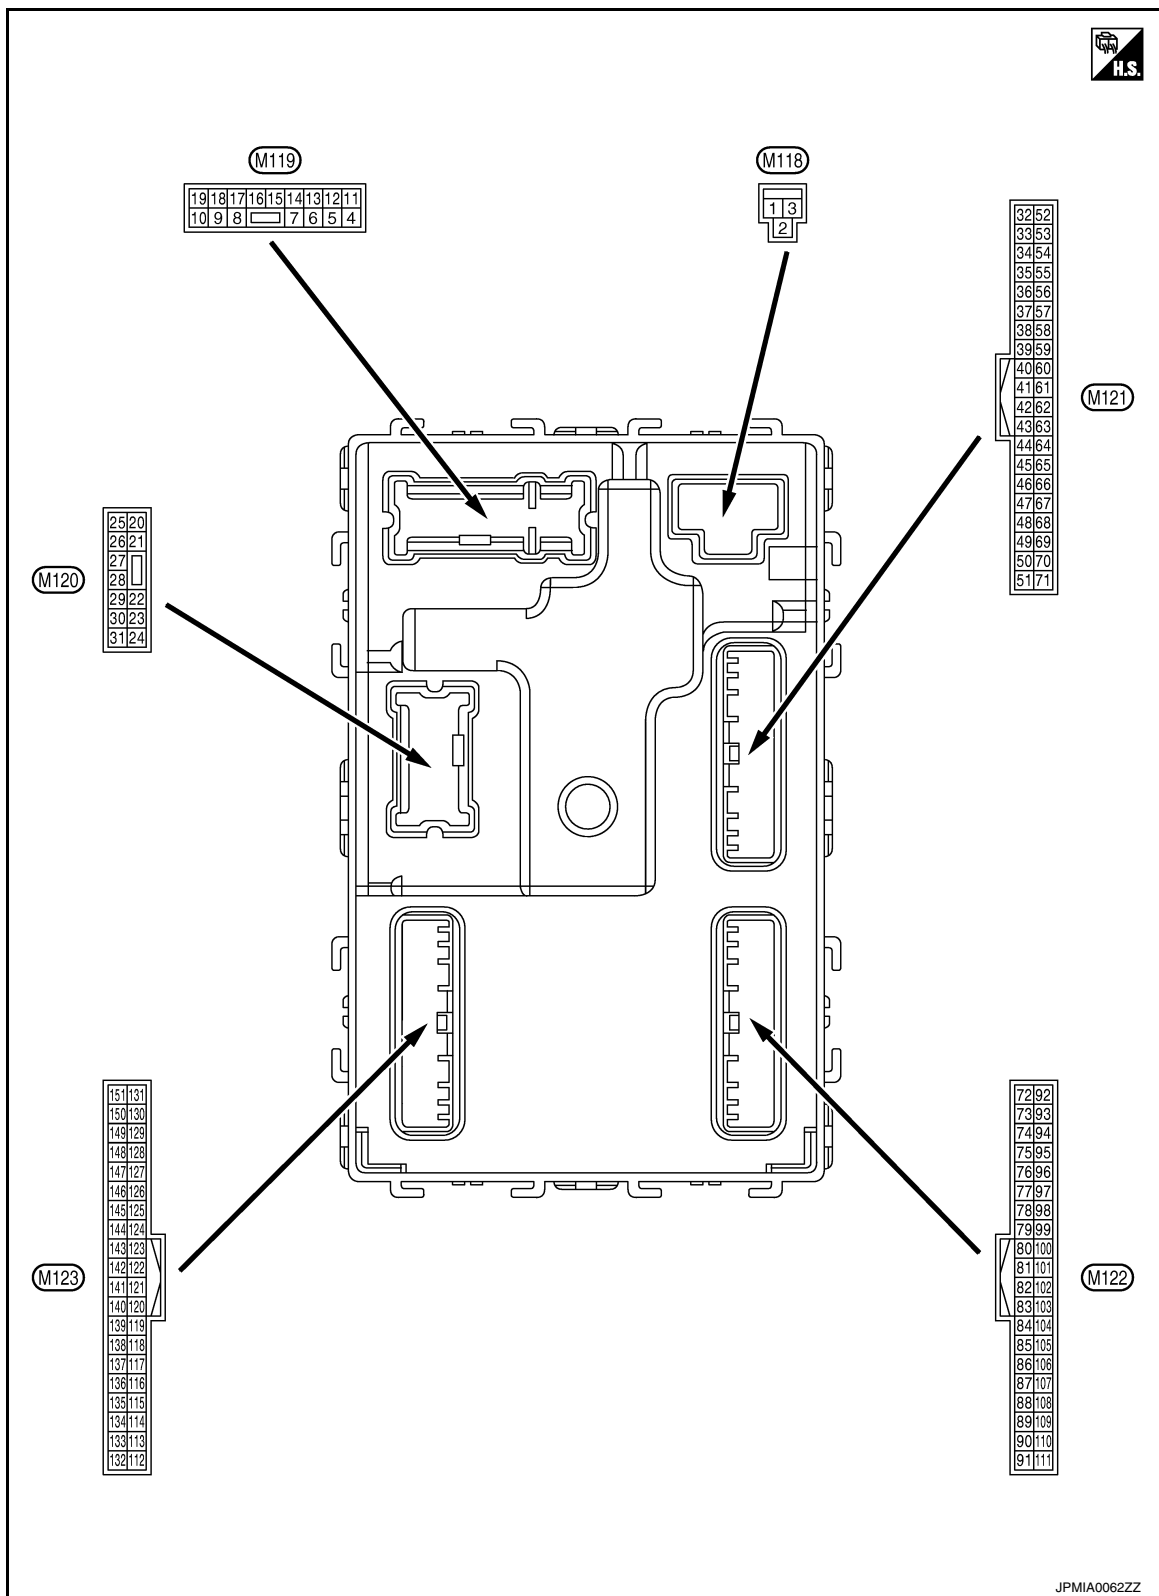


PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

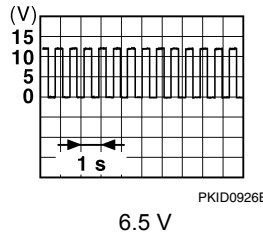Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (BG)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		12 V
4 (P)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (V)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp control	Output	Step lamp	ON	0 V
					OFF	12 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N






O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[POWER DISTRIBUTION SYSTEM]

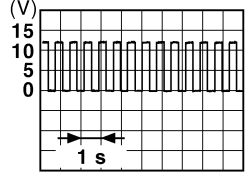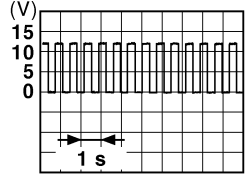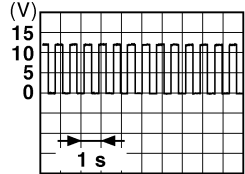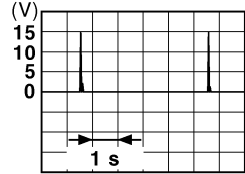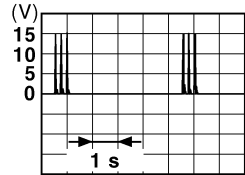Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 PKID0926E
19 (SB)	Ground	Interior room lamp control	Output	Other than under condition		5.0 V
				- Interior room lamp timer is activated. (Door is unlocked. etc...) - Welcome light function is activated.		0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 PKID0926E
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 PKID0926E
26 (P)	Ground	Rear wiper	Output	Rear wiper	OFF (Stopped)	0 V
					ON (Operated)	12 V
34 (SB)	Ground	Luggage room anten- na (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger com- partment	 JMKIA0063GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

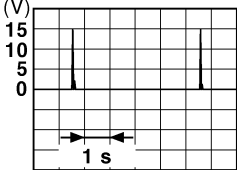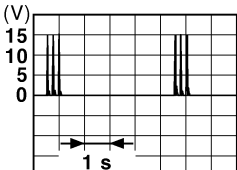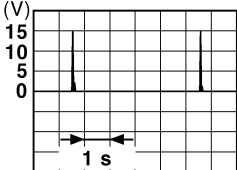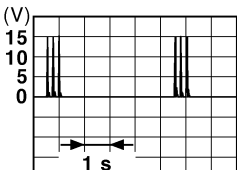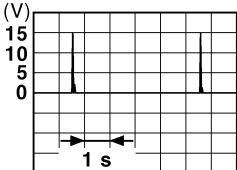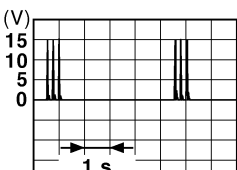Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
35 (V)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB
38 (B)	Ground	Back door antenna (-)	Output	When the back door opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
39 (W)	Ground	Back door antenna (+)	Output	When the back door opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N





O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[POWER DISTRIBUTION SYSTEM]

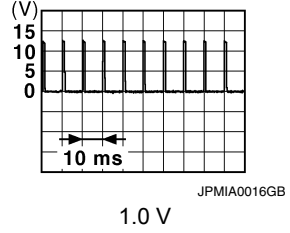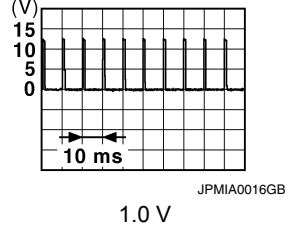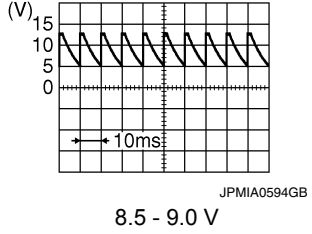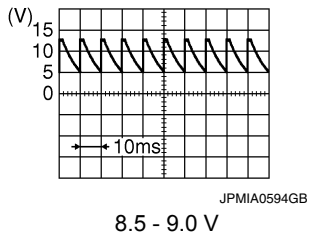Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
52 (LG)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	12 V
					When selector lever is not in P or N position	0 V
60 (SB)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ig- nition switch (Push switch)	Pressed	0 V
					Not pressed	12 V
61 (W)	Ground	Back door opener re- quest switch	Input	Back door re- quest switch	ON (Pressed)	0 V
					OFF (Not pressed)	
64 (L)	Ground	Intelligent Key warn- ing buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding	0 V
					Not sounding	12 V
65 (BG)	Ground	Rear wiper stop posi- tion	Input	Rear wiper	In stop position	
					Not in stop position	0 V
66 (LG)	Ground	Back door switch	Input	Back door switch	OFF (Door close)	12 V
					ON (Door open)	0 V
67 (P)	Ground	Back door opener switch	Input	Back door open- er switch	Pressed	0 V
					Not pressed	
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (Door close)	
					ON (Door open)	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


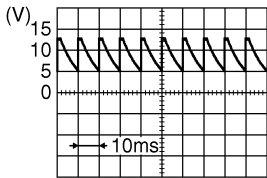
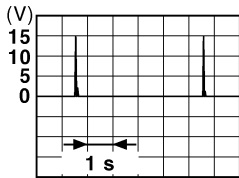
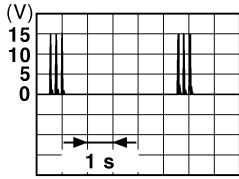
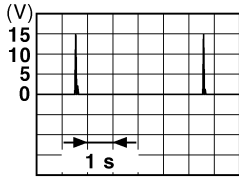
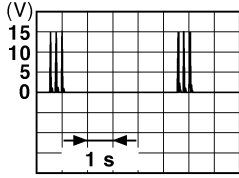
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (Door close)	 8.5 - 9.0 V
					ON (Door open)	0 V
74 (SB)	Ground	Passenger door antenna (-)	Output	When the passenger door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	
					When Intelligent Key is not in the antenna detection area	
75 (BR)	Ground	Passenger door antenna (+)	Output	When the passenger door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	
					When Intelligent Key is not in the antenna detection area	

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

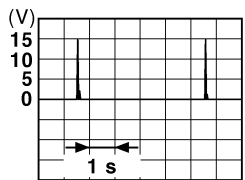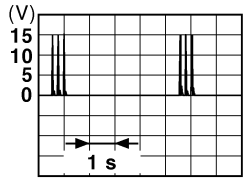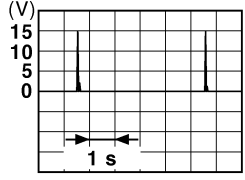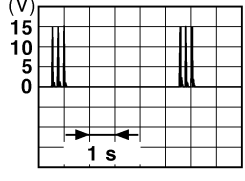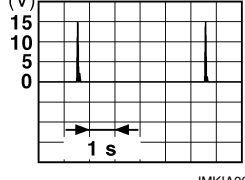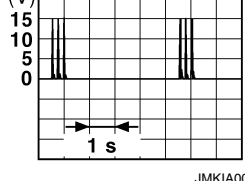Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB
78 (Y)	Ground	Room antenna (-) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

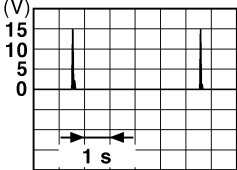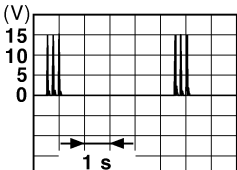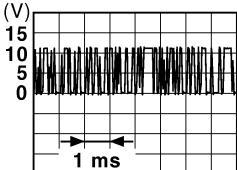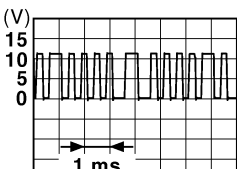Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
79 (BR)	Ground	Room antenna (+) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (P)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (GR)	Ground	Remote keyless entry receiver communica- tion	Input/ Output		During waiting	 JMKIA0064GB
					When operating either button on the Intelli- gent Key	 JMKIA0065GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

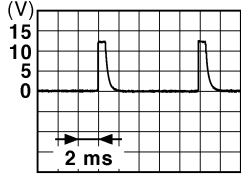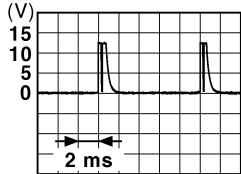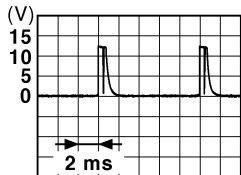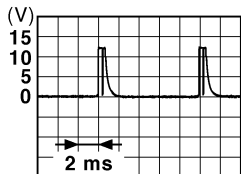Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	 1.4 V
				Front fog lamp switch ON (Wiper volume dial 4)	 1.3 V
				Rear wiper switch ON (Wiper volume dial 4)	 1.3 V
				Any of the conditions below with all switches OFF • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 6 • Wiper volume dial 7	 1.3 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

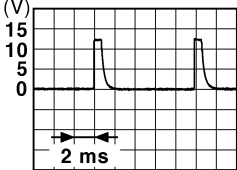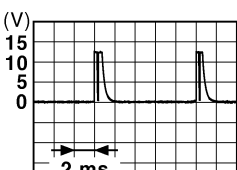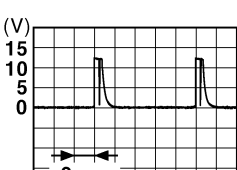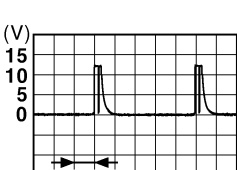Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper volume dial 4)  1.4 V
					Lighting switch HI (Wiper volume dial 4)  1.3 V
					Lighting switch 2ND (Wiper volume dial 4)  1.3 V
					Rear washer switch ON (Wiper volume dial 4)  1.3 V
					Any of the conditions below with all switches OFF • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3  1.3 V
90 (P)	Ground	CAN-L	Input/ Output	—	—
91 (L)	Ground	CAN-H	Input/ Output	—	—

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N




O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[POWER DISTRIBUTION SYSTEM]

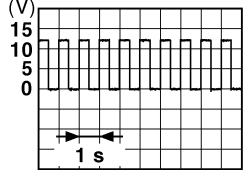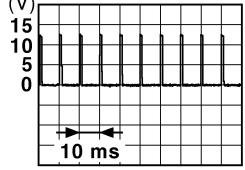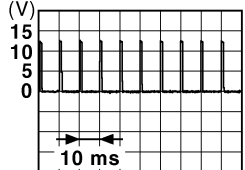Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	12 V
					Blinking	 JPMIA0015GB
					ON	0 V
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—	—	12 V
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	12 V
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMIA0016GB
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMIA0016GB
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (BR)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		12 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

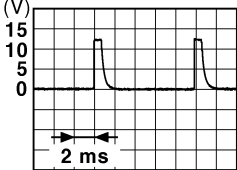
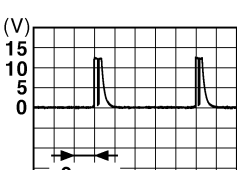
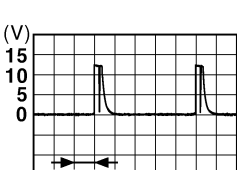
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper volume dial 4)	All switches OFF  1.4 V
					Turn signal switch LH  1.3 V
					Turn signal switch RH  1.3 V
					Front wiper switch LO  1.3 V
					Front washer switch ON  1.3 V

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

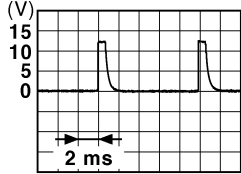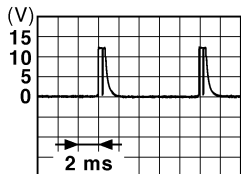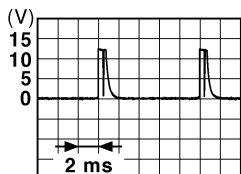Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	 1.4 V
				Lighting switch AUTO (Wiper volume dial 4)	 1.3 V
				Lighting switch 1ST (Wiper volume dial 4)	 1.3 V
				Rear wiper switch INT (Wiper volume dial 4)	 1.3 V
				Any of the conditions below with all switches OFF • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6	 1.3 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

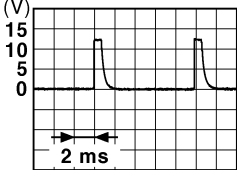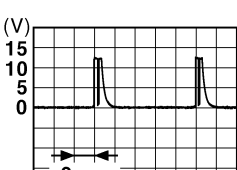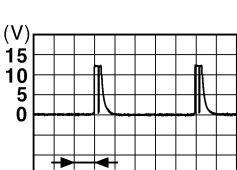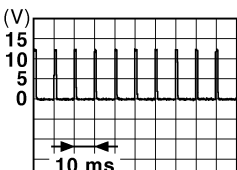Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper volume dial 4)	All switches OFF  1.4 V
					Lighting switch PASS  1.3 V
					Lighting switch 2ND  1.3 V
					Front wiper switch INT/ AUTO  1.3 V
					Front wiper switch HI  1.3 V
					ON 0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF  1.1 V

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N




O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

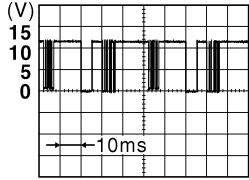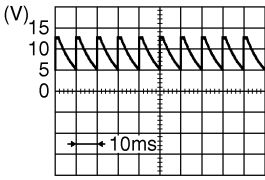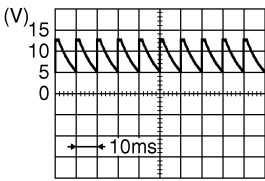Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	−	Signal name	Input/ Output			
112 (GR)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON		 JPMIA0156GB 8.7 V
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (BR)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is depressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF		0 V
				Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON		Battery voltage
119 (SB)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 JPMIA0594GB 8.5 - 9.0 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (BR)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V
				When the Intelligent Key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 JPMIA0594GB 8.5 - 9.0 V
					ON (Door open)	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

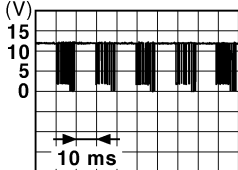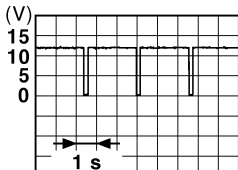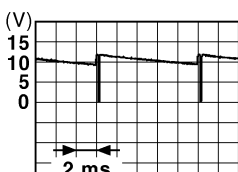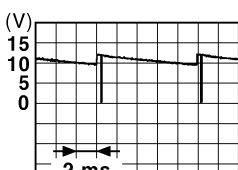Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
132 (BG)	Ground	Power window switch communication	Input/ Output	Ignition switch ON		 JPMIA0013GB 10.2 V
				Ignition switch OFF or ACC		12 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (B)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (Y)	Ground	Sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
140 (R)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	12 V
					Except P and N positions	0 V
141 (G)	Ground	Security indicator lamp	Output		ON	0 V
				Security indica- tor lamp	Blinking	 JPMIA0014GB 11.3 V
					OFF	12 V
142 (BG)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Lighting switch 1ST	 JPMIA0031GB 10.7 V
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
					Front wiper switch HI (Wiper volume dial 4)	 JPMIA0032GB 10.7 V
					Rear wiper switch INT (Wiper volume dial 4)	
					Any of the conditions be- low with all switches OFF	
					• Wiper volume dial 1	
• Wiper volume dial 2						
• Wiper volume dial 3						
• Wiper volume dial 6						
• Wiper volume dial 7						

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

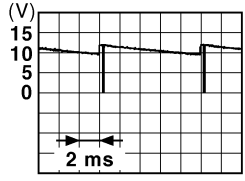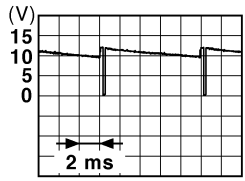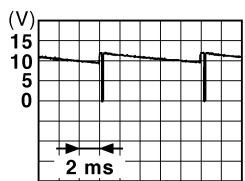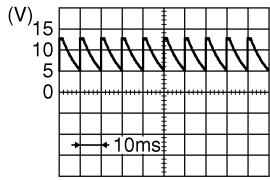Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
					Front washer switch ON (Wiper volume dial 4)	
					Rear wiper switch ON (Wiper volume dial 4)	
					Rear washer switch ON (Wiper volume dial 4)	
					Any of the conditions below with all switches OFF • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6	
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front wiper switch INT/ AUTO	
					Front wiper switch LO	
					Lighting switch AUTO	
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	 8.5 - 9.0 V
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger	Active	0 V
					Not activated	Battery voltage

[POWER DISTRIBUTION SYSTEM]

Wiring Diagram - BCM -


A
B
C
D
E
F
G
H
I
J
K
L
MCS
N
O
P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

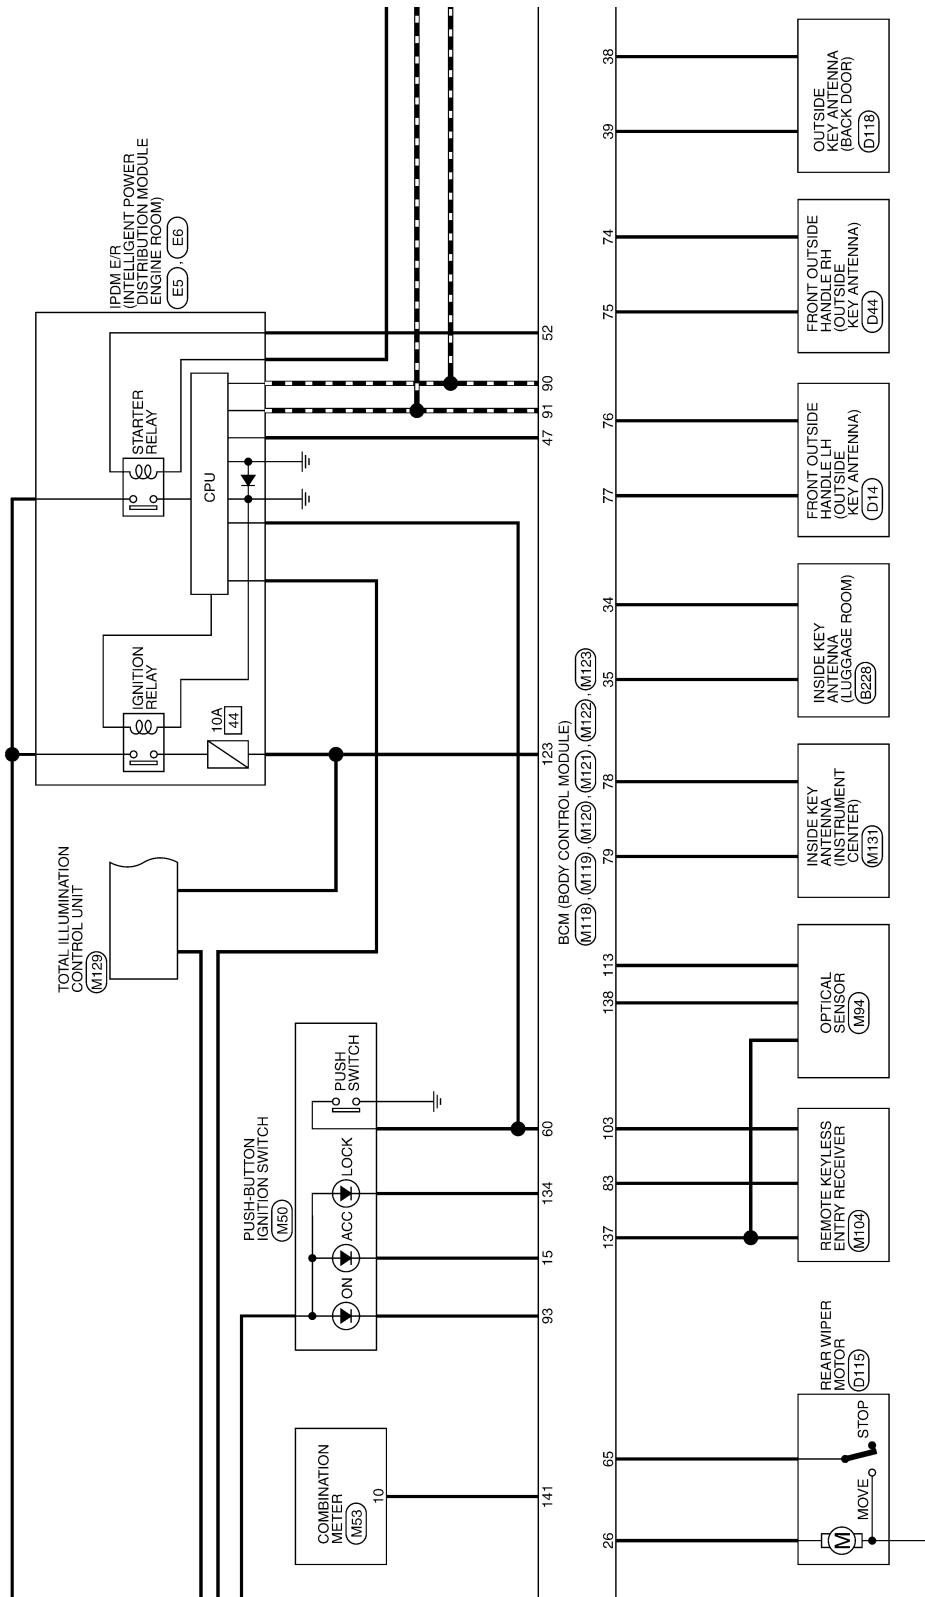


JRMWF4485GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

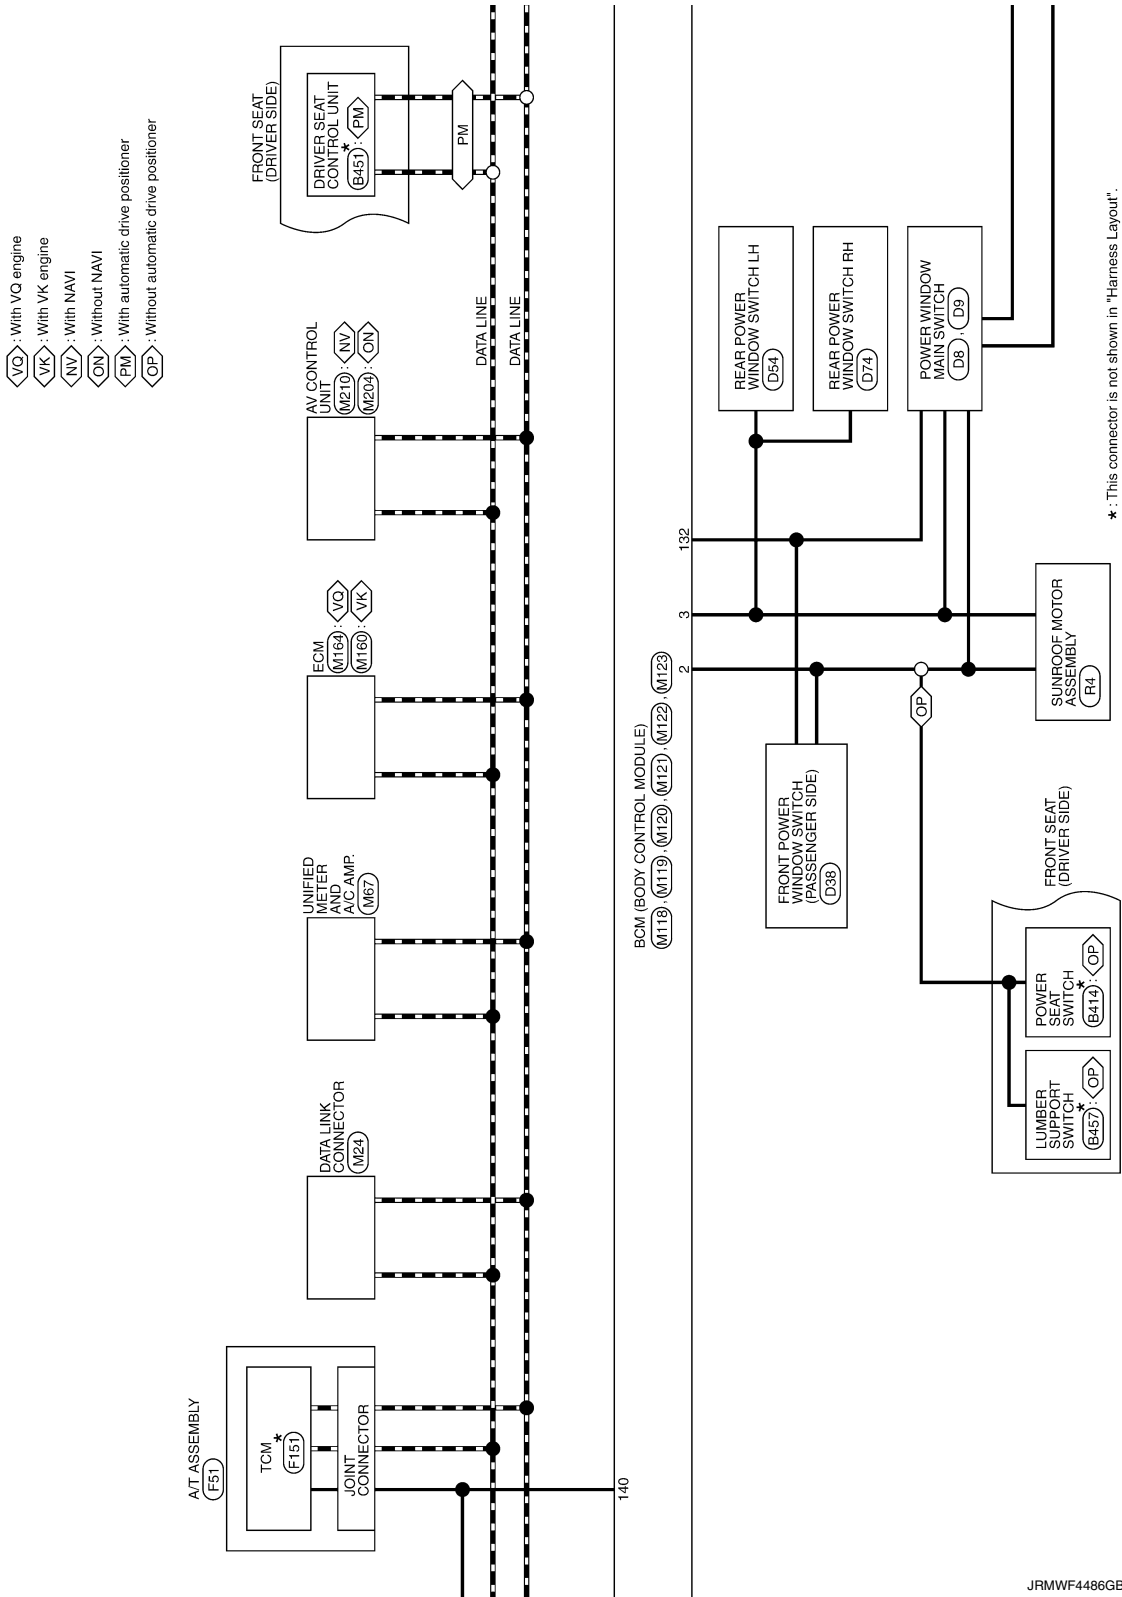

JRMWF4486GB


A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


IC : With ICC
OI : Without ICC

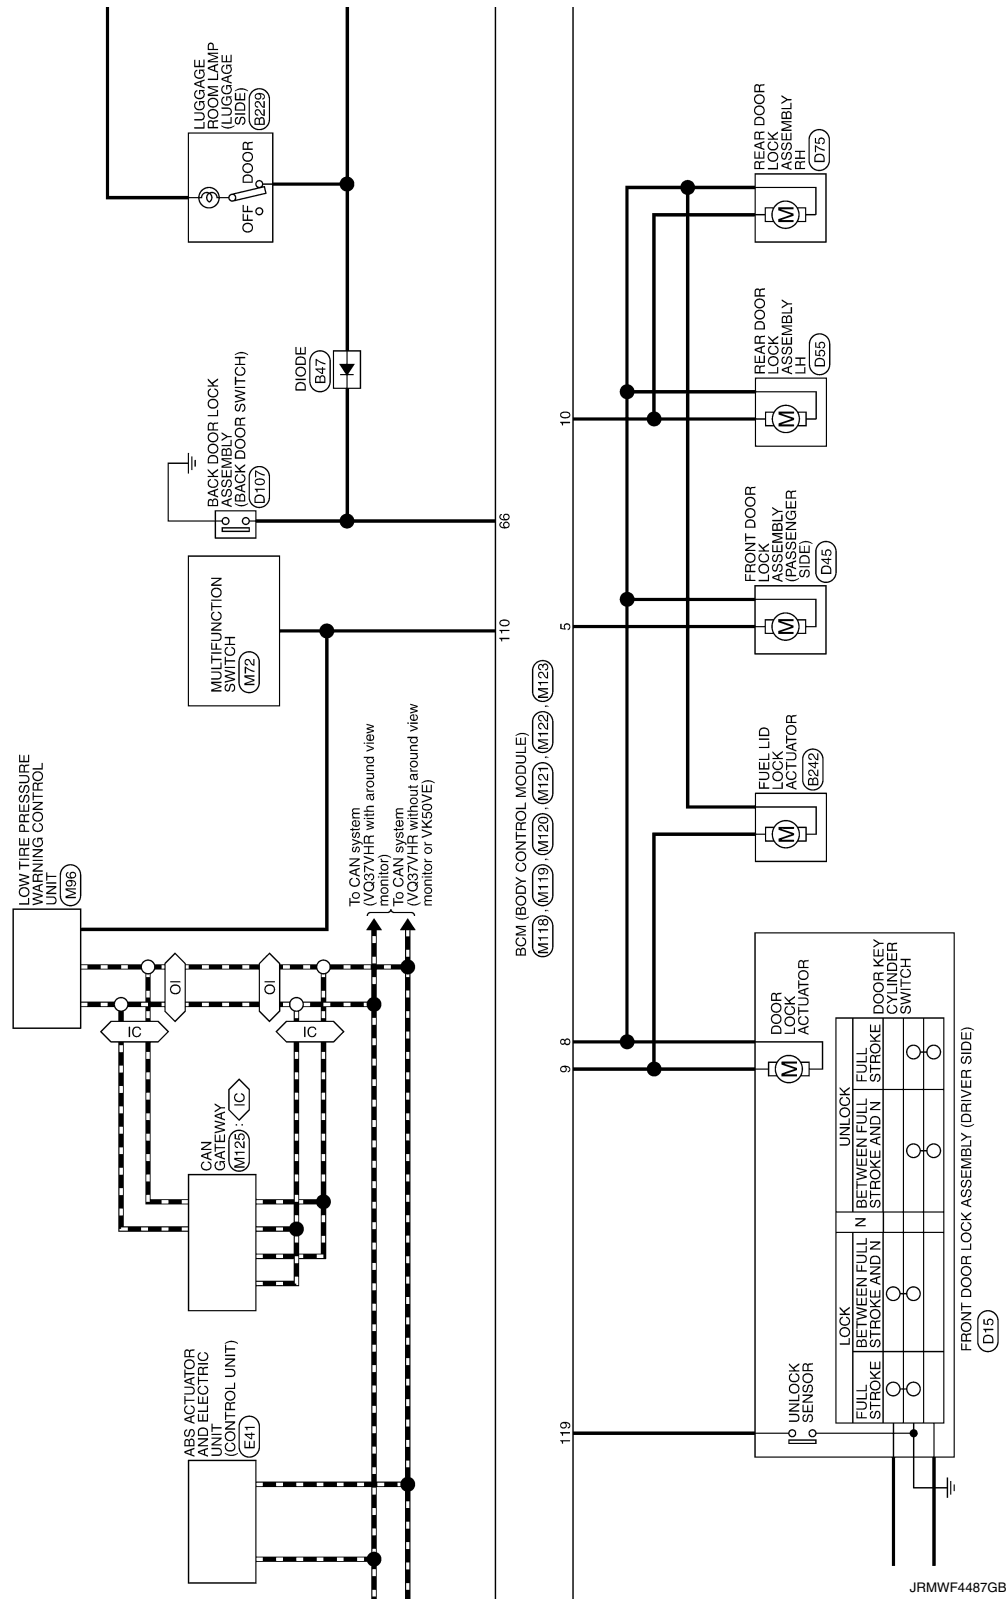

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

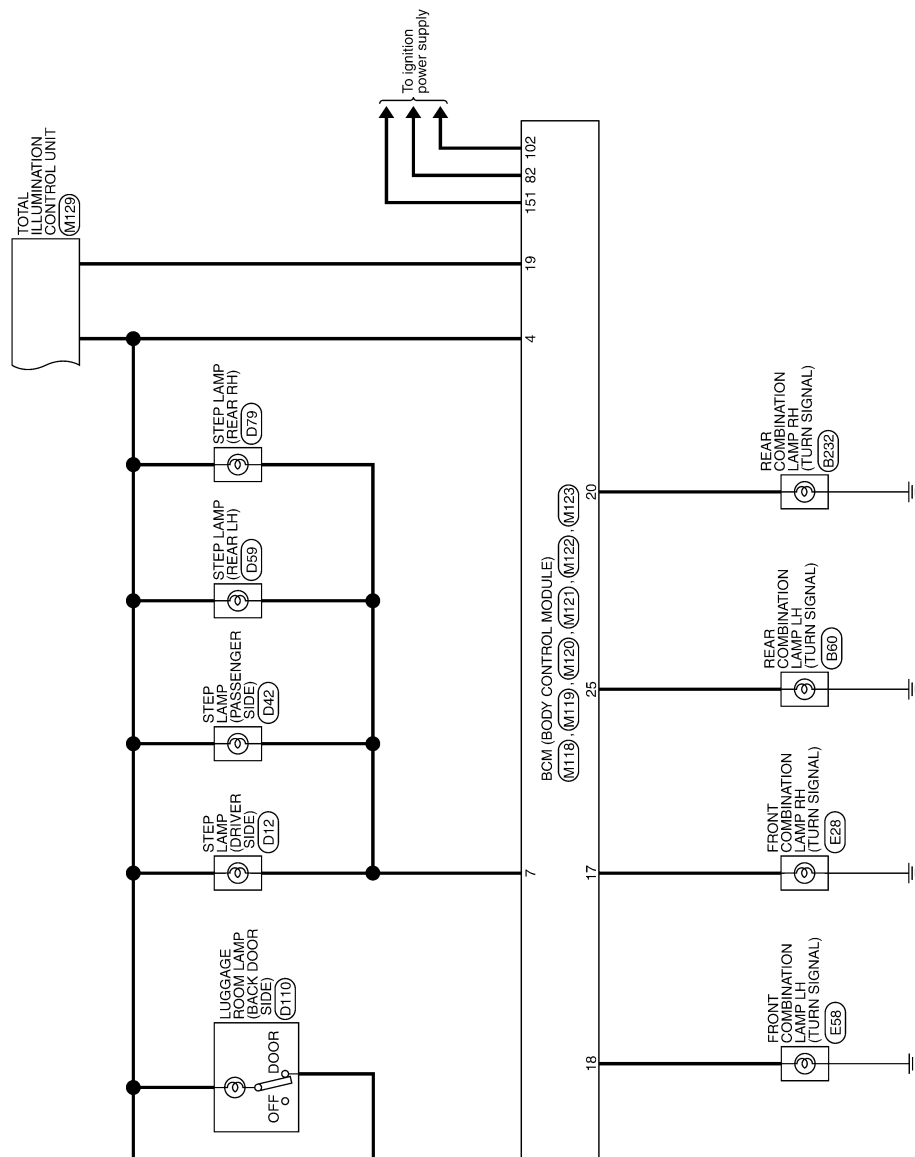

JRMWF4488GB

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

PCS


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	Signal Name [Specification]
B16	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW

 


Connector No.	Signal Name [Specification]
B60	REAR COMBINATION LAMP LH
Connector Type	TH04MW-NH



Terminal No.	Wire	Signal Name [Specification]
2	GR	-

Connector No.	Signal Name [Specification]
B23	REAR DOOR SWITCH LH
Connector Type	A03FW

 


Terminal No.	Wire	Signal Name [Specification]
2	W	-

Connector No.	Signal Name [Specification]
B47	DIODE
Connector Type	24335_C9000



Terminal No.	Wire	Signal Name [Specification]
1	GR	-
2	V	-

 

Connector No.	Signal Name [Specification]
B223	REAR DOOR SWITCH RH
Connector Type	A03FW



Connector No.	Signal Name [Specification]
B229	LUGGAGE ROOM LAMP (LUGGAGE SIDE)
Connector Type	TK03FW



Terminal No.	Wire	Signal Name [Specification]
2	BG	-

Connector No.	Signal Name [Specification]
B228	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	RKG2FGY



Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	SB	-

Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	L	-

Connector No.	Signal Name [Specification]
B222	REAR COMBINATION LAMP RH
Connector Type	TH04MW-NH



Terminal No.	Wire	Signal Name [Specification]
1	P	-
2	LG	-
3	V	-
4	B	-

JRMWF4489GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


BCM (BODY CONTROL MODULE)

Connector No.	B242
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	MD4FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK2AFGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBA OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD RLY DRIVE SIGNAL

Connector No.	B414
Connector Name	POWER SEAT SWITCH
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	GY	-
4	P	-
5	W	-
6	V	-
7	LY	-
8	L	-
9	L/R	-
10	GW	-
33	R	-
48	B	-

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LW	RX
3	RY	CANH
9	W/G	PULSE (RECLINING)
10	P/B	PULSE (RR LIFTING)
11	BR	SLIDING SW (BACKWARD)
12	SB	RECLINING SW (BACKWARD)
13	LG/R	FRONT LIFTING SW (DOWNWARD)
14	GB	REAR LIFTING SW (DOWNWARD)
16	O	VCC
17	Y/R	TX

19	V	CAN-L
21	LY	P RANGE SW
24	R	PULSE (SLIDING)
25	Y/B	PULSE (RR LIFTING)
26	Y	SLIDING SW (FORWARD)
27	R/G	RECLINING SW (FORWARD)
28	W/B	FRONT LIFTING SW (UPWARD)
29	P/L	REAR LIFTING SW (UPWARD)
31	GR	SENSOR GND
32	B/W	GND (SIGNAL)

Connector No.	B457
Connector Name	LUMBAR SUPPORT SWITCH
Connector Type	NS04FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
33	R	-
48	B	-
57	W	-
58	L	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	LG	-
3	GR	-
4	V	-

5	SB	-
6	Y	-
7	BR	-
8	L	-
9	W	-
10	O	-
11	G	-
13	P	-
14	V	-
15	W	-

Connector No.	D9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS03FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
19	Y	-

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	D13
Connector Name	FRONT OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02FL-B



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	D14
Connector Name	FRONT OUTSIDE HANDLE LH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

Connector No.	D15
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	E06FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	R	-
3	G	-
4	B	-
5	V	-
6	V	-

Connector No.	D38
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	W	-
8	L	-
9	G	-
10	Y	-
11	B	-
12	P	-
15	R	-
16	V	-

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	R	-

Connector No.	D43
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02FL-B




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	D44
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-

Connector No.	D45
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	E06FGY-RS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	D54
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-
3	R	-
4	L	-
5	G	-
6	L	-
7	B	-

Connector No.	D55
Connector Name	REAR DOOR LOCK ASSEMBLY LH
Connector Type	E06FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	D59
Connector Name	STEP LAMP (REAR LH)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	O	-

Connector No.	D74
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	P	-
3	R	-
4	L	-
5	G	-
6	L	-
7	B	-

Connector No.	D75
Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	E06FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	L	-

Connector No.	D79
Connector Name	STEP LAMP (REAR RH)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	O	-

Connector No.	D107
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LW	-
2	LB	-
3	G	-
4	L	-
5	W	-
6	LG	-
7	GR	-
8	GR	-

Connector No.	D110
Connector Name	LUGGAGE ROOM LAMP (BACK DOOR SIDE)
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	L	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	D114
Connector Name	BACK DOOR OPENER SWITCH
Connector Type	TK02MBR-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D115
Connector Name	REAR WIPER MOTOR
Connector Type	CJ04FM-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	-
3	BG	-
4	B	-

Connector No.	D116
Connector Name	BACK DOOR OPENER REQUEST SWITCH
Connector Type	TK02MBR-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	D118
Connector Name	OUTSIDE KEY ANTENNA (BACK DOOR)
Connector Type	RK02EGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	R	-

Connector No.	E5
Connector Name	IPDM/ER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH02FM-LCS12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	IPDM/ER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FM-AH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-


45	G
46	BR

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS04FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	V	-
3	B	-
4	P	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LBWR
3	R	LBVR
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP BR
9	B	DP FR
10	W	DS FR
12	L	VAC
14	P	CANL
15	SHIELD	AGND

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	Signal Name [Specification]
19 P	UST
25 Y	BUS-L
26 R	DP FL
27 GR	DS RL
28 G	UZ
29 LG	DS RR
30 SB	BLS
31 R	VDC OFF SW
35 L	CANH
45 B	BUS-H

Connector No.	Signal Name [Specification]
E58	FRONT COMBINATION LAMP LH
ESM4EB-FR	



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	G	-
3	B	-
4	BG	-

Connector No.	Signal Name [Specification]
E80	INTELLIGENT KEY WARNING BUZZER (BUZZER ROOM)
RK03FBR	




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	+BAT (VOL SMALL)
3	GR	BUZZER SIGNAL

Connector No.	Signal Name [Specification]
E91	ICC BRAKE HOLD RELAY
M06FGY-R-US	



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-
3	G	-
4	G	-
6	W	-
7	L	-

Connector No.	Signal Name [Specification]
E103	FUSE BLOCK (J/B)
NS16FW-CS	

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10F	L	-
1F	SB	-
2F	W	-
3F	Y	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	Signal Name [Specification]
E110	STOP LAMP SWITCH
M04FW-LC	



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	BR	-

Connector No.	Signal Name [Specification]
F51	AT ASSEMBLY
RK10FG-DGY	




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	R	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	L	CANH
4	V	K-LINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CANH
9	GR	STARTER RELAY (With VQ engine)
9	LG	STARTER RELAY (With VK engine)
10	B	GROUND

Connector No.	Signal Name [Specification]
F151	TCM
SP10FG	



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	R	CANH
4	O	K-LINE
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CANH
9	Y	STARTER RELAY
10	W/B	GROUND

Connector No.	Signal Name [Specification]
M1	FUSE BLOCK (J/B)
NS08FM-M2	

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1B	LG	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	L	-
8B	R	-
9B	BR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	R	-
6C	P	-
7C	B	-
9C	BG	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-AH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	BAT
2	GR	CLOCK
3	W	DATA
4	Y	ILL BAT
5	L	ILL
6	LG	GROUND
7	B	KEY SWITCH SIGNAL
11	BR	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
11	SB	-
12	P	-
13	L	-
14	P	-
16	BG	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	FR WASHER (-)
2	SB	OUTPUT 4
3	BG	FR WASHER (+)
4	G	IGN
5	L	OUTPUT 3
6	B	GROUND
7	V	INPUT 3
8	BG	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2


Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	BG	-
4	SB	-
6	Y	-

7	V
8	P

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-AH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER-AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
6	B	GROUND
7	W	ALTERNATOR SIGNAL
10	G	AIR BAG SIGNAL
15	B	SECURITY INDICATOR SIGNAL
16	B	GROUND
21	R	METER CONTROL SWITCH GROUND
24	BR	IGNITION SIGNAL
25	Y	COMMUNICATION SIGNAL (LCD->AMP)
26	R	COMMUNICATION SIGNAL (AMP->LCD)
27	V	VEHICLE SPEED SIGNAL (8-PULSE)
28	W	PARKING BRAKE SWITCH SIGNAL
29	SB	BRAKE FLUID LEVEL SWITCH SIGNAL
30	G	PASSENGER SEAT BELT WARNING SIGNAL
31	L	SEAT BELT BUCCLE SWITCH SIGNAL (DRIVER SIDE)
34	B	ILLUMINATION CONTROL SIGNAL
36	LG	WASHER LEVEL SWITCH SIGNAL
37	SB	SELECT SWITCH SIGNAL
38	L	ENTER SWITCH SIGNAL
39	P	TRIP AB RESET SWITCH SIGNAL
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (-)


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


BCM (BODY CONTROL MODULE)

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FM-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
41	V		ACC POWER SUPPLY
42	Y		FUEL LEVEL SENSOR SIGNAL
43	R		INTAKE SENSOR SIGNAL
44	LG		IN-VEHICLE SENSOR SIGNAL
45	P		AMBIENT SENSOR SIGNAL
46	BG		SUNLOAD SENSOR SIGNAL
47	V		GAS SENSOR SIGNAL
53	G		IGNITION POWER SUPPLY
54	BG		BATTERY POWER SUPPLY
55	B		GROUND
56	L		CANH
57	W		BRAKE FLUID LEVEL SWITCH SIGNAL
58	B		FUEL LEVEL SENSOR GROUND
59	GR		INTAKE SENSOR GROUND
60	L		IN-VEHICLE SENSOR GROUND
61	BR		AMBIENT SENSOR GROUND
62	SB		SUNLOAD SENSOR GROUND
63	R		ION MODE SIGNAL
65	BG		ECV SIGNAL
69	L		A/C LAN SIGNAL
70	R		EACH DOOR MOTOR POWER SUPPLY
71	B		GROUND
72	P		CANH

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FM-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	B		GROUND
3	V		ACC
4	R		ILL
5	R		ILL CONT
6	SB		AV COMM (H)
8	LG		AV COMM (L)
9	BR		SW GND
14	SB		DISK EJECT SIGNAL
16	G		HAZARD ON

Connector No.	M79
Connector Name	ACCESSORY RELAY (2)
Connector Type	MS02FL-M2-LC




Terminal No.	Color	Wire	Signal Name [Specification]
1	G		-
2	B		-
3	LG		-
5	L		-

Connector No.	M94
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y		POWER
2	P		OUTPUT
3	B		GROUND

Connector No.	M96
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH02FM-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	P		CAN- (L)
2	L		CAN+ (H)
3	BG		RR TUNER (SIG)
4	L		RL TUNER (SIG)
5	R		FR TUNER (SIG)
6	P		FL TUNER (SIG)
7	SB		RR TUNER (VCC)
8	R		RL TUNER (VCC)
9	GR		FR TUNER (VCC)
10	G		FL TUNER (VCC)
15	Y		IGN
19	W		RR TUNER (RSSI)
20	BR		RL TUNER (RSSI)
21	LG		FR TUNER (RSSI)
22	V		FL TUNER (RSSI)
23	B		RR TUNER (GND)
24	Y		RL TUNER (GND)

25	W		FR TUNER (GND)
26	P		FL TUNER (GND)
30	LG		BCM FLASHER
32	B		GROUND

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB



Terminal No.	Color	Wire	Signal Name [Specification]
1	B		GROUND
2	GR		SIGNAL OUTPUT
4	BR		BATTERY

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	IM03FB-LC



Terminal No.	Color	Wire	Signal Name [Specification]
1	W		BAT (F/L)
2	Y		POWER WINDOW POWER SUPPLY (BAT)
3	BG		POWER WINDOW POWER SUPPLY (RAP)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



4	5	7	8	9	10
11	13	15	17	18	19

Terminal No.	Color Of Wire	Signal Name [Specification]
4	P	INT ROOM LAMP PWR SUPPLY (BAT SAVE)
5	V	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	SB	ROOM LAMP TIMER

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



20	25	26
----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
25	G	TURN SIGNAL LH (REAR)
26	P	REAR WIPER OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										</
--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	M123
Connector Name	TOTAL ILLUMINATION CONTROL UNIT
Connector Type	TH40FW-NH

 


Terminal No.	Color	Wire	Signal Name [Specification]
3	V		DDL2
4	L		TAIL LAMP SIGNAL
5	V		ACC SIGNAL
6	P		BAT SAVING SIGNAL
7	W		IGN SIGNAL
8	G		DOOR SW (AS)
9	BG		DOOR SW (RL)
10	SB		MOOD LAMP (FR ARMREST RH)
11	Y		MOOD LAMP (RR ARMREST RH)
12	P		MAP LAMP (AS)
13	G		PERSONAL LAMP (LH)
14	R		PERSONAL LAMP (RH)
16	GR		FOOT LAMP (RH)
17	LG		HSPL ILLUMINATIONS
18	L		MAP LAMP (DR)
19	R		PUSH ENG START SW LED
20	Y		AMBIENCE LAMP
21	R		BAT POWER SUPPLY
23	B		GROUND
24	B		ILL CONT INPUT
25	BR		DOOR SW (RR)
26	BR		MAP LAMP SW (DOOR)
27	R		MAP LAMP SW (ALL ON)
28	SB		ROOM LAMP TIMER
29	GR		DOOR SW (DR)
30	LG		MOOD LAMP (FR ARMREST LH)
31	BG		MOOD LAMP (RR ARMREST LH)
33	W		HSPL POWER SUPPLY 3
34	R		HSPL POWER SUPPLY 2
35	V		HSPL POWER SUPPLY 1
36	L		FOOT LAMP (LH)
39	B		PUDDLE LAMP (RH)
40	BG		PUDDLE LAMP (LH)

Connector No.	M131
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02MGY




Terminal No.	Color	Wire	Signal Name [Specification]
1	BR		-
2	Y		-

 


Terminal No.	Color	Wire	Signal Name [Specification]
1	W		-
2	V		-
3	L		-
4	B		-
5	G		-
7	BG		-
8	SB		-
9	B		-
10	GR		-
11	R		-

Connector No.	M160
Connector Name	ECM
Connector Type	RH24FGY-R28-LH-Z

 

Terminal No.	Color	Wire	Signal Name [Specification]
97	R		ENGINE SPEED SIGNAL OUTPUT
99	G		SENSOR POWER SUPPLY
100	L		SENSOR POWER SUPPLY
101	P		CAN COMMUNICATION LINE
102	SB		ASD/ICC STEERING SWITCH
104	R		ACCELERATOR PEDAL POSITION SENSOR 1
105	L		CAN COMMUNICATION LINE
106	P		IGNITION SWITCH
108	P		ACCELERATOR PEDAL POSITION SENSOR 2
110	P		STOP LAMP SWITCH
111	V		SENSOR GROUND
112	LG		FUEL PUMP CONTROL MODULE (FFCM) CHECK
114	GR		DATA LINK CONNECTOR
115	GR		SENSOR GROUND
116	G		TRANSMISSION RANGE SWITCH
117	BR		ASD/ICC BRAKE SWITCH
118	R		POWER SUPPLY FOR ECM (BACK-UP)
119	W		SENSOR GROUND
120	W		FUEL TANK TEMPERATURE SENSOR
121	GR		POWER SUPPLY FOR ECM
123	B		ECM GROUND
125	R		FUEL PUMP CONTROL MODULE (FFCM)
128	B		ECM GROUND

Connector No.	M164
Connector Name	ECM
Connector Type	RH24FGY-R28-LH-Z

 

Terminal No.	Color	Wire	Signal Name [Specification]
97	R		ACCELERATOR PEDAL POSITION SENSOR 1
98	P		ACCELERATOR PEDAL POSITION SENSOR 2
99	Y		ACCELERATOR PEDAL POSITION SENSOR 3
99	G		SENSOR POWER SUPPLY (With NAVI)
99	L		SENSOR POWER SUPPLY (Without NAVI)
100	W		SENSOR GROUND
101	SB		ASD/ICC STEERING SWITCH
102	LG		EVAP CONTROL SYSTEM PRESSURE SENSOR
103	G		SENSOR POWER SUPPLY (Without NAVI)
103	L		SENSOR POWER SUPPLY (With NAVI)
104	BR		SENSOR GROUND (Without NAVI)
105	L		REFRIGERANT PRESSURE SENSOR
106	W		FUEL TANK TEMPERATURE SENSOR
107	BG		SENSOR POWER SUPPLY
108	V		SENSOR GROUND
109	G		PNP SIGNAL
110	R		ENGINE SPEED OUTPUT SIGNAL
112	V		ENGINE CANISTER VAPOR CONTROL SYSTEM PRESSURE SENSOR
112	W		ENGINE CANISTER VAPOR CONTROL SYSTEM PRESSURE SENSOR
113	P		CAN COMMUNICATION LINE
114	L		CAN COMMUNICATION LINE
117	GR		DATA LINK CONNECTOR
121	LG		EVAP CANISTER VENT CONTROL VALVE
122	P		STOP LAMP SWITCH
123	B		ECM GROUND
124	B		ECM GROUND
125	GR		POWER SUPPLY FOR ECM
126	BR		ASD/ICC BRAKE SWITCH
127	B		ECM GROUND
128	B		ECM GROUND


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH22FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	SB	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	CANL
81	I	CANH
82	BR	SW GND
86	SHIELD	SHIELD
87	L	TEL VOICE SIGNAL (+)
88	P	TEL VOICE SIGNAL (-)
92	R	VEHICLE SPEED SIGNAL (8-PULSE)
93	V	PARKING BRAKE SIGNAL
94	BG	REVERSE SIGNAL
95	G	IGNITION SIGNAL
96	SB	DISK EJECT SIGNAL
102	B	AUX GND
103	W	AUX AUDIO LH+
104	R	AUX AUDIO RH+

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH22FW-NH



Connector No.	R9
Connector Name	RAIN SENSOR
Connector Type	IAEB03FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	+B
2	GR	SIG
3	B	GROUND

Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA10FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	SW-BIT1
5	P	SW-BIT0
7	BR	+B
8	L	SPEED SENSOR (2P)
9	Y	TIMER (+IGN)
10	G	GROUND

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWF4499GB

INFOID:0000000011025078

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent - Starter control relay signal - Starter relay status signal
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent - Starter relay control signal - Starter relay status signal (CAN)
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled - IGN relay (IPDM E/R) control signal: OFF (Battery voltage) - Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) - Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled - Power position changes to ACC - Receives engine status signal (CAN)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT position, BCM operates a fail-safe control.

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

- More than 1 minute is passed after the rear wiper stops.
- Turn rear wiper switch OFF.
- Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:0000000011025079

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	- U1000: CAN COMM - U1010: CONTROL UNIT(CAN)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Priority	DTC
3	• B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING
4	• B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26EA: KEY REGISTRATION • U0415: VEHICLE SPEED SIG
5	• B2621: INSIDE ANTENNA • B2623: INSIDE ANTENNA
6	B26E7: TPMS CAN COMM

DTC Index

INFOID:0000000011025080

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-20, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM	—	—	—	BCS-39
U1010: CONTROL UNIT(CAN)	—	—	—	BCS-40
U0415: VEHICLE SPEED SIG	—	—	—	BCS-41
B2190: NATS ANTENNA AMP	×	—	—	SEC-47
B2191: DIFFERENCE OF KEY	×	—	—	SEC-50
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-51
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-53
B2195: ANTI SCANNING	×	—	—	SEC-54
B2553: IGNITION RELAY	—	×	—	PCS-53
B2555: STOP LAMP	—	×	—	SEC-55

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference
B2556: PUSH-BTN IGN SW	—	×	×	SEC-57
B2557: VEHICLE SPEED	×	×	×	SEC-59
B2560: STARTER CONT RELAY	×	×	×	SEC-60
B2562: LOW VOLTAGE	—	×	—	BCS-42
B2601: SHIFT POSITION	×	×	×	SEC-61
B2602: SHIFT POSITION	×	×	×	SEC-64
B2603: SHIFT POSI STATUS	×	×	×	SEC-66
B2604: PNP/CLUTCH SW	×	×	×	SEC-69
B2605: PNP/CLUTCH SW	×	×	×	SEC-71
B2608: STARTER RELAY	×	×	×	SEC-73
B260A: IGNITION RELAY	×	×	×	PCS-55
B260F: ENG STATE SIG LOST	×	×	×	SEC-75
B2614: BCM	—	×	×	PCS-57
B2615: BCM	—	×	×	PCS-59
B2616: BCM	—	×	×	PCS-61
B2617: BCM	×	×	×	SEC-77
B2618: BCM	×	×	×	PCS-63
B261A: PUSH-BTN IGN SW	—	×	×	SEC-79
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-82
B2621: INSIDE ANTENNA	—	×	—	DLK-101
B2623: INSIDE ANTENNA	—	×	—	DLK-103
B26E7: TPMS CAN COMM	—	—	—	BCS-43
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	SEC-76

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000011025081

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (light is illuminated)	Front fog lamp switch OFF	Off
		• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition		Value/Status
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	- Press the selector button with selector lever in P position - Selector lever in any position other than P	Off
	Release the selector button with selector lever in P position		On
S/L RLY -REQ	NOTE: The item is indicated, but not monitored.		Off
S/L STATE	NOTE: The item is indicated, but not monitored.		UNLOCK
DTRL REQ	NOTE: The item is indicated, but not monitored.		Off
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	Close the hood		Off
	Open the hood		On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	- Panic alarm is activated - Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM		On
HORN CHIRP	Not operating		Off
	Door locking with Intelligent Key (horn chirp mode)		On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.		Off

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

TERMINAL LAYOUT

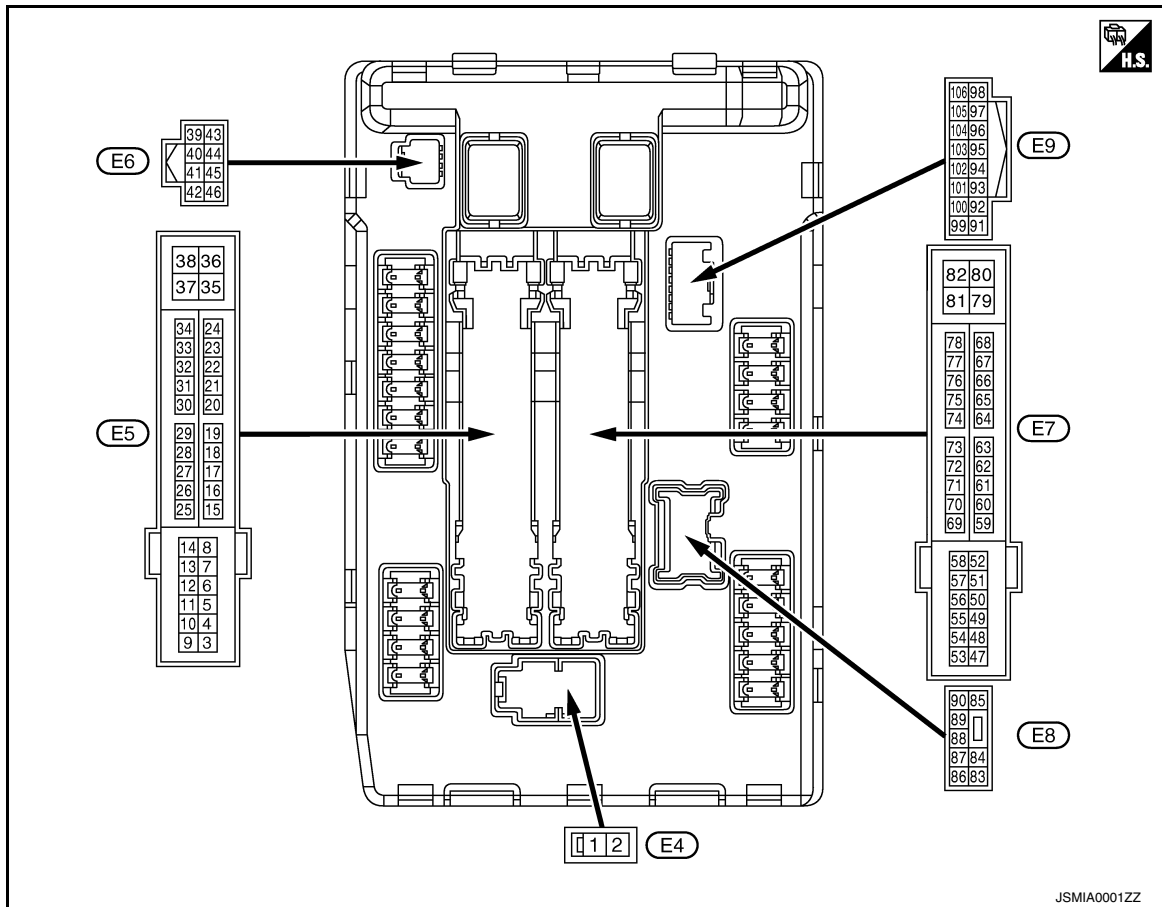

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (R)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10*1 (SB)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				- Ignition switch ON - Ignition switch OFF (For a few seconds after turning igni- tion switch OFF)		Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON		0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				- Approximately 1 second after turning the ignition switch ON - Engine running		Battery voltage
16 (LG)	Ground	Front wiper stop position	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
26*2 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (BG)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (GR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B)	Ground	Ground	—	Ignition switch ON		0 V
42 (Y)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC		0 V
				Ignition switch ON		0.7 V
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	- Press the selector button (Selector lever P) - Selector lever in any position other than P	Battery voltage
					Release the selector button (selector lever P)	0 V
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (G)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)




< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
49 (W)*1 (SB)*3	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
51 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
52 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
54 (R)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
55 (BR)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage
56 (BG)*1 (V)*3	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
57 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
69 (W)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 – 1.5 V
70 (BG)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 – 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 – 1.0 V
74 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
75 (Y)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]

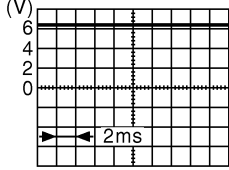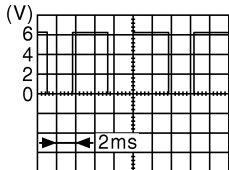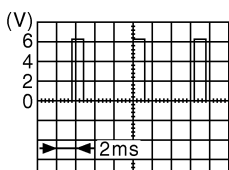Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
76 (P) ^{*1} (V) ^{*3}	Ground	Power generation command signal	Output	Ignition switch ON	 6.3 V
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 1.4 V
77 (B) ^{*1} (L) ^{*3}	Ground	Fuel pump relay control	Output	- Approximately 1 second after turning the ignition switch ON - Engine running	0 – 1.0 V
				Approximately 1 second or more after turning the ignition switch ON	Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking	Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF
				Lighting switch 2ND	Battery voltage
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF
				Lighting switch 2ND	Battery voltage
86 (W)	Ground	Front fog lamp	Output	Lighting switch 2ND	- Front fog lamp switch ON - Daytime running light activated (Only for Canada)
				Front fog lamp switch OFF	0 V
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON	Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	- Lighting switch HI - Lighting switch PASS
				Lighting switch OFF	0 V
90 (Y)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	- Lighting switch HI - Lighting switch PASS
				Lighting switch OFF	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
91 (P)	Ground	Parking lamp	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 – 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V

*1: VK engine models

*2: Only for the models with ICC system

*3: VQ engine models

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Wiring Diagram - IPDM E/R -

INFOID:0000000011025082

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

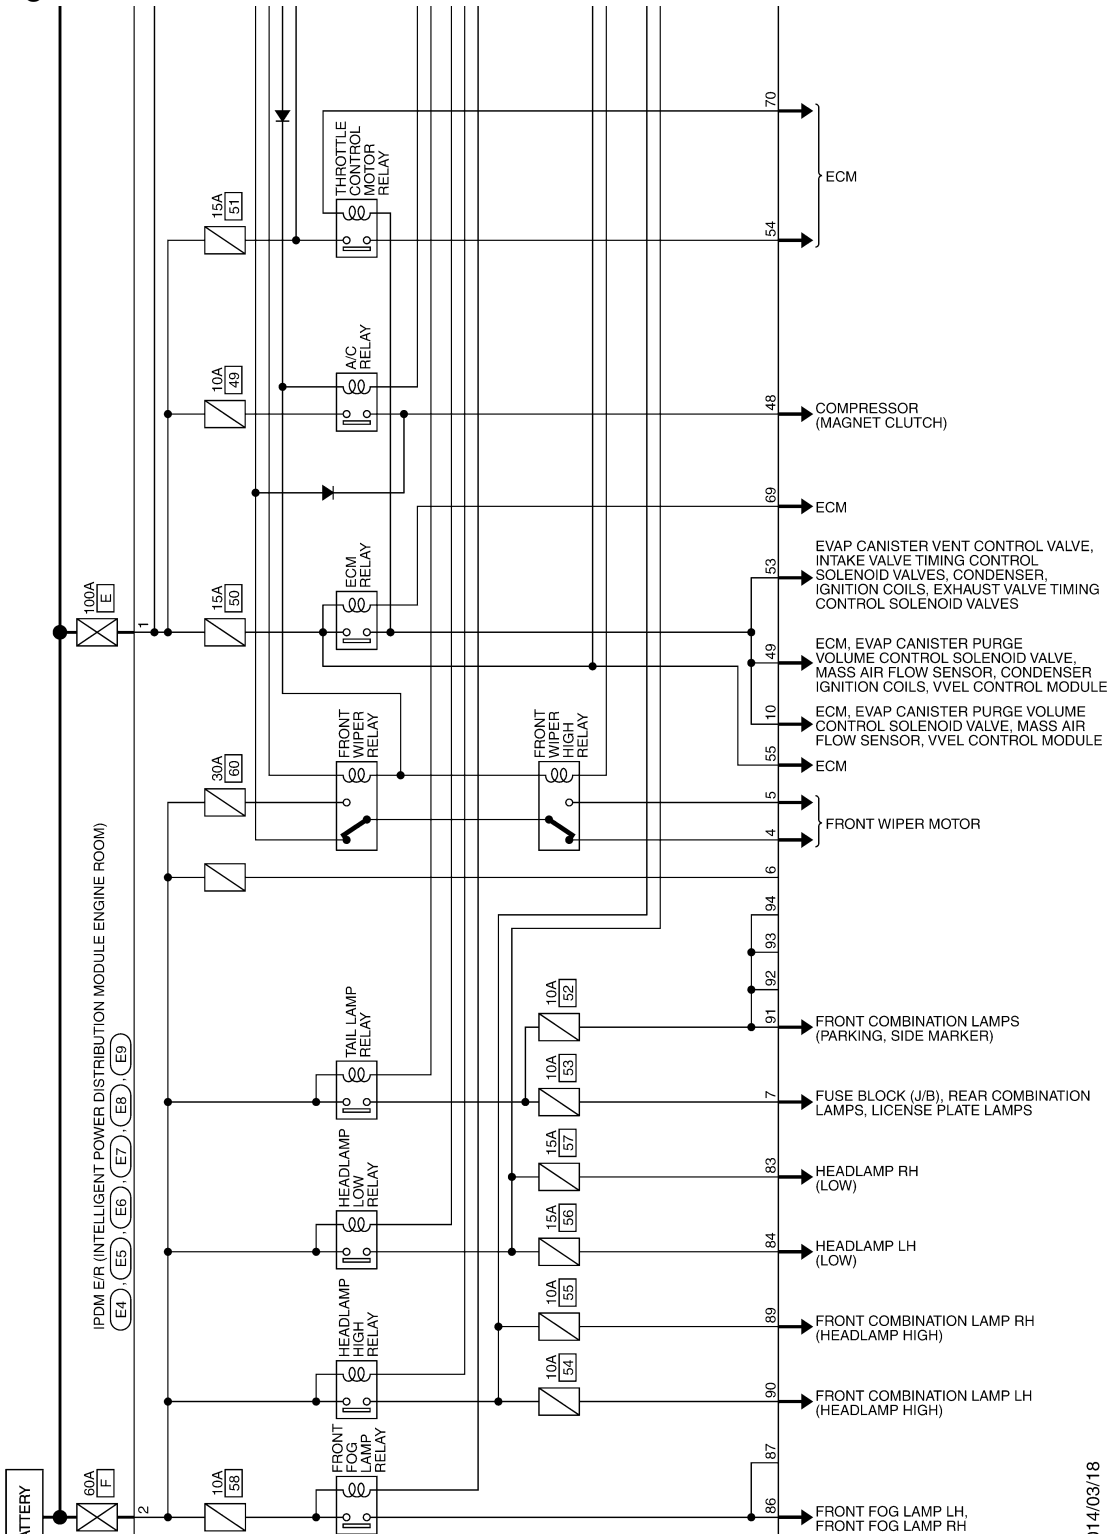


2014/03/18

JRMWF4523GB


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

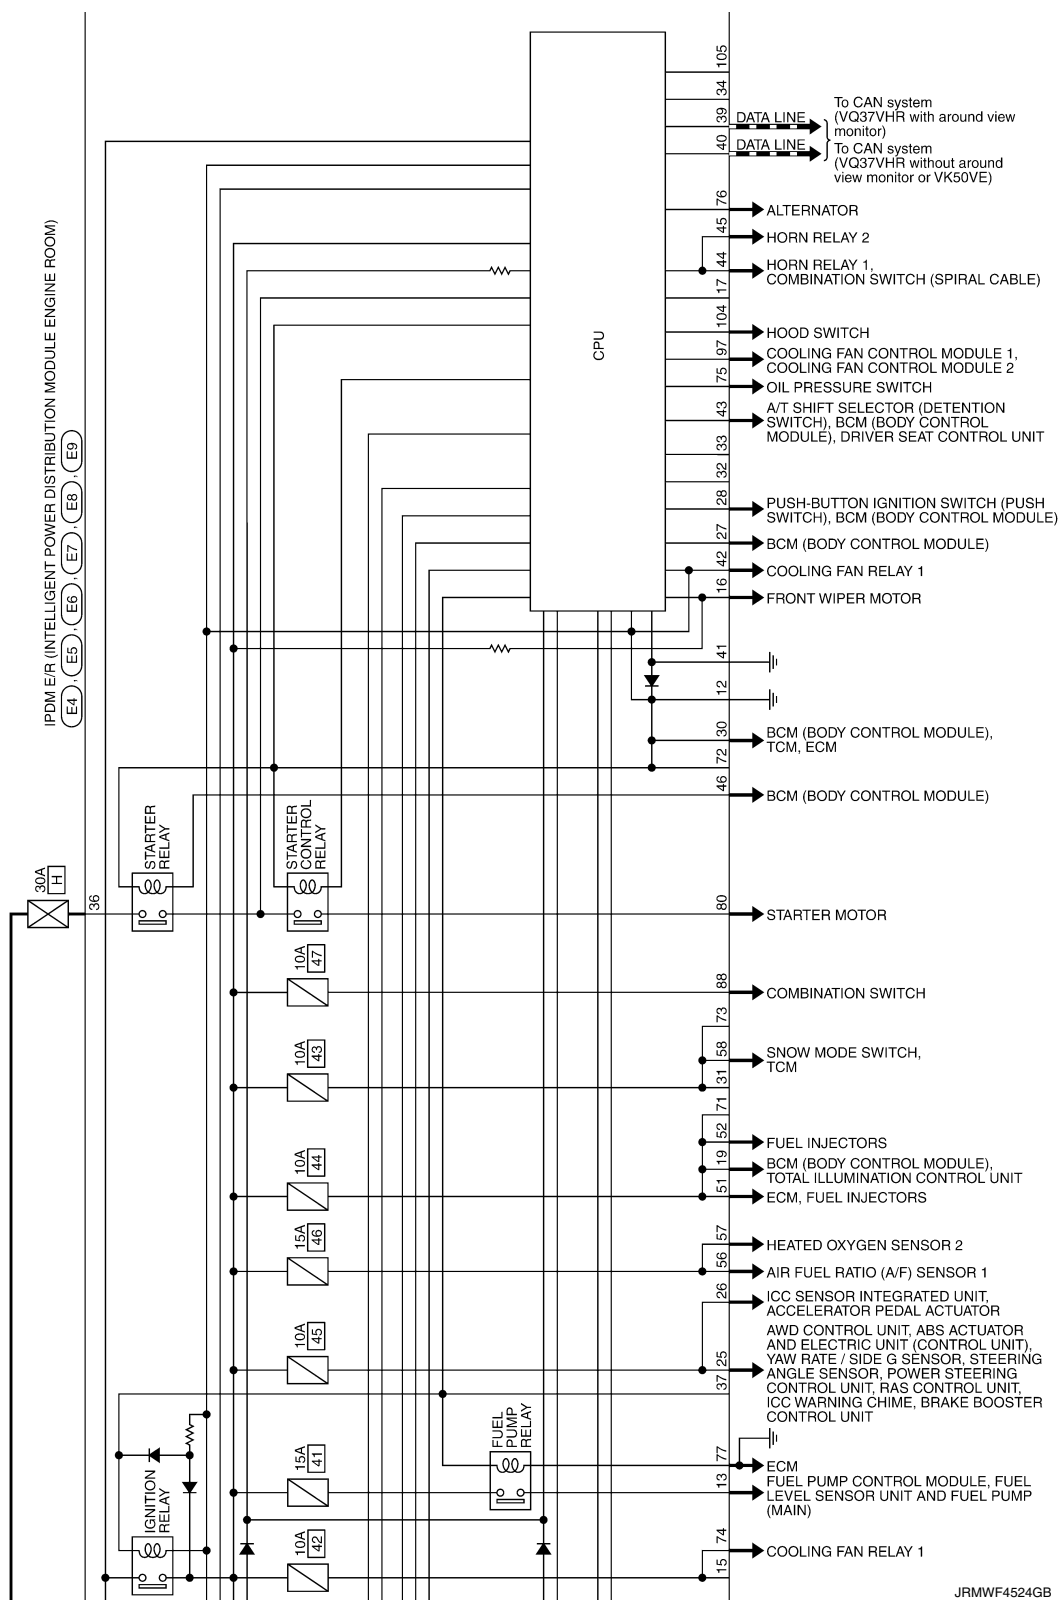

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

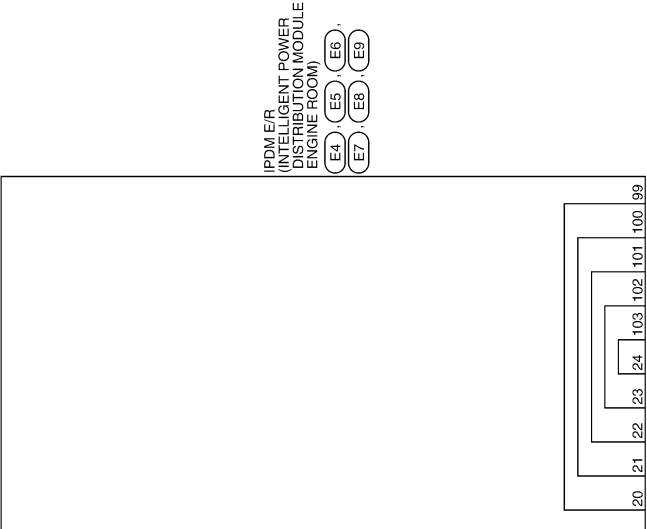

JRMWF4525GB

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) < ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-




Terminal No.	Color Of Wire	Signal Name [Specification]
58	Y	-
69	W	-
70	BG	-
74	G	-
75	Y	-
76	P	- [With VK engine]
76	V	- [With VQ engine]
77	B	- [With VK engine]
77	L	- [With VQ engine]
80	W	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	BR	-

 


Terminal No.	Color Of Wire	Signal Name [Specification]
58	Y	-
69	W	-
70	BG	-
74	G	-
75	Y	-
76	P	- [With VK engine]
76	V	- [With VQ engine]
77	B	- [With VK engine]
77	L	- [With VQ engine]
80	W	-

Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	P	-
86	W	-
88	G	-
89	BR	-
90	Y	-

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	SB	- [With VK engine]
49	W	- [With VQ engine]
51	G	-
52	W	-
53	W	-
54	R	-
55	BR	-
55	BG	- [With VK engine]
56	V	- [With VQ engine]
57	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	P	-
86	W	-
88	G	-
89	BR	-
90	Y	-

 

JRMWF4526GB

INFOID:000000011025083

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Control part	Fail-safe operation
Cooling fan	- Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON - Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	- Turns ON the headlamp low relay when the ignition switch is turned ON - Turns OFF the headlamp low relay when the ignition switch is turned OFF - Headlamp high relay OFF
- Parking lamps - License plate lamps - Side marker lamps - Illuminations - Tail lamps	- Turns ON the tail lamp relay when the ignition switch is turned ON - Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	- The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. - The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	- Detects DTC "B2098: IGN RELAY ON" - Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000011025084

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Reference
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC	—	PCS-18
B210B: STR CONT RLY ON CIRC	—	SEC-83
B210C: STR CONT RLY OFF CIRC	—	SEC-84
B210D: STARTER RLY ON CIRC	—	SEC-86
B210E: STARTER RLY OFF CIRC	—	SEC-88
B210F: INTRLCK/PNP SW ON	—	SEC-90
B2110: INTRLCK/PNP SW OFF	—	SEC-92

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010581827

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000011008500

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

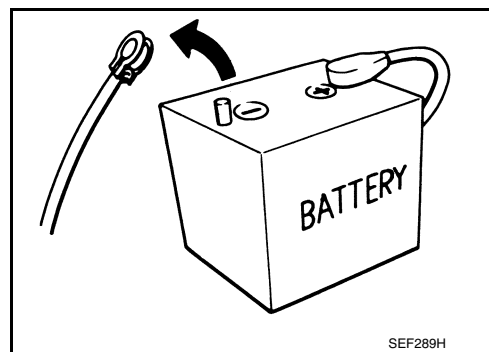

PRECAUTIONS


< PRECAUTION >

[POWER DISTRIBUTION SYSTEM]

Precaution for Procedure without Cowl Top Cover

INFOID:0000000010581828

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

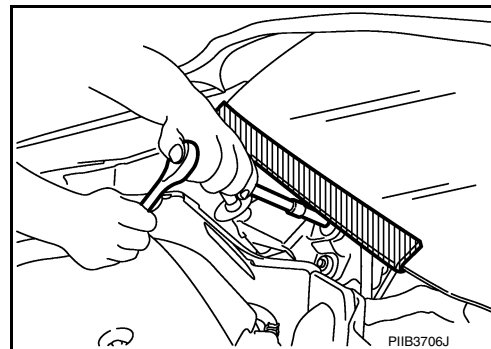

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

SYMPTOM DIAGNOSIS

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

Description

INFOID:0000000010581829

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

NOTE:

The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000010581830

1.CHECK DOOR LOCK FUNCTION

Lock/unlock door with door request switch.

Refer to [DLK-23. "DOOR LOCK FUNCTION : System Description"](#).

Is the operation normal?

YES >> GO TO 2.

NO >> Check door lock function. Refer to [DLK-256. "DRIVER SIDE : Diagnosis Procedure"](#).

2.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on “Work Support” of “INTELLIGENT KEY”.

Refer to [DLK-61. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 3.

3.PERFORM SELF DIAGNOSTIC RESULT

Perform Self Diagnostic result of “INTELLIGENT KEY”.

Refer to [DLK-61. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

Is DTC detected?

YES >> Refer to [DLK-101. "DTC Logic"](#) (instrument center), refer to [DLK-103. "DTC Logic"](#) (luggage room).

NO >> GO TO 4.

4.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-67. "Component Function Check"](#).

Is the inspection normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> GO TO 1.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

Diagnosis Procedure

INFOID:0000000010581831

1.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Check push-button ignition switch operation.

Refer to [PCS-41, "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [PCS-67, "Component Function Check"](#).

2.CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-70, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

REMOVAL AND INSTALLATION


PUSH BUTTON IGNITION SWITCH

Removal and Installation

INFOID:0000000010581832

REMOVAL

Remove the push-button ignition switch fixing pawl using a remover tool (A), and then remove push-button ignition switch (1).

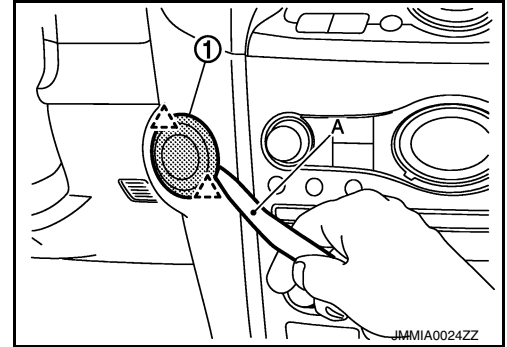

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS