
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT ..LAN-63, LAN-201,
LAN-220, LAN-240, LAN-262, LAN-286

A

A-BAG BRANCH LINE CIRCUIT .LAN-58, LAN-90,
LAN-107, LAN-126, LAN-146, LAN-168,
LAN-199, LAN-217, LAN-237, LAN-258,
LAN-281
A/T CONTROL SYSTEM TM-8
A/T FLUID TM-174
A/T FLUID COOLER TM-177
A/T POSITION TM-181
A/T SHIFT SELECTOR TM-182
ABBREVIATIONS GI-14
ABS BRC-20
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)BRC-129, BRC-159, DAS-328
ABS BRANCH LINE CIRCUIT LAN-72, LAN-97,
LAN-116, LAN-136, LAN-157, LAN-181,
LAN-207, LAN-227, LAN-248, LAN-270,
LAN-295
ABS FUNCTION DOES NOT OPERATE. BRC-148
ABS WARNING LAMP BRC-125
ACC WARNING DOES NOT OPERATE... DLK-211
ACCELERATOR CONTROL SYSTEM ACC-4
ACCELERATOR PEDAL ACTUATORDAS-167
ACCELERATOR PEDAL ASSEMBLY.....DAS-203
ACCS (ADVANCE CLIMATE CONTROL SYSTEM)
HAC-29
ACTION TESTDAS-259, DAS-392
ACTIVE ADAPTIVE FRONT-LIGHTING SYSTEM .
EXL-21
ADDITIONAL SERVICE WHEN REPLACING BCM
WT-21
ADP BRANCH LINE CIRCUIT ... LAN-70, LAN-115,
LAN-135, LAN-156, LAN-179, LAN-226,
LAN-247, LAN-269, LAN-293
AFS BRANCH LINE CIRCUIT ...LAN-59, LAN-108,
LAN-147, LAN-169, LAN-218, LAN-259,
LAN-282
AFS CONTROL UNIT EXL-205, EXL-243
AIR BREATHER HOSE..... TM-204
AIR CLEANER AND AIR DUCT.....EM-27
AIR CLEANER FILTEREM-22
AIR CONDITIONER CONTROLHAC-116
AIR CONDITIONING CUT CONTROL..... EC-68
AIR DISTRIBUTION VTL-6
AIR MIX DOOR CONTROL SYSTEM..... HAC-36
AIR MIX DOOR MOTOR..... HAC-54
ALTERNATOR..... CHG-31
AMBIENT SENSORHAC-67, HAC-129
ANTENNA BASE AV-132, AV-276, AV-504

ANTENNA FEEDER.....AV-142, AV-286, AV-519
ANTI-PINCH FUNCTION DOES NOT OPERATE ..
SE-113
ANTI-PINCH FUNCTION DOES NOT OPERATE
NORMALLYPWC-117
APA BRANCH LINE CIRCUITLAN-75, LAN-184,
LAN-298
APPLICATION NOTICE SN-3
AROUND VIEW MONITOR CONTROL UNIT
AV-340, AV-511
ASCD BRAKE SWITCH EC-497
ASCD INDICATOR EC-500
AUTO ANTI-DAZZLING INSIDE MIRROR SYSTEM
MIR-26, MIR-142
AUTO DOOR LOCK OPERATION DOES NOT
OPERATEDLK-199
AUTO LIGHT SYSTEMEXL-15, EXL-100, EXL-258,
EXL-314
AUTO OPERATION DOES NOT OPERATE. RF-74
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY ...PWC-118
AUTOMATIC AIR CONDITIONER SYSTEMHAC-17
AUTOMATIC DRIVE POSITIONER CONTROL UNIT
ADP-143, ADP-222, MIR-52
AUTOMATIC DRIVE POSITIONER SYSTEM.....
ADP-13
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-181, EC-77
AV BRANCH LINE CIRCUITLAN-60, LAN-91,
LAN-109, LAN-127, LAN-148, LAN-170,
LAN-200, LAN-219, LAN-238, LAN-260,
LAN-283
AV CONTROL UNIT AV-35, AV-126, AV-167,
AV-266, AV-328, AV-495
AVM BRANCH LINE CIRCUIT ...LAN-67, LAN-132,
LAN-153, LAN-176, LAN-244, LAN-266,
LAN-290
AWD CONTROL UNIT DLN-20, DLN-61
AWD SYSTEMDLN-23
AWD WARNING LAMPDLN-52
AWD WARNING LAMP BLINKS QUICKLY .DLN-57
AWD WARNING LAMP BLINKS SLOWLY..DLN-58
AWD WARNING LAMP DOES NOT TURN OFF
DLN-54
AWD WARNING LAMP DOES NOT TURN ON
DLN-53

B

B TERMINAL CIRCUIT CHG-14, STR-9
B0001 DRIVER AIR BAG MODULE SRC-22
B0002 DRIVER AIR BAG MODULE SRC-25
B0010 PASSENGER AIR BAG MODULE .. SRC-28
B0011 PASSENGER AIR BAG MODULE .. SRC-30
B0020 SIDE AIR BAG MODULE SRC-32

B0021 CURTAIN AIR BAG MODULE.....	SRC-34	B2516 SHIFT SIGNAL [P, R]	EXL-54
B0028 SIDE AIR BAG MODULE	SRC-36	B2517 VEHICLE SPEED SIGNAL	EXL-55
B0029 CURTAIN AIR BAG MODULE.....	SRC-38	B2519 LEVELIZER CALIBRATION	EXL-56
B0091 SATELLITE SENSOR	SRC-40	B2521 ECU CIRCUIT	EXL-57
B0093 FRONT DOOR SATELLITE SENSOR LH....	SRC-42	B2553 IGNITION RELAY	PCS-52
B0094 CRASH ZONE SENSOR	SRC-44	B2555 STOP LAMP.....	SEC-47
B0096 SATELLITE SENSOR	SRC-46	B2556 PUSH-BUTTON IGNITION SWITCH.....	SEC-49
B0098 FRONT DOOR SATELLITE SENSOR RH...	SRC-48	B2557 VEHICLE SPEED	SEC-51
B0099 SATELLITE SENSOR	SRC-50	B2560 STARTER CONTROL RELAY	SEC-52
B00A0 OCCUPANT CLASSIFICATION SYSTEM		B2562 LOW VOLTAGE.....	BCS-44
CONTROL UNIT	SRC-52	B2601 SHIFT POSITION	SEC-53
B00D5 FRONT PASSENGER AIR BAG OFF		B2602 SHIFT POSITION	SEC-56
INDICATOR	SRC-54	B2603 SHIFT POSITION STATUS	SEC-59
B1400, B1401, B1402, B1403, B1404, B1405 AIR		B2604 PNP SWITCH	SEC-62
BAG DIAGNOSIS SENSOR UNIT	SRC-56	B2605 PNP SWITCH	SEC-64
B1406, B1407, B1408, B1409, B1410 AIR BAG		B2608 STARTER RELAY	SEC-66
DIAGNOSIS SENSOR UNIT	SRC-58	B260A IGNITION RELAY	PCS-54
B1411, B1412, B1413, B1414, B1415 AIR BAG		B260F ENGINE STATUS.....	SEC-68
DIAGNOSIS SENSOR UNIT	SRC-60	B2614 ACC RELAY	PCS-56
B1416, B1417, B1418, B1419, B1420 AIR BAG		B2615 BLOWER RELAY CIRCUIT	PCS-59
DIAGNOSIS SENSOR UNIT	SRC-62	B2616 IGNITION RELAY CIRCUIT	PCS-62
B1421 FRONTAL COLLISION DETECTION.....	SRC-64	B2617 STARTER RELAY CIRCUIT	SEC-71
B1422 SIDE COLLISION DETECTION	SRC-65	B2618 BCM	PCS-65
B1425 REAR COLLISION DETECTION	SRC-66	B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-66,
B142A IGN VOLTAGE	SRC-67		SEC-73
B1430 SEAT BELT PRE-TENSIONER.....	SRC-69	B261E VEHICLE TYPE	SEC-76
B1431 SEAT BELT PRE-TENSIONER.....	SRC-71	B2621 INSIDE KEY ANTENNA 1	DLK-58
B1500 DOOR SATELLITE SENSOR.....	SRC-73	B2622 INSIDE ANTENNA	DLK-60
B2098 IGNITION RELAY ON STUCK	PCS-15	B2623 INSIDE KEY ANTENNA 3	DLK-62
B2099 IGNITION RELAY OFF STUCK	PCS-17	B26E1 NO RECEPTION OF ENGINE STATUS	
B210B STARTER CONTROL RELAY	SEC-77	SIGNAL	SEC-69
B210C STARTER CONTROL RELAY	SEC-78	B26EA KEY REGISTRATION.....	SEC-70
B210D STARTER RELAY	SEC-80	B2700 CORNER SENSOR [FL]	SN-36
B210E STARTER RELAY	SEC-82	B2701 SENSOR HARNESS OPEN [CR-FL].....	SN-37
B210F PNP/CLUTCH INTERLOCK SWITCH	SEC-84	B2702 CORNER SENSOR [FR].....	SN-38
B2110 PNP/CLUTCH INTERLOCK SWITCH.....	SEC-86	B2703 SENSOR HARNESS OPEN [CR-FR].....	SN-39
B2112 SLIDING MOTOR.....	ADP-48	B2704 CORNER SENSOR [RL]	SN-40
B2113 RECLINING MOTOR.....	ADP-50	B2705 SENSOR HARNESS OPEN [CR-RL].....	SN-41
B2116 TILT MOTOR	ADP-52	B2706 CORNER SENSOR [RR]	SN-42
B2128 UART COMMUNICATION LINE.....	ADP-54	B2707 SENSOR HARNESS OPEN [CR-RR].....	SN-43
B2130 EEPROM.....	ADP-55	B2708 CENTER SENSOR [BL]	SN-44
B2190 NATS ANTENNA AMP.	SEC-40	B2709 SENSOR HARNESS OPEN [CT-BL]	SN-45
B2191 DIFFERENCE OF KEY	SEC-43	B270A CENTER SENSOR [BR]	SN-46
B2192 ID DISCORD, IMMUECM	SEC-44	B270B SENSOR HARNESS OPEN [CT-BR].....	SN-47
B2193 CHAIN OF ECM-IMMU	SEC-45	B270C CENTER SENSOR [FL].....	SN-48
B2195 ANTI-SCANNING	SEC-46	B270D SENSOR HARNESS OPEN [CT-FL]	SN-49
B2201 COMMUNICATION ERROR 1	MWI-45	B270E CENTER SENSOR [FR]	SN-50
B2202 COMMUNICATION ERROR 2	MWI-47	B270F SENSOR HARNESS OPEN [CT-FR]	SN-51
B2205 VEHICLE SPEED.....	MWI-49	B2720 CORNER SENSOR [RL]	AV-396
B2267 ENGINE SPEED	MWI-50	B2723 CORNER SENSOR [RR]	AV-399
B2268 WATER TEMP.....	MWI-51	B2724 SONAR CONTROL UNIT	AV-402
B2503, B2504 SWIVEL ACTUATOR.....	EXL-45	B2729 CORNER SENSOR [FL]	AV-403
B2514 HEIGHT SENSOR UNUSUAL [RR]	EXL-51	B272C CORNER SENSOR [FR]	AV-406
		BACK DOOR	DLK-248
		BACK DOOR DOES NOT OPENED	DLK-193
		BACK DOOR FINISHER	EXT-50

BACK DOOR LOCK.....DLK-266
 BACK DOOR OPENER ACTUATOR.....DLK-76
 BACK DOOR OPENER SWITCH.....DLK-83
 BACK DOOR OPENER SYSTEM.....DLK-45
 BACK DOOR REQUEST SWITCH.....DLK-87
 BACK DOOR TRIM.....INT-37
 BACK DOOR WINDOW GLASS.....GW-15
 BACK-UP LAMPEXL-145, EXL-249, EXL-359,
 EXL-444
 BASE AUDIO WITHOUT NAVIGATION.....AV-50
 BATTERY.....PG-3, PG-117
 BATTERY TERMINAL WITH FUSIBLE LINKPG-119
 BCM.....WT-12
 BCM (BODY CONTROL MODULE).....ADP-161,
 BCS-50, BCS-97, DEF-28, DLK-141, EXL-149,
 EXL-363, INL-59, MIR-70, PCS-82, PWC-36,
 RF-16, SEC-133, WCS-75, WW-49
 BCM BRANCH LINE CIRCUIT ...LAN-64, LAN-92,
 LAN-110, LAN-129, LAN-150, LAN-173,
 LAN-202, LAN-221, LAN-241, LAN-263,
 LAN-287
 BCU BRANCH LINE CIRCUIT ...LAN-76, LAN-185,
 LAN-299
 BLIND SPOT WARNING.....DAS-377
 BLOWER MOTOR.....HAC-59
 BLOWER MOTOR CONTROL SYSTEM...HAC-40
 BLOWER UNIT.....VTL-19
 BODY ALIGNMENT.....BRM-63
 BODY COMPONENT PARTS.....BRM-11
 BODY CONSTRUCTION.....BRM-29
 BODY CONTROL SYSTEM.....BCS-8
 BODY EXTERIOR PAINT COLOR.....BRM-2
 BODY MAINTENANCE.....MA-35
 BODY SIDE TRIM.....INT-21
 BOSE AMP.....AV-178, AV-274, AV-337, AV-503
 BOSE AUDIO WITH NAVIGATION.....AV-352
 BOSE AUDIO WITHOUT NAVIGATIONAV-185
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON.....EXL-227, EXL-425
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON.....EXL-224, EXL-422
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON.....EXL-225, EXL-423
 BRAKE BOOSTER.....BR-16, BR-32
 BRAKE BOOSTER CONTROL UNITCCS-158,
 CCS-178, DAS-165, DAS-201
 BRAKE BOOSTER PRESSURE SENSOR ..BR-35
 BRAKE FLUID.....BR-13
 BRAKE MASTER CYLINDER.....BR-15, BR-28
 BRAKE PEDAL.....BR-10, BR-21
 BRAKE PIPING.....BR-23
 BRAKE WARNING LAMP.....BRC-126
 BSW BRANCH LINE CIRCUIT ..LAN-71, LAN-180,
 LAN-294
 BSW COMMUNICATION CIRCUIT.....LAN-83,
 LAN-192, LAN-306

BSW CONTROL MODULEDAS-370, DAS-436
 BSW INDICATOR.....DAS-439
 BSW SYSTEM SYMPTOMS.....DAS-434
 BUZZER (BACKWARD).....SN-64
 BUZZER (COMBINATION METER).....DLK-104
 BUZZER CIRCUITSN-55

C

C0126 STEERING ANGLE SENSOR SIGNAL.....
 EXL-60
 C0428 STEERING ANGLE SENSOR
 CALIBRATIONEXL-61
 C1101, C1102, C1103, C1104 WHEEL SENSOR...
 BRC-36
 C1105, C1106, C1107, C1108 WHEEL SENSOR...
 BRC-41
 C1109 POWER AND GROUND SYSTEM .BRC-48
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT)BRC-50
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-52
 C1115 WHEEL SENSORBRC-55
 C1116 STOP LAMP SWITCH.....BRC-62
 C1120, C1122, C1124, C1126 IN ABS SOLBRC-67
 C1121, C1123, C1125, C1127 OUT ABS SOL.....
 BRC-69
 C1130 ENGINE SIGNAL.....BRC-71
 C1140 ACTUATOR RELAY SYSTEMBRC-73
 C1142 PRESS SENSOR.....BRC-75
 C1143 STEERING ANGLE SENSORBRC-78
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENTBRC-82
 C1145, C1146 YAW RATE/SIDE G SENSOR
 BRC-84
 C1154 TRANSMISSION RANGE SWITCH BRC-87
 C1155 BRAKE FLUID LEVEL SWITCHBRC-89
 C1164, C1165 CV SYSTEM.....BRC-94
 C1166, C1167 SV SYSTEMBRC-96
 C1170 VARIANT CODINGBRC-98
 C1185 ICC UNITBRC-99
 C1197 VACUUM SENSOR.....BRC-101
 C1198 VACUUM SENSOR.....BRC-104
 C1199 VACUUM SENSOR.....BRC-107
 C119A VACUUM SENSOR.....BRC-110
 C1201 AWD CONTROL UNIT.....DLN-34
 C1203 ABS ACTUATOR AND ELECTRIC UNIT
 (CONTROL UNIT).....DLN-35
 C1204 AWD SOLENOID.....DLN-36
 C1205 AWD ACTUATOR RELAY.....DLN-39
 C1210 ECM.....DLN-41
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSUREWT-25
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSORWT-27
 C1716, C1717, C1718, C1719 TIRE PRESSURE
 SENSORWT-30

C1729 VEHICLE SPEED SIGNAL	WT-32	C1B50 SIDE RADAR MALFUNCTION	DAS-397
C1734 BCM	WT-34	C1B51 BSW/BSI INDICATOR SHORT CIRCUIT	DAS-398
C1A00 CONTROL UNIT	CCS-47, DAS-33, DAS-394	C1B52 BSW/BSI INDICATOR OPEN CIRCUIT	DAS-399
C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2	CCS-49, DAS-35, DAS-395	C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-401
C1A03 VEHICLE SPEED SENSOR	CCS-51, DAS-37, DAS-396	C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-402
C1A04 ABS/TCS/VDC SYSTEM	CCS-53, DAS-39	C1B55 RADAR BLOCKAGE	DAS-403
C1A05 BRAKE SW/STOP LAMP SW	CCS-55, DAS-41	C1F01 ACCELERATOR PEDAL ACTUATOR	DAS-108
C1A06 OPERATION SW	CCS-60, DAS-46	C1F02 ACCELERATOR PEDAL ACTUATOR	DAS-110
C1A08 PRESSURE SENSOR	CCS-63, DAS-49	C1F03 ACCELERATOR PEDAL ACTUATOR	DAS-111
C1A09 BOOSTER SOLENOID ...	CCS-65, DAS-51	C1F05 ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT	DAS-113
C1A10 RELEASE SWITCH	CCS-68, DAS-54	C1F06 CAN CIRCUIT2	DAS-115
C1A11 PRESSURE CONTROL ...	CCS-71, DAS-57	C1F07 CAN CIRCUIT1	DAS-117
C1A12 LASER BEAM OFF CENTER	CCS-74, DAS-60	CAMERA IMAGE SIGNAL CIRCUIT	AV-108, AV-248, AV-471
C1A13 STOP LAMP RELAY	CCS-75, DAS-61	CAMSHAFT	EM-95
C1A14 ECM	CCS-82, DAS-68	CAMSHAFT VALVE CLEARANCE	EM-11
C1A15 GEAR POSITION	CCS-84, DAS-70	CAN COMMUNICATION	EC-87
C1A16 RADAR STAIN	CCS-87, DAS-73	CAN COMMUNICATION CIRCUIT	LAN-79, LAN-99, LAN-118, LAN-138, LAN-159, LAN-188, LAN-209, LAN-229, LAN-250, LAN-272, LAN-302
C1A18 LASER AIMING INCOMP ..	CCS-89, DAS-75	CAN COMMUNICATION SYSTEM	HAC-33, LAN-9, LAN-27, LAN-32
C1A21 UNIT HIGH TEMP	CCS-91, DAS-77	CANNOT ADJUST HEATED SEAT TEMPERATURE	SE-117
C1A22 BCU CIRCUIT	CCS-93, DAS-79	CENTER CONSOLE ASSEMBLY	IP-23
C1A24 NP RANGE	CCS-97, DAS-83	CENTER MUD GUARD	EXT-29
C1A28 BCU POWER SUPPLY CIRCUIT, C1A29 BCU POWER SUPPLY CIRCUIT2	CCS-99, DAS-85	CENTER SPEAKER	AV-272, AV-501
C1A30 BCU CAN COMM CIRC	CCS-101, DAS-87	CHARGING SYSTEM	CHG-10, CHG-19, CHG-24
C1A31 BCU INTERNAL MALF ..	CCS-102, DAS-88	CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-28
C1A32 IBA FLAG STUCK	CCS-104, DAS-90	CHASSIS MAINTENANCE	MA-22
C1A33 CAN TRANSMISSION ERROR ...	CCS-106, DAS-92	CHIME DOES NOT SOUND ...	CCS-166, DAS-190
C1A34 COMMAND ERROR	CCS-108, DAS-94	CIGARETTE LIGHTER ILLUMINATION	INL-107
C1A35 ACCELERATOR PEDAL ACTUATOR	DAS-96	CLOCK	MWI-36, MWI-67, MWI-140
C1A36 ACCELERATOR PEDAL ACTUATOR CAN COMM	DAS-97	COLLISION DIAGNOSIS	SR-5
C1A37 ACCELERATOR PEDAL ACTUATOR CAN 2	DAS-99	COMBINATION METER	MWI-69, MWI-136, WCS-34
C1A38 ACCELERATOR PEDAL ACTUATOR CAN 1	DAS-101	COMBINATION METER DISPLAY FUNCTION	DLK-103
C1A39 STEERING ANGLE SENSOR	CCS-110, DAS-103	COMBINATION SWITCH	BCS-98
C1A40 SYSTEM SWITCH CIRCUIT	CCS-112, DAS-105	COMBINATION SWITCH INPUT CIRCUIT	BCS-46
C1B00 CAMERA UNIT MALF	DAS-289	COMBINATION SWITCH OUTPUT CIRCUIT	BCS-48
C1B00 LDP) CAMERA MALF	DAS-300	COMBINATION SWITCH READING SYSTEM	BCS-10
C1B01 CAM AIMING INCOMP	DAS-290	COMBINATION SWITCH SYSTEM SYMPTOMS ...	BCS-93
C1B02 VHCL SPD DATA MALF	DAS-291		
C1B03 ABNRML TEMP DETECT	DAS-292		
C1B04 LDP) ICC STG SW MALF	DAS-301		
C1B05 LDP) APP SEN MALF	DAS-302		
C1B06 LDP) TCM MALF	DAS-303		
C1B07 ABS DIAGNOSIS	DAS-293		

COMMUNICATION SIGNAL CIRCUIT (CONT-SAT)
[AV-110](#), [AV-250](#)
 COMPOSITE IMAGE SIGNAL CIRCUIT ... [AV-102](#),
[AV-241](#), [AV-466](#)
 COMPRESSION PRESSURE[EM-16](#)
 COMPRESSOR[HA-18](#), [HA-37](#)
 COMPRESSOR CONTROL FUNCTION ... [HAC-13](#)
 CONDENSER [HA-48](#)
 CONSULT/GST CHECKING SYSTEM [GI-50](#)
 CONTROL ROD.....[TM-185](#)
 CONTROL VALVE & TCM [TM-186](#)
 CONVENTIONAL (FIXED SPEED) CRUISE
 CONTROL MODE FUNCTION [CCS-32](#)
 COOLER PIPE AND HOSE [HA-41](#)
 COOLING FAN..... [CO-18](#), [EC-501](#)
 COOLING FAN CONTROL [EC-88](#)
 CORROSION PROTECTION [BRM-20](#)
 COWL TOP [EXT-22](#)
 CRASH ZONE SENSOR [SR-21](#)
 CURTAIN AIR BAG MODULE.....[SR-19](#)
 CYLINDER BLOCK.....[EM-122](#)
 CYLINDER HEAD [EM-112](#)

D

DAYTIME RUNNING LIGHT [EXL-237](#), [EXL-435](#)
 DAYTIME RUNNING LIGHT CIRCUIT..... [EXL-74](#),
[EXL-288](#)
 DAYTIME RUNNING LIGHT SYSTEM [EXL-18](#),
[EXL-108](#), [EXL-261](#), [EXL-322](#)
 DCA SYSTEM NOT ACTIVATED (SWITCH IS ON)
[DAS-188](#)
 DCA SYSTEM SETTING CANNOT BE TURNED
 ON/OFF FROM THE NAVIGATION SCREEN..
[DAS-186](#)
 DIAG ON CAN [LAN-11](#)
 DIAGNOSIS AND REPAIR WORK FLOW...[ADP-5](#),
[AV-70](#), [AV-208](#), [AV-379](#), [BRC-5](#), [CCS-5](#), [CHG-3](#),
[DAS-10](#), [DAS-205](#), [DAS-255](#), [DAS-389](#), [DEF-3](#),
[DLK-7](#), [DLN-31](#), [EXL-7](#), [EXL-252](#), [HAC-4](#), [INL-3](#),
[PCS-37](#), [PWC-4](#), [SE-5](#), [SEC-5](#), [SN-34](#), [SRC-3](#),
[STC-2](#), [STR-2](#), [TM-5](#), [WT-19](#), [WW-3](#)
 DIAGNOSIS SENSOR UNIT..... [SR-25](#), [SRC-75](#)
 DIAGNOSIS SYSTEM (ACCELERATOR PEDAL
 ACTUATOR)[DAS-31](#)
 DIAGNOSIS SYSTEM (AFS)..... [EXL-43](#)
 DIAGNOSIS SYSTEM (AIRBAG) [SRC-14](#)
 DIAGNOSIS SYSTEM (AROUND VIEW MONITOR
 CONTROL UNIT)..... [AV-321](#)
 DIAGNOSIS SYSTEM (AV CONTROL UNIT)[AV-20](#),
[AV-152](#), [AV-307](#)
 DIAGNOSIS SYSTEM (AWD CONTROL UNIT).....
[DLN-18](#)
 DIAGNOSIS SYSTEM (BCM)..... [BCS-18](#), [DEF-7](#),
[DLK-48](#), [EXL-33](#), [EXL-272](#), [INL-15](#), [PCS-44](#),
[PWC-11](#), [RF-7](#), [SEC-23](#), [WCS-17](#), [WT-9](#),
[WW-14](#)

DIAGNOSIS SYSTEM (BSW CONTROL MODULE)
[DAS-366](#)
 DIAGNOSIS SYSTEM (DRIVER SEAT C/U)
[ADP-43](#), [MIR-9](#)
 DIAGNOSIS SYSTEM (ECM)[EC-136](#)
 DIAGNOSIS SYSTEM (ICC SENSOR
 INTEGRATED UNIT)[CCS-38](#), [DAS-22](#), [DAS-210](#)
 DIAGNOSIS SYSTEM (IPDM E/R) [EXL-38](#),
[EXL-277](#), [PCS-9](#), [WW-17](#)
 DIAGNOSIS SYSTEM (LANE CAMERA UNIT)
[DAS-219](#), [DAS-280](#)
 DIAGNOSIS SYSTEM (METER)..... [MWI-37](#)
 DIAGNOSIS SYSTEM (SIDE RADAR LH)[DAS-368](#)
 DIAGNOSIS SYSTEM (SIDE RADAR RH)[DAS-369](#)
 DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)
[AV-325](#), [SN-14](#)
 DIAGNOSIS SYSTEM (TCM) [TM-63](#)
 DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)
[AV-33](#), [AV-165](#)
 DIAGNOSIS SYSTEM (UNIFIED METER & A/C
 AMP.)..... [HAC-44](#)
 DIAGNOSIS SYSTEM (UNIFIED METER AND A/C
 AMP.).....[MWI-39](#), [WCS-13](#)
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND
 ELECTRIC UNIT (CONTROL UNIT)].. [BRC-30](#),
[DAS-283](#)
 DIFFERENTIAL ASSEMBLY.... [DLN-132](#), [DLN-183](#)
 DIRECT CLUTCH [TM-300](#)
 DISK EJECT SIGNAL CIRCUIT[AV-105](#), [AV-244](#),
[AV-467](#)
 DISPLAY UNIT [AV-43](#), [AV-127](#), [AV-175](#), [AV-267](#),
[AV-335](#), [AV-496](#)
 DISTANCE CONTROL ASSIST SYSTEM . [DAS-14](#)
 DISTANCE CONTROL ASSIST SYSTEM
 SYMPTOMS..... [DAS-183](#)
 DLC BRANCH LINE CIRCUIT[LAN-65](#), [LAN-93](#),
[LAN-111](#), [LAN-130](#), [LAN-151](#), [LAN-174](#),
[LAN-203](#), [LAN-222](#), [LAN-242](#), [LAN-264](#),
[LAN-288](#)
 DOES NOT RETURN BUT MALFUNCTION
 DETECTION BUZZER SOUNDS..... [SE-112](#)
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 KEY CYLINDER OPERATION[DLK-187](#)
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 LOCK AND UNLOCK SWITCH.....[DLK-184](#)
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 REQUEST SWITCH.....[DLK-188](#)
 DOOR DOES NOT LOCK/UNLOCK WITH
 INTELLIGENT KEY[DLK-191](#)
 DOOR LOCK ACTUATOR [DLK-71](#)
 DOOR LOCK AND UNLOCK SWITCH [DLK-69](#)
 DOOR LOCK OPERATION WARNING DOES NOT
 OPERATE WITH DOOR REQUEST SWITCH..
[DLK-217](#)
 DOOR MIRROR DEFOGGER[DEF-15](#)

DOOR MIRROR DEFOGGER DOES NOT OPERATE..... DEF-73
DOOR MIRROR DOES NOT OPERATE... MIR-113
DOOR MIRROR MOTOR..... ADP-115
DOOR MIRROR REMOTE CONTROL SWITCH.... ADP-74, MIR-12, MIR-134, MIR-164
DOOR MIRROR REMOTE CONTROL SWITCH (MIRROR SWITCH/CHANGEOVER SWITCH). MIR-137
DOOR MIRROR SYSTEMMIR-4, MIR-17, MIR-135, MIR-138
DOOR MOTOR..... HAC-137
DOOR OUTSIDE LOWER MOLDING.....EXT-46
DOOR OUTSIDE MOLDING.....EXT-43
DOOR PARTING SEAL.....EXT-48
DOOR REQUEST SWITCH.....DLK-85
DOOR SASH MOLDING.....EXT-41
DOOR SWITCH..... DLK-65, DLK-268, RF-14
DRIVE BELT..... EM-20
DRIVE BELT AUTO TENSIONER AND IDLER PULLEY..... EM-26
DRIVE PINION..... DLN-146, DLN-208
DRIVER AIR BAG MODULE.....SR-11
DRIVER SEAT CONTROL UNIT..... ADP-120, ADP-221, MIR-29
DRIVER SIDE DOOR MIRROR DEFOGGER..... DEF-16
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE..... PWC-113
DRIVING FORCE IS HUNTING..... CCS-168
DUCT AND GRILLE..... VTL-11
DYNAMIC DRIVER ASSISTANCE SWITCH..... DAS-204, DAS-354

E

EBD..... BRC-25
ECM BRANCH LINE CIRCUIT LAN-57, LAN-89, LAN-106, LAN-125, LAN-145, LAN-167, LAN-198, LAN-216, LAN-236, LAN-257, LAN-280
ECV (ELECTRICAL CONTROL VALVE).... HAC-65
ELECTRIC IGNITION SYSTEM.....EC-59
ELECTRICAL LEAK DETECTOR.....HA-34
ELECTRICAL LOAD SIGNAL.....EC-505
ENCODER..... PWC-27
ENGINE ASSEMBLY..... EM-70
ENGINE CONTROL SYSTEM.....EC-38
ENGINE CONTROL SYSTEM SYMPTOMSEC-625
ENGINE COOLANT..... CO-8
ENGINE COVER..... EM-25
ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSERTED INTO KEY SLOT. SEC-190
ENGINE DOES NOT START WITH INTELLIGENT KEY..... SEC-189
ENGINE MAINTENANCE..... MA-12
ENGINE OIL..... LU-7

ENGINE SPEED SIGNAL CIRCUIT..... STC-9
ENGINE STAND SETTING..... EM-80
ENGINE UNIT..... EM-82
ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE..... ADP-216
EPS SYSTEM..... STC-3
EVAP CANISTER..... FL-15
EVAP LEAK CHECK..... EC-638
EVAPORATIVE EMISSION SYSTEM..... EC-97
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY.....BRC-145
EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR..... HAC-78, HAC-135
EXHAUST MANIFOLD..... EM-34
EXHAUST SYSTEM..... EX-4, EX-5
EXTERIOR LAMP BATTERY SAVER SYSTEM..... EXL-31, EXL-270
EXTERIOR LIGHTING SYSTEM SYMPTOMS..... EXL-220, EXL-419

F

FCW SYSTEM IS NOT ACTIVATED..... DAS-251
FENDER PROTECTOR..... EXT-25
FILAMENT..... DEF-79
FILLET MOLDING..... EXT-33
FLOOR SIDE FAIRING..... EXT-31
FLOOR TRIM.....INT-27
FLUID COOLER SYSTEM..... TM-206
FLUORESCENT LEAK DETECTOR..... HA-33
FOOT LAMP.....INL-109
FORWARD COLLISION WARNING SYSTEM..... DAS-207
FORWARD COLLISION WARNING SYSTEM SYMPTOMS..... DAS-250
FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT..... CCS-169, DAS-193
FRONT BUMPER..... EXT-12
FRONT CAMERA.....AV-512
FRONT CAMERA COMMUNICATION SIGNAL CIRCUIT.....AV-472
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR..... TM-288
FRONT CASE AND REAR CASE..... DLN-68
FRONT COIL SPRING AND SHOCK ABSORBER. FSU-10, FSU-30
FRONT COMBINATION LAMP .EXL-234, EXL-432
FRONT DIFFERENTIAL GEAR OIL..... DLN-123
FRONT DISC BRAKE..... BR-7, BR-17, BR-38
FRONT DOOR..... DLK-240
FRONT DOOR FINISHER.....INT-12
FRONT DOOR GLASS..... GW-18
FRONT DOOR LOCK..... DLK-257
FRONT DOOR SPEAKERAV-128, AV-268, AV-497
FRONT DRIVE SHAFT.....FAX-17, FAX-25
FRONT DRIVE SHAFT AND DRIVE CHAINDLN-83

FRONT DRIVE SHAFT BOOT	FAX-20
FRONT FENDER	DLK-238
FRONT FINAL DRIVE ASSEMBLY	DLN-116, DLN-127
FRONT FOG LAMP	EXL-238, EXL-436
FRONT FOG LAMP AIMING ADJUSTMENT	EXL-232, EXL-430
FRONT FOG LAMP CIRCUIT	EXL-77, EXL-291
FRONT FOG LAMP SYSTEM ...	EXL-25, EXL-117, EXL-264, EXL-331
FRONT GRILLE	EXT-20
FRONT LOWER LINK	RSU-15
FRONT OIL SEAL	DLN-62, DLN-165
FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE	PWC-114
FRONT POWER WINDOW SWITCH (PASSENGER SIDE)	PWC-91
FRONT PROPELLER SHAFT	DLN-91, DLN-92
FRONT REGULATOR	GW-20
FRONT SEAT	SE-129
FRONT SEAT BELT	SB-4
FRONT SQUAWKER	AV-130, AV-270, AV-499
FRONT STABILIZER	FSU-18, FSU-38
FRONT SUSPENSION ASSEMBLY	FSU-7, FSU-27
FRONT SUSPENSION MEMBER	FSU-19, FSU-39
FRONT WASHER NOZZLE AND TUBE ...	WW-117
FRONT WASHER PUMP	WW-115
FRONT WHEEL HUB AND KNUCKLE	FAX-7, FAX-8, FAX-16, FAX-18
FRONT WIPER AND WASHER SYSTEM ...	WW-6, WW-37
FRONT WIPER ARM	WW-119
FRONT WIPER DOES NOT OPERATE ...	WW-109
FRONT WIPER DRIVE ASSEMBLY	WW-123
FRONT WIPER MOTOR GROUND CIRCUIT	WW-31
FRONT WIPER MOTOR HI CIRCUIT	WW-27
FRONT WIPER MOTOR LO CIRCUIT	WW-25
FRONT WIPER STOP POSITION SIGNAL CIRCUIT	WW-29
FUEL FILLER CAP WARNING SYSTEM ...	EC-108
FUEL FILLER LID OPENER	DLK-267
FUEL INJECTOR	EC-507
FUEL INJECTOR AND FUEL TUBE	EM-38
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-55
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY	FL-6
FUEL LID LOCK ACTUATOR	DLK-75
FUEL PRESSURE	EC-637
FUEL PUMP	EC-510
FUEL SYSTEM	FL-5
FUEL TANK	FL-12
FUSE BLOCK - JUNCTION BOX (J/B)	PG-111
FUSE, FUSIBLE LINK AND RELAY BOX ...	PG-112

G

GENERAL MAINTENANCE	MA-4
GLASS LID	RF-86
GLOVE BOX LAMP	INL-108
GPS ANTENNA	AV-509
GROUND DISTRIBUTION	PG-77

H

HANDLING PRECAUTION	DAS-365
HARNESS CONNECTOR	PG-106
HARNESS LAYOUT	PG-92
HAZARD AND BUZZER REMINDER DOES NOT OPERATE	DLK-205
HAZARD AND HORN REMINDER DOES NOT OPERATE	DLK-204
HAZARD FUNCTION	DLK-106
HAZARD SWITCH	EXL-88, EXL-241, EXL-302, EXL-439
HEADLAMP	SEC-92
HEADLAMP (HI) CIRCUIT	EXL-67, EXL-284
HEADLAMP (LO) CIRCUIT	EXL-69, EXL-286
HEADLAMP AIMING ADJUSTMENT	EXL-230, EXL-428
HEADLAMP LEVELIZER CIRCUIT	EXL-72
HEADLAMP SYSTEM	EXL-12, EXL-93, EXL-255, EXL-307
HEADLINING	INT-29
HEAT SENSOR	SE-53
HEATED SEAT	SE-8
HEATED SEAT CONTROL UNIT	SE-98, SE-149
HEATED SEAT DOES NOT OPERATE	SE-114
HEATED SEAT RELAY	SE-51
HEATED SEAT SWITCH	SE-47, SE-152
HEATED SEAT SWITCH INDICATOR	SE-64
HEATED SEAT SWITCH INDICATOR DOES NOT TURN ON	SE-118
HEATER & COOLING UNIT ASSEMBLY	HA-51
HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS	DLN-55
HEIGHT SENSOR	EXL-245
HIGH AND LOW REVERSE CLUTCH	TM-298
HIGH-MOUNTED STOP LAMP	EXL-248, EXL-443
HOOD	DLK-230
HOOD LOCK	DLK-254
HOOD SWITCH	SEC-90
HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT	AV-103, AV-242
HORN	HRN-2, HRN-8
HORN FUNCTION	DLK-101
HOW TO ERASE PERMANENT DTC	EC-32
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SELECT PISTON AND BEARING ..	EM-141
HOW TO SET SRT CODE	EC-26
HOW TO USE THIS MANUAL	GI-3

HOW TO USE THIS SECTION	LAN-23
HYDRAULIC LINE	ST-52

I

IBA OFF SWITCH	BRC-177
ICC (FULL SPEED RANGE)	CCS-18
ICC BRAKE SWITCH	EC-513
ICC BRANCH LINE CIRCUIT	LAN-73, LAN-182, LAN-296
ICC SENSOR INTEGRATED UNIT	CCS-138, CCS-177, DAS-145, DAS-200, DAS-222
ICC STEERING SWITCH	CCS-180
ICC STEERING SWITCH (OTHER THAN MAIN SWITCH) DOES NOT FUNCTION	CCS-164
ICC SYSTEM CANNOT BE SET (MAIN SWITCH TURNS ON/OFF)	CCS-162
ICC SYSTEM DOES NOT CANCEL WHEN A/T SELECTOR LEVER SETS ON	
ICC WARNING CHIME	CCS-179, DAS-202
ICC WARNING CHIME CIRCUIT	CCS-136, DAS-143
ID REGISTRATION	WT-23
ID REGISTRATION CANNOT BE COMPLETED	WT-45
IDENTIFICATION INFORMATION	GI-23
IGN OFF INTERLOCK DOOR UNLOCK FUNCTION DOES NOT OPERATE	DLK-197
IGNITION COIL, SPARK PLUG AND ROCKER COVER	EM-48
IGNITION SIGNAL	EC-517
ILLUMINATION	INL-42
ILLUMINATION CONTROL SYSTEM	INL-13
IN-CABIN MICROFILTER	VTL-10
IN-VEHICLE SENSOR	HAC-70, HAC-130
INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS	SEC-14, SEC-109
INSIDE KEY ANTENNA	DLK-269
INSIDE MIRROR	MIR-124, MIR-154
INSIDE MIRROR SYSTEM	MIR-8, MIR-136
INSTRUMENT PANEL ASSEMBLY	IP-12
INSUFFICIENT COOLING	HAC-117
INSUFFICIENT HEATING	HAC-119
INTAKE DOOR CONTROL SYSTEM	HAC-38
INTAKE DOOR MOTOR	HAC-57
INTAKE MANIFOLD	EM-32
INTAKE MANIFOLD COLLECTOR	EM-29
INTAKE SENSOR	HAC-76, HAC-132
INTAKE VALVE TIMING CONTROL	EC-117
INTEGRATED HOMELINK TRANSMITTER	DLK-47, DLK-107
INTEGRATED HOMELINK TRANSMITTER DOES NOT OPERATE	DLK-220
INTEGRATED HOMELINK TRANSMITTER SYSTEM	DLK-138
INTELLIGENT BRAKE ASSIST	BRC-169, BRC-172

INTELLIGENT CRUISE CONTROL (FULL SPEED RANGE) SYSTEM SYMPTOMS	CCS-160
INTELLIGENT KEY BATTERY ...	DLK-96, DLK-275
INTELLIGENT KEY INSERT INFORMATION DOES NOT OPERATE	SEC-197
INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE	ADP-217
INTELLIGENT KEY LOW BATTERY WARNING DOES NOT OPERATE	DLK-216, DLK-219
INTELLIGENT KEY SYSTEM	DLK-15, DLK-121
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	SEC-9, SEC-95
INTELLIGENT KEY WARNING BUZZER ..	DLK-94, DLK-272
INTERIOR LIGHTING SYSTEM SYMPTOMS	INL-102
INTERIOR ROOM LAMP BATTERY SAVER SYSTEM	INL-10
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-23
INTERIOR ROOM LAMP CONTROL SYSTEM	INL-6, INL-30
INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT	INL-21
IONIZER	HAC-81, HAC-140
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	EXL-192, EXL-406, MWI-110, PCS-20, PCS-35, PG-113, SEC-176, WW-92
IPDM-E BRANCH LINE CIRCUIT	LAN-74, LAN-98, LAN-117, LAN-137, LAN-158, LAN-183, LAN-208, LAN-228, LAN-249, LAN-271, LAN-297
ITS COMMUNICATION CIRCUIT	LAN-81, LAN-190, LAN-304

K

KEY CYLINDER SWITCH	DLK-78
KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	PWC-120
KEY ID WARNING DOES NOT OPERATE	DLK-218
KEY REMINDER FUNCTION DOES NOT OPERATE	DLK-206
KEY SLOT	DLK-97, DLK-273, SEC-202
KEY SLOT INDICATOR	DLK-99
KEY WARNING DOES NOT OPERATE ..	DLK-207
KEY WARNING LAMP	DLK-105, SEC-94
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	PWC-121

L

L TERMINAL CIRCUIT (OPEN)	CHG-15
L TERMINAL CIRCUIT (SHORT)	CHG-17
LANE BRANCH LINE CIRCUIT	LAN-61, LAN-171, LAN-284

LANE CAMERA UNIT [DAS-238](#), [DAS-317](#), [DAS-351](#)
 LANE DEPARTURE PREVENTION (LDP) SYSTEM
[DAS-273](#)
 LANE DEPARTURE WARNING (LDW) SYSTEM...
[DAS-268](#)
 LANE DEPARTURE WARNING BUZZER [DAS-353](#)
 LANE DEPARTURE WARNING BUZZER CIRCUIT
[DAS-315](#)
 LATCH SYSTEM FOR CHILDREN [SB-17](#)
 LDW & LDP SYSTEM SYMPTOMS.....[DAS-344](#)
 LEAK DETECTION DYE [HA-19](#)
 LICENSE PLATE LAMP [EXL-250](#), [EXL-445](#)
 LICENSE PLATE LAMP CIRCUIT [EXL-92](#), [EXL-306](#)
 LIFTING MOTOR (FRONT) [ADP-107](#)
 LIFTING MOTOR (REAR).....[ADP-109](#)
 LIFTING POINT [GI-33](#)
 LIFTING SENSOR (FRONT)[ADP-87](#)
 LIFTING SENSOR (REAR).....[ADP-90](#)
 LIFTING SWITCH (FRONT)[ADP-63](#)
 LIFTING SWITCH (REAR).....[ADP-65](#)
 LIGHTING AND TURN SIGNAL SWITCH [EXL-240](#),
[EXL-438](#)
 LINE PRESSURE CONTROL [TM-11](#)
 LOCATION OF PLASTIC PARTS [BRM-79](#)
 LOCK-UP CONTROL [TM-27](#)
 LOW TIRE PRESSURE WARNING LAMP .. [WT-38](#)
 LOW TIRE PRESSURE WARNING LAMP BLINKS
[WT-44](#)
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN OFF [WT-43](#)
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN ON [WT-42](#)
 LOWER SHAFT [ST-24](#)
 LUBRICANT [HA-28](#)
 LUGGAGE FLOOR TRIM [INT-33](#)
 LUGGAGE ROOM LAMP [INL-115](#)
 LUMBAR SUPPORT [SE-10](#), [SE-77](#)
 LUMBAR SUPPORT SWITCH..... [SE-151](#)

M

M&A BRANCH LINE CIRCUIT [LAN-68](#), [LAN-95](#),
[LAN-113](#), [LAN-133](#), [LAN-154](#), [LAN-177](#),
[LAN-205](#), [LAN-224](#), [LAN-245](#), [LAN-267](#),
[LAN-291](#)
 MAGNET CLUTCH [HAC-63](#)
 MAGNET CLUTCH CONTROL SYSTEM.. [HAC-42](#)
 MAIN LINE BETWEEN ADP AND ABS CIRCUIT...
[LAN-52](#), [LAN-104](#), [LAN-123](#), [LAN-143](#),
[LAN-214](#), [LAN-234](#), [LAN-255](#)
 MAIN LINE BETWEEN ADP AND BSW CIRCUIT..
[LAN-54](#), [LAN-164](#), [LAN-277](#)
 MAIN LINE BETWEEN AV AND DLC CIRCUIT.....
[LAN-48](#), [LAN-86](#), [LAN-101](#), [LAN-120](#), [LAN-140](#),
[LAN-161](#), [LAN-195](#), [LAN-211](#), [LAN-231](#),
[LAN-252](#), [LAN-274](#)

MAIN LINE BETWEEN BSW AND ABS CIRCUIT ..
[LAN-55](#), [LAN-165](#), [LAN-278](#)
 MAIN LINE BETWEEN DLC AND M&A CIRCUIT ..
[LAN-49](#), [LAN-87](#), [LAN-102](#), [LAN-121](#), [LAN-141](#),
[LAN-162](#), [LAN-196](#), [LAN-212](#), [LAN-232](#),
[LAN-253](#), [LAN-275](#)
 MAIN LINE BETWEEN M&A AND ABS CIRCUIT ..
[LAN-50](#), [LAN-88](#), [LAN-197](#)
 MAIN LINE BETWEEN M&A AND ADP CIRCUIT ..
[LAN-51](#), [LAN-103](#), [LAN-122](#), [LAN-142](#),
[LAN-163](#), [LAN-213](#), [LAN-233](#), [LAN-254](#),
[LAN-276](#)
 MAIN POWER SUPPLY AND GROUND CIRCUIT..
[TM-125](#)
 MAIN SHAFT [DLN-78](#)
 MAIN SWITCH DOES NOT TURN ON, MAIN
 SWITCH DOES NOT TURN OFF [CCS-161](#)
 MALFUNCTION AREA CHART [LAN-46](#)
 MALFUNCTION DETECTION BUZZER SOUNDS
 DURING POWER RETURN MOTOR INVERSE
 ROTATION [SE-110](#)
 MALFUNCTION INDICATOR LAMP [EC-522](#)
 MANUAL FUNCTION DOES NOT OPERATE
[ADP-204](#)
 MAP LAMP [INL-105](#)
 MEMORY FUNCTION DOES NOT OPERATE
[ADP-210](#), [HAC-124](#)
 MEMORY INDICATE DOES NOT OPERATE
[ADP-214](#)
 METER BUZZER CIRCUIT [WCS-23](#)
 METER CONTROL SWITCH [MWI-138](#)
 METER CONTROL SWITCH SIGNAL CIRCUIT
[MWI-59](#)
 METER SYSTEM [MWI-6](#)
 MICROPHONE.....[AV-136](#), [AV-280](#), [AV-508](#)
 MICROPHONE SIGNAL CIRCUIT [AV-106](#), [AV-246](#),
[AV-469](#)
 MID SUN GEAR, REAR SUN GEAR, HIGH AND
 LOW REVERSE CLUTCH HUB.....[TM-293](#)
 MIRROR SENSOR..... [ADP-99](#)
 MODE CHANGE SIGNAL CIRCUIT [AV-245](#), [AV-468](#)
 MODE DOOR CONTROL SYSTEM [HAC-34](#)
 MODE DOOR MOTOR [HAC-52](#)
 MOTOR SENSOR [SE-37](#)
 MULTI AV SYSTEM SYMPTOMS .[AV-119](#), [AV-259](#),
[AV-482](#)
 MULTIFUNCTION SWITCH [AV-133](#), [AV-277](#), [AV-505](#)
 MULTIPOINT FUEL INJECTION SYSTEM [EC-48](#)

N

NO FORCE GENERATED FOR PUTTING BACK
 THE ACCELERATOR PEDAL..... [DAS-192](#)
 NOISE [HAC-121](#)

NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING [BR-9](#), [DLN-59](#), [DLN-90](#),
[DLN-98](#), [DLN-107](#), [DLN-117](#), [DLN-157](#), [EM-18](#),
[FAX-3](#), [FAX-11](#), [FSU-3](#), [FSU-23](#), [RAX-2](#), [RSU-2](#),
[ST-3](#), [WT-46](#)
 NORMAL OPERATING CONDITION [ADP-218](#),
[AV-123](#), [AV-263](#), [AV-488](#), [BCS-94](#), [BRC-151](#),
[BRC-167](#), [BRC-175](#), [CCS-171](#), [DAS-195](#),
[DAS-252](#), [DAS-346](#), [DAS-435](#), [EC-629](#),
[EXL-223](#), [EXL-421](#), [MWI-132](#), [SN-60](#), [WW-108](#)

O

OCCUPANT CLASSIFICATION SYSTEM.. [SRC-10](#)
 OCCUPANT CLASSIFICATION SYSTEM
 CONTROL UNIT [SR-28](#)
 OFF POSITION WARNING DOES NOT OPERATE
[DLK-208](#)
 OIL FILTER..... [LU-10](#)
 OIL FILTER BRACKET (AWD)..... [LU-12](#)
 OIL PAN (LOWER) [EM-44](#)
 OIL PAN (UPPER) AND OIL STRAINER [EM-83](#)
 OIL PRESSURE SWITCH SIGNAL CIRCUIT
[MWI-63](#)
 OIL PUMP [LU-14](#)
 OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON
[TM-276](#)
 OIL SEAL..... [EM-68](#)
 ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-135](#),
[TM-62](#)
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR)..... [EC-523](#)
 ON IS NOT DISPLAYED WHEN PRESSING REAR
 WINDOW DEFOGGER SWITCH BUT IT IS
 OPERATED [DEF-75](#)
 OPERATION..... [DAS-363](#)
 OPTICAL SENSOR [EXL-85](#), [EXL-239](#), [EXL-299](#),
[EXL-437](#)
 OPTION HARNESS..... [PG-88](#)
 OUTPUT SPEED SENSOR [TM-199](#)
 OUTSIDE KEY ANTENNA [DLK-91](#), [DLK-271](#)
 OUTSIDE MIRROR [MIR-126](#), [MIR-156](#)
 OVERHEATING CAUSE ANALYSIS [CO-6](#)

P

P POSITION WARNING DOES NOT OPERATE
[DLK-209](#)
 P RANGE INTERLOCK DOOR LOCK/UNLOCK
 FUNCTION DOES NOT OPERATE [DLK-198](#)
 P RANGE SIGNAL CIRCUIT [SN-53](#)
 P0011, P0021 IVT CONTROL [EC-175](#)
 P0031, P0032, P0051, P0052 A/F SENSOR 1
 HEATER [EC-179](#)
 P0037, P0038, P0057, P0058 HO2S2 HEATER.....
[EC-182](#)

P0075, P0081 IVT CONTROL SOLENOID VALVE .
[EC-186](#)
 P0101, P010B MAF SENSOR [EC-189](#)
 P0102, P0103, P010C, P010D MAF SENSOR
[EC-195](#)
 P0111 IAT SENSOR [EC-201](#)
 P0112, P0113 IAT SENSOR [EC-204](#)
 P0116 ECT SENSOR [EC-207](#)
 P0117, P0118 ECT SENSOR [EC-210](#)
 P0122, P0123, P0227, P0228 TP SENSOREC-213
 P0125 ECT SENSOR [EC-217](#)
 P0127 IAT SENSOR..... [EC-220](#)
 P0128 THERMOSTAT FUNCTION..... [EC-222](#)
 P0130, P0150 A/F SENSOR 1 [EC-225](#)
 P0131, P0151 A/F SENSOR 1 [EC-229](#)
 P0132, P0152 A/F SENSOR 1 [EC-232](#)
 P0137, P0157 HO2S2 [EC-235](#)
 P0138, P0158 HO2S2 [EC-241](#)
 P0139, P0159 HO2S2 [EC-250](#)
 P014C, P014D, P014E, P014F, P015A, P015B,
 P015C, P015D A/F SENSOR 1 [EC-257](#)
 P0171, P0174 FUEL INJECTION SYSTEM
 FUNCTION [EC-263](#)
 P0172, P0175 FUEL INJECTION SYSTEM
 FUNCTION [EC-267](#)
 P0181 FTT SENSOR..... [EC-271](#)
 P0182, P0183 FTT SENSOR [EC-275](#)
 P0196 EOT SENSOR..... [EC-278](#)
 P0197, P0198 EOT SENSOR [EC-282](#)
 P0222, P0223, P2132, P2133 TP SENSOREC-285
 P0300, P0301, P0302, P0303, P0304, P0305,
 P0306 MISFIRE [EC-289](#)
 P0327, P0328, P0332, P0333 KS [EC-295](#)
 P0335 CKP SENSOR (POS)..... [EC-298](#)
 P0340, P0345 CMP SENSOR (PHASE) [EC-302](#)
 P0420, P0430 THREE WAY CATALYST FUNCTION
[EC-306](#)
 P0441 EVAP CONTROL SYSTEM..... [EC-311](#)
 P0443 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-316](#)
 P0444, P0445 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-321](#)
 P0447 EVAP CANISTER VENT CONTROL VALVE
[EC-324](#)
 P0448 EVAP CANISTER VENT CONTROL VALVE
[EC-328](#)
 P0451 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-332](#)
 P0452 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-336](#)
 P0453 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-341](#)
 P0456 EVAP CONTROL SYSTEM..... [EC-347](#)
 P0460 FUEL LEVEL SENSOR..... [EC-353](#)
 P0461 FUEL LEVEL SENSOR..... [EC-355](#)
 P0462, P0463 FUEL LEVEL SENSOR [EC-357](#)

P0500 VSS.....	EC-359	P1290, P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-424
P0506 ISC SYSTEM	EC-361	P1550 BATTERY CURRENT SENSOR	EC-426
P0507 ISC SYSTEM	EC-363	P1551, P1552 BATTERY CURRENT SENSOR.....	EC-429
P050A, P050B, P050E COLD START CONTROL..	EC-365	P1553 BATTERY CURRENT SENSOR.....	EC-432
P0524 ENGINE OIL PRESSURE	EC-368	P1554 BATTERY CURRENT SENSOR	EC-435
P0550 PSP SENSOR	EC-371	P1564 ASCD STEERING SWITCH	EC-439
P0603 ECM POWER SUPPLY	EC-374	P1564 ICC STEERING SWITCH	EC-442
P0605 ECM.....	EC-376	P1568 ICC FUNCTION	EC-445
P0607 ECM.....	EC-378	P1572 ASCD BRAKE SWITCH.....	EC-446
P0615 STARTER RELAY	TM-72	P1572 ICC BRAKE SWITCH	EC-451
P0643 SENSOR POWER SUPPLY	EC-379	P1574 ASCD VEHICLE SPEED SENSOR	EC-458
P0705 TRANSMISSION RANGE SENSOR	ATM-74	P1574 ICC VEHICLE SPEED SENSOR	EC-460
P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-76	P1606 VVEL CONTROL MODULE	EC-462
P0717 INPUT SPEED SENSOR A	TM-79	P1607 VVEL CONTROL MODULE	EC-464
P0720 OUTPUT SPEED SENSOR.....	TM-81	P1608 VVEL SENSOR POWER SUPPLY	EC-466
P0725 ENGINE SPEED.....	TM-83	P1610 LOCK MODE	SEC-33
P0729 6GR INCORRECT RATIO	TM-85	P1611 ID DISCORD, IMMU-ECM	SEC-34
P0730 INCORRECT GEAR RATIO	TM-87	P1612 CHAIN OF ECM-IMMU	SEC-35
P0731 1GR INCORRECT RATIO	TM-89	P1614 CHAIN OF IMMU-KEY	SEC-36
P0732 2GR INCORRECT RATIO	TM-91	P1615 DIFFERENCE OF KEY	SEC-39
P0733 3GR INCORRECT RATIO	TM-93	P1705 TP SENSOR	TM-109
P0734 4GR INCORRECT RATIO	TM-95	P1721 VEHICLE SPEED SIGNAL	TM-111
P0735 5GR INCORRECT RATIO	TM-97	P1730 INTERLOCK	TM-113
P0740 TORQUE CONVERTER.....	TM-99	P1734 7GR INCORRECT RATIO	TM-115
P0744 TORQUE CONVERTER.....	TM-101	P1804 TRANSFER CONTROL UNIT.....	DLN-42
P0745 PRESSURE CONTROL SOLENOID A	TM-103	P1805 BRAKE SWITCH.....	EC-469
P0750 SHIFT SOLENOID A	TM-104	P1809 TRANSFER CONTROL UNIT.....	DLN-43
P0775 PRESSURE CONTROL SOLENOID B	TM-105	P1815 M-MODE SWITCH.....	TM-117
P0780 SHIFT	TM-106	P1826 TRANSFER FLUID TEMPERATURE.....	DLN-44
P0795 PRESSURE CONTROL SOLENOID C	TM-108	P2096, P2097, P2098, P2099 A/F SENSOR 1	EC-472
P0850 PNP SWITCH	EC-382	P2122, P2123 APP SENSOR	EC-477
P100A, P100B VVEL SYSTEM.....	EC-385	P2127, P2128 APP SENSOR	EC-481
P1087, P1088 VVEL SYSTEM	EC-389	P2138 APP SENSOR.....	EC-486
P1089, P1092 VVEL CONTROL SHAFT POSITION SENSOR.....	EC-390	P219A, P219B AIR FUEL RATIO	EC-491
P1090, P1093 VVEL ACTUATOR MOTOR	EC-394	P2713 PRESSURE CONTROL SOLENOID D	TM-120
P1091 VVEL ACTUATOR MOTOR RELAY	EC-398	P2722 PRESSURE CONTROL SOLENOID E.....	TM-121
P1148, P1168 CLOSED LOOP CONTROL	EC-401	P2731 PRESSURE CONTROL SOLENOID F	TM-122
P1211 TCS CONTROL UNIT	EC-402	P2807 PRESSURE CONTROL SOLENOID G	TM-123
P1212 TCS COMMUNICATION LINE.....	EC-403	PANIC ALARM FUNCTION DOES NOT OPERATE	DLK-203
P1217 ENGINE OVER TEMPERATURE.....	EC-404	PARKING BRAKE CONTROL.....	PB-6
P1225, P1234 TP SENSOR.....	EC-408	PARKING BRAKE SHOE	PB-5, PB-8
P1226, P1235 TP SENSOR.....	EC-410	PARKING BRAKE SWITCH	BRC-121
P1233, P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-412	PARKING BRAKE SWITCH SIGNAL CIRCUIT	MWI-64
P1236, P2118 THROTTLE CONTROL MOTOR.....	EC-416	PARKING BRAKE SYSTEM	PB-4
P1238, P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-419	PARKING COMPONENTS.....	TM-191
P1239, P2135 TP SENSOR.....	EC-421	PARKING LAMP CIRCUIT	EXL-79, EXL-293

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ONEXL-226, EXL-424

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM EXL-29, EXL-133, EXL-268, EXL-347

PASSENGER AIR BAG MODULE.....SR-17

PASSENGER SEAT BELT WARNING SYSTEM.....SRC-12, SRC-92

PASSENGER SIDE DOOR MIRROR DEFOGGER DEF-18

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURSBRC-149

PERIODIC MAINTENANCEMA-6

PERSONAL LAMPINL-112

POSITIVE CRANKCASE VENTILATIONEC-528

POWER CONSUMPTION CONTROL SYSTEM.....BCS-15, PCS-7

POWER CONTROL SYSTEM.....PCS-5

POWER DISTRIBUTION SYSTEMPCS-41, PCS-73

POWER DOOR LOCK SYSTEM.DLK-11, DLK-109

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEMCHG-12

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTIONCHG-29

POWER RETURN MOTOR.....SE-42

POWER RETURN SWITCH.....SE-21, SE-153

POWER SEATSE-6, SE-67

POWER SEAT SWITCH.....ADP-224, SE-150

POWER SEAT SWITCH GROUND CIRCUITADP-79

POWER SOCKETPWO-2, PWO-6

POWER STEERING CONTROL UNITSTC-13, STC-22

POWER STEERING FLUIDST-11

POWER STEERING OIL PUMPST-46

POWER STEERING SOLENOID VALVESTC-7

POWER SUPPLY AND GROUND CIRCUIT (VVEL CONTROL MODULE)EC-167

POWER SUPPLY AND GROUND CIRCUIT FOR AUTO AMP.HAC-50

POWER SUPPLY ROUTING CIRCUITPG-6

POWER WINDOW CONTROL SYSTEM PWC-103

POWER WINDOW DOWN FUNCTION DOES NOT OPERATE WITH KEY CYLINDER OPERATION DLK-200

POWER WINDOW DOWN FUNCTION DOES NOT WORK WHEN OPERATING WITH INTELLIGENT KEYDLK-201

POWER WINDOW LOCK SWITCH DOES NOT FUNCTIONPWC-122

POWER WINDOW MAIN SWITCHPWC-79, PWC-127

POWER WINDOW MOTOR.....PWC-20

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY . PWC-119

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLYRF-75

POWER WINDOW SERIAL LINK.....PWC-32

POWER WINDOW SWITCH ILLUMINATION DOES NOT ILLUMINATEPWC-123

POWER WINDOW SYSTEM.....PWC-7

POWER WINDOWS DO NOT OPERATE WITH ANY POWER WINDOW SWITCHESPWC-112

PRE-INSPECTION FOR DIAGNOSIS.....DAS-258, DAS-391

PRECAUTIONS .ACC-2, ADP-219, AV-11, AV-143, AV-287, BCS-95, BR-3, BRC-152, BRC-168, BRC-176, BRM-4, CCS-174, CHG-25, CO-2, DAS-198, DAS-253, DAS-348, DAS-355, DEF-77, DLK-227, DLN-6, DLN-88, DLN-96, DLN-106, DLN-118, DLN-159, EC-630, EM-3, EX-2, EXL-228, EXL-426, EXT-3, FAX-4, FAX-12, FL-2, FSU-4, FSU-24, GI-27, GW-8, HA-10, HAC-125, HRN-6, INL-103, INT-2, IP-2, LAN-8, LAN-24, LU-2, MIR-121, MIR-151, MWI-133, PB-2, PCS-33, PCS-125, PG-114, PWC-124, PWO-4, RAX-3, RF-83, RSU-3, SB-2, SE-125, SEC-199, SN-4, SR-2, SRC-93, ST-7, STC-20, STR-17, TM-169, VTL-7, WCS-121, WT-3, WW-111

PRESET SWITCHAV-134, AV-278, AV-506, HAC-127

PREVIEW FUNCTION.....BRC-163, BRC-166

PRIMARY POSITION LIMIT SWITCHSE-29

PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEMPCS-40

PUDDLE LAMPINL-114

PUDDLE LAMP CIRCUITINL-27

PUSH-BUTTON IGNITION SWITCH.....PCS-69, PCS-129, SEC-203

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE.....PCS-127

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUITINL-28

PUSH-BUTTON IGNITION SWITCH POSITION INDICATORPCS-71

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATEPCS-128

R

R RANGE SIGNAL CIRCUITSN-54

RADIATOR.....CO-12, CO-14

RADIATOR CORE SUPPORTDLK-235

RADIUS RODRSU-14

RDR-L BRANCH LINE CIRCUITLAN-77, LAN-186, LAN-300

RDR-R BRANCH LINE CIRCUITLAN-78, LAN-187, LAN-301

REAR BUMPEREXT-16

REAR CAMERA..... AV-513
 REAR CAMERA COMMUNICATION SIGNAL
 CIRCUIT AV-473
 REAR COMBINATION LAMP ... EXL-246, EXL-441
 REAR DIFFERENTIAL GEAR OIL.....DLN-164
 REAR DISC BRAKEBR-8, BR-19, BR-46
 REAR DOOR DLK-244
 REAR DOOR FINISHER..... INT-18
 REAR DOOR GLASSGW-22
 REAR DOOR LOCK.....DLK-262
 REAR DOOR SPEAKER .AV-129, AV-269, AV-498
 REAR DRIVE SHAFT RAX-6, RAX-10
 REAR FINAL DRIVE ASSEMBLYDLN-155,
 DLN-179
 REAR LH SIDE POWER WINDOW ALONE DOES
 NOT OPERATE.....PWC-115
 REAR LOWER LINK & COIL SPRING RSU-8
 REAR OIL SEAL DLN-63, TM-196
 REAR POWER WINDOW SWITCH.....PWC-18
 REAR PROPELLER SHAFT DLN-99, DLN-100,
 DLN-109, DLN-110
 REAR REGULATORGW-25
 REAR RH SIDE POWER WINDOW ALONE DOES
 NOT OPERATE.....PWC-116
 REAR SEAT SE-141
 REAR SEAT BACK POWER RETURN CONTROL
 UNIT SE-86, SE-148
 REAR SEAT BELT SB-9
 REAR SEATBACK POWER RETURN SYSTEM....
 SE-12
 REAR SEATBACK POWER RETURN SYSTEM
 DOES NOT OPERATE SE-107
 REAR SEATBACK RELEASE CONTROL ... SE-11,
 SE-81
 REAR SEATBACK RELEASE SWITCH SE-155
 REAR SEATBACK SWITCH SE-25, SE-154
 REAR SHOCK ABSORBER RSU-10
 REAR SQUAWKERAV-271, AV-500
 REAR STABILIZER..... RSU-16
 REAR SUSPENSION ASSEMBLY RSU-5
 REAR SUSPENSION MEMBER..... RSU-17
 REAR TIMING CHAIN CASE.....EM-90
 REAR TURN SIGNAL LAMP EXL-247, EXL-442
 REAR VIEW CAMERA.....AV-137, AV-281
 REAR WASHER NOZZLE AND TUBE WW-129
 REAR WHEEL HUB AND HOUSINGRAX-5, RAX-7
 REAR WINDOW DEFOGGER.....DEF-13
 REAR WINDOW DEFOGGER AND DOOR
 MIRROR DEFOGGERS DO NOT OPERATE...
 DEF-71
 REAR WINDOW DEFOGGER DOES NOT
 OPERATE BUT BOTH DOOR MIRROR
 DEFOGGERS OPERATEDEF-72
 REAR WINDOW DEFOGGER INDICATOR DOES
 NOT ILLUMINATE.....DEF-76
 REAR WINDOW DEFOGGER RELAY DEF-11

REAR WINDOW DEFOGGER SWITCH.....DEF-10
 REAR WINDOW DEFOGGER SYSTEMDEF-4,
 DEF-20
 REAR WIPER AND WASHER SYSTEM.... WW-11,
 WW-43
 REAR WIPER ARM..... WW-126
 REAR WIPER MOTOR WW-128
 REAR WIPER MOTOR CIRCUIT WW-33
 REAR WIPER STOP POSITION SIGNAL CIRCUIT
 WW-35
 RECLINING MOTOR ADP-105
 RECLINING SENSOR..... ADP-84
 RECLINING SWITCH..... ADP-61
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS GI-22
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-10
 REFRIGERANT..... HA-24
 REFRIGERANT PRESSURE SENSOR.....EC-530,
 HAC-136
 REFRIGERATION SYSTEMHA-4, HA-31
 REFRIGERATION SYSTEM SYMPTOMS..... HA-7
 RELAY CONTROL SYSTEM PCS-3
 REMOTE KEYLESS ENTRY RECEIVER ..DLK-80,
 DLK-274
 REPAIRING HIGH STRENGTH STEELBRM-5
 REPAIRING MATERIAL BRM-9
 REPLACEMENT OPERATIONS BRM-31
 REQUEST SIGNAL CIRCUIT (SATÆCONT)AV-112,
 AV-252
 RETURN COMPLETE LIMIT SWITCH SE-33
 REVERSE INTERLOCK DOOR MIRROR DOES
 NOT OPERATE.....MIR-114
 RGB (B: BLUE) SIGNAL CIRCUIT...AV-99, AV-238
 RGB (G: GREEN) SIGNAL CIRCUITAV-98, AV-237
 RGB (R: RED) SIGNAL CIRCUITAV-97, AV-236
 RGB AREA (YS) SIGNAL CIRCUITAV-101, AV-240
 RGB DIGITAL IMAGE SIGNAL CIRCUIT ... AV-465
 RGB SYNCHRONIZING SIGNAL CIRCUITAV-100,
 AV-239
 ROAD WHEEL WT-47
 ROAD WHEEL TIRE ASSEMBLY WT-49
 ROOF RAILEXT-36
 ROOF SIDE MOLDINGEXT-39

S

S CONNECTOR CIRCUITSTR-10
 S TERMINAL CIRCUIT CHG-18
 SATELLITE RADIO TUNERAV-46, AV-131, AV-181,
 AV-275
 SATELLITE SENSORSR-23
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
 WCS-24
 SEAT BELT PRE-TENSIONERSR-27
 SEAT CUSHION HEATER SE-58
 SEAT MEMORY INDICATOR.....ADP-118

SEAT MEMORY SWITCH	ADP-71, ADP-223
SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE	ADP-215
SEATBACK HEATER	SE-62
SEATBACK HEATER ONLY DOES NOT OPERATE	SE-116
SECURITY INDICATOR LAMP	SEC-93
SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK	SEC-191
SELECTIVE UNLOCK FUNCTION DOES NOT OPERATE WITH DOOR REQUEST SWITCH ..	DLK-194
SELECTIVE UNLOCK FUNCTION DOES NOT OPERATE WITH INTELLIGENT KEY ..	DLK-195
SELECTOR LEVER POSITION INDICATOR ..	TM-134
SELF-DIAGNOSIS CANNOT BE PERFORMED	HAC-123
SENSOR ROTOR	BRC-158
SERVICE DATA AND SPECIFICATIONS (SDS)	BR-53, CHG-37, CO-27, DLN-87, DLN-95, DLN-105, DLN-115, DLN-154, DLN-224, EC-640, EM-147, EXL-251, EXL-446, FAX-10, FAX-34, FL-18, FSU-21, FSU-41, HA-57, INL-117, LU-17, MA-36, PB-11, PG-120, RAX-16, RSU-19, ST-54, STR-23, TM-302, WT-54
SERVICE INFORMATION FOR ELECTRICAL INCIDENT	GI-38
SHIFT CHANGE CONTROL	TM-15
SHIFT LOCK SYSTEM	TM-59, TM-128
SHIFT MECHANISM	TM-31
SHIFT PATTERN CONTROL	TM-20
SHIFT POSITION INDICATOR CIRCUIT ...	TM-127
SIDE CAMERA LH	AV-514
SIDE CAMERA LH COMMUNICATION SIGNAL CIRCUIT	AV-474
SIDE CAMERA RH	AV-515
SIDE CAMERA RH COMMUNICATION SIGNAL CIRCUIT	AV-475
SIDE OIL SEAL	DLN-124, DLN-175
SIDE RADAR	DAS-437
SIDE RADAR LH	DAS-373
SIDE RADAR RH	DAS-375
SIDE SHAFT	DLN-129
SIDE TURN SIGNAL LAMP	EXL-242, EXL-440
SIDE WINDOW GLASS	GW-13
SIGNAL BUFFER SYSTEM	BCS-14, PCS-6
SLIDING MOTOR	ADP-103
SLIDING SENSOR	ADP-81
SLIDING SWITCH	ADP-59
SNOW MODE SWITCH	EC-532
SONAR BRANCH LINE CIRCUIT	LAN-62, LAN-128, LAN-149, LAN-172, LAN-239, LAN-261, LAN-285
SONAR CANCEL SWITCH	SN-65
SONAR CANCEL SWITCH CIRCUIT	SN-57
SONAR CONTROL UNIT ...	AV-348, SN-17, SN-61
SONAR CONTROL UNIT (WITH AROUND VIEW MONITOR)	AV-516
SONAR SENSOR	AV-517, SN-62
SONAR SYSTEM	SN-23
SONAR SYSTEM SYMPTOMS	SN-59
SPARK PLUG	EM-23
SPIRAL CABLE	SR-14
SQUEAK AND RATTLE TROUBLE DIAGNOSES ..	DLK-221, EXT-6, GW-2, INT-6, IP-6, MIR-115, MIR-145, RF-77, SE-119
SRS AIR BAG SYSTEM	SRC-6
SRS AIR BAG WARNING LAMP DOES NOT TURN OFF	SRC-90
SRS AIR BAG WARNING LAMP DOES NOT TURN ON	SRC-91
STALL TEST	TM-180
STANDARDIZED RELAY	PG-109
STARTER MOTOR	STR-20
STARTING SYSTEM	STR-7, STR-11, STR-16
STEERING ANGLE SENSOR ..	BRC-162, EXL-244
STEERING COLUMN	ST-18
STEERING GEAR AND LINKAGE	ST-26
STEERING SWITCH GROUND CIRCUIT ..	AV-117, AV-257, AV-480
STEERING SWITCH SIGNAL A CIRCUIT ..	AV-113, AV-253, AV-476
STEERING SWITCH SIGNAL B CIRCUIT ..	AV-115, AV-255, AV-478
STEERING WHEEL	ST-13, ST-16
STEP LAMP	INL-111
STEP LAMP CIRCUIT	INL-25
STOP LAMP	EXL-140, EXL-354
STRG BRANCH LINE CIRCUIT ..	LAN-69, LAN-96, LAN-114, LAN-134, LAN-155, LAN-178, LAN-206, LAN-225, LAN-246, LAN-268, LAN-292
STRUCTURE AND OPERATION	DLN-13
SUNLOAD SENSOR	HAC-73, HAC-131
SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION	RF-76
SUNROOF DOES NOT OPERATE PROPERLY	RF-72
SUNROOF MOTOR ASSEMBLY	RF-89
SUNROOF SWITCH	RF-12, RF-97
SUNROOF SYSTEM	RF-5, RF-59, RF-66
SUNROOF UNIT ASSEMBLY	RF-91
SUNSHADE	RF-94
SUSPENSION ARM	RSU-12
SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF	BRC-173, DAS-184
SWITCHES AND THEIR CONTROL FUNCTION ...	VTL-3
SYSTEM SYMPTOM	TM-159

T

TAIL LAMP CIRCUIT [EXL-90](#), [EXL-304](#)
TAKE AWAY WARNING DOES NOT OPERATE
[DLK-212](#)
TCM [TM-139](#)
TCM BRANCH LINE CIRCUIT [LAN-66](#), [LAN-94](#),
[LAN-112](#), [LAN-131](#), [LAN-152](#), [LAN-175](#),
[LAN-204](#), [LAN-223](#), [LAN-243](#), [LAN-265](#),
[LAN-289](#)
TCS [BRC-15](#)
TEL ADAPTER UNIT [AV-48](#), [AV-139](#), [AV-183](#),
[AV-283](#)
TEL ANTENNA [AV-140](#), [AV-284](#)
TELESCOPIC MOTOR [ADP-113](#)
TELESCOPIC SENSOR [ADP-96](#)
TELESCOPIC SWITCH [ADP-69](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-131](#)
THE BRAKING DISTANCE IS LONG [BRC-147](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY
[MWI-130](#)
THE FUEL GAUGE POINTER DOES NOT MOVE
[MWI-123](#)
THE LIGHT REMINDER WARNING DOES NOT
SOUND [WCS-119](#)
THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAY [MWI-129](#)
THE METER CONTROL SWITCH IS INOPERATIVE
[MWI-124](#)
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN OFF [MWI-127](#)
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN ON [MWI-126](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY [MWI-128](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND [WCS-118](#)
THE SEAT BELT WARNING CONTINUES
SOUNDING, OR DOES NOT SOUND [WCS-120](#)
THE SYSTEM DOES NOT DETECT THE VEHICLE
AHEAD AT ALL [CCS-170](#), [DAS-194](#)
THE TRIP A/B RESET SWITCH IS INOPERATIVE
[MWI-125](#)
TIGHTENING TORQUE OF STANDARD BOLTS...
[GI-19](#)
TILT & TELESCOPIC SWITCH GROUND CIRCUIT
[ADP-80](#)
TILT MOTOR [ADP-111](#)
TILT SENSOR [ADP-93](#)
TILT SWITCH [ADP-67](#)
TILT & TELESCOPIC SWITCH [ADP-225](#)
TIMING CHAIN [EM-51](#)

TIRE PRESSURE MONITORING SYSTEM [WT-13](#)
TIRE PRESSURE RECEIVER [WT-36](#), [WT-53](#)
TIRE PRESSURE SENSOR [WT-51](#)
TIRE PRESSURE SENSOR WAKE UP
OPERATION [WT-22](#)
TOW TRUCK TOWING [GI-35](#)
TPMS [WT-40](#)
TRANSFER ASSEMBLY [DLN-66](#)
TRANSFER FLUID [DLN-60](#)
TRANSIT MODE CANCEL OPERATION [BCS-7](#)
TRANSMISSION ASSEMBLY [TM-211](#), [TM-217](#)
TRANSVERSE LINK [FSU-14](#), [FSU-34](#)
TRIP A/B RESET SWITCH [MWI-139](#)
TRIP A/B RESET SWITCH SIGNAL CIRCUIT
[MWI-61](#)
TROUBLE DIAGNOSIS [LAN-12](#)
TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-156](#)
TURN SIGNAL AND HAZARD WARNING LAMP
SYSTEM [EXL-27](#), [EXL-123](#), [EXL-266](#), [EXL-337](#)
TURN SIGNAL LAMP CIRCUIT .. [EXL-81](#), [EXL-295](#)

U

U0100 LDP) ECM CAN CIR2 [DAS-304](#)
U0100 LOST COMMUNICATION (ECM A)... [TM-69](#)
U0101 CAN COMM CIRCUIT [EC-169](#)
U0101 LDP) TCM CAN CIR2 [DAS-305](#)
U0104 ADAS CAN 1 [DAS-409](#)
U0104 LDP) ICC CAN CAN CIR2 [DAS-306](#)
U0121 VDC CAN 2... [CCS-115](#), [DAS-119](#), [DAS-410](#)
U0122 VDC CAN CIR1 (LDP) [DAS-296](#)
U0126 STRG SEN CAN 1 [CCS-117](#), [DAS-121](#)
U0129 BCU CAN 2 [CCS-119](#), [DAS-123](#)
U0300 CAN COMMUNICATION DATA [TM-70](#)
U0401 ECM CAN 1 . [CCS-121](#), [DAS-125](#), [DAS-411](#)
U0402 TCM CAN 1 . [CCS-123](#), [DAS-127](#), [DAS-412](#)
U0405 ADAS CAN 2 [DAS-413](#)
U0405 LDP) ICC CAN CAN CIR1 [DAS-307](#)
U0415 VDC CAN 1.. [CCS-125](#), [DAS-129](#), [DAS-414](#)
U0415 VEHICLE SPEED SIG [BCS-43](#)
U0416 VDC CAN CIR2 (LDP) [DAS-298](#)
U0418 BCU CAN 1 [CCS-127](#), [DAS-131](#)
U0428 STEERING ANGLE SENSOR [AV-409](#)
U0428 STRG SEN CAN 2 [CCS-129](#), [DAS-133](#)
U1000 CAN COMM [PCS-50](#)
U1000 CAN COMM CIRCUIT [ADP-46](#), [AV-75](#),
[AV-213](#), [AV-410](#), [BCS-41](#), [BRC-113](#), [CCS-131](#),
[DAS-135](#), [DAS-294](#), [DAS-404](#), [DLK-56](#), [DLN-47](#),
[EXL-62](#), [MWI-43](#), [PCS-14](#), [SEC-30](#), [SRC-20](#),
[TM-71](#)
U1001 CAN COMM CIRCUIT [EC-170](#)
U1002 SYSTEM COMM (CAN) [BRC-114](#)
U1003 CAN COMM CIRCUIT [EC-171](#)

U1010 CONTROL UNIT (CAN) ADP-47, AV-76,
 AV-214, AV-412, BCS-42, CCS-133, DAS-138,
 DAS-295, DAS-407, DLK-57, DLN-48, EXL-63,
 MWI-44, PCS-51, SEC-32, SRC-21
 U1024 CAN COMM CIRCUIT EC-173
 U1100 CAN COMM CIRCUIT (ICC UNIT) BRC-116
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT
 AV-413
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUIT AV-415
 U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
 AV-417
 U111D SIDE CAMERA LH IMAGE SIGNAL
 CIRCUIT AV-419
 U1200 AV CONTROL UNIT AV-77, AV-215, AV-421
 U1201 AV CONTROL UNIT AV-422
 U1202 AV CONTROL UNIT AV-423
 U1204 AV CONTROL UNIT AV-424
 U1205 AV CONTROL UNIT AV-425
 U1206 AV CONTROL UNIT AV-426
 U1207 AV CONTROL UNIT AV-427
 U1216 AV CONTROL UNIT AV-78, AV-216, AV-428
 U1217 AV CONTROL UNIT AV-429
 U1218 AV CONTROL UNIT AV-430
 U1219 AV CONTROL UNIT AV-431
 U121A AV CONTROL UNIT AV-432
 U121B AV CONTROL UNIT AV-433
 U121C AV CONTROL UNIT AV-434
 U121D AV CONTROL UNIT AV-79, AV-217, AV-435
 U121E AV CONTROL UNIT AV-80, AV-218, AV-436
 U1225 AV CONTROL UNIT AV-81, AV-219, AV-437
 U1227 AV CONTROL UNIT AV-438
 U1228 AV CONTROL UNIT AV-82, AV-220, AV-439
 U1229 AV CONTROL UNIT AV-83, AV-221, AV-440
 U122A AV CONTROL UNIT AV-84, AV-222, AV-441
 U122E AV CONTROL UNIT AV-85, AV-223, AV-442
 U1232 STEERING ANGLE SENSOR AV-86,
 AV-224, AV-443
 U1243 DISPLAY UNIT AV-87, AV-225, AV-444
 U1244 GPS ANTENNA AV-446
 U1255 SATELLITE RADIO TUNER. AV-89, AV-227
 U1258 SATELLITE RADIO ANTENNA AV-447
 U1263 USB AV-91, AV-229, AV-448
 U1264 ANTENNA AMP. AV-449
 U1265 BOSE AMP. AV-450
 U1300 AV COMM CIRCUIT AV-92, AV-230, AV-451
 U1302 CAMERA POWER VOLT AV-452
 U1303 LED POWER SUPPLY VOLT AV-456
 U1304 CAMERA IMAGE CALIBRATION AV-457
 U1305 CONFIG UNFINISH AV-458
 U1310 AV CONTROL UNIT AV-93, AV-231, AV-459
 U1500 LDP) CAM CAN CIR1 DAS-308
 U1501 LDP) CAM CAN CIR2 DAS-309
 U1503 SIDE RDR L CAN 2 DAS-419
 U1504 SIDE RDR L CAN 1 DAS-420
 U1505 SIDE RDR R CAN 2 DAS-421

U1506 SIDE RDR R CAN 1 DAS-422
 U1507 LOST COMM(SIDE RDR R) DAS-423
 U1508 LOST COMM(SIDE RDR L) DAS-424
 U150B ECM CAN 3 DAS-415
 U150C VDC CAN 3 DAS-416
 U150D TCM CAN 3 DAS-417
 U150E BCM CAN 3 DAS-418
 U1518 SIDE RDR L CAN 3 DAS-425
 U1519 SIDE RDR R CAN 3 DAS-426
 UNBALANCE STEERING WHEEL TURNING
 FORCE (TORQUE VARIATION) STC-19
 UNDER DRIVE CARRIER, FRONT BRAKE HUB...
 TM-285
 UNEXPECTED PEDAL REACTION BRC-146
 UNIFIED METER AND A/C AMP. HAC-83, HAC-128,
 MWI-87, MWI-137, WCS-52
 UNLOCK SENSOR DLK-89
 UPPER LINK FSU-16, FSU-36
 USB CONNECTOR AV-135, AV-279, AV-507

V

VACUUM LINES BR-36
 VANITY MIRROR LAMP INL-106
 VDC BRC-10
 VDC OFF INDICATOR LAMP BRC-127
 VDC OFF SWITCH BRC-123
 VDC WARNING LAMP BRC-128
 VEHICLE DOES NOT ENTER AWD MODE DLN-56
 VEHICLE JERKS DURING VDC/TCS/ABS
 CONTROL BRC-150
 VEHICLE SECURITY ALARM DOES NOT
 ACTIVATE SEC-194
 VEHICLE SECURITY SYSTEM SEC-18, SEC-122
 VEHICLE SECURITY SYSTEM CAN NOT BE SET
 SEC-192
 VEHICLE SECURITY SYSTEM CAN NOT
 CANCELED SEC-195
 VEHICLE SPEED SENSING AUTO LOCK
 OPERATION DOES NOT OPERATE. DLK-196
 VEHICLE SPEED SIGNAL CIRCUIT SE-45, STC-11
 VEHICLE-TO-VEHICLE DISTANCE CONTROL
 MODE FUNCTION CCS-23
 VERTICAL SYNCHRONIZING (VP) SIGNAL
 CIRCUIT AV-104, AV-243
 VVEL CONTROL MODULE EC-595
 VVEL SYSTEM EC-126

W

WARNING CHIME SYSTEM WCS-5, WCS-26
 WARNING SYSTEMS ON INDICATOR CIRCUIT ...
 DAS-313, DAS-432
 WARNING SYSTEMS SWITCH DAS-254, DAS-352,
 DAS-440
 WARNING SYSTEMS SWITCH CIRCUIT DAS-311,
 DAS-430

WASHER LEVEL SWITCH [WW-116](#)
 WASHER LEVEL SWITCH SIGNAL CIRCUIT
 [MWI-66](#)
 WASHER SWITCH [WW-32](#)
 WASHER TANK [WW-114](#)
 WATER INLET AND THERMOSTAT ASSEMBLY ..
 [CO-23](#)
 WATER OUTLET AND WATER PIPING[CO-25](#)
 WATER PUMP[CO-20](#)
 WELCOME LIGHT FUNCTION DOES NOT
 OPERATE [DLK-202](#)
 WHEEL ALIGNMENT[FSU-8](#), [FSU-28](#), [RSU-6](#)
 WHEEL SENSOR [BRC-156](#)
 WIND DEFLECTOR [RF-96](#)
 WINDSHIELD GLASS [GW-11](#)
 WIPER AND WASHER FUSE [WW-22](#)
 WIPER AND WASHER SWITCH [WW-125](#)
 WIPER AND WASHER SYSTEM SYMPTOMS
 [WW-105](#)
 WIPER BLADE [WW-121](#)
 WOOFER[AV-273](#), [AV-502](#)

X

XENON HEADLAMP [EXL-71](#)

Y

YAW RATE/SIDE G SENSOR [BRC-161](#)

A
 B
 C
 D
 E
 F
 G
 H

 J
 K
 L
 M
 N
 O
 P