

H1

ALPHABETICAL INDEX

H2

ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
A			
ABSORBER, shock	39	Blank KEY	62
AB VALVE	2B	BLOCK, cylinder (1.6L)	1
Accelerator LINKAGE (L drive)	13	BLOCK, cylinder (2L)	1A
Accelerator LINKAGE (R drive)	12	Body outside VIEW	54
Accelerator WIRE (L drive)	13	Bottom COVER, transmission (1.6L)	31
Accelerator WIRE (R drive)	12	BRACKET KIT, fuel connector (1.6L)	8
ACCESSORIES	62	BRACKET KIT, fuel connector (2L)	8A
Air CLEANER (1.6L)	9	Brake DRUM	42
Air CLEANER (2L for "solex")	9A	BRAKE, front	40
Air CLEANER (2L "SU")	9B	Brake master CYLINDER (Single)	44
Air PUMP with pulley	2B	Brake master CYLINDER (Tandem)	44A
ALTERNATOR (Mitsubishi) (Emission control)	19A	Brake PEDAL	48
AMMETER	23	Brake PIPING (Single cylinder)	47
ANTENNA, radio	28B	BRAKE, rear	43
APRON, front	54	Bridge TUBE, brake	40
ARMATURE ass'y (1.6L)	20	BUMPER, front	54
ARMATURE ass'y (2L)	20A	BUMPER, rear	57A
ARM, idler	50	BUSHING, camshaft (1.6L)	1
ARM, knuckle	38	C	
ARM, steering gear	49, 49A	CABLE, hand brake	35
ARM, steering gear (R.B. type)	49B	CABLE, ventilator control	56A
Ash TRAY	56A	CAMSHAFT (1.6L)	4
AXLE, rear	42	CAMSHAFT (2L)	4A
B		CAP, distributor	18
Back-up LAMP	28	CARBURETOR (1.6L "SU")	8
BACK MIRROR, inside	56A	CARBURETOR (2L "solex")	8A
BACK MIRROR, outside	55	CARBURETOR (2L "SU")	8B
Ball JOINT	38	Carburetor REPAIR KIT (1.6L)	8
BAR torsion, stabilizer	39	CASE, rear AXLE	42
BATTERY	22B	CASE, transmission (1.6L)	31
BEARING, crankshaft (1.6L)	3	CASE, transmission (2L)	31A
BEARING, crankshaft (2L)	3A	CHAIN, camshaft (1.6L)	4
BEARING, front wheel	41	CHAIN, camshaft (2L)	4A
BELT, air pump	2B	Chain TENSIONER (1.6L)	4
BELT, fan (1.6L)	15	Chain TENSIONER (2L)	4A
BELT, fan (2L)	15A	Chassis HARNESS	22
BELT, safety	60C	Check VALVE	28
		Choke control WIRE (R drive)	12, 13
		Cigarette LIGHTER	22A
		CLAMP, spare tire	58

H3

PART NAME	GROUP NO.	PART NAME	GROUP NO.
CLEANER air (2L "SU")	9B	DIODE SET (2L)	19A
CLOCK (Option)	28B	DISC, brake rear	43
CLUTCH	29	DISTRIBUTOR (Hitachi)	18
Clutch DISC	29	Door LOCK	61A
Clutch master CYLINDER	45	Door PANEL	61
Clutch operating CYLINDER	46		
Clutch PEDAL	48	E	
Clutch release BEARING	29	Electrical parts MOUNTING	21
Clutch SWITCH	2B	Electrical UNIT & SWITCH parts	22A
Companion FLANGE	37	EMBLEM, body side	55
CONDENSER, distributor	18	EMBLEM, hood	55
Connecting Rod (1.6L)	3	EMBLEM, radiator grille	54
Connecting Rod (2L)	3A	EMBLEM, rear panel	58
Console FITTING	56A	ENGINE (1.6L)	0
Console PANEL	56	ENGINE (2L)	0A
CONTACT SET	18	Engine GASKET kit (1.6L)	0
CONTROL, hood lock	55A	Engine GASKET kit (2L)	0A
Control LEVER, transmission	33	ENGINE MOUNTING	17
CONTROL, throttle	13A	Engine room HARNESS	22
CONTROL, transmission	33	Evaporative CONTROL	23
COVER, road wheel	41	Evaporative emission control DEVICE	10A
Cowl PANELS	55B	Exhaust emission CONTROL	2B
Cowl VENTILATOR	55B	Exhaust emission control DEVICE	
CRANKSHAFT (1.6L)	3	(U.S.A. & CANADA)	2B
CRANKSHAFT (2L)	3A	Exhaust MANIFOLD (1.6L)	5
CROSS MEMBER	52	Exhaust MANIFOLD (2L)	5A
Cross ROD hand brake	35	Exhaust TUBE	14, 14A
Cross ROD steering	50	Exhaust VALVE (1.6L)	4
Cylinder BLOCK (1.6L)	1	Exhaust VALVE (2L)	4A
Cylinder BLOCK (2L)	1A		
CYLINDER, brake master (Single)	44	F	
CYLINDER, brake master (Tandem)	44A	FAN (1.6L)	15
CYLINDER, brake rear wheel	43	FAN (2L)	15A
CYLINDER, clutch master	45	Fan BELT (1.6L)	15
CYLINDER, clutch operating	46	Fan BELT (2L)	15A
CYLINDER, front brake	40	FENDER, front	55
CYLINDER, lock set	61B	FENDER, rear	57A
		Flasher UNIT	22A
D		FIELD COIL (1.6L)	20
Differential gear CASE	37	FIELD COIL (2L)	20A
DIODE SET (1.6L)	19		

[illegible]

H4

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Hypoid GEAR SET	37	M	
I		Magnetic SWITCH (1.6L)	20
IDLER, steering	50	Magnetic SWITCH (2L)	20A
Ignition COIL	21	MANIFOLD (1.6L)	5
Instrument HARNESS	22	MANIFOLD (2L)	5A
Instrument PANEL	56	Map LAMP	26B
INSULATOR, carburetor (1.6L)	5	MASK, radio aperture	28B
INSULATOR, carburetor (2L)	5A	MASTER CYLINDER brake (Single)	44
Intake MANIFOLD (1.6L)	5	MASTER CYLINDER, brake	
Intake MANIFOLD (2L)	5A	(Tandem)	44A
Intake VALVE (1.6L)	4	MASTER CYLINDER, clutch	45
Intake VALVE (2L)	4A	METER, tube & oil pressure GAUGE	23
J		Model NO. PLATE	62
JACK set	61C	MODULATOR, thermal	2B
JOURNAL KIT	36	MOUNTING, electrical parts	21
K		MOUNTING, engine	17
Kit TOOL	61C	MOTOR, starter (1.6L)	20
Knuckle ARM	38	MOTOR, starter (2L)	20A
Knuckle SPINDLE	38	MUFFLER	14, 14A
L		N	
LAMP, rear	27, 27A	Neutral SWITCH	2B
Leaf SPRING, rear	53	O	
License LAMP	28	Oil FILLER (1.6L)	2
LID trunk	58	Oil FILTER (1.6L)	7
LINK, front suspension	38	Oil FILTER (2L)	7A
LINKAGE, accelerator (L drive)	13	Oil level GAUGE (1.6L)	1
LINKAGE, accelerator (R drive)	12	Oil level GAUGE (2L)	1A
LINKAGE, hand brake	35	Oil PAN (1.6L)	1
LINKAGE, steering	50	Oil PAN (2L)	1A
LOCK, door	61A	Oil PUMP (1.6L)	6
LOCK, glove box lid	56	Oil PUMP (2L)	6A
LOCK, steering	61B	Oil STRAINER (1.6L)	6
LOCK, trunk lid	58	Operating CYLINDER, clutch	46
		OUTSIDE, rear	57A
		Over flow TUBE (1.6L)	5
		OVERRIDE	54

PART NAME	GROUP NO.	PART NAME	GROUP NO.
P		P	
PAD, disc brake	40	Rear SUSPENSION	53
PAD, instrument	56A	REFLECTOR	27
PAINT	62	REGULATOR	58
PANEL, cowl	55B	REGULATOR, door window	61A
PANEL, door	61	Remote CONTROL, door	61
Parking & turn signal LAMP, front	26	REPAIR KIT, brake master cylinder	
Parts SWITCH	22A	(Single)	44
Pillar HINGE	55	REPAIR KIT, brake master cylinder	
PINION & CLUTCH, starter motor		(Tandem)	44A
(1.6L)	20	REPAIR KIT, carburetor (1.6L)	8
PINION & CLUTCH, starter motor		REPAIR KIT, clutch master cylinder	45
(2L)	20A	REPAIR KIT, clutch operating	
PIPE, air gallery	2B	cylinder	46
PIPE, air injection	2B	REPAIR KIT, fuel pump	10
PIPING, brake (Single cylinder)	47	Reservoir TANK, radiator	16, 16A
PIPING, fuel	11A	REPAIR KIT, wheel cylinder	43
PISTON, engine (1.6L)	3	Reverse LAMP	28
PISTON, engine (2L)	3A	Ring GEAR, flywheel (1.6L)	3
Piston RING (1.6L)	3	Ring GEAR, flywheel (2L)	3A
Piston RING (2L)	3A	RIM, head lamp	54
Propeller SHAFT	36	Road WHEEL	41
PULLEY, alternator (1.6L)	19	ROD, hood support	55A
PULLEY, alternator (2L)	19A	Rocker COVER (1.6L)	2
PULLEY, crankshaft (1.6L)	3	Rocker COVER (2L)	2A
PULLEY, crankshaft (2L)	3A	Rocker SHAFT (1.6L)	4
Push ROD (1.6L)	4	Room BACKSIDE view	59
R		ROTOR ass'y (1.6L)	19
RADIO (Option)	28B	ROTOR ass'y (2L)	19A
RADIATOR	16, 16A	Rotor HEAD	18
Radiator GRILLE	54	S	
Rear AXLE	42	Safety BAR	60C
Rear BRAKE	43	Safety BELT	60C
Rear EXTENSION (1.6L)	31	Sealed beam UNIT	26
Rear EXTENSION (2L)	31A	SEAT	60, 60A, 60B
Rear FENDER	57A	SET CYLINDER (Waco type)	61B
Rear LAMPS	27, 27A	SET CYLINDER (Voss type)	61C
Rear PANEL	58	SHAFT, crank (1.6L)	6
REAR, outside	56	SHAFT, crank (2L)	3A
		SHAFT, flexible speedometer	23
		SHAFT, propeller	36

H5

PART NAME	GROUP NO.	PART NAME	GROUP NO.
SHAFT, rear axle	42	T	
SHAFT, tachometer	23	TACHOMETER	23
SHAFT, transmission (1.6L)	32	TANK, fuel (Exc. evapo)	11
SHAFT, transmission (2L)	32A	Tail & stop LAMP, rear	27
SHAFT, trip reset	23	TANK, fuel	11
SHELL, steering column	51	THERMOSTAT (1.6L)	2
Shock ABSORBER, front	39	THERMOSTAT (2L)	2A
Shock ABSORBER, rear	53	Throttle CONTROL	13A
SHOE, rear brake	43	Throttle SHAFT (1.6L)	8
Side marker LAMP (U.S.A. & CANADA)	26, 26A	Throttle SHAFT (2L "solex")	8A
Side ROD	50	Throttle SHAFT (2L "SU")	8B
SILL, body	57A	Tonneau COVER	59
SMOG DEVICE	2B	TOOL KIT	61D
Soft TOP	59	Torque ROD	53
Spark PLUG	21	Torsion BAR, stabilizer	39
SPEEDOMETER	23	Trunk LID	58
Speedometer PINION (1.6L)	31	Transmission CASE (1.6L)	31
Speedometer PINION (2L)	31A	Transmission CASE (2L)	31A
SPINDLE, driving oil pump (1.6L)	6	Transmission CONTROL	33
SPINDLE, driving oil pump (2L)	6A	TRANSMISSION & GASKET Kit	30
SPINDLE, knuckle	38	Transmission SHAFT & GEAR (1.6L) (Servo synchromesh)	32
STABILIZER, front	39	Transmission SHAFT & GEAR (1.6L) (Warner)	32A
STATOR ass'y (1.6L)	19	Transmission SHAFT & GEAR (2L) (Servo synchromesh)	32B
STATOR ass'y (2L)	19A	Transmission SHAFT & GEAR (2L) (Warner)	32C
Starter MOTOR (1.6L)	20	TRIM, lock pillar	57
Starter MOTOR (2L)	20A	TRIM, wheel house	57
Steering GEAR	49, 49A	TRIMMING, cowl side	57
Steering GEAR (R.B. type)	49B	TRIMMING, console side	56A
Steering LOCK	61B	TRIMMING, door	61
Steering WHEEL	51	TRIMMING, floor	57
Stop & tail LAMP, rear	27	TRIMMING, parcel shelf	57
STRAINER (1.6L)	6	TRIMMING, sill panel	57
SUSPENSION, front (1)	38	TRIMMING, trunk floor	58
SUSPENSION, front (2)	39	TUBE, exhaust	14
SUSPENSION, rear	53	TUBE, evapo control	2B
SUNVISOR	56B	TUBE, evaporative emission control (Evapo)	10A
SWITCH	22A		
SWITCH, heater	28A		
SWITCH parts	22A		
SWITCH, reverse lamp (1.6L)	31		
SWITCH, reverse lamp (2L)	31A		

JUNE, 1972

- 144 -

Printed in Japan

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Turn signal LAMP, rear	27		
Turn signal & parking LAMP, front	26		
V			
Vacuum CONTROL	18		
Valve LIFTER (1.6L)	4		
Valve regrind GASKET kit (1.6L)	0		
Valve regrind GASKET kit (2L)	0A		
Valve rocker COVER (2L)	2A		
VENTILATOR	55B		
VENTILATOR, door window	61		
Voltage REGULATOR	21		
W			
Waist PANEL	57A, 58		
WASHER, windshield	24A		
Water PUMP (1.6L)	15		
Water PUMP (2L)	15A		
WEIGHT, governor	18		
WHEEL, road	41		
WHEEL steering	51		
Windshield GLASS	56B		
Windshield WASHER	24A		
Windshield WIPER	24		
Wiper ARM	24		
Wiper BLADE	24		
Wiper MOTOR	24		
WIPER, windshield	24		
WIRE, accelerator (D drive)	13		
WIRE, accelerator (R drive)	12		
WIRE, choke control (L drive)	13		
WIRE, choke control (R drive)	12		
WIRE, throttle control	13A		
WIRING	22		
Withdrawal LEVER	29		

JUNE, 1972

- 145 -

Printed in Japan

Install the best!
GENUINE DATSUN PARTS



Engineering Department Parts Division



NISSAN MOTOR CO., LTD.



Tokyo, Japan