

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-94](#), [TF-152](#), [TF-165](#)
 4WD - Wiring diagram [TF-24](#)
 4WD shift switch [TF-66](#)
 4WD solenoid valve [TF-90](#), [TF-152](#), [TF-165](#)
 4WD system description [TF-15](#)
 4WD system diagram [TF-19](#)

A

A/C air flow [ATC-29](#), [MTC-28](#)
 A/C compressor clutch removal and installation .. [ATC-179](#), [MTC-154](#)
 A/C compressor mounting [ATC-178](#), [MTC-153](#)
 A/C compressor precaution [ATC-11](#), [MTC-11](#)
 A/C compressor special service tool . [ATC-14](#), [MTC-14](#)
 A/C control operation (auto A/C) [ATC-26](#), [MTC-26](#)
 A/C diagnostic work flow (auto A/C) ... [ATC-131](#), [MTC-118](#)
 A/C evaporator [ATC-187](#), [MTC-162](#)
 A/C HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#), [MTC-5](#)
 A/C HFC134a (R134a) system service procedure [ATC-174](#), [MTC-149](#)
 A/C HFC134a (R134a) system service tools .. [ATC-14](#), [MTC-14](#)
 A/C HFC134a system service equipment precaution ... [ATC-11](#), [MTC-11](#)
 A/C lubricant (R134a) [ATC-22](#), [MTC-22](#)
 A/C lubrication oil [ATC-22](#), [MTC-22](#)
 A/C operational check [ATC-57](#), [ATC-60](#), [MTC-53](#), [MTC-55](#)
 A/C self-diagnoses (auto A/C) [ATC-55](#), [ATC-131](#), [MTC-118](#)
 A/C service data specification [ATC-194](#), [MTC-169](#)
 A/C trouble diagnoses (auto A/C) [ATC-33](#), [MTC-32](#)
 A/C, A - Wiring diagram [ATC-43](#), [MTC-42](#)
 A/T fluid checking [AT-13](#), [AT-50](#), [MA-22](#)
 A/T fluid cooler cleaning [AT-13](#)
 A/T fluid replacement [AT-13](#), [MA-24](#)
 A/T fluid temperature sensor [AT-126](#)
 A/T IND - Wiring diagram [DI-40](#)
 A/T indicator [DI-40](#)
 A/T shift lock system [AT-222](#)
 A/T trouble diagnoses [AT-41](#)
 ABS - Wiring diagram [BRC-16](#)
 ABS (anti-lock brake system) [BRC-7](#)
 Accelerator control system [ACC-2](#)
 Accelerator pedal position (APP) sensor . [EC-570](#), [EC-576](#), [EC-590](#)
 Accelerator pedal released position learning [EC-89](#)
 AF1B1-Wiring diagram [EC-459](#), [EC-468](#), [EC-477](#), [EC-487](#), [EC-498](#), [EC-508](#), [EC-520](#)
 AF1B2-Wiring diagram [EC-461](#), [EC-470](#), [EC-479](#), [EC-489](#), [EC-500](#), [EC-510](#), [EC-522](#)
 AF1HB1-Wiring diagram [EC-384](#)

AF1HB2-Wiring diagram [EC-386](#)
 Aiming adjustment [LT-28](#), [LT-72](#)
 Air bag [SRS-3](#)
 Air cleaner and air duct [EM-14](#)
 Air cleaner filter replacement [MA-16](#)
 Air conditioner cut control [EC-28](#)
 Air flow meter - See Mass air flow sensor [EC-171](#), [EC-180](#)
 Air fuel ratio sensor 1 .. [EC-457](#), [EC-466](#), [EC-475](#), [EC-485](#), [EC-495](#), [EC-505](#), [EC-517](#)
 Air fuel ratio sensor 1 heater [EC-383](#)
 Air mix. door motor [ATC-70](#), [MTC-64](#)
 Ambient sensor [ATC-136](#), [ATC-147](#)
 Angular tightening application [EM-3](#)
 APPS1 - Wiring diagram [EC-572](#)
 APPS2 - Wiring diagram [EC-578](#)
 APPS3 - Wiring diagram [EC-592](#)
 ASC/BS - Wiring diagram [EC-552](#)
 ASC/SW - Wiring diagram [EC-545](#)
 ASCBOF - Wiring diagram [EC-629](#)
 ASCD [EC-29](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCD brake switch [EC-550](#), [EC-628](#)
 ASCD indicator lamp [EC-635](#)
 ASCD steering switch [EC-543](#)
 ASCIND - Wiring diagram [EC-636](#)
 ATP switch [TF-107](#), [TF-110](#), [TF-115](#)
 Audio [AV-6](#)
 AUDIO - Wiring diagram [AV-13](#)
 AUT/DP - Wiring diagram [SE-20](#)
 Auto air conditioner - Wiring diagram [ATC-43](#), [MTC-42](#)
 Auto anti-dazzling inside mirror [GW-70](#), [GW-71](#)
 Autolamp [LT-44](#)
 Automatic amplifier [ATC-61](#), [MTC-56](#)
 Automatic drive positioner [SE-11](#)
 Automatic transmission number [GI-49](#)
 AV and NAVI control unit [AV-79](#)
 AV communication line [AV-103](#)

B

Back door [BL-93](#)
 Back door trim [EI-29](#)
 Back sonar [DI-59](#)
 BACK/L - Wiring diagram [LT-100](#)
 Back-up lamp [LT-100](#)
 Ball joint (front) [FSU-15](#)
 Basic inspection [EC-71](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-19](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-74](#)
 Blower motor ... [ATC-93](#), [ATC-151](#), [MTC-82](#), [MTC-126](#)
 Body alignment [BL-169](#)
 Body component parts [BL-156](#)
 Body construction [BL-168](#)
 Body exterior paint color [BL-155](#)
 Body mounting [BL-154](#)

ALPHABETICAL INDEX

Body repair	BL-155
Body sealing	BL-165
Bose speaker amp.	AV-8
Brake booster	BR-16
Brake fluid level	MA-28
Brake hydraulic line	BR-11
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-14
Brake switch	EC-550 , EC-565 , EC-628
BRK/SW - Wiring diagram	EC-566
Bulb specifications	LT-162
Bumper, front	EI-14
Bumper, rear	EI-16

C

Camshaft	EM-43
Camshaft inspection	EM-47
Camshaft position sensor (PHASE)	EC-288
CAN - Wiring diagram .	EC-161 , AT-96 , LAN-18 , LAN-47 , LAN-79 , LAN-113 , LAN-145 , LAN-179
CAN (Controller Area Network)	BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
CAN communication ...	EC-31 , EC-160 , AT-95 , TF-20 , TF-113 , BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-152 , TF-165
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-45
Circuit breaker	PG-65
Closed loop control	EC-25
Closed loop control (Bank 1)	EC-434
Closed loop control (Bank 2)	EC-434
Clutch drum (Transfer)	TF-152 , TF-165
Clutch pressure switch (Transfer)	TF-152 , TF-165
Coil spring (front)	FSU-10
Collision diagnosis	SRS-61
Combination lamp, front, removal and installation .	LT-30
Combination lamp, rear, removal and installation ..	LT-116
Combination meter	DI-5
Combination switch	LT-91
COMBSW - Wiring diagram	LT-91
COMM - Wiring diagram	AV-103
COMPAS - Wiring diagram	DI-27
Compass	DI-26
Component Location (auto A/C)	ATC-39 , MTC-38
Compressor clutch removal and installation	ATC-179 , MTC-154
Compressor mounting	ATC-178 , MTC-153
Compressor precaution	ATC-11 , MTC-11
Compressor special service tool	ATC-14 , MTC-14

Condenser	ATC-185 , MTC-160
Connecting rod	EM-92
Connecting rod bearing clearance	EM-92
Connecting rod bushing clearance	EM-92
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-28
CONSULT general information	GI-37
CONSULT-II for engine	EC-124
Control units (terminal arrangement)	PG-70
Control valve (A/T)	AT-35
Control valve (Transfer)	TF-152 , TF-165
Controller Area Network (CAN)	BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
Converter housing installation	AT-246 , AT-249
COOL/F - Wiring diagram	EC-440
Coolant mixture ratio	MA-12
Coolant replacement	MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-15
Cooling fan motor	EC-447
Cooling unit (A/C evaporator)	ATC-155 , ATC-187 , MTC-130 , MTC-162
Corrosion protection	BL-162
Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Crankshaft	EM-75
Crankshaft position sensor (POS)	EC-281
Crash zone sensor	SRS-56
Cylinder block	EM-74
Cylinder block boring	EM-95

D

D/LOCK - Wiring diagram	BL-20
Data link connector for Consult	EC-126 , EC-137
Daytime light system	LT-31
Daytime running light - See Daytime light system ..	LT-31
Diagnosis sensor unit	SRS-59
Diagnostic trouble code (DTC) for OBD system .	EC-8 , EC-52
Diagnostic trouble code (DTC) inspection priority chart	EC-100
Differential carrier assembly	RFD-12
Differential carrier disassembly	RFD-14
Differential gear oil replacement	MA-25
Dimensions	GI-50
Direct clutch solenoid valve	AT-148 , AT-150
Display and amp.assembly	ATC-61 , MTC-56
Display Control Unit	AV-174
Dome light - See Interior lamp	LT-123
Door glass	GW-62 , GW-65
Door lock	BL-126
Door mirror lamp	LT-123
Door trim	EI-29
Door, front	BL-123 , GW-62
Door, rear	BL-123 , GW-65
Drive belt	EM-12
Drive chain (Transfer)	TF-147 , TF-174

ALPHABETICAL INDEX

Drive pinion diff. inspection	RFD-13
Drive pinion height	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-46
DTC work support	EC-133
DTRL - Wiring diagram	LT-34
Duct and grilles	ATC-169 , MTC-144
DVD Player	AV-75

E

ECM input/output signal	EC-116 , EC-138
ECM power supply	EC-154 , EC-390
ECM relay	EC-154
ECM/PW - Wiring diagram	EC-391
ECTS - Wiring diagram	EC-194
Electric sunroof	RF-10
Electric throttle control actuator	EC-394 , EC-396
Electrical load signal circuit	EC-627
Electrical units location	PG-62
Electronic ignition (EI) system	EC-26
Engine control circuit diagram	EC-114
Engine control component parts location	EC-107
Engine control module (ECM)	EC-380
Engine control system diagram	EC-23
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-192 , EC-205
Engine fail-safe system	EC-102
Engine oil	LU-7
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine removal	EM-70
Engine room cover	EM-11
Engine serial number	GI-49
ETC1 - Wiring diagram	EC-397
ETC2 - Wiring diagram	EC-404
ETC3 - Wiring diagram	EC-408
EVAP canister	EC-35
EVAP canister purge volume control solenoid valve ...	EC-315 , EC-529
EVAP canister vent control valve	EC-322 , EC-537
EVAP control system (small leak) diagnosis ..	EC-306 , EC-346 , EC-354
EVAP control system pressure sensor	EC-329 , EC-332 , EC-338
EVAP control system purge flow monitoring diagnosis	EC-301
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-32
Evaporator	ATC-187 , MTC-162
Exhaust manifold	EM-19
Exhaust system	EX-3
Exhaust system inspection	EX-3
Expansion valve	ATC-189 , MTC-164

F

F/FOG - Wiring diagram	LT-64
F/PUMP - Wiring diagram	EC-617
Final drive pre-inspection	FFD-14 , RFD-13
Final drive removal and installation ..	FFD-11 , RFD-10
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-126
Fluids	MA-11
Fluorescent leak detector	ATC-190 , MTC-165
Fog lamp, front	LT-62
Foot lamp	LT-124
Freeze frame data	EC-53 , EC-127
Front brake solenoid valve	AT-144 , AT-146
Front bumper	EI-14
Front case (Transfer)	TF-147 , TF-174
Front combination lamp removal and installation	LT-30
Front door	BL-123 , BL-126 , GW-62
Front Door Trim	EI-29
Front drive shaft (Transfer)	TF-147 , TF-174
Front fog lamp	LT-62
Front passenger air bag	SRS-51
Front seat	SE-89
Front seat belt	SB-3
Front seat belt pre-tensioner	SRS-3 , SRS-58
Front washer	WW-4
Front wiper	WW-4
FTS - Wiring diagram	AT-127
FTTS - Wiring diagram	EC-252 , EC-257
Fuel cut control (at no load high engine speed)	EC-27
Fuel filter replacement	FL-5
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-233 , EC-242
Fuel injection system (Bank 2)	EC-233 , EC-242
Fuel injector and fuel tube	EM-29
Fuel level sensor	EC-363 , EC-365 , EC-367
Fuel line inspection	FL-3
Fuel pressure check	EC-92
Fuel pressure release	EC-92
Fuel pump	EC-616
Fuel pump and gauge	FL-5
Fuel system	FL-3
Fuel tank	FL-10
Fuel tank temperature sensor	EC-250 , EC-256
Fuel tank vacuum relief valve	EC-35
FUELB1 - Wiring diagram	EC-235 , EC-244
FUELB2 - Wiring diagram	EC-236 , EC-245
Fuse	PG-65 , PG-76
Fuse and fusible link box	PG-76
Fuse block	PG-75
Fusible link	PG-65 , PG-76

G

Garage jack and safety stand	GI-40
Gauges	DI-5
Generator	SC-17
Generic scan tool (GST)	EC-136
Glass	GW-11 , GW-62 , GW-65

ALPHABETICAL INDEX

Glove box lamp [LT-147](#)
 GPS antenna [AV-78](#)
 Grease [MA-11](#)
 Ground distribution [PG-29](#)

H

Handling precautions for plastics [BL-185](#)
 Harness connector [PG-66](#)
 Harness layout [PG-39](#)
 Hazard warning lamp [LT-74](#)
 Headlamp removal and installation [LT-30](#)
 Heated oxygen sensor 2 (bank 1) ... [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 (bank 2) ... [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-163](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-163](#)
 Heated seat [SE-86](#)
 Heater and cooling unit (Heater core) . [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Heater unit (heater core) [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Height (Dimensions) [GI-50](#)
 HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system service procedure [ATC-174](#),
[MTC-149](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-14](#)
 HFC134a system service equipment precaution [ATC-11](#), [MTC-11](#)
 High and low reverse clutch solenoid valve [AT-152](#),
[AT-154](#)
 Homelink universal transceiver [BL-151](#)
 Horn [WW-59](#)
 HORN - Wiring diagram [WW-59](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-87](#)

I

IATS - Wiring diagram [EC-189](#)
 Identification plate [GI-48](#)
 Idle air volume learning [EC-90](#)
 Idle mixture ratio [EC-78](#)
 Idle speed [EC-71](#), [EC-76](#)
 Idle speed control (ISC) [EC-371](#), [EC-373](#)
 Ignition coil [EM-26](#), [EC-598](#)
 Ignition control system [EC-598](#)
 Ignition key hole illumination [LT-123](#)
 Ignition timing [EC-71](#), [EC-76](#)
 IGNSYS - Wiring diagram [EC-599](#)
 ILL - Wiring diagram [LT-152](#)
 Illumination [LT-146](#)
 In vehicle sensor [ATC-139](#), [ATC-148](#)
 INJECT - Wiring diagram [EC-611](#)
 Injector [EC-610](#)
 Input clutch solenoid valve [AT-140](#), [AT-142](#)

Instrument panel [IP-10](#)
 Instrument panel speaker [AV-62](#)
 Intake air temperature sensor [EC-188](#), [EC-208](#)
 Intake door control linkage adjustment . [ATC-85](#), [ATC-88](#), [MTC-74](#), [MTC-78](#)
 Intake door motor . [ATC-83](#), [ATC-163](#), [MTC-73](#), [MTC-138](#)
 Intake manifold [EM-15](#)
 Intake sensor [ATC-144](#), [ATC-150](#), [MTC-121](#), [MTC-125](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-151](#)
 Interior [EI-32](#)
 Interior lamp [LT-123](#)
 Interior lamp on-off control [LT-124](#)
 Internal gear (Transfer) [TF-147](#), [TF-174](#)
 IPDM (Intelligent power distribution module engine room) [PG-17](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
 Junction box (J/B) [PG-75](#)

K

Key illumination [LT-124](#)
 KEYLES - Wiring diagram [BL-45](#)
 Knock sensor (KS) [EC-276](#)
 KS - Wiring diagram [EC-277](#)

L

Length (Dimensions) [GI-50](#)
 License lamp [LT-102](#)
 Lifting points [GI-41](#)
 Line pressure solenoid valve [AT-119](#)
 Line pressure switch (Transfer) [TF-152](#), [TF-165](#)
 Line pressure test (A/T) [AT-51](#)
 Location of electrical units [PG-62](#)
 Low coast brake solenoid valve [AT-156](#), [AT-158](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses [WT-11](#)
 Low tire pressure warning system - Wiring diagram [WT-11](#)

Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-5](#)
 Lubrication oil A/C [ATC-22](#), [MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-174](#), [EC-182](#)
 Magnet clutch [ATC-115](#), [ATC-179](#), [MTC-103](#), [MTC-154](#)
 MAIN - Wiring diagram [EC-154](#), [AT-168](#)
 Main oil pump (Transfer) [TF-152](#), [TF-165](#)

ALPHABETICAL INDEX

[Mainshaft \(Transfer\) TF-152, TF-165](#)
[Maintenance \(engine\)Schedule 1 MA-7](#)
[Maintenance \(engine\)Schedule 2 MA-9](#)
[Major overhaul \(Final drive\) FFD-13, RFD-14](#)
[Major overhaul \(Transfer\) TF-144](#)
[Malfunction indicator lamp \(MIL\) EC-63](#)
[Map lamp LT-124](#)
[Mass air flow sensor \(MAFS\) EC-171, EC-180](#)
[Meter DI-5](#)
[METER - Wiring diagram DI-10](#)
[MIL data link connectors circuit EC-638](#)
[MIL/DL - Wiring diagram EC-638](#)
[MIRROR - Wiring diagram GW-96](#)
[Misfire EC-268](#)
[Mode door control linkage adjustment .. ATC-66, MTC-60](#)
[Mode door motor .. ATC-64, ATC-164, MTC-59, MTC-139](#)
[Model variation GI-46](#)
[Multiport fuel injection \(MFI\) system EC-24](#)
[Multiport fuel injection precautions GI-6](#)
[Multi-remote control system - See Remote keyless entry system BL-39](#)

N

[NATS - Wiring diagram BL-135](#)
[NAVI - Wiring diagram AV-95](#)
[NAVI Control Unit AV-173](#)
[Neutral-4LO switch TF-62](#)
[NONDTC - Wiring diagram AT-177](#)
[NVH troubleshooting \(AX\) FAX-4](#)
[NVH troubleshooting \(EM\) EM-9](#)
[NVH troubleshooting \(Final drive\) RFD-5](#)
[NVH troubleshooting \(Propeller shaft\) PR-3](#)
[NVH troubleshooting \(RAX\) RAX-4](#)
[NVH troubleshooting \(RSU\) RSU-5](#)
[NVH troubleshooting \(ST\) PS-5](#)
[NVH troubleshooting \(Transfer\) TF-10](#)
[NVH troubleshooting \(WT\)NVH troubleshooting \(WT\) . WT-4](#)
[NVIS \(Nissan vehicle immobilizer system\) BL-132](#)
[NVIS \(Nissan vehicle immobilizer system\) precautions GI-3](#)

O

[O2H2B1 - Wiring diagram EC-165](#)
[O2H2B2 - Wiring diagram EC-167](#)
[O2S2B1 - Wiring diagram .. EC-215, EC-225, EC-415, EC-426](#)
[O2S2B2 - Wiring diagram .. EC-217, EC-227, EC-417, EC-428](#)
[Oil cooler \(engine\) LU-11](#)
[Oil filter LU-10](#)
[Oil filter \(Transfer\) TF-141](#)
[Oil pan \(engine\) EM-22](#)
[Oil pressure \(engine\) LU-7](#)
[Oil pressure relief valve \(engine\) LU-5](#)

[Oil pump \(engine\) LU-13](#)
[Oil seal replacement \(engine\) EM-56](#)
[Oil seal replacement \(front of final drive\) FFD-7, RFD-6](#)
[Oil seal replacement \(side of final drive\) FFD-9, RFD-8](#)
[On board diagnostic system EC-48](#)
[ORVR \(On-board Refueling Vapor Recovery\) .. EC-39](#)
[Overheat EC-437](#)

P

[P/SCKT - Wiring diagram WW-57](#)
[Pantograph jack GI-40](#)
[Park/Neutral position switch EC-560](#)
[Park/neutral position switch \(A/T\) AT-104](#)
[Parking brake control PB-4](#)
[PCV \(positive crankcase ventilation\) EC-45](#)
[Personal lamp LT-124](#)
[PGC/V - Wiring diagram EC-317, EC-531](#)
[PHASE - Wiring diagram EC-290](#)
[Pinion bearing preload diff. RFD-22](#)
[Piston pin inspection EM-90](#)
[Piston ring inspection EM-91](#)
[Piston to bore clearance EM-95](#)
[Planetary carrier \(Transfer\) TF-147, TF-174](#)
[PNP/SW - Wiring diagram EC-562, AT-105](#)
[POS - Wiring diagram EC-283](#)
[POWER - Wiring diagram PG-6](#)
[Power door lock BL-16](#)
[Power seat SE-82](#)
[Power steering fluid level MA-29](#)
[Power steering gear PS-14](#)
[Power steering oil pump PS-25](#)
[Power steering pressure \(PSP\) sensor EC-375](#)
[Power steering system bleeding PS-6](#)
[Power supply routing PG-4](#)
[Power window GW-15](#)
[PRE/SE - Wiring diagram EC-334, EC-340](#)
[Precautions \(General\) GI-4](#)
[Precautions in repairing high strength steel BL-188](#)
[Pressure switch 1 AT-146, AT-160](#)
[Pressure switch 2 AT-158](#)
[Pressure switch 3 AT-142, AT-162](#)
[Pressure switch 5 AT-150, AT-164](#)
[Pressure switch 6 AT-154, AT-166](#)
[Pressure test \(A/T\) AT-51](#)
[Propeller shaft PR-4, PR-8](#)
[Propeller shaft inspection MA-25](#)
[Propeller shaft on vehicle service PR-8](#)
[Propeller shaft vibration PR-4, PR-8](#)
[PS/SEN - Wiring diagram EC-376](#)

R

[R/VIEW - Wiring diagram DI-73](#)
[Radiator CO-12](#)
[Radio - See Audio AV-6](#)
[Rear Audio Remote Control Unit AV-63](#)
[Rear axle RAX-5](#)
[Rear bumper EI-16](#)

ALPHABETICAL INDEX

Rear case (Transfer) [TF-146](#), [TF-179](#)
Rear combination lamp removal and installation ... [LT-116](#)
Rear cover packing replacement diff. [RFD-24](#)
Rear door [BL-123](#), [GW-65](#)
Rear seat [SE-96](#)
Rear seat belt [SB-6](#)
Rear suspension [RSU-25](#)
Rear view monitor [DI-70](#)
Rear washer [WW-36](#)
Rear window defogger [GW-72](#)
Rear wiper [WW-36](#)
Refrigerant connection precaution [ATC-7](#), [MTC-7](#)
Refrigerant discharging evacuating charging [ATC-174](#), [MTC-149](#)
Refrigerant general precaution [ATC-6](#), [MTC-6](#)
Refrigerant lines [ATC-174](#), [ATC-182](#), [ATC-183](#), [MTC-149](#), [MTC-157](#), [MTC-158](#)
Refrigerant pressure sensor . [EC-622](#), [ATC-185](#), [MTC-160](#)
Relay box [PG-77](#)
Remote keyless entry system [BL-39](#)
Removal and installation (A/T) [AT-244](#), [AT-247](#)
Removal and installation (Transfer) [TF-143](#)
Revolution sensor (A/T) [AT-108](#)
Ring gear diff. inspection [RFD-13](#)
Road wheel size [GI-50](#)
Rocker cover [EM-33](#)
Room lamp [LT-123](#)
Room lamp - See Interior lamp [LT-123](#)
ROOM/L - Wiring diagram [LT-129](#)
RP/SEN - Wiring diagram [EC-623](#)

S

SAE J1979 - Service \$01 - 09 [EC-48](#)
SEAT - Wiring diagram [SE-82](#), [SE-83](#)
Seat belt inspection [SB-10](#), [MA-32](#)
Seat belt pre-tensioner [SRS-58](#)
Seat belt, front [SB-3](#)
Seat belt, rear [SB-6](#)
Seat, front [SE-89](#)
Seat, rear [SE-96](#)
Self-diagnosis (Transfer) [TF-50](#)
SEN/PW - Wiring diagram [EC-453](#)
SHIFT - Wiring diagram [AT-223](#)
Shift control (Transfer) [TF-147](#), [TF-174](#)
Shift lock system [AT-222](#)
Shock absorber (front) [FSU-10](#)
Shock absorber (rear) [RSU-34](#)
Side air bag (satellite) sensor [SRS-57](#)
Side bearing preload diff. [RFD-19](#)
Side curtain air bag [SRS-54](#)
Side trim [EI-32](#)
SMJ (super multiple junction) [PG-73](#)
SONAR - Wiring diagram [DI-62](#)
Spare tire size [GI-50](#)
Spark plug [EM-27](#)
Spark plug replacement [MA-18](#)

Specification value [EC-143](#)
Speedometer [DI-5](#)
Spiral cable [SRS-48](#)
SROOF - Wiring diagram [RF-13](#)
SRS - See Supplemental Restraint System [SRS-5](#)
SRS - Wiring diagram [SRS-12](#)
SRS Trouble diagnoses [SRS-8](#)
Stabilizer bar (front) [FSU-12](#)
Stabilizer bar (rear) [RSU-41](#)
Stall test (A/T) [AT-50](#)
Standardized relay [PG-71](#)
START - Wiring diagram [SC-11](#)
Starting system [SC-10](#)
Steering gear, linkage and transfer gear inspection [MA-29](#)
Steering linkage [PS-14](#)
Steering wheel and column [PS-7](#)
Step lamp [LT-124](#)
Stop lamp [LT-97](#)
Stop lamp switch [EC-550](#), [EC-565](#), [EC-628](#)
STOP/L - Wiring diagram [LT-98](#)
Strut (front) [FSU-10](#)
STSIG - Wiring diagram [AT-100](#)
Sub-oil pump (Transfer) [TF-152](#), [TF-165](#)
Sun gear (Transfer) [TF-147](#), [TF-174](#)
Sun roof, electric [RF-10](#)
Sunload sensor [ATC-142](#)
Sunroof [RF-24](#)
Supplemental Restraint System [SRS-5](#)
Supplemental restraint system - Wiring diagram . [SRS-12](#)
Symbols and abbreviations [GI-10](#), [GI-22](#)
Symptom matrix chart [EC-103](#)
System readiness test (SRT) code [EC-54](#)

T

Tachometer [DI-5](#)
Tail lamp [LT-102](#)
TAIL/L - Wiring diagram [LT-104](#)
TCM circuit diagram [AT-49](#)
TCM inspection table [AT-82](#)
TCS - Wiring diagram [BRC-16](#)
TCS (traction control system) [BRC-7](#)
TCS component parts and connector location [BRC-14](#)
TCS wheel sensors [BRC-14](#)
Theft warning system - See Vehicle security (Theft warning) system [BL-69](#)
Thermometer [DI-26](#)
Three way catalyst [EM-19](#)
Three way catalyst function (Bank 1) [EC-295](#)
Three way catalyst function (Bank 2) [EC-295](#)
Three way catalyst precautions [GI-5](#)
Throttle control motor [EC-407](#)
Throttle control motor relay [EC-402](#)
Throttle position sensor (TPS) ... [EC-198](#), [EC-261](#), [EC-448](#), [EC-450](#), [EC-583](#)
Throttle valve closed position learning [EC-89](#)
Tie-rod [PS-14](#)

ALPHABETICAL INDEX

Timing chain	EM-35	Warning chime	DI-42
Tire rotation	MA-28	Warning lamps	DI-30
Tire size	GI-50	Washer, front	WW-4
Tooth contact diff.	RFD-20	Washer, rear	WW-36
Torque converter installation AT-245 , AT-246 , AT-248 , AT-249		Water pump	CO-17
Torque convertor clutch solenoid valve ... AT-115 , AT-117		Water temperature gauge	DI-5
Tow truck towing	GI-42	Wheel alignment (front)	FSU-6
Towing point	GI-43	Wheel alignment (rear)	RSU-27
TPS1 - Wiring diagram	EC-263	Wheel bearing (front)	FAX-5
TPS2 - Wiring diagram	EC-200	Wheel bearing (rear)	RAX-5
TPS3 - Wiring diagram	EC-585	Wheel hub (rear)	RAX-5
Traction control system - Wiring diagram	BRC-16	Wheel size	GI-50
Transfer control device	TF-76 , TF-80 , TF-138	Wheelbase (Dimensions)	GI-50
Transfer control unit inspection table	TF-36	Width (Dimensions)	GI-50
Transfer dropping resistor	TF-90	WINDOW - Wiring diagram	GW-22
Transfer fluid temperature sensor TF-104 , TF-152 , TF-165		Window antenna	AV-64
Transfer motor	TF-102 , TF-140	Window, door	GW-62 , GW-65
Transfer motor relay	TF-102	Windshield	GW-11
Transfer oil replacement	MA-24	WIP/R - Wiring diagram	WW-40
Transfer serial number	GI-49	WIPER - Wiring diagram	WW-11
Transmission serial number	GI-49	Wiper, front	WW-4
Tread-FR&RR (Dimensions)	GI-50	Wiper, rear	WW-36
Trim	EI-32	Wiring Diagram (Cell code) list	PG-60
TRNSCV - Wiring diagram	BL-151	Wiring diagrams	GI-15
Trouble diagnoses	GI-11	WT-T/WARN - Wiring diagram	WT-11
Turbine revolution sensor	AT-131		
TURN - Wiring diagram	LT-77		
Turn signal lamp	LT-74		
Two trip detection logic	EC-48		
Two-pole lift	GI-41		

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-113
Valve clearance	EM-52
Valve guide	EM-66
Vanity mirror lamp	LT-123
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-369
VEHSEC - Wiring diagram	BL-73
VENT/V - Wiring diagram	EC-324 , EC-539
Video Monitor	AV-76
VIN registration	EC-89
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-110

W

W/ANT - Wiring diagram	AV-65
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31