

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-93 , TF-153 , TF-166
4WD - Wiring diagram	TF-24
4WD shift switch	TF-66
4WD solenoid valve	TF-89 , TF-153 , TF-166
4WD system description	TF-15
4WD system diagram	TF-19

A

A/C air flow	ATC-30
A/C compressor clutch removal and installation ..	ATC-222
A/C compressor mounting	ATC-221
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-14
A/C control operation (auto A/C)	ATC-27
A/C diagnostic work flow (auto A/C)	ATC-169
A/C evaporator	ATC-230
A/C HFC134a (R134a) system identification	ATC-6
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-217
A/C HFC134a (R134a) system service tools ...	ATC-14
A/C HFC134a system service equipment precaution ...	ATC-11
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-22
A/C operational check	ATC-71 , ATC-73
A/C self-diagnoses (auto A/C)	ATC-69 , ATC-169
A/C service data specification	ATC-237
A/C trouble diagnoses (auto A/C)	ATC-34
A/C, A - Wiring diagram	ATC-45
A/T fluid checking	AT-12 , AT-51 , MA-22
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-127
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T shift lock system	AT-221
A/T trouble diagnoses	AT-42
ABS - Wiring diagram	BRC-17
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-526 , EC-532 , EC-546
Accelerator pedal released position learning	EC-78
AF1B1-Wiring diagram	EC-214 , EC-223 , EC-232 , EC-242 , EC-556
AF1B2-Wiring diagram	EC-216 , EC-225 , EC-234 , EC-244 , EC-558
AF1HB1-Wiring diagram	EC-155
AF1HB2-Wiring diagram	EC-157
Aiming adjustment	LT-29 , LT-77
Air bag	SRS-3
Air cleaner and air duct	EM-15
Air cleaner filter replacement	EM-16 , MA-16
Air conditioner cut control	EC-28

Air flow meter - See Mass air flow sensor	EC-169 , EC-178
Air fuel ratio sensor 1 ..	EC-211 , EC-221 , EC-230 , EC-239 , EC-554
Air fuel ratio sensor 1 heater	EC-154
Air mix. door motor	ATC-87
Ambient sensor	ATC-174 , ATC-191
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-528
APPS2 - Wiring diagram	EC-534
APPS3 - Wiring diagram	EC-548
ASC/BS - Wiring diagram	EC-494
ASC/SW - Wiring diagram	EC-487
ASCSOF - Wiring diagram	EC-566
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-492 , EC-565
ASCD indicator lamp	EC-572
ASCD steering switch	EC-485
ASCIND - Wiring diagram	EC-573
ATP switch	TF-106 , TF-109 , TF-114
Audio	AV-6
AUDIO - Wiring diagram	AV-15
AUT/DP - Wiring diagram	SE-16
Auto air conditioner - Wiring diagram	ATC-45
Auto anti-dazzling inside mirror	GW-70 , GW-71
Autolamp	LT-48
Automatic amplifier	ATC-74
Automatic drive positioner	SE-11
Automatic transmission number	GI-48

B

Back door	BL-93
Back door trim	EI-28
Back sonar	DI-59
BACK/L - Wiring diagram	LT-108
Back-up lamp	LT-108
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-10 , SC-16
BCM (Body control module)	BCS-3
Block heater	EM-78
Blower motor	ATC-124 , ATC-195
Body alignment	BL-169
Body component parts	BL-156
Body construction	BL-168
Body exterior paint color	BL-155
Body mounting	BL-154
Body repair	BL-155
Body sealing	BL-165
Bose speaker amp.	AV-9
Brake booster	BR-17
Brake fluid level	MA-28
Brake hydraulic line	BR-12
Brake inspection	MA-28
Brake lines and cables inspection	MA-28

ALPHABETICAL INDEX

Brake master cylinder [BR-15](#)
 Brake switch [EC-492](#), [EC-502](#), [EC-565](#)
 BRK/SW - Wiring diagram [EC-503](#)
 Bulb specifications [LT-175](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-15](#)

C

Cabin air filter [ATC-197](#), [MA-21](#)
 Camshaft [EM-46](#)
 Camshaft inspection [EM-50](#)
 Camshaft position sensor (PHASE) [EC-345](#)
 CAN - Wiring diagram . [EC-150](#), [AT-97](#), [LAN-27](#), [LAN-38](#), [LAN-53](#), [LAN-70](#), [LAN-88](#), [LAN-104](#), [LAN-122](#)
 CAN communication . [EC-31](#), [EC-149](#), [EC-152](#), [AT-96](#)
 Canister-See EVAP canister [EC-35](#)
 Center case (Transfer) [TF-153](#), [TF-166](#)
 CHARGE - Wiring diagram [SC-15](#)
 Charging system [SC-14](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-8](#)
 Chassis and body maintenanceSchedule 2 [MA-10](#)
 CHIME - Wiring diagram [DI-45](#)
 Circuit breaker [PG-17](#)
 Closed loop control [EC-25](#), [EC-468](#)
 Closed loop control (Bank 1) [EC-468](#)
 Closed loop control (Bank 2) [EC-468](#)
 Clutch drum (Transfer) [TF-153](#), [TF-166](#)
 Clutch pressure switch (Transfer) [TF-153](#), [TF-166](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-59](#)
 Combination lamp, front, removal and installation . [LT-31](#)
 Combination lamp, rear, removal and installation .. [LT-124](#)
 Combination meter [DI-5](#)
 Combination switch [LT-99](#)
 COMBSW - Wiring diagram [LT-99](#)
 COMM - Wiring diagram [AV-101](#)
 COMPAS - Wiring diagram [DI-27](#)
 Compass [DI-26](#)
 Component Location (auto A/C) [ATC-40](#)
 Compressor clutch removal and installation . [ATC-222](#)
 Compressor mounting [ATC-221](#)
 Compressor precaution [ATC-11](#)
 Compressor special service tool [ATC-14](#)
 Condenser [ATC-228](#)
 Connecting rod [EM-96](#)
 Connecting rod bearing clearance [EM-96](#)
 Connecting rod bushing clearance [EM-96](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-29](#)
 CONSULT-II for engine [EC-113](#)
 Control units (terminal arrangement) [PG-71](#)
 Control valve (A/T) [AT-36](#)
 Control valve (Transfer) [TF-153](#), [TF-166](#)
 Converter housing installation [AT-245](#), [AT-249](#)
 COOL/F - Wiring diagram [EC-474](#)

Coolant mixture ratio [MA-12](#)
 Coolant replacement [CO-10](#), [MA-13](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-17](#)
 Cooling fan control [EC-471](#)
 Cooling fan motor [EC-480](#)
 Cooling unit (A/C evaporator) [ATC-199](#), [ATC-230](#)
 Corrosion protection [BL-162](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft [EM-79](#)
 Crankshaft position sensor (POS) [EC-338](#)
 Crash zone sensor [SRS-54](#)
 Cylinder block [EM-78](#)
 Cylinder block boring [EM-99](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Data link connector for Consult [EC-115](#), [EC-126](#)
 Daytime light system [LT-33](#)
 Daytime running light - See Daytime light system .. [LT-33](#)
 DEF - Wiring diagram [GW-76](#)
 Diagnosis sensor unit [SRS-57](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-52](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-89](#)
 Differential carrier assembly [RFD-15](#)
 Differential gear oil replacement [MA-26](#)
 Dimensions [GI-49](#)
 Direct clutch solenoid valve [AT-147](#), [AT-149](#)
 Display and amp.assembly [ATC-74](#)
 Display Control Unit-Description [AV-90](#)
 Display Unit-Description [AV-90](#)
 Dome light - See Interior lamp [LT-133](#)
 Door glass [GW-62](#), [GW-65](#)
 Door lock [BL-126](#)
 Door mirror lamp [LT-133](#), [LT-157](#)
 Door trim [EI-28](#)
 Door, front [BL-123](#), [GW-62](#)
 Door, rear [BL-123](#), [GW-65](#)
 Drive belt [EM-13](#)
 Drive chain (Transfer) [TF-148](#), [TF-175](#)
 Drive pinion diff. inspection [RFD-18](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-45](#)
 DTC work support [EC-122](#)
 DTRL - Wiring diagram [LT-37](#)
 Duct and grilles [ATC-212](#)
 DVD Entertainment System [AV-79](#)
 DVD Player [AV-80](#), [AV-87](#)

E

ECM input/output signal [EC-105](#), [EC-127](#)
 ECM power supply [EC-143](#), [EC-451](#)
 ECM relay [EC-143](#)

ALPHABETICAL INDEX

ECM/PW - Wiring diagram [EC-452](#)
 ECTS - Wiring diagram [EC-192](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-513](#), [EC-524](#)
 Electrical load signal circuit [EC-575](#)
 Electrical units location [PG-65](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-103](#)
 Engine control component parts location [EC-96](#)
 Engine control module (ECM) [EC-455](#)
 Engine control system diagram [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-190](#),
[EC-203](#)
 Engine fail-safe system [EC-91](#)
 Engine oil [LU-8](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [LU-9](#), [MA-17](#)
 Engine removal [EM-74](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-514](#)
 ETC2 - Wiring diagram [EC-509](#)
 ETC3 - Wiring diagram [EC-520](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-371](#), [EC-379](#)
 EVAP canister vent control valve [EC-386](#), [EC-393](#)
 EVAP control system (small leak) diagnosis .. [EC-363](#),
[EC-417](#), [EC-425](#)
 EVAP control system pressure sensor [EC-400](#), [EC-403](#), [EC-409](#)
 EVAP control system purge flow monitoring diagnosis
[EC-358](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-230](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-232](#)

F

F/FOG - Wiring diagram [LT-69](#)
 F/PUMP - Wiring diagram [EC-584](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation .. [FFD-12](#), [RFD-13](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-127](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-233](#)
 Fog lamp, front [LT-67](#)
 Foot lamp [LT-133](#)
 Freeze frame data [EC-53](#), [EC-116](#)
 Front brake solenoid valve [AT-143](#), [AT-145](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-148](#), [TF-175](#)

Front combination lamp removal and installation [LT-31](#)
 Front door [BL-123](#), [BL-126](#), [GW-62](#)
 Front Door Trim [EI-28](#)
 Front drive shaft (Transfer) [TF-148](#), [TF-175](#)
 Front fog lamp [LT-67](#)
 Front passenger air bag [SRS-50](#)
 Front seat [SE-85](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-56](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-128](#)
 FTTS - Wiring diagram [EC-309](#), [EC-314](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-286](#), [EC-297](#)
 Fuel injection system (Bank 2) [EC-286](#), [EC-297](#)
 Fuel injector [EC-577](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-434](#), [EC-436](#), [EC-438](#)
 Fuel line inspection [FL-4](#)
 Fuel pressure check [EC-80](#)
 Fuel pressure release [EC-80](#)
 Fuel pump [EC-583](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-307](#), [EC-313](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-288](#), [EC-299](#)
 FUEL B2 - Wiring diagram [EC-290](#), [EC-301](#)
 Fuse [PG-17](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-40](#)
 Gauges [DI-5](#)
 Generator [SC-14](#)
 Generic scan tool (GST) [EC-125](#)
 Glass [GW-11](#), [GW-62](#), [GW-65](#)
 Glove box lamp [LT-159](#)
 GPS antenna [AV-89](#)
 Grease [MA-11](#)
 Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-9](#)
 Handling precautions for plastics [BL-185](#)
 Harness connector [PG-68](#)
 Harness layout [PG-41](#)
 Hazard warning lamp [LT-79](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-31](#)
 Heated oxygen sensor 2 (bank 1) [EC-251](#), [EC-262](#),

ALPHABETICAL INDEX

[EC-275](#)

Heated oxygen sensor 2 (bank 2) [EC-251](#), [EC-262](#), [EC-275](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-161](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-161](#)
 Heated seat [SE-82](#)
 Heater and cooling unit (Heater core) . [ATC-199](#), [ATC-202](#)
 Heater unit (heater core) [ATC-199](#), [ATC-202](#)
 Height (Dimensions) [GI-49](#)
 HFC134a (R134a) system identification [ATC-6](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-217](#)
 HFC134a (R134a) system service tools [ATC-14](#)
 HFC134a system service equipment precaution [ATC-11](#)
 High and low reverse clutch solenoid valve [AT-151](#), [AT-153](#)
 Homelink universal transceiver [BL-151](#)
 Horn [WW-57](#)
 HORN - Wiring diagram [WW-57](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-83](#)

I

I/MIRR - Wiring diagram [GW-70](#)
 IATS - Wiring diagram [EC-187](#)
 Identification plate [GI-47](#)
 Idle air volume learning [EC-78](#)
 Idle speed [EC-71](#), [EC-76](#)
 Idle speed control (ISC) [EC-442](#), [EC-444](#)
 Ignition coil [EM-28](#), [EC-589](#)
 Ignition control system [EC-589](#)
 Ignition key hole illumination [LT-133](#)
 Ignition timing [EC-71](#), [EC-76](#)
 IGNSYS - Wiring diagram [EC-590](#)
 ILL - Wiring diagram [LT-165](#)
 Illumination [LT-158](#)
 In vehicle sensor [ATC-178](#), [ATC-192](#)
 In-cabin Microfilter [ATC-197](#), [MA-21](#)
 INJECT - Wiring diagram [EC-578](#)
 Injector [EC-577](#)
 Input clutch solenoid valve [AT-139](#), [AT-141](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-140](#)
 Intake air temperature sensor [EC-186](#), [EC-206](#)
 Intake door control linkage adjustment [ATC-112](#), [ATC-116](#)
 Intake door motor [ATC-110](#), [ATC-206](#)
 Intake manifold [EM-17](#)
 Intake sensor [ATC-186](#), [ATC-194](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-151](#)
 Interior [EI-31](#)
 Interior lamp [LT-133](#)
 Interior lamp on-off control [LT-133](#)
 Internal gear (Transfer) [TF-148](#), [TF-175](#)
 IPDM (Intelligent power distribution module engine

room) [PG-18](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
 Junction box (J/B) [PG-76](#)

K

Key illumination [LT-133](#)
 KEYLES - Wiring diagram [BL-45](#)
 Knock sensor (KS) [EC-333](#)
 KS - Wiring diagram [EC-334](#)

L

Length (Dimensions) [GI-49](#)
 License lamp [LT-110](#)
 Lifting points [GI-41](#)
 Line pressure solenoid valve [AT-122](#)
 Line pressure switch (Transfer) [TF-153](#), [TF-166](#)
 Line pressure test (A/T) [AT-52](#)
 Location of electrical units [PG-65](#)
 Low coast brake solenoid valve [AT-155](#), [AT-157](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses [WT-11](#)
 Low tire pressure warning system - Wiring diagram [WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-6](#)
 Lubrication oil A/C [ATC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-172](#), [EC-180](#)
 Magnet clutch [ATC-150](#), [ATC-222](#)
 MAIN - Wiring diagram [EC-143](#), [AT-167](#)
 Main oil pump (Transfer) [TF-153](#), [TF-166](#)
 Mainshaft (Transfer) [TF-153](#), [TF-166](#)
 Maintenance (engine)Schedule 1 [MA-7](#)
 Maintenance (engine)Schedule 2 [MA-9](#)
 Major overhaul (Final drive) [FFD-14](#)
 Major overhaul (Transfer) [TF-145](#)
 Malfunction indicator lamp (MIL) [EC-63](#)
 Map lamp [LT-133](#)
 Mass air flow sensor (MAFS) [EC-169](#), [EC-178](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-606](#)
 MIL/DL - Wiring diagram [EC-606](#)
 MIRROR - Wiring diagram [GW-96](#)
 Misfire [EC-325](#)
 Mode door control linkage adjustment [ATC-80](#)
 Mode door motor [ATC-78](#), [ATC-207](#)

ALPHABETICAL INDEX

Model variation [GI-46](#)
 Multiport fuel injection (MFI) system [EC-24](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-39](#)

N

NATS - Wiring diagram [BL-135](#)
 NAVI - Wiring diagram [AV-93](#)
 NAVI Control Unit [AV-90](#)
 Navigation system [AV-88](#)
 Neutral-4LO switch [TF-62](#)
 NONDTC - Wiring diagram [AT-176](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-10](#)
 NVH troubleshooting (Final drive) [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (RAX) [RAX-4](#)
 NVH troubleshooting (RSU) [RSU-5](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (Transfer) [TF-10](#)
 NVH troubleshooting (WT) NVH troubleshooting (WT) [WT-4](#)
 NVIS (Nissan vehicle immobilizer system) [BL-132](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-163](#)
 O2H2B2 - Wiring diagram [EC-165](#)
 O2S2B1 - Wiring diagram ... [EC-254](#), [EC-265](#), [EC-278](#)
 O2S2B2 - Wiring diagram ... [EC-256](#), [EC-267](#), [EC-280](#)
 Oil cooler (engine) [LU-12](#)
 Oil filter [LU-11](#)
 Oil filter (Transfer) [TF-142](#)
 Oil pan (engine) [EM-24](#)
 Oil pressure (engine) [LU-8](#)
 Oil pressure relief valve (engine) [LU-6](#)
 Oil pump (engine) [LU-14](#)
 Oil seal replacement (engine) [EM-60](#)
 Oil seal replacement (front of final drive) [FFD-8](#), [RFD-9](#)
 Oil seal replacement (side of final drive) [RFD-11](#)
 On board diagnostic system [EC-48](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)
 Overheat [EC-471](#)

P

P/SCKT - Wiring diagram [WW-55](#)
 Pantograph jack [GI-40](#)
 Park/Neutral position switch [EC-463](#)
 Park/neutral position switch (A/T) [AT-105](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) [EC-45](#)
 Personal lamp [LT-133](#)
 PGC/V - Wiring diagram [EC-373](#), [EC-381](#)
 PHASE - Wiring diagram [EC-347](#)

Pinion bearing preload diff. [RFD-26](#)
 Piston pin inspection [EM-94](#)
 Piston ring inspection [EM-95](#)
 Piston to bore clearance [EM-99](#)
 Planetary carrier (Transfer) [TF-148](#), [TF-175](#)
 PNP/SW - Wiring diagram [EC-465](#), [AT-106](#)
 POS - Wiring diagram [EC-340](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power seat [SE-78](#)
 Power steering fluid level [MA-29](#)
 Power steering gear [PS-15](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor [EC-446](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-16](#)
 PRE/SE - Wiring diagram [EC-405](#), [EC-411](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-188](#)
 Pressure switch 1 [AT-145](#), [AT-159](#)
 Pressure switch 2 [AT-157](#)
 Pressure switch 3 [AT-141](#), [AT-161](#)
 Pressure switch 5 [AT-149](#), [AT-163](#)
 Pressure switch 6 [AT-153](#), [AT-165](#)
 Pressure test (A/T) [AT-52](#)
 Propeller shaft [PR-4](#), [PR-8](#)
 Propeller shaft inspection [MA-25](#)
 Propeller shaft on vehicle service [PR-8](#)
 Propeller shaft vibration [PR-4](#), [PR-8](#)
 PS/SEN - Wiring diagram [EC-447](#)

R

R/VIEW - Wiring diagram [DI-74](#)
 Radiator [CO-14](#)
 Radio - See Audio [AV-6](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-147](#), [TF-180](#)
 Rear combination lamp removal and installation ... [LT-124](#)
 Rear cover packing replacement diff. [RFD-28](#)
 Rear door [BL-123](#), [GW-65](#)
 Rear seat [SE-99](#)
 Rear seat belt [SB-6](#)
 Rear suspension [RSU-26](#)
 Rear view monitor [DI-70](#)
 Rear washer [WW-34](#)
 Rear window defogger [GW-72](#)
 Rear wiper [WW-34](#)
 Refrigerant connection precaution [ATC-7](#)
 Refrigerant discharging evacuating charging [ATC-217](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-217](#), [ATC-225](#), [ATC-226](#)
 Refrigerant pressure sensor [EC-601](#), [ATC-228](#)
 Relay box [PG-78](#)
 Remote keyless entry system [BL-39](#)
 Removal and installation (A/T) [AT-243](#), [AT-246](#)

ALPHABETICAL INDEX

Removal and installation (Transfer)	TF-144
Revolution sensor (A/T)	AT-111
Ring gear diff. inspection	RFD-18
Road wheel size	GI-49
Rocker cover	EM-35
Room lamp	LT-133
Room lamp - See Interior lamp	LT-133
ROOM/L - Wiring diagram	LT-140
RP/SEN - Wiring diagram	EC-602

S

SAE J1979 - Service \$01 - 09	EC-48
SEAT - Wiring diagram	SE-78 , SE-79
Seat belt inspection	SB-11 , MA-32
Seat belt pre-tensioner	SRS-56
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-85
Seat, rear	SE-99
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-459
SHIFT - Wiring diagram	AT-222
Shift control (Transfer)	TF-148 , TF-175
Shift lock system	AT-221
Shock absorber (front)	FSU-11
Shock absorber (rear)	RSU-35
Side air bag (satellite) sensor	SRS-55
Side curtain air bag	SRS-53
Side trim	EI-31
SMJ (super multiple junction)	PG-74
SONAR - Wiring diagram	DI-62
Spare tire size	GI-49
Spark plug	EM-29
Spark plug replacement	MA-18
Specification value	EC-132
Speedometer	DI-5
Spiral cable	SRS-47
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-12
Stabilizer bar (rear)	RSU-42
Stall test (A/T)	AT-51
Standardized relay	PG-72
START - Wiring diagram	SC-9
Starting system	SC-8
Steering gear, linkage and transfer gear inspection	MA-29
Steering linkage	PS-15
Steering wheel and column	PS-8
Step lamp	LT-133
Stop lamp	LT-105
Stop lamp switch	EC-492 , EC-502 , EC-565
STOP/L - Wiring diagram	LT-106
Strut (front)	FSU-10
STSIG - Wiring diagram	AT-101
Sub-oil pump (Transfer)	TF-153 , TF-166
Sun gear (Transfer)	TF-148 , TF-175

Sun roof, electric	RF-10
Sunload sensor	ATC-183
Sunroof	RF-24
Supplemental Restraint System	SRS-5
Symbols and abbreviations	GI-10 , GI-22
Symptom matrix chart	EC-92
System readiness test (SRT) code	EC-54

T

T/TOW - Wiring diagram	LT-129
Tachometer	DI-5
Tail lamp	LT-110
TAIL/L - Wiring diagram	LT-113
TCM inspection table	AT-83
TCS - Wiring diagram	BRC-17
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Theft warning system - See Vehicle security (Theft warn- ing) system	BL-69
Thermometer	DI-26
Three way catalyst	EM-21
Three way catalyst function (Bank 1)	EC-352
Three way catalyst function (Bank 2)	EC-352
Three way catalyst precautions	GI-5
Throttle control motor	EC-519
Throttle control motor relay	EC-507
Throttle position sensor (TPS)	EC-196 , EC-318 , EC-481 , EC-483 , EC-539
Throttle valve closed position learning	EC-78
Tie-rod	PS-15
Timing chain	EM-37
Tire rotation	MA-28
Tire size	GI-49
Torque converter installation	AT-244 , AT-245 , AT-248 , AT-249
Torque convertor clutch solenoid valve	AT-118 , AT-120
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-320
TPS2 - Wiring diagram	EC-198
TPS3 - Wiring diagram	EC-541
Traction control system - Wiring diagram	BRC-17
Transfer control device	TF-76 , TF-80 , TF-137
Transfer control unit inspection table	TF-35
Transfer dropping resistor	TF-89
Transfer fluid temperature sensor	TF-103 , TF-153 , TF-166
Transfer motor	TF-101 , TF-141
Transfer motor relay	TF-101
Transfer oil replacement	MA-25
Transfer serial number	GI-48
Transmission serial number	GI-48
Tread-FR&RR (Dimensions)	GI-49
Trim	EI-31
TRNSCV - Wiring diagram	BL-151
Trouble diagnoses	GI-10

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Turbine revolution sensor	AT-109
TURN - Wiring diagram	LT-83
Turn signal lamp	LT-79
Two trip detection logic	EC-48
Two-pole lift	GI-41

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-102
Valve clearance	EM-55
Valve guide	EM-69
Vanity mirror lamp	LT-133
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-17
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-440
VEHSEC - Wiring diagram	BL-73
VENT/V - Wiring diagram	EC-388 , EC-395
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-113

W

W/ANT - Wiring diagram	AV-76
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-4
Washer, rear	WW-34
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-28
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-49
Wheelbase (Dimensions)	GI-49
Width (Dimensions)	GI-49
WINDOW - Wiring diagram	GW-24
Window antenna	AV-75
Window, door	GW-62 , GW-65
Windshield	GW-11
WIP/R - Wiring diagram	WW-38
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-34
Wiring Diagram (Cell code) list	PG-62
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-11