

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-93](#), [TF-153](#), [TF-166](#)
 4WD - Wiring diagram [TF-24](#)
 4WD shift switch [TF-66](#)
 4WD solenoid valve [TF-89](#), [TF-153](#), [TF-166](#)
 4WD system description [TF-15](#)
 4WD system diagram [TF-19](#)

A

A/C air flow [ATC-30](#)
 A/C compressor clutch removal and installation .. [ATC-226](#)
 A/C compressor mounting [ATC-225](#)
 A/C compressor precaution [ATC-11](#)
 A/C compressor special service tool [ATC-14](#)
 A/C control operation (auto A/C) [ATC-27](#)
 A/C diagnostic work flow (auto A/C) [ATC-171](#)
 A/C evaporator [ATC-234](#)
 A/C HFC134a (R134a) system identification [ATC-6](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#)
 A/C HFC134a (R134a) system service procedure [ATC-221](#)
 A/C HFC134a (R134a) system service tools ... [ATC-14](#)
 A/C HFC134a system service equipment precaution ... [ATC-11](#)
 A/C lubricant (R134a) [ATC-22](#)
 A/C lubrication oil [ATC-22](#)
 A/C operational check [ATC-69](#), [ATC-71](#)
 A/C self-diagnoses (auto A/C) [ATC-67](#), [ATC-171](#)
 A/C service data specification [ATC-241](#)
 A/C trouble diagnoses (auto A/C) [ATC-34](#)
 A/C, A - Wiring diagram [ATC-43](#)
 A/T fluid checking [AT-12](#), [AT-51](#), [MA-22](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#), [MA-24](#)
 A/T fluid temperature sensor [AT-123](#)
 A/T IND - Wiring diagram [DI-35](#)
 A/T indicator [DI-35](#)
 A/T shift lock system [AT-216](#)
 A/T trouble diagnoses [AT-42](#)
 ABS - Wiring diagram [BRC-17](#)
 ABS (anti-lock brake system) [BRC-7](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor . [EC-604](#), [EC-610](#), [EC-624](#)
 Accelerator pedal released position learning [EC-83](#)
 AF1B1-Wiring diagram [EC-248](#), [EC-256](#), [EC-264](#), [EC-273](#), [EC-634](#)
 AF1B2-Wiring diagram [EC-250](#), [EC-258](#), [EC-266](#), [EC-275](#), [EC-636](#)
 AF1HB1-Wiring diagram [EC-181](#)
 AF1HB2-Wiring diagram [EC-183](#)
 Aiming adjustment [LT-23](#), [LT-58](#)
 Air bag [SRS-3](#)
 Air cleaner and air duct [EM-15](#)
 Air cleaner filter replacement [EM-16](#), [MA-16](#)
 Air conditioner cut control [EC-28](#)

Air flow meter - See Mass air flow sensor [EC-203](#), [EC-212](#)
 Air fuel ratio sensor 1 .. [EC-245](#), [EC-254](#), [EC-262](#), [EC-270](#), [EC-632](#)
 Air fuel ratio sensor 1 heater [EC-180](#)
 Air mix. door motor [ATC-86](#)
 Ambient sensor [ATC-177](#), [ATC-194](#)
 Angular tightening application [EM-4](#)
 APPS1 - Wiring diagram [EC-606](#)
 APPS2 - Wiring diagram [EC-612](#)
 APPS3 - Wiring diagram [EC-626](#)
 ASC/BS - Wiring diagram [EC-572](#)
 ASC/SW - Wiring diagram [EC-565](#)
 ASCBOF - Wiring diagram [EC-644](#)
 ASCD [EC-29](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCD brake switch [EC-570](#), [EC-643](#)
 ASCD indicator lamp [EC-650](#)
 ASCD steering switch [EC-563](#)
 ASCIND - Wiring diagram [EC-651](#)
 ATP switch [TF-106](#), [TF-109](#), [TF-114](#)
 Audio [AV-6](#)
 AUDIO - Wiring diagram [AV-15](#)
 AUT/DP - Wiring diagram [SE-15](#)
 Auto air conditioner - Wiring diagram [ATC-43](#)
 Auto anti-dazzling inside mirror [GW-66](#), [GW-67](#)
 Autolamp [LT-40](#)
 Automatic amplifier [ATC-72](#)
 Automatic drive positioner [SE-11](#)
 Automatic transmission number [GI-50](#)

B

Back door [BL-86](#)
 Back door trim [EI-28](#)
 Back sonar [DI-50](#)
 BACK/L - Wiring diagram [LT-84](#)
 Back-up lamp [LT-84](#)
 Ball joint (front) [FSU-15](#)
 Basic inspection [EC-71](#)
 Battery [SC-4](#)
 Battery current sensor . [EC-535](#), [EC-542](#), [EC-549](#), [EC-556](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-20](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-80](#)
 Blower motor [ATC-124](#), [ATC-198](#)
 Body alignment [BL-162](#)
 Body component parts [BL-149](#)
 Body construction [BL-161](#)
 Body exterior paint color [BL-148](#)
 Body mounting [BL-147](#)
 Body repair [BL-148](#)
 Body sealing [BL-158](#)
 Bose speaker amp. [AV-9](#)
 Brake booster [BR-17](#)
 Brake fluid level [MA-28](#)
 Brake hydraulic line [BR-12](#)

ALPHABETICAL INDEX

Brake inspection [MA-28](#)
 Brake lines and cables inspection [MA-28](#)
 Brake master cylinder [BR-15](#)
 Brake switch [EC-570](#), [EC-580](#), [EC-643](#)
 BRK/SW - Wiring diagram [EC-581](#)
 Bulb specifications [LT-145](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-15](#)

C

Cabin air filter [ATC-200](#), [MA-21](#)
 Camshaft [EM-46](#)
 Camshaft inspection [EM-50](#)
 Camshaft position sensor (PHASE) [EC-375](#)
 CAN - Wiring diagram [EC-162](#), [AT-94](#)
 CAN communication . [EC-31](#), [EC-161](#), [EC-164](#), [AT-93](#)
 Canister-See EVAP canister [EC-35](#)
 Center case (Transfer) [TF-153](#), [TF-166](#)
 CHARGE - Wiring diagram [SC-19](#)
 Charging system [SC-17](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-8](#)
 Chassis and body maintenanceSchedule 2 [MA-10](#)
 CHIME - Wiring diagram [DI-40](#)
 Circuit breaker [PG-17](#)
 Closed loop control [EC-25](#), [EC-508](#)
 Closed loop control (Bank 1) [EC-508](#)
 Closed loop control (Bank 2) [EC-508](#)
 Clutch drum (Transfer) [TF-153](#), [TF-166](#)
 Clutch pressure switch (Transfer) [TF-153](#), [TF-166](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-53](#)
 Combination lamp, front, removal and installation . [LT-25](#)
 Combination lamp, rear, removal and installation [LT-98](#)
 Combination meter [DI-5](#)
 Combination switch [LT-76](#)
 COMBSW - Wiring diagram [LT-76](#)
 COMM - Wiring diagram [AV-101](#)
 COMPAS - Wiring diagram [DI-24](#)
 Compass [DI-23](#)
 Component Location (auto A/C) [ATC-38](#)
 Compressor clutch removal and installation . [ATC-226](#)
 Compressor mounting [ATC-225](#)
 Compressor precaution [ATC-11](#)
 Compressor special service tool [ATC-14](#)
 Condenser [ATC-232](#)
 Connecting rod [EM-98](#)
 Connecting rod bearing clearance [EM-98](#)
 Connecting rod bushing clearance [EM-98](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-28](#)
 CONSULT-II for engine [EC-123](#)
 Control units (terminal arrangement) [PG-71](#)
 Control valve (A/T) [AT-36](#)
 Control valve (Transfer) [TF-153](#), [TF-166](#)
 Converter housing installation [AT-240](#), [AT-244](#)
 COOL/F - Wiring diagram [EC-514](#)

Coolant mixture ratio [MA-12](#)
 Coolant replacement [CO-10](#), [MA-13](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-17](#)
 Cooling fan control [EC-511](#)
 Cooling fan motor [EC-520](#)
 Cooling unit (A/C evaporator) [ATC-202](#), [ATC-234](#)
 Corrosion protection [BL-155](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft [EM-81](#)
 Crankshaft position sensor (POS) [EC-368](#)
 Crash zone sensor [SRS-48](#)
 CUR/SE - Wiring diagram ... [EC-537](#), [EC-544](#), [EC-551](#), [EC-558](#)
 Cylinder block [EM-80](#)
 Cylinder block boring [EM-101](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Data link connector for Consult [EC-125](#), [EC-137](#)
 Daytime light system [LT-28](#)
 Daytime running light - See Daytime light system .. [LT-28](#)
 DEF - Wiring diagram [GW-72](#)
 Diagnosis sensor unit [SRS-51](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-52](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-96](#)
 Differential carrier assembly [RFD-15](#)
 Differential gear oil replacement [MA-26](#)
 Dimensions [GI-51](#)
 Direct clutch solenoid valve [AT-143](#), [AT-145](#)
 Display and amp.assembly [ATC-72](#)
 Display Control Unit-Description [AV-90](#)
 Display Unit-Description [AV-90](#)
 Dome light - See Interior lamp [LT-107](#)
 Door glass [GW-58](#), [GW-61](#)
 Door lock [BL-119](#)
 Door mirror lamp [LT-107](#), [LT-127](#)
 Door trim [EI-28](#)
 Door, front [BL-115](#), [GW-58](#)
 Door, rear [BL-115](#), [GW-61](#)
 Drive belt [EM-13](#)
 Drive chain (Transfer) [TF-148](#), [TF-175](#)
 Drive pinion diff. inspection [RFD-18](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-39](#)
 DTC work support [EC-133](#)
 DTRL - Wiring diagram [LT-31](#)
 Duct and grilles [ATC-216](#)
 DVD Entertainment System [AV-79](#)
 DVD Player [AV-80](#), [AV-87](#)

E

ECM input/output signal [EC-114](#), [EC-138](#)

ALPHABETICAL INDEX

ECM power supply [EC-155](#), [EC-481](#)
 ECM relay [EC-155](#)
 ECM/PW - Wiring diagram [EC-482](#)
 ECTS - Wiring diagram [EC-226](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-591](#), [EC-602](#)
 Electrical load signal circuit [EC-653](#)
 Electrical units location [PG-65](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-112](#)
 Engine control component parts location [EC-103](#)
 Engine control module (ECM) [EC-485](#)
 Engine control system diagram [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-224](#),
[EC-237](#)
 Engine fail-safe system [EC-98](#)
 Engine oil [LU-8](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [LU-9](#), [MA-17](#)
 Engine removal [EM-76](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-50](#)
 ETC1 - Wiring diagram [EC-592](#)
 ETC2 - Wiring diagram [EC-587](#)
 ETC3 - Wiring diagram [EC-598](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-401](#), [EC-409](#)
 EVAP canister vent control valve [EC-416](#), [EC-423](#)
 EVAP control system (small leak) diagnosis .. [EC-393](#),
[EC-447](#), [EC-455](#)
 EVAP control system pressure sensor [EC-430](#), [EC-433](#), [EC-439](#)
 EVAP control system purge flow monitoring diagnosis
[EC-388](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-234](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-236](#)

F

F/FOG - Wiring diagram [LT-53](#)
 F/PUMP - Wiring diagram [EC-662](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation .. [FFD-12](#), [RFD-13](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-123](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-237](#)
 Fog lamp, front [LT-51](#)
 Foot lamp [LT-107](#)
 FPCM - Wiring diagram [EC-523](#)
 Freeze frame data [EC-53](#), [EC-126](#)

Front brake solenoid valve [AT-139](#), [AT-141](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-148](#), [TF-175](#)
 Front combination lamp removal and installation [LT-25](#)
 Front door [BL-115](#), [BL-119](#), [GW-58](#)
 Front Door Trim [EI-28](#)
 Front drive shaft (Transfer) [TF-148](#), [TF-175](#)
 Front fog lamp [LT-51](#)
 Front passenger air bag [SRS-44](#)
 Front seat [SE-82](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-124](#)
 FTTS - Wiring diagram [EC-340](#), [EC-345](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-317](#), [EC-328](#)
 Fuel injection system (Bank 2) [EC-317](#), [EC-328](#)
 Fuel injector [EC-655](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-464](#), [EC-466](#), [EC-468](#)
 Fuel line inspection [FL-4](#)
 Fuel pressure check [EC-87](#)
 Fuel pressure release [EC-87](#)
 Fuel pump [EC-661](#)
 Fuel pump and gauge [FL-5](#)
 Fuel pump control module [EC-521](#)
 Fuel pump dropping resistor [EC-521](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-338](#), [EC-344](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUELB1 - Wiring diagram [EC-319](#), [EC-330](#)
 FUELB2 - Wiring diagram [EC-321](#), [EC-332](#)
 Fuse [PG-17](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-136](#)
 Glass [GW-11](#), [GW-58](#), [GW-61](#)
 Glove box lamp [LT-128](#)
 GPS antenna [AV-89](#)
 Grease [MA-11](#)
 Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 Handling precautions for plastics [BL-178](#)
 Harness connector [PG-68](#)

ALPHABETICAL INDEX

Harness layout [PG-41](#)
 Hazard warning lamp [LT-60](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-25](#)
 Heated oxygen sensor 2 (bank 1) [EC-282](#), [EC-293](#),
[EC-306](#)
 Heated oxygen sensor 2 (bank 2) [EC-282](#), [EC-293](#),
[EC-306](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-187](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-187](#)
 Heated seat [SE-79](#)
 Heater and cooling unit (Heater core) . [ATC-202](#), [ATC-206](#)
 Heater unit (heater core) [ATC-202](#), [ATC-206](#)
 Height (Dimensions) [GI-51](#)
 HFC134a (R134a) system identification [ATC-6](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-221](#)
 HFC134a (R134a) system service tools [ATC-14](#)
 HFC134a system service equipment precaution [ATC-11](#)
 High and low reverse clutch solenoid valve [AT-147](#),
[AT-149](#)
 Homelink universal transceiver [BL-144](#)
 Horn [WW-48](#)
 HORN - Wiring diagram [WW-48](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-80](#)

I

I/MIRR - Wiring diagram [GW-66](#)
 IATS - Wiring diagram [EC-221](#)
 Identification plate [GI-49](#)
 Idle air volume learning [EC-85](#)
 Idle speed [EC-71](#), [EC-81](#)
 Idle speed control (ISC) [EC-472](#), [EC-474](#)
 Ignition coil [EM-28](#), [EC-674](#)
 Ignition control system [EC-674](#)
 Ignition key hole illumination [LT-107](#)
 Ignition timing [EC-71](#), [EC-81](#)
 IGNSYS - Wiring diagram [EC-675](#)
 ILL - Wiring diagram [LT-135](#)
 Illumination [LT-128](#)
 In vehicle sensor [ATC-181](#), [ATC-195](#)
 In-cabin Microfilter [ATC-200](#), [MA-21](#)
 INJECT - Wiring diagram [EC-656](#)
 Injector [EC-655](#)
 Input clutch solenoid valve [AT-135](#), [AT-137](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-113](#)
 Intake air temperature sensor [EC-220](#), [EC-240](#)
 Intake door control linkage adjustment [ATC-112](#), [ATC-116](#)
 Intake door motor [ATC-110](#), [ATC-210](#)
 Intake manifold [EM-17](#)
 Intake sensor [ATC-189](#), [ATC-197](#)
 Intake valve timing control (Bank 1) [EC-166](#)
 Intake valve timing control (Bank 2) [EC-166](#)

Intake valve timing control position sensor (Bank 1)
[EC-498](#)
 Intake valve timing control position sensor (Bank 2)
[EC-498](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-195](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-195](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-144](#)
 Interior [EI-31](#)
 Interior lamp [LT-107](#)
 Interior lamp on-off control [LT-107](#)
 Internal gear (Transfer) [TF-148](#), [TF-175](#)
 IPDM (Intelligent power distribution module engine room) [PG-18](#)
 IVCB1 - Wiring diagram [EC-196](#)
 IVCB2 - Wiring diagram [EC-198](#)
 IVCSB1 - Wiring diagram [EC-500](#)
 IVCSB2 - Wiring diagram [EC-502](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVTB1 - Wiring diagram [EC-169](#)
 IVTB2 - Wiring diagram [EC-171](#)

J

Jacking points [GI-42](#)
 Junction box (J/B) [PG-76](#)

K

Key illumination [LT-107](#)
 KEYLES - Wiring diagram [BL-43](#)
 Knock sensor (KS) [EC-363](#)
 KS - Wiring diagram [EC-364](#)

L

Length (Dimensions) [GI-51](#)
 License lamp [LT-86](#)
 Lifting points [GI-43](#)
 Line pressure solenoid valve [AT-118](#)
 Line pressure switch (Transfer) [TF-153](#), [TF-166](#)
 Line pressure test (A/T) [AT-52](#)
 Location of electrical units [PG-65](#)
 Low coast brake solenoid valve [AT-151](#), [AT-153](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses
[WT-11](#)
 Low tire pressure warning system - Wiring diagram
[WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-6](#)
 Lubrication oil A/C [ATC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-206 , EC-214
Magnet clutch	ATC-150 , ATC-226
MAIN - Wiring diagram	EC-155 , AT-163
Main oil pump (Transfer)	TF-153 , TF-166
Mainshaft (Transfer)	TF-153 , TF-166
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-14
Major overhaul (Transfer)	TF-145
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-107
Mass air flow sensor (MAFS)	EC-203 , EC-212
Meter	DI-5
METER - Wiring diagram	DI-9
MIL data link connectors circuit	EC-692
MIL/DL - Wiring diagram	EC-692
MIRROR - Wiring diagram	GW-88
Misfire	EC-356
Mode door control linkage adjustment	ATC-79
Mode door motor	ATC-76 , ATC-211
Model variation	GI-48
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-37

N

NATS - Wiring diagram	BL-128
NAVI - Wiring diagram	AV-93
NAVI Control Unit	AV-90
Navigation system	AV-88
Neutral-4LO switch	TF-62
NONDTC - Wiring diagram	AT-172
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (Final drive)	RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-5
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-10
NVH troubleshooting (WT)NVH troubleshooting (WT) . WT-4	
NVIS (Nissan vehicle immobilizer system)	BL-125
NVIS (Nissan vehicle immobilizer system) precautions GI-3	

O

O2H2B1 - Wiring diagram	EC-189
O2H2B2 - Wiring diagram	EC-191
O2S2B1 - Wiring diagram ...	EC-285 , EC-296 , EC-309
O2S2B2 - Wiring diagram ...	EC-287 , EC-298 , EC-311
Oil cooler (engine)	LU-12
Oil filter	LU-11
Oil filter (Transfer)	TF-142

Oil pan (engine)	EM-24
Oil pressure (engine)	LU-8
Oil pressure relief valve (engine)	LU-6
Oil pump (engine)	LU-14
Oil seal replacement (engine)	EM-61
Oil seal replacement (front of final drive)	FFD-8 , RFD-9
Oil seal replacement (side of final drive)	RFD-11
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-511

P

P/SCKT - Wiring diagram	WW-46
Pantograph jack	GI-42
Park/Neutral position switch	EC-493
Park/neutral position switch (A/T)	AT-101
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Personal lamp	LT-107
PGC/V - Wiring diagram	EC-403 , EC-411
PHASE - Wiring diagram	EC-377
Pinion bearing preload diff.	RFD-26
Piston pin inspection	EM-96
Piston ring inspection	EM-97
Piston to bore clearance	EM-101
Planetary carrier (Transfer)	TF-148 , TF-175
PNP/SW - Wiring diagram	EC-495 , AT-102
POS - Wiring diagram	EC-370
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-75
Power steering fluid level	MA-29
Power steering gear	PS-15
Power steering oil pump	PS-22
Power steering pressure (PSP) sensor	EC-476
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-16
PRE/SE - Wiring diagram	EC-435 , EC-441
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-181
Pressure switch 1	AT-141 , AT-155
Pressure switch 2	AT-153
Pressure switch 3	AT-137 , AT-157
Pressure switch 5	AT-145 , AT-159
Pressure switch 6	AT-149 , AT-161
Pressure test (A/T)	AT-52
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-477

R

R/VIEW - Wiring diagram	DI-65
Radiator	CO-14
Radio - See Audio	AV-6

ALPHABETICAL INDEX

Rear axle	RAX-5	SROOF - Wiring diagram	RF-13
Rear bumper	EI-15	SRS - See Supplemental Restraint System	SRS-5
Rear case (Transfer)	TF-147 , TF-180	SRS Trouble diagnoses	SRS-9
Rear combination lamp removal and installation	LT-98	Stabilizer bar (front)	FSU-12
Rear cover packing replacement diff.	RFD-28	Stabilizer bar (rear)	RSU-40
Rear door	BL-115 , GW-61	Stall test (A/T)	AT-51
Rear seat	SE-96	Standardized relay	PG-72
Rear seat belt	SB-7	START - Wiring diagram	SC-11
Rear suspension	RSU-24	Starting system	SC-10
Rear view monitor	DI-61	Steering gear, linkage and transfer gear inspection	MA-29
Rear washer	WW-29	Steering linkage	PS-15
Rear window defogger	GW-68	Steering wheel and column	PS-8
Rear wiper	WW-29	Step lamp	LT-107
Refrigerant connection precaution	ATC-6	Stop lamp	LT-81
Refrigerant discharging evacuating charging	ATC-221	Stop lamp switch	EC-570 , EC-580 , EC-643
Refrigerant general precaution	ATC-6	STOP/L - Wiring diagram	LT-82
Refrigerant lines	ATC-221 , ATC-229 , ATC-230	Strut (front)	FSU-10
Refrigerant pressure sensor	EC-687 , ATC-232	STSIG - Wiring diagram	AT-97
Relay box	PG-78	Sub-oil pump (Transfer)	TF-153 , TF-166
Remote keyless entry system	BL-37	Sun gear (Transfer)	TF-148 , TF-175
Removal and installation (A/T)	AT-238 , AT-241	Sun roof, electric	RF-10
Removal and installation (Transfer)	TF-144	Sunload sensor	ATC-186
Revolution sensor (A/T)	AT-107	Sunroof	RF-22
Ring gear diff. inspection	RFD-18	Supplemental Restraint System	SRS-5
Road wheel size	GI-51	Symbols and abbreviations	GI-10 , GI-22
Rocker cover	EM-35	Symptom matrix chart	EC-99
Room lamp	LT-107	System readiness test (SRT) code	EC-54
Room lamp - See Interior lamp	LT-107		
ROOM/L - Wiring diagram	LT-113		
RP/SEN - Wiring diagram	EC-688		

S

SAE J1979 - Service \$01 - 09	EC-48	Tail lamp	LT-86
SEAT - Wiring diagram	SE-75 , SE-76	TAIL/L - Wiring diagram	LT-89
Seat belt inspection	SB-12 , MA-32	TCM inspection table	AT-83
Seat belt pre-tensioner	SRS-50	TCS - Wiring diagram	BRC-17
Seat belt, front	SB-3	TCS (traction control system)	BRC-7
Seat belt, rear	SB-7	TCS component parts and connector location	BRC-14
Seat, front	SE-82	TCS wheel sensors	BRC-14
Seat, rear	SE-96	Theft warning system - See Vehicle security (Theft warn-	
Self-diagnosis (Transfer)	TF-50	ing) system	BL-64
SEN/PW - Wiring diagram	EC-489	Thermometer	DI-23
SHIFT - Wiring diagram	AT-217	Three way catalyst	EM-21
Shift control (Transfer)	TF-148 , TF-175	Three way catalyst function (Bank 1)	EC-382
Shift lock system	AT-216	Three way catalyst function (Bank 2)	EC-382
Shock absorber (front)	FSU-11	Three way catalyst precautions	GI-5
Shock absorber (rear)	RSU-33	Throttle control motor	EC-597
Side air bag (satellite) sensor	SRS-49	Throttle control motor relay	EC-585
Side curtain air bag	SRS-47	Throttle position sensor (TPS) ...	EC-230 , EC-349 , EC-529 , EC-531 , EC-617
Side trim	EI-31	Throttle valve closed position learning	EC-84
SMJ (super multiple junction)	PG-74	Tie-rod	PS-15
SONAR - Wiring diagram	DI-53	Timing chain	EM-37
Spare tire size	GI-51	Tire rotation	MA-28
Spark plug	EM-29	Tire size	GI-51
Spark plug replacement	MA-18	Torque converter installation	AT-239 , AT-240 , AT-243 , AT-244
Specification value	EC-144	Torque convertor clutch solenoid valve	AT-114 , AT-
Speedometer	DI-5		
Spiral cable	SRS-41		

ALPHABETICAL INDEX

116

Tow truck towing	GI-44
Towing point	GI-45
TPS1 - Wiring diagram	EC-351
TPS2 - Wiring diagram	EC-232
TPS3 - Wiring diagram	EC-619
Traction control system - Wiring diagram	BRC-17
Transfer control device	TF-76 , TF-80 , TF-137
Transfer control unit inspection table	TF-35
Transfer dropping resistor	TF-89
Transfer fluid temperature sensor	TF-103 , TF-153 , TF-166
Transfer motor	TF-101 , TF-141
Transfer motor relay	TF-101
Transfer oil replacement	MA-25
Transfer serial number	GI-50
Transmission serial number	GI-50
Tread-FR&RR (Dimensions)	GI-51
Trim	EI-31
TRNSCV - Wiring diagram	BL-144
Trouble diagnoses	GI-11
Turbine revolution sensor	AT-105
TURN - Wiring diagram	LT-64
Turn signal lamp	LT-60
Two trip detection logic	EC-48
Two-pole lift	GI-43

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-111
Valve clearance	EM-56
Valve guide	EM-71
Vanity mirror lamp	LT-107
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-17
Vehicle identification number	GI-49
Vehicle recovery (freeing a stuck vehicle)	GI-45
Vehicle security (theft warning) system	BL-64
Vehicle speed sensor (VSS)	EC-470
VEHSEC - Wiring diagram	BL-68
VENT/V - Wiring diagram	EC-418 , EC-425
VIN registration	EC-83
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-109

W

W/ANT - Wiring diagram	AV-76
Wait detection switch	TF-69
WARN - Wiring diagram	DI-28
Warning chime	DI-37
Warning lamps	DI-27
Washer, front	WW-4
Washer, rear	WW-29
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-26

Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-51
Wheelbase (Dimensions)	GI-51
Width (Dimensions)	GI-51
WINDOW - Wiring diagram	GW-23
Window antenna	AV-75
Window, door	GW-58 , GW-61
Windshield	GW-11
WIP/R - Wiring diagram	WW-33
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-29
Wiring Diagram (Cell code) list	PG-62
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-11