

ALPHABETICAL INDEX

SECTION	IDX
---------	-----

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator.....	BR-38	A/C system description (auto A/C)	HA-124
ABS (anti-lock brake system).....	BR-35	A/C trouble diagnoses (auto A/C)	HA-62
ABS circuit diagram.....	BR-49	A/C trouble diagnoses (manual A/C)	HA-15
ABS component parts and connector locations.....	BR-42	A/C wiring diagram (auto A/C)	HA-97
ABS control unit.....	BR-38	A/C wiring diagram (manual A/C)	HA-37
ABS hydraulic circuit	BR-6	Accel drum unit.....	EM-28
ABS self-diagnosis	BR-44	Acceleration cut control	EF & EC-25
ABS symptom chart.....	BR-46	Accelerator control system.....	FE-2
ABS system components.....	BR-36	Accelerator wire adjustment.....	FE-2
ABS trouble diagnoses.....	BR-43	Activated carbon canister	EF & EC-17
ABS wheel sensors	BR-37	Activated carbon canister inspection	EF & EC-168
ABS wiring diagram.....	BR-39	Air bag.....	BF-58
A/C air flow	HA-13	Air bag caution labels.....	BF-60
A/C circuit diagram (auto A/C)	HA-96	Air bag precautions	GI-2
A/C circuit diagram (manual A/C)	HA-35	Air bag removal and installation.....	BF-65
A/C component layout.....	HA-12	Air bag scrapping.....	BF-69
A/C compressor clutch removal and installation.....	HA-142	Air bag system trouble diagnoses	BF-73
A/C compressor mounting.....	HA-141	Air bleeding for brake system	BR-5
A/C compressor precaution.....	HA-5	Air cleaner filter replacement	MA-11
A/C compressor special service tool	HA-6	Air conditioning - See A/C.....	—
A/C control linkage adjustment (auto A/C)	HA-122	Air mix door control linkage adjustment	HA-122
A/C control linkage adjustment (manual A/C)	HA-59	Air mix. door motor	HA-127
A/C control operation (auto A/C).....	HA-60	Air spoiler (Rear)	BF-53
A/C control operation (manual A/C).....	HA-14	Alternator.....	EL-26
A/C diagnostic work flow (auto A/C)	HA-62	Ambient sensor.....	HA-126
A/C diagnostic work flow (manual A/C)	HA-15	Angular tightening application.....	EM-2
A/C harness layout (auto A/C)	HA-94	Anti-freeze coolant.....	MA-7
A/C harness layout (manual A/C)	HA-33	ASCD (automatic speed control device)	EL-134
A/C R-134a system precaution.....	HA-2	AT control unit	AT-85
A/C R-134a system service procedure.....	HA-136	AT fluid temperature sensor.....	AT-90
A/C R-134a system service tools	HA-7	A/T indicator lamp.....	EL-63
A/C R-134a system service equipment precaution.....	HA-9	AT removal and installation.....	AT-113
A/C lubrication oil.....	HA-138	AT self diagnoses	AT-46
A/C operational check (auto A/C)	HA-63	AT trouble diagnoses	AT-15
A/C operational check (manual A/C)	HA-16	Audio	EL-121
A/C performance chart (auto A/C)	HA-89	Automatic amplifier	HA-127
A/C performance chart (manual A/C)	HA-28	Automatic transaxle number	GI-21
A/C performance test diagnoses (auto A/C)	HA-87	Automatic transmission fluid	MA-7
A/C performance test diagnoses (manual A/C)	HA-26	Automatic transmission fluid replacement	MA-15
A/C pressure switch (auto A/C)	HA-121	Auxiliary air control (AAC) valve	EF & EC-15
A/C pressure switch (manual A/C)	HA-58		
A/C push control.....	HA-14		
A/C relay (auto A/C)	HA-121		
A/C relay (manual A/C)	HA-58		
A/C self diagnoses (auto A/C)	HA-71		
A/C service data specification.....	HA-146		
A/C switch.....	HA-57		
A/C symptom chart (auto A/C).....	HA-66		
A/C symptom chart (manual A/C).....	HA-18		

B

Back up lamp.....	EL-48
Back-up lamp switch (MT)	MT-6
Ball joint front axle	FA-27
Battery.....	EL-12
Baulk ring (MT)	MT-41
Belt inspection (drive belt).....	MA-8
Blower motor (auto A/C)	HA-121
Blower motor (manual A/C).....	HA-57
Blower relay	HA-121
Blower resistor	HA-57

ALPHABETICAL INDEX

Body alignment.....	BF-54
Boring/horning cylinder block.....	EM-45
Brake booster.....	BR-14
Brake control valve (proportioning valve).....	BR-7
Brake fluid.....	MA-7
Brake fluid change.....	BR-4
Brake fluid level.....	MA-16
Brake fluid level and line check.....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-16
Brake lines and cables inspection.....	MA-16
Brake lining wear temporary checking.....	MA-17
Brake master cylinder.....	BR-11
Brake pedal.....	BR-9

C

Camshaft inspection.....	EM-31
Camshaft position sensor (CMPS).....	EF & EC-12
Camshaft position sensor inspection.....	EF & EC-158
Canister control solenoid valve.....	EF & EC-17
Charging system.....	EL-23
Chassis and body maintenance.....	MA-14
Cigarette lighter.....	EL-116
Clearance lamp.....	EL-50
Clock.....	EL-116
Clutch cover.....	CL-9
Clutch disc.....	CL-9
Clutch fluid.....	MA-7
Clutch fluid level.....	MA-14
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-3
Clutch pedal free play.....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing.....	CL-8
Clutch withdrawal lever.....	CL-8
Coil spring (front).....	FA-23
Coil spring (rear).....	RA-10
Combination lamp (rear) removal and installation.....	BF-40
Combination meter.....	EL-69
Combination meter (needle type).....	EL-69
Combination switch.....	EL-30
Compression pressure.....	EM-11
Compressor clutch removal and installation.....	HA-142
Compressor mounting.....	HA-141
Compressor precaution.....	HA-5
Compressor special service tool.....	HA-6
Connecting rod.....	EM-45
Connecting rod bearing clearance.....	EM-48
Connecting rod bushing clearance.....	EM-49
Consult for ECCS.....	EF & EC-43

CONSULT general information.....	GI-17
Control lever (MT).....	MT-9
Control valve (AT).....	AT-142
Converter housing installation.....	AT-114
Coolant.....	MA-7
Coolant replacement.....	MA-9
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-12
Cooling fan control.....	EF & EC-25
Cooling fan motor inspection.....	EF & EC-139
Cooling fan relay inspection.....	EF & EC-164
Cornering lamp.....	EL-60
Coupling sleeve (MT).....	MT-11
Crankcase emission control system.....	EF & EC-170
Crankshaft assembly.....	EM-51
Crankshaft bearing clearance.....	EM-47
Crankshaft inspection.....	EM-46
Cylinder block.....	EM-42
Cylinder block boring.....	EM-45
Cylinder head.....	EM-30
Cylinder head bolt tightening.....	EM-24

D

Data link connector for Consult.....	EF & EC-16
Daytime light system.....	EL-37
Device (FICD) solenoid valve.....	EF & EC-15
Differential gear (FF MT).....	MT-26
Differential gear (RE4F04A).....	AT-190
Differential gear (RE4F04A).....	AT-194
Dimensions.....	GI-22
Door adjustment (front).....	BF-9
Door adjustment (rear).....	BF-10
Door mirror.....	BF-51
Drive plate runout.....	EM-50
Drive shaft (front).....	FA-15
Dropping resistor (AT).....	AT-91

E

ECCS basic inspection.....	EF & EC-55
ECCS circuit diagram.....	EF & EC-11
ECCS component parts location.....	EF & EC-5
ECCS fail-safe system.....	EF & EC-26
ECCS on-board diagnostic system.....	EF & EC-37
ECCS system diagram and chart.....	EF & EC-7
ECCS trouble diagnoses.....	EF & EC-33
ECCS Wiring Diagram.....	FOLD OUT
ECM input/output signal inspection.....	EF & EC-153
EGR canister control solenoid valve inspection.....	EF & EC-160
EGR control (EGRC) - BPT valve.....	EF & EC-17

ALPHABETICAL INDEX

EGR control (EGRC) - solenoid valve..... EF & EC-17
EGR temperature sensor..... EF & EC-17
EGR temperature sensor inspection EF & EC-161
EGR valve inspection..... EF & EC-161
EGRC-BPT valve inspection..... EF & EC-161
Electrical units location..... EL-181
Energy conserving oils MA-7
Engine control module (ECM)..... EF & EC-12
Engine coolant temperature sensor (ECTS) EF &
EC-13
Engine coolant temperature sensor inspection..... EF &
EC-159
Engine oil MA-7
Engine oil filter replacement..... MA-12
Engine oil precautions GI-4
Engine oil replacement..... MA-12
Engine outer component parts..... EM-8
Engine removal..... EM-39
Engine serial number GI-21
Evaporative emission system..... EF & EC-168
Exhaust gas recirculation (EGR) system..... EF & EC-24
Exhaust gas recirculation (EGR) valve..... EF & EC-16
Exhaust system FE-5
Exhaust system inspection..... MA-18
Exterior BF-35
Exterior lamp..... EL-48

F

Fan control amp..... HA-133
Fan switch..... HA-57
Final drive (FF MT)..... MT-26
Final Drive (RE4F04A) AT-190
Final Drive (RE4F04V) AT-194
Fluid temperature sensor (AT)..... AT-90
Fluids..... MA-7
Flywheel runout EM-50
Fog lamp, front EL-52
Fork rod (MT)..... MT-11
Forward clutch AT-167
Fresh vent door control linkage adjustment
(auto A/C) HA-123
Fresh vent door control linkage adjustment
(manual A/C) HA-59
Front axle FA-4
Front bumper BF-5
Front disc brake..... BR-17
Front suspension FA-23
Fuel check valve inspection EF & EC-169
Fuel damper..... EF & EC-14
Fuel filler lid..... BF-7
Fuel filter EF & EC-16
Fuel filter replacement..... MA-11

Fuel gauge..... EL-76
Fuel injector EF & EC-14
Fuel line inspection..... MA-10
Fuel precautions GI-5
Fuel pressure check..... EF & EC-166
Fuel pressure regulator EF & EC-14
Fuel pressure release..... EF & EC-166
Fuel pump EF & EC-14
Fuel pump control..... EF & EC-24
Fuel pump inspection EF & EC-160
Fuel pump relay inspection EF & EC-164
Fuel system FE-3
Fuel tank vacuum relief valve inspection .. EF & EC-169
Fuse EL-11
Fusible link..... EL-11

G

Gear oil MA-7
Gears (MT) MT-21
Generator..... EL-26
Grease MA-7

H

Harness connector EL-3
Harness layout..... EL-183
Hazard warning lamp EL-54
Headlamp..... EL-32
Height (Dimensions) GI-22
R-134a system precaution HA-2
R-134a system service procedure HA-136
R-134a system service tools HA-7
R-134a system service equipment precaution HA-9
HFC134a - See R-134a —
High clutch AT-162
Hood adjustment BF-5
Horn EL-116
How to follow flow chart in trouble diagnosis GI-14
How to read wiring diagrams GI-8
How to use this manual GI-6
Hydraulic lash adjuster inspection EM-36

I

IACV - air regulator inspection..... EF & EC-165
IACV - FICD solenoid valve inspection EF & EC-165
IACV-AAC valve inspection..... EF & EC-163
Identification plate GI-20
Idle air control (IAC) system EF & EC-23

ALPHABETICAL INDEX

Idle air control (IACV) - fast idle control EF & EC-15
 Idle air control valve (IACV) - air regulator.. EF & EC-15
 Idle air control valve (IACV) valve EF & EC-15
 Idle mixture ratio inspection EF & EC-28
 Idle speed inspection EF & EC-28
 Ignition coil inspection EF & EC-160
 Ignition timing inspection EF & EC-28
 Illumination EL-63
 In-vehicle sensor HA-125
 Inhibitor switch AT-89
 Inhibitor switch inspection EF & EC-147
 Injection removal and installation EF & EC-167
 Injector inspection EF & EC-163
 Instrument panel BF-28
 Intake door control linkage adjustment (auto
 A/C) HA-123
 Intake door control linkage adjustment
 (manual A/C) HA-59
 Intake manifold EM-8
 Interior BF-31
 Interior lamp EL-63

J

Jacking points GI-24
 Joint connector (J/C) EL-203

K

Knock sensor inspection EF & EC-163
 Knock sensor (KS) EF & EC-16
 Knuckle spindle FA-10

L

Length (Dimensions) GI-22
 Lifting points GI-24
 Line pressure solenoid valve AT-90
 Line pressure test (AT) AT-94
 Liquid gasket application EM-3
 Low and reverse brake AT-173
 Lubricants MA-7
 Lubrication circuit (engine) LC-4
 Lubrication oil A/C HA-138
 Lubrication-locks, hinges and hood latches MA-19
 Luggage room lamp EL-67

M

Magnet clutch HA-142
 Main drive gear (MT) MT-21
 Mainshaft (MT) MT-21
 Maintenance MA-2
 Maintenance (engine) MA-8
 Maintenance general MA-2
 Maintenance periodic MA-4
 Maintenance schedule (1) MA-4
 Maintenance schedule (2) MA-4
 Manual transaxle number GI-21
 Manual transmission oil MA-7
 Manual transmission oil replacement MA-14
 Map lamp EL-67
 Mass air flow sensor inspection EF & EC-158
 Mass air flow sensor (MAFS) EF & EC-12
 Master cylinder (brake) BR-11
 Master cylinder (clutch) CL-6
 Meter and gauges EL-68
 Mode door control linkage adjustment (auto
 A/C) HA-122
 Mode door control linkage adjustment (manual
 A/C) HA-59
 Model variation GI-19
 Molding BF-35
 MT overhaul MT-13
 MT removal and installation MT-7
 Mud guard BF-41
 Multi purpose grease MA-7
 Multiport fuel injection (MFI) system EF & EC-18
 Multiport fuel injection precautions GI-4
 Multiport fuel injection system inspection .. EF & EC-166

N

Neutral position switch inspection EF & EC-147
 Neutral position switch (MT) MT-6

O

Oil change (capacity) MA-7
 Oil change (interval) MA-4
 Oil pan (engine) EM-12
 Oil pressure (engine) LC-5
 Oil pump (AT) AT-138
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-6
 Oil pump relief valve (engine) LC-7
 Oil seal replacement (engine) EM-26

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

Operating cylinder (clutch)	CL-7
Overdrive switch	AT-89
Overrun clutch	AT-167
Overrun clutch solenoid valve	AT-90
Oversize piston	EM-46
Oxygen sensor (O2S)	EF & EC-14

P

Parking brake control	BR-33
PCV (positive crankcase ventilation) inspection	EF & EC-170
Personal lamp	EL-67
Piston assembly	EM-50
Piston pin inspection	EM-44
Piston ring inspection	EM-44
Piston to bore clearance	EM-45
Power antenna	EL-128
Power door lock	BF-11
Power lock trouble diagnoses	BF-14
Power steering fluid	MA-7
Power steering fluid level	MA-18
Power steering fluid level	ST-6
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EF & EC-15
Power steering oil pressure switch inspection	EF & EC-164
Power steering oil pump	ST-24
Power steering system bleeding	ST-6
Power supply routing	EL-6
Power transistor & ignition coil	EF & EC-15
Power transistor inspection	EF & EC-159
Power window	BF-15
Power window trouble diagnoses	BF-17
Precautions (General)	GI-2
Pressure test (AT)	AT-94

R

Rack retainer adjustment	ST-22
Radiator	LC-12
Rear axle	RA-5
Rear axle (disc brake type)	RA-4
Rear axle (drum brake type)	RA-4
Rear bumper	BF-7
Rear disc brake	BR-26
Rear drum brake	BR-21
Rear suspension	RA-10
Rear window defogger	EL-117
Refilling engine coolant	LC-12
Refrigerant connection precaution	HA-4

Refrigerant discharging evacuating charging	HA-136
Refrigerant general precaution	HA-3
Refrigerant lines	HA-140
Refrigeration cycle	HA-11
Release bearing (clutch)	CL-8
Resistor inspection	EF & EC-165
Reverse clutch	AT-114
Reverse gear (MT)	MT-11
Reverse idler shaft (MT)	MT-13
Revolution sensor (AT)	AT-90
Road wheel size	GI-22
Room lamp	EL-67

S

SAE J1930 terminology list	GI-28
Seat belt inspection	MA-19
Seat belt system	BF-44
Seat (front)	BF-42
Seat (rear)	BF-43
Self-diagnostic results	EF & EC-46
Shift control (MT)	MT-30
Shift fork (MT)	MT-11
Shift lock system	AT-99
Shift schedule	AT-37
Shift solenoid valve (AT)	AT-90
Shock absorber (front)	FA-23
Shock absorber (rear)	RA-10
Side guard molding	BF-40
SMJ (super multiple junction)	EL-201
Soft/Hard closed throttle position (CTP) switch	EF & EC-13
Spark plug replacement	MA-13
Speedometer	EL-78
Spot lamp	EL-67
Spring (wheelarch) height	FA-5
Stabilizer bar (front)	FA-26
Stabilizer bar (rear)	RA-14
Stall test (AT)	AT-91
Standardized relay	EL-4
Starter	EL-21
Starting system	EL-17
Steering gear and linkage inspection	MA-18
Steering gear oil level	MA-18
Steering knuckle	FA-10
Steering linkage	ST-13
Steering switch	EL-151
Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force	ST-7
Stop lamp	EL-50
Striking rod (MT)	MT-5
Strut (front)	FA-23

ALPHABETICAL INDEX

Strut (rear).....	RA-10
Sunroof.....	BF-46
Sunload sensor.....	HA-126
Supplemental restraint system.....	BF-58
Synchronizer (MT).....	MT-11

T

Tachometer.....	EL-77
Tail lamp.....	EL-50
Temperature control cable and linkage adjustment.....	HA-59
Theft warning system.....	EL-153
Thermal protector (auto A/C).....	HA-121
Thermal protector (manual A/C).....	HA-58
Thermo control amp. (auto A/C).....	HA-121
Thermo control amp. (manual A/C).....	HA-58
Thermostat.....	LC-11
Three way catalyst precautions.....	GI-4
Throttle bodies.....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor inspection and adjustment.....	EF & EC-162
Throttle position sensor (TPS).....	EF & EC-13
Throttle position switch inspection.....	EF & EC-161
Tie rod.....	ST-15
Tie rod ball joints.....	ST-18
Tightening torque of standard bolts.....	GI-27
Time control system.....	EL-92
Timing chain.....	EM-17
Tire rotation.....	MA-18
Tire size.....	GI-22
Torque converter clutch solenoid valve.....	AT-90
Torque converter installation.....	AT-114
Tow truck towing.....	GI-25
Towing point.....	GI-26
Transmission case (MT).....	MT-10
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-22
Trim - door.....	BF-32
Trim - luggage compartment.....	BF-34
Trim - roof.....	BF-33
Trim - side and floor.....	BF-31
Triple pressure switch (auto A/C).....	HA-121
Triple pressure switch (manual A/C).....	HA-58
Trunk lid.....	BF-7
Trunk room lamp.....	EL-67

Turn signal lamp.....	EL-54
-----------------------	-------

V

Vacuum hose (brake system).....	BR-16	MA
Vacuum hose drawing (ECCS).....	EF & EC-10	
Valve clearance.....	EM-37	EM
Valve guide inspection.....	EM-33	
Valve seat inspection.....	EM-34	
Valve spring inspection.....	EM-35	LC
Vapor lines inspection.....	MA-13	
Vehicle identification number.....	GI-20	EF & EC
Vehicle speed sensor inspection.....	EF & EC-104	
Vehicle speed sensor (VSS).....	EF & EC-16	
Viscosity number (SAE).....	MA-7	FE
Viscous coupling (FF AT).....	AT-194	
Viscous coupling (FF MT).....	MT-6	CL

W

Warning buzzer.....	EL-89	
Warning chime.....	EL-89	AT
Warning lamps.....	EL-82	
Washer, front.....	EL-109	FA
Water cock solenoid valve (auto A/C).....	HA-122	
Water cock solenoid valve (manual A/C).....	HA-59	
Water pump.....	LC-9	RA
Water temperature gauge.....	EL-76	
Weatherstrip.....	BF-35	
Wheel alignment (front).....	FA-6	BR
Wheel alignment (rear).....	RA-6	
Wheel balance.....	MA-18	
Wheel bearing (front axle).....	FA-6	ST
Wheel bearing (rear).....	RA-5	
Wheel hub and steering knuckle.....	FA-10	BF
Wheel hub (front).....	FA-10	
Wheel hub (rear).....	RA-8	
Wheel sensors (ABS).....	BR-37	HA
Wheelarch height.....	FA-5	
Wheelbase (Dimensions).....	GI-22	EL
Width (Dimensions).....	GI-22	
Windshield and windows.....	BF-50	
Wiper and washer.....	EL-109	
Wiper, front.....	EL-109	IDX
Withdrawal lever (clutch).....	CL-8	