

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-297
ABS (anti-lock brake system).....BR-35
Absolute pressure sensorEC-112
A/C - Wiring diagram.....HA-20
A/C air flow.....HA-15
A/C component layout.....HA-14
A/C compressor clutch removal and
installationHA-67
A/C compressor description.....HA-6
A/C compressor mounting.....HA-66
A/C compressor precaution.....HA-6
A/C compressor special service tool.....HA-7
A/C control linkage adjustment (manual A/C).....HA-36
A/C control operation (manual A/C).....HA-13
A/C diagnostic work flow (manual A/C)HA-27
A/C harness layout (manual A/C)HA-16
A/C HFC134a (R134a) system introductionHA-12
A/C HFC134a (R134a) system precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-58, HA-61
A/C HFC134a (R134a) system service tools.....HA-8
A/C HFC134a system service equipment
precautionHA-8
A/C lubricant (R134a).....HA-63
A/C lubrication oilHA-63
A/C operational check.....HA-25
A/C performance chart.....HA-51
A/C performance test diagnoses.....HA-49
A/C pressure switch.....HA-12
A/C push control.....HA-13
A/C relay.....HA-46
A/C trouble diagnoses (manual A/C)HA-27
Accel drum unitEM-28
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bag.....RS-10
Air bag disposal.....RS-19
Air bag precautionsGI-2
Air bleeding for brake systemBR-5
Air bleeding (hydraulic clutch).....CL-6
Air cleaner filter replacement.....MA-13
Air conditioner cut controlEC-18
Air conditioning - See A/C.....HA-12
Air flow meter - See Mass air flow sensor.....EC-103
AlternatorEL-29
Angular tightening application.....EM-2
AntennaEL-131
AP/SEN - Wiring diagramEC-112
ASCD - Wiring diagram.....EL-145
ASCD (automatic speed control device).....EL-141
A/T - Wiring diagram - AT - FTS.....AT-83

A/T - Wiring diagram - AT - INH/SW.....AT-78
A/T - Wiring diagram - AT - MAIN.....AT-74
A/T - Wiring diagram - AT - VSS A/T.....AT-88
A/T control.....EC-308
A/T diagnosis communication lineEC-397
A/T fluid temperature sensor.....AT-85
A/T removal and installation.....AT-207
A/T self-diagnoses.....AT-36
A/T shift lock system.....AT-197
A/T shift lock system - Wiring diagram.....AT-198
A/T trouble diagnosesAT-47
A/T Wiring diagram - AT - ENG SSAT-92
A/T Wiring diagram AT - 1ST.....AT-98
A/T Wiring diagram AT - 2NDAT-104
A/T Wiring diagram AT - 3RDAT-110
A/T Wiring diagram AT - 4TH.....AT-117
A/T Wiring diagram AT - BA/FTSAT-164
A/T Wiring diagram AT - LPSVAT-137
A/T Wiring diagram AT - NONDTCAT-171
A/T Wiring diagram AT - OVRCSVAT-159
A/T Wiring diagram AT - SSV/AAT-142
A/T Wiring diagram AT - SSV/B.....AT-147
A/T Wiring diagram AT - TCCSIGAT-130
A/T Wiring diagram AT - TCVAT-124
A/T Wiring diagram AT - TPS.....AT-153
A/T Wiring diagram AT - VSSMTR.....AT-169
AT/C - Wiring diagram.....EC-308
ATDIAG - Wiring diagramEC-397
AudioEL-124
AUDIO - Wiring diagramEL-126
Audio and A/C control removal and
installation - See Instrument panel.....BT-16
Automatic speed control system - See ASCD..EL-141
Automatic transaxle numberGI-36
Automatic transmission fluid replacementMA-17
Auxiliary air control (AAC).....EC-297

B

Back windowBT-44
BACK/L - Wiring diagram.....EL-53
Back-up lampEL-53
Back-up lamp switch (M/T)MT-8
Ball joint front axle.....FA-26
BatteryEL-19
Baulk ring (M/T).....MT-15
Blower motorHA-33
Blower resistor.....HA-33
Board-on lift.....GI-39
Body alignment.....BT-48
Boring/honing cylinder blockEM-46
BPT valveEC-262
Brake booster.....BR-14

ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....	BR-7
Brake fluid change	BR-4
Brake fluid level.....	MA-18
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake lining temporary checking.....	MA-19
Brake master cylinder	BR-11
Brake pedal	BR-9
Bulb specifications.....	EL-249
Bumper, front.....	BT-6
Bumper, rear.....	BT-10
BYPSS/V - Wiring diagram.....	EC-387

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-244
Canister - See EVAP canister.....	EC-20
CHARGE - Wiring diagram	EL-30
Charging system	EL-29
Chassis and body maintenance.....	MA-16
CHIME - Wiring diagram	EL-94
CIGAR - Wiring diagram	EL-113
Cigarette lighter.....	EL-113
Circuit breaker.....	EL-15
CKPS - Wiring diagram.....	EC-239
Closed loop control	EC-16
Closed throttle position switch	EC-303
Clutch cover	CL-10
Clutch disc.....	CL-10
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal	CL-4
Clutch release bearing	CL-9
Clutch withdrawal lever	CL-9
CMPS - Wiring diagram	EC-244
Coil spring (front).....	FA-24
Coil spring (rear)	RA-12
Collision diagnosis.....	RS-46
Combination lamp, rear, removal and installation	BT-30
Combination meter	EL-76
Combination meter removal and installation - See Instrument panel.....	BT-16
Combination switch	EL-34
Compression pressure.....	EM-12
Compressor clutch removal and installation.....	HA-67
Compressor description	HA-6
Compressor mounting.....	HA-66
Compressor precaution.....	HA-6

Compressor special service tool.....	HA-7
Connecting rod	EM-46
Connecting rod bearing clearance.....	EM-49
Connecting rod bushing clearance	EM-50
Connector inspection.....	GI-17
Console box - See Instrument panel	BT-16
CONSULT for ECCS.....	EC-60
CONSULT general information	GI-32
Control lever (M/T)	MT-13
Control valve (A/T)	AT-235
Converter housing installation.....	AT-208
Coolant mixture ratio.....	MA-9
Coolant replacement	MA-11
COOL/F - Wiring diagram	EC-405
Cooling circuit (engine)	LC-9
Cooling fan	LC-14
Cooling fan control system.....	LC-14
Cooling fan motor.....	EC-416
Cooling fan relay	EC-416
Coupling sleeve (M/T).....	MT-15
Crank angle sensor built into distributor - See Camshaft position sensor	EC-244
Crankcase emission control system - See positive crankcase ventilation	EC-30
Crankcase ventilation system - See positive crankcase ventilation	EC-30
Crankshaft.....	EM-47
Crankshaft position sensor (OBD)	EC-239
Crankshaft position sensor (OBD) cog chipping.....	EC-328
Cruise control - See ASCD	EL-141
Cylinder block.....	EM-43
Cylinder block boring.....	EM-46
Cylinder head	EM-30
Cylinder head bolt tightening	EM-30

D

Daytime light system.....	EL-42
Daytime running light - See Daytime light system.....	EL-42
DEF - Wiring diagram	EL-117
Detonation sensor - See Knock sensor.....	EC-235
Diagnosis sensor unit.....	RS-13
Diagnostic trouble code (DTC) chart	EC-79
Differential gear (FF A/T)	AT-278
Differential gear (FF M/T).....	MT-29
Dimensions.....	GI-37
Distributor	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram	EL-171
Dome light - See Interior lamp.....	EL-66
Door, front.....	BT-14

ALPHABETICAL INDEX

Door glass	BT-14
Door lock	BT-14
Door mirror	BT-46
Door, rear	BT-15
Door trim.....	BT-21
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-51
Drive shaft (front)	FA-15
Dropping resistor (A/T).....	AT-139
DTC WORK SUPPORT	EC-68
DTRL - Wiring diagram	EL-45

E

ECCS basic inspection.....	EC-77
ECCS circuit diagram.....	EC-9
ECCS component parts location.....	EC-10
ECCS fail-safe system	EC-80
ECCS on board diagnostic system.....	EC-40
ECCS symptom matrix chart.....	EC-81
ECCS system diagram and chart	EC-12
ECM input/output signal.....	EC-88
ECTS - Wiring diagram.....	EC-126
EGR control (EGRC) - BPT valve.....	EC-258
EGR control (EGRC) - solenoid valve	EC-333
EGR control valve	EC-256, EC-349
EGR temperature sensor	EC-338
EGRC1 - Wiring diagram	EC-250
EGRC/V - Wiring diagram.....	EC-333
EGR/TS - Wiring diagram	EC-338
Electric sun roof	EL-137
Electrical diagnoses	GI-17
Electrical load signal circuit.....	EC-436
Electrical unit.....	EL-226
Electrical units location.....	EL-226
Electronic ignition system.....	EC-17
Engine compartment.....	BT-48
Engine control circuit diagram.....	EC-9
Engine control module (ECM).....	EC-311
Engine coolant temperature sensor (ECTS)	EC-126, EC-142
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-9
Engine removal	EM-40
Engine room - See Engine compartment	BT-48
Engine serial number	GI-36
EVAP canister	EC-20
EVAP canister purge volume control solenoid valve.....	EC-277, EC-361
EVAP canister vent control valve.....	EC-283, EC-368

EVAP control system pressure sensor	EC-288
EVAP control system purge flow monitoring diagnosis	EC-373
EVAP control system (small leak) diagnosis	EC-268, EC-351
EVAP vapor lines inspection	MA-15
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve	EC-250
Exhaust system	FE-6
Exhaust system inspection.....	MA-16
Exterior	BT-25

F

Fan switch	HA-33
Fast idle.....	EC-32
Fast idle cam (FIC)	EC-32
Fast idle cam (FIC) inspection and adjustment.....	EC-32
F/FOG - Wiring diagram.....	EL-55
FICD - Wiring diagram	EC-432
Final drive (FF A/T)	AT-278
Final drive (FF M/T)	MT-29
Finisher, interior - See Trim.....	BT-19
Finisher, rear panel	BT-19
Floor trim	BT-19
Flow charts.....	GI-29
Fluid temperature sensor (A/T).....	AT-85
Fluids	MA-8
Flywheel (clutch)	CL-11
Flywheel runout.....	EM-51
Fog lamp, front.....	EL-54
Fog lamp, front, removal and installation.....	BT-6
Fork rod (M/T)	MT-16
Forward clutch.....	AT-256
F/PUMP - Wiring diagram	EC-423
Freeze frame data.....	EC-42
FRO2 - Wiring diagram	EC-147
FRO2/H - Wiring diagram	EC-181
Front axle	FA-10
Front bumper.....	BT-6
Front disc brake	BR-17
Front door.....	BT-14
Front fog lamp.....	EL-54
Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor (HO2S).....	EC-147, EC-154, EC-161, EC-168, EC-176
Front passenger air bag.....	RS-16
Front seat	BT-32
Front seat belt	RS-4
Front suspension.....	FA-23
FUEL - Wiring diagram	EC-214

ALPHABETICAL INDEX

Fuel cut control (at no load & high engine speed) EC-19
 Fuel filler lid BT-10
 Fuel filter EC-31
 Fuel filter replacement MA-13
 Fuel injector EC-417
 Fuel line inspection MA-12
 Fuel precautions GI-6
 Fuel pressure check EC-31
 Fuel pressure regulator EC-32
 Fuel pressure release EC-31
 Fuel pump EC-423
 Fuel pump and gauge FE-5
 Fuel pump relay EC-423
 Fuel system FE-4
 Fuel tank vacuum relief valve EC-21
 Fuel temperature sensor EC-226
 Fuse EL-15
 Fusible link EL-15

G

Garage jack and safety stand GI-39
 Gauges EL-76
 Gear components (M/T) MT-15
 Generator EL-29
 Generic scan tool (GST) EC-71
 Glass BT-43
 Grease MA-8
 Grille - See Exterior BT-6
 Ground distribution EL-16

H

Harness connector EL-3
 Harness connector inspection GI-17
 Harness layout EL-230
 Hazard warning lamp EL-57
 Headlamp EL-37
 Headlamp aiming control EL-40
 Headlamp leveler - See Headlamp aiming control EL-40
 Headlining - See Roof trim BT-23
 Heated oxygen sensor heater EC-159
 Heated oxygen sensor (HO2S) EC-147, EC-154, EC-161, EC-168, EC-176
 HEATER - Wiring diagram HA-19
 Height (Dimensions) GI-37
 HFC134a (R134a) system introduction HA-12
 HFC134a (R134a) system precaution HA-2
 HFC134a (R134a) system service procedure HA-58, HA-61

HFC134a (R134a) system service tools HA-8
 HFC134a system service equipment precaution HA-8
 High clutch AT-252
 H/LAMP - Wiring diagram EL-38
 Hood BT-6
 Horn EL-112
 HORN - Wiring diagram EL-112
 How to erase DTC for ECCS OBD system EC-50

I

IACV-AAC valve inspection EC-297
 IACV-FICD solenoid valve EC-432
 IATS - Wiring diagram EC-120
 Identification plate GI-35
 Idle air control valve (IACV) EC-297
 Idle mixture ratio EC-34
 Idle speed EC-34
 Ignition coil EC-322
 Ignition timing EC-34
 Ignition wire inspection EC-234
 IGN/SG - Wiring diagram EC-322
 ILL - Wiring diagram EL-64
 Illumination EL-63
 Inhibitor switch AT-76, EC-400
 INJECT - Wiring diagram EC-417
 Injector EC-419
 Injector removal and installation EC-32
 Input shaft (FF M/T) MT-20
 Instrument panel BT-16
 Intake air temperature sensor EC-120
 Intake door control linkage adjustment HA-40
 Intake manifold EM-9
 Interior BT-19
 Interior lamp EL-66
 Interior lamp on-off control EL-67
 INT/L - Wiring diagram EL-74

J

Jacking points GI-38, GI-39

K

Keyless entry system - See Multi-remote control system EL-182
 Knock sensor (KS) EC-235
 Knuckle spindle FA-10
 KS - Wiring diagram EC-235

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-37
License lamp	EL-51
Lifting points	GI-38
Line pressure solenoid valve	AT-121
Line pressure test (A/T)	AT-55
Liquid gasket application	EM-2
LOAD - Wiring diagram	EC-436
Location of electrical units	EL-226
Lock, door	BT-14
Low and reverse brake	AT-262
Lubricant (R134a) A/C	HA-63
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-63
Lubrication-locks, hinges and hood latches	MA-21
Luggage compartment trim	BT-24
Luggage room lamp	EL-74

M

MAFS - Wiring diagram	EC-103
Magnet clutch	HA-67
MAIN - Wiring diagram	EC-98
Main drive gear (M/T)	MT-15
Mainshaft (M/T)	MT-25
Maintenance	MA-3
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-210
Malfunction indicator lamp (MIL)	EC-52
Manual transaxle number	GI-36
Manual transmission oil replacement	MA-16
MAP/BARO switch solenoid valve	EC-313
Mass air flow sensor (MAFS)	EC-103
Master cylinder (brake)	BR-11
Master cylinder (clutch)	CL-7
Meter	EL-76
METER - Wiring diagram	EL-79
MIL & Data link connectors circuit	EC-439
MIL/DL - Wiring diagram	EC-439
Mirror, door	BT-46
Mirror, out side	BT-46
Misfire	EC-230
Mode door control linkage adjustment	HA-36
Model variation	GI-34
Molding - See Exterior	BT-25
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-186
Multi link/lower ball joint (rear)	RA-14
Multiport fuel injection (MFI) system	EC-15

Multiport fuel injection precautions	GI-5
Multi-remote control system	EL-182

N

Neutral position switch	EC-400
Neutral position switch (M/T)	MT-8
NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (M/T)	MT-6
NVH troubleshooting (RA)	RA-3

O

Oil change (capacity)	MA-14
Oil change (interval)	MA-5
Oil jet	LC-4
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T)	AT-231
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-26
Operating cylinder (clutch)	CL-8
Out side mirror	BT-46
Overdrive control switch	AT-195
Overrun clutch	AT-256
Overrun clutch solenoid valve	AT-121
Oversize piston	EM-46
Oxygen sensor (O2S)	EC-147, EC-154, EC-161, EC-168, EC-176

P

P/ANT - Wiring diagram	EL-132
Parking brake control	BR-33
Parking drum brake	BR-21
Parking lamp	EL-50
Park/Neutral position switch	EC-400
PCV (positive crankcase ventilation)	EC-30
PGC/V - Wiring diagram	EC-361
Pilot bushing replacement	EM-53
Piston assembly	EM-51
Piston pin inspection	EM-45
Piston ring inspection	EM-45
Piston to bore clearance	EM-46
PNP/SW - Wiring diagram	EC-400
POWER - Wiring diagram	EL-8
Power antenna	EL-131

ALPHABETICAL INDEX

Power door lock	EL-167
Power door mirror	EL-139
Power seat	EL-140
Power steering fluid level	ST-6, MA-20
Power steering gear	ST-14
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-428
Power steering oil pump	ST-20
Power steering system bleeding	ST-6
Power supply routing	EL-6
Power transistor & ignition coil	EC-322
Power window	EL-161
Precautions (General)	GI-3
PRE/SE - Wiring diagram	EC-288
Pressure plate - See Clutch cover	CL-10
Pressure test (A/T)	AT-55
PST/SW - Wiring diagram	EC-428

R

R134a - See HFC134a	HA-2
Radiator	LC-14
Radiator fan - See Cooling fan	LC-14
Radio - See Audio	EL-124
Rear axle	RA-4
Rear axle (disc brake type)	RA-8
Rear axle (drum brake type)	RA-8
Rear bumper	BT-10
Rear combination lamp removal and installation	BT-30
Rear disc brake	BR-26
Rear door	BT-15
Rear drum brake	BR-21
Rear heated oxygen sensor (HO2S)	EC-185, EC-192, EC-199, EC-205
Rear panel finisher	BT-19
Rear seat	BT-33
Rear seat belt	RS-6
Rear suspension	RA-10
Rear window	BT-44
Rear window defogger	EL-114
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-61
Refrigerant general precaution	HA-2
Refrigerant lines	HA-65
Refrigeration cycle	HA-12
Release bearing (clutch)	CL-9
Resistor	EC-327
Reverse clutch	AT-249
Reverse idler shaft (M/T)	MT-15
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-8
Reverse main gear (M/T)	MT-15

Revolution sensor (A/T)	AT-89
Road wheel size	GI-37
Roof trim	BT-23
Room lamp	EL-66
Room lamp - See Interior lamp	EL-66
ROOM/L - Wiring diagram	EL-70
Rotor disc (front)	FA-10
RRO2 - Wiring diagram	EC-185
RRO2/H - Wiring diagram	EC-210

S

SAE J1930 terminology list	GI-43
Seal - See Exterior	BT-25
SEAT - Wiring diagram	EL-140
Seat belt, front	RS-4
Seat belt inspection	MA-21, RS-7
Seat belt, rear	RS-6
Seat, front	BT-32
Seat, rear	BT-33
Self-diagnostic results	EC-52
SHIFT - Wiring diagram	AT-198
Shift control components (M/T)	MT-16
Shift fork (M/T)	MT-16
Shift lock system	AT-197
Shift schedule	AT-301
Shift solenoid valve (A/T)	AT-99, AT-111
Shift solenoid valve B (A/T)	AT-99
Shock absorber (front)	FA-24
Shock absorber (rear)	RA-12
Side trim	BT-19
Smart entrance control unit	EL-182
Spare tire size	GI-37
Spark plug replacement	MA-15
Spiral cable	RS-14
Spot lamp	EL-74
Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram	EL-137
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-28
SRS Trouble diagnoses	RS-23
S/SIG - Wiring diagram	EC-420
Stabilizer bar (front)	FA-25
Stabilizer bar (rear)	RA-14
Stall test (A/T)	AT-52
Standardized relay	EL-4
START - Wiring diagram	EL-25
Start signal	EC-420
Starter	EL-23
Starting system	EL-23
Steering gear and linkage inspection	MA-20
Steering gear oil level	MA-20
Steering knuckle	FA-10

ALPHABETICAL INDEX

Steering linkage..... ST-14
Steering switch..... EL-36
Steering wheel and column..... ST-10
Steering wheel play..... ST-8
Steering wheel turning force..... ST-7
Stop lamp..... EL-52
STOP/L - Wiring diagram..... EL-52
Striking rod (M/T)..... MT-16
Strut (front)..... FA-24
Strut (rear)..... RA-12
Sun roof, electric..... EL-137
Sunroof..... BT-35
Supplemental restraint system - Wiring
 diagram..... RS-28
Supplemental Restraint System..... RS-10
SW/V - Wiring diagram..... EC-313
Symbols and abbreviations..... GI-8
Synchronizer (M/T)..... MT-15, MT-26
System readiness test (SRT) code..... EC-42

T

Tail lamp..... EL-50
TAIL/L - Wiring diagram..... EL-50
TCM circuit diagram..... AT-12
TCM inspection table..... AT-70
Temperature control cable and linkage
 adjustment..... HA-47
TFTS - Wiring diagram..... EC-226
THEFT - Wiring diagram..... EL-204
Theft warning system..... EL-197
Thermal protector..... HA-46
Thermo control amp..... HA-46
Thermostat..... LC-13
Three way catalyst..... EC-263
Three way catalyst precautions..... GI-5
Throttle bodies..... EM-9
Throttle drum adjustment..... FE-3
Throttle position sensor adjustment..... EC-77
Throttle position sensor (TPS)..... EC-131
Throttle position switch..... AT-156, AT-196, EC-303
Throwout bearing - See Clutch release
 bearing..... CL-9
Tie-rod..... ST-17
Tie-rod ball joints..... ST-17
Tightening torque of standard bolts..... GI-42
Timing chain..... EM-17
Tire rotation..... MA-20
Tire size..... GI-37
Torque converter clutch solenoid valve..... AT-121
Torque converter installation..... AT-208
Tow truck towing..... GI-40
TPS - Wiring diagram..... EC-131

TP/SW - Wiring diagram..... EC-303
Transmission case (M/T)..... MT-14
Transverse link (front)..... FA-26
Tread-FR&RR (Dimensions)..... GI-37
Trim..... BT-19
Triple pressure switch..... HA-46
Trouble diagnoses..... GI-17
Trunk lid..... BT-10
Trunk lid opener - See Trunk lid..... BT-10
Trunk room lamp..... EL-74
Trunk room trim..... BT-24
TURN - Wiring diagram..... EL-60
Turn signal lamp..... EL-57
Two trip detection logic..... EC-40
Two-pole lift..... GI-40

U

Under body..... BT-50

V

Vacuum cut valve..... EC-396
Vacuum cut valve bypass valve..... EC-387, EC-392
Vacuum hose (brake system)..... BR-16
Vacuum hose drawing (ECCS)..... EC-13
Valve clearance..... EM-37
Valve guide..... EM-33
Valve lifter..... EM-36
Valve seat..... EM-35
Valve spring..... EM-36
Vehicle identification number..... GI-35
Vehicle recovery (freeing a stuck vehicle)..... GI-41
Vehicle speed sensor (VSS)..... EC-293
Vent mode switch..... HA-13
VENT/V - Wiring diagram..... EC-283, EC-381
Viscosity number (SAE)..... MA-8
VSS - Wiring diagram..... EC-293

W

WARN - Wiring diagram..... EL-87
Warning chime..... EL-91
Warning lamps..... EL-84
Washer, front..... EL-104
Water pump..... LC-11
Weatherstrip - See Exterior..... BT-25
Wheel alignment (front)..... FA-7
Wheel alignment (rear)..... RA-6
Wheel balance..... MA-20
Wheel bearing (front axle)..... FA-7

ALPHABETICAL INDEX

Wheel bearing (rear)	RA-5	Window, back	BT-44	
Wheel hub (front)	FA-10	Window, door.....	BT-14	
Wheel hub (rear)	RA-8	Window, rear	BT-44	GI
Wheel sensors (ABS).....	BR-36	Windshield.....	BT-43	
Wheel size.....	GI-37	WIPER - Wiring diagram.....	EL-106	
Wheelarch height	FA-6	Wiper and washer	EL-104	MA
Wheelbase (Dimensions).....	GI-37	Wiper, front.....	EL-104	
Wide open & closed throttle position (CTP)		Wiring diagram (cell code) list.....	EL-250	EM
switch	EC-303	Wiring diagrams	GI-9	
Width (Dimensions)	GI-37	Withdrawal lever (clutch).....	CL-9	
WINDOW - Wiring diagram.....	EL-164	Wrist pin - See Piston pin inspection.....	EM-45	LC
Window antenna.....	EL-131			

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX