

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
A/C and audio controller [ATC-131](#)
A/C component layout [ATC-25](#)
A/C compressor clutch removal and installation
[ATC-156](#)
A/C compressor mounting [ATC-154](#), [ATC-156](#),
[ATC-159](#), [ATC-160](#), [ATC-161](#), [ATC-162](#), [ATC-163](#),
[ATC-164](#), [ATC-165](#), [ATC-166](#), [ATC-167](#), [ATC-168](#)
A/C compressor precaution [ATC-12](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-33](#)
A/C diagnostic work flow (auto A/C) [ATC-117](#)
A/C evaporator [ATC-167](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure
[ATC-152](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-12](#)
A/C lubricant (R134a) [ATC-26](#)
A/C lubrication oil [ATC-173](#)
A/C operational check [ATC-70](#)
A/C self-diagnoses (auto A/C) [ATC-61](#), [ATC-117](#)
A/C service data specification [ATC-173](#)
A/C system description (auto A/C) [ATC-29](#)
A/C trouble diagnoses (auto A/C) [ATC-42](#)
A/C, A - Wiring diagram [ATC-48](#), [ATC-53](#)
A/T fluid checking [AT-14](#), [AT-52](#)
A/T fluid replacement [AT-13](#)
A/T fluid temperature sensor [AT-155](#)
A/T IND - Wiring diagram [DI-39](#)
A/T self-diagnoses [AT-89](#), [AT-98](#), [AT-99](#)
A/T shift lock system [AT-300](#)
A/T shift lock system - Wiring diagram [AT-301](#), [AT-307](#)
A/T trouble diagnoses [AT-43](#)
A/T Wiring diagram AT - CAN [AT-102](#)
A/T Wiring diagram AT - D/C [AT-199](#)
A/T Wiring diagram AT - D/CF [AT-204](#)
A/T Wiring diagram AT - E/BRE [AT-176](#)
A/T Wiring diagram AT - FPSW1 [AT-231](#)
A/T Wiring diagram AT - FPSW3 [AT-235](#)
A/T Wiring diagram AT - FPSW5 [AT-239](#)
A/T Wiring diagram AT - FPSW6 [AT-243](#)
A/T Wiring diagram AT - FR/B [AT-189](#)
A/T Wiring diagram AT - FR/BF [AT-194](#)
A/T Wiring diagram AT - FTS [AT-156](#)
A/T Wiring diagram AT - HLR/C [AT-208](#)
A/T Wiring diagram AT - HLR/CF [AT-213](#)
A/T Wiring diagram AT - I/C [AT-180](#)
A/T Wiring diagram AT - I/CF [AT-185](#)
A/T Wiring diagram AT - I/LOCK [AT-169](#)
A/T Wiring diagram AT - LC/B [AT-218](#)
A/T Wiring diagram AT - LC/BF [AT-223](#)
A/T Wiring diagram AT - LPSV [AT-133](#)
A/T Wiring diagram AT - MMSW [AT-227](#)
A/T Wiring diagram AT - NONDTC [AT-248](#)
A/T Wiring diagram AT - PNP/SW [AT-111](#)

A/T Wiring diagram AT - POWER [AT-138](#)
A/T Wiring diagram AT - STSIG [AT-105](#)
A/T Wiring diagram AT - TCCSIG [AT-128](#)
A/T Wiring diagram AT - TCV [AT-123](#)
A/T Wiring diagram AT - TRSA/T [AT-162](#)
A/T Wiring diagram AT - VSS A/T [AT-116](#)
Accelerator control system [ACC-4](#)
Accelerator pedal position (APP) sensor [EC-1211](#),
[EC-1218](#), [EC-1232](#)
Accelerator pedal released position learning [EC-51](#),
[EC-692](#)
Accelerator position sensor [EC-304](#), [EC-311](#), [EC-532](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-50](#)
Air bag precautions [SRS-3](#)
Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-10](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter replacement [MA-17](#)
Air conditioner cut control [EC-36](#), [EC-675](#)
Air flow meter - See Mass air flow sensor [EC-170](#),
[EC-178](#), [EC-810](#), [EC-818](#)
Air mix. door motor [ATC-148](#)
Air spoiler, rear [EI-35](#)
Ambient sensor [ATC-118](#), [ATC-133](#)
Angular tightening application [EM-4](#)
Antenna [AV-36](#)
APPS1 - Wiring diagram [EC-313](#), [EC-1213](#)
APPS2 - Wiring diagram [EC-534](#), [EC-1220](#)
APPS3 - Wiring diagram [EC-306](#), [EC-1234](#)
ASC/BS - Wiring diagram [EC-569](#)
ASC/SW - Wiring diagram [EC-562](#), [EC-1173](#)
ASCBOF - Wiring diagram [EC-624](#), [EC-1272](#)
ASCD [EC-650](#), [EC-1307](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCIND - Wiring diagram [EC-632](#), [EC-1288](#)
Ashtray illumination [LT-164](#)
AT indicator lamp [DI-39](#)
Audio [AV-5](#)
AUDIO - Wiring diagram [AV-9](#)
AUT/DP - Wiring diagram [SE-16](#), [SE-23](#)
Auto air conditioner - Wiring diagram [ATC-48](#), [ATC-53](#)
Auto amp [ATC-132](#)
Auto anti-dazzling inside mirror [GW-97](#)
Automatic amplifier [ATC-58](#), [ATC-72](#), [ATC-132](#)
Automatic drive positioner [SE-11](#)
Automatic transmission fluid replacement [MA-25](#)
Axle [MA-31](#)
Axle housing (rear) [RAX-7](#)

B

BACK/L - Wiring diagram [LT-135](#)
Back-up lamp [LT-135](#)
Back-up lamp switch (M/T) [MT-12](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),
[SC-23](#)
BCM (Body control module) [BCS-3](#)

ALPHABETICAL INDEX

Blower motor [ATC-87](#), [ATC-140](#)
 Blower unit [ATC-138](#)
 Bose speaker amp. [AV-5](#)
 Brake booster [BR-18](#)
 Brake fluid change [BR-9](#), [BR-10](#)
 Brake fluid level [MA-29](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-29](#)
 Brake lines and cables inspection [MA-29](#)
 Brake master cylinder [BR-13](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-584](#), [EC-1206](#)
 BRK/SW - Wiring diagram [EC-585](#), [EC-1207](#)
 Bulb specifications [LT-202](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-17](#)

C

Camshaft [EM-71](#)
 Camshaft inspection [EM-73](#)
 Camshaft position sensor (PHASE) .. [EC-334](#), [EC-955](#)
 CAN - Wiring diagram [EC-143](#), [EC-789](#), [LAN-10](#),
[LAN-35](#), [LAN-57](#)
 CAN (Controller Area Network) [LAN-4](#), [LAN-8](#), [LAN-33](#),
[LAN-55](#)
 CAN communication [EC-37](#), [EC-142](#), [EC-676](#), [EC-788](#),
[AT-30](#), [AT-101](#), [LT-9](#), [LT-36](#), [LT-65](#), [LT-84](#), [LT-103](#),
[LT-139](#), [LT-188](#), [WW-10](#), [LAN-4](#), [LAN-8](#), [LAN-33](#),
[LAN-55](#)
 Canister-See EVAP canister [EC-638](#), [EC-1295](#)
 Center bearing assembly (propeller shaft) [PR-7](#)
 Center bearing disassembly (propeller shaft) [PR-7](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-22](#)
 CHIME - Wiring diagram [DI-47](#)
 CIGAR - Wiring diagram [WW-35](#)
 Cigarette lighter [WW-35](#)
 Cigarette lighter illumination [LT-165](#)
 Circuit breaker [PG-15](#)
 Clock [DI-60](#)
 CLOCK - Wiring diagram [DI-60](#)
 Closed loop control [EC-34](#), [EC-673](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-9](#)
 Collision diagnosis [SRS-57](#)
 Combination lamp, front, removal and installation
[LT-30](#)
 Combination lamp, rear, removal and installation
[LT-155](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See

Instrument panel [IP-11](#)
 Combination switch [LT-120](#)
 COMM - Wiring diagram [AV-64](#)
 COMPAS - Wiring diagram [DI-24](#)
 Compass [DI-23](#)
 Component Location (auto A/C) [ATC-45](#)
 Compression pressure [EM-87](#)
 Compressor clutch removal and installation .. [ATC-156](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-165](#)
 Console box - See Instrument panel [IP-10](#)
 Control units (terminal arrangement) [PG-69](#)
 Control valve (A/T) [AT-37](#)
 Controller Area Network (CAN) [LAN-4](#), [LAN-8](#), [LAN-33](#),
[LAN-55](#)
 Converter housing installation [AT-331](#)
 COOL/F - Wiring diagram [EC-513](#), [EC-1127](#), [EC-1139](#)
 Cooling circuit (engine) [CO-9](#)
 Cooling fan [CO-22](#)
 Cooling fan motor [EC-520](#), [EC-1134](#), [EC-1146](#)
 Cowl top [EI-21](#)
 Cowl top cover [EI-21](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-648](#), [EC-1305](#)
 Crankshaft position sensor (POS) [EC-327](#), [EC-949](#)
 Crash zone sensor [SRS-46](#)
 Cylinder head [EM-87](#)

D

D/LOCK - Wiring diagram [BL-27](#)
 Data link connector [EC-634](#)
 Daytime light system [LT-33](#)
 Daytime running light - See Daytime light system [LT-33](#)
 Diagnosis sensor unit [SRS-49](#)
 Diagnostic trouble code (DTC) for OBD system [EC-16](#),
[EC-655](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-14](#)
 Direct clutch solenoid valve [AT-198](#), [AT-203](#)
 Display and amp. assembly [ATC-58](#), [ATC-72](#)
 DLC - Wiring diagram [EC-634](#)
 Door glass [GW-91](#), [GW-94](#)
 Door glass Fitting Adjustment(Front) [GW-93](#)
 Door glass Fitting Adjustment(Rear) [GW-96](#)
 Door lock [BL-83](#)
 Door mirror [GW-127](#)
 Door trim [EI-37](#)
 Door, front [BL-79](#), [GW-91](#)
 Door, rear [BL-79](#), [GW-94](#)
 Drive belt [EM-13](#)
 Drive pinion diff. inspection [RFD-13](#)
 Drive pinion height [RFD-17](#), [RFD-20](#)
 Drive shaft (rear) [RAX-9](#)
 Driver air bag [SRS-37](#)
 DTRL - Wiring diagram [LT-42](#)
 Duct and grilles [ATC-149](#)

ALPHABETICAL INDEX

E

ECM power supply [EC-136](#), [EC-441](#), [EC-781](#), [EC-1053](#)
 ECM/PW - Wiring diagram [EC-1054](#)
 ECTS - Wiring diagram [EC-192](#), [EC-832](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-451](#), [EC-453](#),
[EC-465](#), [EC-1064](#), [EC-1066](#)
 Electrical load signal circuit [EC-622](#), [EC-1270](#)
 Electrical unit [PG-69](#)
 Electrical units location [PG-62](#)
 Electronic ignition (EI) system [EC-35](#), [EC-674](#)
 Engine control module (ECM) [EC-434](#), [EC-1050](#)
 Engine control system diagram and chart [EC-30](#),
[EC-669](#)
 Engine coolant [CO-11](#)
 Engine coolant temperature sensor (ECTS) ... [EC-190](#),
[EC-204](#), [EC-830](#), [EC-842](#)
 Engine oil [LU-6](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-98](#)
 ETC1 - Wiring diagram [EC-454](#), [EC-1067](#)
 ETC2 - Wiring diagram [EC-462](#), [EC-1074](#)
 ETC3 - Wiring diagram [EC-466](#), [EC-1078](#)
 EVAP canister [EC-638](#), [EC-1295](#)
 EVAP canister purge volume control solenoid valve
[EC-363](#), [EC-542](#), [EC-984](#), [EC-1156](#)
 EVAP canister vent control valve [EC-369](#), [EC-550](#),
[EC-991](#), [EC-1164](#)
 EVAP control system (small leak) diagnosis .. [EC-353](#),
[EC-393](#), [EC-974](#), [EC-1015](#)
 EVAP control system pressure sensor [EC-376](#),
[EC-379](#), [EC-385](#), [EC-998](#), [EC-1001](#), [EC-1007](#)
 EVAP control system purge flow monitoring diagnosis
[EC-348](#), [EC-969](#)
 EVAP vapor lines inspection [MA-21](#)
 Evaporative emission (EVAP) system [EC-635](#),
[EC-1292](#)
 Evaporator [ATC-167](#)
 Exhaust manifold [EM-24](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-22](#)
 Expansion valve [ATC-168](#)

F

F/FOG - Wiring diagram [LT-88](#)
 F/PUMP - Wiring diagram [EC-612](#), [EC-1260](#)
 Final drive pre-inspection [RFD-13](#)
 Final drive removal and installation [RFD-10](#)
 Floor trim [EI-43](#)
 Flow charts [GI-26](#)
 FLS1 - Wiring diagram [EC-412](#)
 FLS2 - Wiring diagram [EC-419](#)
 FLS3 - Wiring diagram [EC-558](#)
 Fluid temperature sensor (A/T) [AT-155](#)
 Fluorescent leak detector [ATC-169](#)
 Flywheel runout(QR) [EM-131](#)

Fog lamp, front [LT-83](#)
 Front axle [FAX-5](#)
 Front brake solenoid valve [AT-188](#), [AT-193](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-30](#)
 Front disc brake [BR-21](#)
 Front door [BL-79](#), [BL-83](#), [GW-91](#)
 Front fog lamp [LT-83](#)
 Front passenger air bag [SRS-41](#)
 Front seat [SE-66](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-48](#)
 Front side air bag [SRS-42](#)
 Front suspension [FSU-6](#)
 FTTS - Wiring diagram [EC-283](#), [EC-287](#), [EC-924](#),
[EC-928](#)
 Fuel cut control (at no load high engine speed) [EC-36](#),
[EC-675](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-4](#)
 Fuel level sensor .. [EC-411](#), [EC-416](#), [EC-418](#), [EC-557](#),
[EC-1033](#), [EC-1035](#), [EC-1037](#)
 Fuel line inspection [FL-4](#), [MA-17](#)
 Fuel pressure check [EC-53](#), [EC-694](#)
 Fuel pressure release [EC-53](#), [EC-694](#)
 Fuel pump [EC-611](#), [EC-1259](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-12](#)
 Fuel tank temperature sensor [EC-281](#), [EC-286](#),
[EC-922](#), [EC-927](#)
 Fuel tank vacuum relief valve [EC-638](#), [EC-1295](#)
 FUELB1 - Wiring diagram .. [EC-266](#), [EC-275](#), [EC-907](#),
[EC-916](#)
 FUELB2 - Wiring diagram .. [EC-267](#), [EC-276](#), [EC-908](#),
[EC-917](#)
 Fuse [PG-15](#)
 Fuse and fusible link box [PG-76](#)
 Fusible link [PG-15](#)

G

Gauges [DI-4](#)
 Glass [GW-12](#), [GW-14](#), [GW-91](#), [GW-94](#)
 Glove box lamp [LT-163](#)
 GPS antenna [AV-42](#)
 Grille - See Exterior [EI-20](#)
 Ground distribution [PG-28](#)

H

H/LAMP - Wiring diagram [LT-14](#)
 Harness connector [PG-66](#)
 Harness layout [PG-40](#)
 Hazard warning lamp [LT-101](#)
 Headlamp [LT-7](#)
 Headlamp removal and installation [LT-30](#)
 Headlining - See Roof trim [EI-45](#)
 Heated oxygen sensor 1 (bank 1) [EC-212](#), [EC-221](#),

ALPHABETICAL INDEX

[EC-234](#), [EC-470](#), [EC-476](#), [EC-850](#), [EC-860](#), [EC-873](#),
[EC-1082](#), [EC-1088](#)
 Heated oxygen sensor 1 (bank 2) [EC-212](#), [EC-221](#),
[EC-234](#), [EC-470](#), [EC-476](#), [EC-850](#), [EC-860](#), [EC-873](#),
[EC-1082](#), [EC-1088](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-154](#),
[EC-794](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-154](#),
[EC-794](#)
 Heated oxygen sensor 2 (bank 1) [EC-244](#), [EC-253](#),
[EC-483](#), [EC-494](#), [EC-883](#), [EC-893](#), [EC-1095](#), [EC-1107](#)
 Heated oxygen sensor 2 (bank 2) [EC-244](#), [EC-253](#),
[EC-483](#), [EC-494](#), [EC-883](#), [EC-893](#), [EC-1095](#), [EC-1107](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-162](#),
[EC-802](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-162](#),
[EC-802](#)
 Heated seat [SE-57](#)
 Heater and cooling unit (Heater core) [ATC-143](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-152](#)
 HFC134a (R134a) system service tools [ATC-17](#)
 HFC134a system service equipment precaution
[ATC-12](#)
 High & low reverse clutch solenoid valve [AT-207](#),
[AT-212](#)
 Hood [BL-12](#)
 Hood lock system [BL-15](#)
 Horn [WW-39](#)
 HORN - Wiring diagram [WW-39](#)
 HSEAT - Wiring diagram [SE-59](#), [SE-63](#)

I

IATS - Wiring diagram [EC-187](#), [EC-827](#)
 Idle air volume learning [EC-51](#), [EC-692](#)
 Idle mixture ratio [EC-40](#), [EC-681](#)
 Idle speed [EC-40](#), [EC-681](#)
 Idle speed control (ISC) [EC-425](#), [EC-427](#), [EC-1041](#),
[EC-1043](#)
 Ignition coil [EM-34](#), [EC-589](#), [EC-1241](#)
 Ignition control system [EC-589](#), [EC-1241](#)
 Ignition key hole illumination [LT-162](#), [LT-185](#)
 Ignition timing [EC-40](#), [EC-681](#)
 IGNSYS - Wiring diagram [EC-590](#), [EC-1242](#)
 ILL - Wiring diagram [LT-193](#)
 In vehicle sensor [ATC-121](#), [ATC-134](#)
 INJECT - Wiring diagram [EC-602](#), [EC-1254](#)
 Injector [EC-601](#), [EC-1253](#)
 Input clutch solenoid valve [AT-179](#), [AT-184](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-159](#)
 Intake air temperature sensor [EC-185](#), [EC-207](#),
[EC-825](#), [EC-845](#)
 Intake door control linkage adjustment [ATC-86](#)
 Intake door motor [ATC-84](#), [ATC-141](#)
 Intake manifold [EM-22](#)
 Intake manifold collector [EM-18](#)
 Intake sensor [ATC-127](#), [ATC-136](#)

Intake valve timing control (Bank 1) ... [EC-145](#), [EC-791](#)
 Intake valve timing control (Bank 2) ... [EC-145](#), [EC-791](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-145](#), [EC-1057](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-145](#), [EC-1057](#)
 Integrated homelink transmitter [BL-143](#)
 Interior [EI-39](#)
 Interior lamp [LT-166](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-16](#)
 IVCB1 - Wiring diagram [EC-148](#), [EC-1058](#)
 IVCB2 - Wiring diagram [EC-150](#), [EC-1060](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

J

Joint connector (J/C) [PG-68](#)

K

Knock sensor (KS) [EC-323](#), [EC-944](#)
 KS - Wiring diagram [EC-324](#), [EC-945](#)

L

LAN system circuit [ATC-75](#)
 Latch (lower anchors and tether for children) system ...
[SB-9](#)
 Line pressure solenoid valve [AT-132](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [LU-2](#)
 Location of electrical units [PG-62](#)
 Low coast brake solenoid valve [AT-217](#), [AT-222](#)
 Lubricant (R134a) A/C [ATC-6](#), [ATC-26](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-173](#)
 Luggage compartment trim [EI-47](#)

M

M/T oil replacement [MT-10](#)
 MAFS - Wiring diagram [EC-173](#), [EC-180](#), [EC-813](#),
[EC-820](#)
 Magnet clutch [ATC-93](#), [ATC-156](#)
 MAIN - Wiring diagram [EC-136](#), [EC-781](#)
 Maintenance (engine) [MA-13](#)
 Major overhaul (Final drive) [RFD-14](#)
 Malfunction indicator lamp (MIL) [EC-437](#)
 Mass air flow sensor (MAFS) [EC-170](#), [EC-178](#),
[EC-810](#), [EC-818](#)
 Master cylinder (brake) [BR-13](#)
 Master cylinder (clutch) [CL-8](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-12](#), [DI-13](#)
 MIL - Wiring diagram [EC-438](#)
 MIL data link connectors circuit [EC-1290](#)
 MIL/DL - Wiring diagram [EC-1290](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Mirror, door [GW-127](#)
 Mirror, out side [GW-127](#)
 Misfire [EC-317](#), [EC-938](#)
 Mode door control linkage adjustment [ATC-80](#)
 Mode door motor [ATC-78](#), [ATC-147](#)
 Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
 Mud guard - See Exterior [EI-28](#), [EI-29](#)
 Multiplex communication [ATC-129](#)
 Multiport fuel injection (MFI) system [EC-33](#), [EC-672](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-128](#)
 NAVI - Wiring diagram [AV-60](#)
 Navigation system [AV-41](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-156](#), [EC-796](#)
 O2H1B2 - Wiring diagram [EC-158](#), [EC-798](#)
 O2H2B1 - Wiring diagram [EC-164](#), [EC-804](#)
 O2H2B2 - Wiring diagram [EC-166](#), [EC-806](#)
 O2S1B1 - Wiring diagram .. [EC-214](#), [EC-224](#), [EC-237](#),
[EC-852](#), [EC-863](#), [EC-876](#)
 O2S1B2 - Wiring diagram .. [EC-214](#), [EC-226](#), [EC-239](#),
[EC-854](#), [EC-865](#), [EC-878](#)
 O2S2B1 - Wiring diagram .. [EC-246](#), [EC-256](#), [EC-486](#),
[EC-497](#), [EC-885](#), [EC-896](#), [EC-1098](#), [EC-1110](#)
 O2S2B2 - Wiring diagram .. [EC-248](#), [EC-258](#), [EC-488](#),
[EC-499](#), [EC-887](#), [EC-898](#), [EC-1100](#), [EC-1112](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-28](#)
 Oil pressure (engine) [LU-6](#)
 Oil pump (engine) [LU-13](#)
 Oil pump regulator valve (engine) [LU-13](#)
 Oil seal replacement (front of final drive) [RFD-6](#)
 Oil seal replacement (side of final drive) [RFD-8](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) [EC-642](#),
[EC-1299](#)
 Out side mirror [GW-127](#)
 Overheat [EC-509](#), [EC-1123](#), [EC-1135](#)

P

P/SCKT - Wiring diagram [WW-37](#)
 Park/Neutral position switch [EC-578](#), [EC-1197](#)
 Park/neutral position switch (A/T) [AT-110](#), [AT-246](#)
 Parking brake control [PB-5](#)
 Parking drum brake [PB-7](#)
 PCV (positive crankcase ventilation) [EC-648](#), [EC-1305](#)
 Personal lamp [LT-161](#)
 PGC/V - Wiring diagram [EC-365](#), [EC-544](#), [EC-986](#),

[EC-1158](#)
 PHSB1 - Wiring diagram [EC-336](#), [EC-957](#)
 PHSB2 - Wiring diagram [EC-338](#), [EC-959](#)
 Pinion bearing preload diff. [RFD-25](#)
 Pinion gear height diff. [RFD-20](#)
 PNP/SW - Wiring diagram [EC-580](#), [EC-1199](#)
 POS - Wiring diagram [EC-329](#), [EC-950](#)
 POWER - Wiring diagram [EC-442](#), [PG-4](#)
 Power door mirror [BL-19](#)
 Power seat [SE-54](#)
 Power socket [WW-37](#)
 Power steering fluid level [PS-6](#), [MA-30](#)
 Power steering gear [PS-13](#)
 Power steering hydraulic pressure [PS-24](#)
 Power steering oil pump [PS-24](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-3](#)
 Power window [GW-16](#)
 PRE/SE - Wiring diagram [EC-381](#), [EC-1003](#), [EC-1009](#)
 Precations for Leak detection dye [ATC-15](#)
 Precautions (General) [GI-4](#)
 Pressure switch 1 [AT-193](#), [AT-230](#)
 Pressure switch 2 [AT-222](#)
 Pressure switch 3 [AT-184](#), [AT-234](#)
 Pressure switch 5 [AT-203](#), [AT-238](#)
 Pressure switch 6 [AT-212](#), [AT-242](#)
 Pressure test (A/T) [AT-53](#)
 Propeller shaft [PR-4](#)
 Propeller shaft on vehicle service [PR-4](#)
 Propeller shaft vibration [PR-4](#)
 PS/SEN - Wiring diagram [EC-1046](#)

R

Radiator [CO-14](#)
 Radio - See Audio [AV-5](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-17](#)
 Rear combination lamp removal and installation
[LT-155](#)
 Rear cover packing replacement diff. [RFD-26](#)
 Rear disc brake [BR-27](#)
 Rear door [BL-79](#), [GW-94](#)
 Rear parcel shelf finisher [EI-41](#)
 Rear seat [SE-73](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-14](#)
 Rear window defogger [GW-99](#)
 Refrigerant connection precaution [ATC-7](#)
 Refrigerant discharging evacuating charging [ATC-152](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-152](#)
 Refrigerant pressure sensor [EC-617](#), [EC-1265](#),
[ATC-103](#), [ATC-166](#)
 Refrigeration cycle [ATC-20](#)
 Release bearing (clutch) [CL-13](#)
 Removal and installation (A/T) [AT-329](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch

ALPHABETICAL INDEX

(M/T)	MT-12
Revolution sensor (A/T)	AT-115
Ring gear diff. inspection	RFD-13
Rocker cover	EM-43
Room lamp - See Interior lamp	LT-166
ROOM/L - Wiring diagram	LT-170
RP/SEN - Wiring diagram	EC-618 , EC-1266

S

S/SIG - Wiring diagram	EC-608
Seal - See Exterior	EI-26
SEAT - Wiring diagram	SE-54
Seat belt inspection	SB-6
Seat belt pre-tensioner disposal	SRS-50
Seat belt, front	SB-4
Seat belt, rear	SB-5
Seat, front	SE-66
Seat, rear	SE-73
SEN/PW - Wiring diagram	EC-539 , EC-1152
SHIFT - Wiring diagram	AT-301 , AT-307
Shift lock system	AT-300
Shift schedule	AT-389
Shock absorber (front)	FSU-9
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-47
Side bearing preload diff.	RFD-18
Side curtain air bag	SRS-44
Side flange installation diff.	RFD-8
Side trim	EI-39
SMJ (super multiple junction)	PG-71
Spark plug	EM-35
Specification value	EC-131 , EC-776
Speedometer	DI-4
Spiral cable	SRS-39
Spot lamp	LT-185
SROOF - Wiring diagram	RF-16
SRS - See Supplemental Restraint System	SRS-6
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (rear)	RSU-15
Stall test (A/T)	AT-52
Standardized relay	PG-73
START - Wiring diagram	SC-11
Start signal	EC-607
Starter	SC-9
Starting system	SC-9
Steering gear and linkage inspection	MA-30
Steering linkage	PS-13
Steering wheel and column	PS-7 , PS-9
Steering wheel play	PS-7
Steering wheel turning force	PS-7
Step lamp	LT-134
Stop lamp	LT-132
Stop lamp switch	EC-584 , EC-1206
STOP/L - Wiring diagram	LT-132
Sun roof, electric	RF-10
Sunload sensor	ATC-123 , ATC-135
Sunroof	RF-10

Supplemental Restraint System	SRS-6
Supplemental restraint system - Wiring diagram	SRS-12
Suspension	MA-31
Symbols and abbreviations	GI-9 , GI-22

T

Tachometer	DI-4
TCM circuit diagram	AT-51
TCM inspection table	AT-86
Thermostat	CO-30
Three way catalyst	EM-24
Three way catalyst function (Bank 1) .	EC-343 , EC-964
Three way catalyst function (Bank 2) .	EC-343 , EC-964
Three way catalyst precautions	GI-5
Throttle body	EM-21
Throttle control motor	EC-1077
Throttle control motor relay	EC-460 , EC-1072
Throttle position sensor (TPS)	EC-195 , EC-290 , EC-297 , EC-521 , EC-528 , EC-530 , EC-835 , EC-931 , EC-1147 , EC-1149 , EC-1225
Throttle position switch	AT-246
Throwout bearing - See Clutch release bearing	CL-13
Tie-rod	PS-13
Timing chain	EM-54
Tire rotation	MA-28
TLID - Wiring diagram	BL-94
Tooth contact diff.	RFD-23
Top tether strap child restraint	SB-10
Torque converter installation	AT-330 , AT-331
Torque convertor clutch solenoid valve	AT-122 , AT-127
TPS1 - Wiring diagram	EC-299 , EC-933
TPS2 - Wiring diagram	EC-523 , EC-837
TPS3 - Wiring diagram	EC-197 , EC-292 , EC-1227
Transverse link (front)	FSU-12
TRNSCV - Wiring diagram	BL-143
Trouble diagnoses	GI-10
Trunk lid	BL-89
Trunk lid opener - See Trunk lid	BL-94
Trunk lid trim	EI-47
Trunk room trim	EI-47
Turbine revolution sensor	AT-161
Turbocharger precautions	GI-6
TURN - Wiring diagram	LT-108
Turn signal lamp	LT-101

U

Upper link (front susp.)	FSU-15
--------------------------------	------------------------

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-31 , EC-670
Valve clearance	EM-78
Valve guide	EM-92
Valve lifter	EM-75
Valve seat	EM-95

ALPHABETICAL INDEX

Valve spring	EM-96
Vanity mirror lamp	LT-157
VDC -Wiring diagram	BRC-18 , BRC-26
Vehicle security (theft warning) system	BL-97
Vehicle speed sensor (VSS)	EC-423 , EC-1039
VEHSEC - Wiring diagram	BL-106
VENT/V - Wiring diagram .	EC-371 , EC-993 , EC-1166

W

W/ANT - Wiring diagram	AV-37
WARN - Wiring diagram	DI-31
Warning chime	DI-41
Warning lamps	DI-30
Water pump	CO-26
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-7
Wheel alignment (rear)	RSU-6
Wheel balance	WT-4 , MA-27
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-76
WINDOW - Wiring diagram	GW-28
Window antenna	AV-36
Window, door	GW-91 , GW-94
Window, rear	GW-14
Windshield	GW-12
WIPER - Wiring diagram	WW-15
Wiper and washer	WW-4
Wiring Diagram (Cell code) list	PG-58
Wiring diagrams	GI-14
Withdrawal lever (clutch)	CL-13