

SECTION

ALPHABETICAL INDEX

INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

INDEX

ALPHABETICAL INDEX

A

A/C air flow	ATC-35
A/C and audio controller	ATC-116
A/C component layout	ATC-24
A/C compressor clutch removal and installation	ATC-140
A/C compressor mounting	ATC-138 , ATC-140 , ATC-143 , ATC-144 , ATC-145 , ATC-146 , ATC-147 , ATC-148 , ATC-149 , ATC-151 , ATC-152
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C control operation (auto A/C)	ATC-33
A/C diagnostic work flow (auto A/C)	ATC-102
A/C evaporator	ATC-151
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-136
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-25
A/C lubrication oil	ATC-157
A/C operational check	ATC-61
A/C self-diagnoses (auto A/C)	ATC-52 , ATC-102
A/C service data specification	ATC-157
A/C system description (auto A/C)	ATC-28
A/C trouble diagnoses (auto A/C)	ATC-38
A/C, A - Wiring diagram	ATC-44
A/T fluid checking	AT-13 , AT-51
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-13
A/T fluid temperature sensor	AT-153
A/T IND - Wiring diagram	DI-34
A/T self-diagnoses	AT-103
A/T shift lock system	AT-291
A/T shift lock system - Wiring diagram	AT-292
A/T trouble diagnoses	AT-42
A/T Wiring diagram AT - CAN	AT-106
A/T Wiring diagram AT - D/C	AT-197
A/T Wiring diagram AT - D/CF	AT-202
A/T Wiring diagram AT - E/BRE	AT-174
A/T Wiring diagram AT - FPSW1	AT-229
A/T Wiring diagram AT - FPSW3	AT-233
A/T Wiring diagram AT - FPSW5	AT-237
A/T Wiring diagram AT - FPSW6	AT-241
A/T Wiring diagram AT - FR/B	AT-187
A/T Wiring diagram AT - FR/BF	AT-192
A/T Wiring diagram AT - FTS	AT-154
A/T Wiring diagram AT - HLR/C	AT-206
A/T Wiring diagram AT - HLR/CF	AT-211
A/T Wiring diagram AT - I/C	AT-178
A/T Wiring diagram AT - I/CF	AT-183
A/T Wiring diagram AT - I/LOCK	AT-167
A/T Wiring diagram AT - LC/B	AT-216
A/T Wiring diagram AT - LC/BF	AT-221
A/T Wiring diagram AT - LPSV	AT-135
A/T Wiring diagram AT - MMSW	AT-225
A/T Wiring diagram AT - NONDTC	AT-246

A/T Wiring diagram AT - PNP/SW	AT-113
A/T Wiring diagram AT - POWER	AT-140
A/T Wiring diagram AT - STSIG	AT-109
A/T Wiring diagram AT - TCCSIG	AT-130
A/T Wiring diagram AT - TCV	AT-125
A/T Wiring diagram AT - TRSA/T	AT-160
A/T Wiring diagram AT - VSS A/T	AT-118
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-554 , EC-561 , EC-575
Accelerator pedal released position learning	EC-42
Air bag	SRS-3
Air bag disposal	SRS-51
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-16
Air cleaner filter replacement	MA-15
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-161 , EC-169
Air mix. door motor	ATC-132
Air spoiler, rear	EI-35
Ambient sensor	ATC-103 , ATC-118
Angular tightening application	EM-4
Antenna	AV-37
APPS1 - Wiring diagram	EC-556
APPS2 - Wiring diagram	EC-563
APPS3 - Wiring diagram	EC-577
ASC/SW - Wiring diagram	EC-516
ASCBOF - Wiring diagram	EC-614
ASCD	EC-649
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-630
Ashtray illumination	LT-164
AT indicator lamp	DI-34
Audio	AV-5
AUDIO - Wiring diagram	AV-10
AUT/DP - Wiring diagram	SE-16 , SE-23
Auto air conditioner - Wiring diagram	ATC-44
Auto amp	ATC-117
Auto anti-dazzling inside mirror	GW-92
Automatic amplifier	ATC-49 , ATC-63 , ATC-117
Automatic drive positioner	SE-11
Automatic transmission fluid replacement	MA-21
Axle	MA-26
Axle housing (rear)	RAX-8

B

BACK/L - Wiring diagram	LT-136
Back-up lamp	LT-136
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-14 , SC-22
BCM (Body control module)	BCS-3
Blower motor	ATC-79 , ATC-124
Blower unit	ATC-122

ALPHABETICAL INDEX

Bose speaker amp. [AV-5](#)
 Brake booster [BR-18](#)
 Brake fluid change [BR-9](#), [BR-10](#)
 Brake fluid level [MA-24](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-25](#)
 Brake lines and cables inspection [MA-24](#)
 Brake master cylinder [BR-13](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-549](#)
 BRK/SW - Wiring diagram [EC-550](#)
 Bulb specifications [LT-199](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-17](#)

C

Camshaft [EM-76](#)
 Camshaft inspection [EM-78](#)
 Camshaft position sensor (PHASE) [EC-303](#)
 CAN - Wiring diagram [EC-140](#), [LAN-10](#), [LAN-38](#)
 CAN (Controller Area Network) [BL-23](#), [BL-53](#), [BL-108](#),
[LAN-4](#), [LAN-8](#), [LAN-36](#)
 CAN communication . [EC-29](#), [EC-139](#), [AT-31](#), [AT-105](#),
[WT-9](#), [BL-23](#), [BL-53](#), [BL-108](#), [LT-43](#), [WW-10](#), [LAN-4](#),
[LAN-8](#), [LAN-36](#)
 Canister-See EVAP canister [EC-637](#)
 Center bearing assembly (propeller shaft) [PR-8](#)
 Center bearing disassembly (propeller shaft) [PR-7](#)
 CHARGE - Wiring diagram [SC-21](#)
 Charging system [SC-20](#)
 Chassis and body maintenance [MA-19](#)
 CHIME - Wiring diagram [DI-39](#)
 CIGAR - Wiring diagram [WW-40](#)
 Cigarette lighter [WW-40](#)
 Cigarette lighter illumination [LT-165](#)
 Circuit breaker [PG-15](#)
 Clock [DI-52](#)
 CLOCK - Wiring diagram [DI-52](#)
 Closed loop control [EC-26](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-58](#)
 Combination lamp, front, removal and installation
[LT-36](#)
 Combination lamp, rear, removal and installation
[LT-156](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-126](#)
 COMM - Wiring diagram [AV-65](#)
 COMPAS - Wiring diagram [DI-19](#)

Compass [DI-18](#)
 Component Location (auto A/C) [ATC-41](#)
 Compression pressure [EM-92](#)
 Compressor clutch removal and installation .. [ATC-140](#)
 Compressor special service tool [ATC-15](#)
 Condenser [ATC-149](#)
 Console box - See Instrument panel [IP-10](#)
 Control units (terminal arrangement) [PG-67](#)
 Control valve (A/T) [AT-36](#)
 Controller Area Network (CAN) [BL-23](#), [BL-53](#), [BL-108](#),
[LAN-4](#), [LAN-8](#), [LAN-36](#)
 Converter housing installation [AT-316](#)
 COOL/F - Wiring diagram [EC-470](#), [EC-482](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-22](#)
 Cooling fan motor [EC-477](#), [EC-489](#)
 Cowl top [EI-21](#)
 Cowl top cover [EI-21](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-647](#)
 Crankshaft position sensor (POS) [EC-297](#)
 Crash zone sensor [SRS-47](#)
 Cylinder head [EM-92](#)

D

D/LOCK - Wiring diagram [BL-25](#)
 Daytime light system [LT-39](#)
 Daytime running light - See Daytime light system [LT-39](#)
 Diagnosis sensor unit [SRS-50](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-14](#)
 Direct clutch solenoid valve [AT-196](#), [AT-201](#)
 Display and amp.assembly [ATC-49](#), [ATC-63](#)
 Door glass [GW-86](#), [GW-89](#)
 Door glass Fitting Adjustment(Front) [GW-88](#)
 Door glass Fitting Adjustment(Rear) [GW-91](#)
 Door lock [BL-82](#)
 Door mirror [GW-117](#)
 Door trim [EI-37](#)
 Door, front [BL-78](#), [GW-86](#)
 Door, rear [BL-78](#), [GW-89](#)
 Drive belt [EM-13](#)
 Drive pinion diff. inspection [RFD-13](#)
 Drive pinion height [RFD-17](#), [RFD-20](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-37](#)
 DTRL - Wiring diagram [LT-45](#)
 Duct and grilles [ATC-133](#)

E

ECM power supply [EC-130](#), [EC-399](#)
 ECM/PW - Wiring diagram [EC-400](#)
 ECTS - Wiring diagram [EC-183](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-410](#), [EC-412](#)
 Electrical load signal circuit [EC-612](#)

ALPHABETICAL INDEX

Electrical unit	PG-67
Electrical units location	PG-61
Electronic ignition (EI) system	EC-27
Engine control module (ECM)	EC-396
Engine control system diagram and chart	EC-22
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-181 , EC-193
Engine oil	LU-6
Engine oil filter replacement	MA-16
Engine oil precautions	GI-7
Engine oil replacement	MA-15
Engine removal	EM-104
ETC1 - Wiring diagram	EC-413
ETC2 - Wiring diagram	EC-420
ETC3 - Wiring diagram	EC-424
EVAP canister	EC-637
EVAP canister purge volume control solenoid valve ...	EC-330 , EC-499
EVAP canister vent control valve	EC-337 , EC-507
EVAP control system (small leak) diagnosis ..	EC-321 , EC-361
EVAP control system pressure sensor	EC-344 , EC-347 , EC-353
EVAP control system purge flow monitoring diagnosis	EC-316
EVAP vapor lines inspection	MA-18
Evaporative emission (EVAP) system	EC-634
Evaporator	ATC-151
Exhaust manifold	EM-25
Exhaust system	EX-3
Exhaust system inspection	EX-3 , MA-19
Expansion valve	ATC-152

F

F/FOG - Wiring diagram	LT-93
F/PUMP - Wiring diagram	EC-602
Final drive disassembly	RFD-14
Final drive pre-inspection	RFD-13
Final drive removal and installation	RFD-10
Floor trim	EI-43
Flow charts	GI-26
Fluid temperature sensor (A/T)	AT-153
Fluorescent leak detector	ATC-153
Flywheel runout(QR)	EM-137
Fog lamp, front	LT-90
Front axle	FAX-4
Front brake solenoid valve	AT-186 , AT-191
Front bumper	EI-14
Front combination lamp removal and installation	LT-36
Front disc brake	BR-22
Front door	BL-78 , BL-82 , GW-86
Front fog lamp	LT-90
Front passenger air bag	SRS-41
Front seat	SE-66
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-49
Front side air bag	SRS-43

Front suspension	FSU-6
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-272 , EC-276
Fuel cut control (at no load high engine speed) .	EC-28
Fuel filter replacement	FL-4
Fuel gauge	DI-4
Fuel level sensor	EC-379 , EC-381 , EC-383
Fuel line inspection	FL-3 , MA-15
Fuel pressure check	EC-44
Fuel pressure release	EC-44
Fuel pump	EC-601
Fuel pump and gauge	FL-4
Fuel system	FL-3
Fuel tank	FL-11
Fuel tank temperature sensor	EC-270 , EC-275
Fuel tank vacuum relief valve	EC-637
FUELB1 - Wiring diagram	EC-256 , EC-264
FUELB2 - Wiring diagram	EC-257 , EC-265
Fuse	PG-15
Fuse and fusible link box	PG-73
Fusible link	PG-15

G

Gauges	DI-4
Glass	GW-11 , GW-13 , GW-86 , GW-89
Glove box lamp	LT-163 , LT-198
GPS antenna	AV-43
Grille - See Exterior	EI-20
Ground distribution	PG-29

H

H/LAMP - Wiring diagram	LT-12
Harness connector	PG-65
Harness layout	PG-40
Hazard warning lamp	LT-108
Headlamp	LT-7
Headlamp removal and installation	LT-36
Headlining - See Roof trim	EI-45
Heated oxygen sensor 1 (bank 1)	EC-201 , EC-211 , EC-224 , EC-428 , EC-434
Heated oxygen sensor 1 (bank 2)	EC-201 , EC-211 , EC-224 , EC-428 , EC-434
Heated oxygen sensor 1 heater (bank 1)	EC-145
Heated oxygen sensor 1 heater (bank 2)	EC-145
Heated oxygen sensor 2 (bank 1)	EC-234 , EC-243 , EC-440 , EC-451
Heated oxygen sensor 2 (bank 2)	EC-234 , EC-243 , EC-440 , EC-451
Heated oxygen sensor 2 heater (bank 1)	EC-153
Heated oxygen sensor 2 heater (bank 2)	EC-153
Heated seat	SE-57
Heater and cooling unit (Heater core)	ATC-127
HFC134a (R134a) system precaution	ATC-5
HFC134a (R134a) system service procedure	ATC-136
HFC134a (R134a) system service tools	ATC-16
HFC134a system service equipment precaution	

ALPHABETICAL INDEX

ATC-12

High & low reverse clutch solenoid valve [AT-205](#),
[AT-210](#)
Hood [BL-12](#)
Hood lock system [BL-15](#)
Horn [WW-44](#)
HORN - Wiring diagram [WW-44](#)
HSEAT - Wiring diagram [SE-59](#), [SE-63](#)

I

IATS - Wiring diagram [EC-178](#)
Idle air volume learning [EC-42](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-387](#), [EC-389](#)
Ignition coil [EM-35](#), [EC-583](#)
Ignition control system [EC-583](#)
Ignition key hole illumination [LT-162](#)
Ignition timing [EC-31](#)
IGNSYS - Wiring diagram [EC-584](#)
In vehicle sensor [ATC-106](#), [ATC-119](#)
INJECT - Wiring diagram [EC-596](#)
Injector [EC-595](#)
Input clutch solenoid valve [AT-177](#), [AT-182](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-176](#), [EC-196](#)
Intake door control linkage adjustment [ATC-78](#)
Intake door motor [ATC-76](#), [ATC-125](#)
Intake manifold [EM-23](#)
Intake manifold collector [EM-18](#)
Intake sensor [ATC-111](#), [ATC-121](#)
Intake valve timing control (Bank 1) [EC-142](#)
Intake valve timing control (Bank 2) [EC-142](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-403](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-403](#)
Integrated homelink transmitter [BL-151](#)
Interior [EI-39](#)
Interior lamp [LT-166](#)
IPDM (Intelligent power distribution module engine
room) [PG-16](#)
IVCB1 - Wiring diagram [EC-404](#)
IVCB2 - Wiring diagram [EC-406](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-292](#)
KS - Wiring diagram [EC-293](#)

L

LAN system circuit [ATC-66](#)
Latch (lower anchors and tether for children) system ...
[SB-9](#)
Line pressure solenoid valve [AT-134](#)

Line pressure test (A/T) [AT-52](#)
Liquid gasket application [LU-2](#), [CO-2](#)
Location of electrical units [PG-61](#)
Low coast brake solenoid valve [AT-215](#), [AT-220](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-6](#), [ATC-25](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-157](#)
Luggage compartment trim [EI-47](#)

M

M/T oil replacement [MT-10](#)
MAFS - Wiring diagram [EC-164](#), [EC-171](#)
Magnet clutch [ATC-84](#), [ATC-140](#)
MAIN - Wiring diagram [EC-130](#)
Maintenance (engine) [MA-11](#)
Mass air flow sensor (MAFS) [EC-161](#), [EC-169](#)
Master cylinder (brake) [BR-13](#)
Master cylinder (clutch) [CL-8](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-632](#)
MIL/DL - Wiring diagram [EC-632](#)
Mirror, door [GW-117](#)
Mirror, out side [GW-117](#)
Misfire [EC-286](#)
Mode door control linkage adjustment [ATC-72](#)
Mode door motor [ATC-70](#), [ATC-131](#)
Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
Mud guard - See Exterior [EI-28](#), [EI-29](#)
Multiplex communication [ATC-114](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-135](#)
NAVI - Wiring diagram [AV-61](#)
Navigation system [AV-42](#)
NVH troubleshooting (BR) [BR-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-147](#)
O2H1B2 - Wiring diagram [EC-149](#)
O2H2B1 - Wiring diagram [EC-155](#)
O2H2B2 - Wiring diagram [EC-157](#)
O2S1B1 - Wiring diagram ... [EC-203](#), [EC-214](#), [EC-227](#)
O2S1B2 - Wiring diagram ... [EC-205](#), [EC-216](#), [EC-229](#)
O2S2B1 - Wiring diagram .. [EC-236](#), [EC-246](#), [EC-443](#),
[EC-454](#)
O2S2B2 - Wiring diagram .. [EC-238](#), [EC-248](#), [EC-445](#),
[EC-456](#)
Oil cooler (engine) [LU-10](#)
Oil filter [LU-9](#)

ALPHABETICAL INDEX

Oil pan (engine) [EM-29](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (front of final drive) [RFD-6](#)
 Oil seal replacement (side of final drive) [RFD-8](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-641](#)
 Out side mirror [GW-117](#)
 Overheat [EC-466](#), [EC-478](#)

P

P/SCKT - Wiring diagram [WW-42](#)
 Park/Neutral position switch [EC-540](#)
 Park/neutral position switch (A/T) [AT-112](#), [AT-244](#)
 Parking brake control [PB-5](#)
 Parking drum brake [PB-7](#)
 PCV (positive crankcase ventilation) [EC-647](#)
 Personal lamp [LT-161](#)
 PGC/V - Wiring diagram [EC-332](#), [EC-501](#)
 PHSB1 - Wiring diagram [EC-304](#)
 PHSB2 - Wiring diagram [EC-306](#)
 Pinion bearing preload diff. [RFD-25](#)
 Pinion gear height diff. [RFD-20](#)
 PNP/SW - Wiring diagram [EC-542](#)
 POS - Wiring diagram [EC-298](#)
 POWER - Wiring diagram [PG-4](#)
 Power door mirror [BL-19](#)
 Power seat [SE-54](#)
 Power socket [WW-42](#)
 Power steering fluid level [PS-6](#), [MA-26](#)
 Power steering gear [PS-14](#)
 Power steering hydraulic pressure [PS-25](#)
 Power steering oil pump [PS-25](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-3](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-349](#), [EC-355](#)
 Precations for Leak detection dye [ATC-14](#)
 Precautions (General) [GI-4](#)
 Pressure switch 1 [AT-191](#), [AT-228](#)
 Pressure switch 2 [AT-220](#)
 Pressure switch 3 [AT-182](#), [AT-232](#)
 Pressure switch 5 [AT-201](#), [AT-236](#)
 Pressure switch 6 [AT-210](#), [AT-240](#)
 Pressure test (A/T) [AT-52](#)
 Propeller shaft [PR-4](#)
 Propeller shaft on vehicle service [PR-4](#)
 Propeller shaft vibration [PR-4](#)
 PS/SEN - Wiring diagram [EC-392](#)

R

Radiator [CO-13](#)
 Radio - See Audio [AV-5](#)
 Rear axle [RAX-6](#)
 Rear bumper [EI-17](#)
 Rear combination lamp removal and installation

[LT-156](#)
 Rear cover packing replacement diff. [RFD-26](#)
 Rear disc brake [BR-29](#)
 Rear door [BL-78](#), [GW-89](#)
 Rear parcel shelf finisher [EI-41](#)
 Rear seat [SE-73](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-94](#)
 Refrigerant connection precaution [ATC-7](#)
 Refrigerant discharging evacuating charging [ATC-136](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-136](#)
 Refrigerant pressure sensor [EC-607](#), [ATC-90](#),
[ATC-151](#)
 Refrigeration cycle [ATC-19](#)
 Release bearing (clutch) [CL-13](#)
 Removal and installation (A/T) [AT-314](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch
 (M/T) [MT-12](#)
 Revolution sensor (A/T) [AT-117](#)
 Ring gear diff. inspection [RFD-13](#)
 Rocker cover [EM-44](#)
 Room lamp - See Interior lamp [LT-166](#)
 ROOM/L - Wiring diagram [LT-172](#)
 RP/SEN - Wiring diagram [EC-608](#)

S

Seal - See Exterior [EI-26](#)
 SEAT - Wiring diagram [SE-54](#)
 Seat belt inspection [SB-6](#)
 Seat belt pre-tensioner disposal [SRS-51](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-66](#)
 Seat, rear [SE-73](#)
 SEN/PW - Wiring diagram [EC-495](#)
 SHIFT - Wiring diagram [AT-292](#)
 Shift lock system [AT-291](#)
 Shift schedule [AT-377](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-9](#)
 Side air bag (satellite) sensor [SRS-48](#)
 Side bearing preload diff. [RFD-18](#)
 Side curtain air bag [SRS-45](#)
 Side flange installation diff. [RFD-8](#)
 Side trim [EI-39](#)
 SMJ (super multiple junction) [PG-68](#)
 Spark plug [EM-36](#)
 Spark plug replacement [MA-17](#)
 Specification value [EC-125](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-39](#)
 Spot lamp [LT-186](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-6](#)
 SRS - Wiring diagram [SRS-12](#)

ALPHABETICAL INDEX

SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (rear) [RSU-16](#)
 Stall test (A/T) [AT-51](#)
 Standardized relay [PG-70](#)
 START - Wiring diagram [SC-11](#)
 Starter [SC-9](#)
 Starting system [SC-9](#)
 Steering gear and linkage inspection [MA-25](#)
 Steering linkage [PS-14](#)
 Steering wheel and column [PS-8](#), [PS-10](#)
 Steering wheel play [PS-8](#)
 Steering wheel turning force [PS-8](#)
 Step lamp [LT-135](#)
 Stop lamp [LT-132](#)
 Stop lamp switch [EC-549](#)
 STOP/L - Wiring diagram [LT-133](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-108](#), [ATC-120](#)
 Sunroof [RF-10](#)
 Supplemental Restraint System [SRS-6](#)
 Supplemental restraint system - Wiring diagram
[SRS-12](#)
 Suspension [MA-26](#)
 Symbols and abbreviations [GI-9](#), [GI-22](#)

T

Tachometer [DI-4](#)
 TCM circuit diagram [AT-50](#)
 TCM inspection table [AT-89](#)
 Three way catalyst [EM-25](#)
 Three way catalyst function (Bank 1) [EC-311](#)
 Three way catalyst function (Bank 2) [EC-311](#)
 Three way catalyst precautions [GI-5](#)
 Throttle body [EM-22](#)
 Throttle control motor [EC-423](#)
 Throttle control motor relay [EC-418](#)
 Throttle position sensor (TPS) [EC-186](#), [EC-279](#),
[EC-490](#), [EC-492](#), [EC-568](#)
 Throttle position switch [AT-244](#)
 Throwout bearing - See Clutch release bearing [CL-13](#)
 Tie-rod [PS-14](#)
 Timing chain [EM-56](#)
 Tire rotation [MA-24](#)
 TLID - Wiring diagram [BL-95](#)
 Tooth contact diff. [RFD-23](#)
 Top tether strap child restraint [SB-10](#)
 Torque converter installation [AT-315](#), [AT-316](#)
 Torque convertor clutch solenoid valve [AT-124](#), [AT-129](#)
 TPS1 - Wiring diagram [EC-281](#)
 TPS2 - Wiring diagram [EC-188](#)
 TPS3 - Wiring diagram [EC-570](#)
 Transverse link (front) [FSU-12](#)
 TRNSCV - Wiring diagram [BL-151](#)
 Trouble diagnoses [GI-10](#)
 Trunk lid [BL-88](#)
 Trunk lid opener - See Trunk lid [BL-93](#)
 Trunk lid trim [EI-47](#)
 Trunk room trim [EI-47](#)

Turbine revolution sensor [AT-159](#)
 TURN - Wiring diagram [LT-112](#)
 Turn signal lamp [LT-108](#)
 Tyre pressure monitoring system - trouble diagnoses ..
[WT-10](#)
 Tyre pressure monitoring system - wiring diagram
[WT-10](#)

U

Upper link (front susp.) [FSU-13](#)

V

Vacuum hose (brake system) [BR-20](#)
 Vacuum hose drawing (Engine control) [EC-23](#)
 Valve clearance [EM-83](#)
 Valve guide [EM-99](#)
 Valve lifter [EM-80](#)
 Valve seat [EM-101](#)
 Valve spring [EM-102](#)
 Vanity mirror lamp [LT-158](#)
 VDC -Wiring diagram [BRC-15](#)
 Vehicle security (theft warning) system [BL-104](#)
 Vehicle speed sensor (VSS) [EC-385](#)
 VEHSEC - Wiring diagram [BL-110](#)
 VENT/V - Wiring diagram [EC-339](#), [EC-509](#)

W

W/ANT - Wiring diagram [AV-38](#)
 WARN - Wiring diagram [DI-26](#)
 Warning chime [DI-36](#)
 Warning lamps [DI-25](#)
 Washer, front [WW-4](#)
 Water pump [CO-26](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-7](#)
 Wheel alignment (rear) [RSU-5](#)
 Wheel balance [WT-5](#), [MA-22](#)
 Wheel bearing (front) [FAX-4](#)
 Wheel bearing (rear) [RAX-6](#)
 Wheel hub (front) [FAX-4](#)
 Wheel hub (rear) [RAX-6](#)
 Wheel sensor (VDC) [BRC-65](#)
 WINDOW - Wiring diagram [GW-24](#)
 Window antenna [AV-37](#)
 Window, door [GW-86](#), [GW-89](#)
 Window, rear [GW-13](#)
 Windshield [GW-11](#)
 WIPER - Wiring diagram [WW-12](#)
 Wiper, front [WW-4](#)
 Wiring Diagram (Cell code) list [PG-58](#)
 Wiring diagrams [GI-14](#)
 Withdrawal lever (clutch) [CL-13](#)
 WT-T/WARN - Wiring diagram [WT-10](#)