

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
A/C and audio controller [ATC-118](#)
A/C component layout [ATC-25](#)
A/C compressor clutch removal and installation
[ATC-141](#)
A/C compressor mounting [ATC-140](#), [ATC-141](#),
[ATC-144](#), [ATC-145](#), [ATC-146](#), [ATC-147](#), [ATC-148](#),
[ATC-150](#), [ATC-151](#), [ATC-152](#), [ATC-153](#), [ATC-154](#)
A/C compressor precaution [ATC-12](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-33](#)
A/C diagnostic work flow (auto A/C) [ATC-103](#)
A/C evaporator [ATC-153](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure
[ATC-138](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-12](#)
A/C lubricant (R134a) [ATC-26](#)
A/C lubrication oil [ATC-159](#)
A/C operational check [ATC-62](#)
A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-103](#)
A/C service data specification [ATC-159](#)
A/C system description (auto A/C) [ATC-29](#)
A/C trouble diagnoses (auto A/C) [ATC-39](#)
A/C, A - Wiring diagram [ATC-45](#)
A/T fluid checking [AT-12](#), [AT-51](#)
A/T fluid cooler cleaning [AT-14](#)
A/T fluid replacement [AT-12](#)
A/T fluid temperature sensor [AT-142](#)
A/T IND - Wiring diagram [DI-36](#)
A/T self-diagnoses [AT-107](#)
A/T shift lock system [AT-240](#)
A/T shift lock system - Wiring diagram [AT-241](#)
A/T trouble diagnoses [AT-42](#)
A/T Wiring diagram AT - CAN [AT-113](#)
A/T Wiring diagram AT - FTS [AT-143](#)
A/T Wiring diagram AT - MAIN [AT-188](#)
A/T Wiring diagram AT - MMSW [AT-177](#)
A/T Wiring diagram AT - NONDTC [AT-195](#)
A/T Wiring diagram AT - PNP/SW [AT-121](#)
A/T Wiring diagram AT - STSIG [AT-116](#)
A/T Wiring diagram AT - VSS A/T [AT-126](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-595](#),
[EC-602](#), [EC-616](#)
Accelerator pedal released position learning [EC-88](#)
AF1B1-Wiring diagram [EC-477](#), [EC-485](#), [EC-493](#),
[EC-502](#), [EC-512](#), [EC-521](#), [EC-533](#)
AF1B2-Wiring diagram [EC-479](#), [EC-487](#), [EC-495](#),
[EC-504](#), [EC-514](#), [EC-523](#), [EC-535](#)
AF1HB1-Wiring diagram [EC-394](#)
AF1HB2-Wiring diagram [EC-396](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-55](#)
Air bag precautions [SRS-3](#)

Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-10](#)
Air cleaner and air duct [EM-15](#)
Air cleaner filter replacement [MA-14](#)
Air conditioner cut control [EC-27](#)
Air flow meter - See Mass air flow sensor [EC-180](#),
[EC-189](#)
Air fuel ratio sensor 1 [EC-475](#), [EC-483](#), [EC-491](#),
[EC-500](#), [EC-509](#), [EC-518](#), [EC-530](#)
Air fuel ratio sensor 1 heater [EC-393](#)
Air mix. door motor [ATC-134](#)
Ambient sensor [ATC-104](#), [ATC-120](#)
Angular tightening application [EM-4](#)
Antenna [AV-33](#)
APPS1 - Wiring diagram [EC-597](#)
APPS2 - Wiring diagram [EC-604](#)
APPS3 - Wiring diagram [EC-618](#)
ASC/BS - Wiring diagram [EC-567](#)
ASC/SW - Wiring diagram [EC-559](#)
ASCBOF - Wiring diagram [EC-657](#)
ASCD [EC-28](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-565](#), [EC-656](#)
ASCD indicator lamp [EC-670](#)
ASCD steering switch [EC-557](#)
ASCIND - Wiring diagram [EC-671](#)
Ashtray illumination [LT-167](#)
AT indicator lamp [DI-36](#)
Audio [AV-5](#)
Auto air conditioner - Wiring diagram [ATC-45](#)
Auto amp [ATC-119](#)
Auto anti-dazzling inside mirror [GW-56](#)
Automatic amplifier [ATC-50](#), [ATC-64](#), [ATC-119](#)
Automatic transmission fluid replacement [MA-21](#)
Axle [MA-26](#)
Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-140](#)
Back-up lamp [LT-140](#)
Back-up lamp switch (M/T) [MT-12](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),
[SC-23](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-80](#), [ATC-126](#)
Blower unit [ATC-124](#)
Bose speaker amp. [AV-5](#)
Brake booster [BR-17](#)
Brake fluid change [BR-9](#), [BR-10](#)
Brake fluid level [MA-23](#)
Brake fluid level and line check [BR-9](#)
Brake hydraulic line [BR-11](#)
Brake inspection [MA-24](#)
Brake lines and cables inspection [MA-24](#)
Brake master cylinder [BR-14](#)
Brake pedal [BR-6](#)

ALPHABETICAL INDEX

Brake switch [EC-590](#)
 BRK/SW - Wiring diagram [EC-591](#)
 Bulb specifications [LT-203](#)

C

Camshaft [EM-75](#)
 Camshaft inspection [EM-77](#)
 Camshaft position sensor (PHASE) [EC-297](#)
 CAN - Wiring diagram [EC-165](#), [LAN-10](#), [LAN-35](#)
 CAN (Controller Area Network) [LAN-4](#), [LAN-8](#), [LAN-33](#)
 CAN communication . [EC-30](#), [EC-164](#), [AT-30](#), [AT-112](#),
[WT-9](#), [WW-9](#), [LAN-4](#), [LAN-8](#), [LAN-33](#)
 Canister-See EVAP canister [EC-34](#)
 Center bearing assembly (propeller shaft) [PR-9](#)
 Center bearing disassembly (propeller shaft) [PR-8](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-18](#)
 CHIME - Wiring diagram [DI-42](#)
 CIGAR - Wiring diagram [WW-39](#)
 Cigarette lighter [WW-39](#)
 Cigarette lighter illumination [LT-168](#)
 Circuit breaker [PG-16](#)
 Clock [DI-55](#)
 Closed loop control [EC-24](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-62](#)
 Combination lamp, rear, removal and installation
[LT-161](#)
 Combination meter [DI-4](#)
 COMPAS - Wiring diagram [DI-20](#)
 Compass [DI-19](#)
 Component Location (auto A/C) [ATC-42](#)
 Compression pressure [EM-92](#)
 Compressor clutch removal and installation .. [ATC-141](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-151](#)
 CONSULT-II Reference value (A/T) [AT-93](#)
 Control units (terminal arrangement) [PG-67](#)
 Control valve (A/T) [AT-36](#)
 Controller Area Network (CAN) [LAN-4](#), [LAN-8](#), [LAN-33](#)
 Converter housing installation [AT-277](#)
 COOL/F - Wiring diagram [EC-458](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-21](#)
 Cooling fan motor [EC-465](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-43](#)
 Crankshaft position sensor (POS) [EC-290](#)
 Crash zone sensor [SRS-50](#)
 Cylinder head [EM-92](#)

D

D/LOCK - Wiring diagram [BL-24](#)
 Daytime light system [LT-38](#)
 Daytime running light - See Daytime light system [LT-38](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[EC-47](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-99](#)
 Direct clutch solenoid valve [AT-164](#), [AT-166](#)
 Display and amp.assembly [ATC-50](#), [ATC-64](#)
 Door glass [GW-52](#)
 Door glass Fitting Adjustment(Front) [GW-55](#)
 Door mirror [GW-82](#), [GW-83](#)
 Door trim [EI-29](#)
 Door, front [BL-76](#), [GW-52](#)
 Door, rear [BL-76](#)
 Drive belt [EM-13](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-41](#)
 DTRL - Wiring diagram [LT-44](#)
 Duct and grilles [ATC-135](#)

E

ECM power supply [EC-155](#), [EC-400](#)
 ECM/PW - Wiring diagram [EC-401](#)
 ECTS - Wiring diagram [EC-202](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-411](#), [EC-413](#)
 Electrical load signal circuit [EC-655](#)
 Electrical unit [PG-67](#)
 Electrical units location [PG-61](#)
 Electronic ignition (EI) system [EC-25](#)
 Engine control circuit diagram [EC-113](#)
 Engine control component parts location [EC-106](#)
 Engine control module (ECM) [EC-390](#)
 Engine control system diagram [EC-22](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-200](#),
[EC-212](#)
 Engine fail-safe system [EC-101](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-15](#)
 Engine oil precautions [GI-7](#)
 ETC1 - Wiring diagram [EC-414](#)
 ETC2 - Wiring diagram [EC-421](#)
 ETC3 - Wiring diagram [EC-425](#)
 EVAP canister [EC-34](#)
 EVAP canister purge volume control solenoid valve
[EC-325](#), [EC-542](#)
 EVAP canister vent control valve [EC-332](#), [EC-550](#)
 EVAP control system (small leak) diagnosis ... [EC-317](#)
 EVAP control system pressure sensor [EC-339](#),
[EC-342](#), [EC-348](#)
 EVAP control system purge flow monitoring diagnosis
[EC-312](#)
 EVAP vapor lines inspection [MA-17](#)

ALPHABETICAL INDEX

Evaporative emission (EVAP) system [EC-31](#)
 Evaporator [ATC-153](#)
 Exhaust manifold [EM-24](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-18](#)
 Expansion valve [ATC-154](#)

F

F/FOG - Wiring diagram [LT-98](#)
 F/PUMP - Wiring diagram [EC-645](#)
 Final drive pre-inspection [RFD-17](#), [RFD-37](#)
 Floor trim [EI-34](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-142](#)
 Fluorescent leak detector [ATC-155](#)
 Flywheel runout(QR) [EM-137](#)
 Fog lamp, front [LT-95](#)
 Freeze frame data [EC-51](#)
 Front brake solenoid valve [AT-160](#), [AT-162](#)
 Front disc brake [BR-21](#)
 Front door [BL-76](#), [GW-52](#)
 Front fog lamp [LT-95](#)
 Front passenger air bag [SRS-45](#)
 Front seat [SE-63](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
 Front side air bag [SRS-46](#)
 Front suspension [FSU-5](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTTS - Wiring diagram [EC-261](#), [EC-265](#)
 Fuel cut control (at no load high engine speed) . [EC-26](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-240](#), [EC-250](#)
 Fuel injection system (Bank 2) [EC-240](#), [EC-250](#)
 Fuel injector [EC-637](#)
 Fuel level sensor [EC-373](#), [EC-375](#), [EC-377](#)
 Fuel line inspection [FL-4](#), [MA-14](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-91](#)
 Fuel pressure release [EC-91](#)
 Fuel pump [EC-644](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-259](#), [EC-264](#)
 Fuel tank vacuum relief valve [EC-34](#)
 FUELB1 - Wiring diagram [EC-242](#), [EC-252](#)
 FUELB2 - Wiring diagram [EC-243](#), [EC-253](#)
 Fuse [PG-16](#)
 Fuse and fusible link box [PG-73](#)
 Fusible link [PG-16](#)

G

Gauges [DI-4](#)
 Generic scan tool (GST) [EC-136](#)

Glass [GW-11](#), [GW-13](#), [GW-52](#)
 Glove box lamp [LT-166](#), [LT-202](#)
 GPS antenna [AV-38](#)
 Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-11](#)
 Harness connector [PG-65](#)
 Harness layout [PG-40](#)
 Hazard warning lamp [LT-113](#)
 Headlining - See Roof trim [EI-36](#)
 Heated oxygen sensor 2 (bank 1) [EC-220](#), [EC-229](#),
[EC-429](#), [EC-440](#)
 Heated oxygen sensor 2 (bank 2) [EC-220](#), [EC-229](#),
[EC-429](#), [EC-440](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-172](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-172](#)
 Heated seat [SE-55](#)
 Heater and cooling unit (Heater core) [ATC-129](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-138](#)
 HFC134a (R134a) system service tools [ATC-17](#)
 HFC134a system service equipment precaution
[ATC-12](#)
 High & low reverse clutch solenoid valve [AT-168](#),
[AT-170](#)
 Hood [BL-12](#)
 Hood lock system [BL-15](#)
 Horn [WW-43](#)
 HORN - Wiring diagram [WW-43](#)
 How to erase DTC for OBD system [EC-60](#)
 HSEAT - Wiring diagram [SE-57](#)

I

IATS - Wiring diagram [EC-197](#)
 Idle air volume learning [EC-89](#)
 Idle mixture ratio [EC-77](#)
 Idle speed [EC-76](#)
 Idle speed control (ISC) [EC-381](#), [EC-383](#)
 Ignition coil [EM-34](#), [EC-624](#)
 Ignition control system [EC-624](#)
 Ignition key hole illumination [LT-165](#)
 Ignition timing [EC-76](#)
 IGNSYS - Wiring diagram [EC-625](#)
 In vehicle sensor [ATC-108](#), [ATC-121](#)
 INJECT - Wiring diagram [EC-638](#)
 Injector [EC-637](#)
 Input clutch solenoid valve [AT-156](#), [AT-158](#)
 Intake air temperature sensor [EC-196](#), [EC-215](#)
 Intake door control linkage adjustment [ATC-79](#)
 Intake door motor [ATC-77](#), [ATC-127](#)
 Intake manifold [EM-22](#)
 Intake manifold collector [EM-17](#)
 Intake sensor [ATC-114](#), [ATC-123](#)
 Intake valve timing control (Bank 1) [EC-167](#)
 Intake valve timing control (Bank 2) [EC-167](#)
 Intake valve timing control solenoid valve (Bank 1)

ALPHABETICAL INDEX

EC-404

Intake valve timing control solenoid valve (Bank 2)

EC-404

Integrated homelink transmitter [BL-133](#)

Interior [EI-31](#)

Interior lamp [LT-169](#)

IPDM (Intelligent power distribution module engine room) [PG-17](#)

IVCB1 - Wiring diagram [EC-405](#)

IVCB2 - Wiring diagram [EC-407](#)

IVIS (Infiniti vehicle immobilizer system) precautions ...

GI-3

K

KEYLES - Wiring diagram [BL-50](#)

Knock sensor (KS) [EC-285](#)

KS - Wiring diagram [EC-286](#)

L

LAN system circuit [ATC-67](#)

Latch (lower anchors and tether for children) system ...

SB-10

Line pressure solenoid valve [AT-135](#)

Line pressure test (A/T) [AT-53](#)

Liquid gasket application [LU-2](#), [CO-2](#)

Location of electrical units [PG-61](#)

Low coast brake solenoid valve [AT-172](#), [AT-174](#)

Low tire pressure warning system [WT-7](#)

Lubricant (R134a) A/C [ATC-6](#), [ATC-26](#)

Lubrication circuit (engine) [LU-4](#)

Lubrication oil A/C [ATC-159](#)

Luggage compartment trim [EI-38](#)

M

M/T oil replacement [MT-10](#)

MAFS - Wiring diagram [EC-183](#), [EC-191](#)

Magnet clutch [ATC-86](#), [ATC-141](#)

MAIN - Wiring diagram [EC-155](#)

Maintenance (engine) [MA-11](#)

Malfunction indicator lamp (MIL) [EC-62](#)

Manual transmission oil replacement ... [MA-18](#), [MA-19](#)

Mass air flow sensor (MAFS) [EC-180](#), [EC-189](#)

Master cylinder (brake) [BR-14](#)

Master cylinder (clutch) [CL-8](#)

Meter [DI-4](#)

METER - Wiring diagram [DI-8](#)

MIL data link connectors circuit [EC-673](#)

MIL/DL - Wiring diagram [EC-673](#)

Mirror, door [GW-82](#), [GW-83](#)

Mirror, out side [GW-82](#), [GW-83](#)

Misfire [EC-275](#)

Mode door control linkage adjustment [ATC-73](#)

Mode door motor [ATC-71](#), [ATC-133](#)

Multiplex communication [ATC-116](#)

Multiport fuel injection (MFI) system [EC-23](#)

Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-118](#)

NAVI - Wiring diagram [AV-54](#)

Navigation system [AV-37](#)

NVH troubleshooting (BR) [BR-5](#)

NVH troubleshooting (Final drive) [RFD-7](#)

NVH troubleshooting (Propeller shaft) [PR-3](#)

NVIS (Nissan vehicle immobilizer system) precautions

GI-3

O

O2H2B1 - Wiring diagram [EC-174](#)

O2H2B2 - Wiring diagram [EC-176](#)

O2S2B1 - Wiring diagram .. [EC-222](#), [EC-232](#), [EC-432](#),

EC-443

O2S2B2 - Wiring diagram .. [EC-224](#), [EC-234](#), [EC-434](#),

EC-445

Oil cooler (engine) [LU-10](#)

Oil filter [LU-9](#)

Oil pan (engine) [EM-28](#)

Oil pressure (engine) [LU-7](#)

Oil pump (A/T) [AT-302](#)

Oil pump (engine) [LU-12](#)

Oil pump regulator valve (engine) [LU-12](#)

Oil seal replacement (front of final drive) [RFD-10](#)

Oil seal replacement (side of final drive) [RFD-12](#)

On board diagnostic system [EC-46](#)

Operating cylinder (clutch) [CL-11](#)

ORVR (On-board Refueling Vapor Recovery) ... [EC-38](#)

Out side mirror [GW-82](#), [GW-83](#)

Overheat [EC-454](#)

P

P/SCKT - Wiring diagram [WW-41](#)

Park/Neutral position switch [EC-582](#)

Park/neutral position switch (A/T) [AT-120](#)

Parking brake control [PB-5](#)

Parking drum brake [PB-7](#)

PCV (positive crankcase ventilation) [EC-43](#)

PGC/V - Wiring diagram [EC-327](#), [EC-544](#)

PHSB1 - Wiring diagram [EC-299](#)

PHSB2 - Wiring diagram [EC-301](#)

PNP/SW - Wiring diagram [EC-584](#), [EC-586](#)

POS - Wiring diagram [EC-292](#)

POWER - Wiring diagram [PG-5](#)

Power door lock [BL-20](#)

Power seat [SE-13](#)

Power socket [WW-41](#)

Power steering fluid level [PS-7](#), [MA-25](#)

Power steering gear [PS-17](#)

Power steering hydraulic pressure [PS-29](#)

Power steering oil pump [PS-29](#)

Power steering pressure (PSP) sensor [EC-385](#)

Power steering system bleeding [PS-7](#)

Power supply routing [PG-4](#)

Power window [GW-17](#)

ALPHABETICAL INDEX

PRE/SE - Wiring diagram [EC-344](#), [EC-350](#)
 Precations for Leak detection dye [ATC-15](#)
 Precautions (General) [GI-4](#)
 Pressure switch 1 [AT-180](#)
 Pressure switch 2 [AT-174](#)
 Pressure switch 3 [AT-182](#)
 Pressure switch 5 [AT-184](#)
 Pressure switch 6 [AT-186](#)
 Pressure test (A/T) [AT-53](#)
 Propeller shaft [PR-4](#)
 Propeller shaft on vehicle service [PR-4](#)
 Propeller shaft vibration [PR-4](#)
 PS/SEN - Wiring diagram [EC-386](#)

R

Radiator [CO-13](#)
 Radio - See Audio [AV-5](#)
 Rear axle [RAX-6](#)
 Rear combination lamp removal and installation
[LT-161](#)
 Rear disc brake [BR-28](#)
 Rear parcel shelf finisher [EI-33](#)
 Rear seat [SE-69](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-58](#)
 Refrigerant connection precaution [ATC-7](#)
 Refrigerant discharging evacuating charging [ATC-138](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-138](#)
 Refrigerant pressure sensor [EC-650](#), [ATC-92](#),
[ATC-152](#)
 Refrigeration cycle [ATC-20](#)
 Release bearing (clutch) [CL-13](#)
 Remote keyless entry system [BL-45](#)
 Removal and installation (A/T) [AT-274](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch
 (M/T) [MT-12](#)
 Revolution sensor (A/T) [AT-124](#), [AT-268](#)
 Rocker cover [EM-43](#)
 Room lamp - See Interior lamp [LT-169](#)
 ROOM/L - Wiring diagram [LT-174](#)
 RP/SEN - Wiring diagram [EC-651](#)

S

SAE J1979 - Service \$01 - 09 [EC-46](#)
 SEAT - Wiring diagram [SE-16](#)
 Seat belt inspection [SB-7](#)
 Seat belt pre-tensioner disposal [SRS-55](#)
 Seat belt, front [SB-4](#)
 Seat, front [SE-63](#)
 Seat, rear [SE-69](#)
 Self-diagnostic results [EC-65](#)
 SEN/PW - Wiring diagram [EC-471](#)
 SHIFT - Wiring diagram [AT-241](#)
 Shift lock system [AT-240](#)
 Shift schedule [AT-343](#)

Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-9](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-31](#)
 SMJ (super multiple junction) [PG-68](#)
 Spark plug [EM-35](#)
 Spark plug replacement [MA-16](#)
 Specification value [EC-144](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-43](#)
 Spot lamp [LT-188](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-7](#)
 SRS Trouble diagnoses [SRS-10](#)
 Stabilizer bar (rear) [RSU-16](#)
 Stall test (A/T) [AT-51](#)
 Standardized relay [PG-70](#)
 START - Wiring diagram [SC-12](#)
 Starter [SC-10](#)
 Starting system [SC-10](#)
 Steering gear and linkage inspection [MA-25](#)
 Steering linkage [PS-17](#)
 Steering wheel and column [PS-9](#), [PS-11](#)
 Steering wheel play [PS-9](#)
 Steering wheel turning force [PS-9](#)
 Step lamp [LT-139](#)
 Stop lamp [LT-136](#)
 Stop lamp switch [EC-590](#)
 STOP/L - Wiring diagram [LT-136](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-111](#), [ATC-122](#)
 Sunroof [RF-10](#), [RF-25](#)
 Supplemental Restraint System [SRS-7](#)
 Suspension [MA-26](#)
 Symbols and abbreviations [GI-9](#), [GI-22](#)
 Symptom matrix chart [EC-102](#)
 System readiness test (SRT) code [EC-52](#)

T

Tachometer [DI-4](#)
 TCM circuit diagram [AT-50](#)
 TCM inspection table [AT-92](#)
 Three way catalyst [EM-24](#)
 Three way catalyst function (Bank 1) [EC-306](#)
 Three way catalyst function (Bank 2) [EC-306](#)
 Three way catalyst precautions [GI-5](#)
 Throttle body [EM-21](#)
 Throttle control motor [EC-424](#)
 Throttle control motor relay [EC-419](#)
 Throttle position sensor (TPS) [EC-205](#), [EC-268](#),
[EC-466](#), [EC-468](#), [EC-609](#)
 Throttle valve closed position learning [EC-88](#)
 Throwout bearing - See Clutch release bearing [CL-13](#)
 Tie-rod [PS-17](#)
 Timing chain [EM-55](#)
 TLID - Wiring diagram [BL-88](#)
 Top tether strap child restraint [SB-11](#)

ALPHABETICAL INDEX

Torque converter installation	AT-276	Window, door	GW-52
Torque convertor clutch solenoid valve	AT-131 , AT-133	Window, rear	GW-13
TPS1 - Wiring diagram	EC-270	Windshield	GW-11
TPS2 - Wiring diagram	EC-207	WIPER - Wiring diagram	WW-11
TPS3 - Wiring diagram	EC-611	Wiper, front	WW-4
Transverse link (front)	FSU-13	Wiring Diagram (Cell code) list	PG-58
TRNSCV - Wiring diagram	BL-133	Wiring diagrams	GI-14
Trouble diagnoses	GI-10	Withdrawal lever (clutch)	CL-13
Trunk lid	BL-83	WT-T/WARN - Wiring diagram	WT-10
Trunk lid opener - See Trunk lid	BL-88		
Trunk lid trim	EI-38		
Trunk room trim	EI-38		
Turbine revolution sensor	AT-147		
TURN - Wiring diagram	LT-117		
Turn signal lamp	LT-113		
Two trip detection logic	EC-46		
Tyre pressure monitoring system - trouble diagnoses ..			
WT-10			
Tyre pressure monitoring system - wiring diagram			
WT-10			

U

Upper link (front susp.)	FSU-14
--------------------------------	------------------------

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-112
Valve clearance	EM-84
Valve guide	EM-99
Valve lifter	EM-79
Valve seat	EM-101
Valve spring	EM-102
Vanity mirror lamp	LT-162
VDC -Wiring diagram	BRC-15
Vehicle security (theft warning) system	BL-90
Vehicle speed sensor (VSS)	EC-379
VEHSEC - Wiring diagram	BL-95
VENT/V - Wiring diagram	EC-334 , EC-552
VIN registration	EC-88

W

W/A NT - Wiring diagram	AV-34
WARN - Wiring diagram	DI-27
Warning chime	DI-38
Warning lamps	DI-26
Washer, front	WW-4
Water pump	CO-23
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-4 , MA-22
Wheel bearing (rear)	RAX-6
Wheel hub (rear)	RAX-6
Wheel sensor (VDC)	BRC-66
WINDOW - Wiring diagram	GW-23
Window antenna	AV-33