

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
 A/C and audio controller [ATC-119](#)
 A/C component layout [ATC-25](#)
 A/C compressor clutch removal and installation
[ATC-142](#)
 A/C compressor mounting [ATC-141](#), [ATC-142](#),
[ATC-145](#), [ATC-146](#), [ATC-147](#), [ATC-148](#), [ATC-149](#),
[ATC-151](#), [ATC-152](#), [ATC-153](#), [ATC-154](#), [ATC-155](#)
 A/C compressor precaution [ATC-12](#)
 A/C compressor special service tool [ATC-16](#)
 A/C control operation (auto A/C) [ATC-33](#)
 A/C diagnostic work flow (auto A/C) [ATC-105](#)
 A/C evaporator [ATC-154](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#)
 A/C HFC134a (R134a) system service procedure
[ATC-139](#)
 A/C HFC134a (R134a) system service tools ... [ATC-17](#)
 A/C HFC134a system service equipment precaution ...
[ATC-12](#)
 A/C lubricant (R134a) [ATC-26](#)
 A/C lubrication oil [ATC-160](#)
 A/C operational check [ATC-62](#)
 A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-105](#)
 A/C service data specification [ATC-160](#)
 A/C system description (auto A/C) [ATC-29](#)
 A/C trouble diagnoses (auto A/C) [ATC-39](#)
 A/C, A - Wiring diagram [ATC-45](#)
 A/T fluid checking [AT-12](#), [AT-50](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#)
 A/T fluid temperature sensor [AT-131](#)
 A/T IND - Wiring diagram [DI-34](#)
 A/T self-diagnoses [AT-99](#)
 A/T shift lock system [AT-229](#)
 A/T shift lock system - Wiring diagram [AT-230](#)
 A/T trouble diagnoses [AT-41](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor [EC-578](#),
[EC-585](#), [EC-601](#)
 Accelerator pedal released position learning [EC-42](#)
 AF1B1-Wiring diagram [EC-459](#), [EC-467](#), [EC-475](#),
[EC-484](#), [EC-494](#), [EC-503](#), [EC-515](#)
 AF1B2-Wiring diagram [EC-461](#), [EC-469](#), [EC-477](#),
[EC-486](#), [EC-496](#), [EC-505](#), [EC-517](#)
 AF1HB1-Wiring diagram [EC-370](#)
 AF1HB2-Wiring diagram [EC-372](#)
 Air bag [SRS-3](#)
 Air bag precautions [SRS-3](#)
 Air bleeding (hydraulic clutch) [CL-7](#)
 Air bleeding for brake system [BR-10](#)
 Air cleaner and air duct [EM-17](#)
 Air cleaner filter replacement [MA-17](#)
 Air conditioner cut control [EC-28](#)
 Air flow meter - See Mass air flow sensor [EC-153](#),
[EC-161](#)
 Air fuel ratio sensor 1 [EC-457](#), [EC-465](#), [EC-473](#),
[EC-482](#), [EC-491](#), [EC-500](#), [EC-512](#)

Air fuel ratio sensor 1 heater [EC-369](#)
 Air mix. door motor [ATC-135](#)
 Air spoiler, rear [EI-35](#)
 Ambient sensor [ATC-106](#), [ATC-121](#)
 Angular tightening application [EM-5](#)
 Antenna [AV-38](#)
 APPS1 - Wiring diagram [EC-580](#)
 APPS2 - Wiring diagram [EC-587](#)
 APPS3 - Wiring diagram [EC-603](#)
 ASC/BS - Wiring diagram [EC-549](#)
 ASC/SW - Wiring diagram [EC-541](#)
 ASCBOF - Wiring diagram [EC-640](#)
 ASCD [EC-679](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCIND - Wiring diagram [EC-655](#)
 Ashtray illumination [LT-162](#)
 AT indicator lamp [DI-34](#)
 Audio [AV-5](#)
 AUDIO - Wiring diagram [AV-10](#)
 AUT/DP - Wiring diagram [SE-16](#), [SE-23](#)
 Auto air conditioner - Wiring diagram [ATC-45](#)
 Auto amp [ATC-120](#)
 Auto anti-dazzling inside mirror [GW-94](#)
 Automatic amplifier [ATC-50](#), [ATC-64](#), [ATC-120](#)
 Automatic drive positioner [SE-11](#)
 Automatic transmission fluid replacement [MA-23](#),
[MA-24](#)
 AWD - Wiring diagram [TF-17](#)
 Axle [MA-29](#)
 Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-135](#)
 Back-up lamp [LT-135](#)
 Back-up lamp switch (M/T) [MT-12](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-14](#),
[SC-25](#)
 BCM (Body control module) [BCS-3](#)
 Blower motor [ATC-80](#), [ATC-127](#)
 Blower unit [ATC-125](#)
 Bose speaker amp. [AV-5](#)
 Brake booster [BR-18](#)
 Brake fluid change [BR-9](#), [BR-10](#)
 Brake fluid level [MA-27](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-27](#)
 Brake lines and cables inspection [MA-27](#)
 Brake master cylinder [BR-13](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-573](#)
 BRK/SW - Wiring diagram [EC-574](#)
 Bulb specifications [LT-197](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-17](#)

ALPHABETICAL INDEX

C

Camshaft [EM-84](#)
 Camshaft inspection [EM-86](#)
 Camshaft position sensor (PHASE) [EC-270](#)
 CAN - Wiring diagram [EC-140](#), [AT-102](#), [LAN-13](#),
[LAN-41](#), [LAN-66](#)
 CAN (Controller Area Network) [BL-22](#), [BL-54](#), [BL-110](#),
[LAN-5](#), [LAN-11](#), [LAN-39](#), [LAN-64](#)
 CAN communication . [EC-29](#), [EC-139](#), [AT-31](#), [AT-101](#),
[TF-13](#), [TF-33](#), [WT-9](#), [BL-22](#), [BL-54](#), [BL-110](#), [LT-42](#),
[WW-10](#), [LAN-5](#), [LAN-11](#), [LAN-39](#), [LAN-64](#)
 Canister-See EVAP canister [EC-667](#)
 Center bearing assembly (propeller shaft) [PR-8](#)
 Center bearing disassembly (propeller shaft) [PR-7](#)
 CHARGE - Wiring diagram [SC-23](#)
 Charging system [SC-22](#)
 Chassis and body maintenance [MA-21](#)
 CHIME - Wiring diagram [DI-39](#)
 CIGAR - Wiring diagram [WW-41](#)
 Cigarette lighter [WW-41](#)
 Cigarette lighter illumination [LT-163](#)
 Circuit breaker [PG-15](#)
 Clock [DI-52](#)
 CLOCK - Wiring diagram [DI-52](#)
 Closed loop control [EC-26](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#), [FSU-27](#)
 Collision diagnosis [SRS-48](#)
 Combination lamp, front, removal and installation
[LT-35](#)
 Combination lamp, rear, removal and installation
[LT-154](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-125](#)
 COMM - Wiring diagram [AV-66](#)
 COMPAS - Wiring diagram [DI-19](#)
 Compass [DI-18](#)
 Component Location (auto A/C) [ATC-42](#)
 Compression pressure [EM-100](#)
 Compressor clutch removal and installation .. [ATC-142](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-152](#)
 Console box - See Instrument panel [IP-10](#)
 Control units (terminal arrangement) [PG-70](#)
 Control valve (A/T) [AT-36](#)
 Controller Area Network (CAN) [BL-22](#), [BL-54](#), [BL-110](#),
[LAN-5](#), [LAN-11](#), [LAN-39](#), [LAN-64](#)
 Converter housing installation [AT-266](#)
 COOL/F - Wiring diagram [EC-440](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-21](#)

Cooling fan motor [EC-447](#)
 Cowl top [EI-21](#)
 Cowl top cover [EI-21](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-677](#)
 Crankshaft position sensor (POS) [EC-262](#)
 Crash zone sensor [SRS-44](#)
 Cylinder head [EM-100](#)

D

D/LOCK - Wiring diagram [BL-24](#)
 Daytime light system [LT-38](#)
 Daytime running light - See Daytime light system [LT-38](#)
 Diagnosis sensor unit [SRS-47](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-13](#)
 Differential carrier disassembly [RFD-18](#)
 Direct clutch solenoid valve [AT-153](#), [AT-155](#)
 Display and amp.assembly [ATC-50](#), [ATC-64](#)
 Door glass [GW-88](#), [GW-91](#)
 Door glass Fitting Adjustment(Front) [GW-90](#)
 Door glass Fitting Adjustment(Rear) [GW-93](#)
 Door lock [BL-84](#)
 Door mirror [GW-118](#)
 Door trim [EI-37](#)
 Door, front [BL-80](#), [GW-88](#)
 Door, rear [BL-80](#), [GW-91](#)
 Drive belt [EM-14](#)
 Drive pinion diff. inspection [RFD-16](#)
 Drive pinion height [RFD-23](#), [RFD-26](#)
 Drive shaft [MA-29](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-36](#)
 DTRL - Wiring diagram [LT-44](#)
 Duct and grilles [ATC-136](#)

E

ECM power supply [EC-131](#), [EC-376](#)
 ECM/PW - Wiring diagram [EC-377](#)
 ECTS - Wiring diagram [EC-175](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-387](#), [EC-389](#)
 Electrical load signal circuit [EC-638](#)
 Electrical unit [PG-70](#)
 Electrical units location [PG-64](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control module (ECM) [EC-366](#)
 Engine control system diagram and chart [EC-22](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-173](#),
[EC-187](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-112](#)
 ETC1 - Wiring diagram [EC-390](#)

ALPHABETICAL INDEX

ETC2 - Wiring diagram [EC-399](#)
 ETC3 - Wiring diagram [EC-405](#)
 EVAP canister [EC-667](#)
 EVAP canister purge volume control solenoid valve
[EC-300](#), [EC-524](#)
 EVAP canister vent control valve [EC-307](#), [EC-532](#)
 EVAP control system (small leak) diagnosis .. [EC-291](#),
[EC-331](#)
 EVAP control system pressure sensor [EC-314](#),
[EC-317](#), [EC-323](#)
 EVAP control system purge flow monitoring diagnosis
[EC-286](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-664](#)
 Evaporator [ATC-154](#)
 Exhaust manifold [EM-26](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-21](#)
 Expansion valve [ATC-155](#)

F

F/FOG - Wiring diagram [LT-92](#)
 F/PUMP - Wiring diagram [EC-628](#)
 Final drive pre-inspection [RFD-16](#)
 Final drive removal and installation .. [RFD-11](#), [FFD-10](#)
 Floor trim [EI-43](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-131](#)
 Fluorescent leak detector [ATC-156](#)
 Flywheel runout(QR) [EM-149](#)
 Fog lamp, front [LT-89](#)
 Front axle [FAX-4](#), [FAX-12](#)
 Front brake solenoid valve [AT-149](#), [AT-151](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-35](#)
 Front disc brake [BR-22](#)
 Front door [BL-80](#), [BL-84](#), [GW-88](#)
 Front fog lamp [LT-89](#)
 Front passenger air bag [SRS-40](#)
 Front seat [SE-64](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-46](#)
 Front suspension [FSU-6](#), [FSU-23](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-132](#)
 FTTS - Wiring diagram [EC-234](#), [EC-238](#)
 Fuel cut control (at no load high engine speed) . [EC-28](#)
 Fuel filter replacement [FL-4](#)
 Fuel gauge [DI-4](#)
 Fuel level sensor [EC-349](#), [EC-351](#), [EC-353](#)
 Fuel line inspection [FL-3](#), [MA-17](#)
 Fuel pressure check [EC-45](#)
 Fuel pressure release [EC-45](#)
 Fuel pump [EC-627](#)
 Fuel pump and gauge [FL-4](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-11](#)

Fuel tank temperature sensor [EC-232](#), [EC-237](#)
 Fuel tank vacuum relief valve [EC-667](#)
 FUELB1 - Wiring diagram [EC-217](#), [EC-226](#)
 FUELB2 - Wiring diagram [EC-218](#), [EC-227](#)
 Fuse [PG-15](#)
 Fuse and fusible link box [PG-76](#)
 Fusible link [PG-15](#)

G

Gauges [DI-4](#)
 Glass [GW-13](#), [GW-15](#), [GW-88](#), [GW-91](#)
 Glove box lamp [LT-161](#), [LT-196](#)
 Grille - See Exterior [EI-20](#)
 Ground distribution [PG-29](#)

H

H/LAMP - Wiring diagram [LT-12](#)
 Harness connector [PG-68](#)
 Harness layout [PG-40](#)
 Hazard warning lamp [LT-107](#)
 Headlamp [LT-7](#)
 Headlamp removal and installation [LT-35](#)
 Headlining - See Roof trim [EI-45](#)
 Heated oxygen sensor 2 (bank 1) [EC-195](#), [EC-204](#),
[EC-411](#), [EC-422](#)
 Heated oxygen sensor 2 (bank 2) [EC-195](#), [EC-204](#),
[EC-411](#), [EC-422](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-145](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-145](#)
 Heated seat [SE-56](#)
 Heater and cooling unit (Heater core) [ATC-130](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-139](#)
 HFC134a (R134a) system service tools [ATC-17](#)
 HFC134a system service equipment precaution
[ATC-12](#)
 High and low reverse clutch solenoid valve [AT-157](#),
[AT-159](#)
 Hood [BL-12](#)
 Hood lock system [BL-15](#)
 Horn [WW-45](#)
 HORN - Wiring diagram [WW-45](#)
 HSEAT - Wiring diagram [SE-58](#), [SE-61](#)

I

IATS - Wiring diagram [EC-170](#)
 Idle air volume learning [EC-43](#)
 Idle mixture ratio [EC-31](#)
 Idle speed [EC-31](#)
 Idle speed control (ISC) [EC-357](#), [EC-359](#)
 Ignition coil [EM-43](#), [EC-609](#)
 Ignition control system [EC-609](#)
 Ignition key hole illumination [LT-160](#)
 Ignition timing [EC-31](#)
 IGNSYS - Wiring diagram [EC-610](#)
 In vehicle sensor [ATC-109](#), [ATC-122](#)

ALPHABETICAL INDEX

INJECT - Wiring diagram [EC-622](#)
 Injector [EC-621](#)
 Input clutch solenoid valve [AT-145](#), [AT-147](#)
 Instrument panel [JP-10](#)
 Intake air temperature sensor [EC-168](#), [EC-190](#)
 Intake door control linkage adjustment [ATC-79](#)
 Intake door motor [ATC-77](#), [ATC-128](#)
 Intake manifold [EM-24](#)
 Intake manifold collector [EM-19](#)
 Intake sensor [ATC-115](#), [ATC-124](#)
 Intake valve timing control (Bank 1) [EC-142](#)
 Intake valve timing control (Bank 2) [EC-142](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-380](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-380](#)
 Integrated homelink transmitter [BL-154](#)
 Interior [EI-39](#)
 Interior lamp [LT-164](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-16](#)
 IVCB1 - Wiring diagram [EC-381](#)
 IVCB2 - Wiring diagram [EC-383](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-257](#)
 KS - Wiring diagram [EC-258](#)

L

LAN system circuit [ATC-67](#)
 Latch (lower anchors and tether for children) system ...
[SB-8](#)
 Line pressure solenoid valve [AT-124](#)
 Line pressure test (A/T) [AT-51](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 Location of electrical units [PG-64](#)
 Low coast brake solenoid valve [AT-161](#), [AT-163](#)
 Low tire pressure warning system [WT-7](#)
 Lubricant (R134a) A/C [ATC-6](#), [ATC-26](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-160](#)
 Luggage compartment trim [EI-47](#)

M

M/T oil replacement [MT-10](#)
 MAFS - Wiring diagram [EC-156](#), [EC-163](#)
 Magnet clutch [ATC-86](#), [ATC-142](#)
 MAIN - Wiring diagram [EC-131](#), [AT-178](#)
 Maintenance (engine) [MA-13](#)
 Major overhaul (Final drive) [RFD-18](#)
 Major overhaul (Transfer) [TF-50](#)
 Mass air flow sensor (MAFS) [EC-153](#), [EC-161](#)
 Master cylinder (brake) [BR-13](#)
 Master cylinder (clutch) [CL-8](#)

Meter [DI-4](#)
 METER - Wiring diagram [DI-8](#)
 MIL data link connectors circuit [EC-662](#)
 MIL/DL - Wiring diagram [EC-662](#)
 Mirror, door [GW-118](#)
 Mirror, out side [GW-118](#)
 Misfire [EC-250](#)
 MMSW - Wiring diagram [AT-166](#)
 Mode door control linkage adjustment [ATC-73](#)
 Mode door motor [ATC-71](#), [ATC-134](#)
 Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
 Mud guard - See Exterior [EI-28](#), [EI-29](#)
 Multiplex communication [ATC-117](#)
 Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-138](#)
 NAVI - Wiring diagram [AV-62](#)
 Navigation system [AV-43](#)
 NONDTC - Wiring diagram [AT-184](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (Transfer) [TF-8](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-147](#)
 O2H2B2 - Wiring diagram [EC-149](#)
 O2S2B1 - Wiring diagram .. [EC-197](#), [EC-207](#), [EC-414](#),
[EC-425](#)
 O2S2B2 - Wiring diagram .. [EC-199](#), [EC-209](#), [EC-416](#),
[EC-427](#)
 Oil cooler (engine) [LU-14](#)
 Oil filter [LU-10](#)
 Oil pan (engine) [EM-30](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-17](#)
 Oil pump regulator valve (engine) [LU-17](#)
 Oil seal replacement (front of final drive) [RFD-7](#), [FFD-7](#)
 Oil seal replacement (side of final drive) [RFD-9](#), [FFD-9](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-671](#)
 Out side mirror [GW-118](#)
 Overheat [EC-436](#)

P

P/SCKT - Wiring diagram [WW-43](#)
 Park/Neutral position switch [EC-565](#)
 Park/neutral position switch (A/T) [AT-109](#)
 Parking brake control [PB-5](#)
 Parking drum brake [PB-7](#)
 PCV (positive crankcase ventilation) [EC-677](#)
 Personal lamp [LT-159](#)
 PGC/V - Wiring diagram [EC-302](#), [EC-526](#)

ALPHABETICAL INDEX

PHSB1 - Wiring diagram	EC-271 , EC-275
PHSB2 - Wiring diagram	EC-273 , EC-277
Pinion bearing preload diff.	RFD-32
Pinion gear height diff.	RFD-26
PNP/SW - Wiring diagram	EC-567 , AT-110
POS - Wiring diagram	EC-263
POWER - Wiring diagram	PG-4
Power door mirror	BL-19
Power seat	SE-53
Power socket	WW-43
Power steering fluid level	PS-6 , MA-28
Power steering gear	PS-15
Power steering hydraulic pressure	PS-25
Power steering oil pump	PS-25
Power steering system bleeding	PS-6
Power supply routing	PG-3
Power window	GW-17
PRE/SE - Wiring diagram	EC-319 , EC-325
Precations for Leak detection dye	ATC-15
Precautions (General)	GI-4
Pressure switch 1	AT-151 , AT-170
Pressure switch 2	AT-163
Pressure switch 3	AT-147 , AT-172
Pressure switch 5	AT-155 , AT-174
Pressure switch 6	AT-159 , AT-176
Pressure test (A/T)	AT-51
Propeller shaft	PR-4 , PR-16
Propeller shaft on vehicle service	PR-4 , PR-16
Propeller shaft vibration	PR-4 , PR-16
PS/SEN - Wiring diagram	EC-362

R

Radiator	CO-13
Radio - See Audio	AV-5
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-154
Rear cover packing replacement diff.	RFD-34
Rear disc brake	BR-29
Rear door	BL-80 , GW-91
Rear parcel shelf finisher	EI-41
Rear seat	SE-71
Rear seat belt	SB-4
Rear suspension	RSU-5
Rear window	GW-15
Rear window defogger	GW-96
Refrigerant connection precaution	ATC-7
Refrigerant discharging evacuating charging	ATC-139
Refrigerant general precaution	ATC-6
Refrigerant lines	ATC-139
Refrigerant pressure sensor	EC-633 , ATC-92 , ATC-153
Refrigeration cycle	ATC-20
Release bearing (clutch)	CL-13
Removal and installation (A/T)	AT-263
Removal and installation (Transfer)	TF-49
Reverse lamp switch (M/T) - See Back-up lamp switch	

(M/T)	MT-12
Revolution sensor (A/T)	AT-113
Ring gear diff. inspection	RFD-16
Rocker cover	EM-52
Room lamp - See Interior lamp	LT-164
ROOM/L - Wiring diagram	LT-170
RP/SEN - Wiring diagram	EC-634

S

Seal - See Exterior	EI-26
SEAT - Wiring diagram	SE-53
Seat belt inspection	SB-5
Seat belt, front	SB-3
Seat belt, rear	SB-4
Seat, front	SE-64
Seat, rear	SE-71
Self-diagnosis (Transfer)	TF-22
SEN/PW - Wiring diagram	EC-453
SHIFT - Wiring diagram	AT-230
Shift lock system	AT-229
Shift schedule	AT-340
Shock absorber (front)	FSU-10 , FSU-27
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-45
Side bearing preload diff.	RFD-25
Side curtain air bag	SRS-42
Side flange installation diff.	RFD-9
Side trim	EI-39
SMJ (super multiple junction)	PG-71
Spark plug	EM-44
Spark plug replacement	MA-19
Specification value	EC-126
Speedometer	DI-4
Spiral cable	SRS-38
Spot lamp	LT-184
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-11
SRS Trouble diagnoses	SRS-7
Stabilizer bar (rear)	RSU-16
Stall test (A/T)	AT-50
Standardized relay	PG-73
START - Wiring diagram	SC-11
Starter	SC-9
Starting system	SC-9
Steering gear and linkage inspection	MA-28
Steering linkage	PS-15
Steering wheel and column	PS-8 , PS-10
Steering wheel play	PS-8
Steering wheel turning force	PS-8
Step lamp	LT-134
Stop lamp	LT-131
Stop lamp switch	EC-573
STOP/L - Wiring diagram	LT-132
STSIG - Wiring diagram	AT-105
Sun roof, electric	RF-10
Sunload sensor	ATC-111 , ATC-123
Sunroof	RF-10

ALPHABETICAL INDEX

Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram
[SRS-11](#)
 Suspension [MA-29](#)
 Symbols and abbreviations [GI-9](#), [GI-22](#)

T

Tachometer [DI-4](#)
 TCM circuit diagram [AT-49](#)
 TCM inspection table [AT-86](#)
 Three way catalyst [EM-26](#)
 Three way catalyst function (Bank 1) [EC-282](#)
 Three way catalyst function (Bank 2) [EC-282](#)
 Three way catalyst precautions [GI-5](#)
 Throttle body [EM-23](#)
 Throttle control motor [EC-404](#)
 Throttle control motor relay [EC-397](#)
 Throttle position sensor (TPS) [EC-178](#), [EC-241](#),
[EC-448](#), [EC-450](#), [EC-592](#)
 Throwout bearing - See Clutch release bearing [CL-13](#)
 Thrust washer selection diff. [RFD-24](#)
 Tie-rod [PS-15](#)
 Timing chain [EM-64](#)
 Tire rotation [MA-26](#)
 TLID - Wiring diagram [BL-97](#)
 Tooth contact diff. [RFD-30](#)
 Top tether strap child restraint [SB-9](#)
 Torque converter installation [AT-266](#)
 Torque convertor clutch solenoid valve [AT-120](#), [AT-122](#)
 TPS1 - Wiring diagram [EC-243](#)
 TPS2 - Wiring diagram [EC-180](#)
 TPS3 - Wiring diagram [EC-594](#)
 Transfer control unit inspection table [TF-20](#)
 Transverse link (front) [FSU-12](#), [FSU-29](#)
 TRNSCV - Wiring diagram [BL-154](#)
 Trouble diagnoses [GI-10](#)
 Trunk lid [BL-90](#)
 Trunk lid opener - See Trunk lid [BL-95](#)
 Trunk lid trim [EI-47](#)
 Trunk room trim [EI-47](#)
 Turbine revolution sensor [AT-136](#)
 TURN - Wiring diagram [LT-111](#)
 Turn signal lamp [LT-107](#)
 Tyre pressure monitoring system - trouble diagnoses ..
[WT-10](#)
 Tyre pressure monitoring system - wiring diagram
[WT-10](#)

U

Upper link (front susp.) [FSU-13](#), [FSU-30](#)

V

Vacuum hose (brake system) [BR-20](#)
 Vacuum hose drawing (Engine control) [EC-23](#)
 Valve clearance [EM-91](#)
 Valve guide [EM-107](#)

Valve lifter [EM-88](#)
 Valve seat [EM-109](#)
 Valve spring [EM-110](#)
 Vanity mirror lamp [LT-156](#)
 VDC -Wiring diagram [BRC-15](#)
 Vehicle security (theft warning) system [BL-106](#)
 Vehicle speed sensor (VSS) [EC-355](#)
 VEHSEC - Wiring diagram [BL-112](#)
 VENT/V - Wiring diagram [EC-309](#), [EC-534](#)
 VIN registration [EC-42](#)
 VSS A/T - Wiring diagram [AT-115](#)

W

W/ANT - Wiring diagram [AV-39](#)
 WARN - Wiring diagram [DI-26](#)
 Warning chime [DI-36](#)
 Warning lamps [DI-25](#)
 Washer, front [WW-4](#)
 Water pump [CO-23](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-7](#), [FSU-24](#)
 Wheel alignment (rear) [RSU-5](#)
 Wheel balance [WT-5](#), [MA-25](#)
 Wheel bearing (front) [FAX-4](#)
 Wheel bearing (rear) [RAX-6](#)
 Wheel hub (front) [FAX-4](#), [FAX-12](#)
 Wheel hub (rear) [RAX-6](#)
 Wheel sensor (VDC) [BRC-64](#)
 WINDOW - Wiring diagram [GW-26](#)
 Window antenna [AV-38](#)
 Window, door [GW-88](#), [GW-91](#)
 Window, rear [GW-15](#)
 Windshield [GW-13](#)
 WIPER - Wiring diagram [WW-12](#)
 Wiper, front [WW-4](#)
 Wiring Diagram (Cell code) list [PG-61](#)
 Wiring diagrams [GI-14](#)
 Withdrawal lever (clutch) [CL-13](#)
 WT-T/WARN - Wiring diagram [WT-10](#)