

WT

SECTION

ROAD WHEELS & TIRES

CONTENTS

PRECAUTION	3	
PRECAUTIONS	3	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	
Service Notice and Precautions for TPMS	3	
Service Notice and Precautions for Road Wheel	3	
PREPARATION	4	
PREPARATION	4	
Special Service Tool	4	
Commercial Service Tools	4	
SYSTEM DESCRIPTION	5	
COMPONENT PARTS	5	
Component Parts Location	5	
BCM	6	
Tire Pressure Sensor	6	
Remote Keyless Entry Receiver (Tire Pressure Receiver)	7	
Outside Key Antennas	7	
SYSTEM	8	
System Description	8	
Tire Inflation Indicator Function	9	
Circuit Diagram	10	
WARNING/INDICATOR/CHIME LIST	10	
WARNING/INDICATOR/CHIME LIST : Warning Lamp/Indicator Lamp	11	
INFORMATION DISPLAY (COMBINATION METER)	11	
INFORMATION DISPLAY (COMBINATION METER) : Low Tire Pressure Warning	11	
INFORMATION DISPLAY (COMBINATION METER) : Tire Pressure Display	11	
DIAGNOSIS SYSTEM (BCM)	12	
COMMON ITEM	12	
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	12	
AIR PRESSURE MONITOR	13	
AIR PRESSURE MONITOR : CONSULT Function (BCM-AIR PRESSURE MONITOR)	13	
CONSULT Function (TIRE PRESSURE MONITORING SYSTEM)	14	
ECU DIAGNOSIS INFORMATION	17	
BCM	17	
List of ECU Reference	17	
WIRING DIAGRAM	18	
TIRE PRESSURE MONITORING SYSTEM	18	
Wiring Diagram	18	
BASIC INSPECTION	25	
DIAGNOSIS AND REPAIR WORK FLOW	25	
Work Flow	25	
ADDITIONAL SERVICE WHEN REPLACING BCM	28	
Description	28	
Work Procedure	28	
TIRE PRESSURE SENSOR WAKE UP OPERATION	29	
Description	29	
Work Procedure	29	
TIRE PRESSURE SENSOR ID REGISTRATION	30	
Description	30	
Work Procedure	30	
CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM)	32	
Work Procedure	32	

DTC/CIRCUIT DIAGNOSIS	34	LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON	53
C1704, C1705, C1706, C1707 LOW TIRE PRESSURE	34	Description	53
DTC Description	34	Diagnosis Procedure	53
Diagnosis Procedure	34	LOW TIRE PRESSURE WARNING LAMP STAYS ON	54
C1708, C1709, C1710, C1711 TIRE PRES-SURE SENSOR	36	Description	54
DTC Description	36	Diagnosis Procedure	54
Diagnosis Procedure	36	LOW TIRE PRESSURE WARNING LAMP BLINKS	55
C1716, C1717, C1718, C1719 TIRE PRES-SURE SENSOR	38	Description	55
DTC Description	38	Diagnosis Procedure	55
Diagnosis Procedure	38	ID REGISTRATION CANNOT BE COMPLET-ED	56
C1729 VEHICLE SPEED SIGNAL	39	Description	56
DTC Description	39	Diagnosis Procedure	56
Diagnosis Procedure	39	HAZARD WARNING LAMP REMAINS ON	57
C1730, C1731, C1732, C1733 FLAT TIRE	40	Description	57
DTC Description	40	Diagnosis Procedure	57
Diagnosis Procedure	40	NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	58
C1734 CONTROL UNIT	42	NVH Troubleshooting Chart	58
DTC Description	42	PERIODIC MAINTENANCE	59
Diagnosis Procedure	42	ROAD WHEEL	59
C1761, C1762, C1763, C1764 TIRE PRES-SURE SENSOR	44	Inspection	59
DTC Description	44	Wheel Balance Adjustment (Aluminum Wheel)	59
Diagnosis Procedure	44	Tire Rotation	61
C1769 CONFIGURATION SETTING	45	REMOVAL AND INSTALLATION	62
DTC Description	45	ROAD WHEEL TIRE ASSEMBLY	62
Diagnosis Procedure	45	Exploded View	62
C1770, C1771, C1772, C1773 G SENSOR	46	Removal and Installation	62
DTC Description	46	Inspection	62
Diagnosis Procedure	46	REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER)	63
U1000 CAN COMM CIRCUIT	47	Removal and Installation	63
Description	47	TIRE PRESSURE SENSOR	64
DTC Logic	47	Exploded View	64
Diagnosis Procedure	47	Removal and Installation	64
U1010 CONTROL UNIT (CAN)	48	OUTSIDE KEY ANTENNA	67
Description	48	Removal and Installation	67
DTC Logic	48	SERVICE DATA AND SPECIFICATIONS (SDS)	68
Diagnosis Procedure	48	SERVICE DATA AND SPECIFICATIONS (SDS)	68
LOW TIRE PRESSURE WARNING LAMP	49	Road Wheel	68
Component Function Check	49	Tire Air Pressure	68
Diagnosis Procedure	49		
SYMPTOM DIAGNOSIS	50		
TPMS	50		
Symptom Table	50		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009641237

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Service Notice and Precautions for TPMS

INFOID:000000009236540

- Low tire pressure warning lamp blinks for 1min, then turns ON when occurring any malfunction except low tire pressure. Erase the self-diagnosis memories for low tire pressure warning control unit, or register the ID to turn low tire pressure warning lamp OFF. For ID registration, refer to [WT-30. "Work Procedure"](#).
- ID registration is required when replacing or rotating wheels, replacing tire pressure sensor or low tire pressure warning control unit. Refer to [WT-30. "Work Procedure"](#).
- Replace grommet seal, valve core and cap of tire pressure sensor in TPMS, when replacing each tire by reaching the wear limit. Refer to [WT-64. "Exploded View"](#).

Service Notice and Precautions for Road Wheel

INFOID:000000009236541

- Genuine NISSAN aluminum wheel is designed for each type of vehicle. Use it on the specified vehicle only.
- Use Genuine NISSAN parts for the wheel nuts.
- Always use them after adjusting the wheel balance. For the balance weights, use Genuine NISSAN aluminum wheel weights.
- Use caution when handling the aluminum wheels, because they can be easily scratched. When removing dirt, do not use any abrasives, a wire brush, or other items that may scratch the coating. Use a neutral detergent if a detergent is needed.
- After driving on roads scattered with anti-icing salts, wash off the wheels completely.
- When installing road wheels onto the vehicle, always wipe off any dirt or foreign substances to prevent them from being trapped between the contact surfaces of wheel.
- Never apply oil to nut and bolt threads.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool


INFOID:000000009641434

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

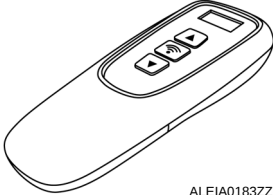Tool number (Kent-Moore No.) Tool name	Description
— (J-50190) Signal Tech II  ALEIA0131ZZ	• Activate and display TPMS transmitter IDs • Display tire pressure reported by the TPMS transmitter • Read TPMS DTCs • Register TPMS transmitter IDs • Test remote keyless entry keyfob relative signal strength
— (J-45295-A) Transmitter activation tool  ALEIA0183ZZ	Activate and display TPMS transmitter IDs

Commercial Service Tools

INFOID:000000009236543

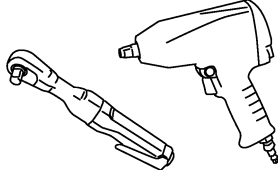Tool name	Description
Power tool  PBIC0190E	Loosening wheel nuts


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000009641472

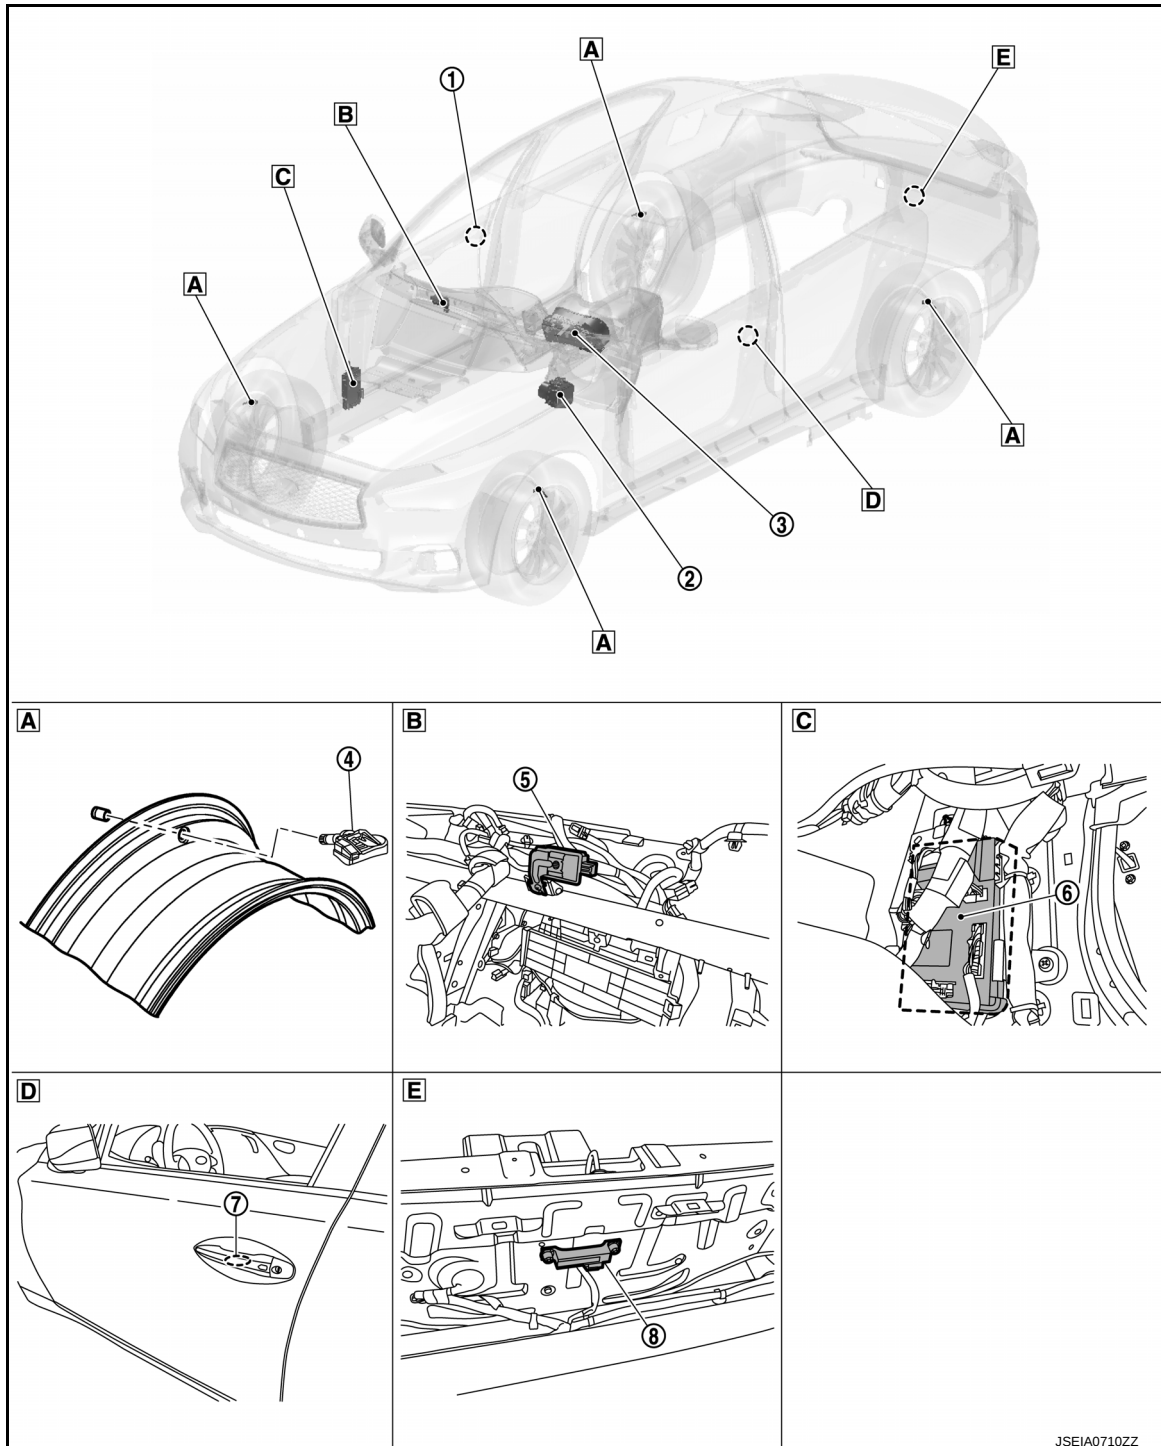

- A** Wheel **B** View with instrument panel removed **C** Behind of combination meter
D Part of outside door handle grip **E** View with rear bumper fascia removed

COMPONENT PARTS


< SYSTEM DESCRIPTION >

No.	Component parts	Function
①	Outside key antenna (passenger side)	Refer to WT-7, "Outside Key Antennas" .
②	ABS actuator and electric unit (control unit)	Mainly transmits the following signals to BCM via CAN communication. Vehicle speed signal
③	Combination meter	Mainly receives the following signals from BCM via CAN communication. - Low tire pressure warning lamp signal - TPMS malfunction warning lamp signal The combination meter will display the low tire pressure warning lamp when a low tire pressure or system malfunction is detected by the BCM. A warning message will also be displayed in the information display.
④	Tire pressure sensor	Refer to WT-6, "Tire Pressure Sensor" .
⑤	Remote keyless entry receiver (tire pressure receiver)	Refer to WT-7, "Remote Keyless Entry Receiver (Tire Pressure Receiver)" .
⑥	BCM	Refer to WT-6, "BCM" .
⑦	Outside key antenna (driver side)	Refer to WT-7, "Outside Key Antennas" .
⑧	Outside key antenna (rear bumper)	Refer to WT-7, "Outside Key Antennas" .

BCM

INFOID:000000009641473

The BCM reads the tire pressure signal received by the remote keyless entry receiver (tire pressure receiver). In addition, the BCM also uses the outside key antennas (driver side, passenger side and rear bumper) to identify the location of the tire pressure sensors. The BCM has a self-diagnosis function used to detect system malfunctions.

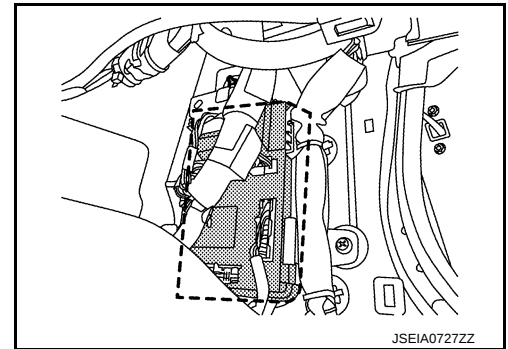


Tire Pressure Sensor

INFOID:000000009641474

A tire pressure sensor ① integrated with a valve is installed in each wheel ②, and transmits a detected air pressure signal in the form of a radio wave. The radio signal is received by the remote keyless entry receiver (tire pressure receiver).

⇐ : Outside

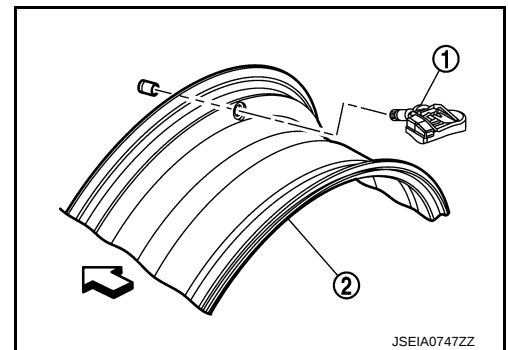


COMPONENT PARTS

< SYSTEM DESCRIPTION >

Remote Keyless Entry Receiver (Tire Pressure Receiver)

INFOID:000000009641475


The remote keyless entry receiver receives (tire pressure receivers) the tire pressure signal transmitted by the tire pressure sensor in each wheel.

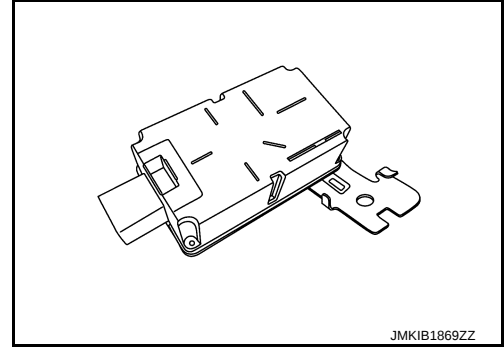


Outside Key Antennas

INFOID:000000009641476

- For vehicles equipped with individual tire pressure display in the combination meter, the outside key antennas (driver side, passenger side and rear bumper) are used by the BCM to identify the location of the tire pressure sensor.
- Outside key antenna (driver side) and outside key antenna (passenger side) is installed in outside handle.

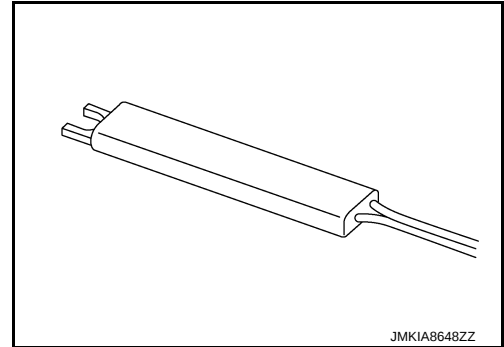

- Outside key antenna (rear bumper) is installed in the rear of rear bumper.

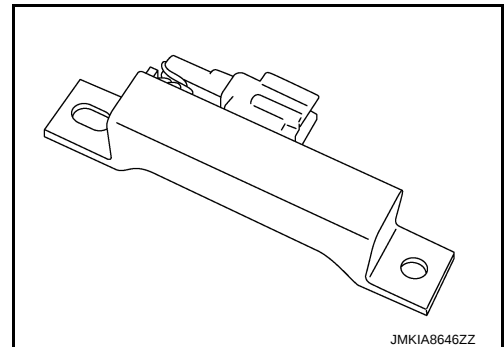

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM

System Description

INFOID:000000009641637

When the vehicle has reached a speed of 40 km/h (25 MPH) or greater, the BCM receives a signal transmitted from the tire pressure sensors installed in each wheel. If the BCM detects low tire pressure or a system malfunction, it sends a signal to the combination meter via CAN communication to illuminate the low tire pressure warning lamp. In addition, a warning message will be displayed in the information display.

SYSTEM DIAGRAM

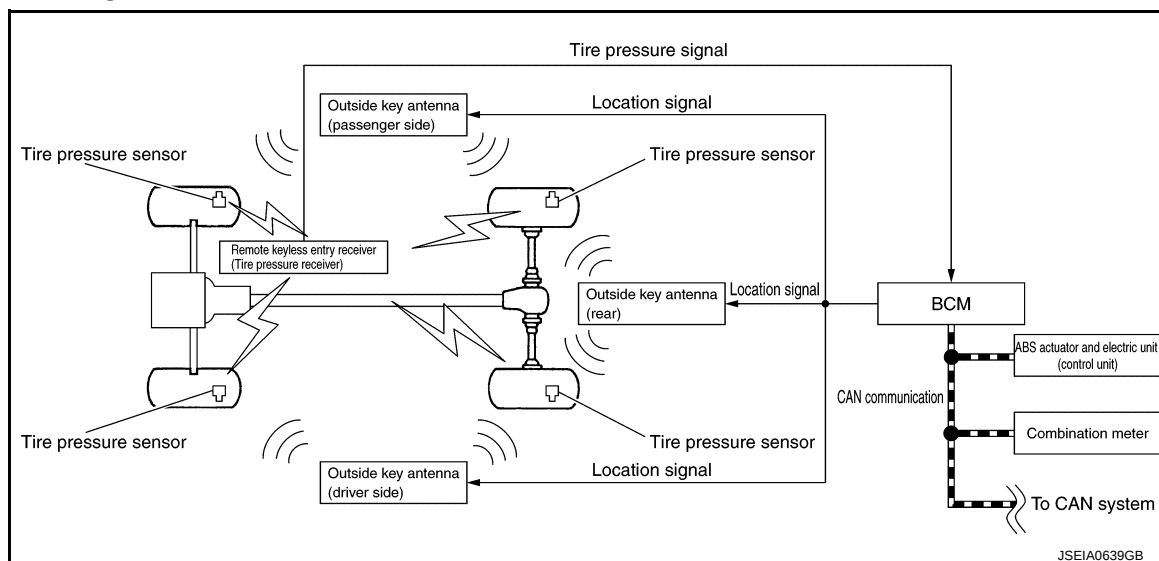

INPUT SIGNAL AND OUTPUT SIGNAL

Component	Signal description
Combination meter	Mainly receives the following signals from BCM via CAN communication. • Low tire pressure warning lamp signal • TPMS malfunction warning lamp signal • Tire pressure data signal • Buzzer output signal Transmits the vehicle speed signal via CAN communication for BCM.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal via CAN communication for combination meter.

LOW TIRE PRESSURE WARNING LAMP AND INFORMATION DISPLAY INDICATIONS

Condition	Low tire pressure warning lamp	Information display
Ignition switch OFF	OFF	OFF
Ignition switch ON (system normal)	ON for 1 second then turns off	No TPMS message
Low tire pressure	ON	WT-11, "INFORMATION DISPLAY (COMBINATION METER) : Low Tire Pressure Warning"
TPMS malfunction	Blinks for 1 minute then stays ON	WT-11, "INFORMATION DISPLAY (COMBINATION METER) : Low Tire Pressure Warning"

HAZARD WARNING LAMP INDICATION CONDITION

The hazard warning lamp blinks under the following conditions.

- When ID registration is completed. Refer to [WT-30, "Work Procedure"](#).

BUZZER CONTROL CONDITION

The low tire pressure warning control unit transmits a buzzer request signal to BCM. Based on the signal, BCM sends a command to the combination meter to sound the buzzer.

The buzzer sounds under the following conditions.

SYSTEM

< SYSTEM DESCRIPTION >

Condition of Sounding Buzzer

- When wake-up of registered wheel has been completed. Refer to [WT-29, "Work Procedure"](#).


Tire Inflation Indicator Function

INFOID:000000009641446

NOTE:

When beginning tire inflation, it takes a few seconds for the Tire inflation indicator function. If there is no response for approximately 15 seconds or more, cancel the Tire inflation indicator function and move the vehicle approximately 1 m (3.2 ft) backward or forward to try again.

- The Tire inflation indicator function operates only when the select lever position is in P-range with the ignition switch ON.
- This function informs the driver with a visual and audible indication that the recommended COLD tire pressure has been reached.
- The hazard warning lamps blink when the recommended COLD tire pressure has been reached. After the recommended COLD tire pressure has been reached, the horn sounds once and the hazard warning lamps stop blinking.
- If the tire pressure value is equal to or greater than 30 kPa (0.31 kg/cm², 4 psi) more than the recommended COLD tire pressure, the hazard warning lamps flash and horn sounds three times.
- To return the tire to the recommended COLD tire pressure, deflate the tire until the horn sounds once and the hazard warning lamps stop blinking.

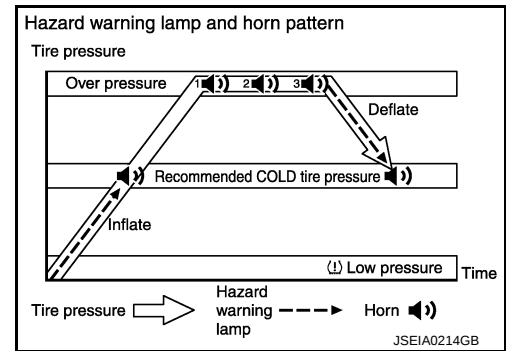


SYSTEM

< SYSTEM DESCRIPTION >

Circuit Diagram

INFOID:000000009724845

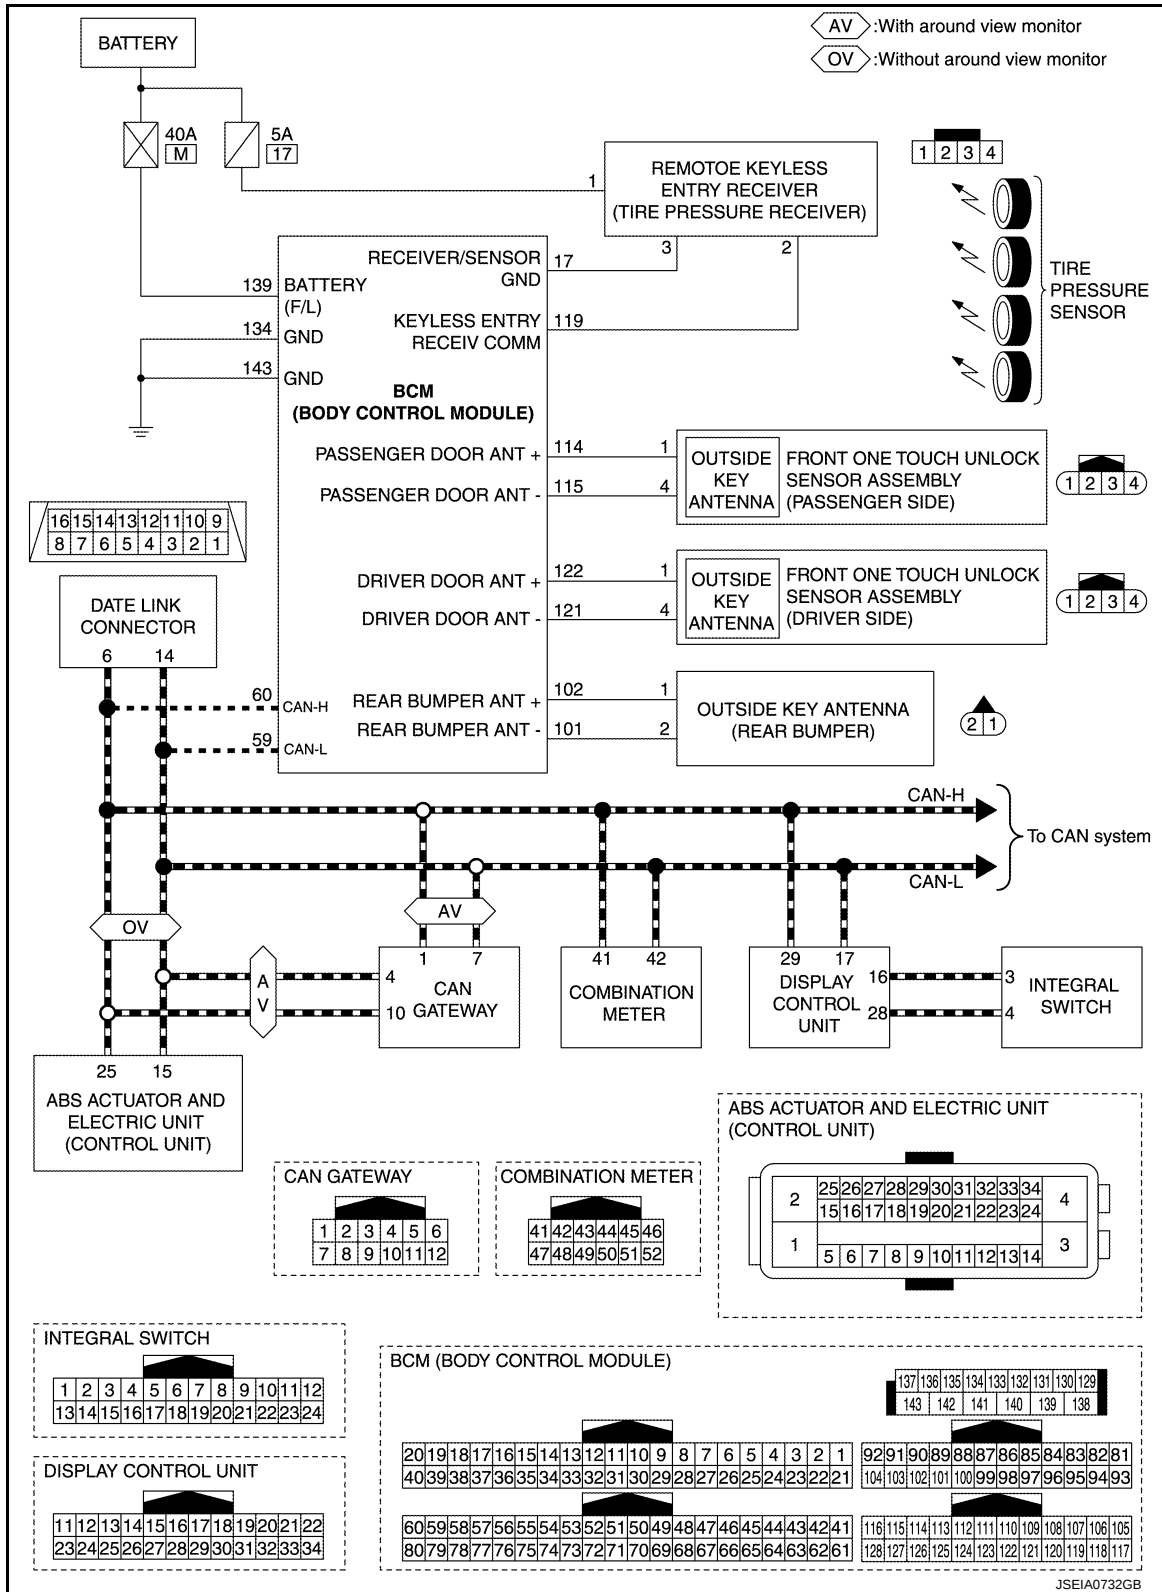

WARNING/INDICATOR/CHIME LIST

SYSTEM

< SYSTEM DESCRIPTION >

WARNING/INDICATOR/CHIME LIST : Warning Lamp/Indicator Lamp

INFOID:000000009671049

Name	Design	Layout/Function
Low tire pressure warning lamp		For layout, refer to MWI-8. "METER SYSTEM : Design" . For function, refer to MWI-31. "WARNING LAMPS/INDICATOR LAMPS : Low Tire Pressure Warning Lamp" .

INFORMATION DISPLAY (COMBINATION METER)

INFORMATION DISPLAY (COMBINATION METER) : Low Tire Pressure Warning

INFOID:000000009641480

DESIGN/PURPOSE

The warning message is displayed in the vehicle information display with the low tire pressure warning lamp when following conditions;

- Tire pressure is low.
- TPMS detected the system malfunction.
- Tire pressure is extremely low (flat tire).

Symbol	Warning Message
 JSEIA0664ZZ	• Flat Tire Visit dealer • Tire Pressure Low Add Air

Details for warning conditions, refer to [MWI-31. "WARNING LAMPS/INDICATOR LAMPS : Low Tire Pressure Warning Lamp"](#).

SYNCHRONIZATION WITH MASTER WARNING LAMP


Applicable

Refer to [MWI-34. "WARNING LAMPS/INDICATOR LAMPS : Master Warning Lamp"](#).

INFORMATION DISPLAY (COMBINATION METER) : Tire Pressure Display

INFOID:000000009641481

The adoption of this function allows tire pressure indication on the information display installed to the combination meter.

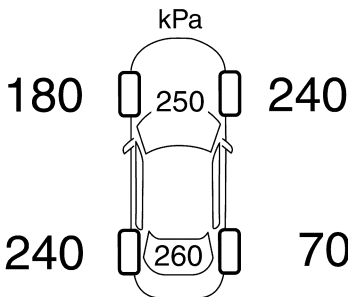Design	Description
 JSEIA0711ZZ	The tire pressure of each tire is displayed.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009665965

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	- Read and save the vehicle specification. - Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER	×	×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*		×	×
- Intelligent Key system - Engine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR			×

*: This item is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		B
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)	C
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	D
	LOCK>ACC		While turning power supply position from "LOCK" *to "ACC"	
	ACC>ON		While turning power supply position from "ACC" to "IGN"	
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	WT
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power supply position from "ACC" to "OFF"	F
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*	
	OFF>ACC		While turning power supply position from "OFF" to "ACC"	G
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode	
	LOCK		Power supply position is "LOCK" (Ignition switch OFF)*	I
	OFF		Power supply position is "OFF" (Ignition switch OFF)	
	ACC		Power supply position is "ACC" (Ignition switch ACC)	J
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)	
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)	K
	CRANKING		Power supply position is "CRANKING" (At engine cranking)	
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.		L

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function (BCM-AIR PRESSURE MONITOR)

INFOID:000000009641246

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Diagnosis mode	Function Description
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
HORN	This test is able to check horn operation [On].
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].
ID REGIST WARNING	This test is able to check ID regist warning chime operation [On/Off].
RUN FLAT TIRE W/L	This item is displayed, but cannot be use this item.
RUN FLAT/T WARN BUZZER	This test is able to run flat tire warning chime operation [On/Off].

CONSULT Function (TIRE PRESSURE MONITORING SYSTEM)

INFOID:000000009641247

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
ECU identification	Parts number of BCM can be read.
Self Diagnostic Result	Retrieve DTC from ECU and display diagnostic items.
Self Diagnostic Result	Self-diagnostic results and freeze frame data can be read and erased quickly.*
Data Monitor	Monitor the input/output signal of the control unit in real time.
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Re/programming, Configuration	- Read and save the vehicle specification (TYPE ID). - Write the vehicle specification (TYPE ID) when replacing BCM.

ECU IDENTIFICATION

BCM part number can be read.

SELF DIAGNOSTIC RESULT

NOTE:

Before performing Self Diagnostic Result, be sure to register the tire pressure sensor ID or the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-62. "DTC Index"](#).

FREEZE FRAME DATA (FFD)

The following vehicle status is recorded when DTC is detected and is displayed on CONSULT.

Item name	Display item
SET AIR PRESSURE 2 FL	Set air pressure 2 front left
SET AIR PRESSURE 2 FR	Set air pressure 2 front right
SET AIR PRESSURE 2 RR	Set air pressure 2 rear right
SET AIR PRESSURE 2 RL	Set air pressure 2 rear left
WARNING AIR PRESSURE FL	Warning air pressure front left
WARNING AIR PRESSURE FR	Warning air pressure front right
WARNING AIR PRESSURE RR	Warning air pressure rear right
WARNING AIR PRESSURE RL	Warning air pressure rear left
AIR PRESS FL	Air pressure front left
AIR PRESS RL	Air pressure front right
AIR PRESS RR	Air pressure rear right
AIR PRESS RL	Air pressure rear left

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Item name	Display item
SET TEMPERATURE	Set temperature
TIRE TEMPERATURE FL	Tire temperature front left
TIRE TEMPERATURE FR	Tire temperature front right
TIRE TEMPERATURE RR	Tire temperature rear right
TIRE TEMPERATURE RL	Tire temperature rear left
IGN COUNTER (0 - 39)	The number of times that ignition switch is turned ON after the DTC is detected is displayed. - When "0" is displayed: It indicates that the system is presently malfunctioning. - When except "0" is displayed: It indicates that system malfunction in the past is detected, but the system is presently normal. NOTE: Each time when ignition switch is turned OFF to ON, numerical number increases in 1→2→3...38→39. When the operation number of times exceeds 39, the number do not increase and "39" is displayed until self diagnosis is erased.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item (Unit)	Description
AIR PRESS FL (kPa, kg/cm ² or Psi)	Indicates air pressure of front LH tire.
AIR PRESS FR (kPa, kg/cm ² or Psi)	Indicates air pressure of front RH tire.
AIR PRESS RR (kPa, kg/cm ² or Psi)	Indicates air pressure of rear RH tire.
AIR PRESS RL (kPa, kg/cm ² or Psi)	Indicates air pressure of rear LH tire.
ID REGST FL1 (Done/Yet)	Indicates ID registration status of front LH transmitter.
ID REGST FR1 (Done/Yet)	Indicates ID registration status of front RH transmitter.
ID REGST RR1 (Done/Yet)	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 (Done/Yet)	Indicates ID registration status of rear LH transmitter.
WARNING LAMP (Off/On)	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER (Off/On)	Indicates condition of buzzer in combination meter.
TIRE TEMPERATURE FL (°C)	Indicates tire temperature of front LH tire.
TIRE TEMPERATURE FR (°C)	Indicates tire temperature of front RH tire.
TIRE TEMPERATURE RR (°C)	Indicates tire temperature of rear RH tire.
TIRE TEMPERATURE RL (°C)	Indicates tire temperature of rear LH tire.
HAZARD (Off/On)	Indicates condition of hazard.
WARNING AIR PRESSURE FL (kPa, kg/cm ² or Psi)	Indicates warning air pressure front LH tire.
WARNING AIR PRESSURE FR (kPa, kg/cm ² or Psi)	Indicates warning air pressure front RH tire.
WARNING AIR PRESSURE RR (kPa, kg/cm ² or Psi)	Indicates warning air pressure rear RH tire.
WARNING AIR PRESSURE RL (kPa, kg/cm ² or Psi)	Indicates warning air pressure rear LH tire.
SET AIR PRESSURE 1 FL (kPa, kg/cm ² or Psi)	Indicates set air pressure 1 front LH tire.
SET AIR PRESSURE 1 FR (kPa, kg/cm ² or Psi)	Indicates set air pressure 1 front RH tire.
SET AIR PRESSURE 1 RR (kPa, kg/cm ² or Psi)	Indicates set air pressure 1 rear RH tire.
SET AIR PRESSURE 1 RL (kPa, kg/cm ² or Psi)	Indicates set air pressure 1 rear LH tire.
SET AIR PRESSURE 2 FL (kPa, kg/cm ² or Psi)	Indicates set air pressure 2 front LH tire.
SET AIR PRESSURE 2 FR (kPa, kg/cm ² or Psi)	Indicates set air pressure 2 front RH tire.
SET AIR PRESSURE 2 RR (kPa, kg/cm ² or Psi)	Indicates set air pressure 2 rear RH tire.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item (Unit)	Description
SET AIR PRESSURE 2 RL (kPa, kg/cm ² or Psi)	Indicates set air pressure 2 rear LH tire.
SET TEMPERATURE (°C)	Indicates set temperature.
TPMS SET SWITCH (Off/On)	Indicates condition of tire pressure monitor system set switch.

WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to WT-30, "Description" .

ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:0000000009641447

ECU	Reference
BCM	BCS-35, "Reference Value"
	BCS-60, "Fail-safe"
	BCS-61, "DTC Inspection Priority Chart"
	BCS-62, "DTC Index"

WT

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >


WIRING DIAGRAM

TIRE PRESSURE MONITORING SYSTEM

Wiring Diagram

INFOID:000000009236555

TIRE PRESSURE MONITORING SYSTEM

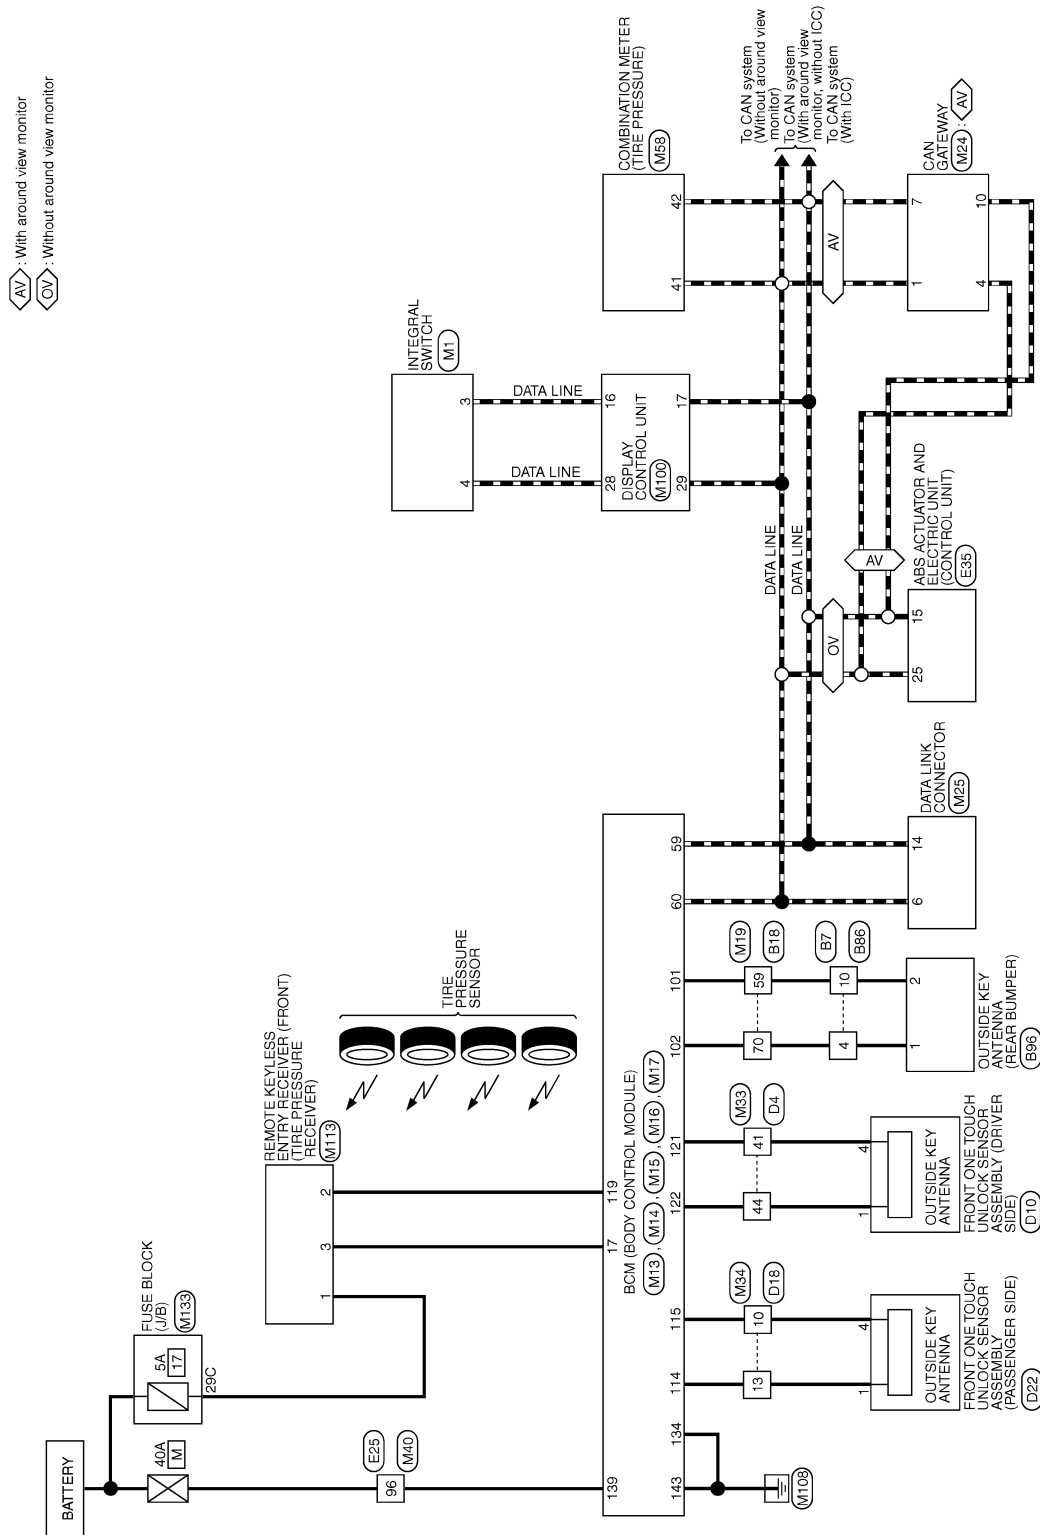

2013/05/17

JREWCO215GB

< WIRING DIAGRAM >

Terminal No.	Wire	Color Of	Signal Name (Specification)
1	WB	White	- [With DRPO]
2	SB	Blue	- [Without DRPO]
4	BG	Brown	-
5	R	Red	- [With DRPO]
6	Y	Yellow	- [Without DRPO]
7	V	Green	-
8	G	Green	-
9	GR	Grey	-
10	Y	Yellow	-
11	SHIELD	-	-
12	BG	Brown	-
13	L	Blue	-
14	B	Blue	-
15	Y	Yellow	-
16	GR	Grey	-
17	R	Red	-
18	GR	Grey	-
19	R	Red	-
20	W	White	-
21	LG	Light Green	-
22	W	White	-
23	L	Blue	-
24	G	Green	-
25	BR	Brown	-
26	R	Red	-
27	BR	Brown	-
28	V	Green	-
29	B	Blue	-
30	W	White	-
31	P	Pink	-
32	Y	Yellow	-
33	BR	Brown	-
34	L	Blue	-

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >

TIRE PRESSURE MONITORING SYSTEM

Connector No.	D18
39	GR
40	G
41	L
42	LG
43	BG
44	Y
45	W
46	BR
47	R
48	BR
49	B
50	B
51	V
52	Y
53	GR
54	GR
55	GR
56	BR
57	R
58	L
59	V
60	G
61	BG
62	Y
63	SB
64	B
65	Y
66	BR
67	Y
68	Y
69	L
70	W
71	LG
72	P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	SB	-
4	BR	-
5	Y	-
6	Y	-
7	LG	-
8	W	-
9	L	-
10	L	-
11	GR	-
12	Y	-
13	Y	-
14	R	-
15	R	-
16	R	-
17	R	-
18	B	-
19	B	-
20	G	-
21	SHIELD	-
22	GR	-
23	BG	-
24	B	-
25	BR	-
26	V	-
27	G	-
28	V	-
29	Y	-
30	R	-
31	LG	-
32	P	-
33	L	-
34	Y	-
35	R	-
36	SB	-
37	R	-
38	R	-
39	G	-
40	B	-
41	B	-



Connector No.	D10
Connector Name	POINT ONE TOUCH UNLOCK SENSOR ASSEMBLY (DRIVER SIDE)
Connector Type	RHD4FLGY

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	B	-
4	L	-


64	Y	-
65	BR	-
66	GR	-
67	W	-
68	L	-
69	BG	-
70	Y	-
71	BR	-
72	Y	-



Connector No.	D22
Connector Name	POINT ONE TOUCH UNLOCK SENSOR ASSEMBLY (PASSENGER SIDE)
Connector Type	RHD4FLGY

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	B	-
4	L	-

Connector No.	E25
Connector Name	WIRE TO WIRE
Connector Type	TH90FW-GS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	LG	-
3	BR	-
4	V	-
5	R	-
6	L	-
7	BR	-
8	G	-
9	Y	-
10	BR	-
11	L	-

12	GR	-
13	W	-
14	B	-
15	SB	-
16	Y	-
17	BR	-
18	P	-
19	Y	-
20	SB	-
21	LG	-
22	Y	-
23	W	-
24	Y	-
25	W	-
26	SB	-
27	EG	-
28	B	-
29	W	-
30	R	-
31	Y	-
32	GR	-
33	GR	-
34	R	-
35	R	-
36	R	-
37	Y	-
38	L	-
39	Y	-
40	SB	-
41	LG	-
42	Y	-
43	W	-
44	Y	-
45	W	-
46	B	-
47	G	-
48	SHIELD	-
49	R	-
50	BR	-
51	L	-
52	W	-
53	Y	-
54	P	-
55	W	-
56	SB	-
57	EG	-
58	B	-
59	W	-
60	R	-
61	R	-
62	Y	-
63	SB	-
64	GR	-
65	SB	-
66	GR	-
67	LG	-
68	BG	-
69	LG	-
70	Y	-
71	Y	-
72	Y	-
73	G	-
74	BR	-
75	Y	-
76	P	-
77	Y	-
78	SB	-
79	R	-
80	R	-
81	EG	-
82	G	-
83	Y	-
84	Y	-
85	Y	-
86	Y	-
87	Y	-
88	Y	-
89	Y	-
90	Y	-
91	Y	-
92	Y	-
93	Y	-
94	GR	-

JREW0217GB

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >

TIRE PRESSURE MONITORING SYSTEM

85	BG	-
87	LG	-
88	L	-
89	P	-
100	SHIELD	-

Connector No.	E53
Connector Name	ABS ACTIVATION AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SAZ20FB-SJ24-U




Signal Name [Specification]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								
1	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498	1499	1500	1501	1502	1503	150

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >


TIRE PRESSURE MONITORING SYSTEM

Connector No.	M19
Connector Name	BOM (BODY CONTROL MODULE)
Connector Type	TH24ED-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
109	B	TURN SIG RH OUTPUT (FRONT)
109	R	PUSHPN IGN SW LK GND
111	Y	ACC SW GND
113	SB	ACC RELAY CONT
114	LG	PASSENGER DOOR ANT +
115	V	PASSENGER DOOR ANT -
116	BR	INSIDE KEY ANT (CONSOLE) +
117	W/B	TURN SIG LH OUTPUT (FRONT)
119	L	KYLS ENT RECEIV COMM
121	SB	DRIVER DOOR ANT -
122	BG	DRIVER DOOR ANT +
123	R	INSIDE KEY ANT (INSTRUMENT LOWER) +
124	G	INSIDE KEY ANT (INSTRUMENT LOWER) -
125	B	MAIS ANT AMP
126	W	MAIS ANT AMP
128	GR	INSIDE KEY ANT (CONSOLE) -

Connector No.	M17
Connector Name	BOM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FHAG-SA

 

Terminal No.	Color Of Wire	Signal Name [Specification]
129	LG	INT ROOM LAMP PWR SPLY
130	P	PASS DOOR UNLK OUTPUT
131	Y	BAT (FUSE)
132	V	RR RL DOOR LK OUTPUT


Terminal No.	Color Of Wire	Signal Name [Specification]
41	G	-
42	BR	-
43	BR	-
44	BR	-
46	BG	-
51	Y	-
52	V	-
54	R	-
55	R	-
57	W	-
58	V	-
59	BG	-
62	BG	-
63	BR	-
64	W	-
65	W	-
70	LG	-
71	W	-
72	B	-
74	L	-
75	W	-
76	BR	-
77	B	-
81	B	-
83	BG	-
84	L	-
85	W	-
86	B	-
87	GR	-
88	GR	-
94	GR	-
96	W	-
97	V	-
98	BR	-

Connector No.	M24
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	CAN-H
3	W	BATTERY
4	L	CAN-H
5	B	GND
6	L	CAN-H
7	P	CAN-L
9	R	IGN
10	R	CAN-L
11	B	GND
12	R	CAN-L

Connector No.	M25
Connector Name	DATA LINK CONNECTOR
Connector Type	ED10FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	AV COMM (L)
4	B	EARTH
5	B	CAN-H
6	L	CAN-H
7	V	KLINE
8	W	IGN SW
11	LG	AV COMM (H)
12	R	CAN-L
13	L	CAN-H
14	P	CAN-L

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >

TIRE PRESSURE MONITORING SYSTEM


16	W	POWER
----	---	-------

Connector No.	M33
Connector Name	WIRE TO WIRE
Connector Type	NH60MM-TS12




Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
4	G	- [With DRPO]
5	G	- [Without DRPO]
6	R	-
7	R	-
8	GR	-
9	GR	-
10	W	-
11	SHIELD	-
12	P	-
13	SB	-
14	LG	-
15	Y	-
16	Y	-
17	P	-
18	W/B	-
19	LG	- [With DRPO]
20	V	- [Without DRPO]
21	B	-
22	EG	- [Without DRPO]
23	L	- [With DRPO]
24	Y	-
25	EG	- [Without DRPO]
26	Y	- [With DRPO]
27	GR	-
28	V	-
29	B	-
30	W	-
31	B	-

Connector No.	M34
Connector Name	WIRE TO WIRE
Connector Type	NH60MM-TS12

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
4	R	-
5	G	- [With DRPO]
6	SB	- [Without DRPO]
7	L	-
8	R	-
9	W	-
10	GR	-
11	V	-
12	LG	-
13	W	-
14	B	-
15	P	-
16	B	-
17	B	-
18	W	-
19	B	- [With DRPO]
20	SB	- [Without DRPO]
21	SHIELD	-
22	B	-
23	EG	- [Without DRPO]
24	P	- [With DRPO]
25	LG	-
26	EG	- [Without DRPO]
27	BR	- [With DRPO]
28	SB	-
29	EG	- [Without DRPO]
30	L	- [With DRPO]
31	P	-
32	V	-
33	B	-
34	SB	-
35	G	-
36	Y	-
37	B	-
38	L	-
39	Y	-
40	GR	-
41	L	-
42	BR	-
43	W	-
44	G	-
45	R	-
46	SHIELD	-
47	B	-
48	BR	-
49	W	-
50	G	-
51	P	-
52	W	-
53	G	-
54	Y	-
55	P	-
56	EG	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Type	TH60MM-CS12-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-
3	V	-
4	W/B	-
5	V	-
6	W/B	-
7	V	-
10	W	-
11	W	-
12	B	-
13	GR	-
14	B	-
15	SB	-
16	B	-
17	LG	-
18	B	-
19	W	-
20	EG	-
21	EG	-
22	B	-
23	W/B	-
24	LG	-
25	G	-
26	EG	-
27	W/B	-
28	EG	-
29	B	-
30	L	-
31	Y	-
32	GR	-
33	L	-
34	BR	-
35	W	-
36	G	-
37	B	-
38	L	-
39	Y	-
40	GR	-
41	L	-
42	BR	-
43	W	-
44	G	-
45	R	-
46	SHIELD	-
47	B	-
48	BR	-
49	W	-
50	G	-
51	P	-
52	W	-
53	G	-
54	Y	-
55	P	-
56	EG	-

JREW0220GB

TIRE PRESSURE MONITORING SYSTEM

< WIRING DIAGRAM >

TIRE PRESSURE MONITORING SYSTEM

Terminal No.	Color Of Wire	Signal Name [Specification]
38C	V	-
39C	P	-
40C	G	-
41C	P	-
42C	P	-
43C	P	-
44C	P	-
45C	P	-
46C	P	-
47C	G	-
48C	V	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	+12V
2	L	SIGNAL
3	P	GND

Connector No.	MT133
Connector Name	FUSE BLOCK (J/B)
Connector Type	TH40FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color Of Wire	Signal Name [Specification]
10C	V	-
11C	V	-
12C	L	-
13C	L	-
14C	Y	-
15C	R	-
16C	R	-
17C	L	-
18C	LG	-
19C	P	- [Without DRPO]
20C	B	- [With DRPO]
21C	W	-
22C	L	-
23C	LG	-
24C	SB	-
25C	P	-
26C	W	-
27C	W	-
28C	W	-
29C	R	-
30C	R	-
31C	R	-
32C	R	-
33C	B	-
34C	W/B	-
35C	SB	-
36C	R	-
37C	W	-
38C	SB	-

Terminal No.	Color Of Wire	Signal Name [Specification]
48	SB	AV COMMUNICATION SIGNAL (L)
49	BR	FUEL LEVEL SENSOR SIGNAL
50	B	GROUND

Connector No.	MT100
Connector Name	DISPLAY CONTROL UNIT
Connector Type	TH24FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color Of Wire	Signal Name [Specification]
16	SB	AV COMM (L)
17	P	CAN-L
18	R	DIMMER SIGNAL
19	R	REVERSE SIGNAL
20	B	GROUND
21	B	-
22	B	-
23	SB	CAMERA SWITCH SIGNAL
24	BR	AV COMM (H)
25	LG	CAN-H
26	L	-
27	B	-
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
29	SB	ACC
30	R	BAT
31	Y	-

Connector No.	MT13
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	FA004FB



1	2	3
---	---	---

Connector No.	MS8
Connector Name	COMBINATION METER
Connector Type	TH12FW-NH



41	42	43	44	45	46	47	48	49	50	51	52
----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
41	P	CAN-H
42	P	CAN-L
43	B	ILLUMINATION CONTROL SIGNAL
44	Y	FUEL LEVEL SENSOR GROUND
45	W	BATTERY POWER SUPPLY
46	R	IGNITION SIGNAL
47	LG	AV COMMUNICATION SIGNAL (H)

JREWCO221GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009641549

OVERALL SEQUENCE

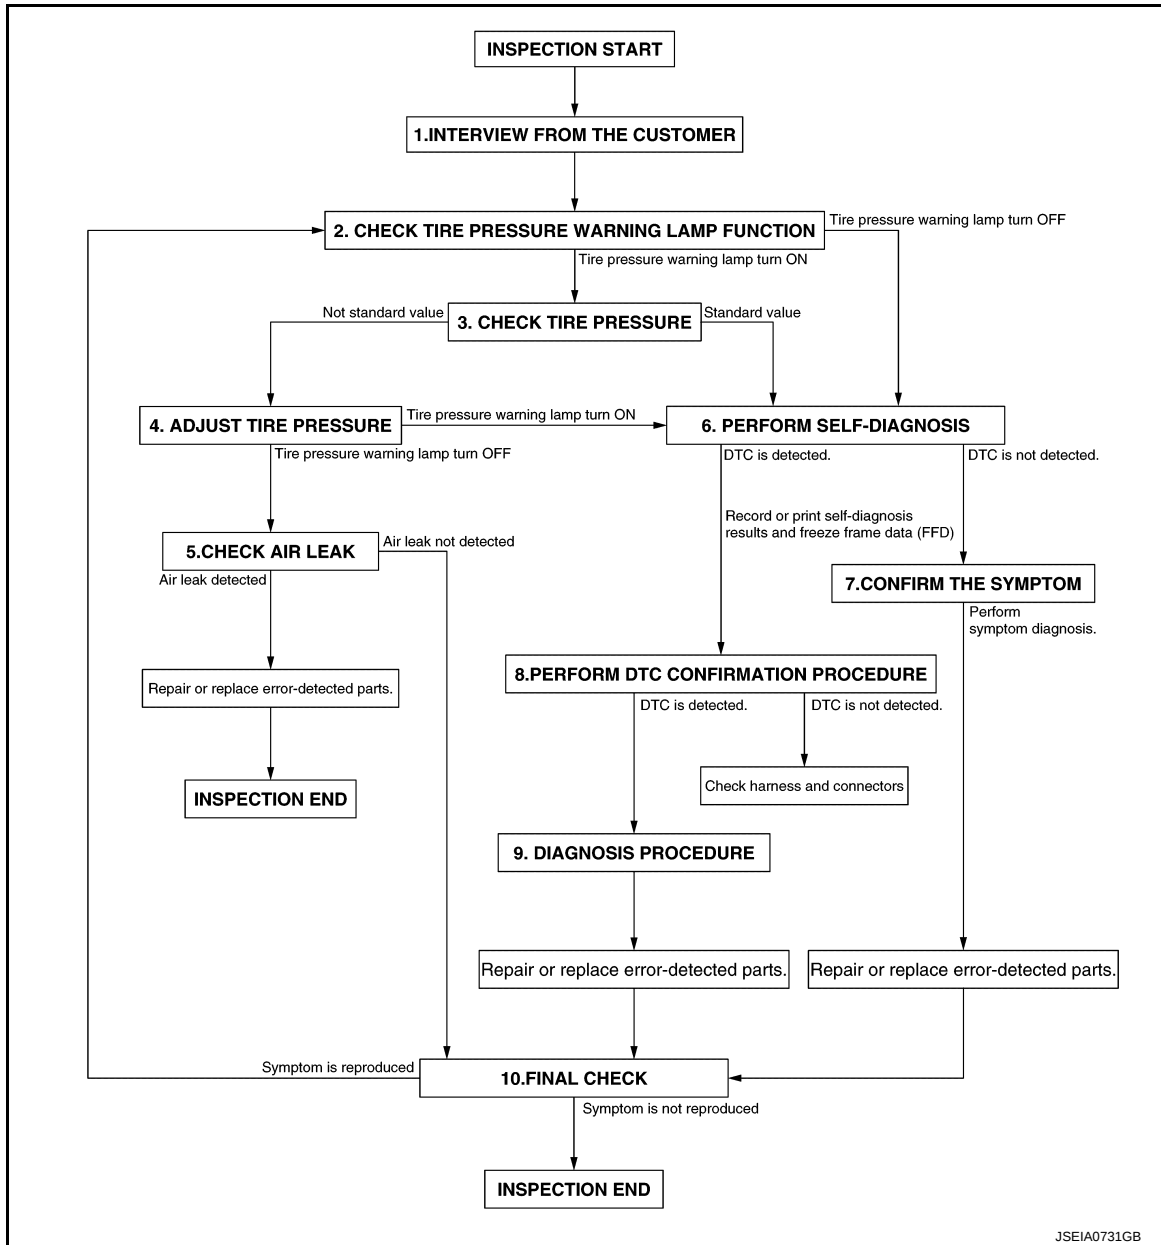

DETAILED FLOW

1. INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing and reproduce the symptom as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

CAUTION:

Customers are not professional. Never guess easily like “maybe the customer means that...,” or “maybe the customer mentions this symptom”.

>> GO TO 2.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

2. CHECK TIRE PRESSURE WARNING LAMP FUNCTION

Check that tire pressure warning lamp in combination meter.

Tire pressure warning lamp turn ON?

YES >> GO TO 3.

NO >> GO TO 6.

3. CHECK TIRE PRESSURE

Check the tire pressure of all wheels. Refer to [WT-68, "Tire Air Pressure"](#).

NOTE:

Check the tire pressure of cold condition.

Is the inspection standard value?

YES >> GO TO 6.

NO >> GO TO 4.

4. ADJUST TIRE PRESSURE

1. Check and adjust the tire pressure for all wheels specified to the value. Refer to [WT-68, "Tire Air Pressure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

Tire pressure warning lamp turn OFF?

YES >> GO TO 5.

NO >> GO TO 6.

5. CHECK AIR LEAK

Using soapsuds etc., check air leak.

NOTE:

Check air valve.

Is air leak detected?

YES >> Repair or replace error-detected parts. Replace the grommet seal. Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

NO >> INSPECTION END

6. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "TPMS".

Is DTC detected?

YES >> Record or print self-diagnosis results and freeze frame data (FFD). GO TO 8.

NO >> GO TO 7.

7. CONFIRM THE SYMPTOM

Perform symptom diagnosis. refer to [WT-50, "Symptom Table"](#).

>> Repair or replace error-detected parts. GO TO 10.

8. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again.

Is DTC detected?

YES >> GO TO 9.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-43, "Intermittent Incident"](#).

9. DIAGNOSIS PROCEDURE

Perform DTC Diagnosis Procedure.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

>> Repair or replace error-detected parts. GO TO 10.

10.FINAL CHECK

Recheck the symptom and check that the symptom is not reproduced on the same conditions.

Is the symptom reproduced?

- YES >> GO TO 2.
- NO >> INSTPECTION END

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

ADDITIONAL SERVICE WHEN REPLACING BCM

< BASIC INSPECTION >

ADDITIONAL SERVICE WHEN REPLACING BCM

Description

INFOID:000000009641550

When replacing BCM, configuration (BCM and TPMS) and then tire pressure sensor ID registration is required.

Work Procedure

INFOID:000000009641551

1.PERFORM CONFIGURATION (BCM)

Perform configuration BCM. Refer to [BCS-82. "Work Procedure"](#).

>> GO TO 2.

2.PERFORM CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM)

Perform configuration tire pressure monitoring system. Refer to [WT-32. "Work Procedure"](#).

>> GO TO 3.

3.PERFORM TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30. "Work Procedure"](#).

>> WORK END

TIRE PRESSURE SENSOR WAKE UP OPERATION

< BASIC INSPECTION >

TIRE PRESSURE SENSOR WAKE UP OPERATION

Description

INFOID:000000009236559

When replacing tire pressure sensor, always tire pressure sensor wake-up is required.

Work Procedure

INFOID:000000009236560

1. TIRE PRESSURE SENSOR WAKE-UP PROCEDURE

 
 
 
 
 
1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

NOTE:

The position of an inactive pressure sensor can be identified by checking the blinking timing of the low tire pressure warning lamp.

Low tire pressure warning lamp blinking timing		Activation tire position
ON OFF		a : 0.3 sec. b : 1.0 sec. Front LH
ON OFF		a : 0.3 sec. b : 1.0 sec. Front RH
ON OFF		a : 0.3 sec. b : 1.0 sec. Rear RH
ON OFF		a : 0.3 sec. b : 1.0 sec. Rear LH
ON OFF		a : 2 sec. b : 0.2 sec. All tires


JPEIC0089GB

2. Contact the tire pressure sensor activation tool (J-45295-A) ① to the side of the tire at the location to the tire pressure sensor.
3. Press and hold the tire pressure sensor activation tool button while pushing the tool to the tire surface. (approximately for 5 seconds)

CAUTION:

Perform the wake-up procedure starting from the vehicle front left wheel, then repeat the procedure in the order of the front right wheel, rear right wheel, and rear left wheel.

4. Check that the turn signal lamps blink twice when the tire pressure sensor wake-up procedure for all wheels is completed.
5. Check that the low tire pressure warning lamp turns OFF, after the tire pressure sensor wake-up procedure is completed for all wheels and turns OFF.

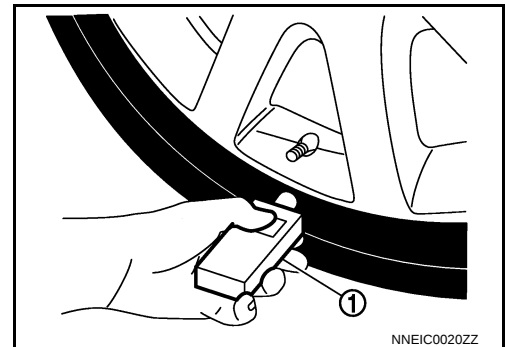

Is the tire pressure sensor wake-up procedure completed?

- YES >> Perform the tire pressure sensor ID registration procedure. Refer to [WT-29, "Work Procedure"](#).
- NO >> Perform trouble diagnosis for the tire pressure sensor. Refer to [WT-36, "Diagnosis Procedure"](#).

TIRE PRESSURE SENSOR ID REGISTRATION

< BASIC INSPECTION >

TIRE PRESSURE SENSOR ID REGISTRATION

Description

INFOID:000000009641553

This procedure must be performed:

- after replacement of a tire pressure sensor or BCM.

Work Procedure

INFOID:000000009671052


TPMS ID registration can be performed using one of the following procedures:

- Transmitter Activation tool (J-45295-A) with CONSULT (preferred method)
- Signal Tech II tool (J-50190) with CONSULT (preferred method)
- Signal Tech II tool (J-50190) without CONSULT
- CONSULT only

TPMS REGISTRATION WITH TRANSMITTER ACTIVATION TOOL (J-45295-A)

① With CONSULT

1. Turn the ignition switch ON.
2. Using CONSULT, select "WORK SUPPORT" in BCM (AIR PRESSURE MONITOR). Then, select "ID REGIST."
3. Select "Start" on "ID REGIST" screen.
4. Hold the transmitter activation tool (J-45295-A) ① against the side of the left front tire, near the valve stem.
5. With the tool held at a 0 to 15 degree angle to the tire, press and hold the transmitter activation tool button until the indicator lamp turns OFF (approximately 5 seconds).
6. Repeat steps 4 and 5 for the remaining tires in this order: right front, right rear and left rear.

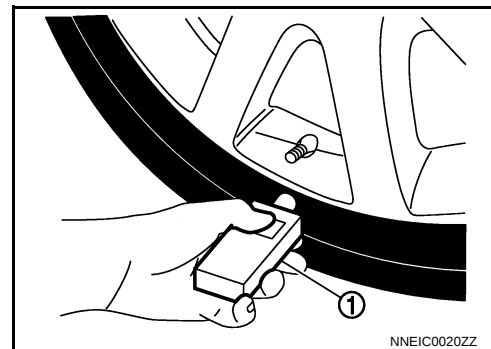

7. When ID registration is complete, check the following pattern at each wheel.

Sequence	ID registration position	Turn signal lamp	CONSULT
1	Front LH	2 blinks	"Yet (red)" ↓ "Done (green)"
2	Front RH		
3	Rear RH		
4	Rear LH		

8. After the ID registration procedure for all wheels is complete, press "End" on the CONSULT to finish ID registration.
9. Test drive the vehicle to ensure that the TPMS lamp is OFF and no warning messages are present.

TPMS REGISTRATION WITH SIGNAL TECH II TOOL (J-50190)

NOTE:

The Signal Tech II must be updated with software version 1.1.48 or newer in order to perform the below procedures. The Signal Tech II software updates can only be downloaded from a CONSULT unit with ASIST. Other versions of ASIST will not show the updates.


① With CONSULT

1. Adjust the tire pressure for all tires to the recommended value. Refer to [WT-68, "Tire Air Pressure"](#).
2. Turn the ignition switch ON.
3. Using CONSULT, select "WORK SUPPORT" in BCM (AIR PRESSURE MONITOR). Then, select "ID REGIST."
4. Select "Start" on "ID REGIST" screen.
5. Turn on the Signal Tech II tool (J-50190).

TIRE PRESSURE SENSOR ID REGISTRATION

< BASIC INSPECTION >

6. Hold the Signal Tech II against the side of the left front tire, near the valve stem.
7. With the tool held at a 0 to 15 degree angle to the tire, select "Activate Sensor" from the main menu, then press and release the "OK" button to activate the sensor. Once the sensor is activated, the vehicle parking lamps will flash and the sensor ID will appear on the CONSULT screen.
8. Repeat steps 6 and 7 for the remaining tires in this order: right front, right rear and left rear.
9. When ID registration is complete, check the following pattern at each wheel.

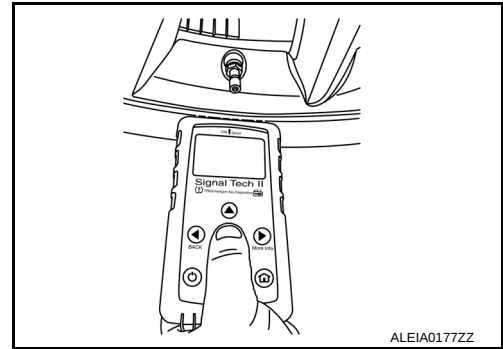


Sequence	ID registration position	Turn signal lamp	CONSULT
1	Front LH	2 blinks	"Yet (red)" ↓ "Done (green)"
2	Front RH		
3	Rear RH		
4	Rear LH		

10. Once all sensors have been activated, select "End" on the CONSULT to finish ID registration.
11. Test drive the vehicle to ensure that the TPMS lamp is OFF and no warning messages are present.

⊗ Without CONSULT

1. Adjust the tire pressure for all tires to the recommended value. Refer to [WT-68, "Tire Air Pressure"](#).
2. Turn on the Signal Tech II tool (J-50190) and select "TPMS Check" from the main menu.
3. Select vehicle model and year.
4. When prompted, hold the Signal Tech II against the side of the left front tire, near the valve stem.
5. With the tool held at a 0 to 15 degree angle to the tire, press and release the "OK" button to activate the sensor. Once the sensor is activated, the tool will sound a tone and the tire pressure will be displayed.
6. Repeat steps 4 and 5 for the remaining tires in this order: right front, right rear and left rear.
7. When prompted, connect the tool to the data link connector. The tool will connect to the BCM, read the VIN, read sensor IDs and check for TPMS DTCs. Along with DTCs detected, one of the following will be displayed next to each wheel:
 - N/A - Not applicable because no ID found by the tool
 - OK - Wheel and sensor are in original position
 - NEW - New ID found compared to BCM
 - RT - Wheel has been rotated
 - Low Press - Low tire pressure
8. If no DTC is present or the repair has been completed, press the "OK" button to register the IDs and clear DTCs.
9. Test drive the vehicle to ensure that the TPMS lamp is OFF and no warning messages are present.
10. Print a Signal Tech II Audit Report for your records. Refer to the Signal Tech II User Guide for instructions.

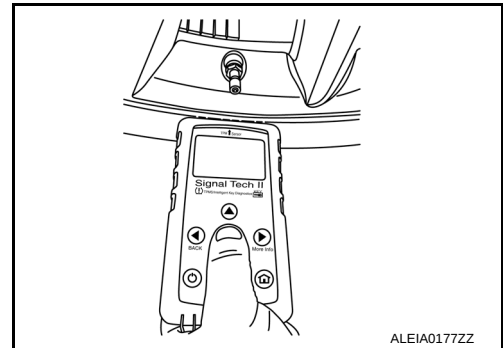

CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM)

< BASIC INSPECTION >

CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM)

Work Procedure

INFOID:000000009641449

CAUTION:

- Use "Manual Configuration" only when "TYPE ID" of BCM cannot be read.
- After configuration, turn the ignition switch from OFF to ON and check that the low tire pressure warning lamp turns OFF after staying illuminated for approximately two seconds.
- If an error occurs during configuration, start over from the beginning.

1.CHECKING TYPE ID (1)

Use FAST (service parts catalogue) to search BCM of the parts number and find "Type ID".

Is "Type ID" displayed?

YES >> Print out "Type ID" and GO TO 2.

NO >> "Configuration" is not required for BCM. Replace in the usual manner. Refer to [BCS-98, "Removal and Installation"](#).

2.CHECKING TYPE ID (2)

ⒺCONSULT Configuration

1. Select "TPMS"
2. Select "Before Replace ECU" of "Read/Write Configuration".
3. Check that "Type ID" is displayed on the CONSULT screen.

Is "Type ID" displayed?

YES >> GO TO 3.

NO >> GO TO 7.

3.VERIFYING TYPE ID (1)

ⒺCONSULT Configuration

Compare a "Type ID" displayed on the CONSULT screen with the one searched by using FAST (service parts catalogue) to check that these "Type ID" agree with each other.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 4.

4.SAVING TYPE ID

ⒺCONSULT Configuration

Save "Type ID" on CONSULT.

>> GO TO 5.

5.REPLACING BCM (1)

Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

>> GO TO 6.

6.WRITING (AUTOMATIC WRITING)

ⒺCONSULT Configuration

1. Select "After Replace ECU" of "Re/programming, Configuration" or that of "Read / Write Configuration".
2. Select the "Type ID" agreeing with the one stored on CONSULT and the one searched by using FAST (service parts catalogue) to write the "Type ID" into the BCM.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 9.

7.REPLACING BCM (2)

CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM)

< BASIC INSPECTION >

Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

>> GO TO 8.

8. WRITING (MANUAL WRITING)

CONSULT Configuration

1. Select "Manual Configuration".
2. Select the "Type ID" searched by using FAST (service parts catalogue) to write the "Type ID" into the BCM.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 9.

9. VERIFYING TYPE ID (2)

Compare "Type ID" written into the BCM with the one searched by using FAST (service parts catalogue) to check that these "Type ID" agree with each other.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 10.

10. CHECKING LOW TIRE PRESSURE WARNING LAMP

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON and check that the low tire pressure warning lamp turns OFF after staying illuminated for approximately two seconds.

CAUTION:

Never start the engine.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Perform the self-diagnosis of "AIR PRESSURE MONITOR" of "BCM". Refer to [WT-13. "AIR PRESSURE MONITOR : CONSULT Function \(BCM-AIR PRESSURE MONITOR\)"](#).

11. PERFORMING SUPPLEMENTARY WORK

1. Perform the tire air pressure. Refer to [WT-68. "Tire Air Pressure"](#).
2. Perform tire pressure sensor ID registration. Refer to [WT-30. "Work Procedure"](#).
3. Perform the self-diagnosis of all systems.
4. Erase self-diagnosis results.

>> End of work.

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

DTC Description

INFOID:000000009641489

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1704	LOW PRESSURE FL (Low tire pressure front left)	Front LH tire pressure drops to 193.1 kPa (1.93 bar, 1.9 kg/cm ² , 28 psi) or less.
C1705	LOW PRESSURE FR (Low tire pressure front right)	Front RH tire pressure drops to 193.1 kPa (1.93 bar, 1.9 kg/cm ² , 28 psi) or less.
C1706	LOW PRESSURE RR (Low tire pressure rear right)	Rear RH tire pressure drops to 193.1 kPa (1.93 bar, 1.9 kg/cm ² , 28 psi) or less.
C1707	LOW PRESSURE RL (Low tire pressure rear left)	Rear LH tire pressure drops to 193.1 kPa (1.93 bar, 1.9 kg/cm ² , 28 psi) or less.

POSSIBLE CAUSE

- Low tire pressure (natural air leak)
- Air leak because of wheel change

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

With CONSULT

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check tire pressure for all wheels and adjust to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).
3. Perform self-diagnosis for "AIR PRESSURE MONITOR" of "BCM".
4. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.

Is DTC C1704, C1705, C1706, or C1707 detected?

YES >> Proceed to [WT-34, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009641490

1.TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

Can the tire pressure sensor ID registration be completed?

YES >> GO TO 2.

NO >> Replace applicable tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

2.CHECK TIRE PRESSURE

Check the tire pressure of all wheels. Refer to [WT-68, "Tire Air Pressure"](#).

CAUTION:

If the checked value is close to the standard, reduce the tire pressure, and then with the ignition switch ON, adjust the tire pressure again so that it is within the standard.

Is the inspection result normal?

YES >> Perform DTC CONFIRMATION PROCEDURE again. Refer to [WT-34, "DTC Description"](#).

NO >> GO TO 3.

3.CHECK TIRE PRESSURE SIGNAL

With CONSULT

1. Adjust tire pressure for all wheels to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).
2. Select "Data Monitor" from "AIR PRESSURE MONITOR" of "BCM".

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

3. Check that the tire pressures match the specified value.

Monitor item	Displayed value
AIR PRESS FL	Approximately equal to value indicated on tire gauge for front LH tire
AIR PRESS FR	Approximately equal to value indicated on tire gauge for front RH tire
AIR PRESS RR	Approximately equal to value indicated on tire gauge for rear RH tire
AIR PRESS RL	Approximately equal to value indicated on tire gauge for rear LH tire

Is the inspection result normal?

YES >> After erasing DTC record, INSPECTION END.

NO >> Repair or replace error-detected parts.

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

C1708, C1709, C1710, C1711 TIRE PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

C1708, C1709, C1710, C1711 TIRE PRESSURE SENSOR

DTC Description

INFOID:000000009641491

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1708	[NO - DATA] - FL (No data front left)	Tire pressure data signal from the front LH wheel tire pressure sensor cannot be detected.
C1709	[NO - DATA] - FR (No data front right)	Tire pressure data signal from the front RH wheel tire pressure sensor cannot be detected.
C1710	[NO - DATA] - RR (No data rear right)	Tire pressure data signal from the rear RH wheel tire pressure sensor cannot be detected.
C1711	[NO - DATA] - RL (No data rear left)	Tire pressure data signal from the rear LH wheel tire pressure sensor cannot be detected.

POSSIBLE CAUSE

- Driving in area with radio interference.
- Tire pressure sensor ID registration incomplete
- Tire pressure sensor
- Harness or connectors
- Remote keyless entry receiver
- BCM

DTC CONFIRMATION PROCEDURE

1. TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION

With CONSULT

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

NOTE:

Avoid driving in areas with radio interference.

2. Perform self-diagnosis for "AIR PRESSURE MONITOR" of "BCM".

Is DTC C1708, C1709, C1710, or C1711 detected?

YES >> Proceed to [WT-36, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009641492

1. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) POWER CIRCUIT

1. Turn the ignition switch OFF.
2. Check 5 A fuse (#17).
3. Disconnect fuse block (J/B) harness connector.
4. Check continuity between remote keyless entry receiver (tire pressure receiver) harness connector and fuse block (J/B) harness connector.

Remote keyless entry receiver (Tire pressure receiver)		Ground	Voltage
Connector	Terminal		
M113	1	—	9 – 16 V

Is the inspection result normal?

C1708, C1709, C1710, C1711 TIRE PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 2.
NO >> Repair or replace harness or connectors.

2.CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) CIRCUIT

1. Disconnect BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.
2. Check the continuity between BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.

BCM		Remote keyless entry receiver (tire pressure receiver)		Continuity
Connector	Terminal	Connector	Terminal	
M13	17	M113	3	Existed
M16	119		2	

3. Check the continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M13	17	Ground	Not existed
M16	119		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace error-detected parts.

3.TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

Can the tire pressure sensor ID registration be completed?

- YES >> GO TO 4.
NO >> Replace applicable tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

4.RECHECK TIRE PRESSURE SIGNAL

With CONSULT

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

NOTE:

Avoid driving in areas with radio interference.

2. Select "DATA MONITOR" from "AIR PRESSURE MONITOR" of "BCM".
3. Check that the air pressures match the specified value.

Monitor item	Displayed value
AIR PRESS FL	Approximately equal to the indication on tire gauge value for front LH tire
AIR PRESS FR	Approximately equal to the indication on tire gauge value for front RH tire
AIR PRESS RR	Approximately equal to the indication on tire gauge value for rear RH tire
AIR PRESS RL	Approximately equal to the indication on tire gauge value for rear LH tire

Is the inspection result normal?

- YES >> After erasing DTC record, INSPECTION END.
NO >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

C1716, C1717, C1718, C1719 TIRE PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

C1716, C1717, C1718, C1719 TIRE PRESSURE SENSOR

DTC Description

INFOID:000000009641557

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1716	[PRESSDATA ERR] FL (Pressure data error front left)	Malfunction in the tire pressure data from the front LH wheel tire pressure sensor.
C1717	[PRESSDATA ERR] FR (Pressure data error front right)	Malfunction in the tire pressure data from the front RH wheel tire pressure sensor.
C1718	[PRESSDATA ERR] RR (Pressure data error rear right)	Malfunction in the tire pressure data from the rear RH wheel tire pressure sensor.
C1719	[PRESSDATA ERR] RL (Pressure data error rear left)	Malfunction in the tire pressure data from the rear LH wheel tire pressure sensor.

POSSIBLE CAUSE

- Excessive tire pressure
- Tire pressure sensor ID registration incomplete
- Tire pressure sensor
- BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

With CONSULT

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check tire pressure for all wheels and adjust to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).
3. Perform self-diagnosis for "AIR PRESSURE MONITOR" of "BCM".

Is DTC C1716, C1717, C1718, or C1719 detected?

- YES >> Proceed to [WT-38, "Diagnosis Procedure"](#).
NO-1 >> To check malfunction symptom before repair: Refer to [GI-43, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000009641558

1.TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

Can the tire pressure sensor ID registration be completed?

- YES >> GO TO 2.
NO >> Replace applicable tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

2.CHECK TIRE PRESSURE SIGNAL

With CONSULT

1. Adjust tire pressure for all wheels to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).
2. Select "DATA MONITOR" from "AIR PRESSURE MONITOR" of "BCM".
3. Check the values that are displayed for "AIR PRESS FL", "AIR PRESS FR", "AIR PRESS RR", and "AIR PRESS RL".

Which tire pressures is displayed as 438.60 kPa (4.47 kg/cm², 63.60 psi)?

- YES >> Replace tire pressure sensor the tire pressure as 438.60 kPa (4.386 bar, 4.47 kg/cm², 63.60 psi) displayed. Refer to [WT-64, "Removal and Installation"](#).
NO >> Perform "DTC CONFIRMATION PROCEDURE" (self-diagnosis) again. Refer to [WT-44, "DTC Description"](#).

C1729 VEHICLE SPEED SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

C1729 VEHICLE SPEED SIGNAL

DTC Description

INFOID:0000000009641562

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1729	VHCL SPEED SIG ERR (Vehicle speed signal error)	Vehicle speed signal not detected.

POSSIBLE CAUSE

- CAN communication
- Combination meter
- BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

With CONSULT

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
2. Perform self-diagnosis for "AIR PRESSURE MONITOR" of "BCM".

Is DTC C1729 detected?

- YES >> Proceed to [WT-39, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-43, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000009641563

1.PERFORM SELF DIAGNOSTIC RESULT FOR COMBINATION METER

With CONSULT

Perform self-diagnosis for "METER M&A". Refer to [MWI-64, "CONSULT Function"](#).

Are any DTCs detected?

- YES >> Refer to [MWI-80, "DTC Index"](#).
- NO >> GO TO 2.

2.CHECK BCM INPUT/OUTPUT SIGNAL

Check BCM input/output signal values. Refer to [BCS-35, "Reference Value"](#).

Is the inspection result normal?

- YES >> Check pin terminal and connection of each harness connector for malfunctioning conditions.
- NO >> Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

C1730, C1731, C1732, C1733 FLAT TIRE

< DTC/CIRCUIT DIAGNOSIS >

C1730, C1731, C1732, C1733 FLAT TIRE

DTC Description

INFOID:000000009697226

If the tire pressure drops below the specified value, the tire pressure monitoring control unit judges that a flat tire occurs and displays a message on the information display.

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1730	FLAT TIRE FL	Front left wheel pressure is 70 kPa (0.7 kg/cm ² , 10 psi) or less	Low tire pressure
C1731	FLAT TIRE FR	Front right wheel pressure is 70 kPa (0.7 kg/cm ² , 10 psi) or less	
C1732	FLAT TIRE RR	Rear right wheel pressure is 70 kPa (0.7 kg/cm ² , 10 psi) or less	
C1733	FLAT TIRE RL	Rear left wheel pressure is 70 kPa (0.7 kg/cm ² , 10 psi) or less	

NOTE:

Specified tire pressure: Refer to [WT-68, "Tire Air Pressure"](#).

DTC REPRODUCTION PROCEDURE

1.CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).
3. Perform self-diagnosis of the low tire pressure warning control unit.

Is DTC "C1730", "C1731", "C1732", or "C1733" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-40, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009697227

1.CHECK TIRE PRESSURE

Check the for pressure of all wheels. Refer to [WT-68, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> After adjusting the tire pressure, GO TO 3.

2.TRANSMITTER ID REGISTRATION

Perform transmitter ID registration. Refer to [WT-30, "Work Procedure"](#).

Is transmitter ID registration completed?

- YES >> Perform "DTC REPRODUCTION PROCEDURE" (self-diagnosis) again. Refer to [WT-40, "DTC Description"](#).
NO >> Refer to [WT-29, "Work Procedure"](#).

3.ADJUST TIRE PRESSURE

Check and adjust the tire pressure for all wheels specified to the value. Refer to [WT-68, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check or replace the road wheels and tires, and adjust the tire pressures.

C1730, C1731, C1732, C1733 FLAT TIRE

< DTC/CIRCUIT DIAGNOSIS >

4.CHECK TIRE PRESSURE SIGNAL

 With CONSULT

1. Select "DATA MONITOR" to display the tire pressure for all wheels.
2. Check that the tire pressure is the specified value.

Check items	Condition
AIR PRESS FL	Approximately equal to the indication on tire gauge value for each tires.
AIR PRESS FR	
AIR PRESS RR	
AIR PRESS RL	

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair or replace error-detected part.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

C1734 CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

C1734 CONTROL UNIT

DTC Description

INFOID:000000009641493

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1734	CONTROL UNIT (Control unit)	TPMS malfunction in BCM.

POSSIBLE CAUSE

- BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

With CONSULT

Perform self-diagnosis for "AIR PRESSURE MONITOR" of "BCM".

Is DTC C1734 detected?

- YES >> Proceed to [WT-42, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-43, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000009641494

1.CHECK BCM HARNESS CONNECTORS

Check BCM harness connectors for damage or loose connections.

Is the inspection result normal?

- YES >> Repair or replace connectors.
- NO >> GO TO 2.

2.CHECK BCM POWER SUPPLY AND GROUND

Check BCM power supply and ground. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace harness or connectors.

3.CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) POWER CIRCUIT

1. Turn the ignition switch OFF.
2. Check 5 A fuse (#17).
3. Disconnect fuse block (J/B) harness connector.
4. Check continuity between remote keyless entry receiver (tire pressure receiver) harness connector and fuse block (J/B) harness connector.

Remote keyless entry receiver (Tire pressure receiver)		Ground	Voltage
Connector	Terminal		
M113	1	—	9 – 16 V

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace harness or connectors.

4.CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) CIRCUIT

1. Disconnect BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.

C1734 CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

2. Check the continuity between BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.

BCM		Remote keyless entry receiver (tire pressure receiver)		Continuity
Connector	Terminal	Connector	Terminal	
M13	17	M113	3	Existed
M16	119		2	

3. Check the continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M13	17	Ground	Not existed
M16	119		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK BCM INPUT/OUTPUT SIGNALS

Check BCM input/output signals. Refer to [BCS-35. "Reference Value"](#).

Is the inspection result normal?

YES >> After erasing DTC record, INSPECTION END.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

C1761, C1762, C1763, C1764 TIRE PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

C1761, C1762, C1763, C1764 TIRE PRESSURE SENSOR

DTC Description

INFOID:000000009641569

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1761	TEMPERATURE DATA FL (Temperature data front left)	Malfunction in the tire temperture data from the front LH wheel tire pressure sensor.
C1762	TEMPERATURE DATA FR (Temperature data front right)	Malfunction in the tire temperture data from the front RH wheel tire pressure sensor.
C1763	TEMPERATURE DATA RR (Temperature data rear right)	Malfunction in the tire temperture data from the rear RH wheel tire pressure sensor.
C1764	TEMPERATURE DATA RL (Temperature data rear left)	Malfunction in the tire temperture data from the rear LH wheel tire pressure sensor.

POSSIBLE CAUSE

- Tire pressure sensor
- BCM

Diagnosis Procedure

INFOID:000000009670833

1.REPLACE TIRE PRESSURE SENSOR

When DTC "C1761, C1762, C1763, C1764" is detected, replace tire pressure sensor.

>> Replace tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

C1769 CONFIGURATION SETTING

< DTC/CIRCUIT DIAGNOSIS >

C1769 CONFIGURATION SETTING

DTC Description

INFOID:0000000009642371

This procedure must be performed:

- after replacement of BCM.

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition
C1769	CONFIG SETTING (Configuration setting)	Receiver ID registration cannot be performed.

Diagnosis Procedure

INFOID:0000000009662403

1. TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

Does low tire pressure warning lamp turn OFF?

YES >> INSPECTION END

NO >> Configuration setting tire pressure monitoring system. Refer to [WT-32, "Work Procedure"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

C1770, C1771, C1772, C1773 G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

C1770, C1771, C1772, C1773 G SENSOR

DTC Description

INFOID:0000000009641577

DTC DETECTION LOGIC

DTC No.	CONSULT screen item (Trouble diagnosis content)	DTC Detection Condition
C1770	G SENSOR FL (G sensor front left)	Malfunction in the G sensor data from front LH wheel sensor.
C1771	G SENSOR FR (G sensor front right)	Malfunction in the G sensor data from front RH wheel sensor.
C1772	G SENSOR RR (G sensor rear right)	Malfunction in the G sensor data from rear RH wheel sensor.
C1773	G SENSOR RL (G sensor rear left)	Malfunction in the G sensor data from rear LH wheel sensor.

POSSIBLE CAUSE

- Tire pressure sensor
- BCM

Diagnosis Procedure

INFOID:0000000009670834

1.

When DTC "C1770, C1771, C1772, C1773" is detected, replace tire pressure sensor.

>> Replace tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

U1000 CAN COMM CIRCUIT

Description

INFOID:000000009236579

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicates data but selectively reads required data only.

DTC Logic

INFOID:000000009236580

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	Low tire pressure warning control unit is not communicating CAN communication signal for 2 seconds or more.	- CAN communication malfunction - Malfunction of low tire pressure warning control unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION

With CONSULT

- Drive for several minutes at a speed of 40 km/h (25 MPH) or more.
- Stop the vehicle.
- Perform self-diagnosis for "AIR PRESSURE MONITOR".

Is DTC "U1000" detected?

- YES >> Proceed to [WT-47, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009236581

Proceed to [LAN-42, "CAN COMMUNICATION SYSTEM : CAN System Specification Chart"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000009236582

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicates data but selectively reads required data only.

DTC Logic

INFOID:000000009236583

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1010	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of BCM.	Malfunction of BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION

With CONSULT

1. Drive for several minutes at a speed of 40 km/h (25 MPH) or more.
2. Stop the vehicle.
3. Perform self-diagnosis for "AIR PRESSURE MONITOR".

Is DTC "U1010" detected?

- YES >> Proceed to [WT-48. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009236584

1.CHECK BCM

Check BCM harness connector for disconnection or deformation.

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).
NO >> Repair or replace error-detected parts.

LOW TIRE PRESSURE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP

Component Function Check

INFOID:000000009641505

1.CHECK THE ILLUMINATION OF THE LOW TIRE PRESSURE WARNING LAMP

Check that the low tire pressure warning lamp is turned OFF after illuminating for approximately 1 second, when the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Perform trouble diagnosis. Refer to [WT-49, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009641506

1.POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is any DTC detected?

YES >> Check the DTC. Refer to [BCS-62, "DTC Index"](#).

NO >> GO TO 3.

3.CHECK LOW TIRE PRESSURE WARNING LAMP SIGNAL

 With CONSULT

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".

3. Select "BCM" in "DATA MONITOR", and check that the low tire pressure warning lamp is turned OFF after illuminating for approximately 1 second, when the ignition switch is turned ON.

Is the inspection result normal?

YES >> Check the combination meter. Refer to [MWI-104, "COMBINATION METER : Diagnosis Procedure"](#).

NO >> Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

TPMS

Symptom Table

INFOID:000000009641511

LOW TIRE PRESSURE WARNING LAMP SYMPTOM CHART

TPMS

< SYMPTOM DIAGNOSIS >

Diagnosis items	Symptom (Ignition switch ON)	Low tire pressure warning lamp	Cause	Action
Low tire pressure warning lamp	The low tire pressure warning lamp illuminates for 1 second, then turns OFF.	 ON 1 sec > stays OFF SEIA0592E	Wake-up operation for all tire pressure sensors at wheels is completed.	No system malfunctions
	The low tire pressure warning lamp repeats blinking ON for 2 seconds and OFF for 0.2 seconds.	 Blinks:  ON 2 sec > OFF 0.2 sec SEIA0593E	Wake-up operation for all tire pressure sensors at wheels is not completed.	Perform the ID registration for all tire pressure sensors at wheels. Refer to WT-30, "Work Procedure" .
	The low tire pressure warning lamp blinks once.	 Blinks 1 time ON 0.3 sec > OFF 1.0 sec JPEIC0090GB	The front left tire pressure sensor is not activated.	Perform the ID registration for the tire pressure sensor at front left wheel. Refer to WT-30, "Work Procedure" .
	The low tire pressure warning lamp repeats blinking twice.	  Blinks 2 times ON 0.3 sec > OFF 0.3 sec SEIA0595E	The front right tire pressure sensor is not activated.	Perform the ID registration for the tire pressure sensor at front right wheel. Refer to WT-30, "Work Procedure" .
	The low tire pressure warning lamp repeats blinking for 3 times.	   Blinks 3 times ON 0.3 sec > OFF 0.3 sec SEIA0596E	The rear right tire pressure sensor is not activated.	Perform the ID registration for the tire pressure sensor at rear right wheel. Refer to WT-30, "Work Procedure" .
	The low tire pressure warning lamp repeats blinking for 4 times.	    Blinks 4 times ON 0.3 sec > OFF 0.3 sec SEIA0597E	The rear left tire pressure sensor is not activated.	Perform the ID registration for the tire pressure sensor at rear left wheel. Refer to WT-30, "Work Procedure" .
	The low tire pressure warning lamp turns ON and stays illuminated.	 Comes ON and stays ON SEIA0598E	Low tire pressure	Check the tire pressure for all wheels and adjust to the specified value. Refer to WT-68, "Tire Air Pressure" .

A

B

C

D

WT

F

G

H

I

J

K

L

M

 
N

O

P

TPMS

< SYMPTOM DIAGNOSIS >

Diagnosis items	Symptom (Ignition switch ON)	Low tire pressure warning lamp	Cause	Action
Low tire pressure warning lamp	The low tire pressure warning lamp repeats blinking at 0.5-second intervals for 1 minute, and then stays illuminated.	 Blinks 1 min ON 0.5 sec > OFF 0.5 sec and stays ON SEIA0788E	The combination meter fuse is open or removed (or pulled out).	Check and install the combination meter fuse. If necessary, replace the fuse.
			The BCM harness connector is removed.	Check the connection conditions of the BCM harness connector, and repair if necessary.
Low tire pressure warning lamp	The low tire pressure warning lamp blinks once.	 Blinks 4 times ON 0.3 sec > OFF 0.3 sec and stays ON JSEIA0734GB	Tire Pressure Monitoring System (TPMS) malfunction.	- Perform CONSULT self-diagnosis. Refer to WT-13, "AIR PRESSURE MONITOR : CONSULT Function (BCM-AIR PRESSURE MONITOR)". - If necessary, perform tire pressure sensor ID registration. Refer to WT-30, "Work Procedure".
			Wake-up operation for all tire pressure sensors at wheels is not completed.	Perform the ID registration for all tire pressure sensors at wheels. Refer to WT-30, "Work Procedure" .
Hazard warning lamp	The hazard warning lamp does not blink twice when the tire pressure sensor is activated. Or the buzzer does not sound.	—	The tire pressure sensor activation tool does not activate.	Replace the battery in the tire pressure sensor activation tool.
			The ignition switch is OFF when the tire pressure sensor wake-up operation is performed.	Turn the ignition switch ON when performing the tire pressure sensor wake-up operation.
			The tire pressure sensor activation tool is not used in the correct position.	Operate the tire pressure sensor activation tool in the correct position when performing the wake-up operation.
			The tire pressure sensor is already waked up.	No procedure.

NOTE:

If tire pressure sensor wake-up operation is not completed for two or more tire pressure sensors, the applicable low tire pressure warning lamp blinking patterns are displayed continuously.

(Example: Blinks once/OFF/blinks 3 times = Wake-up operation is not completed at the front left wheel and rear right wheel tire pressure sensors.)

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:000000009641512

The low tire pressure warning lamp does not illuminate when the ignition switch is turned ON.

NOTE:

The low tire pressure warning lamp illuminates for approximately 1 second and then turns OFF when the ignition switch is turned ON. This is to check that no abnormal condition is present in the tire pressure monitoring system.

The lamp bulb may be burnt out or the tire pressure monitoring system may be malfunctioning if the low tire pressure warning lamp does not illuminate when the ignition switch is turned ON.

Diagnosis Procedure

INFOID:000000009641513

1.CHECK LOW TIRE PRESSURE WARNING LAMP SIGNAL

With CONSULT

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Select "ACTIVE TEST" in "AIR PRESSURE MONITOR" of "BCM".
3. Touch "WARNING LAMP" to turn ON the low tire pressure warning lamp.

When "ACTIVE TEST" is performed, does the low tire pressure warning lamp in the combination meter turn ON?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK LOW TIRE PRESSURE WARNING LAMP OPERATION

Check that the low tire pressure warning lamp is turned OFF after turns ON for approximately 1 second, when the ignition switch is turned ON.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

3.CHECK COMBINATION METER POWER SUPPLY CIRCUIT

Perform the trouble diagnosis for combination meter power supply circuit. Refer to [MWI-104, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES-1 >> INSPECTION END

NO >> Repair or replace error-detected parts.

LOW TIRE PRESSURE WARNING LAMP STAYS ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP STAYS ON

Description

INFOID:000000009641579

The low tire pressure warning lamp does not turn OFF after several seconds is passed after engine starts.

Diagnosis Procedure

INFOID:000000009641580

1.CHECK TIRE PRESSURE

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Inspect or repair the tires or wheels.

2.CHECK LOW TIRE PRESSURE WARNING LAMP

Check low tire pressure warning lamp display.

Does not low tire pressure warning lamp turn OFF?

YES >> INSPECTION END

NO >> GO TO 3.

3.CHECK BCM

 **With CONSULT**

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is any DTC detected?

YES >> Check the DTC. Refer to [BCS-62, "DTC Index"](#).

NO >> GO TO 4.

4.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for power supply and ground circuit. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace error-detected parts.

LOW TIRE PRESSURE WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP BLINKS

Description

INFOID:000000009641514

The low tire pressure warning lamp blinks when the ignition switch is turned ON.

NOTE:

The position of an inactive tire pressure sensor can be identified by checking the blinking timing of the low tire pressure warning lamp.

Low tire pressure warning lamp blinking timing		Activation tire position
ON 	a : 0.3 sec. b : 1.0 sec.	Front LH
ON 	a : 0.3 sec. b : 1.0 sec.	Front RH
ON 	a : 0.3 sec. b : 1.0 sec.	Rear RH
ON 	a : 0.3 sec. b : 1.0 sec.	Rear LH
ON 	a : 2 sec. b : 0.2 sec.	All tires

JPEIC0089GB

Diagnosis Procedure

INFOID:000000009641515

1. TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

Is tire pressure sensor ID registration completed?

YES >> INSPECTION END

NO >> Perform the self-diagnosis for "AIR PRESSURE MONITOR". Refer to [BCS-62, "DTC Index"](#).

ID REGISTRATION CANNOT BE COMPLETED

< SYMPTOM DIAGNOSIS >

ID REGISTRATION CANNOT BE COMPLETED

Description

INFOID:000000009236595

The ID of the tire pressure sensor installed in each wheel cannot be registered in the tire pressure monitoring system.

Inspect the tire pressure sensor or the tire pressure monitoring system circuit.

Diagnosis Procedure

INFOID:000000009236596

1. TIRE PRESSURE SENSOR WAKE-UP

Perform the tire pressure sensor wake-up. Refer to [WT-29, "Work Procedure"](#).

Is the tire pressure sensor wake-up completed?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK TIRE PRESSURE SENSOR ACTIVATION TOOL

Check tire pressure sensor activation tool.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the battery of tire pressure sensor activation tool or repair/replace the tire pressure sensor activation tool.

3. TIRE PRESSURE SENSOR ID REGISTRATION

Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

CAUTION:

To perform ID registration, observe the following points:

- Never register ID in a place where radio waves are interfered (e.g. radio tower).
- Never register ID in a place close to vehicles including TPMS.

Is tire pressure sensor ID registration completed?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK TIRE PRESSURE SIGNAL

Change the work location and perform ID registration again.

NOTE:

Depending on the tire pressure sensor position*, a blind spot exists, and the tire pressure receiver gets a poor reception. If an ID registration is performed under this condition, the registration may not be completed. In such case, follow the instructions below to improve the radio wave receiving environment.

- Rotate tire by 90°, 180°, or 270°. (This Step is to change tire pressure sensor position.)
- Open the door close to the tire of which ID registration is ongoing.

*: Radio wave reception condition depends on vehicle architecture (e.g. body harness layout, tire wheel design) or environment.

When ID registration is performed, which wheels do not react?

All wheels react and ID registration is possible.>>INSPECTION END

Only certain wheel(s) do not react.>>Replace applicable tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

All wheels do not react.>>Check the tire pressure receiver (remote keyless entry receiver). Refer to [DLK-122, "Diagnosis Procedure"](#).

HAZARD WARNING LAMP REMAINS ON

< SYMPTOM DIAGNOSIS >

HAZARD WARNING LAMP REMAINS ON

Description

INFOID:000000009236597

The hazard warning lamp remains on.

Diagnosis Procedure

INFOID:000000009236598

1.CHECK HAZARD WARNING LAMP OPERATION

Check hazard warning lamp operation with hazard switch.

Is the operation normal?

YES >> GO TO 2.

NO >> Perform trouble diagnosis for the hazard warning lamp. Refer to [EXL-158, "Diagnosis Procedure"](#).

2.CHECK HAZARD REQUEST SIGNAL CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the hazard warning lamp switch connector and BCM connector.
3. Check the continuity between the low tire pressure warning control unit connector and the ground.

BCM		—	Continuity
Connector	Terminal		
M43	30	Ground	Not existed

Is the inspection result normal?

YES >> Repair or replace the malfunctioning harness or connector.

NO >> Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000009641516

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page			WT-62	WT-62	WT-59	WT-68	WT-62	—	—	WT-68	NVH in FAX and FSU sections.	NVH in RAX and RSU sections.	Refer to TIRES in this chart.	Refer to ROAD WHEEL in this chart.	NVH in FAX section.	NVH in FAX BR section.	NVH in ST section.
Possible cause and SUSPECTED PARTS			Improper installation, looseness	Out-of-round	Imbalance	Incorrect tire pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	FRONT AXLE AND FRONT SUSPENSION	REAR AXLE AND REAR SUSPENSION	TIRES	ROAD WHEELS	DRIVE SHAFT	BRAKE	STEERING
Symptom	TIRES	Noise	x	x	x	x	x	x	x		x	x		x	x	x	x
		Shake	x	x	x	x	x	x		x	x	x		x	x	x	x
		Vibration				x				x	x	x			x		x
		Shimmy	x	x	x	x	x	x	x	x	x	x		x		x	x
		Shudder	x	x	x	x	x	x		x	x	x		x		x	x
		Poor quality ride or handling	x	x	x	x	x	x		x	x		x	x			
	ROAD WHEEL	Noise	x	x	x			x			x	x	x		x	x	x
		Shake	x	x	x			x			x	x	x		x	x	x
		Shimmy, Shudder	x	x	x			x			x	x	x			x	x
		Poor quality ride or handling	x	x	x			x			x	x	x				

x: Applicable

PERIODIC MAINTENANCE

ROAD WHEEL

Inspection

INFOID:000000009641517

APPEARANCE

Road Wheel

- Check road wheel for deformation, cracks, corrosion and other damage.
- Check wheel nuts for looseness by using torque wrench.

Wheel nut tightening torque : Refer to [WT-62, "Exploded View"](#).

Tire

- Check entire circumference and both sides of each tire for deformation, cracks, scratch and other damage.
- Check tire tread for wear and foreign matter such as nails and small rock.
- Check that tire pressure is the specified value.

Tire pressure : Refer to [WT-68, "Tire Air Pressure"](#).

Wheel Balance Adjustment (Aluminum Wheel)

INFOID:000000009641518

PREPARATION BEFORE ADJUSTMENT

Using releasing agent, remove double-faced adhesive tape from the road wheel.

CAUTION:

- **Be careful not to scratch the road wheel during removal.**
- **After removing double-faced adhesive tape, wipe clean traces of releasing agent from the road wheel.**

ADJUSTMENT

- The details of the adjustment procedure are different for each model of wheel balancer. Therefore, refer to each instruction manual.
- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for aluminum wheels.

1. Set road wheel on tire balance machine using the center hole as a guide. Start the tire balance machine.
2. When inner and outer unbalance values are shown on the tire balance machine indicator, multiply outer unbalance value by 5/3 to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value above and install to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- **Never install the inner balance weight before installing the outer balance weight.**
- **Before installing the balance weight, always to clean the mating surface of the road wheel.**

- a. Indicated unbalance value $\times 5/3 =$ balance weight to be installed

Calculation example:

23 g (0.81 oz) $\times 5/3 = 38.33$ g (1.35 oz) $\Rightarrow$ 40 g (1.41 oz) balance weight (closer to calculated balance weight value)


NOTE:

Note that balance weight value must be closer to the calculated balance weight value.

Example:

37.4 $\Rightarrow$ 35 g (1.23 oz)

37.5 $\Rightarrow$ 40 g (1.41 oz)

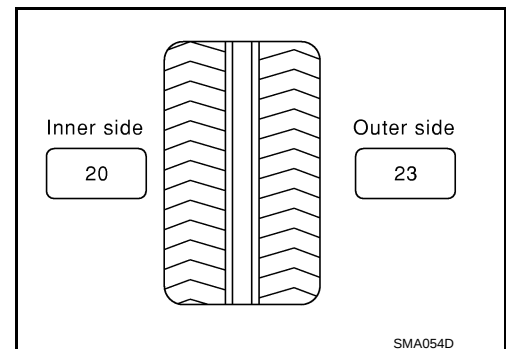

- b. Installed balance weight in the position.


ROAD WHEEL

< PERIODIC MAINTENANCE >

- When installing balance weight ① to road wheels, set it into the grooved area ④ on the inner wall of the road wheel as shown in the figure so that the balance weight center ⑤ is aligned with the tire balance machine indication position (angle) ③.

CAUTION:


- Always use genuine NISSAN balance weights.
- Balance weights are non-reusable; always replace with new ones.
- Never install three or more sheets of balance weight.

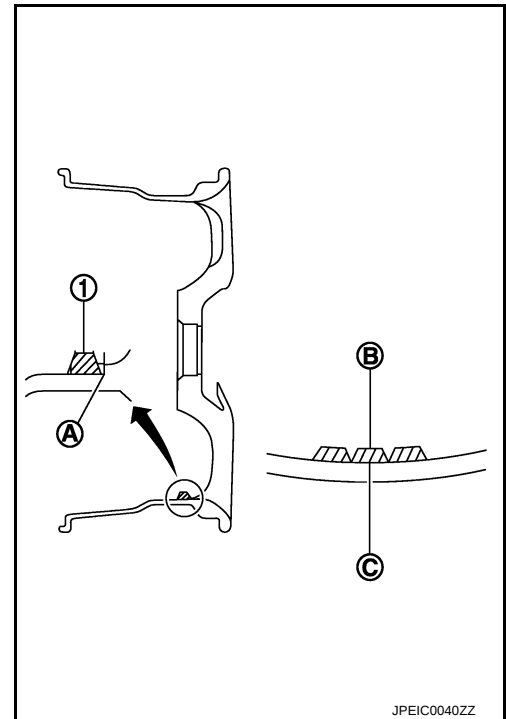

- c. If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other as shown in the figure.

CAUTION:

Never install one balance weight sheet on top of another.

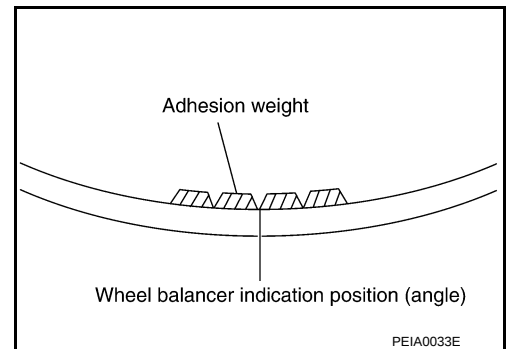

3. Start the tire balance machine again.
4. Install drive-in balance weight on inner side of road wheel in the tire balance machine indication position (angle).

CAUTION:

Never install three or more balance weight.

5. Start the tire balance machine. Check that the inner and outer residual unbalance value is within the allowable unbalance value.

CAUTION:

If either residual unbalance value exceeds limit, repeat installation procedures.

Allowable unbalance value

Dynamic (At flange) : Refer to [WT-68, "Road Wheel"](#).

Static (At flange) : Refer to [WT-68, "Road Wheel"](#).

ROAD WHEEL

< PERIODIC MAINTENANCE >


Tire Rotation

INFOID:000000009641520

- Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-4, "FOR NORTH AMERICA : Explanation of General Maintenance"](#).
- When installing the wheel, tighten wheel nuts to the specified torque. Refer to [WT-62, "Exploded View"](#).

CAUTION:

- **When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.**
- **Be careful not to tighten wheel nut at torque exceeding the criteria.**
- **Use NISSAN genuine wheel nut.**

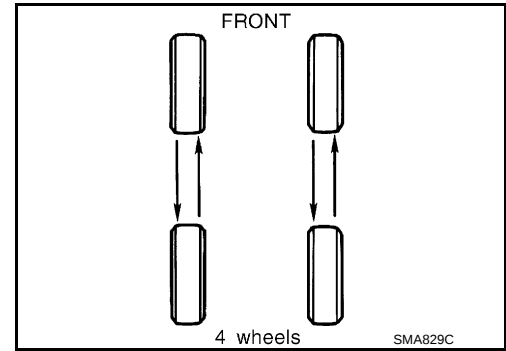

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

ROAD WHEEL TIRE ASSEMBLY


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

ROAD WHEEL TIRE ASSEMBLY

Exploded View

INFOID:000000009236601

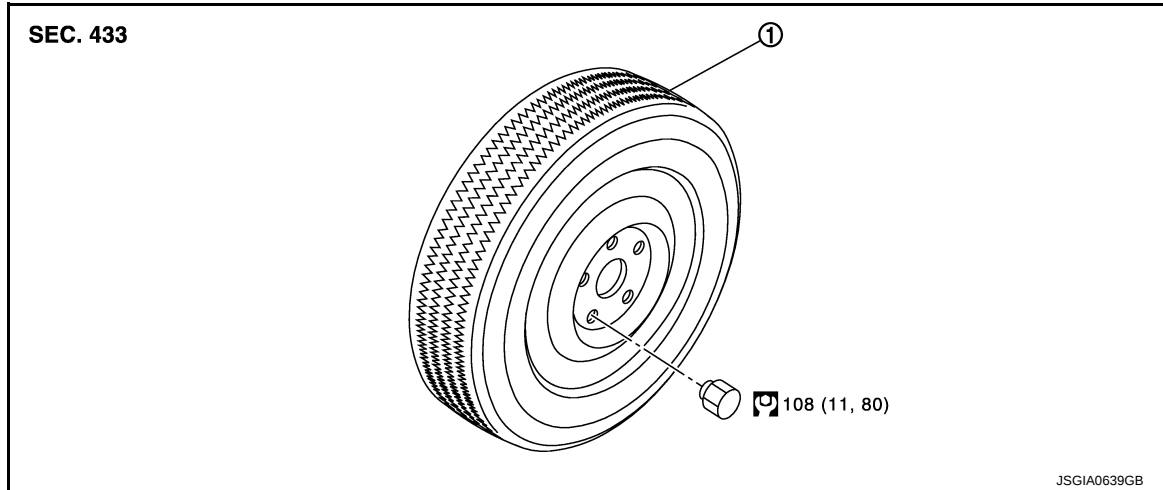

① Tire assembly

Ⓒ : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:000000009236602

REMOVAL

1. Remove wheel nuts.
2. Remove tire assembly.

INSTALLATION

Note the following, install in the reverse order of removal.

- When replacing or rotating wheels, perform the ID registration. Refer to [WT-30, "Work Procedure"](#).
- When replacing wheels, install tire pressure sensor. Refer to [WT-64, "Removal and Installation"](#).

CAUTION:

Never reuse grommet seal.

Inspection

INFOID:000000009236603


ALUMINUM WHEEL

1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from aluminum wheel and mount on a tire balance machine.
 - b. Set dial indicator as shown in the figure.
 - c. Check runout, if the axial runout ① or radial runout ② exceeds the limit, replace aluminum wheel.

Limit

Axial runout ① : Refer to [WT-68, "Road Wheel"](#).

Radial runout ② : Refer to [WT-68, "Road Wheel"](#).

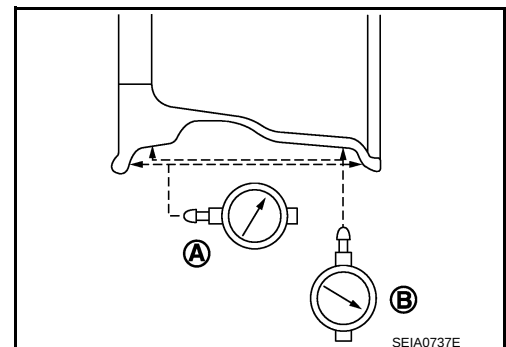

REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER)

< REMOVAL AND INSTALLATION >

REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER)

Removal and Installation

INFOID:000000009641647

The tire pressure receiver is an integral part of the remote keyless entry receiver. Refer to [DLK-253. "Removal and Installation"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P


TIRE PRESSURE SENSOR

< REMOVAL AND INSTALLATION >

TIRE PRESSURE SENSOR

Exploded View

INFOID:000000009641649

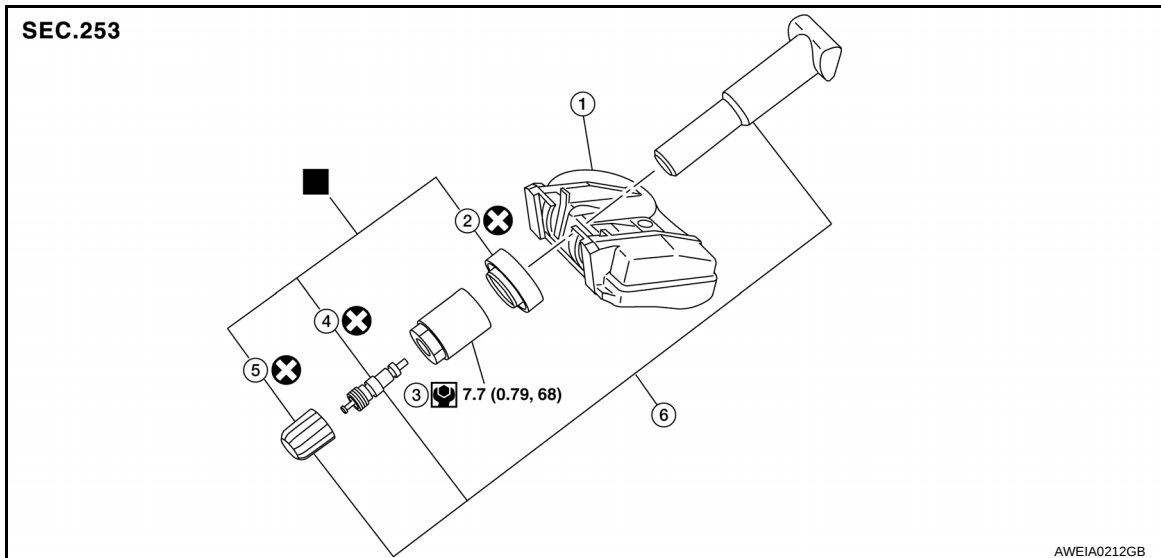

- | | | |
|------------------------|----------------|-----------------------|
| ① Tire pressure sensor | ② Grommet seal | ③ Valve nut |
| ④ Valve core | ⑤ Valve cap | ⑥ Valve stem assembly |

: N·m (kg-m, in-lb)

: Always replace after every disassembly.

: Parts that are replaced as a set when the tire is replaced.

Removal and Installation

INFOID:000000009641650

REMOVAL

1. Remove tire assembly. Refer to [WT-62, "Removal and Installation"](#).
2. Remove valve cap, valve core and then deflate tire.

NOTE:


If the tire is reused, apply a matching mark to the position of the tire road wheel valve hole for the purpose of wheel balance adjustment after installation.

3. Remove valve nut retaining tire pressure sensor and allow tire pressure sensor to fall into tire.
4. Use the tire changer and disengage the tire beads.

CAUTION:

- Verify that the tire pressure sensor ① is at the bottom of the tire while performing the above.
- Be sure not to damage the road wheel or tire pressure sensor.

5. Apply bead cream or an equivalent to the tire beads.
6. Set tire onto the tire changer turntable so that the tire pressure sensor inside the tire is located close to the road wheel valve hole.

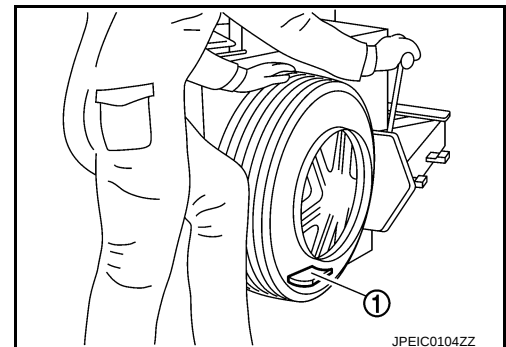

TIRE PRESSURE SENSOR


< REMOVAL AND INSTALLATION >

- Turn tire so that valve hole is at bottom and bounce so that tire pressure sensor ① is near valve hole. Carefully lift tire onto turntable and position valve hole (and tire pressure sensor) 270 degree from mounting/dismounting head ②.


CAUTION:

Be sure not to damage the road wheel and tire pressure sensor.

- Remove tire pressure sensor from tire.
- Remove the grommet seal.

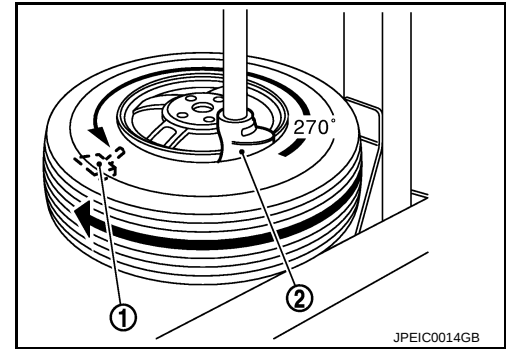

- Remove valve stem in the direction (↖).

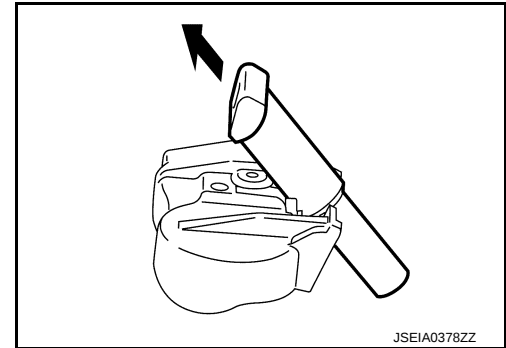

INSTALLATION


CAUTION:

Replace valve stem assembly if the valve stem has deformations, cracks, damage or corrosion.

- Apply bead cream or an equivalent to the tire beads.
- Install the tire inside beads ① onto the road wheel ② in the position shown in the figure.
- Install valve stem to tire pressure sensor.
- Install grommet seal to the tire pressure sensor assembly.

CAUTION:

- Never reuse grommet seal.
- Insert grommet seal all the way to the base.

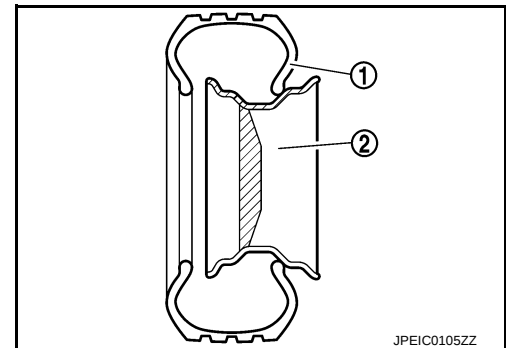

- Follow the procedure below and install the tire pressure sensor to the road wheel.


TIRE PRESSURE SENSOR

< REMOVAL AND INSTALLATION >


- a. Check the condition of valve stem before installing tire pressure sensor to road wheel.

CAUTION:

The base of valve stem ① must be positioned in the groove of the metal plate as shown in the figure.

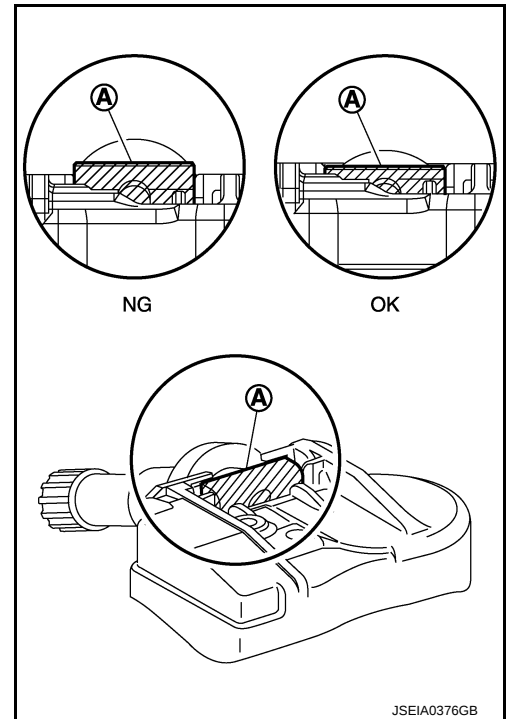

- b. Hold tire pressure sensor as shown in the figure, and press the sensor in the direction shown by arrow (↔) to bring it into absolute contact with road wheel. After this, tighten valve nut to the specified torque.

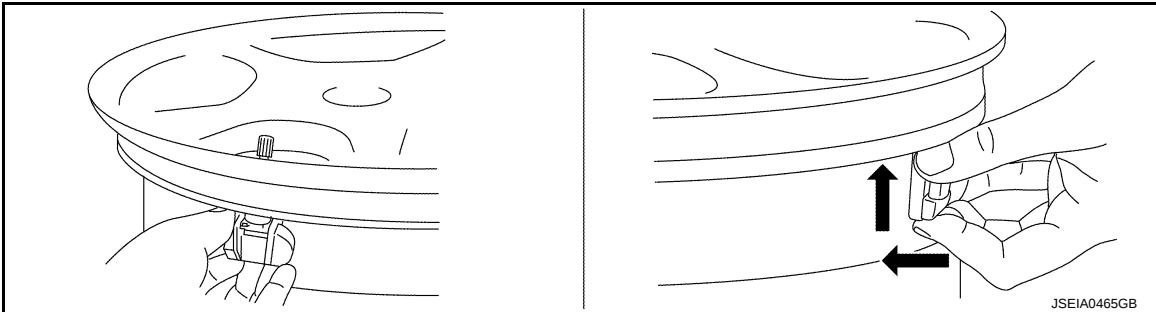

CAUTION:

- Never reuse valve core and valve cap.
- Check that grommet seal is free of foreign matter.
- Check that grommet seal contacts horizontally with road wheel.
- Check again that the base of valve stem is positioned in the groove of the metal plate.
- Manually tighten valve nut all the way to the wheel. (Never use a power tool to avoid impact.)

6. Set the tire onto the turntable so that the tire changer arm ② is at a position approximately 270° from the tire pressure sensor ①.

CAUTION:

Be sure that the arm does not contact the tire pressure sensor.

7. Install the tire outer side beads onto the road wheel.

CAUTION:

When installing, check that the tire does not turn together with the road wheel.


8. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-68, "Tire Air Pressure"](#).

NOTE:

Before adding air, align the tire with the position of the matching mark applied at the time of removal.

9. Install tire to the vehicle. Refer to [WT-62, "Removal and Installation"](#).

10. Perform tire pressure sensor ID registration. Refer to [WT-30, "Work Procedure"](#).

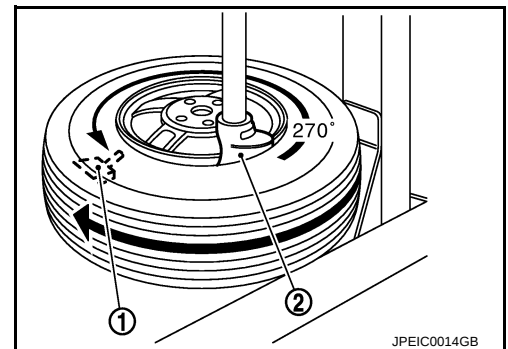

OUTSIDE KEY ANTENNA

< REMOVAL AND INSTALLATION >

OUTSIDE KEY ANTENNA

Removal and Installation

INFOID:000000009641648

Remove the outside key antenna. Refer to [DLK-250. "OUTSIDE HANDLE : Removal and Installation"](#) (outside handle) or [DLK-250. "REAR BUMPER : Removal and Installation"](#) (rear bumper).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Road Wheel

INFOID:000000009236611

CONVENTIONAL

Item		Limit
Runout	Axial runout	Less than 0.3 mm (0.012 in)
	Radial runout	
Allowable unbalance	Dynamic (At flange)	Less than 5 g (0.17 oz) (one side)
	Static (At flange)	Less than 10 g (0.35 oz)

Tire Air Pressure

INFOID:000000009236612

Unit: kPa (kg/cm², psi)

Tire size	Air pressure	
	Front	Rear
P225/55RF17 95V	240 (2.4, 35)	
P245/40RF19 94V	240 (2.4, 35)	
245/40RF19 94W	240 (2.4, 35)	
T145/70R18 107M*	420 (4.2, 60)	

*: If equipped models