

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator BR-32
ABS (anti-lock brake system) BR-29
ABS circuit diagram BR-40
ABS control unit BR-32
ABS hydraulic circuit BR-6, BR-19
ABS self-diagnosis BR-35
ABS system components BR-30
ABS trouble diagnoses BR-34
ABS wheel sensors BR-31
ABS wiring diagram BR-41
A/C air flow HA-16
A/C circuit diagram HA-37
A/C component layout HA-15
A/C compressor clutch removal and
installation HA-79
A/C compressor description HA-94
A/C compressor mounting HA-78
A/C compressor precaution HA-5
A/C compressor special service tool HA-8
A/C control linkage adjustment HA-66
A/C control operation HA-14
A/C diagnostic work flow HA-20
A/C lubricant HA-76
A/C operational check HA-21
A/C performance test diagnoses HA-32
A/C pressure switch HA-64
A/C R134a system identification HA-2
A/C R134a system introduction HA-2
A/C R134a system precaution HA-2, HA-3
A/C R134a system service procedure HA-68
A/C R134a system service tools HA-6
A/C relay HA-36, HA-65
A/C service data specification HA-94
A/C switch HA-14
A/C symptom chart HA-24
A/C trouble diagnoses HA-20
A/C wiring diagram HA-38
Acceleration cut control EF & EC-24
Accelerator control system FE-2
Accelerator wire adjustment FE-2
Activated carbon canister EF & EC-16
Activated carbon canister inspection EF & EC-174
Air bag precautions GI-2
Air bleeding for brake system BR-5
Air cleaner filter replacement MA-14
Air mix door control linkage adjustment HA-67
Angular tightening application EM-2
Anti-freeze coolant MA-7
ASCD (automatic speed control device) EL-145
AT control unit AT-86
AT mode switch AT-88

AT removal and installation AT-107
AT self diagnoses AT-46
Audio EL-134
Autolamp EL-54
Automatic transaxle number GI-22
Automatic transmission fluid MA-7
Automatic transmission fluid replacement MA-17
Auxiliary air control (AAC) valve EF & EC-14
Axle housing (rear) RA-10

B

Back door BF-10, BF-11
Back door window BF-97
Back up lamp EL-63
Battery EL-14
Belt inspection (drive belt) MA-8
Blower motor HA-64
Blower relay HA-35, HA-65
Blower resistor HA-64
Body alignment BF-103
Boring/honing cylinder block EM-43
Brake booster BR-16
Brake fluid MA-7
Brake fluid change BR-4
Brake fluid level MA-18
Brake fluid level and line check BR-4
Brake hydraulic line BR-4
Brake inspection MA-18
Brake lines and cables inspection MA-18
Brake lining wear temporary checking MA-20
Brake pedal BR-11

C

Camshaft inspection EM-26
Camshaft position sensor (CMPS) EF & EC-10
Camshaft position sensor inspection EF & EC-163
Charging system EL-25
Chassis and body maintenance MA-17
Check connector for ECCS checker box EF & EC-16
Cigarette lighter EL-129
Clearance lamp EL-60
Clock EL-129
Coil spring (front) FA-25
Combination meter EL-83
Combination meter (needle type) EL-82
Combination switch EL-31
Compression pressure EM-8
Compressor clutch removal and installation HA-79
Compressor description HA-94
Compressor mounting HA-78

ALPHABETICAL INDEX

Compressor precaution.....HA-5
 Compressor special service tool.....HA-8
 Connecting rod.....EM-42
 Connecting rod bearing clearance.....EM-46
 Connecting rod bushing clearance.....EM-48
 CONSULT for ECCS.....EF & EC-44
 CONSULT general information.....GI-18
 Control valve (AT).....AT-24
 Converter housing installation.....AT-203
 Convertible roof.....BF-35
 Coolant.....MA-7
 Coolant replacement.....MA-9
 Cooling circuit (engine).....LC-8
 Cooling fan control.....EF & EC-25
 Cooling fan control system.....LC-15
 Cooling fan motor.....HA-36
 Cooling fan motor inspection.....EF & EC-170
 Cooling fan relay.....HA-36, HA-65
 Cornering lamp.....EL-70
 Courtesy lamp.....EL-78
 Crankcase emission control system.....EF & EC-176
 Crankshaft assembly.....EM-49
 Crankshaft bearing clearance.....EM-45
 Crankshaft inspection.....EM-44
 Cylinder block.....EM-40
 Cylinder head.....EM-21
 Cylinder head bolt tightening.....EM-34

D

Data link connector for CONSULT.....EF & EC-15
 Daytime lamp system.....EL-42
 Device (FICD) solenoid valve.....EF & EC-14
 Digital touch entry system.....EL-160
 Dimensions.....GI-22
 Door adjustment (front).....BF-13
 Door adjustment (sliding).....BF-14
 Door mirror.....BF-100
 Drive plate runout.....EM-48
 Drive shaft (front).....FA-14
 Dropping resistor (AT).....AT-86
 Dual pressure switch.....HA-64

E

ECCS basic inspection.....EF & EC-55
 ECCS circuit diagram.....EF & EC-9
 ECCS component parts location.....EF & EC-5
 ECCS fail-safe system.....EF & EC-26
 ECCS on-board diagnostic system.....EF & EC-37
 ECCS relay inspection.....EF & EC-169
 ECCS system diagram and chart.....EF & EC-6

ECCS trouble diagnoses.....EF & EC-33
 ECM input/output signal inspection.....EF & EC-158
 EGR control (EGRC) — solenoid valve.....EF & EC-15
 EGR temperature sensor.....EF & EC-15
 EGR temperature sensor inspection.....EF & EC-166
 EGR valve inspection.....EF & EC-165
 EGRC-BPT valve inspection.....EF & EC-166
 Electrical units location.....EL-181
 Electronic ignition (EI) system.....EF & EC-20
 Energy conserving oils.....MA-7
 Engine control module (ECM).....EF & EC-10
 Engine coolant temperature (ECT) sensor.....EF & EC-11
 Engine coolant temperature sensor inspection.....EF & EC-164
 Engine oil.....MA-7
 Engine oil filter replacement.....MA-15
 Engine oil precautions.....GI-4
 Engine oil replacement.....MA-14
 Engine outer component parts.....EM-6
 Engine removal.....EM-37
 Engine serial number.....GI-22
 Evaporative emission system.....EF & EC-174
 Exhaust gas recirculation (EGR) system.....EF & EC-24
 Exhaust gas recirculation (EGR) valve.....EF & EC-15
 Exhaust system.....FE-7
 Exhaust system inspection.....MA-17
 Exterior.....BF-37
 Exterior lamp.....EL-60

F

Fan switch.....HA-64
 Final drive (FF AT).....AT-183
 Fluid temperature sensor (AT).....AT-88
 Fluids.....MA-7
 Foot lamp.....EL-78
 Forward clutch.....AT-159
 Front axle.....FA-5
 Front bumper.....BF-6
 Front suspension.....FA-4
 Fuel check valve inspection.....EF & EC-175
 Fuel damper.....EF & EC-13
 Fuel filler lid.....BF-10, BF-11
 Fuel filter.....EF & EC-16
 Fuel filter replacement.....MA-13
 Fuel gauge.....EL-84
 Fuel injector.....EF & EC-12
 Fuel line inspection.....MA-13
 Fuel precautions.....GI-5
 Fuel pressure check.....EF & EC-171
 Fuel pressure regulator.....EF & EC-12
 Fuel pressure release.....EF & EC-171

GI

MA

EM

LC

EF & EC

FE

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

Fuel pump EF & EC-13
Fuel pump control EF & EC-23
Fuel pump inspection EF & EC-165
Fuel system FE-4
Fuel tank vacuum relief valve
inspection EF & EC-175
Fuse EL-13
Fusible link EL-13

G

Generator EL-28
Grease MA-7

H

Harness connector EL-3
Harness layout EL-184
Hazard warning lamp EL-64
Headlamp EL-34
Heated oxygen sensor (HO2S) EF & EC-12
Heated oxygen sensor heater
inspection EF & EC-169
Heated oxygen sensor monitor EF & EC-43
Heater wiring diagram HA-38
Height (Dimensions) GI-22
High clutch AT-154
Hood adjustment BF-6
Horn EL-129
How to follow flow chart in trouble diagnosis GI-15
How to read wiring diagrams GI-8
How to use this manual GI-6
Hydraulic lash adjuster inspection EM-32

I

IACV - FICD solenoid valve inspection... EF & EC-168
IACV — air regulator inspection EF & EC-168
IACV-AAC valve inspection EF & EC-167
Identification plate GI-21
Idle air adjusting (IAA) unit EF & EC-14
Idle air control (IAC) system EF & EC-22
Idle air control (IACV) — fast idle control EF & EC-14
Idle air control valve (IACV) EF & EC-14
Idle air control valve (IACV) — air
regulator EF & EC-14
Idle mixture ratio inspection EF & EC-28
Idle speed inspection EF & EC-28
Ignition coil inspection EF & EC-164
Ignition timing inspection EF & EC-28
Illuminated entry system EL-104

Illumination EL-73
Inhibitor switch AT-87, AT-105
Injector inspection EF & EC-169
Injector removal and installation EF & EC-172
Instrument panel BF-28
Intake door control linkage adjustment HA-67
Intake manifold EM-6
Interior BF-31
Interior lamp EL-73

J

Jacking points GI-23
Joint connector (J/C) Foldout page

K

Knock sensor inspection EF & EC-168
Knock sensor (KS) EF & EC-14

L

Leaf spring (rear) RA-11
Length (Dimensions) GI-22
Lifting points GI-23
Line pressure solenoid valve AT-86
Line pressure test (AT) AT-95
Liquid gasket application EM-2
Low and reverse brake AT-165
LSV (load sensing valve) BR-8
Lubricant A/C HA-76
Lubricants MA-7
Lubrication circuit (engine) LC-4
Lubrication — locks, hinges and hood
latches MA-22

M

Magnet clutch HA-79
Maintenance MA-2
Maintenance (engine) MA-8
Maintenance general MA-2
Maintenance periodic MA-4
Maintenance schedule (1) MA-4
Maintenance schedule (2) MA-4
Map lamp EL-78
Mass air flow sensor inspection EF & EC-163
Mass air flow (MAF) sensor EF & EC-10
Master cylinder (brake) BR-14
Meter and gauges EL-82

ALPHABETICAL INDEX

Mode door control linkage adjustment.....HA-66
 Model variation.....GI-20
 Molding.....BF-37
 Multi purpose grease.....MA-7
 Multiport fuel injection (MFI) system.....EF & EC-17
 Multiport fuel injection precautions.....GI-4

O

Oil change (capacity).....MA-7
 Oil change (interval).....MA-4
 Oil pan (engine).....EM-9
 Oil pressure (engine).....LC-5
 Oil pressure relief valve (engine).....LC-7
 Oil pump regulator valve (engine).....LC-5, LC-6
 Oil seal replacement (engine).....EM-19
 Overdrive switch.....AT-89
 Overrun clutch.....AT-159
 Overrun clutch solenoid valve.....AT-87
 Oversize piston.....EM-44

P

Parking brake control.....BR-28
 PCV (positive crankcase ventilation)
 inspection.....EF & EC-176
 Personal lamp.....EL-78
 Piston assembly.....EM-48
 Piston pin inspection.....EM-41
 Piston ring inspection.....EM-42
 Piston to bore clearance.....EM-43
 Power antenna.....EL-138
 Power door lock.....BF-16
 Power door lock trouble diagnoses.....BF-20
 Power seat.....BF-44
 Power steering fluid.....MA-7
 Power steering fluid level.....MA-20, ST-6
 Power steering hydraulic pressure.....ST-8
 Power steering oil pressure switch.....EF & EC-12
 Power steering oil pressure switch
 inspection.....EF & EC-170
 Power steering oil pump.....ST-28
 Power steering system bleeding.....ST-7
 Power supply routing.....EL-6
 Power transistor Ignition coil.....EF & EC-13
 Power transistor inspection.....EF & EC-164
 Power window.....BF-22
 Power window trouble diagnoses.....BF-27
 Precautions (General).....GI-2
 Pressure test (AT).....AT-95

R

R134a system identification.....HA-2
 R134a system introduction.....HA-2
 R134a system precaution.....HA-2, HA-3
 R134a system service procedure.....HA-68
 R134a system service tools.....HA-6
 Radiator.....LC-14
 Rear axle.....RA-6
 Rear axle (drum brake type).....RA-6
 Rear bumper.....BF-10, BF-11
 Rear drum brake.....BR-24
 Rear side window.....BF-98
 Rear suspension.....RA-9
 Rear window defogger.....EL-130
 Refilling engine coolant.....LC-9
 Refrigerant connection precaution.....HA-4
 Refrigerant discharging evacuating charging.....HA-68
 Refrigerant general precaution.....HA-3
 Refrigerant lines.....HA-90
 Refrigeration cycle.....HA-18
 Resistor inspection.....EF & EC-170
 Reverse clutch.....AT-150
 Road wheel size.....GI-22
 Room lamp.....EL-78

S

SAE J1930 terminology list.....GI-26
 Seat belt inspection.....MA-22
 Seat belt system.....BF-56
 Seat belt system trouble diagnoses.....BF-63
 Seat (front).....BF-43
 Seat (rear).....BF-48
 Self-diagnostic results.....EF & EC-41
 Shift schedule.....AT-38
 Shift solenoid valve (AT).....AT-87
 Shock absorber (rear).....RA-13
 Side guard molding.....BF-42
 SMJ (super multiple junction).....Foldout page
 Soft/Hard closed throttle position (CTP)
 switch.....EF & EC-11
 Spark plug replacement.....MA-15
 Speedometer.....EL-84
 Spot lamp.....EL-78
 Stabilizer bar (front).....FA-26
 Stabilizer bar (rear).....RA-15
 Stall test (AT).....AT-93
 Standardized relay.....EL-4
 Starter.....EL-22
 Starting system.....EL-20
 Steering gear and linkage inspection.....MA-20

ALPHABETICAL INDEX

Steering gear oil level	MA-20
Steering knuckle.....	FA-12
Steering wheel and column.....	ST-12
Steering wheel play.....	ST-5
Steering wheel turning force	ST-7
Step lamp	EL-78
Stop lamp	EL-60
Strut (front)	FA-24
Sun roof.....	BF-92
Supplemental air bag	BF-109
Supplemental air bag caution labels.....	BF-111
Supplemental air bag removal and installation	BF-115, BF-116
Supplemental air bag scrapping	BF-119
Supplemental air bag system trouble diagnoses.....	BF-121
Supplemental restraint system.....	BF-109

T

Tachometer.....	EL-84
Tail lamp	EL-60
Tailgate lamp	EL-78
Temperature control cable and linkage adjustment.....	HA-67
Thermostat	LC-12
Three way catalyst precautions	GI-4
Throttle bodies.....	EM-7
Throttle drum adjustment.....	FE-2
Throttle position sensor inspection and adjustment.....	EF & EC-166
Throttle position (TP) sensor.....	EF & EC-11
Tie rod ball joints	ST-25
Tightening torque of standard bolts	GI-25
Time control system	EL-104
Timing belt.....	EM-12
Tire rotation	MA-20
Tire size.....	GI-22
Torque converter installation	AT-206
Torque convertor clutch solenoid valve.....	AT-87
Tow truck towing.....	GI-24
Towing point	GI-24
Transverse link (front)	FA-27
Tread — FR RR (Dimensions).....	GI-22

Trim — back door	BF-31, BF-32
Trim — door	BF-31, BF-33
Trim — luggage compartment	BF-31
Trim — side and floor	BF-31
Turn signal lamp.....	EL-64

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EF & EC-8
Valve clearance	EM-30
Valve guide inspection	EM-28
Valve seat inspection	EM-30, EM-31
Vapor lines inspection	MA-16
Vehicle identification number	GI-21
Vehicle speed pulse generator.....	AT-88, AT-105
Vehicle speed sensor (VSS)	EF & EC-14
Vent mode switch.....	HA-14
Viscosity number (SAE)	MA-7

W

Warning chime	EL-100
Warning lamps	EL-92
Washer, front.....	EL-120
Water cock control rod adjustment	HA-66
Water pump.....	LC-10
Water temperature gauge	EL-84
Weatherstrip	BF-37
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-4
Wheel balance.....	MA-20
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear)	RA-4
Wheel hub and steering knuckle.....	FA-10
Wheel hub (front)	FA-12
Wheel hub (rear)	RA-7
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-22
Width (Dimensions).....	GI-22
Windshield and windows.....	BF-97
Wiper and washer.....	EL-120
Wiper, front.....	EL-120