

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-297
ABS - Wiring diagramBR-39
ABS (anti-lock brake system).....BR-29
ABS sensor rotor.....FA-10
Absolute pressure sensorEC-113
A/C, A - Wiring diagramHA-94
A/C air flow.....HA-15
A/C air flow (auto A/C).....HA-68
A/C component layout.....HA-14
A/C compressor clutch removal and
installationHA-159
A/C compressor description.....HA-172
A/C compressor mounting.....HA-158
A/C compressor precaution.....HA-5
A/C compressor special service tool.....HA-8
A/C control linkage adjustment (auto A/C).....HA-131
A/C control linkage adjustment (manual A/C).....HA-65
A/C control operation (auto A/C).....HA-70
A/C control operation (manual A/C).....HA-17
A/C diagnostic work flow (auto A/C).....HA-72
A/C diagnostic work flow (manual A/C).....HA-18
A/C harness layout (auto A/C).....HA-89
A/C harness layout (manual A/C).....HA-34
A/C HFC134a (R134a) system identification.....HA-2
A/C HFC134a (R134a) system precaution.....HA-3
A/C HFC134a (R134a) system service
procedure.....HA-154
A/C HFC134a (R134a) system service tools.....HA-6
A/C HFC134a system service equipment
precautionHA-10
A/C lubricant (R134a).....HA-156
A/C lubrication oilHA-156
A/C, M - Wiring diagramHA-38
A/C operational check (auto A/C).....HA-73
A/C operational check (manual A/C).....HA-19
A/C performance chart (auto A/C).....HA-86
A/C performance chart (manual A/C).....HA-30
A/C performance test diagnoses (auto A/C).....HA-86
A/C performance test diagnoses
(manual A/C).....HA-30
A/C pressure switch (auto A/C).....HA-129
A/C pressure switch (manual A/C).....HA-63
A/C relay (auto A/C).....HA-89
A/C relay (manual A/C).....HA-34
A/C self-diagnoses (auto A/C).....HA-77
A/C service data specification.....HA-172
A/C switch (auto A/C).....HA-71
A/C switch (manual A/C).....HA-17
A/C symptom chart (auto A/C).....HA-76
A/C symptom chart (manual A/C).....HA-22
A/C system description (auto A/C).....HA-67

A/C trouble diagnoses (auto A/C).....HA-72
A/C trouble diagnoses (manual A/C).....HA-18
Accelerator control system.....FE-2
Accelerator wire adjustment.....FE-2
Air bag.....RS-18
Air bag disposal.....RS-22, RS-25
Air bag precautionsGI-2
Air bleeding for brake systemBR-5
Air cleaner filter replacementMA-17
Air conditioner cut controlEC-21
Air conditioning - See A/C.....HA-12
Air flow meter - See Mass air flow sensor.....EC-104
Air mix door control linkage adjustment
(auto A/C).....HA-131
Air mix door control linkage adjustment
(manual A/C).....HA-66
Air mix. door motor (auto A/C).....HA-138
Air mix. door motor (manual A/C).....HA-63
Alternator.....EL-33
Ambient sensorHA-135
AntennaEL-145
Antenna - See Power antenna.....EL-145
Anti-lock brake system - See ABS.....BR-29
Anti-lock brake system - Wiring diagram.....BR-39
AP/SEN - Wiring diagramEC-113
ASCD - Wiring diagram.....EL-160
ASCD (automatic speed control device).....EL-156
A/T - Wiring diagram.....AT-12
A/T control.....EC-308
A/T diagnosis communication lineEC-407
A/T fluid temperature sensor.....AT-88
A/T removal and installation.....AT-193
A/T self-diagnoses.....AT-42
A/T shift lock systemAT-184
A/T trouble diagnosesAT-53
AT/C - Wiring diagram.....EC-308
ATDIAG - Wiring diagramEC-407
AudioEL-135
AUDIO - Wiring diagramEL-138
Audio and A/C control removal and
installation - See Instrument panel.....BT-18
Auto air conditioner - wiring diagram.....HA-94
AutolampEL-57
Automatic speed control system - See ASCD..EL-156
Automatic transaxle numberGI-37
Automatic transmission fluid replacementMA-22
Auxiliary air control (AAC).....EC-297
Axle housing (rear).....RA-9

B

Back door.....BT-10
Back door opener - See Back door.....BT-10

ALPHABETICAL INDEX

Back door trim	BT-22
Back door window	BT-52
Back window	BT-52
BACK/L - Wiring diagram	EL-61
Back-up lamp	EL-61
Ball joint front axle	FA-25
Battery	EL-20
Blower motor (auto A/C)	HA-129
Blower motor (manual A/C)	HA-63
Blower relay (auto A/C)	HA-91
Blower relay (manual A/C)	HA-36
Blower resistor	HA-63
Board-on lift	GI-39
Body alignment	BT-57
Boring/honing cylinder block	EM-47
BPT valve	EC-261
Brake booster	BR-16
Brake fluid change	BR-4
Brake fluid level	MA-22
Brake fluid level and line check	BR-4
Brake hydraulic line	BR-6
Brake inspection	MA-22
Brake lines and cables inspection	MA-22
Brake lining temporary checking	MA-24
Brake master cylinder	BR-13
Brake pedal	BR-11
Bulb specifications	EL-275
Bumper, front	BT-6
Bumper, rear	BT-10
BYPSS/V - Wiring diagram	EC-385

C

Camshaft inspection	EM-29
Camshaft position sensor (CMPS)	EC-243
Canister - See EVAP canister	EC-23
CANI/V - Wiring diagram	EC-395
CHARGE - Wiring diagram	EL-31
Charging system	EL-30
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	EL-108
CIGAR - Wiring diagram	EL-128
Cigarette lighter	EL-128
Circuit breaker	EL-15
CKPS - Wiring diagram	EC-238, EC-329
Clearance lamp	EL-62
Closed loop control	EC-321
Closed throttle position switch	EC-303
CMPS - Wiring diagram	EC-243
Coil spring (front)	FA-23
Collision diagnosis	RS-46

Combination meter	EL-90	
Combination meter (needle type)	EL-90	
Combination meter removal and installation - See Instrument panel	BT-18	GI
Combination switch	EL-36	
Compression pressure	EM-11	MA
Compressor clutch removal and installation	HA-159	
Compressor description	HA-172	EM
Compressor mounting	HA-158	
Compressor precaution	HA-5	
Compressor special service tool	HA-8	LC
Connecting rod	EM-46	
Connecting rod bearing clearance	EM-50	
Connecting rod bushing clearance	EM-51	EC
Connector inspection	GI-17	
Console box - See Instrument panel	BT-18	FE
CONSULT for ECCS	EC-60	
CONSULT general information	GI-33	
Control valve (A/T)	AT-221	AT
Converter housing installation	AT-194	
Coolant mixture ratio	MA-8, MA-9	FA
Coolant replacement	MA-11	
COOL/F - Wiring diagram	EC-414	
Cooling circuit (engine)	LC-9	RA
Cooling fan	LC-15	
Cooling fan control	EC-414	
Cooling fan motor	EC-425	BR
Cooling fan motor (auto A/C)	HA-89	
Cooling fan motor (manual A/C)	HA-34	
Cooling fan relay	EC-425	ST
Cooling fan relay (auto A/C)	HA-89	
Cooling fan relay (manual A/C)	HA-34	
CORNER - Wiring diagram	EL-70	RS
Cornering lamp	EL-69	
Crank angle sensor built into distributor - See Camshaft position sensor	EC-243	BT
Crankcase emission control system - See positive crankcase ventilation	EC-29	HA
Crankcase ventilation system - See positive crankcase ventilation	EC-29	
Crankshaft	EM-48	EL
Crankshaft position sensor (OBD)	EC-238, EC-329	
Crankshaft position sensor (OBD) cog chipping	EC-238	IDX
Crankshaft position sensor (POS)	EC-238	
Crankshaft position sensor (POS) chipping	EC-238	
Crankshaft position sensor (REF)	EC-238	
Cruise control - See ASCD	EL-156	
Cylinder block	EM-44	
Cylinder block boring	EM-47	
Cylinder head	EM-24	
Cylinder head bolt tightening	EM-38	

ALPHABETICAL INDEX

D

Data link connector for Consult..... EC-60, EC-450
Daytime light system..... EL-46
Daytime running light - See Daytime light system..... EL-46
DEF - Wiring diagram..... EL-130
Detonation sensor - See Knock sensor..... EC-234
Diagnosis sensor unit..... RS-16
Diagnostic trouble code (DTC) chart..... EC-81
Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-81
Differential gear (FF A/T)..... AT-264
Dimensions..... GI-37
Distributor..... EC-20
Distributor ignition (DI) system..... EC-20
D/LOCK - Wiring diagram..... EL-189
Dome light - See Interior lamp..... EL-82
Door, front..... BT-13
Door mirror..... BT-55
Door, rear..... BT-16
Door trim..... BT-22
Drive belt inspection..... MA-10
Drive plate runout..... EM-52
Drive shaft (front)..... FA-14
Dropping resistor (A/T)..... AT-134
DTRL - Wiring diagram..... EL-50
Dual pressure switch (auto A/C)..... HA-129
Dual pressure switch (manual A/C)..... HA-64

E

ECCS basic inspection..... EC-78
ECCS circuit diagram..... EC-9
ECCS component parts location..... EC-10
ECCS fail-safe system..... EC-82
ECCS on board diagnostic system..... EC-40
ECCS relay..... EC-100
ECCS symptom matrix chart..... EC-83
ECCS system diagram and chart..... EC-13
ECM input/output signal..... EC-90
ECTS - Wiring diagram..... EC-127, EC-144
EGR control (EGRC) - BPT valve..... EC-257
EGR control (EGRC) - solenoid valve..... EC-334
EGR control valve..... EC-255, EC-261, EC-349
EGR temperature sensor..... EC-338
EGR valve & EVAP canister purge control
 solenoid valve..... EC-23
EGRC1 - Wiring diagram..... EC-249, EC-344
EGRC/V - Wiring diagram..... EC-334
EGR/TS - Wiring diagram..... EC-338
Electric sun roof..... EL-150

Electrical diagnoses..... GI-20
Electrical unit..... Foldout page
Electrical units location..... EL-251
Electronic ignition (EI) system..... EC-20
Electronic ignition system..... EC-20
Engine compartment..... BT-58
Engine control circuit diagram..... EC-9
Engine control module (ECM)..... EC-311
Engine coolant temperature sensor
 (ECTS)..... EC-127, EC-144
Engine oil filter replacement..... MA-18
Engine oil precautions..... GI-5
Engine oil replacement..... MA-18
Engine outer component parts..... EM-8
Engine removal..... EM-41
Engine room - See Engine compartment..... BT-58
Engine serial number..... GI-37
EVAP canister..... EC-24
EVAP canister purge control solenoid
 valve..... EC-395, EC-400
EVAP canister purge control valve ... EC-395, EC-400
EVAP canister purge volume control
 valve..... EC-23, EC-276, EC-361
EVAP canister vent control
 valve..... EC-282, EC-369, EC-380
EVAP control system pressure sensor..... EC-287
EVAP control system purge flow monitoring
 diagnosis..... EC-373
EVAP control system (small leak)
 diagnosis..... EC-26, EC-267, EC-351
EVAP system close mode..... EC-26, EC-62
EVAP vapor lines inspection..... MA-20
Evaporative emission (EVAP) system..... EC-23
Exhaust gas recirculation (EGR)
 valve..... EC-249, EC-344
Exhaust system..... FE-8
Exhaust system inspection..... MA-21
Exterior..... BT-28
Exterior lamp..... EL-61

F

Fan control amp..... HA-147
Fan switch..... HA-63
Fast idle cam (FIC)..... EC-32
Fast idle cam (FIC) inspection and
 adjustment..... EC-32
FICD - Wiring diagram..... EC-442
Final drive (FF A/T)..... AT-264
Finisher, interior - See Trim..... BT-22
Floor trim..... BT-22
Flow charts..... GI-30
Fluid temperature sensor (A/T)..... AT-88

ALPHABETICAL INDEX

Fluids	MA-8
Foot lamp	EL-82
Forward clutch	AT-242
F/PUMP - Wiring diagram	EC-432
Freeze frame data	EC-40, EC-41
FRO2 - Wiring diagram	EC-149, EC-167, EC-175
FRO2/H - Wiring diagram	EC-180
Front axle	FA-10
Front bumper	BT-6
Front disc brake	BR-19
Front door	BT-13
Front heated oxygen sensor (HO2S)	EC-149, EC-155, EC-161, EC-167, EC-175
Front heated oxygen sensor (HO2S) heater	EC-180
Front heated oxygen sensor (HO2S) monitor ...	EC-167
Front oxygen sensor (O2S) monitor	EC-51
Front passenger air bag	RS-20
Front seat	BT-34
Front seat belt	RS-4
Front suspension	FA-22
Front washer	EL-116
Front wiper	EL-116
FUEL - Wiring diagram	EC-213, EC-219
Fuel cut control (at no load & high engine speed)	EC-22
Fuel filter replacement	MA-16
Fuel gauge	EL-91
Fuel injection system	EC-213, EC-219
Fuel injector	EC-31, EC-426
Fuel line inspection	MA-16
Fuel precautions	GI-6
Fuel pressure check	EC-30
Fuel pressure regulator	EC-31
Fuel pressure regulator control	EC-31
Fuel pressure release	EC-30
Fuel pump	EC-432
Fuel pump and gauge	FE-6
Fuel pump relay	EC-432
Fuel system	FE-3
Fuel tank vacuum relief valve	EC-25
Fuel temperature sensor	EC-225
Fuse	EL-15
Fuse block	Foldout page
Fusible link	EL-15

G

Garage jack and safety stand	GI-39
Gauges	EL-89
Generator	EL-33
Generator - See Alternator	EL-33
Generic scan tool (GST)	EC-72

Glass	BT-51
Grease	MA-8
Ground distribution	EL-16

GI

H

MA

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-254
Hazard warning lamp	EL-64
Headlamp	EL-39
Headlamp aiming control	EL-55
Headlamp leveler - See Headlamp aiming control	EL-55
Headlining - See Roof trim	BT-26
Heated oxygen sensor heater	EC-180
Heated oxygen sensor (HO2S) (front)	EC-149
Heated oxygen sensor (HO2S) heater (front)	EC-180
Heated oxygen sensor (HO2S) heater (rear) ...	EC-184
Heated oxygen sensor monitor (HO2S) (front)	EC-167
Heated oxygen sensor (rear)	EC-184
Heater mirror	EL-153
Height (Dimensions)	GI-37
HFC134a (R134a) system identification	HA-2
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure ..	HA-154
HFC134a (R134a) system service tools	HA-6
HFC134a system service equipment precaution	HA-10
High clutch	AT-238
H/LAMP - Wiring diagram	EL-42
H/MIRROR - Wiring diagram	EL-153
Hood	BT-6
Horn	EL-127
HORN - Wiring diagram	EL-127
How to erase DTC for ECCS OBD system	EC-41
HP/SW - Wiring diagram	EC-447
Hydraulic lash adjuster inspection	EM-36

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

I

IDX

IACV - FICD solenoid valve	EC-442
IACV-AAC valve inspection	EC-297
IACV-FICD solenoid valve	EC-442
IATS - Wiring diagram	EC-121
Identification plate	GI-36
Idle air control (IAC) system	EC-297
Idle air control valve (IACV)	EC-297
Idle mixture ratio	EC-34

ALPHABETICAL INDEX

Idle speed..... EC-34
Ignition coil EC-323
Ignition timing EC-34
Ignition wire inspection..... EC-229, EC-233
IGN/SG - Wiring diagram..... EC-323
ILL - Wiring diagram..... EL-78
Illuminated entry system EL-201
Illumination EL-74
In vehicle sensor HA-134
Inhibitor switch..... AT-81, EC-410
INJECT - Wiring diagram EC-426
Injector..... EC-428
Injector removal and installation EC-31
Instrument panel..... BT-18
Intake air temperature sensor..... EC-121
Intake door control linkage adjustment
 (auto A/C)..... HA-131
Intake door control linkage adjustment
 (manual A/C)..... HA-66
Intake door motor (auto A/C) HA-141
Intake door motor (manual A/C)..... HA-66
Intake manifold..... EM-8
Interior BT-22
Interior lamp EL-74
INT/L - Wiring diagram..... EL-86

J

Jacking points..... GI-38
Joint connector (J/C)..... Foldout page

K

Keyless entry system - See Multi-remote
 control system..... EL-201
Knock sensor (KS) EC-234
Knuckle spindle FA-11
KS - Wiring diagram..... EC-234

L

Leaf spring (rear)..... RA-11
Length (Dimensions) GI-37
License lamp EL-62
Lifting points GI-38
Line pressure solenoid valve AT-119
Line pressure test (A/T) AT-61
Liquid gasket application..... EM-2
Location of electrical units..... EL-251
Low and reverse brake AT-248

LSV (Load sensing valve)..... BR-8
Lubricant (R134a) A/C..... HA-156
Lubricants..... MA-8
Lubrication circuit (engine)..... LC-4
Lubrication oil A/C HA-156
Lubrication-locks, hinges and hood latches..... MA-25

M

MAFS - Wiring diagram..... EC-104
Magnet clutch..... HA-159
MAIN - Wiring diagram..... EC-100
Maintenance MA-3
Maintenance (engine)..... MA-10
MAJOR OVERHAUL..... AT-196
Malfunction indicator lamp (MIL)..... EC-50
Manual air conditioner - wiring diagram..... HA-38
MAP/BARO switch solenoid valve EC-313
Mass air flow sensor (MAFS)..... EC-104
Master cylinder (brake) BR-13
Meter EL-89
METER - Wiring diagram..... EL-91
MIL & Data link connectors circuit EC-450
MIL/DL - Wiring diagram..... EC-450
MIRROR - Wiring diagram..... EL-152
Mirror defogger..... EL-153
Mirror, door..... BT-55
Mirror, out side BT-55
Misfire..... EC-229
Mode door control linkage adjustment
 (auto A/C)..... HA-131
Mode door control linkage adjustment
 (manual A/C)..... HA-65
Mode door motor (auto A/C) HA-140
Mode door motor (manual A/C) HA-65
Model variation GI-35
Molding - See Exterior BT-28
MULTI - Wiring diagram..... EL-205
Multiport fuel injection (MFI) system..... EC-18
Multiport fuel injection precautions..... GI-5
Multi-remote control system..... EL-201

N

Neutral position switch EC-410
NVH troubleshooting (BR)..... BR-3
NVH troubleshooting (EM) EM-6
NVH troubleshooting (FA) FA-4
NVH troubleshooting (RA)..... RA-3
NVH troubleshooting (ST)..... ST-5

ALPHABETICAL INDEX

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-5
Oil pan (engine)	EM-12
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T)	AT-217
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-22
Out side mirror	BT-55
Overdrive control switch	AT-182
Overrun clutch	AT-242
Overrun clutch solenoid valve	AT-119
Oversize piston	EM-48
Oxygen sensor monitor (O2S) (front)	EC-167

P

P/ANT - Wiring diagram	EL-146
Pantograph jack	GI-39
Parking brake control	BR-27
Parking drum brake	BR-23
Parking lamp	EL-62
Park/Neutral position switch	EC-410
PCV (positive crankcase ventilation)	EC-29
Periodic maintenance (except for Europe)	MA-6 , MA-7
Personal lamp	EL-82, EL-86
PGC/V - Wiring diagram	EC-276
Piston assembly	EM-52
Piston pin inspection	EM-45
Piston ring inspection	EM-46
Piston to bore clearance	EM-47
PNP/SW - Wiring diagram	EC-410
POWER - Wiring diagram	EL-8
Power antenna	EL-145
Power door lock	EL-185
Power door mirror	EL-152
Power seat	EL-154
Power steering fluid level	ST-6, MA-24
Power steering gear	ST-16
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-438
Power steering oil pump	ST-22
Power steering system bleeding	ST-6
Power supply routing	EL-6
Power transistor	EC-323
Power transistor & ignition coil	EC-323
Power window	EL-177
Precautions (General)	GI-3

PRE/SE - Wiring diagram	EC-287
Pressure test (A/T)	AT-61
PST/SW - Wiring diagram	EC-438

R

R134a - See HFC134a	HA-2
Radiator	LC-15
Radio - See Audio	EL-135
Rear axle	RA-7
Rear axle (drum brake type)	RA-7
Rear bumper	BT-10
Rear door	BT-16
Rear drum brake	BR-23
Rear heated oxygen sensor (HO2S)	EC-184, EC-191, EC-198, EC-204
Rear heated oxygen sensor (HO2S) heater	EC-209
Rear seat belt	RS-6
Rear side window	BT-53
Rear suspension	RA-10
Rear washer	EL-121
Rear window	BT-52
Rear window defogger	EL-129
Rear wiper	EL-121
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-154
Refrigerant general precaution	HA-3
Refrigerant lines	HA-149
Refrigeration cycle	HA-12
Resistor	EC-328
Reverse clutch	AT-235
Revolution sensor (A/T)	AT-92
Road wheel size	GI-37
Roof trim	BT-26
Room lamp	EL-82
Room lamp - See Interior lamp	EL-82
Rotor disc (front)	FA-10
RRO2 - Wiring diagram	EC-184, EC-191, EC-198, EC-204
RRO2/H - Wiring diagram	EC-209

S

SAE J1930 terminology list	GI-42
SAE J1979 - Mode 1 ~ 7	EC-40
Seal - See Exterior	BT-28
SEAT - Wiring diagram	EL-154
Seat belt, front	RS-4
Seat belt inspection	MA-26
Seat belt, rear	RS-6
Seat, front	BT-34
Seat, second (2nd)	BT-36

ALPHABETICAL INDEX

Seat, third (3rd) BT-38
 Second (2nd) seat BT-36
 Self-diagnostic results EC-51
 SHIFT - Wiring diagram AT-185
 Shift lock system AT-184
 Shift schedule AT-287
 Shift solenoid valve (A/T) AT-100, AT-110
 Shift solenoid valve B (A/T) AT-100
 Shock absorber (front) FA-23
 Shock absorber (rear) RA-13
 Side trim BT-22
 Side window - See Rear side window BT-53
 SMJ (super multiple junction) Foldout page
 Spare tire size GI-37
 Spark plug replacement MA-19
 Speedometer EL-91
 Spiral cable RS-18
 Spot lamp EL-82
 Spring (Wheelarch) height FA-6
 SROOF - Wiring diagram EL-151
 SRS - See Supplemental Restraint System RS-13
 SRS - Wiring diagram RS-29
 SRS Trouble diagnoses RS-26
 S/SIG - Wiring diagram EC-429
 Stabilizer bar (front) FA-24
 Stabilizer bar (rear) RA-13
 Stall test (A/T) AT-58
 Standardized relay EL-4
 START - Wiring diagram EL-26
 Start signal EC-429
 Starter EL-28
 Starting system EL-24
 Steering gear and linkage inspection MA-24
 Steering gear, linkage and transfer gear
 inspection MA-24
 Steering gear oil level MA-24
 Steering knuckle FA-11
 Steering linkage ST-16
 Steering switch EL-38
 Steering wheel and column ST-10
 Steering wheel play ST-7
 Steering wheel turning force ST-7
 Step lamp EL-82
 Stop lamp EL-62
 Strut (front) FA-23
 Sub-camshaft position sensor EC-243
 Sun roof, electric EL-150
 Sunload sensor HA-135
 Sunroof BT-43
 Supplement restraint system - Wiring
 diagram RS-29
 Supplemental Restraint System RS-13

SW/V - Wiring diagram EC-313
 Symbols and abbreviations GI-8
 System readiness test (SRT) code EC-41

T

Tachometer EL-91
 Tail lamp EL-62
 Tailgate lamp EL-83
 TAIL/L - Wiring diagram EL-62
 Tank fuel temperature sensor EC-225
 TCM circuit diagram AT-12
 TCM inspection table AT-76
 TFTS - Wiring diagram EC-225
 THEFT - Wiring diagram EL-223
 Theft warning system EL-216
 Thermostat LC-13
 Third (3rd) seat BT-38
 Three way catalyst EC-262
 Three way catalyst precautions GI-5
 Throttle bodies EM-9
 Throttle drum adjustment FE-2
 Throttle position sensor adjustment EC-78
 Throttle position sensor (TPS) EC-132
 Throttle position switch AT-149, AT-183, EC-303
 Tie-rod ST-19
 Tie-rod ball joints ST-19
 Tightening torque of standard bolts GI-41
 Timing belt EM-15
 Tire rotation MA-24
 Tire size GI-37
 Torque converter clutch solenoid valve AT-119
 Torque converter installation AT-194
 Tow truck towing GI-40
 TPS - Wiring diagram EC-132
 TP/SW - Wiring diagram EC-303
 Transverse link (front) FA-25
 Tread-FR&RR (Dimensions) GI-37
 Trim BT-22
 Trouble diagnoses GI-20
 Trunk room lamp EL-82
 T/TOW - Wiring diagram EL-72
 TURN - Wiring diagram EL-66
 Turn signal lamp EL-64
 Two trip detection logic EC-40
 Two-pole lift GI-39

U

Under body BT-60

ALPHABETICAL INDEX

V

Vacuum cut valve EC-394
 Vacuum cut valve bypass valve EC-385, EC-390
 Vacuum hose (brake system) BR-18
 Vacuum hose drawing (ECCS) EC-15
 Valve clearance EM-56
 Valve guide EM-32
 Valve seat EM-34
 Valve spring EM-35
 Vehicle identification number GI-36
 Vehicle recovery (freeing a stuck vehicle) GI-40
 Vehicle speed sensor (VSS) EC-293
 Vent mode switch (auto A/C) HA-71
 Vent mode switch (manual A/C) HA-17
 VENT/V - Wiring diagram EC-282
 Viscosity number (SAE) MA-9
 VSS - Wiring diagram EC-293

W

WARN - Wiring diagram EL-102
 Warning buzzer EL-107
 Warning chime EL-107
 Warning lamps EL-98
 Washer, front EL-116
 Washer, rear EL-121
 Water cock solenoid valve (auto A/C) HA-89
 Water cock solenoid valve (manual A/C) HA-34
 Water pump LC-11
 Water temperature gauge EL-91

Weatherstrip - See Exterior BT-28
 Wheel alignment (front) FA-7
 Wheel alignment (rear) RA-6
 Wheel balance MA-24
 Wheel bearing (front axle) FA-7
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-11
 Wheel hub (rear) RA-7
 Wheel sensors (ABS) BR-31
 Wheel size GI-37
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-37
 Wide open & closed throttle position (CTP)
 switch EC-132
 Width (Dimensions) GI-37
 WINDOW - Wiring diagram EL-182
 Window, back BT-52
 Window, back door BT-52
 Window, rear BT-52
 Window, rear side BT-53
 Window, side - See Rear side window BT-53
 Windshield BT-51
 Windshield washer - See Front washer EL-116
 Windshield wiper - See Front wiper EL-116
 WIPER - Wiring diagram EL-117
 Wiper and washer EL-116
 Wiper, front EL-116
 Wiper, rear EL-121
 WIP/R - Wiring diagram EL-122
 Wiring diagram (cell code) list EL-276
 Wiring diagrams GI-9
 Wrist pin - See Piston pin inspection EM-45

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX