

SECTION

IDX

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagramEC-328
 ABS - Wiring diagram.....BR-35
 ABS sensor rotorAX-5, 18
 Absolute pressure sensor.....EC-124
 A/C air flow.....HA-22, 142
 A/C component layout.....HA-16, 139
 A/C compressor clutch removal and
 installationHA-106, 197
 A/C compressor descriptionHA-14, 137
 A/C compressor precaution.....HA-7, 129
 A/C compressor special service
 toolHA-12, 135
 A/C control linkage adjustment
 (auto A/C)HA-54
 A/C control linkage adjustment (manual
 A/C)HA-163
 A/C control operation (auto A/C)HA-20
 A/C control operation (manual A/C)HA-141
 A/C diagnostic work flow (auto A/C).....HA-31
 A/C diagnostic work flow (manual A/C).....HA-151
 A/C HFC134a (R134a) system
 precautionHA-3, 125
 A/C HFC134a (R134a) system service
 tools.....HA-10, 133
 A/C HFC134a system service equipment
 precautionHA-7, 130
 A/C lubricant (R134a).....HA-104, 195
 A/C lubrication oilHA-104, 195
 A/C operational check.....HA-32, 152
 A/C pressure switchHA-85, 185
 A/C relay.....HA-85, 185
 A/C self-diagnoses (auto A/C)HA-34
 A/C service data specificationHA-216
 A/C switch.....HA-21, 141
 A/C symptom chart (auto A/C)HA-37
 A/C symptom chart (manual A/C).....HA-154
 A/C trouble diagnoses (auto A/C).....HA-23
 A/C trouble diagnoses (manual A/C).....HA-143
 A/C, A - Wiring diagram.....HA-27
 A/C, M - Wiring diagram.....HA-147
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Air bagRS-10, 15
 Air bag disposal.....RS-19
 Air bag precautions.....GI-2
 Air bleeding for brake system.....BR-6
 Air cleaner filter replacementMA-19
 Air conditioner cut control.....EC-23
 Air flow meter - See Mass air flow
 sensor.....EC-115
 Air mix door control linkage adjustment.....HA-47
 Air mix. door motorHA-44
 Air spoiler, rearBT-26
 AlternatorSC-14
 Ambient sensor.....HA-95

Angular tightening applicationEM-2
 AntennaEL-130
 Anti-lock brake system - Wiring diagram ...BR-35
 AP/SEN - Wiring diagram.....EC-127
 ASCD (automatic speed control device) ...EL-168
 ASCD - Wiring diagram.....EL-172
 A/T - Wiring diagramAT-13
 A/T - Wiring diagram - AT - FTSAT-99
 A/T - Wiring diagram - AT - MAINAT-89
 A/T - Wiring diagram - AT - PNP/SWAT-93
 A/T - Wiring diagram - AT - VSS A/TAT-105
 A/T controlEC-337
 A/T diagnosis communication line.....EC-428
 A/T fluid temperature sensor.....AT-102
 A/T self-diagnoses.....AT-38, 46
 A/T shift lock systemAT-228
 A/T shift lock system - Wiring diagramAT-229
 A/T trouble diagnosesAT-51
 A/T Wiring diagram - AT - ENG SS.....AT-110
 A/T Wiring diagram AT - 1STAT-115
 A/T Wiring diagram AT - 2ND.....AT-121
 A/T Wiring diagram AT - 3RD.....AT-127
 A/T Wiring diagram AT - 4TH.....AT-134
 A/T Wiring diagram AT - BA/FTSAT-181
 A/T Wiring diagram AT - LPSV.....AT-154
 A/T Wiring diagram AT - NONDTCAT-191
 A/T Wiring diagram AT - OVRCSV.....AT-176
 A/T Wiring diagram AT - SSV/AAT-159
 A/T Wiring diagram AT - SSV/BAT-164
 A/T Wiring diagram AT - TCCSIGAT-147
 A/T Wiring diagram AT - TCV.....AT-141
 A/T Wiring diagram AT - TPSAT-169
 A/T Wiring diagram AT - VSSMTRAT-187
 AT/C - Wiring diagramEC-339
 ATDIAG - Wiring diagram.....EC-429
 Audio.....EL-119
 AUDIO - Wiring diagramEL-121
 Audio and A/C control removal and installation -
 See Instrument panelBT-15
 AUT/DP - Wiring diagramEL-139
 Auto air conditioner - Wiring diagram.....HA-27
 AutolampEL-30
 Automatic drive positioner.....EL-135
 Automatic speed control system - See
 ASCD.....EL-168
 Automatic transaxle numberGI-38
 Automatic transmission fluid
 replacement.....MA-24
 Auxiliary air control (AAC) valve.....EC-324

B

Back doorBT-9
 Back door opener - See Back doorBT-9
 Back door trim.....BT-23
 Back-up lampEL-51
 BACK/L - Wiring diagram.....EL-51

ALPHABETICAL INDEX

Ball joint (front).....SU-11
 Basic inspection.....EC-81
 Battery.....SC-3
 Blower motor.....HA-71
 Blower relayHA-71, 80, 171, 179
 Blower resistor.....HA-81, 171, 180
 Body alignment.....BT-50
 BPT valveEC-286
 Brake boosterBR-17
 Brake fluid change.....BR-5
 Brake fluid level.....MA-24
 Brake fluid level and line check.....BR-5
 Brake hydraulic lineBR-7
 Brake inspection.....MA-25
 Brake lines and cables inspectionMA-25
 Brake lining wear temporary checking.....MA-26
 Brake master cylinder.....BR-14
 Brake pedal.....BR-12
 Bulb specifications.....EL-280
 Bumper, front.....BT-6
 Bumper, rear.....BT-9
 BYPS/V - Wiring diagram.....EC-418, 424

C

Camshaft inspection.....EM-31
 Camshaft position sensor (CMPS).....EC-271
 Canister-See EVAP canister.....EC-24
 CHARGE - Wiring diagram.....SC-12
 Charging system.....SC-11
 Chassis and body maintenance.....MA-23
 CHIME - Wiring diagram.....EL-95
 CIGAR - Wiring diagram.....EL-111
 Cigarette lighterEL-111
 Circuit breakerEL-17
 CKPS - Wiring diagram.....EC-268, 363
 Closed loop control.....EC-353
 Closed throttle position switch.....EC-331
 CMPS - Wiring diagram.....EC-274
 Coil spring (front).....SU-8
 Collision diagnosis.....RS-47
 Combination lamp, front, removal and
 installation.....BT-6
 Combination lamp, rear, removal and
 installation.....BT-26
 Combination meter.....EL-75
 Combination meter (needle type).....EL-75
 Combination meter removal and installation -
 See Instrument panel.....BT-15
 Combination switchEL-27
 Component Location (auto A/C).....HA-23
 Component Location (manual A/C)HA-143
 Compression pressureEM-12
 Compressor clutch removal and
 installation.....HA-106, 197
 Compressor description.....HA-14, 137
 Compressor precautionHA-7, 129

Compressor special service toolHA-12, 135
 Connecting rodEM-49
 Connecting rod bearing clearanceEM-53
 Connecting rod bushing clearanceEM-54
 Connector inspectionGI-17
 Console box - See Instrument panelBT-15
 CONSULT for ABSBR-40
 CONSULT for engine.....EC-62
 CONSULT general informationGI-34
 Control valve (A/T)AT-267
 Converter housing installationAT-239
 COOL/F - Wiring diagram.....EC-441
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-8
 Cooling fan control.....EC-438
 Cooling fan control systemLC-15
 Cooling fan motorEC-449
 Cooling fan relay.....EC-449
 CORNER - Wiring diagram.....EL-57
 Cornering lamp.....EL-56
 Crank angle sensor built into distributor - See
 Camshaft position sensorEC-271
 Crankcase emission control system - See posi-
 tive crankcase ventilation.....EC-30
 Crankshaft.....EM-51
 Crankshaft position sensor (OBD).....EC-266
 Crankshaft position sensor (OBD) cog
 chippingEC-361
 Cruise control - See ASCDEL-168
 Cylinder block.....EM-46
 Cylinder block boring.....EM-51
 Cylinder headEM-26
 Cylinder head bolt tighteningEM-39

D

Data link connector for Consult.....EC-62
 Daytime light system.....EL-42
 Daytime running light - See Daytime light
 system.....EL-42
 DEF - Wiring diagram.....EL-114
 Detonation sensor - See Knock sensor ...EC-261
 Diagnosis sensor unitRS-13
 Diagnostic trouble code (DTC) for OBD
 system.....EC-2, 43
 Diagnostic trouble code (DTC) inspection priority
 chartEC-89
 Differential gear (FF A/T).....AT-311
 DimensionsGI-38
 Distributor.....EC-22
 Distributor ignition (DI) systemEC-22
 D/LOCK - Wiring diagramEL-197
 Dome light - See Interior lamp.....EL-68
 Door glassBT-12
 Door lockBT-12
 Door mirrorBT-48

ALPHABETICAL INDEX

Door trim.....BT-22
 Door, front.....BT-12
 Drive belt inspection.....MA-13
 Drive plate runout.....EM-54
 Drive shaft (front).....AX-9
 Dropping resistor (A/T).....AT-156
 DTC work support.....EC-71
 DTRL - Wiring diagram.....EL-45

E

ECM input/output signal.....EC-100
 ECTS - Wiring diagram.....EC-141, 156
 EGR control (EGRC) - BPT valve.....EC-286
 EGR control (EGRC) - solenoid valve.....EC-366
 EGR control valve.....EC-278, 378
 EGR temperature sensor.....EC-371
 EGR/TS - Wiring diagram.....EC-375
 EGRC/V - Wiring diagram.....EC-368
 EGRC1 - Wiring diagram.....EC-282, 381
 Electric sun roof.....EL-131
 Electrical diagnoses.....GI-20
 Electrical ignition system.....EC-22
 Electrical units.....Foldout
 Electrical units location.....EL-257
 Engine compartment.....BT-51
 Engine control circuit diagram.....EC-15
 Engine control component parts location.....EC-13
 Engine control module (ECM).....EC-341
 Engine control system diagram and
 chart.....EC-16
 Engine coolant temperature sensor
 (ECTS).....EC-139, 154
 Engine fail-safe system.....EC-90
 Engine oil filter replacement.....MA-20
 Engine oil precautions.....GI-4
 Engine oil replacement.....MA-19
 Engine outer component parts.....EM-9
 Engine removal.....EM-42
 Engine room - See Engine compartment...BT-51
 Engine serial number.....GI-38
 EVAP canister.....EC-25
 EVAP canister purge volume control solenoid
 valve.....EC-24, 300, 391
 EVAP canister vent control
 valve.....EC-306, 398, 409
 EVAP control system (small leak)
 diagnosis.....EC-293, 384
 EVAP control system pressure sensor.....EC-312
 EVAP control system purge flow monitoring
 diagnosis.....EC-403
 EVAP vapor lines inspection.....MA-22
 Evaporative emission (EVAP) system.....EC-24
 Exhaust gas recirculation (EGR)
 valve.....EC-278, 378
 Exhaust system.....FE-8
 Exhaust system inspection.....MA-23

Exterior.....BT-26

F

Fan switch.....HA-80, 171, 179
 Fast idle cam (FIC) inspection and
 adjustment.....EC-33
 FICD - Wiring diagram.....EC-468
 Final drive (FF A/T).....AT-311
 Finisher, interior - See Trim.....BT-19
 Floor trim.....BT-19
 Fluid temperature sensor (A/T).....AT-102, 184
 Fluids.....MA-11
 Flywheel runout.....EM-54
 Forward clutch.....AT-289
 F/PUMP - Wiring diagram.....EC-459
 Freeze frame data.....EC-44
 FRO2 - Wiring diagram.....EC-162, 179, 187
 FRO2/H - Wiring diagram.....EC-193
 Front axle.....AX-2
 Front bumper.....BT-6
 Front combination lamp removal and
 installation.....BT-6
 Front disc brake.....BR-20
 Front door.....BT-12
 Front heated oxygen sensor
 (HO2S).....EC-159, 166, 171, 176, 184
 Front heated oxygen sensor (HO2S)
 heater.....EC-191
 Front oxygen sensor (O2S) monitor.....EC-54
 Front passenger air bag.....RS-17
 Front seat.....BT-30
 Front seat belt.....RS-3
 Front suspension.....SU-2
 Front washer.....EL-99
 Front wiper.....EL-99
 FUEL - Wiring diagram.....EC-239, 246
 Fuel cut control (at no load & high engine
 speed).....EC-24
 Fuel filter replacement.....MA-18
 Fuel gauge.....EL-75
 Fuel injection system.....EC-237, 244
 Fuel injector.....EC-450
 Fuel line inspection.....MA-18
 Fuel precautions.....GI-5
 Fuel pressure check.....EC-31
 Fuel pressure regulator.....EC-32
 Fuel pressure release.....EC-31
 Fuel pump.....EC-458
 Fuel pump and gauge.....FE-6
 Fuel pump relay.....EC-462
 Fuel system.....FE-4
 Fuel tank vacuum relief valve.....EC-25
 Fuse.....EL-17
 Fuse block.....Foldout
 Fusible link.....EL-17

ALPHABETICAL INDEX

G

Garage jack and safety stand.....	GI-40
Gauges.....	EL-75
Generator.....	SC-14
Generator - See Alternator.....	SC-14
Generic scan tool (GST).....	EC-75
Glass.....	BT-12
Grease.....	MA-11
Ground distribution.....	EL-18

H

Harness connector.....	EL-3
Harness connector inspection.....	GI-17
Harness layout.....	EL-260
Hazard warning lamp.....	EL-52
Headlamp.....	EL-30
Headlamp aiming control.....	EL-40
Headlining - See Roof trim.....	BT-24
Heater mirror.....	EL-134
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution.....	HA-3, 125
HFC134a (R134a) system service tools.....	HA-10, 133
HFC134a system service equipment precaution.....	HA-7, 130
High clutch.....	AT-284
H/LAMP - Wiring diagram.....	EL-32
H/MIRROR - Wiring diagram.....	EL-134
Hood.....	BT-6
Horn.....	EL-110
HORN - Wiring diagram.....	EL-110
How to erase DTC for OBD system.....	EC-51
Hydraulic lash adjuster inspection.....	EM-37

I

IACV-AAC valve.....	EC-324
IACV-FICD solenoid valve.....	EC-467
IATS - Wiring diagram.....	EC-136
Idle air control valve (IACV).....	EC-324
Idle mixture ratio.....	EC-35
Idle speed.....	EC-35
IGN/SG - Wiring diagram.....	EC-357
Ignition control system.....	EC-355
Ignition timing.....	EC-35
Ignition wire inspection.....	EC-260
ILL - Wiring diagram.....	EL-64
Illumination.....	EL-61
In vehicle sensor.....	HA-97
INJECT - Wiring diagram.....	EC-451
Injector.....	EC-450

Injector removal and installation.....	EC-32
Instrument panel.....	BT-15
INT/L - Wiring diagram.....	EL-71
Intake air temperature sensor.....	EC-133
Intake door control linkage adjustment.....	HA-54, 163
Intake door motor.....	HA-50, 161
Integrated homelink transmitter.....	EL-255
Interior.....	BT-19
Interior lamp.....	EL-68

J

Jacking points.....	GI-39, 40
Joint connector (J/C).....	Foldout

K

Keyless entry system - See Multi-remote control system.....	EL-210
Knock sensor (KS).....	EC-261
Knuckle spindle.....	AX-5
KS - Wiring diagram.....	EC-263

L

Leaf spring (rear).....	SU-18
Length (Dimensions).....	GI-38
License lamp.....	EL-49
Lifting points.....	GI-41
Line pressure solenoid valve.....	AT-138, 156
Line pressure test (A/T).....	AT-61
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-257
Lock, door.....	BT-12
Low and reverse brake.....	AT-294
LSV (Load sensing valve).....	BR-9
Lubricant (R134a) A/C.....	HA-104, 195
Lubricants.....	MA-11
Lubrication circuit (engine).....	LC-3
Lubrication oil A/C.....	HA-104, 195
Lubrication-locks, hinges and hood latches.....	MA-27

M

MAFS - Wiring diagram.....	EC-120
Magnet clutch.....	HA-106, 197
MAIN - Wiring diagram.....	EC-110
Maintenance (engine).....	MA-13
MAJOR OVERHALL.....	AT-241
Malfunction indicator lamp (MIL).....	EC-53

ALPHABETICAL INDEX

Manual air conditioner - Wiring diagramHA-147
 MAP/BARO switch solenoid valve.....EC-343
 Mass air flow sensor (MAFS)EC-115
 Master cylinder (brake).....BR-14
 MeterEL-75
 METER - Wiring diagramEL-78
 MIL & Data link connectors circuit.....EC-474
 MIL/DL - Wiring diagramEC-474
 MIRROR - Wiring diagramEL-133
 Mirror defogger.....EL-134
 Mirror, door.....BT-48
 Mirror, out sideBT-48
 MisfireEC-256
 Mode door control linkage adjustmentHA-61
 Model variation.....GI-36
 Molding - See ExteriorBT-26
 Mud guard - See Exterior.....BT-26
 MULTI - Wiring diagramEL-213
 Multi-remote control systemEL-210
 Multiport fuel injection (MFI) systemEC-20
 Multiport fuel injection precautionsGI-4

N

NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-4
 NVH troubleshooting (EM)EM-7
 NVH troubleshooting (ST)ST-5
 NVH troubleshooting (SU)SU-3

O

Oil change (capacity).....MA-11
 Oil change (interval)MA-6
 Oil pan (engine).....EM-13
 Oil pressure (engine)LC-3
 Oil pump (A/T)AT-263
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine).....EM-24
 On board diagnostic system.....EC-42
 Out side mirrorBT-48
 Overdrive control switchAT-226
 Overrun clutchAT-289
 Overrun clutch solenoid valve...AT-138, 178, 270
 Oversize piston.....EM-51

P

Park/neutral position switch.....EC-431
 Park/neutral position switch (A/T)AT-91, 226
 Parking brake control.....BR-28
 Parking drum brakeBR-24

Parking lampEL-49
 PCV (positive crankcase ventilation).....EC-30
 PGC/V - Wiring diagram.....EC-303, 394
 Pilot bushing replacement.....EM-56
 Piston assemblyEM-54
 Piston pin inspectionEM-48
 Piston ring inspectionEM-48
 Piston to bore clearanceEM-50
 PNP/SW - Wiring diagram.....EC-434
 POWER - Wiring diagramEL-10
 Power door lockEL-194
 Power door mirrorEL-133
 Power seatEL-166
 Power steering fluid levelMA-26, ST-7
 Power steering gearST-16
 Power steering hydraulic pressure.....ST-8
 Power steering oil pressure switch.....EC-463
 Power steering oil pumpST-21
 Power steering system bleedingST-7
 Power supply routing.....EL-7
 Power transistor & ignition coilEC-355
 Power windowEL-189
 PRE/SE - Wiring diagram.....EC-315
 Precautions (General).....GI-2
 Pressure test (A/T)AT-61
 PST/SW - Wiring diagramEC-464

R

Radiator.....LC-12
 Radio - See AudioEL-119
 Rear air spoiler.....BT-26
 Rear axle.....AX-17
 Rear bumperBT-9
 Rear combination lamp removal and installationBT-26
 Rear drum brake.....BR-24
 Rear heated oxygen sensor (HO2S).....EC-197, 206, 215, 224
 Rear heated oxygen sensor (HO2S) heaterEC-231
 Rear seat beltRS-4
 Rear side windowBT-46
 Rear suspension.....SU-13
 Rear washerEL-104
 Rear window defoggerEL-112
 Rear wiper.....EL-104
 Refrigerant connection precautionHA-4, 126
 Refrigerant discharging evacuating chargingHA-102, 193
 Refrigerant general precaution.....HA-3, 125
 Refrigerant lines.....HA-113, 204
 Refrigeration cycle.....HA-14, 137
 Removal and installation (A/T)AT-238
 Reverse clutch.....AT-281
 Revolution sensor (A/T).....AT-107
 Road wheel sizeGI-38

ALPHABETICAL INDEX

Roof trim.....BT-24
 Room lamp.....EL-68
 Room lamp - See Interior lamp.....EL-68
 RRO2 - Wiring diagram ...EC-200, 209, 218, 226
 RRO2/H - Wiring diagramEC-233

S

SAE J1930 terminology list.....GI-44
 Screw jack.....GI-39
 Seal - See Exterior.....BT-26
 SEAT - Wiring diagramEL-166
 Seat belt inspectionMA-28, RS-7
 Seat belt, front.....RS-3
 Seat belt, rear.....RS-4
 Seat, front.....BT-30
 Seat, second (2nd).....BT-32
 Second (2nd) seat.....BT-32
 Self-diagnostic results.....EC-54
 SHIFT - Wiring diagramAT-229
 Shift lock systemAT-228
 Shift schedule.....AT-334
 Shift solenoid valve A
 (A/T).....AT-117, 129, 161, 270
 Shift solenoid valve B (A/T)AT-117, 123, 270
 Shock absorber (front).....SU-8
 Shock absorber (rear).....SU-21
 Side trim.....BT-19
 Side window - See Rear side windowBT-46
 Smart entrance control unit.....EL-249
 SMJ (super multiple junction)Foldout
 Spare tire size.....GI-38
 Spark plug replacement.....MA-21
 Speedometer.....EL-75
 Spiral cable.....RS-15
 Spring (Wheelarch) height.....SU-5
 SROOF - Wiring diagram.....EL-132
 SRS - See Supplemental Restraint
 System.....RS-10
 SRS - Wiring diagram.....RS-28
 SRS Trouble diagnoses.....RS-24
 S/SIG - Wiring diagramEC-455
 Stabilizer bar (front).....SU-10
 Stabilizer bar (rear).....SU-21
 Stall test (A/T).....AT-57
 Standardized relayEL-5
 START - Wiring diagram.....SC-7
 Start signal.....EC-454
 Starter.....SC-9
 Starting system.....SC-6
 Steering gear and linkage inspection.....MA-26
 Steering linkage.....ST-16
 Steering switch.....EL-29
 Steering wheel and column.....ST-10
 Steering wheel play.....ST-6
 Steering wheel turning force.....ST-8
 Stop lamp.....EL-50

STOP/L - Wiring diagram.....EL-50
 Strut (front).....SU-8
 Sun roof, electricEL-131
 Sunload sensor.....HA-99
 Sunroof.....BT-39
 Supplemental Restraint System.....RS-10
 Supplemental restraint system - Wiring
 diagramRS-28
 SW/V - Wiring diagram.....EC-347
 Symbols and abbreviations.....GI-7
 Symptom matrix chart.....EC-91
 System readiness test (SRT) codeEC-44

T

Tachometer.....EL-75
 Tail lamp.....EL-49
 TAIL/L - Wiring diagramEL-49
 Tank fuel temperature sensor.....EC-251
 TCM circuit diagramAT-13
 TCM inspection table.....AT-85
 TFTS - Wiring diagram.....EC-253
 THEFT - Wiring diagram.....EL-232
 Theft warning system.....EL-226
 ThermostatLC-11
 Three way catalyst.....EC-290
 Three way catalyst precautions.....GI-4
 Throttle drum adjustment.....FE-3
 Throttle position sensor (TPS).....EC-144
 Throttle position sensor adjustmentEC-81
 Throttle position switchAT-173, 226, EC-331
 Tie-rodST-19
 Tie-rod ball joints.....ST-19
 Tightening torque of standard bolts.....GI-43
 Timing belt.....EM-16
 Tire rotationMA-24
 Tire sizeGI-38
 Torque converter installationAT-239, 328
 Torque convertor clutch solenoid
 valve.....AT-138, 143
 Tow truck towing.....GI-41
 Towing point.....GI-42
 TP/SW - Wiring diagram.....EC-334
 TPS - Wiring diagram.....EC-150
 Transaxle serial numberGI-38
 TRANSMT - Wiring diagramEL-255
 Tread-FR&RR (Dimensions).....GI-38
 Trim.....BT-19
 Trouble diagnoses.....GI-30
 T/TOW - Wiring diagram.....EL-59
 TURN - Wiring diagram.....EL-53
 Turn signal lamp.....EL-52
 Two trip detection logic.....EC-42
 Two-pole lift.....GI-41

ALPHABETICAL INDEX

U

Under body.....BT-53

V

Vacuum cut valve.....EC-24, 427
 Vacuum cut valve bypass
 valve.....EC-24, 416, 421
 Vacuum hose (brake system).....BR-19
 Vacuum hose drawing (Engine control).....EC-18
 Valve clearance.....EM-59
 Valve guide.....EM-32
 Valve seat.....EM-34
 Valve spring.....EM-36
 Vehicle identification number.....GI-37
 Vehicle recovery (freeing a stuck vehicle)...GI-42
 Vehicle speed sensor (VSS).....EC-319
 VENT/V - Wiring diagram.....EC-308, 400, 412
 Viscosity number (SAE).....MA-12
 VSS - Wiring diagram.....EC-322

W

WARN - Wiring diagram.....EL-88
 Warning buzzer.....EL-93
 Warning chime.....EL-93
 Warning lamps.....EL-85
 Washer, front.....EL-99
 Washer, rear.....EL-104

Water pump.....LC-9
 Water temperature gauge.....EL-75
 Weatherstrip - See Exterior.....BT-26
 Wheel alignment (front).....SU-6
 Wheel alignment (rear).....SU-15
 Wheel balance.....MA-24
 Wheel bearing (front).....AX-4
 Wheel bearing (rear).....AX-17
 Wheel hub (front).....AX-5
 Wheel hub (rear).....AX-18
 Wheel sensors (ABS).....BR-51, 65
 Wheel size.....GI-38
 Wheelarch height.....SU-5
 Wheelbase (Dimensions).....GI-38
 Wide open & closed throttle position
 switch.....EC-144
 Width (Dimensions).....GI-38
 WINDOW - Wiring diagram.....EL-191
 Window, door.....BT-12
 Window, rear side.....BT-46
 Window, side - See Rear side window.....BT-46
 Windshield.....BT-45
 Windshield washer - See Front washer.....EL-99
 Windshield wiper - See Front wiper.....EL-99
 WIP/R - Wiring diagram.....EL-105, 107
 WIPER - Wiring diagram.....EL-100
 Wiper and washer.....EL-99
 Wiper, front.....EL-99
 Wiper, rear.....EL-104
 Wiring Diagram (Cell code) list.....EL-281
 Wiring diagrams.....GI-8
 Wrist pin - See Piston pin inspection.....EM-48