

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-359	Alternator	SC-31
ABS - Wiring diagram	BR-36	Ambient sensor	HA-113
ABS sensor rotor	AX-5, 19	Angular tightening application	EM-3
Absolute pressure sensor	EC-137	Antenna	EL-152
A/C air flow	HA-26	Anti-lock brake system - Wiring diagram	BR-36
A/C component layout	HA-20, 165	AP/SEN - Wiring diagram	EC-140
A/C compressor clutch removal and installation	HA-127, 236	ASCD (automatic speed control device)	EL-217
A/C compressor description	HA-18, 163	ASCD - Wiring diagram	EL-221
A/C compressor precaution	HA-9, 154	A/T - Wiring diagram	AT-15
A/C compressor special service tool	HA-16, 161	A/T - Wiring diagram - AT - FTS	AT-112
A/C control linkage adjustment (auto A/C)	HA-62	A/T - Wiring diagram - AT - MAIN	AT-100
A/C control linkage adjustment (manual A/C)	HA-192	A/T - Wiring diagram - AT - PNP/SW	AT-105
A/C control operation (auto A/C)	HA-24	A/T - Wiring diagram - AT - VSS A/T	AT-119
A/C control operation (manual A/C)	HA-167	A/T control	EC-371
A/C diagnostic work flow (auto A/C)	HA-35	A/T diagnosis communication line	EC-468
A/C diagnostic work flow (manual A/C)	HA-177	A/T fluid temperature sensor	AT-116
A/C HFC134a (R134a) system precaution	HA-4, 149	A/T self-diagnoses	AT-39, 48
A/C HFC134a (R134a) system service tools	HA-13, 158	A/T shift lock system	AT-263
A/C HFC134a system service equipment precaution	HA-9, 155	A/T shift lock system - Wiring diagram	AT-264
A/C lubricant (R134a)	HA-124, 233	A/T trouble diagnoses	AT-55
A/C lubrication oil	HA-124, 233	A/T Wiring diagram - AT - ENG SS	AT-124
A/C operational check	HA-36, 178	A/T Wiring diagram AT - 1ST	AT-130
A/C pressure switch	HA-103, 222	A/T Wiring diagram AT - 2ND	AT-136
A/C relay	HA-103, 222	A/T Wiring diagram AT - 3RD	AT-142
A/C self-diagnoses (auto A/C)	HA-38	A/T Wiring diagram AT - 4TH	AT-149
A/C service data specification	HA-147, 257	A/T Wiring diagram AT - BA/FTS	AT-200
A/C switch	HA-25, 167	A/T Wiring diagram AT - LPSV	AT-169
A/C symptom chart (auto A/C)	HA-41	A/T Wiring diagram AT - NONDTC	AT-213
A/C symptom chart (manual A/C)	HA-180	A/T Wiring diagram AT - OVRCSV	AT-194
A/C trouble diagnoses (auto A/C)	HA-27	A/T Wiring diagram AT - SSV/A	AT-175
A/C trouble diagnoses (manual A/C)	HA-169	A/T Wiring diagram AT - SSV/B	AT-181
A/C, A - Wiring diagram	HA-31	A/T Wiring diagram AT - TCCSIG	AT-161
A/C, M - Wiring diagram	HA-173	A/T Wiring diagram AT - TCV	AT-156
Accelerator control system	FE-3	A/T Wiring diagram AT - TPS	AT-187
Accelerator wire adjustment	FE-3	A/T Wiring diagram AT - VSSMTR	AT-207
Air bag	RS-13, 19	AT/C - Wiring diagram	EC-373
Air bag disposal	RS-24	ATDIAG - Wiring diagram	EC-469
Air bag precautions	GI-3	Audio	EL-138
Air bleeding for brake system	BR-7	AUDIO - Wiring diagram	EL-140
Air cleaner filter replacement	MA-19	Audio and A/C control removal and installation - See Instrument panel	BT-23
Air conditioner cut control	EC-27	AUT/DP - Wiring diagram	EL-176
Air flow meter - See Mass air flow sensor	EC-128	Auto air conditioner - Wiring diagram	HA-31
Air mix door control linkage adjustment	HA-53	Autolamp	EL-34
Air mix. door motor	HA-48	Automatic drive positioner	EL-172
Air spoiler, rear	BT-36	Automatic speed control system - See ASCD	EL-217
		Automatic transaxle number	GI-42
		Automatic transmission fluid replacement	MA-25
		Auxiliary air control (AAC) valve	EC-356

ALPHABETICAL INDEX

B

Back doorBT-17
 Back door opener - See Back doorBT-17
 Back door trimBT-33
 Back-up lampEL-57
 BACK/L - Wiring diagramEL-57
 Ball joint (front).....SU-11
 Basic inspection.....EC-87
 Battery.....SC-4
 Battery/Starting/Charging
 System TesterSC-7, 13, 24
 Blower motor.....HA-83
 Blower relayHA-83, 96, 203, 214
 Blower resistor.....HA-97, 204, 215
 Body alignment.....BT-60
 Brake boosterBR-18
 Brake fluid change.....BR-6
 Brake fluid level.....MA-25
 Brake fluid level and line check.....BR-6
 Brake hydraulic lineBR-8
 Brake inspection.....MA-26
 Brake lines and cables inspectionMA-26
 Brake lining wear temporary checking.....MA-27
 Brake master cylinder.....BR-15
 Brake pedal.....BR-13
 Bulb specifications.....EL-336
 Bumper, front.....BT-14
 Bumper, rear.....BT-17
 BYPS/V - Wiring diagram.....EC-455, 463

C

Camshaft inspection.....EM-32
 Camshaft position sensor (CMPS).....EC-296
 Canister-See EVAP canister.....EC-28
 CHARGE - Wiring diagram.....SC-23
 Charging system.....SC-22
 Chassis and body maintenance.....MA-24
 CHIME - Wiring diagramEL-111
 CIGAR - Wiring diagramEL-129
 Cigarette lighterEL-129
 Circuit breakerEL-19
 CKPS - Wiring diagramEC-292, 417
 Clock.....EL-138
 Closed loop control.....EC-390
 Closed throttle position switch.....EC-363
 CMPS - Wiring diagram.....EC-299
 Coil spring (front).....SU-8
 Collision diagnosis.....RS-53
 Combination lamp, front, removal
 and installation.....BT-14
 Combination lamp, rear, removal
 and installation.....BT-36
 Combination meter.....EL-85
 Combination meter (needle type).....EL-85

Combination meter removal and
 installation - See Instrument panel.....BT-23
 Combination switchEL-31
 Component Location (auto A/C).....HA-27
 Component Location (manual A/C)HA-169
 Compression pressureEM-13
 Compressor clutch removal
 and installationHA-127, 236
 Compressor description.....HA-18, 163
 Compressor precautionHA-9, 154
 Compressor special service toolHA-16, 161
 Connecting rodEM-50
 Connecting rod bearing clearanceEM-54
 Connecting rod bushing clearanceEM-55
 Connector inspectionGI-19
 Console box - See Instrument panelBT-23
 CONSULT for ABSBR-41
 CONSULT for engine.....EC-69
 CONSULT-II general informationGI-37
 Control valve (A/T)AT-302
 Converter housing installationAT-363
 COOL/F - Wiring diagram.....EC-395
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-8
 Cooling fan control.....EC-392
 Cooling fan control systemLC-15
 Cooling fan motorEC-407
 Cooling fan relay.....EC-406
 CORNER - Wiring diagramEL-62
 Cornering lamp.....EL-61
 Crank angle sensor built into distributor -
 See Camshaft position sensor.....EC-296
 Crankcase emission control system -
 See positive crankcase ventilation.....EC-34
 CrankshaftEM-52
 Crankshaft position sensor (OBD).....EC-290
 Crankshaft position sensor (OBD)
 cog chippingEC-415
 Cruise control - See ASCDEL-217
 Cylinder block.....EM-47
 Cylinder block boring.....EM-52
 Cylinder headEM-27
 Cylinder head bolt tighteningEM-40

D

Data link connector for Consult.....EC-69
 Daytime light systemEL-48
 Daytime running light - See Daytime
 light system.....EL-48
 DEF - Wiring diagramEL-132
 Detonation sensor - See Knock
 sensor.....EC-285
 Diagnosis sensor unit.....RS-17
 Diagnostic trouble code (DTC) for
 OBD system.....EC-7, 51

ALPHABETICAL INDEX

Diagnostic trouble code (DTC)	
inspection priority chart	EC-100
Differential gear (FF A/T)	AT-346
Dimensions	GI-42
Distributor	EC-26
Distributor ignition (DI) system	EC-26
D/LOCK - Wiring diagram	EL-246
Dome light - See Interior lamp	EL-77
Door glass	BT-20
Door lock	BT-20
Door mirror	BT-58
Door trim	BT-31
Door, front	BT-20
Drive belt inspection	MA-13
Drive plate runout	EM-56
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-172
DTC work support	EC-78
DTRL - Wiring diagram	EL-51

E

ECM input/output signal	EC-111
ECTS - Wiring diagram	EC-156, 173
Electric sun roof	EL-168
Electrical diagnoses	GI-22
Electrical ignition system	EC-26
Electrical unit	EL-344
Electrical units location	EL-313
Engine compartment	BT-61
Engine control circuit diagram	EC-20
Engine control component parts	
location	EC-18
Engine control module (ECM)	EC-376
Engine control system diagram	
and chart	EC-21
Engine coolant temperature	
sensor (ECTS)	EC-154, 171
Engine fail-safe system	EC-101
Engine oil filter replacement	MA-20
Engine oil precautions	GI-6
Engine oil replacement	MA-19
Engine outer component parts	EM-10
Engine removal	EM-43
Engine room - See Engine	
compartment	BT-61
Engine serial number	GI-42
EVAP canister	EC-29
EVAP canister purge volume	
control solenoid valve	EC-28, 320, 423
EVAP canister vent control	
valve	EC-327, 432, 446
EVAP control system (small leak)	
diagnosis	EC-309, 421
EVAP control system pressure	
sensor	EC-334

EVAP control system purge flow	
monitoring diagnosis	EC-438
EVAP vapor lines inspection	MA-23
Evaporative emission (EVAP) system	EC-28
Exhaust system	FE-8
Exhaust system inspection	MA-24
Exterior	BT-36

F

Fan switch	HA-83
Fast idle cam (FIC) inspection	
and adjustment	EC-37
F/FOG - Wiring diagram	EL-59
FICD - Wiring diagram	EC-501
Final drive (FF A/T)	AT-346
Finisher, interior - See Trim	BT-28
Floor trim	BT-28
Fluid temperature sensor (A/T)	AT-116, 204
Fluids	MA-11
Flywheel runout	EM-56
Fog lamp, front	EL-58
Foot lamp	EL-77
Forward clutch	AT-324
F/PUMP - Wiring diagram	EC-490
Freeze frame data	EC-51
FRO2 - Wiring diagram	EC-180, 201, 210
FRO2/H - Wiring diagram	EC-216
Front axle	AX-2
Front bumper	BT-14
Front combination lamp removal	
and installation	BT-14
Front disc brake	BR-21
Front door	BT-20
Front fog lamp	EL-58
Front heated oxygen sensor	
(HO2S)	EC-177, 185, 191, 198, 208
Front heated oxygen sensor	
(HO2S) heater	EC-214
Front passenger air bag	RS-22
Front seat	BT-40
Front seat belt	RS-4
Front suspension	SU-2
Front washer	EL-117
Front wiper	EL-117
FUEL - Wiring diagram	EC-261, 269
Fuel cut control (at no load & high	
engine speed)	EC-28
Fuel filter replacement	MA-18
Fuel gauge	EL-85
Fuel injection system	EC-259, 267
Fuel injector	EC-479
Fuel line inspection	MA-18
Fuel precautions	GI-7
Fuel pressure check	EC-35
Fuel pressure regulator	EC-36
Fuel pressure release	EC-35

ALPHABETICAL INDEX

Fuel pump.....EC-488
Fuel pump and gauge.....FE-6
Fuel pump relay.....EC-495
Fuel system.....FE-4
Fuel tank temperature sensorEC-274
Fuel tank vacuum relief valve.....EC-29
Fuse.....EL-19
Fuse block.....EL-341
Fusible linkEL-19

G

Garage jack and safety stand.....GI-44
Gauges.....EL-85
Generator.....SC-31
Generator - See AlternatorSC-31
Generic scan tool (GST).....EC-81
GlassBT-20
GreaseMA-11
Ground distribution.....EL-20

H

Harness connectorEL-5
Harness connector inspectionGI-19
Harness layoutEL-316
Hazard warning lampEL-63
HeadlampEL-34
Headlamp aiming controlEL-46
Headlamp leveler - See Headlamp
aiming controlEL-46
Headlining - See Roof trim.....BT-34
Heated seatEL-211
Heater mirrorEL-171
Height (Dimensions)GI-42
HFC134a (R134a) system
precautionHA-4, 149
HFC134a (R134a) system
service tools.....HA-13, 158
HFC134a system service
equipment precautionHA-9, 155
High clutch.....AT-319
H/LAMP - Wiring diagramEL-36
H/MIRROR - Wiring diagramEL-171
HoodBT-14
Horn.....EL-128
HORN - Wiring diagram.....EL-128
How to erase DTC for OBD system.....EC-61
HSEAT - Wiring diagram.....EL-212
Hydraulic lash adjuster inspectionEM-38

I

IACV-AAC valve.....EC-356

IACV-FICD solenoid valveEC-500
IATS - Wiring diagramEC-150
Idle air control valve (IACV)EC-356
Idle mixture ratioEC-38
Idle speedEC-38
IGN/SG - Wiring diagramEC-410
Ignition control system.....EC-408
Ignition timing.....EC-38
Ignition wire inspectionEC-284
ILL - Wiring diagram.....EL-73
IlluminationEL-70
In vehicle sensor.....HA-116
INJECT - Wiring diagramEC-480
InjectorEC-479
Injector removal and installation.....EC-36
Instrument panel.....BT-23
INT/L - Wiring diagram.....EL-80
Intake air temperature sensorEC-148
Intake door control linkage
adjustment.....HA-62, 192
Intake door motorHA-56, 189
Integrated homelink transmitter.....EL-310
InteriorBT-28
Interior lampEL-77

J

Jacking points.....GI-43, 44
Joint connector (J/C).....EL-343

K

Keyless entry system - See Multi-remote
control system.....EL-262
Knock sensor (KS).....EC-285
Knuckle spindle.....AX-5
KS - Wiring diagramEC-286

L

Leaf spring (rear).....SU-20
Length (Dimensions).....GI-42
License lampEL-55
Lifting points.....GI-45
Line pressure solenoid valveAT-153, 172
Line pressure test (A/T).....AT-65
Liquid gasket application.....EM-3
Location of electrical units.....EL-313
Lock, door.....BT-20
Low and reverse brake.....AT-329
LSV (Load sensing valve)BR-10
Lubricant (R134a) A/C.....HA-124, 233
LubricantsMA-11
Lubrication circuit (engine).....LC-3

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Lubrication oil A/CHA-124, 233
Lubrication-locks, hinges and
hood latchesMA-28

M

MAFS - Wiring diagramEC-132
Magnet clutchHA-127, 236
MAIN - Wiring diagramEC-121
Maintenance (engine).....MA-13
MAJOR OVERHALLAT-276
Malfunction indicator lamp (MIL)EC-63
Manual air conditioner - Wiring
diagramHA-173
Map lampEL-77
MAP/BARO switch solenoid valve.....EC-378
Mass air flow sensor (MAFS)EC-128
Master cylinder (brake).....BR-15
MeterEL-85
METER - Wiring diagramEL-89
MIL & Data link connectors circuit.....EC-510
MIL/DL - Wiring diagramEC-510
MIRROR - Wiring diagramEL-170
Mirror defoggerEL-171
Mirror, doorBT-58
Mirror, out sideBT-58
MisfireEC-279
Mode door control linkage adjustmentHA-71
Model variation.....GI-40
Molding - See ExteriorBT-36
Mud guard - See Exterior.....BT-36
MULTI - Wiring diagramEL-266
Multi-remote control systemEL-262
Multiport fuel injection (MFI) systemEC-24
Multiport fuel injection precautionsGI-5

N

NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR)BR-5
NVH troubleshooting (EM)EM-8
NVH troubleshooting (ST)ST-5
NVH troubleshooting (SU)SU-3

O

Oil change (capacity).....MA-11
Oil change (interval).....MA-6
Oil pan (engine).....EM-14
Oil pressure (engine)LC-3
Oil pump (A/T)AT-298
Oil pump (engine)LC-4
Oil pump regulator valve (engine)LC-5
Oil seal replacement (engine)EM-25

On board diagnostic system.....EC-50
Out side mirrorBT-58
Overdrive control switchAT-261
Overrun clutchAT-324
Overrun clutch solenoid valveAT-197, 305
Oversize piston.....EM-52

P

Park/Neutral position switchEC-471
Park/neutral position switch (A/T)AT-103, 261
Parking brake control.....BR-29
Parking drum brakeBR-25
Parking lampEL-55
PCV (positive crankcase ventilation).....EC-34
Personal lampEL-77
PGC/V - Wiring diagram.....EC-323, 426
Pilot bushing replacement.....EM-58
Piston assemblyEM-56
Piston pin inspectionEM-49
Piston ring inspectionEM-49
Piston to bore clearanceEM-51
PNP/SW - Wiring diagramEC-473
POWER - Wiring diagramEL-12
Power door lockEL-242
Power door mirrorEL-170
Power seatEL-209
Power steering fluid levelMA-27, ST-7
Power steering gearST-16
Power steering hydraulic pressure.....ST-8
Power steering oil pressure switch.....EC-496
Power steering oil pumpST-21
Power steering system bleedingST-7
Power supply routing.....EL-9
Power transistor & ignition coil.....EC-408
Power windowEL-237
PRE/SE - Wiring diagram.....EC-336
Precautions (General).....GI-3
Pressure test (A/T)AT-65
PST/SW - Wiring diagramEC-497

R

RadiatorLC-12
Radio - See AudioEL-138
Rear air spoiler.....BT-36
Rear axle.....AX-18
Rear bumperBT-17
Rear combination lamp removal
and installation.....BT-36
Rear drum brake.....BR-25
Rear heated oxygen sensor
(HO2S).....EC-220, 229, 238, 246
Rear heated oxygen sensor
(HO2S) heater.....EC-253
Rear seat beltRS-6

ALPHABETICAL INDEX

Rear side window.....BT-56
 Rear suspension.....SU-15
 Rear washerEL-122
 Rear window.....BT-56
 Rear window defoggerEL-130
 Rear wiperEL-122
 Refrigerant connection
 precautionHA-5, 150
 Refrigerant discharging
 evacuating charging.....HA-122, 231
 Refrigerant general precaution.....HA-4, 149
 Refrigerant linesHA-134, 243
 Refrigeration cycle.....HA-18, 163
 Removal and installation (A/T)AT-273
 Reverse clutch.....AT-316
 Revolution sensor (A/T).....AT-122
 Road wheel sizeGI-42
 Roof trim.....BT-34
 Room lamp.....EL-77
 Room lamp - See Interior lamp.....EL-77
 RRO2 - Wiring
 diagram.....EC-223, 232, 240, 248
 RRO2/H - Wiring diagramEC-255

S

SAE J1930 terminology list.....GI-48
 Screw jack.....GI-43
 Seal - See Exterior.....BT-36
 SEAT - Wiring diagramEL-209
 Seat belt inspectionMA-28, RS-9
 Seat belt, frontRS-4
 Seat belt, rear.....RS-6
 Seat, front.....BT-40
 Seat, second (2nd).....BT-42
 Second (2nd) seat.....BT-42
 SHIFT - Wiring diagramAT-264
 Shift lock systemAT-263
 Shift scheduleAT-370
 Shift solenoid valve A
 (A/T).....AT-132, 144, 178, 305
 Shift solenoid valve B
 (A/T).....AT-132, 138, 305
 Shock absorber (front).....SU-8
 Shock absorber (rear).....SU-23
 Side trimBT-28
 Side window - See Rear side windowBT-56
 Smart entrance control unit.....EL-304
 SMJ (super multiple junction).....EL-339
 Spare tire size.....GI-42
 Spark plug replacementMA-21
 SpeedometerEL-85
 Spiral cable.....RS-19
 Spring (Wheelarch) height.....SU-5
 SROOF - Wiring diagram.....EL-169
 SRS - See Supplemental Restraint
 SystemRS-13

SRS - Wiring diagram.....RS-34
 SRS Trouble diagnoses.....RS-30
 S/SIG - Wiring diagramEC-485
 Stabilizer bar (front).....SU-10
 Stabilizer bar (rear).....SU-23
 Stall test (A/T).....AT-61
 Standardized relayEL-7
 START - Wiring diagram.....SC-11
 Start signal.....EC-484
 StarterSC-20
 Starting system.....SC-10
 Steering gear and linkage inspection.....MA-27
 Steering linkage.....ST-16
 Steering switchEL-33
 Steering wheel and column.....ST-10
 Steering wheel play.....ST-6
 Steering wheel turning forceST-8
 Step lampEL-77
 Stop lampEL-56
 STOP/L - Wiring diagramEL-56
 Strut (front).....SU-8
 Sun roof, electricEL-168
 Sunload sensorHA-119
 Sunroof.....BT-49
 Supplemental Restraint SystemRS-13
 Supplemental restraint system -
 Wiring diagram.....RS-34
 SW/V - Wiring diagram.....EC-381
 Symbols and abbreviations.....GI-9
 Symptom matrix chart.....EC-102
 System readiness test (SRT) codeEC-52

T

Tachometer.....EL-85
 Tail lampEL-55
 TAIL/L - Wiring diagramEL-55
 TCM circuit diagramAT-15
 TCM inspection table.....AT-96
 TFTS - Wiring diagram.....EC-276
 THEFT - Wiring diagramEL-287
 Theft warning system.....EL-281
 ThermostatLC-11
 Three way catalyst.....EC-304
 Three way catalyst precautionsGI-5
 Throttle drum adjustment.....FE-3
 Throttle position sensor (TPS).....EC-160
 Throttle position sensor
 adjustment.....EC-87
 Throttle position switchAT-191, 261, EC-363
 Tie-rodST-19
 Tie-rod ball joints.....ST-19
 Tightening torque of standard bolts.....GI-47
 Timing belt.....EM-17
 Tire rotationMA-25
 Tire sizeGI-42
 Torque converter installationAT-363

ALPHABETICAL INDEX

Torque convertor clutch solenoid valveAT-158
 Tow truck towingGI-45
 Towing pointGI-46
 TP/SW - Wiring diagramEC-366
 TPS - Wiring diagramEC-165
 Transaxle serial numberGI-42
 TRANSMT - Wiring diagramEL-310
 Tread-FR&RR (Dimensions)GI-42
 TrimBT-28
 Trouble diagnosesGI-32
 T/TOW - Wiring diagramEL-68
 TURN - Wiring diagramEL-64
 Turn signal lampEL-63
 Two trip detection logicEC-50
 Two-pole liftGI-45

U

Under bodyBT-63

V

Vacuum cut valveEC-28, 467
 Vacuum cut valve bypass valveEC-28, 453, 460
 Vacuum hose (brake system)BR-20
 Vacuum hose drawing (Engine control)EC-22
 Valve clearanceEM-60
 Valve guideEM-33
 Valve seatEM-35
 Valve springEM-37
 Vanity mirror lampEL-77
 Vehicle identification numberGI-41
 Vehicle recovery (freeing a stuck vehicle)GI-46
 Vehicle speed sensor (VSS)EC-352
 VENT/V - Wiring diagramEC-329, 434, 449
 Viscosity number (SAE)MA-12
 VSS - Wiring diagramEC-354

W

WARN - Wiring diagramEL-104
 Warning buzzerEL-109
 Warning chimeEL-109
 Warning lampsEL-101
 Washer, frontEL-117
 Washer, rearEL-122
 Water pumpLC-9
 Water temperature gaugeEL-85
 Weatherstrip - See ExteriorBT-36
 Wheel alignment (front)SU-6
 Wheel alignment (rear)SU-17
 Wheel balanceMA-25
 Wheel bearing (front)AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front)AX-5
 Wheel hub (rear)AX-19
 Wheel sensors (ABS)BR-53, 73
 Wheel sizeGI-42
 Wheelarch heightSU-5
 Wheelbase (Dimensions)GI-42
 Wide open & closed throttle position switchEC-160
 Width (Dimensions)GI-42
 WINDOW - Wiring diagramEL-239
 Window, doorBT-20
 Window, rear sideBT-56
 Window, side - See Rear side windowBT-56
 WindshieldBT-55
 Windshield washer - See Front washerEL-117
 Windshield wiper - See Front wiperEL-117
 WIP/R - Wiring diagramEL-123, 125
 WIPER - Wiring diagramEL-118
 Wiper and washerEL-117
 Wiper, frontEL-117
 Wiper, rearEL-122
 Wiring Diagram (Cell code) listEL-337
 Wiring diagramsGI-10
 Wrist pin - See Piston pin inspectionEM-49