

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-365	Alternator	SC-31
ABS - Wiring diagram	BR-36	Ambient sensor	HA-113
ABS sensor rotor	AX-5, 19	Angular tightening application	EM-3
Absolute pressure sensor	EC-143	Antenna	EL-152
A/C air flow	HA-26	Anti-lock brake system - Wiring diagram	BR-36
A/C component layout	HA-20, 163	AP/SEN - Wiring diagram	EC-146
A/C compressor clutch removal and installation	HA-127, 234	ASCD (automatic speed control device)	EL-217
A/C compressor description	HA-18, 161	ASCD - Wiring diagram	EL-221
A/C compressor precaution	HA-9, 152	A/T - Wiring diagram	AT-15
A/C compressor special service tool	HA-16, 159	A/T - Wiring diagram - AT - FTS	AT-112
A/C control linkage adjustment (auto A/C)	HA-62	A/T - Wiring diagram - AT - MAIN	AT-100
A/C control linkage adjustment (manual A/C)	HA-190	A/T - Wiring diagram - AT - PNP/SW	AT-105
A/C control operation (auto A/C)	HA-24	A/T - Wiring diagram - AT - VSS A/T	AT-119
A/C control operation (manual A/C)	HA-165	A/T control	EC-377
A/C diagnostic work flow (auto A/C)	HA-35	A/T diagnosis communication line	EC-474
A/C diagnostic work flow (manual A/C)	HA-175	A/T fluid temperature sensor	AT-116
A/C HFC134a (R134a) system precaution	HA-4, 147	A/T self-diagnoses	AT-39, 48
A/C HFC134a (R134a) system service tools	HA-13, 156	A/T shift lock system	AT-263
A/C HFC134a system service equipment precaution	HA-9, 153	A/T shift lock system - Wiring diagram	AT-264
A/C lubricant (R134a)	HA-124, 231	A/T trouble diagnoses	AT-55
A/C lubrication oil	HA-124, 231	A/T Wiring diagram - AT - ENG SS	AT-124
A/C operational check	HA-36, 176	A/T Wiring diagram AT - 1ST	AT-130
A/C pressure switch	HA-103, 220	A/T Wiring diagram AT - 2ND	AT-136
A/C relay	HA-103, 220	A/T Wiring diagram AT - 3RD	AT-142
A/C self-diagnoses (auto A/C)	HA-38	A/T Wiring diagram AT - 4TH	AT-149
A/C service data specification	HA-145, 253	A/T Wiring diagram AT - BA/FTS	AT-200
A/C switch	HA-25, 165	A/T Wiring diagram AT - LPSV	AT-169
A/C symptom chart (auto A/C)	HA-41	A/T Wiring diagram AT - NONDTC	AT-213
A/C symptom chart (manual A/C)	HA-178	A/T Wiring diagram AT - OVRCSV	AT-194
A/C trouble diagnoses (auto A/C)	HA-27	A/T Wiring diagram AT - SSV/A	AT-175
A/C trouble diagnoses (manual A/C)	HA-167	A/T Wiring diagram AT - SSV/B	AT-181
A/C, A - Wiring diagram	HA-31	A/T Wiring diagram AT - TCCSIG	AT-161
A/C, M - Wiring diagram	HA-171	A/T Wiring diagram AT - TCV	AT-156
Accelerator control system	FE-3	A/T Wiring diagram AT - TPS	AT-187
Accelerator wire adjustment	FE-3	A/T Wiring diagram AT - VSSMTR	AT-207
Air bag	RS-13, 19	AT/C - Wiring diagram	EC-379
Air bag disposal	RS-24	ATDIAG - Wiring diagram	EC-475
Air bag precautions	GI-3	Audio	EL-138
Air bleeding for brake system	BR-7	AUDIO - Wiring diagram	EL-140
Air cleaner filter replacement	MA-20	Audio and A/C control removal and installation - See Instrument panel	BT-23
Air conditioner cut control	EC-27	AUT/DP - Wiring diagram	EL-176
Air flow meter - See Mass air flow sensor	EC-134	Auto air conditioner - Wiring diagram	HA-31
Air mix door control linkage adjustment	HA-53	Autolamp	EL-34
Air mix. door motor	HA-48	Automatic drive positioner	EL-172
Air spoiler, rear	BT-36	Automatic speed control system - See ASCD	EL-217
		Automatic transaxle number	GI-42
		Automatic transmission fluid replacement	MA-25
		Auxiliary air control (AAC) valve	EC-362

ALPHABETICAL INDEX

B

Back doorBT-17
 Back door opener - See Back doorBT-17
 Back door trimBT-33
 Back-up lampEL-57
 BACK/L - Wiring diagramEL-57
 Ball joint (front)SU-11
 Basic inspectionEC-88
 BatterySC-4
 Battery/Starting/Charging
 System TesterSC-7, 13, 24
 Blower motorHA-83
 Blower relayHA-83, 96, 201, 212
 Blower resistorHA-97, 202, 213
 Body alignmentBT-60
 Brake boosterBR-18
 Brake fluid changeBR-6
 Brake fluid levelMA-25
 Brake fluid level and line checkBR-6
 Brake hydraulic lineBR-8
 Brake inspectionMA-26
 Brake lines and cables inspectionMA-26
 Brake master cylinderBR-15
 Brake pedalBR-13
 Bulb specificationsEL-336
 Bumper, frontBT-14
 Bumper, rearBT-17
 BYPS/V - Wiring diagramEC-461, 469

C

Camshaft inspectionEM-32
 Camshaft position sensor (CMPS)EC-302
 Canister-See EVAP canisterEC-28
 CHARGE - Wiring diagramSC-23
 Charging systemSC-22
 Chassis and body maintenanceMA-24
 CHIME - Wiring diagramEL-111
 CIGAR - Wiring diagramEL-129
 Cigarette lighterEL-129
 Circuit breakerEL-19
 CKPS - Wiring diagramEC-298, 423
 ClockEL-138
 Closed loop controlEC-396
 Closed throttle position switchEC-369
 CMPS - Wiring diagramEC-305
 Coil spring (front)SU-8
 Collision diagnosisRS-53
 Combination lamp, front, removal and
 installationBT-14
 Combination lamp, rear, removal and
 installationBT-36
 Combination meterEL-85
 Combination meter (needle type)EL-85

Combination meter removal and
 installation - See Instrument panelBT-23
 Combination switchEL-31
 Component Location (auto A/C)HA-27
 Component Location (manual A/C)HA-167
 Compression pressureEM-13
 Compressor clutch removal
 and installationHA-127, 234
 Compressor descriptionHA-18, 161
 Compressor precautionHA-9, 152
 Compressor special service toolHA-16, 159
 Connecting rodEM-50
 Connecting rod bearing clearanceEM-54
 Connecting rod bushing clearanceEM-55
 Connector inspectionGI-19
 Console box - See Instrument panelBT-23
 CONSULT for ABSBR-41
 CONSULT for engineEC-69
 CONSULT-II general informationGI-37
 Control valve (A/T)AT-302
 Converter housing installationAT-363
 COOL/F - Wiring diagramEC-401
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-8
 Cooling fan controlEC-398
 Cooling fan control systemLC-15
 Cooling fan motorEC-413
 Cooling fan relayEC-412
 CORNER - Wiring diagramEL-62
 Cornering lampEL-61
 Crank angle sensor built into distributor -
 See Camshaft position sensorEC-302
 Crankcase emission control system -
 See positive crankcase ventilationEC-34
 CrankshaftEM-52
 Crankshaft position sensor (OBD)EC-296
 Crankshaft position sensor (OBD)
 cog chippingEC-421
 Cruise control - See ASCDEL-217
 Cylinder blockEM-47
 Cylinder block boringEM-52
 Cylinder headEM-27
 Cylinder head bolt tighteningEM-40

D

Data link connector for ConsultEC-69
 Daytime light systemEL-48
 Daytime running light - See Daytime
 light systemEL-48
 DEF - Wiring diagramEL-132
 Detonation sensor - See Knock
 sensorEC-291
 Diagnosis sensor unitRS-17
 Diagnostic trouble code (DTC)
 for OBD systemEC-7, 51

ALPHABETICAL INDEX

Diagnostic trouble code (DTC)
 inspection priority chart.....EC-102
 Differential gear (FF A/T).....AT-346
 DimensionsGI-42
 Distributor.....EC-26
 Distributor ignition (DI) systemEC-26
 D/LOCK - Wiring diagramEL-246
 Dome light - See Interior lamp.....EL-77
 Door glassBT-20
 Door lockBT-20
 Door mirrorBT-58
 Door trim.....BT-31
 Door, front.....BT-20
 Drive belt inspection.....MA-13
 Drive shaft (front)AX-9
 Dropping resistor (A/T)AT-172
 DTC work support.....EC-79
 DTRL - Wiring diagramEL-51

E

ECM input/output signal.....EC-113
 ECTS - Wiring diagramEC-162, 179
 Electric sun roofEL-168
 Electrical diagnosesGI-22
 Electrical ignition systemEC-26
 Electrical unit.....EL-344
 Electrical units location.....EL-313
 Engine compartmentBT-61
 Engine control circuit diagramEC-20
 Engine control component parts
 locationEC-18
 Engine control module (ECM)EC-382
 Engine control system diagram
 and chartEC-21
 Engine coolant temperature
 sensor (ECTS)EC-160, 177
 Engine fail-safe systemEC-103
 Engine oil filter replacement.....MA-21
 Engine oil precautionsGI-6
 Engine oil replacement.....MA-20
 Engine outer component parts.....EM-10
 Engine removalEM-43
 Engine room - See Engine
 compartment.....BT-61
 Engine serial number.....GI-42
 EVAP canister.....EC-29
 EVAP canister purge volume
 control solenoid valve.....EC-28, 326, 429
 EVAP canister vent control
 valve.....EC-333, 438, 452
 EVAP control system (small leak)
 diagnosis.....EC-315, 427
 EVAP control system pressure
 sensor.....EC-340
 EVAP control system purge flow monitoring
 diagnosisEC-444

EVAP vapor lines inspectionMA-23
 Evaporative emission (EVAP) systemEC-28
 Exhaust system.....FE-8
 ExteriorBT-36

F

Fan switch.....HA-83
 Fast idle cam (FIC) inspection and
 adjustment.....EC-37
 F/FOG - Wiring diagram.....EL-59
 FICD - Wiring diagram.....EC-507
 Final drive (FF A/T)AT-346
 Finisher, interior - See Trim.....BT-28
 Floor trimBT-28
 Fluid temperature sensor (A/T)AT-116, 204
 FluidsMA-11
 Fog lamp, front.....EL-58
 Foot lampEL-77
 Forward clutchAT-324
 F/PUMP - Wiring diagramEC-496
 Freeze frame dataEC-51
 FRO2 - Wiring diagramEC-186, 207, 216
 FRO2/H - Wiring diagram.....EC-222
 Front axleAX-2
 Front bumper.....BT-14
 Front combination lamp removal and
 installationBT-14
 Front disc brakeBR-21
 Front door.....BT-20
 Front fog lamp.....EL-58
 Front heated oxygen sensor
 (HO2S)EC-183, 191, 197, 204, 214
 Front heated oxygen sensor (HO2S)
 heaterEC-220
 Front passenger air bagRS-22
 Front seatBT-40
 Front seat belt.....RS-4
 Front suspensionSU-2
 Front washer.....EL-117
 Front wiper.....EL-117
 FUEL - Wiring diagram.....EC-267, 275
 Fuel cut control (at no load & high
 engine speed)EC-28
 Fuel gaugeEL-85
 Fuel injection system.....EC-265, 273
 Fuel injectorEC-485
 Fuel precautionsGI-7
 Fuel pressure checkEC-35
 Fuel pressure regulatorEC-36
 Fuel pressure release.....EC-35
 Fuel pump.....EC-494
 Fuel pump and gauge.....FE-6
 Fuel pump relay.....EC-501
 Fuel system.....FE-4
 Fuel tank temperature sensorEC-280
 Fuel tank vacuum relief valve.....EC-29

ALPHABETICAL INDEX

Fuse.....EL-19
Fuse block.....EL-341
Fusible link.....EL-19

G

Garage jack and safety stand.....GI-44
Gauges.....EL-85
Generator.....SC-31
Generator - See Alternator.....SC-31
Generic scan tool (GST).....EC-82
Glass.....BT-20
Grease.....MA-11
Ground distribution.....EL-20

H

Harness connector.....EL-6
Harness connector inspection.....GI-19
Harness layout.....EL-316
Hazard warning lamp.....EL-63
Headlamp.....EL-34
Headlamp aiming control.....EL-46
Headlamp leveler - See Headlamp
aiming control.....EL-46
Headlining - See Roof trim.....BT-34
Heated seat.....EL-211
Heater mirror.....EL-171
Height (Dimensions).....GI-42
HFC134a (R134a) system
precaution.....HA-4, 147
HFC134a (R134a) system service
tools.....HA-13, 156
HFC134a system service
equipment precaution.....HA-9, 153
High clutch.....AT-319
H/LAMP - Wiring diagram.....EL-36
H/MIRROR - Wiring diagram.....EL-171
Hood.....BT-14
Horn.....EL-128
HORN - Wiring diagram.....EL-128
How to erase DTC for OBD system.....EC-61
HSEAT - Wiring diagram.....EL-212
Hydraulic lash adjuster inspection.....EM-38

I

IACV-AAC valve.....EC-362
IACV-FICD solenoid valve.....EC-506
IATS - Wiring diagram.....EC-156
Idle air control valve (IACV).....EC-362
Idle mixture ratio.....EC-39
Idle speed.....EC-39
IGN/SG - Wiring diagram.....EC-416

Ignition control system.....EC-414
Ignition timing.....EC-39
Ignition wire inspection.....EC-290
ILL - Wiring diagram.....EL-73
Illumination.....EL-70
In vehicle sensor.....HA-116
INJECT - Wiring diagram.....EC-486
Injector.....EC-485
Injector removal and installation.....EC-36
Instrument panel.....BT-23
INT/L - Wiring diagram.....EL-80
Intake air temperature sensor.....EC-154
Intake door control linkage
adjustment.....HA-62, 190
Intake door motor.....HA-56, 187
Integrated homelink transmitter.....EL-310
Interior.....BT-28
Interior lamp.....EL-77

J

Jacking points.....GI-43, 44
Joint connector (J/C).....EL-343

K

Keyless entry system - See
Multi-remote control system.....EL-262
Knock sensor (KS).....EC-291
Knuckle spindle.....AX-5
KS - Wiring diagram.....EC-292

L

Leaf spring (rear).....SU-20
Length (Dimensions).....GI-42
License lamp.....EL-55
Lifting points.....GI-45
Line pressure solenoid valve.....AT-153, 172
Line pressure test (A/T).....AT-65
Liquid gasket application.....EM-3
Location of electrical units.....EL-313
Lock, door.....BT-20
Low and reverse brake.....AT-329
LSV (Load sensing valve).....BR-10
Lubricant (R134a) A/C.....HA-124, 231
Lubricants.....MA-11
Lubrication circuit (engine).....LC-3
Lubrication oil A/C.....HA-124, 231
Lubrication-locks, hinges and
hood latches.....MA-29

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagramEC-138
Magnet clutchHA-127, 234
MAIN - Wiring diagramEC-127
Maintenance (engine).....MA-13
MAJOR OVERHALLAT-276
Malfunction indicator lamp (MIL)EC-63
Manual air conditioner - Wiring
 diagramHA-171
Map lampEL-77
MAP/BARO switch solenoid valve.....EC-384
Mass air flow sensor (MAFS)EC-134
Master cylinder (brake).....BR-15
MeterEL-85
METER - Wiring diagramEL-89
MIL & Data link connectors circuit.....EC-516
MIL/DL - Wiring diagramEC-516
MIRROR - Wiring diagramEL-170
Mirror defoggerEL-171
Mirror, doorBT-58
Mirror, out sideBT-58
MisfireEC-285
Mode door control linkage adjustmentHA-71
Model variation.....GI-40
Molding - See ExteriorBT-36
Mud guard - See Exterior.....BT-36
MULTI - Wiring diagramEL-266
Multi-remote control systemEL-262
Multiport fuel injection (MFI) systemEC-24
Multiport fuel injection precautionsGI-5

N

NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR)BR-5
NVH troubleshooting (EM)EM-8
NVH troubleshooting (ST)ST-5
NVH troubleshooting (SU)SU-3

O

Oil change (capacity).....MA-11
Oil change (interval).....MA-6
Oil pan (engine).....EM-14
Oil pressure (engine)LC-3
Oil pump (A/T)AT-298
Oil pump (engine)LC-4
Oil pump regulator valve (engine)LC-5
Oil seal replacement (engine)EM-25
On board diagnostic system.....EC-50
Out side mirrorBT-58
Overdrive control switchAT-261
Overrun clutchAT-324

Overrun clutch solenoid valveAT-197, 305
Oversize piston.....EM-52

P

Pantograph jackGI-43
Park/Neutral position switchEC-477
Park/neutral position switch
 (A/T)AT-103, 261
Parking brake control.....BR-29
Parking drum brakeBR-25
Parking lampEL-55
PCV (positive crankcase ventilation)EC-34
Personal lampEL-77
PGC/V - Wiring diagram.....EC-329, 432
Pilot bushing replacement.....EM-58
Piston assemblyEM-56
Piston pin inspectionEM-49
Piston ring inspectionEM-49
Piston to bore clearanceEM-51
PNP/SW - Wiring diagramEC-479
POWER - Wiring diagramEL-12
Power door lockEL-242
Power door mirrorEL-170
Power seatEL-209
Power steering fluid levelMA-27, ST-7
Power steering gearST-16
Power steering hydraulic pressure.....ST-8
Power steering oil pressure switch.....EC-502
Power steering oil pumpST-21
Power steering system bleedingST-7
Power supply routing.....EL-10
Power transistor & ignition coil.....EC-414
Power windowEL-237
PRE/SE - Wiring diagram.....EC-342
Precautions (General).....GI-3
Pressure test (A/T)AT-65
PST/SW - Wiring diagramEC-503

R

RadiatorLC-12
Radio - See AudioEL-138
Rear air spoiler.....BT-36
Rear axle.....AX-18
Rear bumperBT-17
Rear combination lamp removal and
 installationBT-36
Rear drum brake.....BR-25
Rear heated oxygen sensor
 (HO2S).....EC-226, 235, 244, 252
Rear heated oxygen sensor
 (HO2S) heater.....EC-259
Rear seat beltRS-6
Rear side window.....BT-56
Rear suspension.....SU-15

ALPHABETICAL INDEX

Rear washerEL-122
 Rear window.....BT-56
 Rear window defoggerEL-130
 Rear wiperEL-122
 Refrigerant connection precautionHA-5, 148
 Refrigerant discharging
 evacuating charging.....HA-122, 229
 Refrigerant general precaution.....HA-4, 147
 Refrigerant linesHA-134, 241
 Refrigeration cycle.....HA-18, 161
 Removal and installation (A/T)AT-273
 Reverse clutch.....AT-316
 Revolution sensor (A/T).....AT-122
 Road wheel sizeGI-42
 Roof trim.....BT-34
 Room lamp.....EL-77
 Room lamp - See Interior lamp.....EL-77
 RRO2 - Wiring
 diagram.....EC-229, 238, 246, 254
 RRO2/H - Wiring diagramEC-261

S

SAE J1930 terminology list.....GI-49
 Screw jack.....GI-43
 Seal - See Exterior.....BT-36
 SEAT - Wiring diagramEL-209
 Seat belt inspectionMA-30, RS-9
 Seat belt, frontRS-4
 Seat belt, rear.....RS-6
 Seat, front.....BT-40
 Seat, second (2nd).....BT-42
 Second (2nd) seat.....BT-42
 SHIFT - Wiring diagramAT-264
 Shift lock systemAT-263
 Shift scheduleAT-370
 Shift solenoid valve A
 (A/T).....AT-132, 144, 178, 305
 Shift solenoid valve B
 (A/T).....AT-132, 138, 305
 Shock absorber (front).....SU-8
 Shock absorber (rear).....SU-23
 Side trimBT-28
 Side window - See Rear side windowBT-56
 Smart entrance control unit.....EL-304
 SMJ (super multiple junction).....EL-339
 Spare tire size.....GI-42
 Spark plug replacementMA-21
 SpeedometerEL-85
 Spiral cable.....RS-19
 Spring (Wheelarch) height.....SU-5
 SROOF - Wiring diagram.....EL-169
 SRS - See Supplemental Restraint
 SystemRS-13
 SRS - Wiring diagram.....RS-34
 SRS Trouble diagnoses.....RS-30
 S/SIG - Wiring diagramEC-491

Stabilizer bar (front).....SU-10
 Stabilizer bar (rear).....SU-23
 Stall test (A/T).....AT-61
 Standardized relayEL-8
 START - Wiring diagram.....SC-11
 Start signal.....EC-490
 StarterSC-20
 Starting systemSC-10
 Steering gear and linkage inspection.....MA-27
 Steering linkage.....ST-16
 Steering switch.....EL-33
 Steering wheel and column.....ST-10
 Steering wheel play.....ST-6
 Steering wheel turning forceST-8
 Step lampEL-77
 Stop lampEL-56
 STOP/L - Wiring diagramEL-56
 Strut (front).....SU-8
 Sun roof, electricEL-168
 Sunload sensorHA-119
 Sunroof.....BT-49
 Supplemental Restraint SystemRS-13
 Supplemental restraint system -
 Wiring diagram.....RS-34
 SW/V - Wiring diagram.....EC-387
 Symbols and abbreviations.....GI-9
 Symptom matrix chart.....EC-104
 System readiness test (SRT) codeEC-52

T

TachometerEL-85
 Tail lampEL-55
 TAIL/L - Wiring diagramEL-55
 TCM circuit diagramAT-15
 TCM inspection table.....AT-96
 TFTS - Wiring diagram.....EC-282
 THEFT - Wiring diagramEL-287
 Theft warning system.....EL-281
 ThermostatLC-11
 Three way catalyst.....EC-310
 Three way catalyst precautionsGI-5
 Throttle drum adjustment.....FE-3
 Throttle position sensor (TPS).....EC-166
 Throttle position sensor adjustmentEC-88
 Throttle position
 switch.....AT-191, 261, EC-369
 Tie-rodST-19
 Tie-rod ball joints.....ST-19
 Tightening torque of standard bolts.....GI-47
 Timing belt.....EM-17
 Tire rotationMA-25
 Tire sizeGI-42
 Torque converter installationAT-363
 Torque convertor clutch solenoid
 valve.....AT-158
 Tow truck towingGI-45

ALPHABETICAL INDEX

Towing point.....GI-46
TP/SW - Wiring diagram.....EC-372
TPS - Wiring diagram.....EC-171
Transaxle serial numberGI-42
TRANSMT - Wiring diagramEL-310
Tread-FR&RR (Dimensions).....GI-42
TrimBT-28
Trouble diagnosesGI-32
T/TOW - Wiring diagramEL-68
TURN - Wiring diagram.....EL-64
Turn signal lamp.....EL-63
Two trip detection logic.....EC-50
Two-pole lift.....GI-45

U

Under body.....BT-63

V

Vacuum cut valveEC-28, 473
Vacuum cut valve bypass
 valve.....EC-28, 459, 466
Vacuum hose (brake system).....BR-20
Vacuum hose drawing (Engine
 control)EC-22
Valve clearanceEM-60
Valve guide.....EM-33
Valve seat.....EM-35
Valve spring.....EM-37
Vanity mirror lampEL-77
Vehicle identification numberGI-41
Vehicle recovery (freeing a stuck
 vehicle)GI-46
Vehicle speed sensor (VSS).....EC-358
VENT/V - Wiring diagram.....EC-335, 440, 455
Viscosity number (SAE)MA-12
VSS - Wiring diagram.....EC-360

W

WARN - Wiring diagram.....EL-104

Warning buzzerEL-109
Warning chimeEL-109
Warning lampsEL-101
Washer, frontEL-117
Washer, rearEL-122
Water pump.....LC-9
Water temperature gaugeEL-85
Weatherstrip - See Exterior.....BT-36
Wheel alignment (front)SU-6
Wheel alignment (rear)SU-17
Wheel balance.....MA-25
Wheel bearing (front)AX-4
Wheel bearing (rear).....AX-18
Wheel hub (front)AX-5
Wheel hub (rear).....AX-19
Wheel sensors (ABS)BR-53, 73
Wheel sizeGI-42
Wheelarch height.....SU-5
Wheelbase (Dimensions).....GI-42
Wide open & closed throttle
 position switch.....EC-166
Width (Dimensions).....GI-42
WINDOW - Wiring diagram.....EL-239
Window, door.....BT-20
Window, rear side.....BT-56
Window, side - See Rear side windowBT-56
Windshield.....BT-55
Windshield washer - See Front
 washer.....EL-117
Windshield wiper - See Front
 wiper.....EL-117
WIP/R - Wiring diagramEL-123, 125
WIPER - Wiring diagramEL-118
Wiper and washerEL-117
Wiper, frontEL-117
Wiper, rear.....EL-122
Wiring Diagram (Cell code) listEL-337
Wiring diagramsGI-10
Wrist pin - See Piston pin inspection.....EM-49