

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-638
2nd coast brake	AT-638
2nd coast brake hub	AT-644
A	
A/C air flow	ATC-28 , MTC-28
A/C compressor clutch removal and installation ..	ATC-174 , MTC-157
A/C compressor mounting	ATC-173 , MTC-156
A/C compressor precaution	ATC-11 , MTC-11
A/C compressor special service tool ..	ATC-14 , MTC-14
A/C control operation (auto A/C)	ATC-26 , MTC-26
A/C diagnostic work flow (auto A/C) ...	ATC-127 , MTC-119
A/C evaporator	ATC-184 , MTC-166
A/C HFC134a (R134a) system identification	ATC-7 , MTC-7
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-5
A/C HFC134a (R134a) system service procedure	ATC-169 , MTC-152
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-14
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-11
A/C lubricant (R134a)	ATC-22 , MTC-22
A/C lubrication oil	ATC-22 , MTC-22
A/C operational check	ATC-52 , MTC-53
A/C self-diagnoses (auto A/C)	ATC-50 , ATC-127 , MTC-51 , MTC-119
A/C service data specification	ATC-192 , MTC-174
A/C trouble diagnoses (auto A/C)	ATC-31 , MTC-31
A/C, A - Wiring diagram	ATC-39 , MTC-40
A/T - Wiring diagram	AT-19
A/T fluid checking	AT-382 , AT-421
A/T fluid replacement	AT-382
A/T fluid temperature sensor	AT-112 , AT-463 , AT-468
A/T IND - Wiring diagram	DI-30
A/T indicator	DI-30
A/T self-diagnoses	AT-42 , AT-54 , AT-442 , AT-447 , AT-448
A/T shift lock system	AT-247 , AT-600
A/T shift lock system - Wiring diagram	AT-248 , AT-601
A/T trouble diagnoses	AT-411
A/T Wiring diagram AT - 1ST	AT-129 , AT-484
A/T Wiring diagram AT - 2ND	AT-134 , AT-488
A/T Wiring diagram AT - 3RD	AT-139 , AT-494
A/T Wiring diagram AT - 4TH	AT-144 , AT-500
A/T Wiring diagram AT - 5TH	AT-505
A/T Wiring diagram AT - BA/FTS	AT-191
A/T Wiring diagram AT - CAN	AT-104 , AT-451
A/T Wiring diagram AT - ENG SS	AT-124
A/T Wiring diagram AT - FTS	AT-114 , AT-464
A/T Wiring diagram AT - FTSP	AT-469
A/T Wiring diagram AT - LPSV	AT-164
A/T Wiring diagram AT - LVRSW	AT-567
A/T Wiring diagram AT - MAIN	AT-100
A/T Wiring diagram AT - NONDTC	AT-209
A/T Wiring diagram AT - OVRCSV	AT-186
A/T Wiring diagram AT - PC/A	AT-513
A/T Wiring diagram AT - PC/B	AT-548
A/T Wiring diagram AT - PC/C	AT-557
A/T Wiring diagram AT - PC/CS	AT-562
A/T Wiring diagram AT - PNP/SW	AT-108 , AT-458
A/T Wiring diagram AT - PWR/IN	AT-571
A/T Wiring diagram AT - SFTFNC	AT-553
A/T Wiring diagram AT - SSV/A	AT-170 , AT-518
A/T Wiring diagram AT - SSV/B	AT-175 , AT-523
A/T Wiring diagram AT - SSV/C	AT-528
A/T Wiring diagram AT - SSV/CS	AT-533
A/T Wiring diagram AT - SSV/D	AT-538
A/T Wiring diagram AT - SSV/E	AT-543
A/T Wiring diagram AT - TCCSIG	AT-156 , AT-510
A/T Wiring diagram AT - TCV	AT-151
A/T Wiring diagram AT - TPS	AT-181
A/T Wiring diagram AT - TRSC	AT-474
A/T Wiring diagram AT - VSS A/T	AT-120
A/T Wiring diagram AT - VSSATC	AT-478
A/T Wiring diagram AT - VSSMTR ...	AT-197 , AT-202
ABS - Wiring diagram	BRC-16 , BRC-60
ABS (anti-lock brake system)	BRC-7 , BRC-50
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-655 , EC-662 , EC-678
Accelerator pedal released position learning	EC-94
Active damper suspension system - Wiring diagram	FSU-5
AF1B1-Wiring diagram	EC-531 , EC-539 , EC-547 , EC-556 , EC-566 , EC-575 , EC-587
AF1B2-Wiring diagram	EC-533 , EC-541 , EC-549 , EC-558 , EC-568 , EC-577 , EC-589
AF1HB1-Wiring diagram	EC-445
AF1HB2-Wiring diagram	EC-447
Aiming adjustment	LT-27
Air bag	SRS-3
Air bag precautions	GI-3 , AP-2
Air bleeding for brake system	BR-11
Air cleaner and air duct	EM-17
Air cleaner filter	EM-18
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-31
Air flow meter - See Mass air flow sensor	EC-192 , EC-202
Air fuel ratio sensor 1 ..	EC-529 , EC-537 , EC-545 , EC-554 , EC-563 , EC-572 , EC-584
Air fuel ratio sensor 1 heater	EC-444
Air mix. door motor	ATC-64 , MTC-63
Ambient sensor .	ATC-129 , ATC-140 , MTC-120 , MTC-126
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-657
APPS2 - Wiring diagram	EC-664
APPS3 - Wiring diagram	EC-680
ASC/BS - Wiring diagram	EC-628

ALPHABETICAL INDEX

ASC/SW - Wiring diagram	EC-620
ASCBOF - Wiring diagram	EC-734
ASCD	EC-32
ASCD brake switch	EC-626 , EC-733
ASCD clutch switch	EC-626 , EC-733
ASCD indicator lamp	EC-740
ASCD steering switch	EC-618
ASCIND - Wiring diagram	EC-741
AUDIO - Wiring diagram	AV-15
Auto air conditioner - Wiring diagram	ATC-39 , MTC-40
Auto anti-dazzling inside mirror	GW-80 , GW-81
Autolamp	LT-40
Automatic amplifier	ATC-48 , ATC-55 , MTC-55
Automatic transaxle number	GI-44
Automatic transmission fluid replacement	MA-23
AV and NAVI control unit	AV-115
AV communication line	AV-139

B

B5 brake	AT-646
Back door trim	EI-30
Back sonar	DI-49
BACK/L - Wiring diagram	LT-110
Back-up lamp	LT-110
Ball Joint (rear)	RSU-12
Basic inspection	EC-76
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-23
BCM (Body control module)	BCS-3
Block heater	EM-141
Blower motor ...	ATC-87 , ATC-144 , MTC-80 , MTC-128
Board computer	AV-87
Board-on lift	GI-38
Body alignment	BL-241
Body component parts	BL-230
Body construction	BL-240
Body exterior paint color	BL-229
Body repair	BL-229
Body sealing	BL-237
Bose speaker amp.	AV-8
Brake boosterBrake booster	BR-21
Brake fluid changeBrake fluid change	BR-11
Brake fluid level	MA-26
Brake fluid level and line checkBrake fluid level and line check	BR-11
Brake hydraulic lineBake hydraulic line	BR-12
Brake inspection	MA-26
Brake lines and cables inspection	MA-26
Brake master cylinderBrake master cylinder	BR-15
Brake pedalBrake pedal	BR-6
Brake switch	EC-626 , EC-650 , EC-733
BRK/SW - Wiring diagram	EC-651
Bulb specifications	LT-170
Bumper, front	EI-14
Bumper, rear	EI-16

C

Camshaft	EM-100
Camshaft inspection	EM-102
Camshaft position sensor (PHASE)	EC-322
CAN - Wiring diagram	EC-176 , LAN-17 , LAN-44 , LAN-71 , LAN-98 , LAN-128
CAN (Controller Area Network)	WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
CAN communication	EC-175 , AT-31 , AT-103 , AT-402 , AT-450 , WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
Canister-See EVAP canister	EC-38
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-7
Chassis and body maintenanceSchedule 2	MA-8
CHIME - Wiring diagram	DI-36
Circuit breaker	PG-66
Closed loop control	EC-28
Closed loop control (Bank 1)	EC-505
Closed loop control (Bank 2)	EC-505
Coil spring (front)	FSU-10
Coil spring (rear)	RSU-15
Collision diagnosis	SRS-59
Combination lamp, front, removal and installation ..	LT-29 , LT-39
Combination lamp, rear, removal and installation ..	LT-126
Combination meter	DI-5
Combination switch	LT-101
COMBSW - Wiring diagram	LT-101
COMM - Wiring diagram	AV-139
Component Location (auto A/C)	ATC-35 , MTC-35
Compression pressure	EM-118
Compressor clutch removal and installation .	ATC-174 , MTC-157
Compressor mounting	ATC-173 , MTC-156
Compressor precaution	ATC-11 , MTC-11
Compressor special service tool	ATC-14 , MTC-14
Condenser	ATC-182 , MTC-165
Connecting rod	EM-158
Connecting rod bearing clearance	EM-160
Connecting rod bushing clearance	EM-160
Connector inspection	GI-22
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-23 , BRC-69
CONSULT general information	GI-35
CONSULT-II for engine	EC-133
Control units (terminal arrangement)	PG-70
Controller Area Network (CAN)	WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
Converter housing installation	AT-357
COOL/F - Wiring diagram	EC-512
Coolant mixture ratio	MA-11
Coolant replacementVQ35DE	MA-14
Cooling fan	CO-12
Cooling fan control	EC-508

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Cooling fan motor [EC-508](#)
Cooling unit (A/C evaporator) [ATC-146](#), [ATC-184](#),
[MTC-130](#), [MTC-166](#)
CORNER - Wiring diagram [LT-89](#)
Cornering lamp [LT-86](#)
Corrosion protection [BL-234](#)
Crankcase ventilation system - See Positive crankcase
ventilation [EC-48](#)
Crankshaft [EM-141](#)
Crankshaft position sensor (POS) [EC-314](#)
Crash zone sensor [SRS-54](#)
Cylinder block [EM-141](#)
Cylinder head [EM-118](#)
Cylinder head bolt tightening [EM-121](#)

D

Data link connector for Consult [EC-135](#), [EC-146](#)
Daytime light system [LT-30](#)
Daytime running light - See Daytime light system .. [LT-30](#)
Diagnosis sensor unit [SRS-57](#)
Diagnostic trouble code (DTC) for OBD system . [EC-9](#),
[EC-56](#)
Diagnostic trouble code (DTC) inspection priority chart
[EC-106](#)
Differential gear (FF A/T) [AT-652](#)
Dimensions [GI-44](#)
Display and amp.assembly [ATC-48](#), [ATC-55](#), [MTC-55](#)
Display Control Unit [AV-209](#)
Display Unit [AV-112](#)
Dome light - See Interior lamp [LT-130](#)
Door glass [GW-74](#)
Door glass Fitting Adjustment(Front) [GW-75](#)
Door lock [BL-194](#)
Door trim [EI-30](#)
Door, front [GW-74](#)
Drive belt [EM-14](#)
Driver air bag [SRS-44](#)
Dropping resistor (A/T) [AT-162](#)
DTC work support [EC-144](#)
DTRL - Wiring diagram [LT-35](#)
Duct and grilles [ATC-164](#), [MTC-147](#)
DVD - Wiring Diagram [AV-77](#)
DVD Entertainment System [AV-74](#)
DVD Player [AV-85](#)

E

ECM input/output signal [EC-124](#), [EC-149](#)
ECM power supply [EC-166](#), [EC-451](#)
ECM/PW - Wiring diagram [EC-452](#)
ECTS - Wiring diagram [EC-218](#)
EGR function [EC-332](#), [EC-596](#)
EGR temperature sensor [EC-347](#)
EGR volume control valve [EC-340](#)
EGR/TS - Wiring diagram [EC-350](#)
EGRC1 - Wiring diagram [EC-336](#), [EC-600](#)
EGVC/V - Wiring diagram [EC-342](#)

Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-462](#), [EC-464](#)
Electrical diagnoses [GI-22](#)
Electrical load signal circuit [EC-732](#)
Electronic ignition (EI) system [EC-29](#)
EMNT - Wiring diagram [EC-722](#)
Engine control circuit diagram [EC-122](#)
Engine control component parts location [EC-113](#)
Engine control module (ECM) [EC-441](#)
Engine control system diagram and chart [EC-26](#)
Engine coolant temperature sensor (ECTS) .. [EC-216](#),
[EC-230](#)
Engine mounting control (Front) [EC-721](#)
Engine oil [LU-7](#)
Engine oil filter replacementQR25DE [MA-18](#)
Engine oil precautions [GI-3](#), [GI-6](#)
Engine oil replacementQR25DE [MA-18](#)
Engine removal [EM-134](#)
Engine serial number [GI-44](#)
ETC1 - Wiring diagram [EC-465](#)
ETC2 - Wiring diagram [EC-473](#)
ETC3 - Wiring diagram [EC-477](#)
EVAP canister [EC-38](#)
EVAP canister purge volume control solenoid valve
[EC-374](#), [EC-603](#)
EVAP canister vent control valve [EC-381](#), [EC-611](#)
EVAP control system (small leak) diagnosis .. [EC-366](#),
[EC-406](#), [EC-414](#)
EVAP control system pressure sensor ... [EC-388](#), [EC-391](#),
[EC-398](#)
EVAP control system purge flow monitoring diagnosis .
[EC-361](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-35](#)
Evaporator [ATC-184](#), [MTC-166](#)
Exhaust manifold [EM-27](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-21](#)
Expansion valve [ATC-187](#), [MTC-169](#)

F

F/FOG - Wiring diagram [LT-60](#)
F/PUMP - Wiring diagram [EC-716](#)
Family Entertainment System (See DVD Entertainment
System) [AV-74](#)
Flow charts [GI-25](#)
Fluid temperature sensor (A/T) .. [AT-112](#), [AT-463](#), [AT-468](#)
Fluids [MA-10](#)
Fluorescent leak detector [ATC-188](#), [MTC-170](#)
Fog lamp, front [LT-58](#)
Foot lamp [LT-131](#)
Freeze frame data [EC-57](#), [EC-137](#)
Front axle [FAX-5](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-29](#),
[LT-39](#)
Front disc brakeFront disc brake [BR-26](#)

ALPHABETICAL INDEX

Front door	BL-194 , GW-74
Front Door Trim	EI-30
Front fog lamp	LT-58
Front passenger air bag	SRS-49
Front seat	SE-89
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-56
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-283 , EC-288
Fuel cut control (at no load high engine speed)	EC-30
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-261 , EC-271
Fuel injection system (Bank 2)	EC-261 , EC-271
Fuel injector and fuel tube	EM-41
Fuel level sensor	EC-424 , EC-426 , EC-428
Fuel line inspection	FL-3 , MA-17
Fuel precautions	GI-3 , GI-5
Fuel pressure check	EC-97
Fuel pressure release	EC-97
Fuel pump	EC-715
Fuel pump and gauge	FL-4
Fuel system	FL-3
Fuel systemCommercial Service Tools	FL-2
Fuel systemPREPARATION	FL-2
Fuel tank	FL-7
Fuel tank temperature sensor	EC-281 , EC-287
Fuel tank vacuum relief valve	EC-38
FUELB1 - Wiring diagram	EC-263 , EC-273
FUELB2 - Wiring diagram	EC-264 , EC-274
Fuse	PG-66 , PG-75
Fuse block	PG-74
Fusible link	PG-66 , PG-75

G

Garage jack and safety stand	GI-38
Gauges	DI-5
Generator	SC-21
Generic scan tool (GST)	EC-146
Glass	GW-11 , GW-13 , GW-74
Glove box lamp	LT-156
GPS antenna	AV-114
Grease	MA-10
Ground distribution	PG-30

H

H/LAMP - Wiring diagram	LT-9
Handling precautions for plastics	BL-255
Harness connector	PG-67
Harness connector inspection	GI-22
Harness layout	PG-40
Hazard warning lamp	LT-69 , LT-86
Headlamp	LT-6
Headlamp removal and installation	LT-29 , LT-39
Heated oxygen sensor 2 (bank 1)	EC-239 , EC-249 , EC-481 , EC-493
Heated oxygen sensor 2 (bank 2)	EC-239 , EC-249 , EC-481 , EC-493

Heated oxygen sensor 2 heater (bank 1)	EC-183
Heated oxygen sensor 2 heater (bank 2)	EC-183
Heated seat	SE-86
Heater and cooling unit (Heater core)	ATC-146 , ATC-149 , MTC-130 , MTC-133
Heater unit (heater core) ...	ATC-146 , ATC-149 , MTC-130 , MTC-133
Height (Dimensions)	GI-44
HFC134a (R134a) system identification	ATC-7 , MTC-7
HFC134a (R134a) system precaution ..	ATC-5 , MTC-5
HFC134a (R134a) system service procedure	ATC-169 , MTC-152
HFC134a (R134a) system service tools	ATC-14 , MTC-14
HFC134a system service equipment precaution .	ATC-11 , MTC-11
Horn	WW-54
HORN - Wiring diagram	WW-54
How to erase DTC for OBD system	EC-65
HSEAT - Wiring diagram	SE-87

I

IATS - Wiring diagram	EC-212
Identification plate	GI-44
Idle air volume learning	EC-95
Idle mixture ratio	EC-83
Idle speed	EC-76 , EC-83
Idle speed control (ISC)	EC-432 , EC-434
Ignition coil	EM-37 , EC-686
Ignition control system	EC-686
Ignition timing	EC-76 , EC-83
IGNSYS - Wiring diagram	EC-687
ILL - Wiring diagram	LT-160
Illumination	LT-155
Illumination control	LT-169
In vehicle sensor	ATC-132 , ATC-141
INF/D - Wring diagram	AV-92
INJECT - Wiring diagram	EC-708
Injector	EC-707
Instrument panel	IP-10
Instrument panel speaker	AV-67
Intake air temperature sensor	EC-211 , EC-234
Intake door control linkage adjustment .	ATC-79 , ATC-84 , MTC-73 , MTC-78
Intake door motor .	ATC-77 , ATC-154 , MTC-72 , MTC-138
Intake manifold	EM-25
Intake sensor	ATC-137 , ATC-143 , MTC-122 , MTC-127
Intake valve timing control (Bank 1)	EC-178
Intake valve timing control (Bank 2)	EC-178
Intake valve timing control solenoid valve (Bank 1)	EC-455
Intake valve timing control solenoid valve (Bank 2)	EC-455
Interior	EI-32
Interior lamp	LT-130
Interior lamp on-off control	LT-131

ALPHABETICAL INDEX

IPDM (Intelligent power distribution module engine room) [PG-15](#)
IVCB1 - Wiring diagram [EC-456](#)
IVCB2 - Wiring diagram [EC-458](#)

J

Jacking points [GI-38](#)
Junction box (J/B) [PG-74](#)

K

Key illumination [LT-131](#)
Keyless entry system - See Multi-remote control system [BL-54](#)
Knock sensor (KS) [EC-309](#)
KS - Wiring diagram [EC-310](#)

L

Length (Dimensions) [GI-44](#)
License lamp [LT-112](#)
Lifting points [GI-38](#)
Line pressure solenoid valve [AT-162](#)
Line pressure test (A/T) [AT-71](#), [AT-423](#)
Liquid gasket application [EM-5](#), [LU-2](#)
Location of electrical units [PG-63](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
Lubricants [MA-10](#)
Lubrication circuit (engine) [LU-5](#)
Lubrication oil A/C [ATC-22](#), [MTC-22](#)
Lubrication-locks, hinges and hood latches [MA-30](#)

M

MAFS - Wiring diagram [EC-195](#), [EC-204](#)
Magnet clutch [ATC-108](#), [ATC-174](#), [MTC-101](#), [MTC-157](#)
MAIN - Wiring diagram [EC-166](#)
Maintenance [MA-4](#)
Malfunction indicator lamp (MIL) [EC-67](#)
Manual transaxle number [GI-44](#)
Map lamp [LT-131](#)
Mass air flow sensor (MAFS) [EC-192](#), [EC-202](#)
Master cylinder (brake)Master cylinder (brake) . [BR-15](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-10](#)
MIL data link connectors circuit [EC-743](#)
MIL/DL - Wiring diagram [EC-743](#)
Misfire [EC-300](#)
Mode door control linkage adjustment .. [ATC-60](#), [MTC-59](#)
Mode door motor .. [ATC-58](#), [ATC-157](#), [MTC-58](#), [MTC-141](#)
Model variation [GI-44](#)
Multiport fuel injection (MFI) system [EC-27](#)
Multiport fuel injection precautions [GI-3](#), [GI-5](#)
Multi-remote control system [BL-54](#)

N

NATS - Wiring diagram [BL-209](#)
NAVI - Wiring diagram [AV-131](#)
NAVI Control Unit [AV-209](#)
Navigation system [AV-113](#)
NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
NVH troubleshooting (EM) [EM-12](#)
NVH troubleshooting (FAX) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (WT) [WT-3](#)

O

O2H2B1 - Wiring diagram [EC-185](#)
O2H2B2 - Wiring diagram [EC-187](#)
O2S2B1 - Wiring diagram .. [EC-241](#), [EC-252](#), [EC-484](#), [EC-496](#)
O2S2B2 - Wiring diagram .. [EC-243](#), [EC-254](#), [EC-486](#), [EC-498](#)
Oil cooler (engine) [LU-15](#)
Oil filter [LU-10](#)
Oil pan (engine) [EM-31](#)
Oil pressure (engine) [LU-7](#)
Oil pump (A/T) [AT-638](#)
Oil pump (engine) [LU-11](#)
Oil pump regulator valve (engine) [LU-12](#)
Oil seal replacement (engine) [EM-114](#)
On board diagnostic system [EC-51](#)
One-way clutch No.1 [AT-644](#)
One-way clutch outer race sub assembly [AT-644](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-42](#)
Overdrive control switch [AT-239](#)
Overheat [EC-508](#)
Overrun clutch solenoid valve [AT-184](#)

P

P/SCKT - Wiring diagram [WW-52](#)
Park/Neutral position switch [EC-636](#)
Park/neutral position switch (A/T) [AT-106](#), [AT-457](#)
PCV (positive crankcase ventilation) [EC-48](#)
Periodic maintenance [MA-6](#)
Personal lamp [LT-131](#)
PGC/V - Wiring diagram [EC-376](#), [EC-605](#)
PHSB1 - Wiring diagram [EC-324](#)
PHSB2 - Wiring diagram [EC-326](#)
Pilot bushing replacement - See Pilot converter ... [EM-141](#)
Piston pin inspection [EM-158](#)
Piston ring inspection [EM-159](#)
Piston to bore clearance [EM-162](#)
PNP/SW - Wiring diagram [EC-638](#)
POS - Wiring diagram [EC-316](#)
POWER - Wiring diagram [PG-6](#)

ALPHABETICAL INDEX

Power seat [SE-82](#)
 Power steering fluid level [MA-28](#)
 Power steering pressure (PSP) sensor [EC-436](#)
 Power supply routing [PG-4](#)
 Power transistor [EC-686](#)
 Power window [GW-17](#)
 PRE/SE - Wiring diagram [EC-393](#), [EC-400](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-258](#)
 Pressure control solenoid valve A [AT-512](#)
 Pressure control solenoid valve B [AT-547](#)
 Pressure control solenoid valve C [AT-556](#)
 Pressure test (A/T) [AT-71](#), [AT-423](#)
 PS/SEN - Wiring diagram [EC-437](#)

R

Radiator fan - See Cooling fan [CO-12](#)
 Rear Audio Remote Control Unit [AV-68](#)
 Rear bumper [EI-16](#)
 Rear combination lamp removal and installation ... [LT-126](#)
 Rear disc brakeRear disc brake [BR-32](#)
 Rear seat [SE-100](#)
 Rear seat belt [SB-6](#)
 Rear suspension [RSU-9](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear washer [WW-34](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-82](#)
 Rear wiper [WW-34](#)
 Refrigerant connection precaution [ATC-7](#), [MTC-7](#)
 Refrigerant discharging evacuating charging [ATC-169](#), [MTC-152](#)
 Refrigerant general precaution [ATC-6](#), [MTC-6](#)
 Refrigerant lines [ATC-169](#), [ATC-177](#), [ATC-178](#), [MTC-152](#), [MTC-160](#), [MTC-161](#)
 Refrigerant pressure sensor . [EC-726](#), [ATC-113](#), [ATC-182](#), [MTC-164](#)
 Remote keyless entry system [BL-54](#)
 Removal and installation (A/T) [AT-260](#), [AT-611](#)
 Revolution sensor (A/T) [AT-118](#), [AT-477](#)
 Road wheel size [GI-44](#)
 Rocker cover [EM-44](#)
 Room lamp - See Interior lamp [LT-130](#)
 ROOM/L - Wiring diagram [LT-137](#)
 RP/SEN - Wiring diagram [EC-727](#)

S

SAE J1930 terminology list [GI-48](#)
 SEAT - Wiring diagram [SE-82](#), [SE-83](#)
 Seat belt inspection [SB-11](#), [MA-31](#)
 Seat belt pre-tensioner [SRS-56](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-6](#)
 Seat, front [SE-89](#)
 Seat, rear [SE-100](#)
 Seat, third (3rd) [SE-100](#)

Second (2nd) seat [SE-100](#)
 SEN/PW - Wiring diagram [EC-525](#)
 SHIFT - Wiring diagram [AT-248](#), [AT-601](#)
 Shift lock system [AT-247](#), [AT-600](#)
 Shift schedule [AT-364](#), [AT-431](#)
 Shift solenoid valve A (A/T) [AT-168](#), [AT-517](#)
 Shift solenoid valve B (A/T) [AT-173](#), [AT-522](#)
 Shift solenoid valve C (A/T) [AT-527](#)
 Shift solenoid valve D (A/T) [AT-537](#)
 Shift solenoid valve E (A/T) [AT-542](#)
 Shock absorber (front) [FSU-11](#)
 Shock absorber (rear) [RSU-11](#)
 Side air bag (satellite) sensor [SRS-55](#)
 Side curtain air bag [SRS-52](#)
 Side trim [EI-32](#)
 SMJ (super multiple junction) [PG-73](#)
 SONAR - Wiring diagram [DI-51](#)
 Spare tire size [GI-44](#)
 Spark plug [EM-39](#)
 Spark plug replacementQR25DE [MA-19](#)
 Specification value [EC-155](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-46](#)
 SROOF - Wiring diagram [RF-12](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-17](#)
 Stall test (A/T) [AT-68](#), [AT-421](#)
 Standardized relay [PG-71](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-10](#)
 Steering gear and linkage inspection [MA-27](#)
 Step lamp [LT-131](#)
 Stop lamp [LT-107](#)
 Stop lamp switch [EC-626](#), [EC-650](#), [EC-733](#)
 STOP/L - Wiring diagram [LT-108](#)
 Strut (front) [FSU-10](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-135](#)
 Sunroof [RF-20](#)
 Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram . [SRS-12](#)
 Symbols and abbreviations [GI-8](#), [GI-9](#), [GI-20](#)
 Symptom matrix chart [EC-109](#)
 System readiness test (SRT) code [EC-58](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-112](#)
 TAIL/L - Wiring diagram [LT-114](#)
 TCM circuit diagram [AT-19](#), [AT-420](#)
 TCM inspection table [AT-97](#), [AT-439](#)
 TCS - Wiring diagram [BRC-15](#), [BRC-16](#), [BRC-59](#), [BRC-60](#)
 TCS (traction control system) [BRC-7](#), [BRC-50](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

TCS component parts and connector location [BRC-14](#), [BRC-58](#)
TCS wheel sensors [BRC-14](#), [BRC-58](#)
Three way catalyst [EM-27](#)
Three way catalyst function (Bank 1) [EC-355](#)
Three way catalyst function (Bank 2) [EC-355](#)
Three way catalyst precautions [GI-3](#), [GI-5](#)
Throttle control motor [EC-476](#)
Throttle control motor relay [EC-471](#)
Throttle position sensor (TPS) .. [EC-222](#), [EC-292](#), [EC-520](#), [EC-522](#), [EC-670](#)
Throttle position switch [AT-239](#)
Throttle valve closed position learning [EC-94](#)
Tightening torque of standard bolts [GI-42](#)
Time lag test [AT-422](#)
Timing chain [EM-58](#)
Tire rotation [MA-26](#)
Tire size [GI-44](#)
Torque converter installation [AT-260](#), [AT-357](#), [AT-611](#)
Torque convertor clutch solenoid valve ... [AT-149](#), [AT-509](#)
Tow truck towing [GI-41](#)
Towing point [GI-41](#)
TPS1 - Wiring diagram [EC-294](#)
TPS2 - Wiring diagram [EC-224](#)
TPS3 - Wiring diagram [EC-672](#)
Traction control system - Wiring diagram [BRC-15](#), [BRC-59](#)
Transaxle case cover [AT-646](#)
Transaxle serial number [GI-44](#)
Tread-FR&RR (Dimensions) [GI-44](#)
Trim [EI-32](#)
TRNSCV - Wiring diagram [BL-226](#)
Trouble diagnoses [GI-9](#)
Turbine revolution sensor [AT-473](#)
TURN - Wiring diagram [LT-73](#)
Turn signal lamp [LT-69](#), [LT-86](#)
Two trip detection logic [EC-51](#)
Two-pole lift [GI-38](#)
Tyre pressure monitoring system - trouble diagnoses .. [WT-11](#)
Tyre pressure monitoring system - wiring diagram [WT-11](#)

V

Vacuum hose (brake system)Vacuum hose (brake system) [BR-24](#)
Vacuum hose drawing (Engine control) [EC-121](#)
Valve clearance [EM-109](#)
Valve guide [EM-129](#), [EM-130](#)
Valve lifter [EM-100](#)
Valve seat [EM-131](#)
Valve spring [EM-132](#)
Variable induction air control system (VIAS) .. [EC-645](#), [EC-699](#)
VDC (vehicle dynamics control) [BRC-50](#)
VDC -Wiring diagram [BRC-60](#)
Vehicle identification number [GI-44](#)

Vehicle recovery (freeing a stuck vehicle) [GI-41](#)
Vehicle speed sensor (VSS) [EC-430](#)
VENT/V - Wiring diagram [EC-383](#), [EC-613](#)
VIAS - Wiring diagram [EC-701](#)
VIAS/V - Wiring diagram [EC-646](#)
Video Monitor [AV-85](#)
VIN registration [EC-94](#)
Viscosity number (SAE) [MA-11](#)

W

W/ANT - Wiring diagram [AV-71](#)
WARN - Wiring diagram [DI-23](#)
Warning chime [DI-33](#)
Warning lamps [DI-22](#)
Washer, front [WW-4](#)
Washer, rear [WW-34](#)
Water temperature gauge [DI-5](#)
Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
Wheel balance [WT-5](#), [MA-24](#)
Wheel bearing (front) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (front) [FAX-5](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensors (ABS) [BRC-8](#), [BRC-52](#)
Wheel size [GI-44](#)
Wheelarch heightWheelarch height [RSU-19](#)
Wheelbase (Dimensions) [GI-44](#)
Width (Dimensions) [GI-44](#)
WINDOW - Wiring diagram [GW-31](#)
Window, door [GW-74](#)
Window, rear [GW-13](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-37](#)
WIPER - Wiring diagram [WW-11](#)
Wiper, front [WW-4](#)
Wiper, rear [WW-34](#)
Wiring Diagram (Cell code) list [PG-60](#)
Wiring diagrams [GI-8](#), [GI-13](#)
WT-T/WARN - Wiring diagram [WT-11](#)