

SECTION **IDX**

ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

1ST - Wiring diagram	AT-130 , AT-482
2ND - Wiring diagram	AT-135 , AT-486
2nd brake	AT-636
2nd coast brake	AT-636
2nd coast brake hub	AT-642
3RD - Wiring diagram	AT-140 , AT-492
4TH - Wiring diagram	AT-145 , AT-498
5TH - Wiring diagram	AT-503

A

A/C air flow	ATC-29 , MTC-29
A/C compressor clutch removal and installation ..	ATC-178 , MTC-161
A/C compressor mounting	ATC-177 , MTC-160
A/C compressor precaution	ATC-11 , MTC-11
A/C compressor special service tool .	ATC-14 , MTC-14
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-27
A/C diagnostic work flow (auto A/C)	ATC-131
A/C diagnostic work flow (manual A/C)	MTC-123
A/C evaporator	ATC-188 , MTC-170
A/C HFC134a (R134a) system identification	ATC-6 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-5
A/C HFC134a (R134a) system service procedure	ATC-173 , MTC-156
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-14
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-11
A/C lubricant (R134a)	ATC-22 , MTC-22
A/C lubrication oil	ATC-22 , MTC-22
A/C operational check	ATC-56 , MTC-56
A/C self-diagnoses (auto A/C)	ATC-54 , ATC-131
A/C service data specification	ATC-196 , MTC-178
A/C trouble diagnoses (auto A/C)	ATC-32
A/C trouble diagnoses (manual A/C)	MTC-32
A/C, A - Wiring diagram	ATC-43
A/C, M - Wiring diagram	MTC-43
A/T - Wiring diagram	AT-23
A/T fluid checking	AT-18 , AT-379 , AT-419
A/T fluid replacement	AT-18 , AT-379
A/T fluid temperature sensor	AT-113 , AT-461 , AT-466
A/T IND - Wiring diagram	DI-30
A/T indicator	DI-30
A/T self-diagnoses	AT-46 , AT-58 , AT-440 , AT-445 , AT-446
A/T shift lock system	AT-242 , AT-596
A/T shift lock system - Wiring diagram	AT-243 , AT-597
A/T trouble diagnoses	AT-409
A/T Wiring diagram AT - LVRSW	AT-565
ABS - Wiring diagram	BRC-16 , BRC-62
ABS (anti-lock brake system)	BRC-6 , BRC-51
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-625 , EC-

632 , EC-648	
Accelerator pedal released position learning	EC-82
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-247 , EC-257 , EC-267 , EC-278 , EC-658
AF1B2-Wiring diagram	EC-249 , EC-259 , EC-269 , EC-280 , EC-660
AF1HB1-Wiring diagram	EC-173
AF1HB2-Wiring diagram	EC-175
Aiming adjustment	LT-29
Air bag	SRS-3
Air bag precautions	GI-3 , AP-2
Air bleeding for brake system	BR-11
Air bleeding for brake system	BR-11
Air cleaner and air duct	EM-15
Air cleaner filter	EM-16
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-30
Air flow meter - See Mass air flow sensor	EC-197 , EC-207
Air fuel ratio sensor 1 ..	EC-244 , EC-255 , EC-265 , EC-275 , EC-656
Air fuel ratio sensor 1 heater	EC-172
Air mix. door motor	ATC-68 , MTC-66
Ambient sensor .	ATC-133 , ATC-144 , MTC-124 , MTC-130
Angular tightening application	EM-3
APPS1 - Wiring diagram	EC-627
APPS2 - Wiring diagram	EC-634
APPS3 - Wiring diagram	EC-650
ASC/BS - Wiring diagram	EC-587
ASC/SW - Wiring diagram	EC-579
ASCSOF - Wiring diagram	EC-668
ASCD	EC-31
ASCD brake switch	EC-585 , EC-667
ASCD clutch switch	EC-585 , EC-667
ASCD indicator lamp	EC-674
ASCD steering switch	EC-577
ASCIND - Wiring diagram	EC-675
AUDIO - Wiring diagram	AV-18
AUT/DP - Wiring diagram	SE-16
Auto air conditioner - Wiring diagram	ATC-43
Auto anti-dazzling inside mirror	GW-90 , GW-91
Autolamp	LT-42
Automatic amplifier	ATC-59
Automatic drive positioner	SE-11
Automatic transaxle number	GI-45
Automatic transmission fluid replacement	MA-25
AV and NAVI control unit	AV-165
AV communication line	AV-177

B

B5 brake	AT-644
BA/FTS - Wiring diagram	AT-188
Back door	BL-162
Back door trim	EI-29
Back sonar	DI-49

ALPHABETICAL INDEX

BACK/L - Wiring diagram	LT-114	Collision diagnosis	SRS-59
Back-up lamp	LT-114	Combination lamp, front, removal and installation ..	LT-31 , LT-41
Ball Joint (rear)	RSU-12	Combination lamp, rear, removal and installation ..	LT-131
Basic inspection	EC-75	Combination meter	DI-5
Battery	SC-4	Combination switch	LT-104
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-23	COMBSW - Wiring diagram	LT-104
BCM (Body control module)	BCS-3	COMM - Wiring diagram	AV-177
Block heater	EM-138	Component Location (auto A/C)	ATC-39
Blower motor ...	ATC-91 , ATC-148 , MTC-83 , MTC-132	Component Location (manual A/C)	MTC-39
Board computer	AV-101	Compression pressure	EM-115
Board-on lift	GI-39	Compressor clutch removal and installation .	ATC-178 , MTC-161
Body alignment	BL-244	Compressor mounting	ATC-177 , MTC-160
Body component parts	BL-233	Compressor precaution	ATC-11 , MTC-11
Body construction	BL-243	Compressor special service tool	ATC-14 , MTC-14
Body exterior paint color	BL-232	Condenser	ATC-186 , MTC-169
Body repair	BL-232	Connecting rod	EM-155
Body sealing	BL-240	Connecting rod bearing clearance	EM-157
Bose speaker amp.	AV-11	Connecting rod bushing clearance	EM-157
Brake boosterBrake booster	BR-22	Connector inspection	GI-23
Brake fluid changeBrake fluid change	BR-11	Console box - See Instrument panel	IP-10
Brake fluid level	MA-28	Console box lamp	LT-162
Brake fluid level and line checkBrake fluid level and line check	BR-11	CONSULT for VDC	BRC-24 , BRC-71
Brake hydraulic lineBake hydraulic line	BR-12	CONSULT general information	GI-36
Brake inspection	MA-28	CONSULT-II for engine	EC-121
Brake lines and cables inspection	MA-28	Control units (terminal arrangement)	PG-69
Brake master cylinderBrake master cylinder	BR-15	Controller Area Network (CAN)	BRC-9 , BRC-55
Brake pedalBrake pedal	BR-6	Converter housing installation	AT-354
Brake switch	EC-585 , EC-600 , EC-667	COOL/F - Wiring diagram	EC-558
BRK/SW - Wiring diagram	EC-601	Coolant mixture ratio	MA-10
Bulb specifications	LT-177	Coolant replacementVQ35DE	CO-9 , MA-13
Bumper, front	EI-14	Cooling fan	CO-16
Bumper, rear	EI-16	Cooling fan control	EC-554
C		Cooling fan motor	EC-554
Cabin air filter	ATC-149 , MTC-133 , MA-23	Cooling unit (A/C evaporator)	ATC-150 , ATC-188 , MTC-134 , MTC-170
Camshaft	EM-97	CORNER - Wiring diagram	LT-92
Camshaft inspection	EM-99	Cornering lamp	LT-89
Camshaft position sensor (PHASE)	EC-396	Corrosion protection	BL-237
CAN - Wiring diagram	EC-163 , AT-105 , AT-449 , LAN-26 , LAN-38 , LAN-53 , LAN-68 , LAN-83 , LAN-99	Courtesy lamp	LT-136
CAN (Controller Area Network)	BRC-9 , BRC-55	Crankcase ventilation system - See Positive crankcase ventilation	EC-47
CAN communication ...	EC-162 , EC-165 , AT-104 , AT-448 , WT-11 , BRC-9 , BRC-55	Crankshaft	EM-138
Canister-See EVAP canister	EC-37	Crankshaft position sensor (POS)	EC-388
CHARGE - Wiring diagram	SC-22	Crash zone sensor	SRS-54
Charging system	SC-21	Cylinder block	EM-138
Chassis and body maintenance	MA-23	Cylinder head	EM-115
Chassis and body maintenanceSchedule 1	MA-7	Cylinder head bolt tightening	EM-118
Chassis and body maintenanceSchedule 2	MA-8	D	
CHIME - Wiring diagram	DI-36	D/LOCK - Wiring diagram	BL-22
Circuit breaker	PG-15	Data link connector for Consult	EC-123 , EC-134
Closed loop control	EC-27	Daytime light system	LT-32
Closed loop control (Bank 1)	EC-551	Daytime running light - See Daytime light system ..	LT-32
Closed loop control (Bank 2)	EC-551	Diagnosis sensor unit	SRS-57
Coil spring (front)	FSU-9		
Coil spring (rear)	RSU-15		

ALPHABETICAL INDEX

Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-55](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-94](#)
 Differential gear (FF A/T) [AT-650](#)
 Dimensions [GI-45](#)
 Display and amp.assembly [ATC-52](#), [ATC-59](#), [MTC-58](#)
 Display Control Unit [AV-243](#)
 Display Unit [AV-162](#)
 Dome light - See Interior lamp [LT-136](#)
 Door glass [GW-82](#)
 Door glass Fitting Adjustment(Front) [GW-84](#)
 Door lock [BL-197](#)
 Door mirror lamp [LT-136](#)
 Door trim [EI-29](#)
 Door, front [GW-82](#)
 Drive belt [EM-12](#)
 Driver air bag [SRS-44](#)
 Dropping resistor (A/T) [AT-163](#)
 DTC work support [EC-132](#)
 DTRL - Wiring diagram [LT-37](#)
 Duct and grilles [ATC-168](#), [MTC-151](#)
 DVD - Wiring Diagram [AV-90](#)
 DVD Entertainment System [AV-87](#)
 DVD Player [AV-98](#)

E

ECM input/output signal [EC-112](#), [EC-137](#)
 ECM power supply [EC-153](#), [EC-529](#)
 ECM/PW - Wiring diagram [EC-530](#)
 ECTS - Wiring diagram [EC-223](#)
 EGR function [EC-406](#), [EC-570](#)
 EGR temperature sensor [EC-421](#)
 EGR volume control valve [EC-414](#)
 EGR/TS - Wiring diagram [EC-424](#)
 EGRC1 - Wiring diagram [EC-410](#), [EC-574](#)
 EGVC/V - Wiring diagram [EC-416](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-611](#), [EC-623](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-677](#)
 Electronic ignition (EI) system [EC-28](#)
 EMNT - Wiring diagram [EC-680](#)
 ENG SS - Wiring diagram [AT-125](#)
 Engine control circuit diagram [EC-110](#)
 Engine control component parts location [EC-101](#)
 Engine control module (ECM) [EC-533](#)
 Engine control system diagram and chart [EC-25](#)
 Engine coolant temperature sensor (ECTS) .. [EC-221](#), [EC-235](#)
 Engine mounting control (Front) [EC-679](#)
 Engine oil [LU-7](#)
 Engine oil filter replacementQR25DE [MA-18](#)
 Engine oil precautions [GI-3](#), [GI-7](#)
 Engine oil replacementQR25DE [MA-17](#)
 Engine removal [EM-131](#)
 Engine serial number [GI-45](#)
 ETC1 - Wiring diagram [EC-612](#)

ETC2 - Wiring diagram [EC-607](#)
 ETC3 - Wiring diagram [EC-619](#)
 EVAP canister [EC-37](#)
 EVAP canister purge volume control solenoid valve [EC-447](#), [EC-455](#)
 EVAP canister vent control valve [EC-462](#), [EC-469](#)
 EVAP control system (small leak) diagnosis .. [EC-439](#), [EC-494](#), [EC-502](#)
 EVAP control system pressure sensor ... [EC-476](#), [EC-479](#), [EC-486](#)
 EVAP control system purge flow monitoring diagnosis . [EC-434](#)
 EVAP vapor lines inspection [MA-22](#)
 Evaporative emission (EVAP) system [EC-34](#)
 Evaporator [ATC-188](#), [MTC-170](#)
 Exhaust manifold [EM-25](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-23](#)
 Expansion valve [ATC-191](#), [MTC-173](#)

F

F/FOG - Wiring diagram [LT-62](#)
 F/LID - Wiring diagram [BL-208](#)
 F/PUMP - Wiring diagram [EC-693](#)
 Family Entertainment System (See DVD Entertainment System) [AV-87](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) .. [AT-113](#), [AT-461](#), [AT-466](#)
 Fluids [MA-9](#)
 Fluorescent leak detector [ATC-192](#), [MTC-174](#)
 Fog lamp, front [LT-60](#)
 Foot lamp [LT-136](#)
 Freeze frame data [EC-56](#), [EC-125](#)
 Front axle [FAX-5](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-31](#), [LT-41](#)
 Front disc brakeFront disc brake [BR-27](#)
 Front door [BL-197](#), [GW-82](#)
 Front Door Trim [EI-29](#)
 Front fog lamp [LT-60](#)
 Front passenger air bag [SRS-49](#)
 Front seat [SE-88](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-56](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-115](#), [AT-462](#)
 FTSP - Wiring diagram [AT-467](#)
 FTTS - Wiring diagram [EC-357](#), [EC-362](#)
 Fuel cut control (at no load high engine speed) [EC-29](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-331](#), [EC-343](#)
 Fuel injection system (Bank 2) [EC-331](#), [EC-343](#)
 Fuel injector and fuel tube [EM-39](#)
 Fuel level sensor [EC-512](#), [EC-514](#), [EC-516](#)
 Fuel lid opener, electric [BL-208](#)

ALPHABETICAL INDEX

Fuel line inspection [FL-4](#), [MA-16](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-84](#)
 Fuel pressure release [EC-84](#)
 Fuel pump [EC-692](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-4](#)
 Fuel systemCommercial Service Tools [FL-3](#)
 Fuel systemPREPARATION [FL-3](#)
 Fuel tank [FL-8](#)
 Fuel tank temperature sensor [EC-355](#), [EC-361](#)
 Fuel tank vacuum relief valve [EC-37](#)
 FUELB1 - Wiring diagram [EC-333](#), [EC-345](#)
 FUELB2 - Wiring diagram [EC-335](#), [EC-347](#)
 Fuse [PG-15](#), [PG-74](#)
 Fuse block [PG-73](#)
 Fusible link [PG-15](#), [PG-74](#)

G

Garage jack and safety stand [GI-39](#)
 Gauges [DI-5](#)
 Generator [SC-21](#)
 Generic scan tool (GST) [EC-134](#)
 Glass [GW-11](#), [GW-13](#), [GW-82](#)
 Glove box lamp [LT-163](#)
 GPS antenna [AV-164](#)
 Grease [MA-9](#)
 Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-9](#)
 Handling precautions for plastics [BL-258](#)
 Harness connector [PG-66](#)
 Harness connector inspection [GI-23](#)
 Harness layout [PG-40](#)
 Hazard warning lamp [LT-71](#), [LT-89](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-31](#), [LT-41](#)
 Heated oxygen sensor 2 (bank 1) [EC-288](#), [EC-301](#), [EC-318](#)
 Heated oxygen sensor 2 (bank 2) [EC-288](#), [EC-301](#), [EC-318](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-180](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-180](#)
 Heated seat [SE-85](#)
 Heater and cooling unit (Heater core) . [ATC-150](#), [ATC-153](#), [MTC-134](#), [MTC-137](#)
 Heater unit (heater core) [ATC-150](#), [ATC-153](#), [MTC-134](#), [MTC-137](#)
 Height (Dimensions) [GI-45](#)
 HFC134a (R134a) system identification [ATC-6](#), [MTC-6](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system service procedure [ATC-173](#), [MTC-156](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-14](#)
 HFC134a system service equipment precaution [ATC-](#)

[11](#), [MTC-11](#)
 Homelink universal transceiver [BL-229](#)
 Horn [WW-51](#)
 HORN - Wiring diagram [WW-51](#)
 How to erase DTC for OBD system [EC-64](#)
 HSEAT - Wiring diagram [SE-86](#)

I

IATS - Wiring diagram [EC-217](#)
 Identification plate [GI-45](#)
 Idle air volume learning [EC-82](#)
 Idle speed [EC-75](#)
 Idle speed control (ISC) [EC-520](#), [EC-522](#)
 Ignition coil [EM-35](#), [EC-698](#)
 Ignition control system [EC-698](#)
 Ignition key hole illumination [LT-136](#)
 Ignition timing [EC-75](#)
 IGNSYS - Wiring diagram [EC-699](#)
 ILL - Wiring diagram [LT-167](#)
 Illumination [LT-162](#)
 Illumination control [LT-162](#), [LT-176](#)
 In vehicle sensor [ATC-136](#), [ATC-145](#)
 In-cabin Microfilter [ATC-149](#), [MTC-133](#), [MA-23](#)
 INF/D - Wring diagram [AV-105](#), [AV-116](#)
 INJECT - Wiring diagram [EC-685](#)
 Injector [EC-684](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-79](#)
 INT/L - Wiring diagram [LT-143](#)
 Intake air temperature sensor [EC-216](#), [EC-239](#)
 Intake door control linkage adjustment . [ATC-83](#), [ATC-88](#), [MTC-76](#), [MTC-81](#)
 Intake door motor . [ATC-81](#), [ATC-158](#), [MTC-75](#), [MTC-142](#)
 Intake manifold [EM-23](#)
 Intake sensor [ATC-141](#), [ATC-147](#), [MTC-126](#), [MTC-131](#)
 Intake valve timing control (Bank 1) [EC-167](#)
 Intake valve timing control (Bank 2) [EC-167](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-190](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-190](#)
 Integrated homelink transmitter [BL-229](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-229](#)
 Interior [EI-32](#)
 Interior lamp [LT-136](#)
 Interior lamp on-off control [LT-136](#)
 IPDM (Intelligent power distribution module engine room) [PG-16](#)
 IVCB1 - Wiring diagram [EC-191](#)
 IVCB2 - Wiring diagram [EC-193](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-39](#)

ALPHABETICAL INDEX

Junction box (J/B) [PG-73](#)

K

Key illumination [LT-136](#)
 KEYLES - Wiring diagram [BL-61](#)
 Knock sensor (KS) [EC-383](#)
 KS - Wiring diagram [EC-384](#)

L

Length (Dimensions) [GI-45](#)
 License lamp [LT-116](#)
 Lifting points [GI-39](#)
 Line pressure solenoid valve [AT-163](#)
 Line pressure test (A/T) [AT-73](#), [AT-421](#)
 Liquid gasket application [EM-4](#), [LU-2](#)
 Location of electrical units [PG-63](#)
 Low tire pressure warning system [WT-8](#)
 LPSV - Wiring diagram [AT-165](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
 Lubricants [MA-9](#)
 Lubrication circuit (engine) [LU-5](#)
 Lubrication oil A/C [ATC-22](#), [MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)
 Luggage room lamp [LT-136](#)

M

MAFS - Wiring diagram [EC-200](#), [EC-209](#)
 Magnet clutch [ATC-112](#), [ATC-178](#), [MTC-104](#), [MTC-161](#)
 MAIN - Wiring diagram [EC-153](#), [AT-101](#)
 Maintenance [MA-4](#)
 Malfunction indicator lamp (MIL) [EC-66](#)
 Manual transaxle number [GI-45](#)
 Map lamp [LT-136](#)
 Mass air flow sensor (MAFS) [EC-197](#), [EC-207](#)
 Master cylinder (brake)Master cylinder (brake) . [BR-15](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-9](#)
 MIL data link connectors circuit [EC-726](#)
 MIL/DL - Wiring diagram [EC-726](#)
 Misfire [EC-374](#)
 Mode door control linkage adjustment .. [ATC-64](#), [MTC-62](#)
 Mode door motor .. [ATC-62](#), [ATC-161](#), [MTC-61](#), [MTC-145](#)
 Model variation [GI-45](#)
 Multiport fuel injection (MFI) system [EC-26](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-55](#)

N

NATS - Wiring diagram [BL-213](#)
 NAVI - Wiring diagram [AV-169](#)
 NAVI Control Unit [AV-245](#)
 Navigation system [AV-163](#)

NONDTC - Wiring diagram [AT-206](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)

NVH troubleshooting (EM) [EM-10](#)
 NVH troubleshooting (FAX) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT) [WT-4](#)
 NVIS (Nissan vehicle immobilizer system) [BL-210](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-182](#)
 O2H2B2 - Wiring diagram [EC-184](#)
 O2S2B1 - Wiring diagram ... [EC-291](#), [EC-305](#), [EC-321](#)
 O2S2B2 - Wiring diagram ... [EC-293](#), [EC-307](#), [EC-323](#)
 Oil cooler (engine) [LU-15](#)
 Oil filter [LU-10](#)
 Oil pan (engine) [EM-29](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (A/T) [AT-636](#)
 Oil pump (engine) [LU-11](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-111](#)
 On board diagnostic system [EC-50](#)
 One-way clutch No.1 [AT-642](#)
 One-way clutch outer race sub assembly [AT-642](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-41](#)
 Overdrive control switch [AT-236](#)
 Overheat [EC-554](#)
 Overrun clutch solenoid valve [AT-181](#)
 OVRCSV - Wiring diagram [AT-183](#)

P

P/SCKT - Wiring diagram [WW-49](#)
 Park/Neutral position switch [EC-542](#)
 Park/neutral position switch (A/T) [AT-107](#), [AT-455](#)
 Parking lamp [LT-116](#)
 PC/A - Wiring diagram [AT-511](#)
 PC/B - Wiring diagram [AT-546](#)
 PC/C - Wiring diagram [AT-555](#)
 PC/CS - Wiring diagram [AT-560](#)
 PCV (positive crankcase ventilation) [EC-47](#)
 Periodic maintenance [MA-6](#)
 Personal lamp [LT-136](#)
 PGC/V - Wiring diagram [EC-449](#), [EC-457](#)
 PHSB1 - Wiring diagram [EC-398](#)
 PHSB2 - Wiring diagram [EC-400](#)
 Pilot bushing replacement - See Pilot converter ... [EM-138](#)
 Piston pin inspection [EM-155](#)
 Piston ring inspection [EM-156](#)
 Piston to bore clearance [EM-159](#)
 PNP/SW - Wiring diagram ... [EC-544](#), [AT-109](#), [AT-456](#)

ALPHABETICAL INDEX

POS - Wiring diagram	EC-390	SEAT - Wiring diagram	SE-81 , SE-82
POWER - Wiring diagram	PG-6	Seat belt inspection	SB-11 , MA-31
Power door lock	BL-18	Seat belt pre-tensioner	SRS-56
Power seat	SE-81	Seat belt, front	SB-4
Power steering fluid level	MA-29	Seat belt, rear	SB-6
Power steering pressure (PSP) sensor	EC-524	Seat, front	SE-88
Power supply routing	PG-4	Seat, rear	SE-101
Power transistor	EC-698	Seat, third (3rd)	SE-101
Power window	GW-17	Second (2nd) seat	SE-101
PRE/SE - Wiring diagram	EC-481 , EC-488	SEN/PW - Wiring diagram	EC-537
Precautions (General)	GI-3 , GI-4	SFTFNC - Wiring diagram	AT-551
Precautions in repairing high strength steel	BL-261	SHIFT - Wiring diagram	AT-243 , AT-597
Pressure control solenoid valve A	AT-510	Shift lock system	AT-242 , AT-596
Pressure control solenoid valve B	AT-545	Shift schedule	AT-361 , AT-429
Pressure control solenoid valve C	AT-554	Shift solenoid valve A (A/T)	AT-169 , AT-515
Pressure test (A/T)	AT-73 , AT-421	Shift solenoid valve B (A/T)	AT-174 , AT-520
PS/SEN - Wiring diagram	EC-525	Shift solenoid valve C (A/T)	AT-525
PWR/IN - Wiring diagram	AT-569	Shift solenoid valve D (A/T)	AT-535
R		Shift solenoid valve E (A/T)	AT-540
R/VIEW - Wiring diagram	DI-62	Shock absorber (front)	FSU-10
Radiator fan - See Cooling fan	CO-16	Shock absorber (rear)	RSU-11
Rear Audio Remote Control Unit	AV-80	Side air bag (satellite) sensor	SRS-55
Rear bumper	EI-16	Side curtain air bag	SRS-52
Rear combination lamp removal and installation ..	LT-131	Side trim	EI-32
Rear disc brakeRear disc brake	BR-34	Sliding door	BL-113
Rear seat	SE-101	SMJ (super multiple junction)	PG-72
Rear seat belt	SB-6	SONAR - Wiring diagram	DI-51
Rear suspension	RSU-9	Spare tire size	GI-45
Rear suspensionRear suspension	RSU-5	Spark plug	EM-37
Rear view monitor	DI-59	Spark plug replacementQR25DE	MA-20
Rear washer	WW-31	Specification value	EC-142
Rear window	GW-13	Speedometer	DI-5
Rear window defogger	GW-92	Spiral cable	SRS-46
Rear wiper	WW-31	SROOF - Wiring diagram	RF-12
Refrigerant connection precaution	ATC-6 , MTC-6	SRS - See Supplemental Restraint System	SRS-5
Refrigerant discharging evacuating charging	ATC-173 , MTC-156	SRS - Wiring diagram	SRS-12
Refrigerant general precaution	ATC-6 , MTC-6	SRS Trouble diagnoses	SRS-8
Refrigerant lines	ATC-173 , ATC-181 , ATC-182 , MTC-156 , MTC-164 , MTC-165	SSV/A - Wiring diagram	AT-171 , AT-516
Refrigerant pressure sensor .	EC-711 , ATC-117 , ATC-186 , MTC-168	SSV/B - Wiring diagram	AT-176 , AT-521
REMOTE - Wiring diagram	BL-61	SSV/C - Wiring diagram	AT-526
Remote keyless entry system	BL-55	SSV/CS - Wiring diagram	AT-531
Removal and installation (A/T)	AT-257 , AT-609	SSV/D - Wiring diagram	AT-536
Revolution sensor (A/T)	AT-119 , AT-475	SSV/E - Wiring diagram	AT-541
Road wheel size	GI-45	Stabilizer bar (front)	FSU-11
Rocker cover	EM-42	Stabilizer bar (rear)	RSU-17
Room lamp	LT-136	Stall test (A/T)	AT-70 , AT-419
Room lamp - See Interior lamp	LT-136	Standardized relay	PG-70
ROOM/L - Wiring diagram	LT-143	START - Wiring diagram	SC-11
RP/SEN - Wiring diagram	EC-712	Starting system	SC-10
S		Steering gear and linkage inspection	MA-29
SAE J1930 terminology list	GI-49	Step lamp	LT-136
		Stop lamp	LT-110
		Stop lamp switch	EC-585 , EC-600 , EC-667
		STOP/L - Wiring diagram	LT-111
		Strut (front)	FSU-9
		Sun roof, electric	RF-10
		Sunload sensor	ATC-139
		Sunroof	RF-21
		Supplemental Restraint System	SRS-5

ALPHABETICAL INDEX

Supplemental restraint system - Wiring diagram [SRS-12](#)
 Symbols and abbreviations [GI-8](#), [GI-10](#), [GI-21](#)
 Symptom matrix chart [EC-97](#)
 System readiness test (SRT) code [EC-56](#)

T

T/TOW - Wiring diagram [LT-134](#)
 Tachometer [DI-5](#)
 Tail lamp [LT-116](#)
 TAIL/L - Wiring diagram [LT-119](#)
 TCCSIG - Wiring diagram [AT-157](#), [AT-508](#)
 TCM circuit diagram [AT-23](#), [AT-418](#)
 TCM inspection table [AT-98](#), [AT-437](#)
 TCS - Wiring diagram [BRC-15](#), [BRC-16](#), [BRC-61](#), [BRC-62](#)
 TCS (traction control system) [BRC-6](#), [BRC-51](#)
 TCS component parts and connector location [BRC-13](#), [BRC-59](#)
 TCS wheel sensors [BRC-13](#), [BRC-59](#)
 TCV - Wiring diagram [AT-152](#)
 Theft warning system - See Vehicle security (Theft warning) system [BL-88](#)
 Three way catalyst [EM-25](#)
 Three way catalyst function (Bank 1) [EC-428](#)
 Three way catalyst function (Bank 2) [EC-428](#)
 Three way catalyst precautions [GI-3](#), [GI-5](#)
 Throttle control motor [EC-618](#)
 Throttle control motor relay [EC-605](#)
 Throttle position sensor (TPS) .. [EC-227](#), [EC-366](#), [EC-566](#), [EC-568](#), [EC-640](#)
 Throttle position switch [AT-236](#)
 Throttle valve closed position learning [EC-82](#)
 Tightening torque of standard bolts [GI-43](#)
 Time lag test [AT-420](#)
 Timing chain [EM-56](#)
 Tire rotation [MA-28](#)
 Tire size [GI-45](#)
 Torque converter installation [AT-257](#), [AT-354](#), [AT-609](#)
 Torque convertor clutch solenoid valve ... [AT-150](#), [AT-507](#)
 Tow truck towing [GI-42](#)
 Towing point [GI-42](#)
 TPS1 - Wiring diagram [EC-368](#)
 TPS2 - Wiring diagram [EC-229](#)
 TPS3 - Wiring diagram [EC-642](#)
 Traction control system - Wiring diagram [BRC-15](#), [BRC-61](#)
 Transaxle case cover [AT-644](#)
 Transaxle serial number [GI-45](#)
 Tread-FR&RR (Dimensions) [GI-45](#)
 Trim [EI-32](#)
 TRNSCV - Wiring diagram [BL-229](#)
 Trouble diagnoses [GI-11](#)
 TRSC - Wiring diagram [AT-472](#)
 Turbine revolution sensor [AT-471](#)
 TURN - Wiring diagram [LT-75](#)
 Turn signal lamp [LT-71](#), [LT-89](#)

Two trip detection logic [EC-50](#)
 Two-pole lift [GI-39](#)
 Tyre pressure monitoring system - trouble diagnoses .. [WT-12](#)
 Tyre pressure monitoring system - wiring diagram [WT-12](#)

V

Vacuum hose (brake system)Vacuum hose (brake system) [BR-25](#)
 Vacuum hose drawing (Engine control) [EC-109](#)
 Valve clearance [EM-106](#)
 Valve guide [EM-126](#), [EM-127](#)
 Valve lifter [EM-97](#)
 Valve seat [EM-128](#)
 Valve spring [EM-129](#)
 Vanity mirror lamp [LT-136](#)
 Variable induction air control system (VIAS) .. [EC-595](#), [EC-717](#)
 VDC (vehicle dynamics control) [BRC-51](#)
 VDC -Wiring diagram [BRC-62](#)
 Vehicle identification number [GI-45](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-42](#)
 Vehicle security (theft warning) system [BL-88](#)
 Vehicle speed sensor (VSS) [EC-518](#)
 VEHSEC - Wiring diagram [BL-92](#)
 VENT/V - Wiring diagram [EC-464](#), [EC-471](#)
 VIAS - Wiring diagram [EC-719](#)
 VIAS/V - Wiring diagram [EC-596](#)
 Video Monitor [AV-98](#)
 VIN registration [EC-81](#)
 Viscosity number (SAE) [MA-10](#)
 VSS A/T - Wiring diagram [AT-121](#)
 VSSATC - Wiring diagram [AT-476](#)
 VSSMTR - Wiring diagram [AT-194](#), [AT-199](#)

W

W/ANT - Wiring diagram [AV-84](#)
 WARN - Wiring diagram [DI-22](#)
 Warning chime [DI-33](#)
 Warning lamps [DI-21](#)
 Washer, front [WW-4](#)
 Washer, rear [WW-31](#)
 Water temperature gauge [DI-5](#)
 Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
 Wheel balance [WT-6](#), [MA-26](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-5](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel sensors (ABS) [BRC-7](#), [BRC-53](#)
 Wheel size [GI-45](#)
 Wheelarch heightWheelarch height [RSU-19](#)
 Wheelbase (Dimensions) [GI-45](#)
 Width (Dimensions) [GI-45](#)
 WINDOW - Wiring diagram [GW-30](#)
 Window, door [GW-82](#)

ALPHABETICAL INDEX

Window, rear	GW-13
Windshield	GW-11
WIP/R - Wiring diagram	WW-34
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-31
Wiring Diagram (Cell code) list	PG-60
Wiring diagrams	GI-8 , GI-14
WT-T/WARN - Wiring diagram	WT-12

A

B

C

D

E

F

G

H

I

J

K

L

IDX