

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-266
2nd coast brake	AT-266
2nd coast brake hub	AT-272
A	
A/C air flow	ATC-29 , MTC-29
A/C compressor clutch removal and installation ..	ATC-198 , MTC-177
A/C compressor mounting	ATC-197 , MTC-176
A/C compressor precaution	ATC-11 , MTC-11
A/C compressor special service tool ..	ATC-14 , MTC-14
A/C control operation (auto A/C)	ATC-27
A/C control operation (manual A/C)	MTC-27
A/C diagnostic work flow (auto A/C)	ATC-145
A/C diagnostic work flow (manual A/C)	MTC-135
A/C evaporator	ATC-208 , MTC-186
A/C HFC134a (R134a) system identification	ATC-6 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-5
A/C HFC134a (R134a) system service procedure	ATC-193 , MTC-172
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-14
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-11
A/C lubricant (R134a)	ATC-22 , MTC-22
A/C lubrication oil	ATC-22 , MTC-22
A/C operational check	ATC-55 , ATC-57 , MTC-53 , MTC-55
A/C self-diagnoses (auto A/C)	ATC-53 , ATC-145
A/C service data specification	ATC-216 , MTC-194
A/C trouble diagnoses (auto A/C)	ATC-32
A/C trouble diagnoses (manual A/C)	MTC-32
A/C, A - Wiring diagram	ATC-43
A/C, M - Wiring diagram	MTC-41
A/T fluid checking	AT-14 , AT-55
A/T fluid replacement	AT-14
A/T fluid temperature sensor	AT-96 , AT-101
A/T IND - Wiring diagram	DI-35
A/T indicator	DI-35
A/T self-diagnoses	AT-75 , AT-81 , AT-82
A/T shift lock system	AT-226
A/T shift lock system - Wiring diagram	AT-227
A/T trouble diagnoses	AT-44
A/T Wiring diagram AT - 1ST	AT-117
A/T Wiring diagram AT - 2ND	AT-121
A/T Wiring diagram AT - 3RD	AT-126
A/T Wiring diagram AT - 4TH	AT-131
A/T Wiring diagram AT - 5TH	AT-135
A/T Wiring diagram AT - CAN	AT-85
A/T Wiring diagram AT - FTS	AT-97
A/T Wiring diagram AT - FTSP	AT-102
A/T Wiring diagram AT - LVRSW	AT-196
A/T Wiring diagram AT - PC/A	AT-142
A/T Wiring diagram AT - PC/B	AT-177
A/T Wiring diagram AT - PC/C	AT-186
A/T Wiring diagram AT - PC/CS	AT-191
A/T Wiring diagram AT - PNP/SW	AT-92
A/T Wiring diagram AT - PWR/IN	AT-200
A/T Wiring diagram AT - SFTFNC	AT-182
A/T Wiring diagram AT - SSV/A	AT-147
A/T Wiring diagram AT - SSV/B	AT-152
A/T Wiring diagram AT - SSV/C	AT-157
A/T Wiring diagram AT - SSV/CS	AT-162
A/T Wiring diagram AT - SSV/D	AT-167
A/T Wiring diagram AT - SSV/E	AT-172
A/T Wiring diagram AT - TCCSIG	AT-139
A/T Wiring diagram AT - TRSC	AT-107
A/T Wiring diagram AT - VSSATC	AT-111
ABS - Wiring diagram	BRC-16 , BRC-61
ABS (anti-lock brake system)	BRC-6 , BRC-50
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-617 , EC-624 , EC-640
Accelerator pedal released position learning	EC-80
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-242 , EC-252 , EC-262 , EC-273 , EC-650
AF1B2-Wiring diagram	EC-244 , EC-254 , EC-264 , EC-275 , EC-652
AF1HB1-Wiring diagram	EC-169
AF1HB2-Wiring diagram	EC-171
Aiming adjustment	LT-24
Air bag	SRS-3
Air bag precautions	GI-3 , AP-2
Air bleeding for brake system	BR-11
Air cleaner and air duct	EM-16
Air cleaner filter	EM-17
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-192 , EC-202
Air fuel ratio sensor 1 ..	EC-239 , EC-250 , EC-260 , EC-270 , EC-648
Air fuel ratio sensor 1 heater	EC-168
Air mix. door motor	ATC-70 , MTC-66
Ambient sensor ..	ATC-148 , ATC-162 , MTC-137 , MTC-144
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-619
APPS2 - Wiring diagram	EC-626
APPS3 - Wiring diagram	EC-642
ASC/BS - Wiring diagram	EC-578
ASC/SW - Wiring diagram	EC-570
ASCSOF - Wiring diagram	EC-662
ASCD	EC-29
ASCD brake switch	EC-576 , EC-661
ASCD clutch switch	EC-576 , EC-661
ASCD indicator lamp	EC-668
ASCD steering switch	EC-568
ASCIND - Wiring diagram	EC-669
AUDIO - Wiring diagram	AV-19

ALPHABETICAL INDEX

AUT/DP - Wiring diagram	SE-13	CAN (Controller Area Network)	BRC-9 , BRC-54	
Auto air conditioner - Wiring diagram	ATC-43	CAN communication	EC-159 , EC-162 , AT-84 , BRC-9 , BRC-54	A
Auto anti-dazzling inside mirror	GW-85	Canister-See EVAP canister	EC-35	
Autolamp	LT-38	CHARGE - Wiring diagram	SC-19	B
Automatic amplifier	ATC-51 , ATC-59	Charging system	SC-18	
Automatic drive positioner	SE-11	Chassis and body maintenance	MA-23	C
Automatic transaxle number	GI-47	Chassis and body maintenanceSchedule 1	MA-7	
Automatic transmission fluid replacement	MA-24	Chassis and body maintenanceSchedule 2	MA-8	
AV and NAVI control unit	AV-172	CHIME - Wiring diagram	DI-39	
AV communication line	AV-183	Circuit breaker	PG-17	D
B		Closed loop control	EC-25	
B5 brake	AT-274	Closed loop control (Bank 1)	EC-541	
Back door	BL-155	Closed loop control (Bank 2)	EC-541	
Back door trim	EI-30	Coil spring (front)	FSU-9	E
Back sonar	DI-49	Coil spring (rear)	RSU-15	
BACK/L - Wiring diagram	LT-98	Collision diagnosis	SRS-56	
Back-up lamp	LT-98	Combination lamp, front, removal and installation ..	LT-26	F
Ball Joint (rear)	RSU-12	Combination lamp, rear, removal and installation ..	LT-113	
Basic inspection	EC-73	Combination meter	DI-5	G
Battery	SC-4	Combination switch	LT-88	
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-20	COMBSW - Wiring diagram	LT-88	
BCM (Body control module)	BCS-3	COMM - Wiring diagram	AV-126 , AV-183	H
Block heater	EM-118	Component Location (auto A/C)	ATC-38	
Blower motor ...	ATC-96 , ATC-166 , MTC-85 , MTC-146	Component Location (manual A/C)	MTC-37	
Board computer	AV-110	Compression pressure	EM-96	I
Board-on lift	GI-41	Compressor clutch removal and installation .	ATC-198 , MTC-177	
Body alignment	BL-237	Compressor mounting	ATC-197 , MTC-176	J
Body component parts	BL-226	Compressor precaution	ATC-11 , MTC-11	
Body construction	BL-236	Compressor special service tool	ATC-14 , MTC-14	
Body exterior paint color	BL-225	Condenser	ATC-206 , MTC-185	K
Body repair	BL-225	Connecting rod	EM-134	
Body sealing	BL-233	Connecting rod bearing clearance	EM-136	
Bose speaker amp.	AV-11	Connecting rod bushing clearance	EM-136	
Brake boosterBrake booster	BR-22	Connector inspection	GI-23	L
Brake fluid changeBrake fluid change	BR-11	Console box - See Instrument panel	IP-10	
Brake fluid level	MA-27	Console box lamp	LT-141	
Brake fluid level and line checkBrake fluid level and line check	BR-11	CONSULT for VDC	BRC-24 , BRC-70	
Brake hydraulic lineBake hydraulic line	BR-12	CONSULT general information	GI-36	
Brake inspection	MA-27	CONSULT-II for engine	EC-119	
Brake lines and cables inspection	MA-27	Control units (terminal arrangement)	PG-80	
Brake master cylinderBrake master cylinder	BR-15	Controller Area Network (CAN)	BRC-9 , BRC-54	
Brake pedalBrake pedal	BR-6	COOL/F - Wiring diagram	EC-548	
Brake switch	EC-576 , EC-591 , EC-661	Coolant mixture ratio	MA-10	
BRK/SW - Wiring diagram	EC-592	Coolant replacementVQ35DE	CO-10 , MA-13	
Bulb specifications	LT-154	Cooling fan	CO-17	
Bumper, front	EI-14	Cooling fan control	EC-544	
Bumper, rear	EI-16	Cooling fan motor	EC-544	
C		Cooling unit (A/C evaporator)	ATC-169 , ATC-208 , MTC-149 , MTC-186	
Cabin air filter	ATC-168 , MTC-148 , MA-23	CORNER - Wiring diagram	LT-80	
Camshaft	EM-78	Cornering lamp	LT-77	
Camshaft inspection	EM-80	Corrosion protection	BL-230	
Camshaft position sensor (PHASE)	EC-387	Courtesy lamp	LT-118	
CAN - Wiring diagram	EC-160	Crankcase ventilation system - See Positive crankcase ventilation	EC-45	

ALPHABETICAL INDEX

Crankshaft [EM-118](#)
 Crankshaft position sensor (POS) [EC-379](#)
 Crash zone sensor [SRS-51](#)
 Cylinder block [EM-118](#)
 Cylinder head [EM-96](#)
 Cylinder head bolt tightening [EM-99](#)

D

D/LOCK - Wiring diagram [BL-22](#)
 Data link connector for Consult [EC-121](#), [EC-131](#)
 Daytime light system [LT-28](#)
 Daytime running light - See Daytime light system .. [LT-28](#)
 DEF - Wiring diagram [GW-90](#)
 Diagnosis sensor unit [SRS-54](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-52](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-92](#)
 Differential gear (FF A/T) [AT-280](#)
 Dimensions [GI-47](#)
 Display and amp.assembly [ATC-51](#), [ATC-59](#), [MTC-57](#)
 Dome light - See Interior lamp [LT-118](#)
 Door glass [GW-77](#)
 Door glass Fitting Adjustment(Front) [GW-79](#)
 Door lock [BL-190](#)
 Door mirror lamp [LT-118](#)
 Door trim [EI-30](#)
 Door, front [GW-77](#)
 Drive belt [EM-13](#)
 Driver air bag [SRS-42](#)
 DTC work support [EC-129](#)
 DTRL - Wiring diagram [LT-32](#)
 Duct and grilles [ATC-187](#), [MTC-166](#)
 DVD - Wiring Diagram [AV-99](#)
 DVD Entertainment System [AV-96](#)
 DVD Player [AV-107](#)

E

ECM input/output signal [EC-109](#), [EC-134](#)
 ECM power supply [EC-150](#), [EC-522](#)
 ECM/PW - Wiring diagram [EC-523](#)
 ECTS - Wiring diagram [EC-218](#)
 EGR function [EC-397](#), [EC-559](#)
 EGR temperature sensor [EC-412](#)
 EGR volume control valve [EC-405](#)
 EGR/TS - Wiring diagram [EC-415](#)
 EGRC1 - Wiring diagram [EC-401](#), [EC-563](#)
 EGVC/V - Wiring diagram [EC-407](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-602](#), [EC-615](#)
 Electrical diagnoses [GI-23](#)
 Electrical load signal circuit [EC-671](#)
 Electronic ignition (EI) system [EC-26](#)
 EMNT - Wiring diagram [EC-674](#)
 Engine control circuit diagram [EC-107](#)
 Engine control component parts location [EC-99](#)

Engine control module (ECM) [EC-526](#)
 Engine control system diagram and chart [EC-23](#)
 Engine coolant temperature sensor (ECTS) .. [EC-216](#), [EC-230](#)
 Engine mounting control (Front) [EC-673](#)
 Engine oil [LU-8](#)
 Engine oil filter replacementQR25DE [MA-18](#)
 Engine oil precautions [GI-3](#), [GI-7](#)
 Engine oil replacementQR25DE [LU-9](#), [MA-17](#)
 Engine removal [EM-112](#)
 Engine serial number [GI-47](#)
 ETC1 - Wiring diagram [EC-603](#)
 ETC2 - Wiring diagram [EC-598](#)
 ETC3 - Wiring diagram [EC-610](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve [EC-439](#), [EC-447](#)
 EVAP canister vent control valve [EC-454](#), [EC-461](#)
 EVAP control system (small leak) diagnosis .. [EC-431](#), [EC-487](#), [EC-495](#)
 EVAP control system pressure sensor ... [EC-468](#), [EC-472](#), [EC-479](#)
 EVAP control system purge flow monitoring diagnosis . [EC-425](#)
 EVAP vapor lines inspection [MA-22](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-208](#), [MTC-186](#)
 Exhaust manifold [EM-26](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-23](#)
 Expansion valve [ATC-211](#), [MTC-189](#)

F

F/FOG - Wiring diagram [LT-53](#)
 F/LID - Wiring diagram [BL-201](#)
 F/PUMP - Wiring diagram [EC-686](#)
 Family Entertainment System (See DVD Entertainment System) [AV-96](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-96](#), [AT-101](#)
 Fluids [MA-9](#)
 Fluorescent leak detector [ATC-212](#), [MTC-190](#)
 Fog lamp, front [LT-51](#)
 Foot lamp [LT-118](#)
 Freeze frame data [EC-53](#), [EC-122](#)
 Front axle [FAX-5](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-26](#)
 Front disc brakeFront disc brake [BR-27](#)
 Front door [BL-190](#), [GW-77](#)
 Front Door Trim [EI-30](#)
 Front fog lamp [LT-51](#)
 Front passenger air bag [SRS-46](#)
 Front seat [SE-84](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-53](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)

ALPHABETICAL INDEX

FTTS - Wiring diagram [EC-348](#), [EC-353](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-322](#), [EC-334](#)
 Fuel injection system (Bank 2) [EC-322](#), [EC-334](#)
 Fuel injector and fuel tube [EM-40](#)
 Fuel level sensor [EC-504](#), [EC-506](#), [EC-508](#)
 Fuel lid opener, electric [BL-201](#)
 Fuel line inspection [FL-4](#), [MA-16](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-82](#)
 Fuel pressure release [EC-82](#)
 Fuel pump [EC-685](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-4](#)
 Fuel systemCommercial Service Tools [FL-3](#)
 Fuel systemPREPARATION [FL-3](#)
 Fuel tank [FL-9](#)
 Fuel tank temperature sensor [EC-346](#), [EC-352](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUELB1 - Wiring diagram [EC-324](#), [EC-336](#)
 FUELB2 - Wiring diagram [EC-326](#), [EC-338](#)
 Fuse [PG-17](#), [PG-85](#)
 Fuse block [PG-84](#)
 Fusible link [PG-17](#), [PG-85](#)

G

Garage jack and safety stand [GI-41](#)
 Gauges [DI-5](#)
 Generator [SC-18](#)
 Generic scan tool (GST) [EC-131](#)
 Glass [GW-12](#), [GW-14](#), [GW-77](#)
 Glove box lamp [LT-142](#)
 GPS antenna [AV-171](#)
 Grease [MA-9](#)
 Ground distribution [PG-34](#)

H

H/LAMP - Wiring diagram [LT-9](#)
 H/PHON - Wiring diagram [AV-244](#)
 Handling precautions for plastics [BL-251](#)
 Harness connector [PG-76](#)
 Harness connector inspection [GI-23](#)
 Harness layout [PG-44](#)
 Hazard warning lamp [LT-62](#), [LT-77](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-26](#)
 Heated oxygen sensor 2 (bank 1) [EC-283](#), [EC-295](#), [EC-310](#)
 Heated oxygen sensor 2 (bank 2) [EC-283](#), [EC-295](#), [EC-310](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-176](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-176](#)
 Heated seat [SE-81](#)
 Heater and cooling unit (Heater core) . [ATC-169](#), [ATC-172](#), [MTC-149](#), [MTC-152](#)
 Heater unit (heater core) [ATC-169](#), [ATC-172](#), [MTC-](#)

[149](#), [MTC-152](#)
 Height (Dimensions) [GI-47](#)
 HFC134a (R134a) system identification [ATC-6](#), [MTC-6](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system service procedure [ATC-193](#), [MTC-172](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-14](#)
 HFC134a system service equipment precaution . [ATC-11](#), [MTC-11](#)
 Homelink universal transceiver [BL-222](#)
 Horn [WW-46](#)
 HORN - Wiring diagram [WW-46](#)
 How to erase DTC for OBD system [EC-63](#)
 HSEAT - Wiring diagram [SE-82](#)

I

IATS - Wiring diagram [EC-212](#)
 Identification plate [GI-47](#)
 Idle air volume learning [EC-80](#)
 Idle speed [EC-73](#)
 Idle speed control (ISC) [EC-512](#), [EC-514](#)
 Ignition coil [EM-36](#), [EC-691](#)
 Ignition control system [EC-691](#)
 Ignition key hole illumination [LT-118](#)
 Ignition timing [EC-73](#)
 IGNSYS - Wiring diagram [EC-692](#)
 ILL - Wiring diagram [LT-146](#)
 Illumination [LT-141](#)
 Illumination control [LT-141](#)
 In vehicle sensor [ATC-151](#), [ATC-163](#)
 In-cabin Microfilter [ATC-168](#), [MTC-148](#), [MA-23](#)
 INF/D - Wring diagram [AV-113](#)
 INJECT - Wiring diagram [EC-679](#)
 Injector [EC-678](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-125](#)
 Intake air temperature sensor [EC-211](#), [EC-234](#)
 Intake door control linkage adjustment . [ATC-88](#), [ATC-93](#), [MTC-78](#), [MTC-83](#)
 Intake door motor . [ATC-86](#), [ATC-177](#), [MTC-77](#), [MTC-157](#)
 Intake manifold [EM-24](#)
 Intake sensor [ATC-158](#), [ATC-165](#), [MTC-139](#), [MTC-145](#)
 Intake valve timing control (Bank 1) [EC-164](#)
 Intake valve timing control (Bank 2) [EC-164](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-185](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-185](#)
 Integrated homelink transmitter - See Homelink universal tranceiver [BL-222](#)
 Interior [EI-33](#)
 Interior lamp [LT-118](#)
 Interior lamp on-off control [LT-118](#)
 IPDM (Intelligent power distribution module engine room) [PG-18](#)
 IVCB1 - Wiring diagram [EC-186](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

IVCB2 - Wiring diagram [EC-188](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

J

Jacking points [GI-41](#)
 Junction box (J/B) [PG-84](#)

K

Key illumination [LT-118](#)
 KEYLES - Wiring diagram [BL-57](#)
 Knock sensor (KS) [EC-374](#)
 KS - Wiring diagram [EC-375](#)

L

Length (Dimensions) [GI-47](#)
 License lamp [LT-100](#)
 Lifting points [GI-41](#)
 Line pressure test (A/T) [AT-57](#)
 Liquid gasket application [EM-5](#), [LU-2](#)
 Location of electrical units [PG-72](#)
 Low tire pressure warning system [WT-9](#)
 Low tire pressure warning system - trouble diagnoses .
[WT-13](#)
 Low tire pressure warning system - Wiring diagram
[WT-13](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
 Lubricants [MA-9](#)
 Lubrication circuit (engine) [LU-6](#)
 Lubrication oil A/C [ATC-22](#), [MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-30](#)
 Luggage room lamp [LT-118](#)

M

MAFS - Wiring diagram [EC-195](#), [EC-204](#)
 Magnet clutch [ATC-124](#), [ATC-198](#), [MTC-114](#), [MTC-177](#)
 MAIN - Wiring diagram [EC-150](#)
 Maintenance [MA-4](#)
 Malfunction indicator lamp (MIL) [EC-64](#)
 Manual transaxle number [GI-47](#)
 Map lamp [LT-118](#)
 Mass air flow sensor (MAFS) [EC-192](#), [EC-202](#)
 Master cylinder (brake)Master cylinder (brake) . [BR-15](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-11](#)
 MIL data link connectors circuit [EC-719](#)
 MIL/DL - Wiring diagram [EC-719](#)
 MIRROR - Wiring diagram [GW-106](#)
 Misfire [EC-365](#)
 Mode door control linkage adjustment .. [ATC-65](#), [MTC-61](#)
 Mode door motor .. [ATC-62](#), [ATC-180](#), [MTC-60](#), [MTC-160](#)
 Model variation [GI-47](#)
 Multiport fuel injection (MFI) system [EC-24](#)

Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system - See Remote keyless entry
 system [BL-53](#)

N

NATS - Wiring diagram [BL-206](#)
 NAVI - Wiring diagram [AV-175](#)
 Navigation system [AV-170](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ...
[BR-5](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (FAX) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU)
[RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT) [WT-5](#)
 NVIS (Nissan vehicle immobilizer system) [BL-203](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-178](#)
 O2H2B2 - Wiring diagram [EC-180](#)
 O2S2B1 - Wiring diagram ... [EC-286](#), [EC-299](#), [EC-313](#)
 O2S2B2 - Wiring diagram ... [EC-288](#), [EC-301](#), [EC-315](#)
 Oil cooler (engine) [LU-16](#)
 Oil filter [LU-11](#)
 Oil pan (engine) [EM-30](#)
 Oil pressure (engine) [LU-8](#)
 Oil pump (A/T) [AT-266](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-13](#)
 Oil seal replacement (engine) [EM-92](#)
 On board diagnostic system [EC-48](#)
 One-way clutch No.1 [AT-272](#)
 One-way clutch outer race sub assembly [AT-272](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
 Overheat [EC-544](#)

P

P/SCKT - Wiring diagram [WW-44](#)
 Park/Neutral position switch [EC-535](#)
 Park/neutral position switch (A/T) [AT-91](#)
 Parking lamp [LT-100](#)
 PCV (positive crankcase ventilation) [EC-45](#)
 Periodic maintenance [MA-6](#)
 Personal lamp [LT-118](#)
 PGC/V - Wiring diagram [EC-441](#), [EC-449](#)
 PHSB1 - Wiring diagram [EC-389](#)
 PHSB2 - Wiring diagram [EC-391](#)
 Pilot bushing replacement - See Pilot converter ... [EM-118](#)
 Piston pin inspection [EM-134](#)
 Piston ring inspection [EM-135](#)
 Piston to bore clearance [EM-138](#)

ALPHABETICAL INDEX

PNP/SW - Wiring diagram	EC-537
POS - Wiring diagram	EC-381
POWER - Wiring diagram	PG-6
Power door lock	BL-18
Power seat	SE-77
Power steering fluid level	MA-28
Power steering pressure (PSP) sensor	EC-516
Power supply routing	PG-4
Power transistor	EC-691
Power window	GW-18
PRE/SE - Wiring diagram	EC-474 , EC-481
Precautions (General)	GI-3 , GI-4
Precautions in repairing high strength steel	BL-254
Pressure control solenoid valve A	AT-141
Pressure control solenoid valve B	AT-176
Pressure control solenoid valve C	AT-185
Pressure test (A/T)	AT-57
PS/SEN - Wiring diagram	EC-517

R

R/VIEW - Wiring diagram	DI-62
Radiator fan - See Cooling fan	CO-17
Rear bumper	EI-16
Rear combination lamp removal and installation ...	LT-113
Rear disc brakeRear disc brake	BR-34
Rear seat	SE-99
Rear seat belt	SB-6
Rear suspension	RSU-9
Rear suspensionRear suspension	RSU-5
Rear view monitor	DI-59
Rear washer	WW-29
Rear window	GW-14
Rear window defogger	GW-87
Rear wiper	WW-29
Refrigerant connection precaution	ATC-6 , MTC-6
Refrigerant discharging evacuating charging	ATC-193 , MTC-172
Refrigerant general precaution	ATC-6 , MTC-6
Refrigerant lines	ATC-193 , ATC-201 , ATC-202 , MTC-172 , MTC-180 , MTC-181
Refrigerant pressure sensor .	EC-704 , ATC-206 , MTC-184
Remote keyless entry system	BL-53
Removal and installation (A/T)	AT-239
Revolution sensor (A/T)	AT-110
Road wheel size	GI-47
Rocker cover	EM-43
Room lamp	LT-118
Room lamp - See Interior lamp	LT-118
ROOM/L - Wiring diagram	LT-125
RP/SEN - Wiring diagram	EC-705

S

SAE J1930 terminology list	GI-50
SEAT - Wiring diagram	SE-77 , SE-78
Seat belt inspection	SB-10 , MA-30

Seat belt pre-tensioner	SRS-53
Seat belt, front	SB-4
Seat belt, rear	SB-6
Seat, front	SE-84
Seat, rear	SE-99
Seat, third (3rd)	SE-99
Second (2nd) seat	SE-99
SEN/PW - Wiring diagram	EC-530
SHIFT - Wiring diagram	AT-227
Shift lock system	AT-226
Shift schedule	AT-65
Shift solenoid valve A (A/T)	AT-146
Shift solenoid valve B (A/T)	AT-151
Shift solenoid valve C (A/T)	AT-156
Shift solenoid valve D (A/T)	AT-166
Shift solenoid valve E (A/T)	AT-171
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-11
Side air bag (satellite) sensor	SRS-52
Side curtain air bag	SRS-49
Side trim	EI-33
Sliding door	BL-106
SMJ (super multiple junction)	PG-83
SONAR - Wiring diagram	DI-51
Spare tire size	GI-47
Spark plug	EM-38
Spark plug replacementQR25DE	MA-20
Specification value	EC-139
Speedometer	DI-5
Spiral cable	SRS-44
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-11
Stabilizer bar (rear)	RSU-17
Stall test (A/T)	AT-55
Standardized relay	PG-81
START - Wiring diagram	SC-11
Starting system	SC-10
Steering gear and linkage inspection	MA-28
Step lamp	LT-118
Stop lamp	LT-94
Stop lamp switch	EC-576 , EC-591 , EC-661
STOP/L - Wiring diagram	LT-95
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-155
Sunroof	RF-22
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram .	SRS-12
Symbols and abbreviations	GI-8 , GI-10 , GI-21
Symptom matrix chart	EC-95
System readiness test (SRT) code	EC-54

T

T/TOW - Wiring diagram	LT-116
------------------------------	------------------------

ALPHABETICAL INDEX

Tachometer	DI-5	Vanity mirror lamp	LT-118
Tail lamp	LT-100	Variable induction air control system (VIAS) ..	EC-586 , EC-710
TAIL/L - Wiring diagram	LT-103	VDC (vehicle dynamics control)	BRC-50
TCM circuit diagram	AT-54	VDC -Wiring diagram	BRC-61
TCM inspection table	AT-73	Vehicle identification number	GI-47
TCS - Wiring diagram	BRC-15 , BRC-16 , BRC-60 , BRC-61	Vehicle recovery (freeing a stuck vehicle)	GI-44
TCS (traction control system)	BRC-6 , BRC-50	Vehicle security (theft warning) system	BL-81
TCS component parts and connector location	BRC-13 , BRC-58	Vehicle speed sensor (VSS)	EC-510
TCS wheel sensors	BRC-13 , BRC-58	VEHSEC - Wiring diagram	BL-85
Telephone	AV-241	VENT/V - Wiring diagram	EC-456 , EC-463
Theft warning system - See Vehicle security (Theft warn- ing) system	BL-81	VIAS - Wiring diagram	EC-712
Three way catalyst	EM-26	VIAS/V - Wiring diagram	EC-587
Three way catalyst function (Bank 1)	EC-419	VIN registration	EC-79
Three way catalyst function (Bank 2)	EC-419	Viscosity number (SAE)	MA-10
Three way catalyst precautions	GI-3 , GI-5		
Throttle control motor	EC-609		
Throttle control motor relay	EC-596		
Throttle position sensor (TPS) ..	EC-222 , EC-357 , EC-555 , EC-557 , EC-632		
Throttle valve closed position learning	EC-80		
Tightening torque of standard bolts	GI-45		
Time lag test	AT-56		
Timing chain	EM-56		
Tire rotation	MA-27		
Tire size	GI-47		
Torque converter installation	AT-239		
Torque convertor clutch solenoid valve	AT-138		
Tow truck towing	GI-44		
Towing point	GI-44		
TPS1 - Wiring diagram	EC-359		
TPS2 - Wiring diagram	EC-224		
TPS3 - Wiring diagram	EC-634		
Traction control system - Wiring diagram	BRC-15 , BRC-60		
Transaxle case cover	AT-274		
Transaxle serial number	GI-47		
Tread-FR&RR (Dimensions)	GI-47		
Trim	EI-33		
TRNSCV - Wiring diagram	BL-222		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-106		
TURN - Wiring diagram	LT-66		
Turn signal lamp	LT-62 , LT-77		
Two trip detection logic	EC-48		
Two-pole lift	GI-41		

V

Vacuum hose (brake system)Vacuum hose (brake sys- tem)	BR-25
Vacuum hose drawing (Engine control)	EC-106
Valve clearance	EM-87
Valve guide	EM-107 , EM-108
Valve lifter	EM-78
Valve seat	EM-109
Valve spring	EM-110

W

W/ANT - Wiring diagram	AV-93
WARN - Wiring diagram	DI-27
Warning chime	DI-37
Warning lamps	DI-26
Washer, front	WW-4
Washer, rear	WW-29
Water temperature gauge	DI-5
Wheel alignment (rear)Wheel alignment (rear) .	RSU-6
Wheel balance	WT-7 , MA-25
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5
Wheel hub (rear)	RAX-5
Wheel sensors (ABS)	BRC-7 , BRC-52
Wheel size	GI-47
Wheelarch heightWheelarch height	RSU-19
Wheelbase (Dimensions)	GI-47
Width (Dimensions)	GI-47
WINDOW - Wiring diagram	GW-30
Window, door	GW-77
Window, rear	GW-14
Windshield	GW-12
WIP/R - Wiring diagram	WW-32
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-29
Wiring Diagram (Cell code) list	PG-69
Wiring diagrams	GI-8 , GI-14
WT-T/WARN - Wiring diagram	WT-13