

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagramEC-391
 ABS - Wiring diagram.....BR-36
 ABS sensor rotorAX-5, 19
 Absolute pressure sensor.....EC-138
 A/C air flowHA-26
 A/C component layout.....HA-20, 165
 A/C compressor clutch removal and
 installationHA-127, 235
 A/C compressor descriptionHA-18, 163
 A/C compressor precaution.....HA-9, 154
 A/C compressor special service
 toolHA-16, 161
 A/C control linkage adjustment (auto
 A/C)HA-62
 A/C control linkage adjustment (manual
 A/C)HA-192
 A/C control operation (auto A/C)HA-24
 A/C control operation (manual A/C)HA-167
 A/C diagnostic work flow (auto A/C).....HA-35
 A/C diagnostic work flow (manual
 A/C)HA-177
 A/C HFC134a (R134a) system
 precautionHA-4, 149
 A/C HFC134a (R134a) system service
 tools.....HA-13, 158
 A/C HFC134a system service equipment
 precautionHA-9, 155
 A/C lubricant (R134a).....HA-124, 232
 A/C lubrication oilHA-124, 232
 A/C operational checkHA-36, 178
 A/C pressure switchHA-103, 222
 A/C relay.....HA-103, 222
 A/C self-diagnoses (auto A/C)HA-38
 A/C service data specificationHA-147, 256
 A/C switch.....HA-25, 167
 A/C symptom chart (auto A/C)HA-41
 A/C symptom chart (manual A/C).....HA-180
 A/C trouble diagnoses (auto A/C).....HA-27
 A/C trouble diagnoses (manual A/C).....HA-169
 A/C, A - Wiring diagram.....HA-31
 A/C, M - Wiring diagram.....HA-173
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Air bagRS-11, 16
 Air bag disposalRS-20
 Air bag precautions.....GI-3
 Air bleeding for brake system.....BR-7
 Air cleaner filter replacementMA-19
 Air conditioner cut control.....EC-29
 Air flow meter - See Mass air flow
 sensor.....EC-129
 Air mix door control linkage
 adjustment.....HA-53
 Air mix. door motorHA-48
 Air spoiler, rearBT-35

AlternatorSC-14
 Ambient sensorHA-113
 Angular tightening application.....EM-3
 AntennaEL-141
 Anti-lock brake system - Wiring
 diagramBR-36
 AP/SEN - Wiring diagram.....EC-141
 ASCD (automatic speed control
 device)EL-185
 ASCD - Wiring diagram.....EL-189
 A/T - Wiring diagramAT-15
 A/T - Wiring diagram - AT - FTS.....AT-111
 A/T - Wiring diagram - AT - MAINAT-99
 A/T - Wiring diagram - AT - PNP/SWAT-104
 A/T - Wiring diagram - AT - VSS A/TAT-118
 A/T controlEC-403
 A/T diagnosis communication line.....EC-505
 A/T fluid temperature sensorAT-115
 A/T self-diagnoses.....AT-39, 48
 A/T shift lock systemAT-259
 A/T shift lock system - Wiring
 diagramAT-260
 A/T trouble diagnosesAT-55
 A/T Wiring diagram - AT - ENG SS.....AT-123
 A/T Wiring diagram AT - 1STAT-129
 A/T Wiring diagram AT - 2ND.....AT-135
 A/T Wiring diagram AT - 3RD.....AT-141
 A/T Wiring diagram AT - 4THAT-148
 A/T Wiring diagram AT - BA/FTSAT-196
 A/T Wiring diagram AT - LPSV.....AT-168
 A/T Wiring diagram AT - NONDTCAT-209
 A/T Wiring diagram AT - OVRCSV.....AT-191
 A/T Wiring diagram AT - SSV/AAT-174
 A/T Wiring diagram AT - SSV/BAT-179
 A/T Wiring diagram AT - TCCSIGAT-160
 A/T Wiring diagram AT - TCV.....AT-155
 A/T Wiring diagram AT - TPS.....AT-184
 A/T Wiring diagram AT - VSSMTR.....AT-203
 AT/C - Wiring diagramEC-405
 ATDIAG - Wiring diagram.....EC-506
 AudioEL-129
 AUDIO - Wiring diagramEL-131
 Audio and A/C control removal and installation -
 See Instrument panelBT-23
 AUT/DP - Wiring diagramEL-150
 Auto air conditioner - Wiring diagram.....HA-31
 AutolampEL-32
 Automatic drive positioner.....EL-146
 Automatic speed control system - See
 ASCDEL-185
 Automatic transaxle numberGI-42
 Automatic transmission fluid
 replacementMA-25
 Auxiliary air control (AAC) valve.....EC-388

ALPHABETICAL INDEX

B

Back doorBT-17
 Back door opener - See Back doorBT-17
 Back door trimBT-32
 Back-up lampEL-55
 BACK/L - Wiring diagramEL-55
 Ball joint (front)SU-11
 Basic inspectionEC-88
 BatterySC-3
 Blower motorHA-83
 Blower relayHA-83, 96, 203, 214
 Blower resistorHA-97, 204, 215
 Body alignmentBT-59
 BPT valveEC-330
 Brake boosterBR-18
 Brake fluid changeBR-6
 Brake fluid levelMA-25
 Brake fluid level and line checkBR-6
 Brake hydraulic lineBR-8
 Brake inspectionMA-26
 Brake lines and cables inspectionMA-26
 Brake lining wear temporary checkingMA-27
 Brake master cylinderBR-15
 Brake pedalBR-13
 Bulb specificationsEL-310
 Bumper, frontBT-14
 Bumper, rearBT-17
 BYPS/V - Wiring diagramEC-492, 500

C

Camshaft inspectionEM-32
 Camshaft position sensor (CMPS)EC-312
 Canister-See EVAP canisterEC-30
 CHARGE - Wiring diagramSC-12
 Charging systemSC-11
 Chassis and body maintenanceMA-24
 CHIME - Wiring diagramEL-102
 CIGAR - Wiring diagramEL-120
 Cigarette lighterEL-120
 Circuit breakerEL-19
 CKPS - Wiring diagramEC-308, 434
 ClockEL-129
 Closed loop controlEC-423
 Closed throttle position switchEC-395
 CMPS - Wiring diagramEC-315
 Coil spring (front)SU-8
 Collision diagnosisRS-49
 Combination lamp, front, removal and
 installationBT-14
 Combination lamp, rear, removal and
 installationBT-35
 Combination meterEL-80
 Combination meter (needle type)EL-80

Combination meter removal and installation -
 See Instrument panelBT-23
 Combination switchEL-29
 Component Location (auto A/C)HA-27
 Component Location (manual A/C)HA-169
 Compression pressureEM-13
 Compressor clutch removal and
 installationHA-127, 235
 Compressor descriptionHA-18, 163
 Compressor precautionHA-9, 154
 Compressor special service toolHA-16, 161
 Connecting rodEM-50
 Connecting rod bearing clearanceEM-54
 Connecting rod bushing clearanceEM-55
 Connector inspectionGI-20
 Console box - See Instrument panelBT-23
 CONSULT for ABSBR-41
 CONSULT for engineEC-70
 CONSULT-II general informationGI-37
 Control valve (A/T)AT-298
 Converter housing installationAT-270
 COOL/F - Wiring diagramEC-519
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-8
 Cooling fan controlEC-516
 Cooling fan control systemLC-15
 Cooling fan motorEC-531
 Cooling fan relayEC-530
 CORNER - Wiring diagramEL-57
 Cornering lampEL-56
 Crank angle sensor built into distributor - See
 Camshaft position sensorEC-312
 Crankcase emission control system - See
 positive crankcase ventilationEC-36
 CrankshaftEM-52
 Crankshaft position sensor (OBD)EC-306
 Crankshaft position sensor (OBD) cog
 chippingEC-432
 Cruise control - See ASCDEL-185
 Cylinder blockEM-47
 Cylinder block boringEM-52
 Cylinder headEM-27
 Cylinder head bolt tighteningEM-40

D

Data link connector for ConsultEC-70
 Daytime light systemEL-46
 Daytime running light - See Daytime light
 systemEL-46
 DEF - Wiring diagramEL-123
 Detonation sensor - See Knock
 sensorEC-301
 Diagnosis sensor unitRS-14
 Diagnostic trouble code (DTC) for OBD
 systemEC-8, 52

ALPHABETICAL INDEX

Diagnostic trouble code (DTC) inspection
 priority chartEC-101
Differential gear (FF A/T).....AT-342
DimensionsGI-42
Distributor.....EC-28
Distributor ignition (DI) systemEC-28
D/LOCK - Wiring diagramEL-217
Dome light - See Interior lamp.....EL-72
Door glassBT-20
Door lockBT-20
Door mirrorBT-57
Door trim.....BT-31
Door, front.....BT-20
Drive belt inspection.....MA-13
Drive plate runout.....EM-56
Drive shaft (front)AX-9
Dropping resistor (A/T)AT-171
DTC work support.....EC-79
DTRL - Wiring diagramEL-49

E

ECM input/output signal.....EC-112
ECTS - Wiring diagramEC-158, 174
EGR control (EGRC) - BPT valveEC-330
EGR control (EGRC) - solenoid
 valveEC-438
EGR control valveEC-320, 451
EGR temperature sensor.....EC-444
EGR/TS - Wiring diagram.....EC-447
EGRC/V - Wiring diagramEC-440
EGRC1 - Wiring diagramEC-324, 454
Electric sun roofEL-142
Electrical diagnosesGI-23
Electrical ignition systemEC-28
Electrical unitEL-318
Electrical units location.....EL-287
Engine compartmentBT-60
Engine control circuit diagramEC-21
Engine control component parts
 locationEC-19
Engine control module (ECM)EC-408
Engine control system diagram and
 chartEC-22
Engine coolant temperature sensor
 (ECTS)EC-156, 172
Engine fail-safe systemEC-102
Engine oil filter replacement.....MA-20
Engine oil precautionsGI-6
Engine oil replacement.....MA-19
Engine outer component parts.....EM-10
Engine removalEM-43
Engine room - See Engine
 compartment.....BT-60
Engine serial number.....GI-42
EVAP canister.....EC-31

EVAP canister purge volume control
 solenoid valveEC-30, 351, 460
EVAP canister vent control
 valve.....EC-358, 469, 483
EVAP control system (small leak)
 diagnosisEC-340, 458
EVAP control system pressure
 sensor.....EC-365
EVAP control system purge flow monitoring
 diagnosisEC-475
EVAP vapor lines inspectionMA-22
Evaporative emission (EVAP) systemEC-30
Exhaust gas recirculation (EGR)
 valve.....EC-320, 451
Exhaust system.....FE-8
ExteriorBT-35

F

Fan switch.....HA-83
Fast idle cam (FIC) inspection and
 adjustment.....EC-39
FICD - Wiring diagram.....EC-553
Final drive (FF A/T)AT-342
Finisher, interior - See Trim.....BT-28
Floor trimBT-28
Fluid temperature sensor (A/T)AT-115, 200
FluidsMA-11
Flywheel runout.....EM-56
Forward clutchAT-320
F/PUMP - Wiring diagramEC-542
Freeze frame dataEC-53
FRO2 - Wiring diagramEC-181, 204, 215
FRO2/H - Wiring diagram.....EC-223
Front axleAX-2
Front bumper.....BT-14
Front combination lamp removal and
 installationBT-14
Front disc brakeBR-21
Front door.....BT-20
Front heated oxygen sensor
 (HO2S)EC-178, 187, 194, 201, 212
Front heated oxygen sensor (HO2S)
 heaterEC-221
Front passenger air bagRS-18
Front seatBT-39
Front seat belt.....RS-4
Front suspensionSU-2
Front washerEL-108
Front wiperEL-108
FUEL - Wiring diagram.....EC-274, 282
Fuel cut control (at no load & high engine
 speed)EC-30
Fuel gaugeEL-80
Fuel injection system.....EC-272, 281
Fuel injectorEC-532
Fuel precautionsGI-7

ALPHABETICAL INDEX

Fuel pressure checkEC-37
Fuel pressure regulatorEC-38
Fuel pressure release.....EC-37
Fuel pump.....EC-541
Fuel pump and gauge.....FE-6
Fuel pump relay.....EC-547
Fuel system.....FE-4
Fuel tank temperature sensorEC-288
Fuel tank vacuum relief valve.....EC-31
Fuse.....EL-19
Fuse block.....EL-315
Fusible linkEL-19

G

Garage jack and safety stand.....GI-44
Gauges.....EL-80
Generator.....SC-14
Generator - See AlternatorSC-14
Generic scan tool (GST).....EC-81
GlassBT-20
GreaseMA-11
Ground distribution.....EL-20

H

Harness connectorEL-5
Harness connector inspectionGI-20
Harness layoutEL-290
Hazard warning lampEL-58
HeadlampEL-32
Headlamp aiming controlEL-44
Headlamp leveler - See Headlamp aiming controlEL-44
Headlining - See Roof trim.....BT-33
Heater mirrorEL-145
Height (Dimensions)GI-42
HFC134a (R134a) system
 precautionHA-4, 149
HFC134a (R134a) system service
 tools.....HA-13, 158
HFC134a system service equipment
 precautionHA-9, 155
High clutch.....AT-315
H/LAMP - Wiring diagramEL-34
H/MIRROR - Wiring diagramEL-145
HoodBT-14
HornEL-119
HORN - Wiring diagramEL-119
How to erase DTC for OBD system.....EC-63
Hydraulic lash adjuster inspectionEM-38

I

IACV-AAC valve.....EC-388
IACV-FICD solenoid valveEC-552
IATS - Wiring diagramEC-152
Idle air control valve (IACV)EC-388
Idle mixture ratioEC-41
Idle speedEC-41
IGN/SG - Wiring diagramEC-427
Ignition control system.....EC-425
Ignition timing.....EC-41
Ignition wire inspectionEC-300
ILL - Wiring diagram.....EL-68
IlluminationEL-65
In vehicle sensor.....HA-116
INJECT - Wiring diagramEC-533
InjectorEC-532
Injector removal and installation.....EC-38
Instrument panel.....BT-23
INT/L - Wiring diagramEL-75
Intake air temperature sensorEC-150
Intake door control linkage
 adjustment.....HA-62, 192
Intake door motorHA-56, 189
Integrated homelink transmitter.....EL-284
InteriorBT-28
Interior lampEL-72

J

Jacking points.....GI-43, 44
Joint connector (J/C).....EL-317

K

Keyless entry system - See Multi-remote control system.....EL-234
Knock sensor (KS).....EC-301
Knuckle spindle.....AX-5
KS - Wiring diagramEC-302

L

Leaf spring (rear).....SU-20
Length (Dimensions).....GI-42
License lampEL-53
Lifting points.....GI-45
Line pressure solenoid valveAT-152, 171
Line pressure test (A/T).....AT-65
Liquid gasket application.....EM-3
Location of electrical units.....EL-287
Lock, door.....BT-20
Low and reverse brake.....AT-325

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

LSV (Load sensing valve)BR-10
Lubricant (R134a) A/CHA-124, 232
LubricantsMA-11
Lubrication circuit (engine).....LC-3
Lubrication oil A/CHA-124, 232
Lubrication-locks, hinges and hood
latches.....MA-28

M

MAFS - Wiring diagramEC-133
Magnet clutchHA-127, 235
MAIN - Wiring diagramEC-122
Maintenance (engine).....MA-13
MAJOR OVERHALLAT-272
Malfunction indicator lamp (MIL)EC-65
Manual air conditioner - Wiring
diagramHA-173
MAP/BARO switch solenoid valve.....EC-410
Mass air flow sensor (MAFS)EC-129
Master cylinder (brake).....BR-15
MeterEL-80
METER - Wiring diagramEL-84
MIL & Data link connectors circuit.....EC-562
MIL/DL - Wiring diagramEC-562
MIRROR - Wiring diagramEL-144
Mirror defogger.....EL-145
Mirror, doorBT-57
Mirror, out sideBT-57
MisfireEC-293
Mode door control linkage adjustmentHA-71
Model variation.....GI-40
Molding - See ExteriorBT-35
Mud guard - See Exterior.....BT-35
MULTI - Wiring diagramEL-238
Multi-remote control systemEL-234
Multiport fuel injection (MFI) systemEC-26
Multiport fuel injection precautionsGI-5

N

NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR)BR-5
NVH troubleshooting (EM)EM-8
NVH troubleshooting (ST)ST-5
NVH troubleshooting (SU)SU-3

O

Oil change (capacity).....MA-11
Oil change (interval).....MA-6
Oil pan (engine).....EM-14
Oil pressure (engine)LC-3
Oil pump (A/T)AT-294

Oil pump (engine)LC-4
Oil pump regulator valve (engine)LC-5
Oil seal replacement (engine)EM-25
On board diagnostic system.....EC-51
Out side mirrorBT-57
Overdrive control switchAT-257
Overrun clutchAT-320
Overrun clutch solenoid valveAT-193, 301
Oversize piston.....EM-52

P

Park/Neutral position switchEC-508
Park/neutral position switch
(A/T)AT-102, 257
Parking brake control.....BR-29
Parking drum brakeBR-25
Parking lampEL-53
PCV (positive crankcase ventilation)EC-36
PGC/V - Wiring diagram.....EC-354, 463
Pilot bushing replacement.....EM-58
Piston assemblyEM-56
Piston pin inspectionEM-49
Piston ring inspectionEM-49
Piston to bore clearanceEM-51
PNP/SW - Wiring diagram.....EC-510
POWER - Wiring diagramEL-12
Power door lockEL-214
Power door mirrorEL-144
Power seatEL-183
Power steering fluid levelMA-27, ST-7
Power steering gearST-16
Power steering hydraulic pressure.....ST-8
Power steering oil pressure switch.....EC-548
Power steering oil pumpST-21
Power steering system bleedingST-7
Power supply routing.....EL-9
Power transistor & ignition coil.....EC-425
Power windowEL-209
PRE/SE - Wiring diagram.....EC-367
Precautions (General).....GI-3
Pressure test (A/T)AT-65
PST/SW - Wiring diagramEC-549

R

RadiatorLC-12
Radio - See AudioEL-129
Rear air spoiler.....BT-35
Rear axle.....AX-18
Rear bumperBT-17
Rear combination lamp removal and
installationBT-35
Rear drum brake.....BR-25
Rear heated oxygen sensor
(HO2S).....EC-228, 238, 248, 257

ALPHABETICAL INDEX

Rear heated oxygen sensor (HO2S)
 heaterEC-265
 Rear seat beltRS-5
 Rear side windowBT-55
 Rear suspensionSU-15
 Rear washerEL-113
 Rear window defoggerEL-121
 Rear wiperEL-113
 Refrigerant connection precautionHA-5, 150
 Refrigerant discharging evacuating
 chargingHA-122, 230
 Refrigerant general precautionHA-5, 150
 Refrigerant linesHA-134, 242
 Refrigeration cycleHA-18, 163
 Removal and installation (A/T)AT-269
 Reverse clutchAT-312
 Revolution sensor (A/T)AT-121
 Road wheel sizeGI-42
 Roof trimBT-33
 Room lampEL-72
 Room lamp - See Interior lampEL-72
 RRO2 - Wiring
 diagramEC-231, 241, 250, 259
 RRO2/H - Wiring diagramEC-267

S

SAE J1930 terminology listGI-48
 Screw jackGI-43
 Seal - See ExteriorBT-35
 SEAT - Wiring diagramEL-183
 Seat belt inspectionMA-28, RS-8
 Seat belt, frontRS-4
 Seat belt, rearRS-5
 Seat, frontBT-39
 Seat, second (2nd)BT-41
 Second (2nd) seatBT-41
 SHIFT - Wiring diagramAT-260
 Shift lock systemAT-259
 Shift scheduleAT-365
 Shift solenoid valve A
 (A/T)AT-131, 143, 176, 301
 Shift solenoid valve B
 (A/T)AT-131, 137, 301
 Shock absorber (front)SU-8
 Shock absorber (rear)SU-23
 Side trimBT-28
 Side window - See Rear side windowBT-55
 Smart entrance control unitEL-278
 SMJ (super multiple junction)EL-313
 Spare tire sizeGI-42
 Spark plug replacementMA-21
 SpeedometerEL-80
 Spiral cableRS-16
 Spring (Wheelarch) heightSU-5
 SROOF - Wiring diagramEL-143

SRS - See Supplemental Restraint
 SystemRS-11
 SRS - Wiring diagramRS-29
 SRS Trouble diagnosesRS-25
 S/SIG - Wiring diagramEC-538
 Stabilizer bar (front)SU-10
 Stabilizer bar (rear)SU-23
 Stall test (A/T)AT-61
 Standardized relayEL-7
 START - Wiring diagramSC-7
 Start signalEC-537
 StarterSC-9
 Starting systemSC-6
 Steering gear and linkage inspectionMA-27
 Steering linkageST-16
 Steering switchEL-31
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning forceST-8
 Stop lampEL-54
 STOP/L - Wiring diagramEL-54
 Strut (front)SU-8
 Sun roof, electricEL-142
 Sunload sensorHA-119
 SunroofBT-48
 Supplemental Restraint SystemRS-11
 Supplemental restraint system - Wiring
 diagramRS-29
 SW/V - Wiring diagramEC-414
 Symbols and abbreviationsGI-9
 Symptom matrix chartEC-103
 System readiness test (SRT) codeEC-53

T

TachometerEL-80
 Tail lampEL-53
 TAIL/L - Wiring diagramEL-53
 TCM circuit diagramAT-15
 TCM inspection tableAT-95
 TFTS - Wiring diagramEC-290
 THEFT - Wiring diagramEL-259
 Theft warning systemEL-253
 ThermostatLC-11
 Three way catalystEC-335
 Three way catalyst precautionsGI-5
 Throttle drum adjustmentFE-3
 Throttle position sensor (TPS)EC-162
 Throttle position sensor adjustmentEC-88
 Throttle position switchAT-188, 257, EC-395
 Tie-rodST-19
 Tie-rod ball jointsST-19
 Tightening torque of standard boltsGI-47
 Timing beltEM-17
 Tire rotationMA-25
 Tire sizeGI-42
 Torque converter installationAT-270, 359

ALPHABETICAL INDEX

Torque convertor clutch solenoid valveAT-157
Tow truck towingGI-45
Towing pointGI-46
TP/SW - Wiring diagramEC-398
TPS - Wiring diagramEC-166
Transaxle serial numberGI-42
TRANSMT - Wiring diagramEL-284
Tread-FR&RR (Dimensions)GI-42
TrimBT-28
Trouble diagnosesGI-33
T/TOW - Wiring diagramEL-63
TURN - Wiring diagramEL-59
Turn signal lampEL-58
Two trip detection logicEC-51
Two-pole liftGI-45

U

Under bodyBT-62

V

Vacuum cut valveEC-30, 504
Vacuum cut valve bypass valveEC-30, 490, 497
Vacuum hose (brake system)BR-20
Vacuum hose drawing (Engine control)EC-24
Valve clearanceEM-60
Valve guideEM-33
Valve seatEM-35
Valve springEM-37
Vehicle identification numberGI-41
Vehicle recovery (freeing a stuck vehicle)GI-46
Vehicle speed sensor (VSS)EC-384
VENT/V - Wiring diagramEC-360, 471, 486
Viscosity number (SAE)MA-12
VSS - Wiring diagramEC-386

W

WARN - Wiring diagramEL-95

Warning buzzerEL-100
Warning chimeEL-100
Warning lampsEL-92
Washer, frontEL-108
Washer, rearEL-113
Water pumpLC-9
Water temperature gaugeEL-80
Weatherstrip - See ExteriorBT-35
Wheel alignment (front)SU-5
Wheel alignment (rear)SU-17
Wheel balanceMA-25
Wheel bearing (front)AX-4
Wheel bearing (rear)AX-18
Wheel hub (front)AX-5
Wheel hub (rear)AX-19
Wheel sensors (ABS)BR-53, 73
Wheel sizeGI-42
Wheelarch heightSU-5
Wheelbase (Dimensions)GI-42
Wide open & closed throttle position switchEC-162
Width (Dimensions)GI-42
WINDOW - Wiring diagramEL-211
Window, doorBT-20
Window, rear sideBT-55
Window, side - See Rear side windowBT-55
WindshieldBT-54
Windshield washer - See Front washerEL-108
Windshield wiper - See Front wiperEL-108
WIP/R - Wiring diagramEL-114, 116
WIPER - Wiring diagramEL-109
Wiper and washerEL-108
Wiper, frontEL-108
Wiper, rearEL-113
Wiring Diagram (Cell code) listEL-311
Wiring diagramsGI-10
Wrist pin - See Piston pin inspectionEM-49

X