

SECTION

LAN

LAN SYSTEM

A

B

C

CONTENTS

E

CAN FUNDAMENTAL		Information 22	F
HOW TO USE THIS MANUAL 6		Abbreviation List 22	
HOW TO USE THIS SECTION 6		PRECAUTION 23	G
Information 6		PRECAUTIONS 23	
PRECAUTION 7		Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 23	H
PRECAUTIONS 7		Precautions for Removing Battery Terminal 23	
Precautions for Trouble Diagnosis 7		Precautions for Trouble Diagnosis 23	I
Precautions for Harness Repair 7		Precautions for Harness Repair 24	
SYSTEM DESCRIPTION 8		SYSTEM DESCRIPTION 25	J
SYSTEM 8		COMPONENT PARTS 25	
CAN COMMUNICATION SYSTEM 8		Component Parts Location 25	K
CAN COMMUNICATION SYSTEM : System Description 8		SYSTEM 26	
DIAG ON CAN 8		CAN COMMUNICATION SYSTEM 26	L
DIAG ON CAN : System Description 8		CAN COMMUNICATION SYSTEM : System Description 26	
TROUBLE DIAGNOSIS 10		CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit 30	LAN
Component Description 10		CAN COMMUNICATION SYSTEM : CAN System Specification Chart 30	
Condition of Error Detection 10		CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart 32	N
Symptom When Error Occurs in CAN Communication System 11		WIRING DIAGRAM 36	
CAN Diagnosis with CONSULT 13		CAN SYSTEM 36	O
Self-Diagnosis 14		Wiring Diagram 36	
CAN Diagnostic Support Monitor 14		BASIC INSPECTION 45	P
How to Use CAN Communication Signal Chart 16		DIAGNOSIS AND REPAIR WORKFLOW 45	
BASIC INSPECTION 17		Interview Sheet 45	
DIAGNOSIS AND REPAIR WORKFLOW 17		DTC/CIRCUIT DIAGNOSIS 46	
Trouble Diagnosis Flow Chart 17		MALFUNCTION AREA CHART 46	
CAN			
HOW TO USE THIS MANUAL 22			
HOW TO USE THIS SECTION 22			

CAN Communication Circuit	46
BSW Communication Circuit	46
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	48
Diagnosis Procedure	48
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	49
Diagnosis Procedure	49
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	50
Diagnosis Procedure	50
MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	51
Diagnosis Procedure	51
MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT	52
Diagnosis Procedure	52
MAIN LINE BETWEEN ASD-R AND ADP CIR- CUIT	53
Diagnosis Procedure	53
MAIN LINE BETWEEN ADP AND ASD-L CIR- CUIT	54
Diagnosis Procedure	54
ECM BRANCH LINE CIRCUIT	55
Diagnosis Procedure	55
EPS BRANCH LINE CIRCUIT	56
Diagnosis Procedure	56
ABS BRANCH LINE CIRCUIT	57
Diagnosis Procedure	57
TCM BRANCH LINE CIRCUIT	58
Diagnosis Procedure	58
BCM BRANCH LINE CIRCUIT	59
Diagnosis Procedure	59
DLC BRANCH LINE CIRCUIT	60
Diagnosis Procedure	60
M&A BRANCH LINE CIRCUIT	61
Diagnosis Procedure	61
STRG BRANCH LINE CIRCUIT	62
Diagnosis Procedure	62
A-BAG BRANCH LINE CIRCUIT	63
Diagnosis Procedure	63
AV BRANCH LINE CIRCUIT	64
Diagnosis Procedure	64
AVM BRANCH LINE CIRCUIT	65
Diagnosis Procedure	65

BSW BRANCH LINE CIRCUIT	66
Diagnosis Procedure	66
ASD-R BRANCH LINE CIRCUIT	67
Diagnosis Procedure	67
ADP BRANCH LINE CIRCUIT	68
Diagnosis Procedure	68
ASD-L BRANCH LINE CIRCUIT	69
Diagnosis Procedure	69
PWBD BRANCH LINE CIRCUIT	70
Diagnosis Procedure	70
IPDM-E BRANCH LINE CIRCUIT	71
Diagnosis Procedure	71
RDR-L BRANCH LINE CIRCUIT	72
Diagnosis Procedure	72
RDR-R BRANCH LINE CIRCUIT	73
Diagnosis Procedure	73
CAN COMMUNICATION CIRCUIT	74
Diagnosis Procedure	74
BSW COMMUNICATION CIRCUIT	76
Diagnosis Procedure	76
CAN SYSTEM (TYPE 1)	
DTC/CIRCUIT DIAGNOSIS	78
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	78
Diagnosis Procedure	78
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	79
Diagnosis Procedure	79
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	80
Diagnosis Procedure	80
ECM BRANCH LINE CIRCUIT	81
Diagnosis Procedure	81
EPS BRANCH LINE CIRCUIT	82
Diagnosis Procedure	82
ABS BRANCH LINE CIRCUIT	83
Diagnosis Procedure	83
TCM BRANCH LINE CIRCUIT	84
Diagnosis Procedure	84
BCM BRANCH LINE CIRCUIT	85
Diagnosis Procedure	85
DLC BRANCH LINE CIRCUIT	86
Diagnosis Procedure	86

M&A BRANCH LINE CIRCUIT	87	Diagnosis Procedure	106
Diagnosis Procedure	87		
STRG BRANCH LINE CIRCUIT	88	ASD-R BRANCH LINE CIRCUIT	107
Diagnosis Procedure	88	Diagnosis Procedure	107
A-BAG BRANCH LINE CIRCUIT	89	ASD-L BRANCH LINE CIRCUIT	108
Diagnosis Procedure	89	Diagnosis Procedure	108
IPDM-E BRANCH LINE CIRCUIT	90	IPDM-E BRANCH LINE CIRCUIT	109
Diagnosis Procedure	90	Diagnosis Procedure	109
CAN COMMUNICATION CIRCUIT	91	CAN COMMUNICATION CIRCUIT	110
Diagnosis Procedure	91	Diagnosis Procedure	110
CAN SYSTEM (TYPE 2)		CAN SYSTEM (TYPE 3)	
DTC/CIRCUIT DIAGNOSIS	93	DTC/CIRCUIT DIAGNOSIS	112
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	93	MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	112
Diagnosis Procedure	93	Diagnosis Procedure	112
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	94	MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	113
Diagnosis Procedure	94	Diagnosis Procedure	113
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	95	MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	114
Diagnosis Procedure	95	Diagnosis Procedure	114
MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	96	MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	115
Diagnosis Procedure	96	Diagnosis Procedure	115
MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT	97	MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT	116
Diagnosis Procedure	97	Diagnosis Procedure	116
ECM BRANCH LINE CIRCUIT	98	ECM BRANCH LINE CIRCUIT	117
Diagnosis Procedure	98	Diagnosis Procedure	117
EPS BRANCH LINE CIRCUIT	99	EPS BRANCH LINE CIRCUIT	118
Diagnosis Procedure	99	Diagnosis Procedure	118
ABS BRANCH LINE CIRCUIT	100	ABS BRANCH LINE CIRCUIT	119
Diagnosis Procedure	100	Diagnosis Procedure	119
TCM BRANCH LINE CIRCUIT	101	TCM BRANCH LINE CIRCUIT	120
Diagnosis Procedure	101	Diagnosis Procedure	120
BCM BRANCH LINE CIRCUIT	102	BCM BRANCH LINE CIRCUIT	121
Diagnosis Procedure	102	Diagnosis Procedure	121
DLC BRANCH LINE CIRCUIT	103	DLC BRANCH LINE CIRCUIT	122
Diagnosis Procedure	103	Diagnosis Procedure	122
M&A BRANCH LINE CIRCUIT	104	M&A BRANCH LINE CIRCUIT	123
Diagnosis Procedure	104	Diagnosis Procedure	123
STRG BRANCH LINE CIRCUIT	105	STRG BRANCH LINE CIRCUIT	124
Diagnosis Procedure	105	Diagnosis Procedure	124
A-BAG BRANCH LINE CIRCUIT	106	A-BAG BRANCH LINE CIRCUIT	125
		Diagnosis Procedure	125

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

AV BRANCH LINE CIRCUIT	126
Diagnosis Procedure	126
ASD-R BRANCH LINE CIRCUIT	127
Diagnosis Procedure	127
ASD-L BRANCH LINE CIRCUIT	128
Diagnosis Procedure	128
IPDM-E BRANCH LINE CIRCUIT	129
Diagnosis Procedure	129
CAN COMMUNICATION CIRCUIT	130
Diagnosis Procedure	130
CAN SYSTEM (TYPE 4)	
DTC/CIRCUIT DIAGNOSIS	132
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	132
Diagnosis Procedure	132
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	133
Diagnosis Procedure	133
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	134
Diagnosis Procedure	134
MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	135
Diagnosis Procedure	135
MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT	136
Diagnosis Procedure	136
ECM BRANCH LINE CIRCUIT	137
Diagnosis Procedure	137
EPS BRANCH LINE CIRCUIT	138
Diagnosis Procedure	138
ABS BRANCH LINE CIRCUIT	139
Diagnosis Procedure	139
TCM BRANCH LINE CIRCUIT	140
Diagnosis Procedure	140
BCM BRANCH LINE CIRCUIT	141
Diagnosis Procedure	141
DLC BRANCH LINE CIRCUIT	142
Diagnosis Procedure	142
M&A BRANCH LINE CIRCUIT	143
Diagnosis Procedure	143
STRG BRANCH LINE CIRCUIT	144
Diagnosis Procedure	144
A-BAG BRANCH LINE CIRCUIT	145

Diagnosis Procedure	145
ASD-R BRANCH LINE CIRCUIT	146
Diagnosis Procedure	146
ASD-L BRANCH LINE CIRCUIT	147
Diagnosis Procedure	147
PWBD BRANCH LINE CIRCUIT	148
Diagnosis Procedure	148
IPDM-E BRANCH LINE CIRCUIT	149
Diagnosis Procedure	149
CAN COMMUNICATION CIRCUIT	150
Diagnosis Procedure	150
CAN SYSTEM (TYPE 5)	
DTC/CIRCUIT DIAGNOSIS	152
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	152
Diagnosis Procedure	152
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	153
Diagnosis Procedure	153
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	154
Diagnosis Procedure	154
MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	155
Diagnosis Procedure	155
MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT	156
Diagnosis Procedure	156
ECM BRANCH LINE CIRCUIT	157
Diagnosis Procedure	157
EPS BRANCH LINE CIRCUIT	158
Diagnosis Procedure	158
ABS BRANCH LINE CIRCUIT	159
Diagnosis Procedure	159
TCM BRANCH LINE CIRCUIT	160
Diagnosis Procedure	160
BCM BRANCH LINE CIRCUIT	161
Diagnosis Procedure	161
DLC BRANCH LINE CIRCUIT	162
Diagnosis Procedure	162
M&A BRANCH LINE CIRCUIT	163
Diagnosis Procedure	163
STRG BRANCH LINE CIRCUIT	164
Diagnosis Procedure	164

A-BAG BRANCH LINE CIRCUIT	165	ABS BRANCH LINE CIRCUIT	181	
Diagnosis Procedure	165	Diagnosis Procedure	181	A
AV BRANCH LINE CIRCUIT	166	TCM BRANCH LINE CIRCUIT	182	
Diagnosis Procedure	166	Diagnosis Procedure	182	B
ASD-R BRANCH LINE CIRCUIT	167	BCM BRANCH LINE CIRCUIT	183	
Diagnosis Procedure	167	Diagnosis Procedure	183	C
ASD-L BRANCH LINE CIRCUIT	168	DLC BRANCH LINE CIRCUIT	184	
Diagnosis Procedure	168	Diagnosis Procedure	184	
PWBD BRANCH LINE CIRCUIT	169	M&A BRANCH LINE CIRCUIT	185	D
Diagnosis Procedure	169	Diagnosis Procedure	185	
IPDM-E BRANCH LINE CIRCUIT	170	STRG BRANCH LINE CIRCUIT	186	
Diagnosis Procedure	170	Diagnosis Procedure	186	E
CAN COMMUNICATION CIRCUIT	171	A-BAG BRANCH LINE CIRCUIT	187	
Diagnosis Procedure	171	Diagnosis Procedure	187	F
CAN SYSTEM (TYPE 6)		AV BRANCH LINE CIRCUIT	188	
DTC/CIRCUIT DIAGNOSIS	173	Diagnosis Procedure	188	G
MAIN LINE BETWEEN EPS AND ABS CIR- CUIT	173	AVM BRANCH LINE CIRCUIT	189	
Diagnosis Procedure	173	Diagnosis Procedure	189	H
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	174	BSW BRANCH LINE CIRCUIT	190	
Diagnosis Procedure	174	Diagnosis Procedure	190	I
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	175	ASD-R BRANCH LINE CIRCUIT	191	
Diagnosis Procedure	175	Diagnosis Procedure	191	J
MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT	176	ADP BRANCH LINE CIRCUIT	192	
Diagnosis Procedure	176	Diagnosis Procedure	192	K
MAIN LINE BETWEEN ASD-R AND ADP CIR- CUIT	177	ASD-L BRANCH LINE CIRCUIT	193	
Diagnosis Procedure	177	Diagnosis Procedure	193	L
MAIN LINE BETWEEN ADP AND ASD-L CIR- CUIT	178	PWBD BRANCH LINE CIRCUIT	194	
Diagnosis Procedure	178	Diagnosis Procedure	194	
ECM BRANCH LINE CIRCUIT	179	IPDM-E BRANCH LINE CIRCUIT	195	
Diagnosis Procedure	179	Diagnosis Procedure	195	LAN
EPS BRANCH LINE CIRCUIT	180	RDR-L BRANCH LINE CIRCUIT	196	
Diagnosis Procedure	180	Diagnosis Procedure	196	
		RDR-R BRANCH LINE CIRCUIT	197	N
		Diagnosis Procedure	197	
		CAN COMMUNICATION CIRCUIT	198	
		Diagnosis Procedure	198	O
		BSW COMMUNICATION CIRCUIT	200	
		Diagnosis Procedure	200	P

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:0000000011325350

- “CAN FUNDAMENTAL” of LAN Section describes the basic knowledge of the CAN communication system and the method of trouble diagnosis.
- For information peculiar to a vehicle and inspection procedure, refer to “CAN”.

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:0000000011325351

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:0000000011325352

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

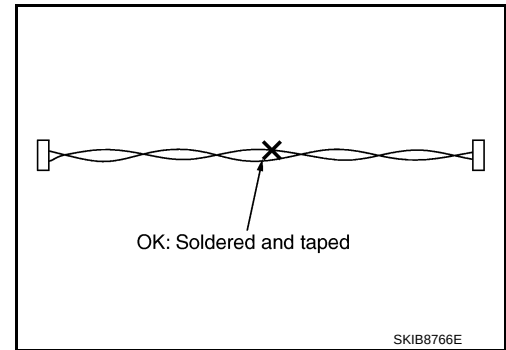

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

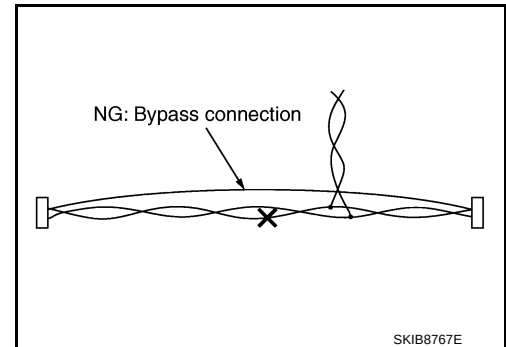

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

SYSTEM DESCRIPTION

SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:0000000011325353


CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DIAG ON CAN

DIAG ON CAN : System Description

INFOID:0000000011325354

SYSTEM DIAGRAM

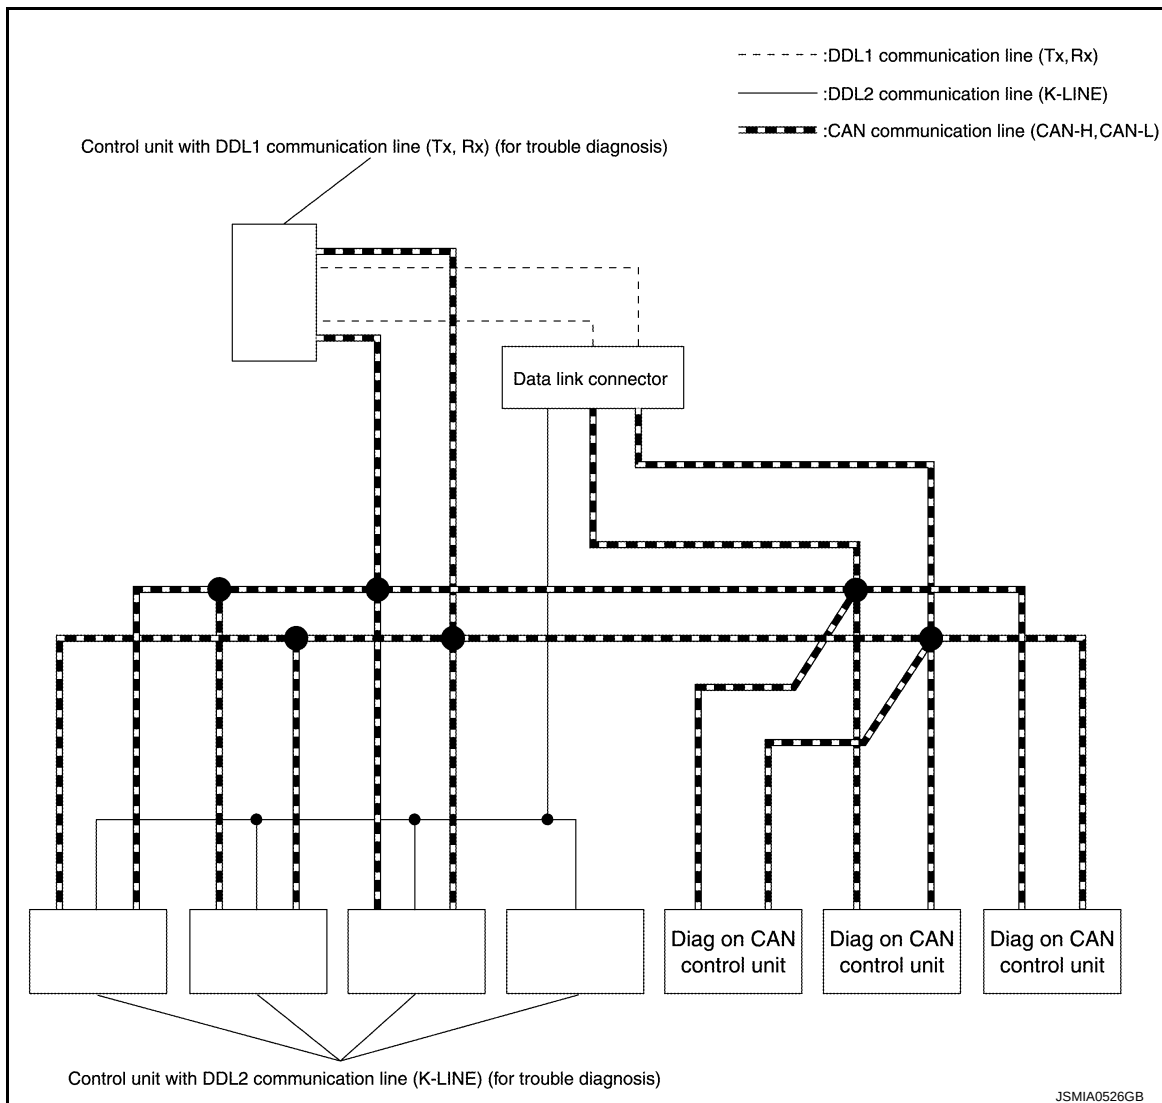

Name	Harness	Description
DDL1	Tx Rx	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	For communications with the diagnostic tool. (CAN-H and CAN-L are also used for control and diagnoses.)

DESCRIPTION

“Diag on CAN” is a diagnosis method which uses the CAN communication line for the communication between the control unit and the diagnostic tool.


A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

Component Description

INFOID:000000011325355

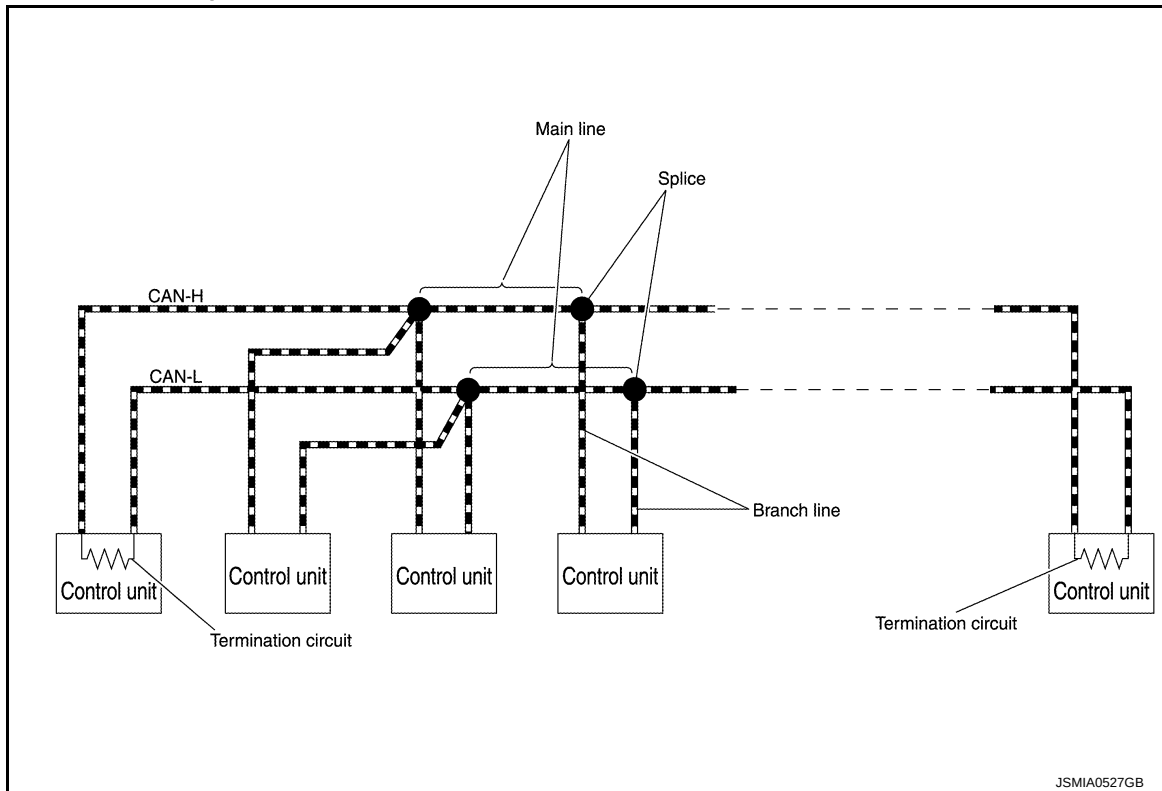

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Circuit connected across the CAN communication system. (Resistor)

Condition of Error Detection

INFOID:000000011325356

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

NOTE:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT under the above conditions. Erase the memory of the self-diagnosis of each control unit.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Symptom When Error Occurs in CAN Communication System

INFOID:0000000011325357


In CAN communication system, multiple control units mutually transmit and receive signals. Each control unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

Each vehicle differs in symptom of each control unit under fail-safe mode and CAN communication line wiring.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

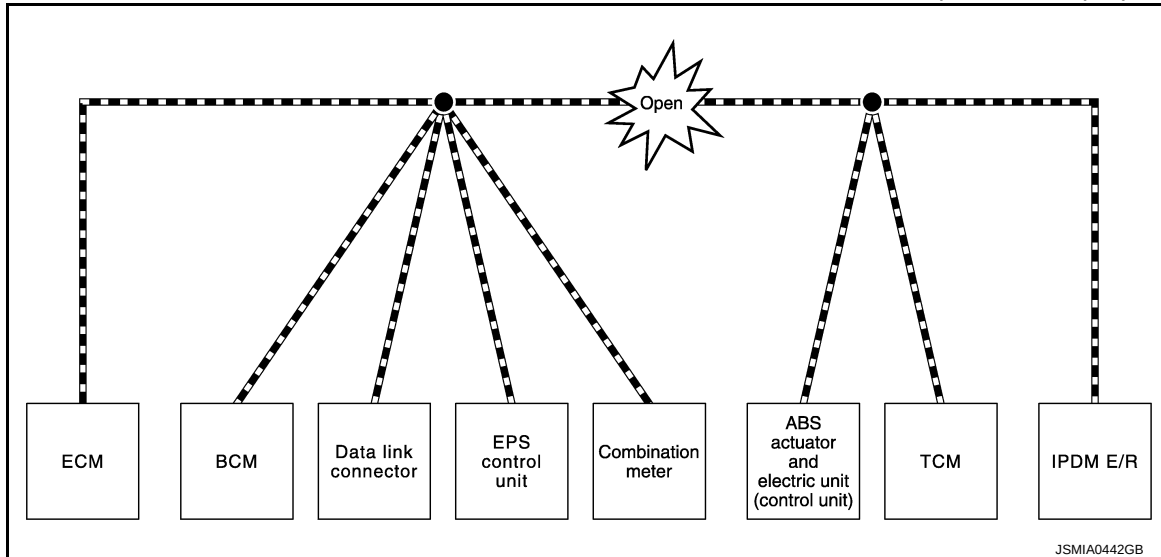


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	- Reverse warning buzzer does not sound. - The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	- The shift position indicator and OD OFF indicator turn OFF. - The speedometer is inoperative. - The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, - The headlamps (Lo) turn ON. - The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: TCM Branch Line Open Circuit

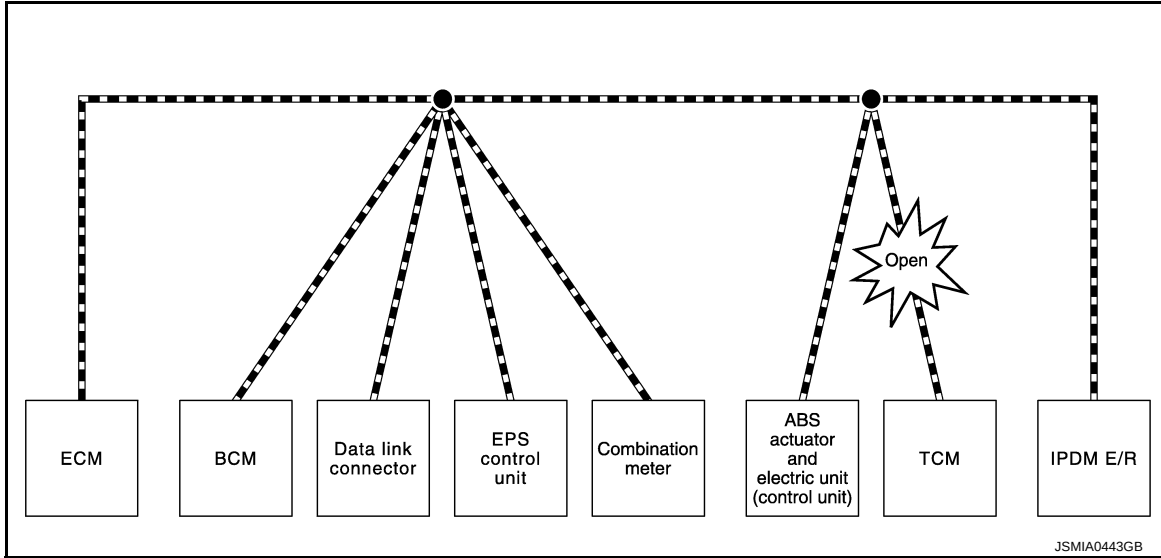


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning buzzer does not sound.
EPS control unit	Normal operation.
Combination meter	- Shift position indicator and O/D OFF indicator turn OFF. - Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

NOTE:

The model (all control units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT if the following error occurs. The error is judged by the symptom.

Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the control units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Data Link Connector Branch Line Open Circuit

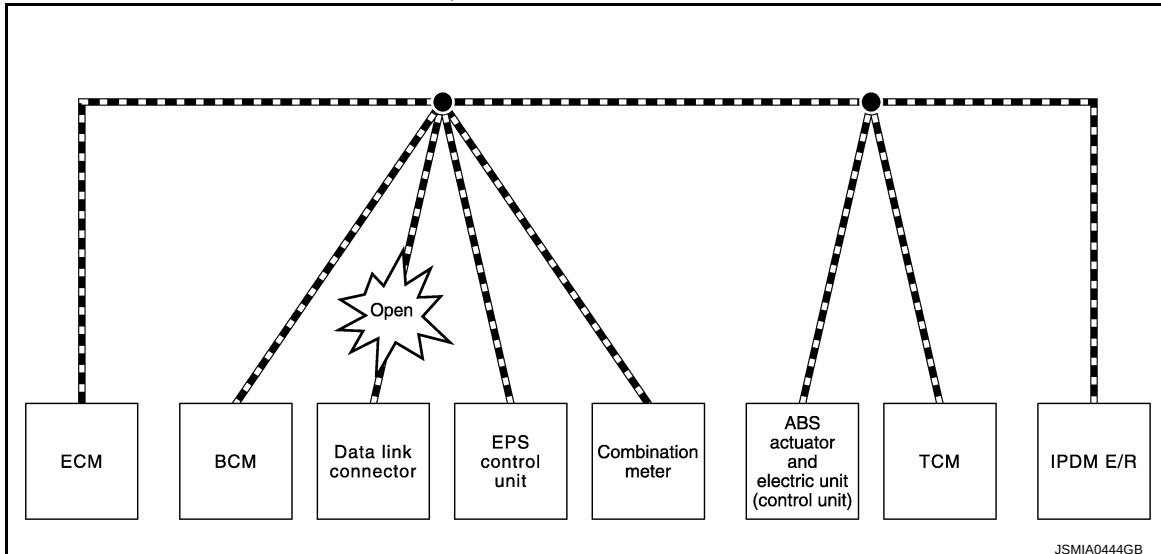

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >


[CAN FUNDAMENTAL]

Unit name	Major symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.

Example: CAN-H, CAN-L Harness Short Circuit

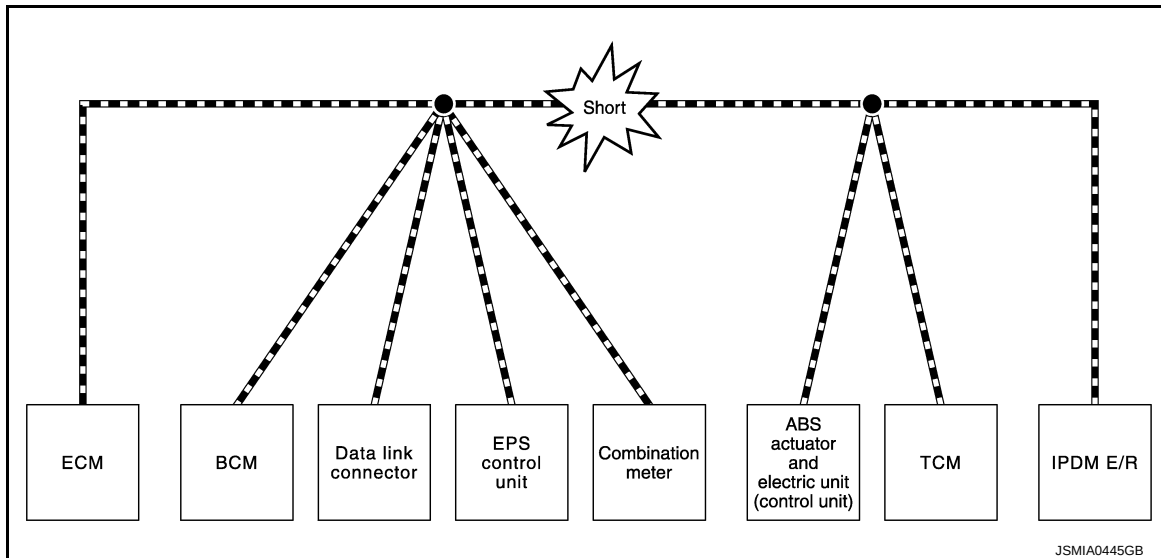

Unit name	Major symptom
ECM	- Engine torque limiting is affected, and shift harshness increases. - Engine speed drops.
BCM	- Reverse warning buzzer does not sound. - The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. - The room lamp does not turn ON. - The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) - The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	- The tachometer and the speedometer do not move. - Warning lamps turn ON. - Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, - The headlamps (Lo) turn ON. - The cooling fan continues to rotate.

CAN Diagnosis with CONSULT

INFOID:000000011325358

CAN diagnosis on CONSULT extracts the root cause by receiving the following information.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

Self-Diagnosis

INFOID:0000000011325359

If communication signals cannot be transmitted or received among control units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT "Self Diagnostic Result" screen.

NOTE:

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT indication)	DTC detection condition		Inspection/Action
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating "U1010".

CAN Diagnostic Support Monitor

INFOID:0000000011325360

MONITOR ITEM (CONSULT)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST				With PAST			
BCM				ENGINE			
MONITOR ITEM	PRESENT	PAST		MONITOR ITEM	PRESENT	PAST	
INITIAL DIAG	OK	-		TRANSMIT DIAG	OK	OK	
TRANSMIT DIAG	OK	-		VDC/TCS/ABS	OK	5	
ECM	OK	-		METER/M&A	Not diagnosed	-	
METER/M&A	OK	-		BCM/SEC	OK	OK	
TCM	OK	-		ICC	Not diagnosed	-	
IPDM E/R	OK	-		HVAC	Not diagnosed	-	
I-KEY	OK	-		TCM	OK	OK	
				EPS	OK	OK	
				IPDM E/R	OK	5	
				e4WD	Not diagnosed	-	
				AWD/4WD	Not diagnosed	-	

JSMIA0964GB

Without PAST

Item	PRESENT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Item	PRESENT	Description
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more.
		Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more.
		Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRESENT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	Not diagnosed	–	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

How to Use CAN Communication Signal Chart

INFOID:000000011325361

The CAN communication signal chart lists the signals transmitted/received among control units. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.


Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

No communication between ECM and M&A (Combination meter).

It indicates that an error occurs between ECM and Combination meter (Shaded area).

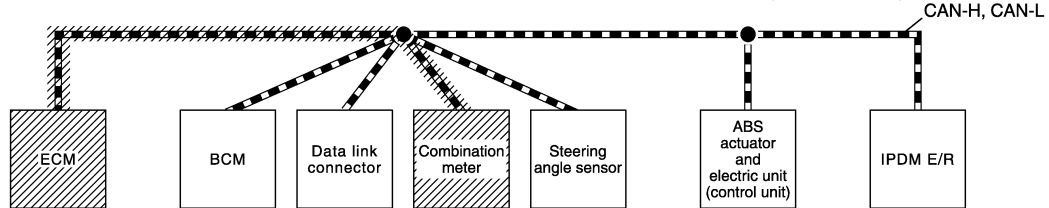

JSMIA0446GB


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:0000000011325362

DESCRIPTION

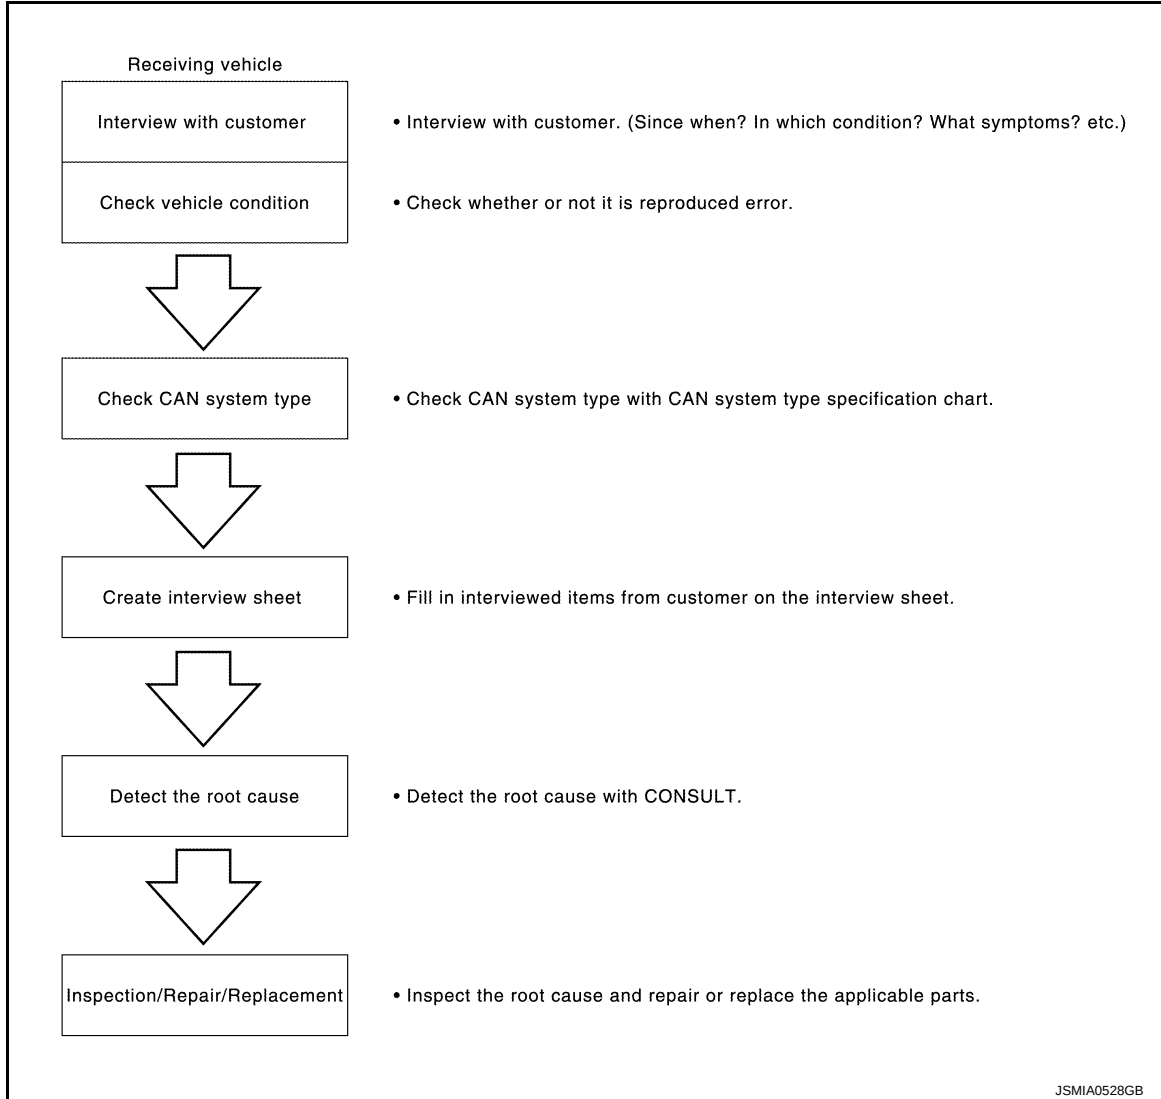

DETAIL OF TROUBLE DIAGNOSIS FLOW CHART

1. INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

Notes for checking error symptoms:


- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

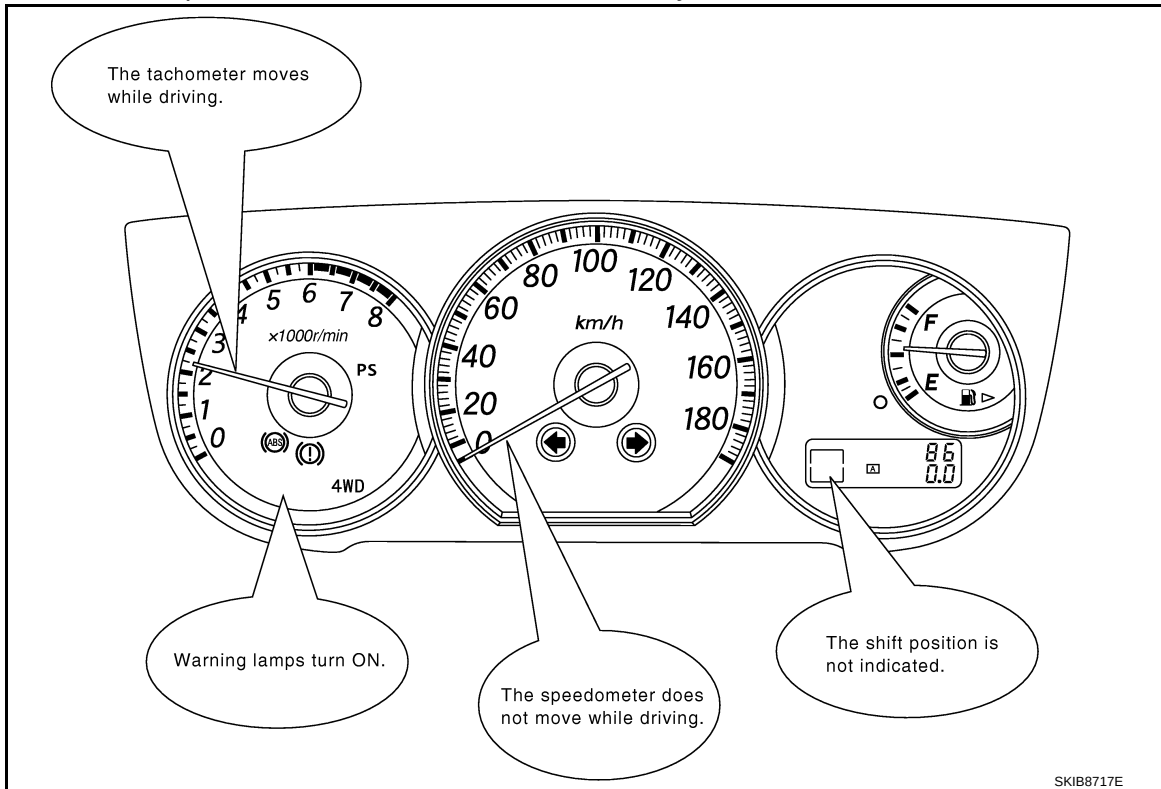

>> GO TO 2.

2. INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the 12V battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

>> GO TO 3.

3. CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.
- CAN System Type Specification Chart (Style A)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart

Determine CAN system type from the following specification chart.


Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE			VQ35DE		
Transmission	A/T			CVT		
Brake control	ABS			VDC		
Intelligent Key system		×		×		×
CAN system type	1	2	3	4	5	6
CAN communication control unit						
ECM	×	×	×	×	×	×
AWD control unit					×	×
Air bag diagnosis sensor unit	×	×	×	×	×	×
BCM	×	×	×	×	×	×
Intelligent Key unit		×		×		×
Steering angle sensor					×	×
EPS control unit	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×
TCM	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

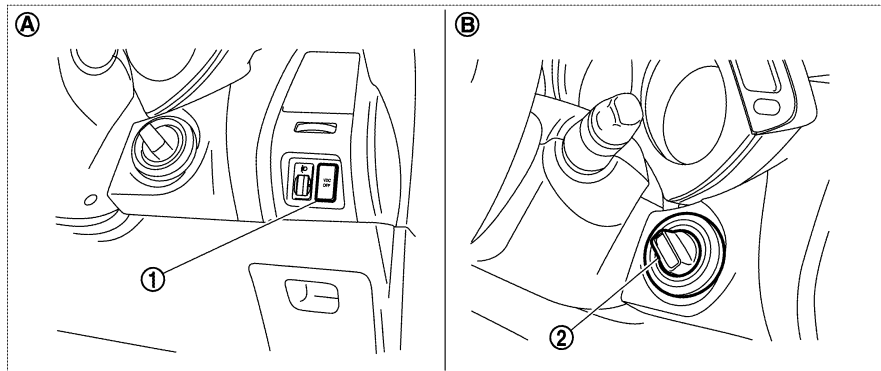

1. VDC OFF switch

A. With VDC

2. Ignition knob

B. With Intelligent Key system

For the above case, CAN system type is "6".

In the above example,
• Checking VDC OFF switch leads to judge whether or not VDC is equipped.

• Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

• CAN System Type Specification Chart (Style B)

NOTE:

JSMIA0529GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart

Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	XX.XX... SPECIFICATION CHART A.	XX.XX... SPECIFICATION CHART B.	XX.XX... SPECIFICATION CHART C.

×: Applicable

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

Select the applicable vehicle equipment. Refer to the specification chart.

SPECIFICATION CHART B

Determine CAN system type from the following specification chart.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		x			x	x			x	x		x
Intelligent Key system			x		x		x	x	x	x	x	x
Navigation system				x		x	x		x		x	x
Automatic drive positioner								x		x	x	x
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
CAN communication control unit												
ECM	x	x	x	x	x	x	x	x	x	x	x	x
AFS control unit		x			x	x			x	x		x
BCM	x	x	x	x	x	x	x	x	x	x	x	x
IPDM E/R	x	x	x	x	x	x	x	x	x	x	x	x

×: Applicable


Check the vehicle equipment.

← The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

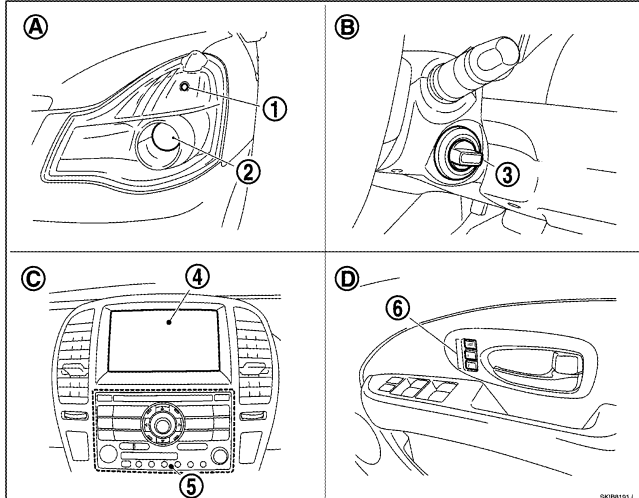

1. Bending lamp

2. Xenon bulb

3. Ignition knob

4. Display

5. Multifunction switch

6. Seat memory switch

A. With active AFS

B. With Intelligent Key system

C. With navigation system

D. With automatic drive positioner

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

[For the above case, CAN system type is "20".]

JSMIA0530GB

>> GO TO 4.

4. CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received: 3, Feb. 2006	
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZG11EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type: Type 19	
Symptom (Results from interview with customer)	
• Headlamps suddenly turn ON while driving the vehicle. • The engine does not restart after stopping the vehicle and turning the ignition switch OFF. • The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: Present / Past	
The engine does not start. While turning the ignition switch ON, • The headlamps (Lo) turn ON, and the cooling fan continues rotating. • The interior lamp does not turn ON.	

JSMIA0531GB

>> GO TO 5.

5.DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT detects a root cause.

>> GO TO 6.

6.REPAIR OR REPLACE MALFUNCTIONING PART

Repair or replace malfunctioning parts identified by CAN diagnosis function of CONSULT.

CAN communication circuit>> Refer to [LAN-46, "CAN Communication Circuit"](#).
BSW communication circuit>> Refer to [LAN-46, "BSW Communication Circuit"](#).

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:0000000011325364

- “CAN” of LAN Section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#) of “CAN FUNDAMENTAL”.

Abbreviation List

INFOID:0000000011325365

Control unit name abbreviations in CONSULT CAN diagnosis and in this section are as per the following list.

Abbreviation	Unit name
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
ADP	Driver seat control unit
ASD-L	Sliding door control unit LH
ASD-R	Sliding door control unit RH
AV	AV control unit
AVM	Around view monitor control unit
BCM	BCM
BSW	BSW control module
DLC	Data link connector
ECM	ECM
EPS	Power steering control module
IPDM-E	IPDM E/R
M&A	Combination meter
PWBD	Automatic back door control module
RDR-L	Side radar LH
RDR-R	Side radar RH
STRG	Steering angle sensor
TCM	TCM

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011325366

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000011325367

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

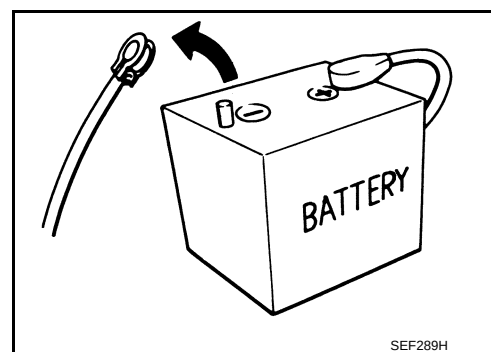

Precautions for Trouble Diagnosis

INFOID:0000000011325368

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.

PRECAUTIONS

< PRECAUTION >

[CAN]

- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:0000000011325369

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

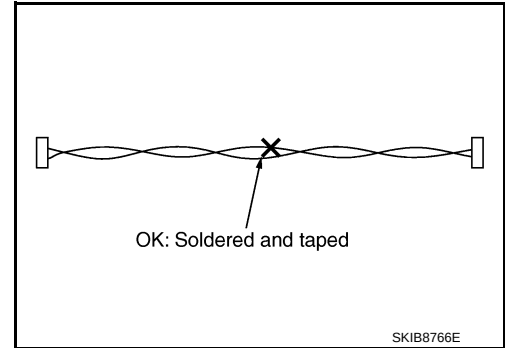

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

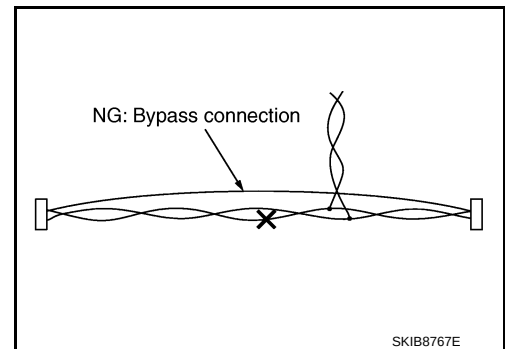


- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011325370

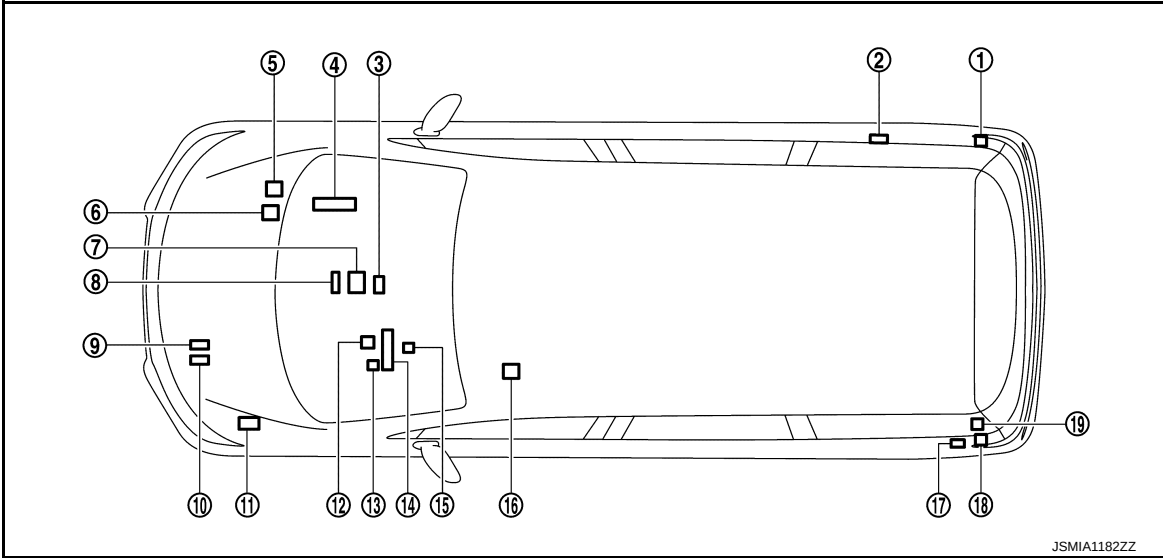

- | | | |
|--|----------------------------------|--|
| 1. Side radar RH | 2. Sliding door control unit RH | 3. Air bag diagnosis sensor unit |
| 4. Around view monitor control unit | 5. Power steering control module | 6. ABS actuator and electric unit (control unit) |
| 7. AV control unit | 8. BSW control module | 9. TCM |
| 10. ECM | 11. IPDM E/R | 12. BCM |
| 13. Data link connector | 14. Combination meter | 15. Steering angle sensor |
| 16. Driver seat control unit | 17. Sliding door control unit LH | 18. Side radar LH |
| 19. Automatic back door control module | | |

LAN


SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:000000011325371

SYSTEM DIAGRAM

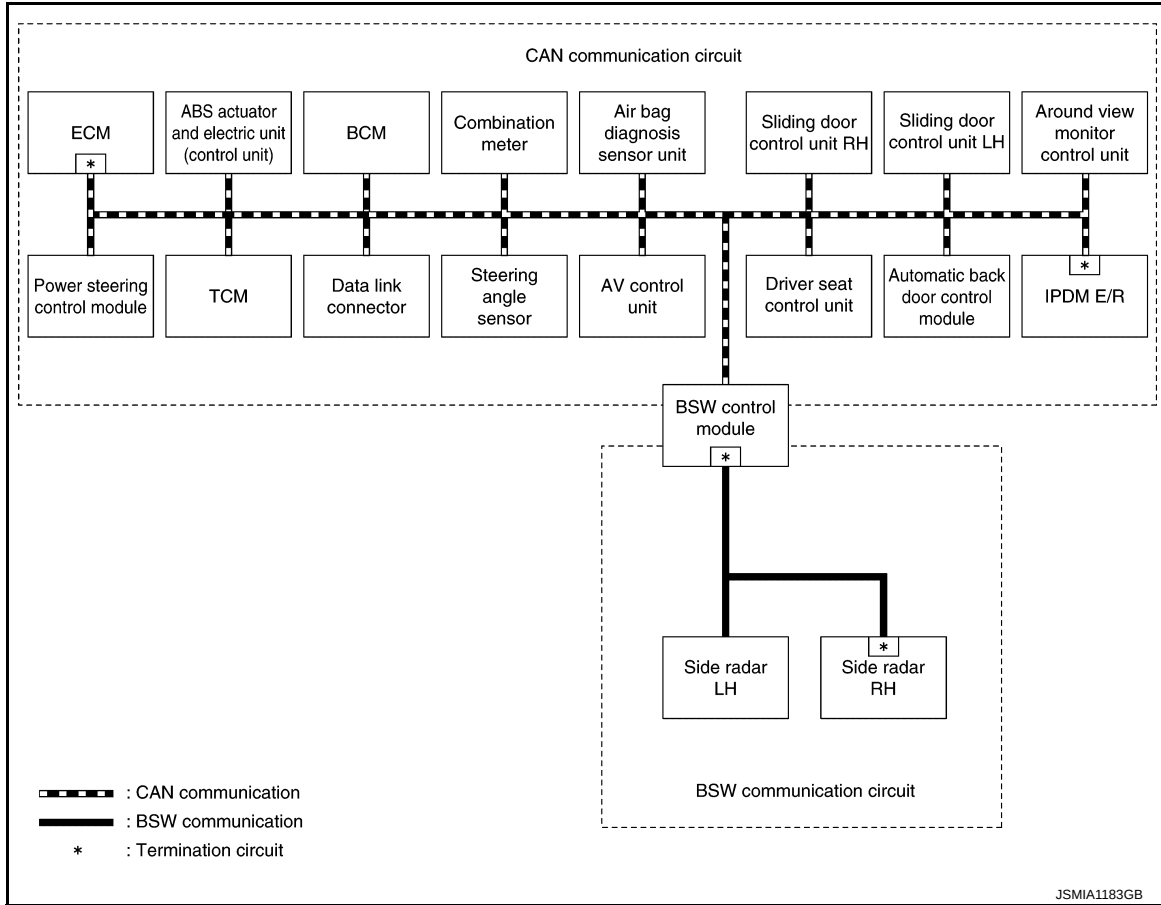

DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.


CAN COMMUNICATION SIGNAL GENERATION

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]


- Termination circuits (resistors) are connected across the CAN communication system. When transmitting a CAN communication signal, each control unit passes a current to the CAN-H line and the current returns to the CAN-L line.

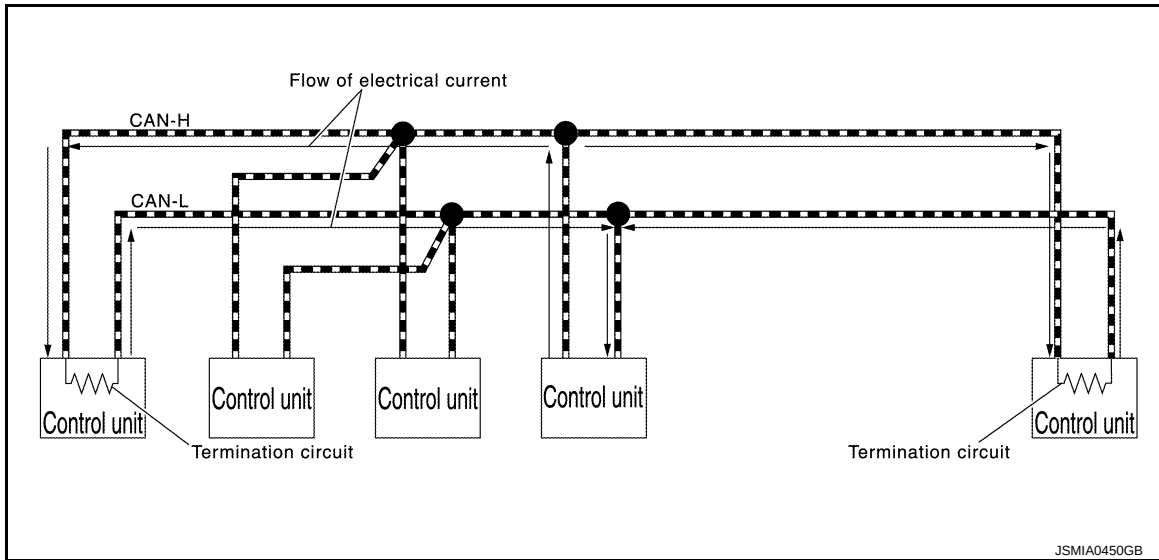


- The current flows separately into the termination circuits connected across the CAN communication system and the termination circuits drop voltage to generate a potential difference between the CAN-H line and the CAN-L line.

NOTE:


A signal with no current passage is called "Recessive" and one with current passage is called "Dominant".

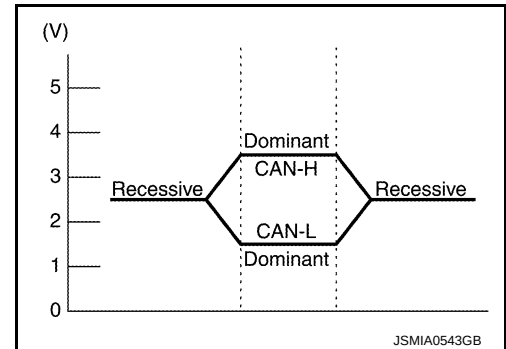

- The system produces digital signals for signal communications, by using the potential difference.

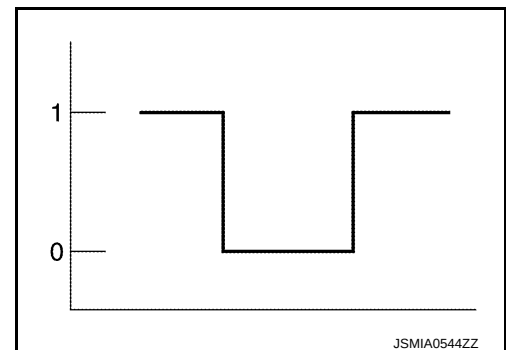


THE CONSTRUCTION OF CAN COMMUNICATION SIGNAL (MESSAGE)

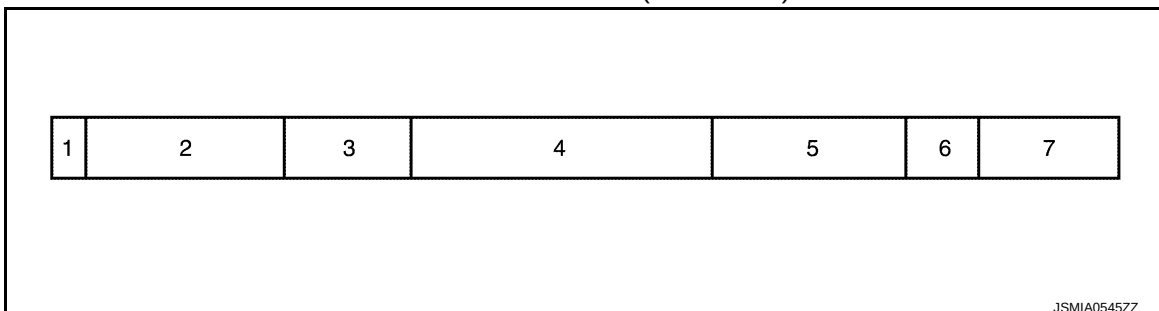

No.	Message name	Description
1	Start of frame (1 bit)	Start of message.
2	Arbitration of field (11 bit)	Priorities of message-sending are shown when there is a possibility that multiple messages are sent at the same time.
3	Control field (6 bit)	Signal quantity in data field is shown.
4	Data field (0-64 bit)	Actual signal is shown.
5	CRC field (16 bit)	- The transmitting control unit calculates sending data in advance and writes the calculated value in a message. - The receiving control unit calculates received data and judges that the data reception is normal when the calculated value is the same as the value written in the sent data.
6	ACK field (2 bit)	The completion of normal reception is sent to the transmitting unit.
7	End of frame (7 bit)	End of message.

CAN Communication Line


The CAN communication line is a twisted pair wire consisting of strands of CAN-H (1) and CAN-L (2) and has noise immunity.

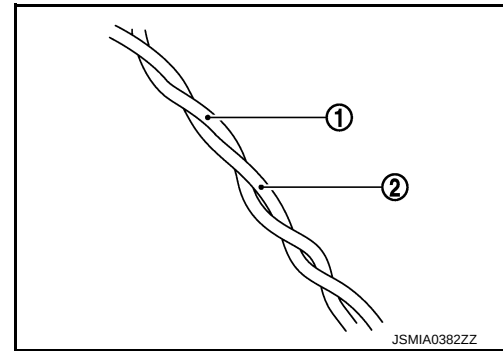

NOTE:

The CAN communication system has the characteristics of noise-resistant because this system produces digital signals by using the potential difference between the CAN-H line and the CAN-L line and has the twisted pair wire structure.

Since the CAN-H line and the CAN-L line are always adjacent to each other, the same degree of noise occurs, respectively, when a noise (1) occurs. Although the noise changes the voltage, the potential difference (2) between the CAN-H line and the CAN-L line is insensitive to noise. Therefore, noise-resistant signals can be obtained.

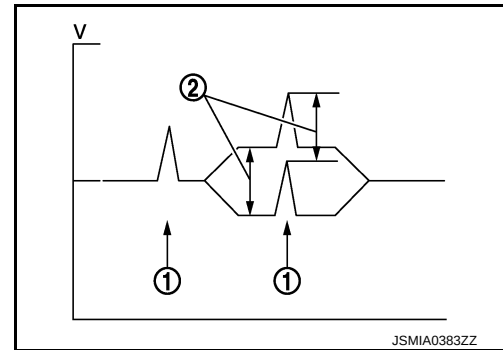


CAN Signal Communications


Each control unit of the CAN communication system transmits signals through the CAN communication control circuit included in the control unit and receives only necessary signals from each control unit to perform various kinds of control.

< SYSTEM DESCRIPTION >

• Example: Transmitted signals

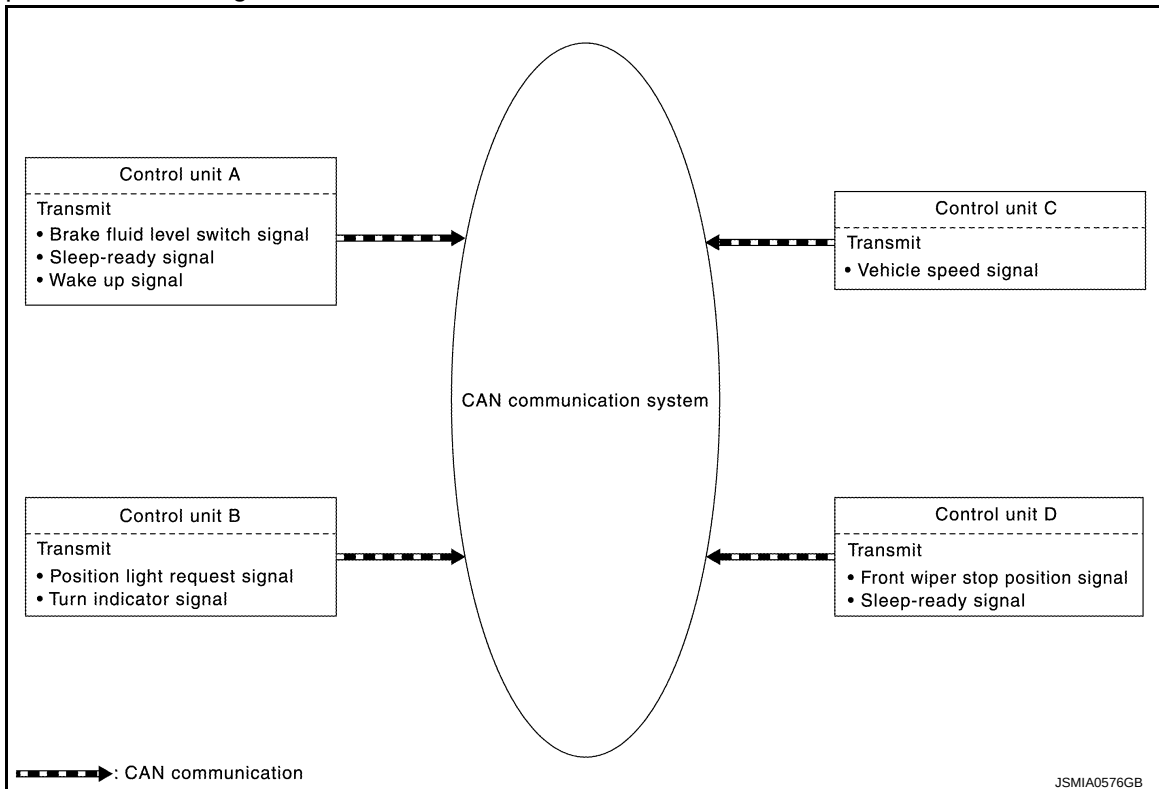

• Example: Received signals

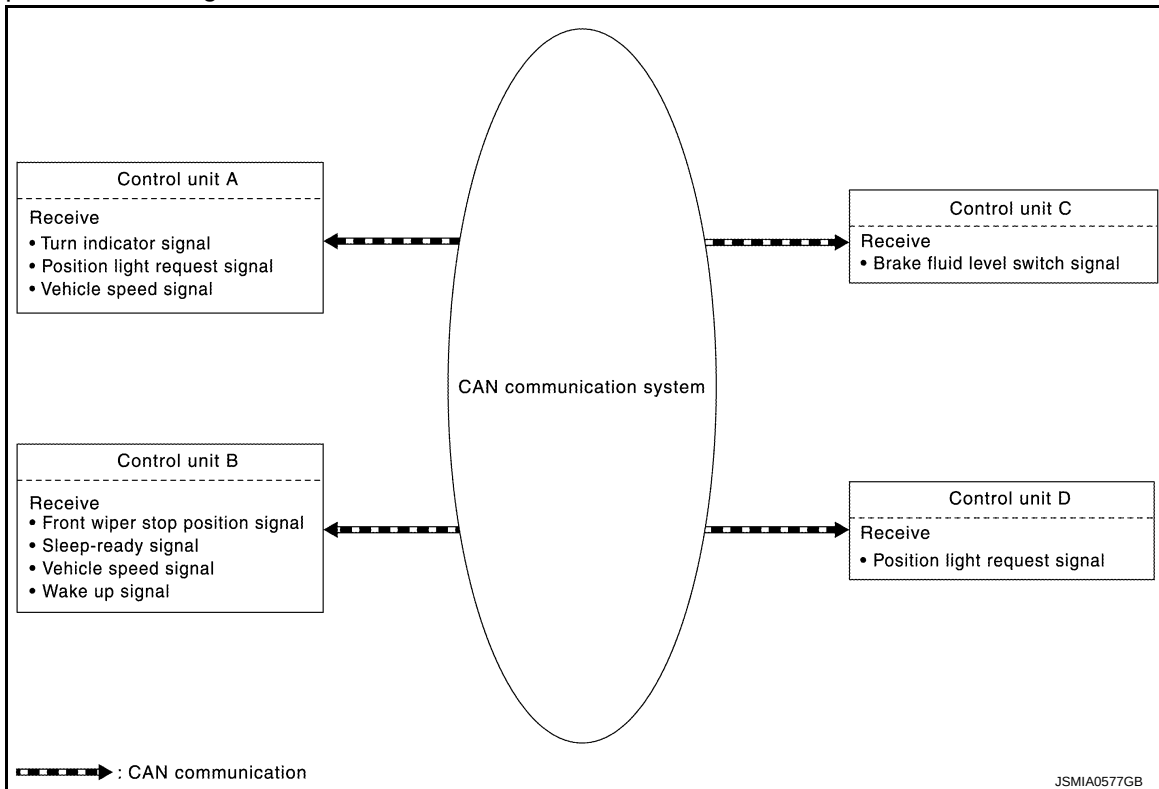

NOTE:

The above signal names and signal communications are provided for reference purposes. For CAN communications signals of this vehicle, refer to [LAN-32, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

SYSTEM


< SYSTEM DESCRIPTION >

[CAN]

CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit

INFOID:0000000011325372

CAN communication control circuit is incorporated into the control unit and transmits/receives CAN communication signals.

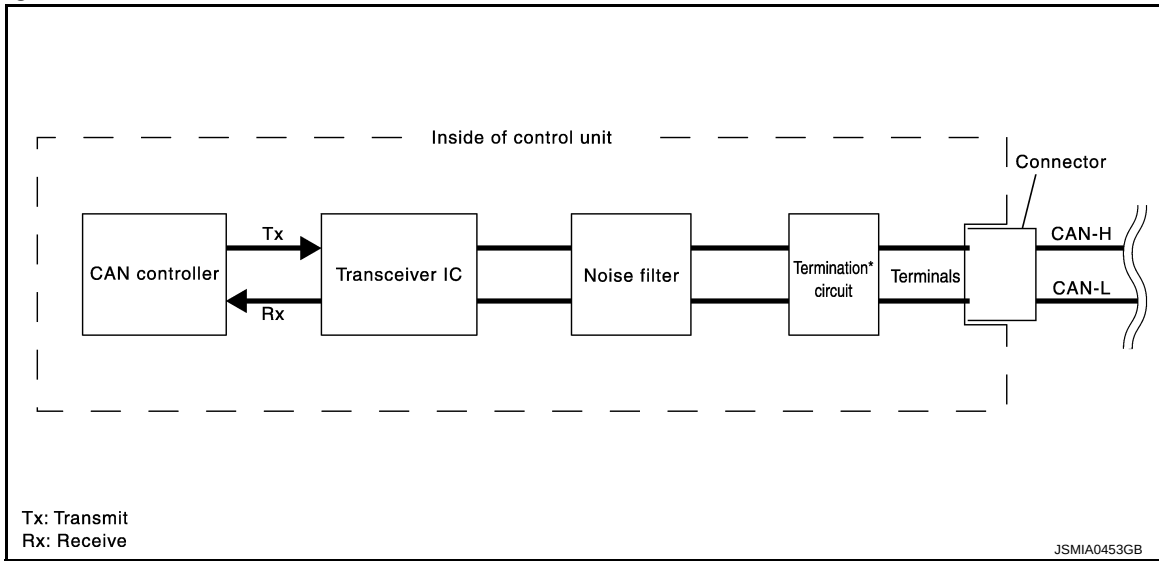

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	Generates a potential difference between CAN-H and CAN-L.

*: These are the only control units wired with both ends of CAN communication system.

CAN COMMUNICATION SYSTEM : CAN System Specification Chart

INFOID:0000000011325373

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#) for how to use CAN system specification chart.

Body type	4-door wagon					
Axle	2WD					
Engine	VQ35DE					
Transmission	CVT					
Brake control	VDC					
Color display (7 inches or 8 inches)			×		×	×
Automatic sliding door		×	×	×	×	×
Automatic drive positioner						×
Automatic back door				×	×	×
CAN system type	1	2	3	4	5	6
CAN communication control unit						
ECM	×	×	×	×	×	×
Power steering control module	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×
TCM	×	×	×	×	×	×
BCM	×	×	×	×	×	×

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Body type	4-door wagon					
Axle	2WD					
Engine	VQ35DE					
Transmission	CVT					
Brake control	VDC					
Color display (7 inches or 8 inches)			×		×	×
Automatic sliding door		×	×	×	×	×
Automatic drive positioner						×
Automatic back door				×	×	×
CAN system type	1	2	3	4	5	6
Data link connector	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×
Steering angle sensor	×	×	×	×	×	×
Air bag diagnosis sensor unit	×	×	×	×	×	×
AV control unit			×		×	×
Around view monitor control unit						×
BSW control module						×
Sliding door control unit RH		×	×	×	×	×
Driver seat control unit						×
Sliding door control unit LH		×	×	×	×	×
Automatic back door control module				×	×	×
IPDM E/R	×	×	×	×	×	×
BSW communication control unit						
BSW control module						×
Side radar LH						×
Side radar RH						×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:


Check CAN system type from the vehicle shape and equipment.

LAN

N

O

P

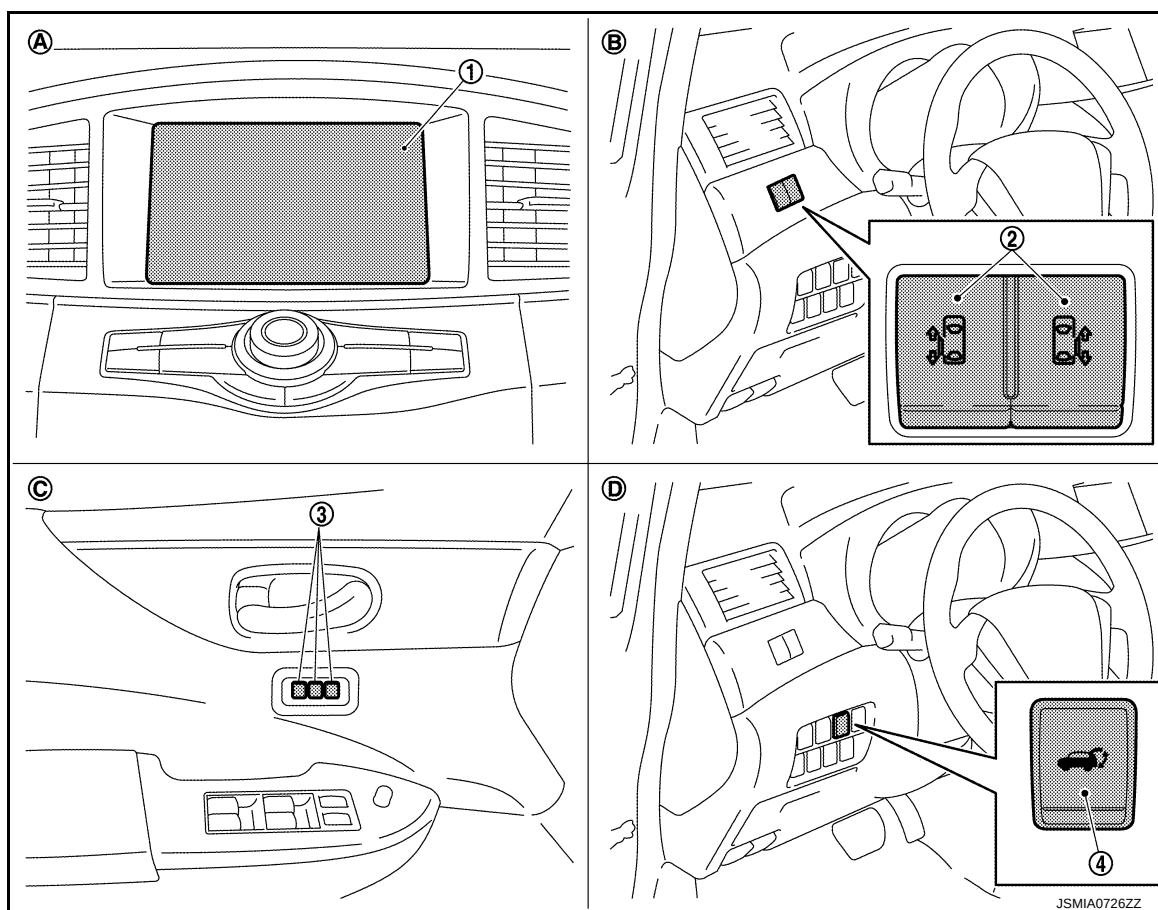

1. Color display (7 inches or 8 inches) 2. Sliding door open/close switch 3. Seat memory switch
 4. Automatic back door switch
 A. With color display (7 inches or 8 inches) B. With automatic sliding door C. With automatic drive positioner
 D. With automatic back door

CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart

INFOID:0000000011325374

Refer to [LAN-16. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

Refer to [LAN-22. "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	EPS	ABS	TCM	BCM	M&A	STRG	AV	AVM	BSW	ASD-R	ADP	ASD-L	PWBD	IPDM-E
A/C compressor request signal	T														R
Accelerator pedal position signal	T		R	R											
ASCD operation signal	T			R											
ASCD status signal	T					R									
Closed throttle position signal	T			R											
Cooling fan speed request signal	T														R
Engine and CVT integrated control signal	T			R											
	R			T											
Engine coolant temperature signal	T					R									

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	EPS	ABS	TCM	BCM	M&A	STRG	AV	AVM	BSW	ASD-R	ADP	ASD-L	PWBD	IPDM-E
Engine speed signal	T		R	R		R				R					
Engine status signal	T	R			R	R		R							
Fuel consumption monitor signal	T					R		R							
Fuel filler cap warning display signal	T					R									
Malfunctioning indicator lamp signal	T					R									
Starter motor relay cut off signal	T				R										R
EPS operation signal	R	T													
Hydraulic pump electric power steering warning lamp signal		T				R									
ABS operation signal			T	R											
ABS warning lamp signal			T			R									
Brake warning lamp signal			T			R									
TCS operation signal			T	R											
VDC OFF indicator lamp signal			T			R									
VDC operation signal			T	R											
VDC warning lamp signal			T			R									
Vehicle speed signal	R	R			R	T		R			R	R	R	R	R
			T	R	R	R			R	R	R	R	R	R	
Current gear position signal			R	T											
CVT self-diagnosis signal	R			T											
Input shaft revolution signal	R			T											
N range signal			R	T											
OD OFF indicator signal				T		R									
Output shaft revolution signal	R			T											
P range signal			R	T	R										
R range signal			R	T											
Shift position signal	R		R	T		R				R	R	R	R		
A/C ON signal	R				T										
ACC signal					T							R			
Automatic back door request signal					T									R	
Automatic sliding door operate request signal					T						R				
					T								R		
Back door lock status signal					T									R	
Blower fan ON signal	R				T										
Buzzer output signal					T	R									
						R				T					
Daytime running light request signal					T										R
Dimmer signal					T	R*				R					
Door lock/unlock status signal					T	R									
Door switch signal					T	R						R			R
Door unlock signal					T							R			
Front fog light request signal					T										R
Front wiper request signal					T										R

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	EPS	ABS	TCM	BCM	M&A	STRG	AV	AVM	BSW	ASD-R	ADP	ASD-L	PWBD	IPDM-E
Handle position signal					T							R			
High beam request signal					T	R									R
Horn reminder signal					T										R
Ignition switch ON signal	R				T						R	R	R		R
					R										T
Interlock/PNP switch signal					T										R
					R										T
Key ID signal					T							R			
Low beam request signal					T										R
Low tire pressure warning lamp signal					T	R									
Oil pressure warning lamp signal	T					R									
Position light request signal					T	R									R
Rear window defogger control signal					T										R
	R														T
Sleep wake up signal					T	R					R	R	R	R	R
Starter control relay signal					T										R
Starter relay status signal					T	R									R
					R										T
Starter signal					T							R			
Stop lamp switch signal				R	T										
System setting signal					R			T				R			
					T			R							
								R				T			
Theft warning horn request signal					T										R
TPMS malfunction warning lamp signal					T	R									
Turn indicator signal					T	R				R					
Brake fluid level switch signal			R			T									
Distance to empty signal						T		R							
Fuel filler cap warning reset signal	R					T									
Fuel level low warning signal						T		R							
Fuel level sensor signal	R					T									
Odometer signal					R	T									
Overdrive control switch signal				R		T									
Parking brake switch signal					R	T									
Seat belt buckle switch signal (driver side)					R	T									
Sleep-ready signal					R	T									
					R						T				
					R								T		
					R									T	
					R										T

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	EPS	ABS	TCM	BCM	M&A	STRG	AV	AVM	BSW	ASD-R	ADP	ASD-L	PWBD	IPDM-E
Wake up signal					R	T									
					R						T				
					R								T		
					R									T	
Steering angle sensor malfunction signal		R					T								
Steering angle sensor signal		R	R				T	R	R						
Camera OFF signal								T	R						
Camera switch signal								T	R						
View change signal								R	T						
BSW warning lamp signal						R				T					
Door lock and unlock request signal					R						T				
					R								T		
Sliding door unlock request signal					R						T				
					R								T		
Hazard request signal					R									T	
Detention switch signal					R							R			T
Front wiper stop position signal					R										T
High beam status signal	R														T
Low beam status signal	R														T
Push-button ignition switch status signal					R										T
Starter motor relay/Starter motor control relay control signal	R														T

*: For U.S.A.

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

LAN


WIRING DIAGRAM

CAN SYSTEM

Wiring Diagram

INFOID:000000011325375

CAN SYSTEM

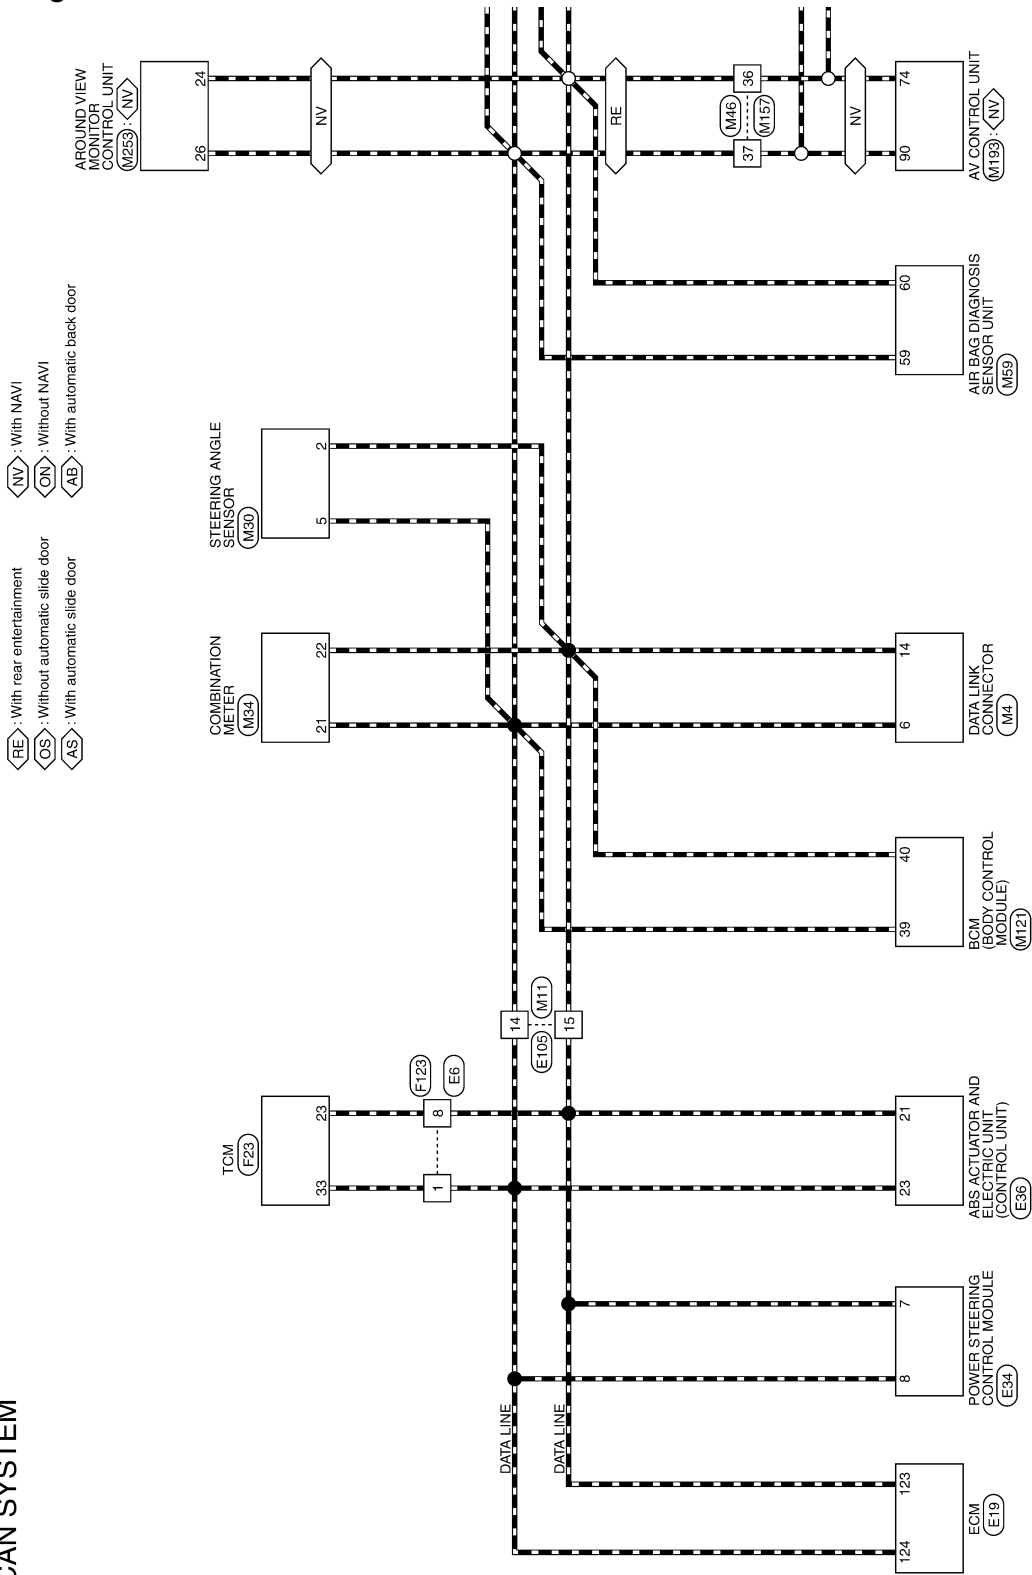

★: This connector is not shown in "Harness Layout".


2014/07/25

JRMWG3298GB

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

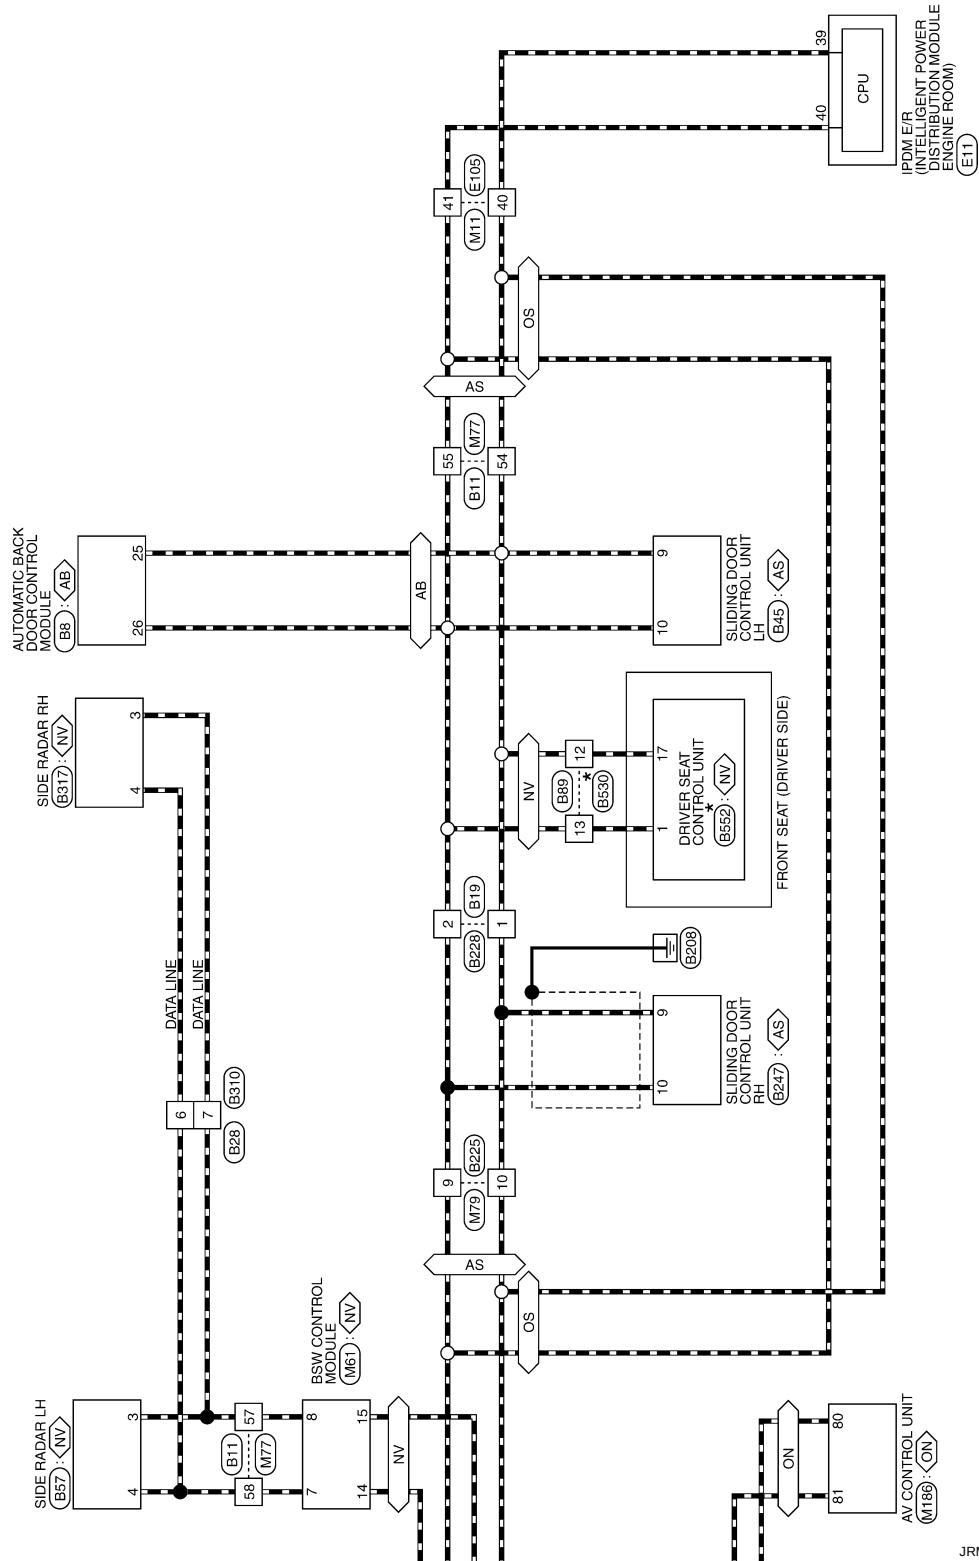

JRMWG3299GB

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P


CAN SYSTEM

< WIRING DIAGRAM >


[CAN]

CAN SYSTEM

Connector No.	B8
Connector Name	AUTOMATIC BACK DOOR CONTROL MODULE
Connector Type	TH20FW-TB8

 

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	TH480MW-CS19

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	+B
2	BR	LATCH MTR CLOSE
3	P	LATCH MTR OPEN
4	P	INSIDE CLOSE SW
5	W	BUZZER
6	B	NAM-FUNC-FLG
7	P	+B
8	B	GROUND
9	GR	+B
10	B	GROUND
11	B	GROUND
12	W	TOUCH SENS RH
13	W	TOUCH SENS GND
14	P	TOUCH SENS LH
15	GR	TOUCH SENS LH
16	L	DRIVER SW
17	G	DRIVER SW
18	G	CLOSE SW
19	G	CLOSE SW
20	W	HALF LATCH SW
21	G	OPEN SW
22	P	CAN-L
23	P	CAN-H
24	L	

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	
2	G	
3	P	
4	L	
5	L	
6	GR	
7	W	
8	P	
9	SHIELD	
10	R	
11	B	
12	W	
13	Y	
14	B	
15	G	
16	L	
17	Y	
18	L	
19	GR	
20	Y	
21	Y	
22	BR	
23	L	
24	W	
25	R	
26	SHIELD	
27	B	
28	W	
29	SHIELD	
30	W	
31	B	
32	W	
33	Y	
34	G	
35	L	
36	L	
37	SHIELD	
38	R	
39	B	
40	W	
41	Y	
42	B	
43	G	
44	L	
45	Y	
46	L	
47	GR	
48	Y	
49	BR	
50	L	
51	L	
52	W	
53	R	
54	SHIELD	
55	B	
56	W	
57	SHIELD	
58	B	
59	W	
60	Y	
61	Y	
62	BR	
63	L	
64	W	
65	R	
66	SHIELD	
67	B	
68	W	
69	SHIELD	
70	W	
71	B/R	
72	BR	
73	L	
74	S8	
75	S8	
76	V	

78	LG	-
79	GR	-
80	BR	-
81	SR	-
82	V	-
83	G	-
84	V	-
85	G	-
86	Y	-
87	LG	-
88	L	-

Connector No.	B19
Connector Name	WIRE TO WIRE
Connector Type	NS89FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	
2	P	
3	R	
4	G	

Connector No.	B28
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W/R	-
3	B/R	-
4	SHIELD	-
5	B/W	-
6	L	-
7	Y	-
8	B/W	-
9	R	-
10	W	-
11	W	-
12	GR	-

Connector No.	B45
Connector Name	SLIDING DOOR CONTROL UNIT LH
Connector Type	TH32FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	MAIN SW
2	G	KNOB LOCK
3	R	A-SGN
4	L	HALF LATCH
5	P	IGN
6	W	BUZZER
7	P	CAN-L
8	P	CAN-H
9	L	ENCODER POWER
10	P	ELEC B
11	GR	ONE TOUCH OPEN SW
12	R	NEUTRAL SW
13	W	PEELER SW
14	W	FULL SW
15	P	DRIVER SW
16	G	B-SGN
17	W	HANDLE
18	B	SW GND
19	G	TOUCH SENS

JRMWG3300GB

CAN SYSTEM


26	L	ENCODER GND
27	B	RR DOOR SW
28	GR	RR DOOR SW

Connector No.	B57
Connector Name	SIDE RADAR LH
Connector Type	AAC06FB-WP-3P

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	GROUND
3	Y	BSW COMA-L
4	L	BSW COMA-H
5	V	IGNITION
6	W	BSW INDICATOR

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	GR	-
3	SB	-
4	BN	-
5	V	-
6	LG	-
7	B	-
9	L	-
11	L	-
12	P	-

13	L	-
14	LG	-
15	LG	-
16	GR	-

Connector No.	B225
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	P	-
5	G	-
9	L	-
10	P	-
11	SB	-
12	GR	-
13	R	-
14	L	-
15	L	-
16	Y	-

Connector No.	B228
Connector Name	WIRE TO WIRE
Connector Type	NS30MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
6	W	-
8	P	-

Connector No.	B247
Connector Name	SLIDING DOOR CONTROL UNIT RH
Connector Type	TH32FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	MAIN SW
3	P	KNOB LOCK
4	R	A-SIGN
5	G	HALF LATCH
6	L	IGN
8	P	BUZZER
9	B	CAN-L
10	B	CAN-H
11	G	ENGINEER POWER
12	Y	ELEC B
14	GR	ONE TOUCH OPEN SW
15	R	NEUTRAL SW
18	W	FULL SW
19	G	DRIVER SW
21	P	B-SIGN
22	W	HANDLE
23	B	SW GND
24	G	TOUCH SENS
26	GR	ENCODER GND
27	GR	GD LOGIC
28	GR	RR DOOR SW

Connector No.	B310
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	W	-
4	SHIELD	-
5	B	-
6	L	-
7	Y	-
8	B	-
9	R	-
10	W	-
11	P	-
12	LG	-

Connector No.	B317
Connector Name	SIDE RADAR RH
Connector Type	AAC06FB-WP-3P



Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	GROUND
3	Y	BSW COMA-L
4	L	BSW COMA-H
5	G	IGNITION
6	W	BSW INDICATOR

JRMWG3301GB

CAN SYSTEM

Connector No.	E53D
Connector Name	WIRE TO WIRE
Connector Type	NS18MW-CS



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	R/G	-
3	R/W	-
4	W/R	-
5	W/L	-
6	Y	-
7	LG	-
8	P	-
9	P	-
11	R	-
12	V	-
13	R/Y	-
14	G	-
15	P	-
16	L/P	-

Connector No.	B552
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW-NH



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24
25	26	27	28								

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/Y	CAN-H
2	R	UART (TX/RX)
4	R/L	PULSE (RECLINER)
6	R/W	ADDRESS 2
7	R/G	IND-2
8	SB	SLIDE SW (BACKWARD)

8	L	RECLINER SW (BACKWARD)
10	L/B	FRONT LIFTER SW (DOWNWARD)
11	L/W	REAR LIFTER SW (DOWNWARD)
12	L/R	SENSOR POWER SUPPLY
17	V	CAN-L
18	B/W	PULSE (SLIDE)
19	B/R	PULSE (FRONT LIFTER)
20	B/L	PULSE (REAR LIFTER)
22	W/L	ADDRESS 1
23	W/R	IND-1
24	V/W	SLIDE SW (FORWARD)
25	Y/B	RECLINER SW (FORWARD)
26	Y/R	FRONT LIFTER SW (UPWARD)
27	Y/L	REAR LIFTER SW (UPWARD)
28	G	SET SW

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK18MGY-TV



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	G	-
3	Y	-
4	V	-
5	GR	-
6	V	-
7	G	-
8	P	-
9	R	-
10	W	-
11	W	-
12	G	-
13	SB	-
14	B	-
15	W	-
16	R	-

Connector No.	E11
Connector Name	RELAY INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH



42	41	40	39
46	45	44	43

Terminal No.	Color Of Wire	Signal Name [Specification]
40	P	-
41	B	-
42	SB	-
43	LG	-
44	W	-
45	Y	-
46	O	-

Connector No.	E19
Connector Name	ECM
Connector Type	PH24FB-R2S-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color Of Wire	Signal Name [Specification]
121	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
123	P	CAN COMMUNICATION LINE (CAN-L)
124	L	CAN COMMUNICATION LINE (CAN-H)
125	W	SENSOR POWER SUPPLY
126	V	IGNITION SWITCH
133	BR	ASCD STEERING SWITCH
135	BR	SENSOR GROUND
139	SB	STOP LAMP SWITCH
140	BR	BRAKE PEDAL POSITION SWITCH
141	V	EVAP CANISTER VENT CONTROL VALVE
142	GR	SENSOR POWER SUPPLY

143	O	ACCELERATOR PEDAL POSITION SENSOR 2
144	O	SENSOR GROUND
145	C	POWER SUPPLY FOR ECM
146	P	SENSOR POWER SUPPLY
147	B	ECM GROUND
148	V	SENSOR GROUND
149	B	ECM GROUND
150	W	ACCELERATOR PEDAL POSITION SENSOR 1
151	B	SENSOR GROUND
152	B	ECM GROUND

Connector No.	E34
Connector Name	POWER STEERING CONTROL MODULE
Connector Type	FEA04FB-TH42-LG



4	5	6	7	8
---	---	---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
5	Y	IGN
7	P	CAN-L
8	L	CAN-H

Connector No.	E38
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	AEZ22FB-AJ24-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	VALVE BATTERY
2	Y	RR LH WHEEL SENSOR SIGNAL
3	L	RR LH WHEEL SENSOR POWER SUPPLY
4	G	G SENSOR POWER SUPPLY
5	B	FR RH WHEEL SENSOR POWER SUPPLY

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	Wire	Signal Name [Specification]
6	W	FR RH WHEEL SENSOR SIGNAL
8	V	FR LH WHEEL SENSOR SIGNAL
9	LG	FR LH WHEEL SENSOR SIGNAL
10	L	FR LH WHEEL SENSOR POWER SUPPLY
11	B	G SENSOR GND
12	V	RR RH WHEEL SENSOR POWER SUPPLY
13	B	RR RH WHEEL SENSOR SIGNAL
14	G	GROUND
15	SB	MOTOR BATTERY
19	Y	STOP LAMP SWITCH SIGNAL
20	GR	G SENSOR SIGNAL (+)
21	P	IGN
22	BR	CAN-L
23	L	VDC OFF SWITCH SIGNAL
24	G	CAN-H
25	B	G SENSOR SIGNAL (-)
29	B	GROUND


Connector No.	Wire	Signal Name [Specification]
E105		
WIRE TO WIRE		
TH10MM-CSD-M3		



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	W	
3	B	
4	R	
6	LG	
7	R	
8	GR	
9	V	
10	BR	
11	Y	
12	O	
13	W	
14	L	
15	P	
31	GR	
32	V	
37	BR	


Terminal No.	Color Of Wire	Signal Name [Specification]
38	G	
39	V	
40	P	
41	L	
42	LG	
43	O	
45	P	
46	SB	
47	V	
49	L	
51	BR	
52	G	
53	B	
54	O	
55	GR	
56	SHIELD	
61	P	
62	G	
63	W/L	
64	W/R	
66	W	
67	Y	
69	R	
71	R	
72	L	
73	GR	
74	Y	
75	SB	
76	P	
77	G	
78	O	
80	R	
81	L	
82	LG	
83	R	

Connector No.	Wire	Signal Name [Specification]
F23		
TCM		
RH40FB-B2B-L-RH		

 


Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	L RANGE SW
3	O	RANGE SW
5	P/L	N RANGE SW
6	P/B	R RANGE SW
7	BR/W	P RANGE SW
11	V	SENSOR GROUND
12	V	CVT FLUID TEMPERATURE SENSOR
14	W	G SENSOR
16	V/W	SECONDARY PRESSURE SENSOR
17	LG	PRIMARY PRESSURE SENSOR
23	P	CAN-L
24	BR	INPUT SPEED SENSOR
26	L/O	SENSOR POWER
30	R/Y	LINE PRESSURE SOLENOID VALVE
33	L	CAN-H
34	GR	OUTPUT SENSOR
35	LG	PRIMARY SPEED SENSOR
37	L/W	SELECT SOLENOID VALVE
38	V/R	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	W/B	SECONDARY PRESSURE SOLENOID VALVE
40	B/R	PRIMARY PRESSURE SOLENOID VALVE
41	B	GROUND
42	B	GROUND
45	LG	BATTERY POWER SUPPLY
46	LG	BATTERY POWER SUPPLY
47	Y	IGNITION POWER SUPPLY
48	Y	IGNITION POWER SUPPLY

Connector No.	Wire	Signal Name [Specification]
F123		
WIRE TO WIRE		
TK18FCY-IV		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	
2	V	
3	G/R	
4	P/B	
5	R	
6	L/R	
7	P	
8	P	
9	W/R	
10	Y/B	
11	BR/W	
12	BR	
13	G	
14	B	
15	L/O	
16	R	

Connector No.	Wire	Signal Name [Specification]
M4		
DATA LINK CONNECTOR		
BD18FW		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	
4	GR	
5	GR	
6	L	

CAN SYSTEM

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM


9	R	-
11	SB	-
14	P	-
16	P	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH10PW-CS10-M3




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	W	-
3	B	-
4	R	-
6	G	-
7	R	-
8	G	-
9	B	-
10	B	-
11	W	-
12	LG	- [Without automatic drive positioner]
13	G	- [Without automatic drive positioner]
14	Y	- [Without automatic drive positioner]
15	P	- [Without automatic drive positioner]
31	R	-
32	LG	-
37	BR	- [Without automatic drive positioner]
38	R	-
39	BE	- [Without automatic drive positioner]
40	P	- [Without automatic drive positioner]
41	L	-
42	G	-
43	W	-
45	P	-
46	V	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Type	TH40PW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	BATTERY POWER SUPPLY [With automatic drive positioner]
2	G	IGNITION SIGNAL [Without automatic drive positioner]
3	Y	IGNITION SIGNAL [With automatic drive positioner]
4	B	GROUND
5	B	ILLUMINATION CONTROL SIGNAL [Without automatic drive positioner]
6	B/P	ILLUMINATION CONTROL SIGNAL [With automatic drive positioner]
8	G	TRIP RESET SWITCH SIGNAL [Without automatic drive positioner]
8	SB	TRIP RESET SWITCH SIGNAL [With automatic drive positioner]
10	P	METER CONTROL SWITCH GROUND
11	G	ENTER SWITCH SIGNAL
12	BR	SELECT SWITCH SIGNAL [Without automatic drive positioner]
12	R	SELECT SWITCH SIGNAL [With automatic drive positioner]
13	Y	ILLUMINATION CONTROL SIGNAL [Without automatic drive positioner]
13	Y	ILLUMINATION CONTROL SIGNAL [With automatic drive positioner]
14	G	ILLUMINATION CONTROL SIGNAL [Without automatic drive positioner]
14	V	ILLUMINATION CONTROL SIGNAL [With automatic drive positioner]
15	BR	AIR BAG SIGNAL
16	L	ENGINE COOLANT TEMPERATURE SIGNAL
18	L	AMBIENT SENSOR SIGNAL [Without automatic drive positioner]
18	LG	AMBIENT SENSOR SIGNAL [With automatic drive positioner]
19	R	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
20	G	AMBIENT SENSOR GROUND [Without automatic drive positioner]
20	Y	AMBIENT SENSOR GROUND [With automatic drive positioner]
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	B	FUEL LEVEL SENSOR GROUND
25	BR	ALTERNATOR SIGNAL [Without automatic drive positioner]
25	W	ALTERNATOR SIGNAL [With automatic drive positioner]
26	BR	PARKING BRAKE SWITCH SIGNAL
27	BE	BRAKE FLUID LEVEL SWITCH SIGNAL [Without automatic drive positioner]
27	Y	BRAKE FLUID LEVEL SWITCH SIGNAL [With automatic drive positioner]
28	V	SECURITY SIGNAL
29	G	WASHER LEVEL SWITCH SIGNAL


Connector No.	M20
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH40FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	P	-
4	G	-
5	L	-

31	SB	VEHICLE SPEED SIGNAL (9-PULSE)
32	P	OVERDRIVE CONTROL SWITCH SIGNAL
34	O	FUEL LEVEL SENSOR SIGNAL
35	P	DATA BUS SIGNAL (CAN-OPEN) [Without automatic drive positioner]
35	BR	DATA BUS SIGNAL (CAN-OPEN) [With automatic drive positioner]
36	BR	PASSENGER SEAT BELT WARNING SIGNAL

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-
5	L	-
6	P	-
7	B	-
8	Y	-
9	L	-
10	B	-
11	GR	-
12	P	-
13	G	-
14	LG	-
15	SB	-
16	GR	-
17	P	-
18	GR	-
19	G	-
20	Y	-
21	G	-
22	Y	-
23	GR	-
24	B	-
25	SHIELD	-
26	GR	-
27	B	-
28	W	-
30	LG	-
31	SB	-

JRMWG3304GB

CAN SYSTEM


< WIRING DIAGRAM >

[CAN]

CAN SYSTEM


Terminal No.	Color Of Wire	Signal Name [Specification]
33	P	-
34	LG	-
35	LG	-
36	P	-
37	L	-
38	BE	-
39	LG	-
40	SB	-

Connector No.	Connector Name	WIRE TO WIRE
M59	AIR BAG DIAGNOSIS SENSOR UNIT	
M28F1-EX		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BE	IGN
2	GR	GROUND
3	LG	DRT (-)
4	Y	DRT 1 (-)
5	V	DRT 2 (-)
6	V	AS1 (-)
7	LG	AS1 (-)
8	BR	AS2 (-)
9	Y	AS2 (-)
18	B	EC2S (+)
19	W	EC2S (-)
22	GR	GROUND
23	R	AIRBAG W/L
24	LG	SEATBELT W/L
25	LG	OUTOFF TELLTALE
51	W	SIDE SENS RH2+
52	B	SIDE SENS RH2+
53	W	SIDE SENS LH2+
54	W	SIDE SENS LH2+
59	L	DEPLOYMENT INFORMATION OUTPUT
60	P	CAN-L

Connector No.	Connector Name	WIRE TO WIRE
M51	BSW CONTROL MODULE	
TH16FW-NH		

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	SSW SW
2	P	SSW SW
6	B	SSW SW
7	L	SSW SW
8	Y	SSW SW
14	L	BSW COMM-L
15	P	CAN-L
16	G	IGNITION

Connector No.	Connector Name	WIRE TO WIRE
M77	WIRE TO WIRE	
TH80FW-GS19		



Terminal No.	Color Of Wire	Signal Name [Specification]
10	P	-
12	BE	-
13	W	-
15	R	-
29	W	-
30	P	-
37	BE	-
38	B	-
39	W	-
39	B	-
39	W	-

Connector No.	Connector Name	WIRE TO WIRE
M79	WIRE TO WIRE	
TH16FW-NH		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-
3	B	-
5	BR	-
9	L	-
10	P	-
11	W	-
12	R	-
13	BE	-
14	W	-
15	G	-
16	P	-

Connector No.	Connector Name	WIRE TO WIRE
M/21	BCM (BODY CONTROL MODULE)	
TH40FB-NH		



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	REAR WINDOW DEF RELAY CONT
2	W	COMBI SW INPUT 1
3	G	COMBI SW INPUT 2
4	BE	COMBI SW INPUT 3
5	G	COMBI SW INPUT 4
6	W	COMBI SW INPUT 1
7	W	KEY CYL UNLOCK SW
8	GR	PW SW COMM [With auto A/C]

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

JRMWG3305GB

CAN SYSTEM

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM

Terminal No.	Wire	Signal Name [Specification]
1	W	KEY CYL LOCK SW (W/L, manual A/C)
2	GR	STOP LAMP SW
12	GR	DOOR LK & UNLK SW LOCK
13	BR	DOOR LK & UNLK SW UNLOCK
14	L	OPTICAL SENS
15	W	REAR WINDOW DEF SW
16	Y	DIMMER
17	O	SENS PWR SPLY
18	R	RECEIV/SENS GND
21	GR	NATS ANT AMP
23	W	SECURITY IND CONT
24	B	DONGLE LINK
25	P	NATS ANT AMP
27	O	A/C ON
28	BR	BLUETOOTH ON
29	P	NAZARE SW
30	L	BK DOOR CNTR SW
31	G	DR DOOR UNLK SENS
32	R	COMBI SW OUTPUT 5
33	W	COMBI SW OUTPUT 4
34	P	COMBI SW OUTPUT 3
35	GR	COMBI SW OUTPUT 2
36	R	COMBI SW OUTPUT 1
37	G	DETENT SW
38	BE	RECEIVER COMM
39	L	CAN-H
40	P	CAN-L

Connector No.	M157
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-NH



4	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Wire	Signal Name [Specification]
1	W	—
2	B	—
3	SHIELD	—
4	SHIELD	—
5	SB	—
6	BR	—
7	Y	—
8	LG	—

9	B	—
10	L	—
11	W	—
12	P	—
13	BE	—
14	LG	—
15	SB	—
16	GR	—
17	V	—
18	O	—
19	G	—
20	SB	—
21	B	—
22	O	—
23	B	—
24	BE	—
25	SHIELD	—
26	B	—
27	R	—
28	W	—
29	LG	—
30	LG	—
31	SB	—
33	BE	—
34	W	—
35	R	—
36	P	—
37	L	—
38	P	—
39	L	—
40	V	—

Connector No.	M186
Connector Name	AV CONTROL UNIT
Connector Type	TH432FW-NH



75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	V	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	CAN-L

81	L	CAN-H
82	R	SW GND
83	R	SOUND SIGNAL (+)
88	W	SOUND SIGNAL (-)
89	BR	HEADPHONE SOUND SIGNAL RH (+)
90	Y	HEADPHONE SOUND SIGNAL RH (-)
92	P	VEHICLE SPEED SIGNAL (8-PULSE)
93	R	PARKING BRAKE
94	W	REVERSE
95	G	IGNITION
96	W	DISK EJECT SIGNAL
102	W	AUX SOUND SIGNAL GND
103	B	AUX SOUND SIGNAL LH (+)
104	R	AUX SOUND SIGNAL RH (+)
105	R	AUX SOUND SIGNAL LH (-)
106	P	HEADPHONE SOUND SIGNAL LH (+)
107	L	HEADPHONE SOUND SIGNAL LH (-)

Connector No.	M183
Connector Name	AV CONTROL UNIT
Connector Type	TH432FW-NH



79	80	81	82	83	84	85	86	87	88	89	90	91	92
----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Wire	Signal Name [Specification]
85	R	PARKING BRAKE
87	W	COMPOSITE IMAGE SIGNAL GND
88	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	SHIELD
72	W	MICROPHONE VCC
73	B	COMBI CONT->DISP
74	P	CAN-L
75	LG	AV COMM (L)
76	LG	AV COMM (L)
77	V	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	IGNITION
81	W	REVERSE
82	P	VEHICLE SPEED SIGNAL (8-PULSE)
83	SHIELD	SHIELD
84	B	COMPOSITE IMAGE SYNC
87	B	MICROPHONE SIGNAL
88	SHIELD	SHIELD

89	W	COMM (RSP->CONT)
90	L	CAN-H
91	SB	AV COMM (H)
92	V	AV COMM (H)

Connector No.	M253
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH40FW-NH



4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Wire	Signal Name [Specification]
3	SHIELD	SHIELD
4	B	CAMERA IMAGE SIGNAL
5	B	FRONT CAMERA GROUND
6	R	FRONT CAMERA POWER SUPPLY
7	SHIELD	SHIELD
8	W	FRONT CAMERA IMAGE SIGNAL
9	B	SIDE CAMERA PASSENGER SIDE GROUND
10	R	SIDE CAMERA PASSENGER SIDE POWER SUPPLY
11	SHIELD	SHIELD
12	W	SIDE CAMERA PASSENGER SIDE IMAGE SIGNAL
13	B	SIDE CAMERA DRIVER SIDE GROUND
14	R	SIDE CAMERA DRIVER SIDE POWER SUPPLY
15	SHIELD	SHIELD
16	W	SIDE CAMERA DRIVER SIDE IMAGE SIGNAL
17	B	REAR CAMERA GROUND
18	R	REAR CAMERA POWER SUPPLY
19	SHIELD	SHIELD
20	W	REAR CAMERA IMAGE SIGNAL
24	P	CAN-L
26	L	CAN-H
32	LG	REVERSE SIGNAL
39	B	GROUND
40	G	IGNITION SIGNAL

JRMWG3306GB

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:0000000011325376

NOTE:Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#) for how to use interview sheet.

CAN Communication System Diagnosis Interview Sheet	
Date received:	
Type:	VIN No.:
Model:	
First registration:	Mileage:
CAN system type:	
Symptom (Results from interview with customer)	
Condition at inspection	
Error symptom : Present / Past	

SKIB8898E

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DTC/CIRCUIT DIAGNOSIS

MALFUNCTION AREA CHART

CAN Communication Circuit

INFOID:000000011325377

MAIN LINE

Malfunction area	Reference
Main line between power steering control module and ABS actuator and electric unit (control unit)	LAN-48, "Diagnosis Procedure"
Main line between ABS actuator and electric unit (control unit) and data link connector	LAN-49, "Diagnosis Procedure"
Main line between data link connector and air bag diagnosis sensor unit	LAN-50, "Diagnosis Procedure"
Main line between air bag diagnosis sensor unit and sliding door control unit RH	LAN-51, "Diagnosis Procedure"
Main line between sliding door control unit RH and sliding door control unit LH	LAN-52, "Diagnosis Procedure"
Main line between sliding door control unit RH and driver seat control unit	LAN-53, "Diagnosis Procedure"
Main line between driver seat control unit and sliding door control unit LH	LAN-54, "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
ECM branch line circuit	LAN-55, "Diagnosis Procedure"
Power steering control module branch line circuit	LAN-56, "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-57, "Diagnosis Procedure"
TCM branch line circuit	LAN-58, "Diagnosis Procedure"
BCM branch line circuit	LAN-59, "Diagnosis Procedure"
Data link connector branch line circuit	LAN-60, "Diagnosis Procedure"
Combination meter branch line circuit	LAN-61, "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-62, "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-63, "Diagnosis Procedure"
AV control unit branch line circuit	LAN-64, "Diagnosis Procedure"
Around view monitor control unit	LAN-65, "Diagnosis Procedure"
BSW control module branch line circuit	LAN-66, "Diagnosis Procedure"
Sliding door control unit RH branch line circuit	LAN-67, "Diagnosis Procedure"
Driver seat control unit branch line circuit	LAN-68, "Diagnosis Procedure"
Sliding door control unit LH branch line circuit	LAN-69, "Diagnosis Procedure"
Automatic back door control module branch line circuit	LAN-70, "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-71, "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
CAN communication circuit	LAN-74, "Diagnosis Procedure"

BSW Communication Circuit

INFOID:000000011325378

BRANCH LINE

Malfunction area	Reference
Side radar LH branch line circuit	LAN-72, "Diagnosis Procedure"
Side radar RH branch line circuit	LAN-73, "Diagnosis Procedure"

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

SHORT CIRCUIT OR OPEN CIRCUIT

Malfunction area	Reference
BSW communication circuit	LAN-76. "Diagnosis Procedure"

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000011325379

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000011325380

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000011325381

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
- Harness connector E105

4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >>> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:0000000011325382

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

LAN

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011325383

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit LH.
2. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B45	10	Existed
	1		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B19 and sliding door control unit LH.

MAIN LINE BETWEEN ASD-R AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ASD-R AND ADP CIRCUIT

Diagnosis Procedure

INFOID:0000000011325384

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B89 and B530.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B89	13	Existed
	1		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the driver seat control unit.

NO >> Repair the main line between the harness connectors B19 and B89.

MAIN LINE BETWEEN ADP AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ADP AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011325385

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors B530 and B89
 - Sliding door control unit LH
4. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B89	13	B45	10	Existed
	12		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B89 and the sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325386

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325387

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the power steering control module branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325388

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325389

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325390

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325391

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325392

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325393

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325394

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325395

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M157
 - Harness connector M46

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M186	81	80	Approx. 54 – 66

- Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M193	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio with separate display: [AV-201, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio without navigation: [AV-354, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation: [AV-570, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- Base audio with separate display: [AV-238, "Removal and Installation"](#)
 - BOSE audio without navigation: [AV-391, "Removal and Installation"](#)
 - BOSE audio with navigation: [AV-600, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325396

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M253	26	24	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-572, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-621, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BSW BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325397

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BSW control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BSW control module.
2. Check the resistance between the BSW control module harness connector terminals.

BSW control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M61	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BSW control module branch line (CAN communication circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BSW control module. Refer to [DAS-76, "BSW CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BSW control module. Refer to [DAS-85, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BSW control module branch line (CAN communication circuit side).

NO >> Repair the power supply and the ground circuit.

ASD-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325398

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325399

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B530
 - Harness connector B89

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver seat control unit.
2. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B552	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the driver seat control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-58, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-111, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ASD-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ASD-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325400

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit LH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325401

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the automatic back door control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of automatic back door control module.
2. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B8	26	25	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the automatic back door control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-238, "AUTOMATIC BACK DOOR CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-488, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325402

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011325403

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B57	4	3	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-76, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-86, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011325404

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - Harness connector B310
 - Harness connector B28

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B317	4	3	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar RH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-77, "SIDE RADAR RH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-86, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011325405

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

BSW COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011325406

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit has no malfunction.

Is the CAN communication circuit normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BSW control module
 - Side radar LH
 - Side radar RH
 - Harness connector M77
 - Harness connector B11
 - Harness connector B28
 - Harness connector B310

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - BSW control module
 - Side radar RH
2. Check the continuity between the BSW control module harness connector and the side radar RH harness connector.

BSW control module harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M61	7	B317	4	Existed
	8		3	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the BSW control module branch line (BSW communication circuit side).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the connector of side radar LH.
2. Check the continuity between the BSW control module harness connector terminals.

BSW control module harness connector			Continuity
Connector No.	Terminal No.		
M61	7	8	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the BSW control module harness connector and the ground.

BSW COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BSW control module harness connector		Ground	Continuity
Connector No.	Terminal No.		
M61	7		Not existed
	8		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the BSW control module and the side radar RH.
2. Check the resistance between the BSW control module terminals.

BSW control module		Resistance (Ω)
Terminal No.		
7	8	Approx. 108 – 132

3. Check the resistance between the side radar RH terminals.

Side radar RH		Resistance (Ω)
Terminal No.		
4	3	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the BSW control module and/or the side radar RH.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>Replace the side radar LH.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

LAN

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506499

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000011506500

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000011506501

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
 - Harness connector E105
4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >>> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506502

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506503

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the power steering control module branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506504

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506505

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506506

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506507

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506508

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506509

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506510

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506511

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000011506513

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
 NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506514

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

LAN

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000011506515

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000011506516

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
 - Harness connector E105
4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

LAN

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:000000011506517

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:0000000011506518

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit LH.
2. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B45	10	Existed
	1		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B19 and sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506519

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506520

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the power steering control module branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT**Diagnosis Procedure**

INFOID:000000011506521

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506522

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506523

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506524

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

LAN

M&A BRANCH LINE CIRCUIT**Diagnosis Procedure**

INFOID:000000011506525

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506526

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506527

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

ASD-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506528

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ASD-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ASD-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506529

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).

YES (Past error)>>Error was detected in the sliding door control unit LH branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506530

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011506531

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506532

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000011506533

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000011506534

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
 - Harness connector E105
4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >>> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:0000000011506535

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

LAN

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011506536

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit LH.
2. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B45	10	Existed
	1		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B19 and sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506537

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506538

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the power steering control module branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506539

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506540

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506541

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506542

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506543

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506544

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506545

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506546

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M157
 - Harness connector M46

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M186	81	80	Approx. 54 – 66

- Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M193	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio with separate display: [AV-201, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio without navigation: [AV-354, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation: [AV-570, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- Base audio with separate display: [AV-238, "Removal and Installation"](#)
 - BOSE audio without navigation: [AV-391, "Removal and Installation"](#)
 - BOSE audio with navigation: [AV-600, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

ASD-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506548

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ASD-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506547

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).
 YES (Past error)>>Error was detected in the sliding door control unit LH branch line.
 NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506549

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011506550

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506551

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000011506552

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000011506553

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
 - Harness connector E105
4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >>> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:0000000011506554

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

LAN

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011506555

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit LH.
2. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B45	10	Existed
	1		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B19 and sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506556

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506557

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the power steering control module branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506558

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506559

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506560

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506561

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506562

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506563

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506564

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506566

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

ASD-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ASD-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506567

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PWBD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506568

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the automatic back door control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of automatic back door control module.
2. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B8	26	25	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the automatic back door control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-238, "AUTOMATIC BACK DOOR CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-488, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506569

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011506570

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506571

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000011506572

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000011506573

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
- Harness connector E105

4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >>> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:0000000011506574

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

LAN

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN ASD-R AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011506575

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit LH.
2. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B45	10	Existed
	1		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B19 and sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506628

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506629

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the power steering control module branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506630

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506631

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506632

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506633

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506634

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506635

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506636

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506637

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M157
 - Harness connector M46

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M186	81	80	Approx. 54 – 66

- Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M193	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio with separate display: [AV-201, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio without navigation: [AV-354, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation: [AV-570, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- Base audio with separate display: [AV-238, "Removal and Installation"](#)
 - BOSE audio without navigation: [AV-391, "Removal and Installation"](#)
 - BOSE audio with navigation: [AV-600, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

ASD-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506640

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ASD-L BRANCH LINE CIRCUIT**Diagnosis Procedure**

INFOID:0000000011506643

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).

YES (Past error)>>Error was detected in the sliding door control unit LH branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506644

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the automatic back door control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of automatic back door control module.
2. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B8	26	25	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the automatic back door control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-238, "AUTOMATIC BACK DOOR CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-488, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the automatic back door control module branch line.
NO >> Repair the power supply and the ground circuit.

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506646

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000011506648

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN EPS AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000011506578

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Power steering control module
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the power steering control module harness connector and the ABS actuator and electric unit (control unit) harness connector.

Power steering control module harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E34	8	E36	23	Existed
	7		21	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the power steering control module and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the power steering control module and the ABS actuator and electric unit (control unit).

LAN

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000011506579

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E105
 - Harness connector M11

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E105 and M11
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	23	E105	14	Existed
	21		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E105.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M11	14	M4	6	Existed
	15		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M11 and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000011506580

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.

With automatic slide door

- Harness connector M79
- Harness connector B225

Without automatic slide door

- Harness connector M11
 - Harness connector E105
4. Check the continuity between the data link connector and the harness connector.
- With automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

- Without automatic slide door

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M11	41	Existed
	14		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Repair the main line between the data link connector and the air bag diagnosis sensor unit.

LAN

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN A-BAG AND ASD-R CIRCUIT

Diagnosis Procedure

INFOID:000000011506581

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M79
 - Harness connector B225

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M79 and B225.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M79	9	Existed
	14		10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the air bag diagnosis sensor unit and the harness connector M79.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of sliding door control unit RH.
2. Check the continuity between the harness connector and the sliding door control unit RH harness connector.

Harness connector		Sliding door control unit RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B225	9	B247	10	Existed
	10		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the sliding door control unit RH.

NO >> Repair the main line between the harness connector B225 and the sliding door control unit RH.

MAIN LINE BETWEEN ASD-R AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN ASD-R AND ADP CIRCUIT

Diagnosis Procedure

INFOID:0000000011506582

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B228
 - Harness connector B19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Sliding door control unit RH
 - Harness connectors B228 and B19
2. Check the continuity between the sliding door control unit RH harness connector and the harness connector.

Sliding door control unit RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B247	10	B228	2	Existed
	9		1	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the sliding door control unit RH and the harness connector B228.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B89 and B530.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B19	2	B89	13	Existed
	1		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the sliding door control unit RH and the driver seat control unit.

NO >> Repair the main line between the harness connectors B19 and B89.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN ADP AND ASD-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN ADP AND ASD-L CIRCUIT

Diagnosis Procedure

INFOID:000000011506583

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors B530 and B89
 - Sliding door control unit LH
4. Check the continuity between the harness connector and the sliding door control unit LH harness connector.

Harness connector		Sliding door control unit LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B89	13	B45	10	Existed
	12		9	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the sliding door control unit LH.

NO >> Repair the main line between the harness connector B89 and the sliding door control unit LH.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506584

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E19	124	123	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-172, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the [EC-512, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506585

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the power steering control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of power steering control module.
2. Check the resistance between the power steering control module harness connector terminals.

Power steering control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E34	8	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power steering control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the power steering control module. Refer to [STC-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the power steering oil pump assembly. Refer to [ST-32, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the power steering control module branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506586

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	23	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-101, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-123, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506587

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F123
 - Harness connector E6

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to [TM-190, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506588

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M121	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-91, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-98, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506589

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506590

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-71, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-90, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506591

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-40, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506592

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506593

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M157
 - Harness connector M46

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M186	81	80	Approx. 54 – 66

- Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M193	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio with separate display: [AV-201, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio without navigation: [AV-354, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation: [AV-570, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- Base audio with separate display: [AV-238, "Removal and Installation"](#)
 - BOSE audio without navigation: [AV-391, "Removal and Installation"](#)
 - BOSE audio with navigation: [AV-600, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506594

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M253	26	24	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-572, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-621, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BSW BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506595

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BSW control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BSW control module.
2. Check the resistance between the BSW control module harness connector terminals.

BSW control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M61	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BSW control module branch line (CAN communication circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BSW control module. Refer to [DAS-76, "BSW CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BSW control module. Refer to [DAS-85, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BSW control module branch line (CAN communication circuit side).

NO >> Repair the power supply and the ground circuit.

ASD-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ASD-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506596

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit RH.
2. Check the resistance between the sliding door control unit RH harness connector terminals.

Sliding door control unit RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B247	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Replace the body No. 2 harness.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit RH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit RH. Refer to [DLK-493, "RH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ADP BRANCH LINE CIRCUIT**Diagnosis Procedure**

INFOID:000000011506597

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B530
 - Harness connector B89

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver seat control unit.
2. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B552	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the driver seat control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-58, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-111, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ASD-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ASD-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506598

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the sliding door control unit LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sliding door control unit LH.
2. Check the resistance between the sliding door control unit LH harness connector terminals.

Sliding door control unit LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B45	10	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the sliding door control unit LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sliding door control unit LH. Refer to [DLK-239, "SLIDING DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sliding door control unit LH. Refer to [DLK-493, "LH : Removal and Installation"](#).
YES (Past error)>>Error was detected in the sliding door control unit LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000011506599

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the automatic back door control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of automatic back door control module.
2. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B8	26	25	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the automatic back door control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-238, "AUTOMATIC BACK DOOR CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-488, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506600

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M11
 - Harness connector M77 (With automatic sliding door)
 - Harness connector B11 (With automatic sliding door)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E11	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-35. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506601

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B57	4	3	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-76, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-86, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000011506602

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - Harness connector B310
 - Harness connector B28

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B317	4	3	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar RH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-77, "SIDE RADAR RH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-86, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011506603

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
124	123	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

BSW COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000011506604

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit has no malfunction.

Is the CAN communication circuit normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BSW control module
 - Side radar LH
 - Side radar RH
 - Harness connector M77
 - Harness connector B11
 - Harness connector B28
 - Harness connector B310

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - BSW control module
 - Side radar RH
2. Check the continuity between the BSW control module harness connector and the side radar RH harness connector.

BSW control module harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M61	7	B317	4	Existed
	8		3	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the BSW control module branch line (BSW communication circuit side).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the connector of side radar LH.
2. Check the continuity between the BSW control module harness connector terminals.

BSW control module harness connector			Continuity
Connector No.	Terminal No.		
M61	7	8	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the BSW control module harness connector and the ground.

BSW COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

BSW control module harness connector		Ground	Continuity
Connector No.	Terminal No.		
M61	7		Not existed
	8		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the BSW control module and the side radar RH.
2. Check the resistance between the BSW control module terminals.

BSW control module		Resistance (Ω)
Terminal No.		
7	8	Approx. 108 – 132

3. Check the resistance between the side radar RH terminals.

Side radar RH		Resistance (Ω)
Terminal No.		
4	3	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the BSW control module and/or the side radar RH.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>Replace the side radar LH.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

LAN