 


EXTERNAL TEMPERATURE INDICATOR

DG/RETROE/NINAV3/RAD08

X83

02




NO
A2

BCP4-RG

EPBCP4A

BCP4-RG

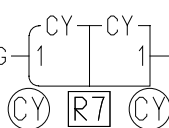

BCP4-RG

EPBCP4A

BCP4-RG

NO

 
46BL-VE

46BM-VE

46BB-MA
46BC-GR
46AD-BJ

10

M-NO





NO


2 46BG-VI
3 46L-OR
4 46K-VE
5 46G-BA
6 46H-VI
7 46BH-BJ
9 46BK-GR
10 46Y-BA
12 58D-OR
15 46M-MA
16 46N-SA

NO

 2
3
4
5
6
7
9
10
12
15
16

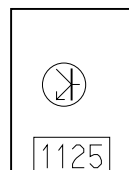


NO
3
4
7

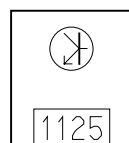

CY
16
17

47C-VE
47D-VI

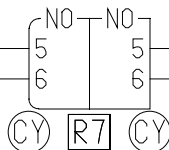


47C-MA
47D-OR

NO
C5
C6




47C-OR
47D-VI

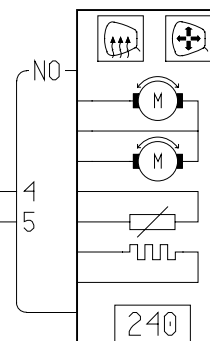


NO

4
5

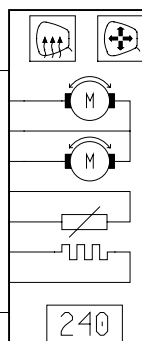

240

 3-77





EXTERNAL TEMPERATURE INDICATOR

DG/RETROE/SSNAV/RAD08

X83

 02

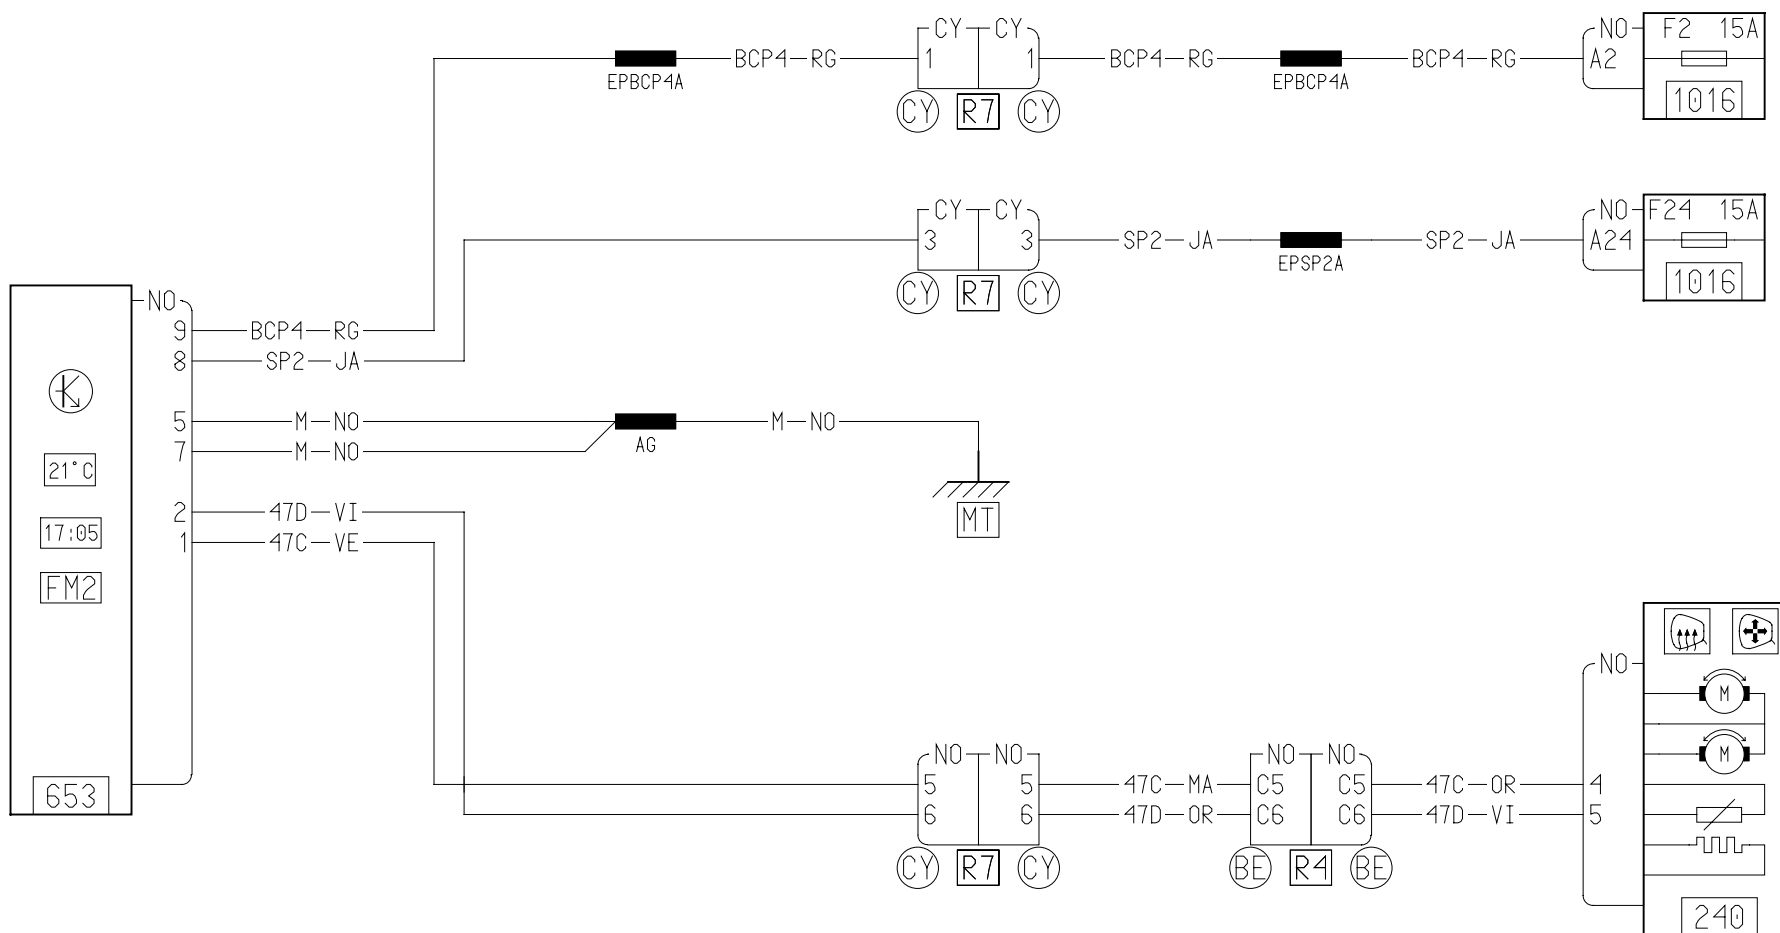





EXTERNAL TEMPERATURE INDICATOR

DD/RETROE/SSNAV/RAD08

X83

 02

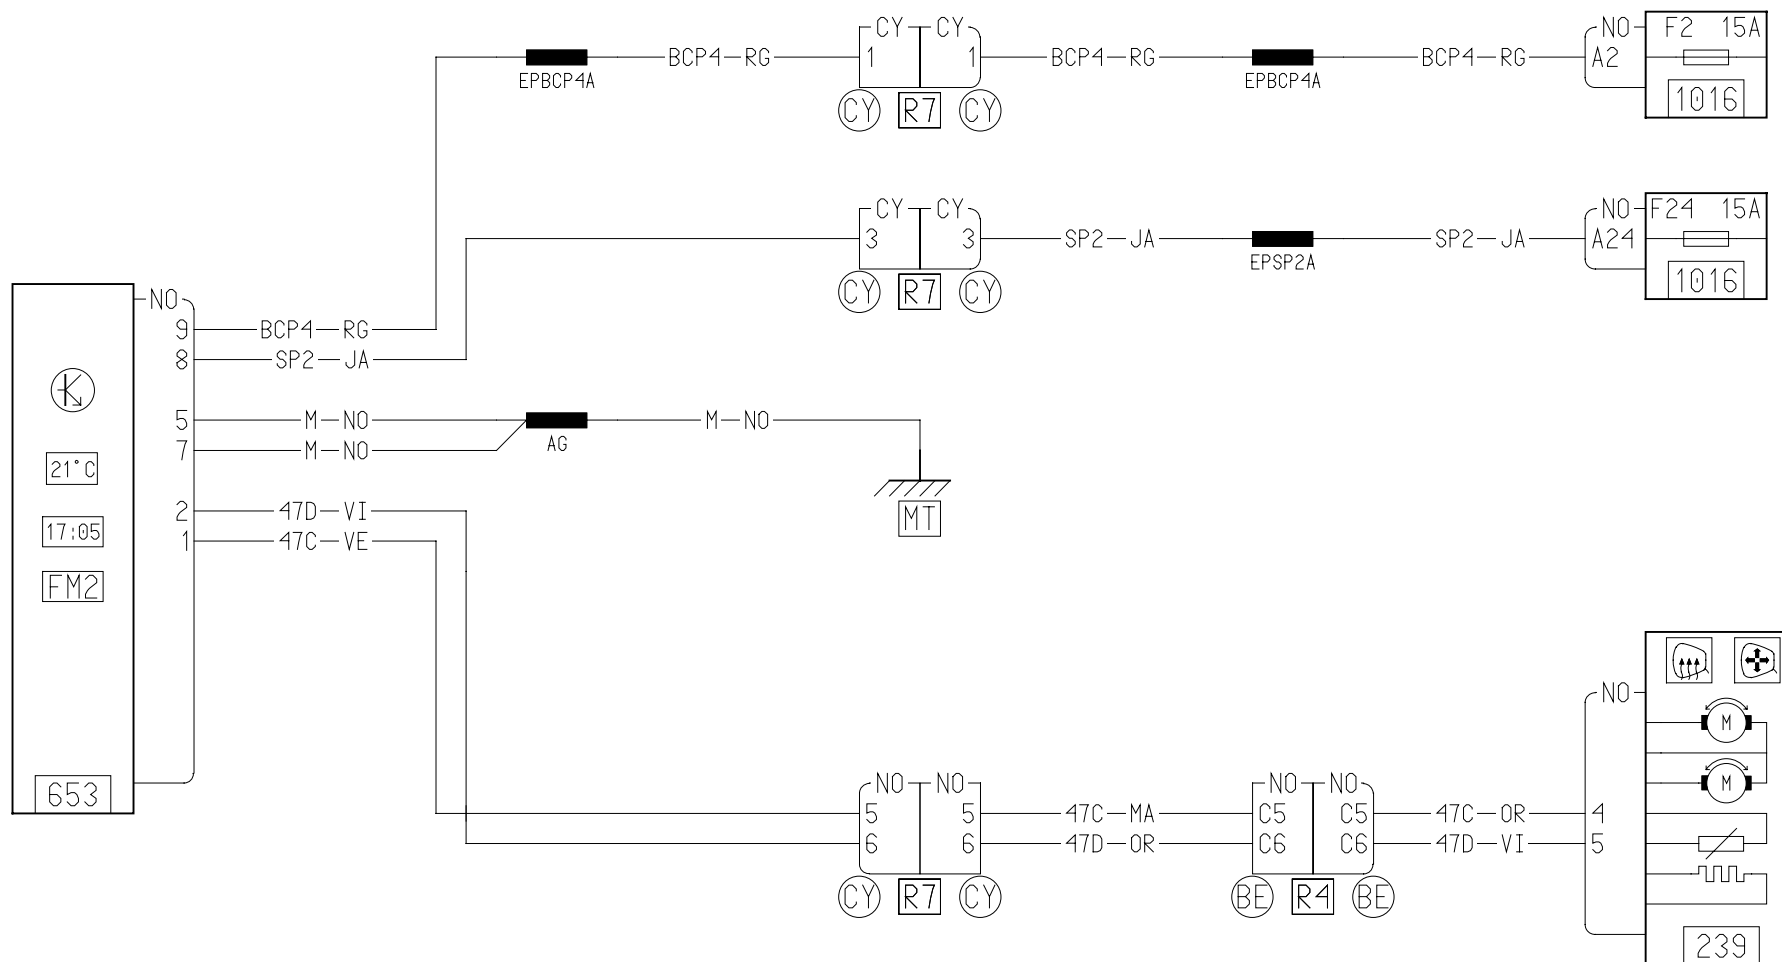




EXTERNAL TEMPERATURE INDICATOR

DD/RETROE/NINAV3/RAD08

X83

 02



BCP4-RG

EPBCP4A

BCP4-RG

1

CY

CY

1


BCP4-RG

EPBCP4A

BCP4-RG

1

NO

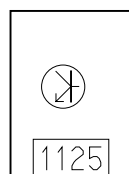

NO
3
4
7

46BL-VE

46BM-VE

 
46BB-MA

46BC-GR

46AD-BJ

10

M-NO



NO
2
3
4
5
6
7
9
10
12
15
16

46BG-VI

46L-OR

46K-VE

46G-BA

46H-VI

46BH-BJ


46BK-GR

46Y-BA

58D-OR

46M-MA

46N-SA

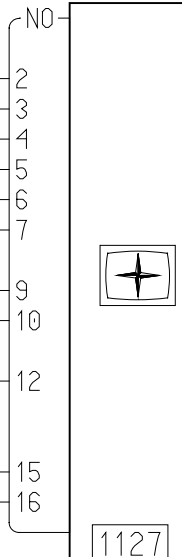

NO
2
3
4
5
6
7
9
10
12
15
16

46BG-VI

46L-OR

46K-VE

46G-BA

46H-VI

46BH-BJ


46BK-GR

46Y-BA

58D-OR

46M-MA

46N-SA

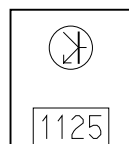

CY
16
17

47C-VE

47D-VI

NO

NO

5

5

47C-MA

47D-OR

NO

NO

C5

C5


47C-OR

47D-VI

BE

R4

BE

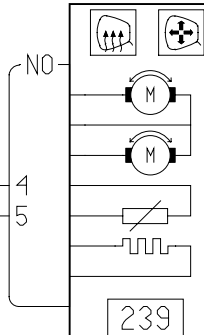

NO
4
5

3-80