

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-30
 ABS actuator BR-33
 ABS circuit diagram BR-41
 ABS component parts and connector
 locations BR-39
 ABS control unit BR-32
 ABS hydraulic circuit BR-30
 ABS self-diagnosis BR-36
 ABS system components BR-30
 ABS trouble diagnoses BR-34
 ABS wheel sensors BR-32
 ABS wiring diagram BR-31
 A/C air flow HA-16
 A/C circuit diagram HA-69
 A/C component layout HA-15
 A/C compressor clutch removal and
 installation HA-127
 A/C compressor description HA-11
 A/C compressor mounting HA-126
 A/C compressor precaution HA-5
 A/C compressor special service tool HA-5
 A/C control linkage adjustment HA-97
 A/C control operation HA-18
 A/C diagnostic work flow HA-24
 A/C harness layout HA-67
 A/C HFC134a (R134a) system
 precaution HA-3
 A/C HFC134a (R134a) system service
 procedure HA-121
 A/C HFC134a (R134a) system service
 tools HA-6
 A/C HFC134a system service equip-
 ment precaution HA-8
 A/C lubricant (R134a) HA-123
 A/C operational check HA-25
 A/C performance chart HA-62
 A/C performance test diagnoses HA-60
 A/C relay HA-96
 A/C self-df diagnoses HA-32
 A/C service data specification HA-130
 A/C symptom chart HA-28
 A/C trouble diagnoses HA-21
 A/C wiring diagram HA-70
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag disposal RS-13
 Air bag module RS-9
 Air bag precautions GI-2
 Air bag removal and installation RS-8
 Air bleeding for brake system BR-4
 Air cleaner filter replacement MA-13
 Air conditioner cut control EF & EC-26
 Air conditioning system lubricants MA-8
 Air conditioning system refrigerant MA-8

Air mix door control linkage
 adjustment HA-97
 Air mix. door motor HA-107
 Air spoiler, rear - See Rear air
 spoiler BT-31
 Alternator EL-27
 Ambient sensor HA-102
 Angular tightening application EM-2
 Anti-freeze coolant MA-8
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control
 device) EL-119
 AT control unit AT-74
 AT fluid temperature sensor AT-81
 AT removal and installation AT-104
 AT self-diagnoses AT-37
 AT shift lock system AT-89
 AT trouble diagnoses AT-11
 Audio EL-98
 Audio and A/C control removal and
 installation - See Instrument panel BT-11
 Automatic amplifier HA-104
 Automatic transmission fluid MA-8
 Automatic transmission fluid
 replacement MA-16
 Automatic transmission number GI-29
 Auxiliary air control (AAC) EF & EC-16
 Axle housing (rear) RA-10

B

Back window BT-29
 Back-up lamp EL-41
 Battery EL-15
 Belt inspection (drive belt) MA-10
 Blower motor HA-96
 Blower relay HA-96
 Board-on Lift GI-31
 Body alignment BT-32
 Brake booster BR-13
 Brake control valve (Proportioning
 Valve) BR-7
 Brake fluid MA-8
 Brake fluid change BR-4
 Brake fluid level MA-17
 Brake fluid level and line check BR-4
 Brake hydraulic line BR-6
 Brake inspection MA-18
 Brake lines and cables inspection MA-18
 Brake master cylinder BR-10
 Brake pedal BR-8
 Bumper, front - See Front bumper BT-5
 Bumper, rear - See Rear bumper BT-7

ALPHABETICAL INDEX

C

Camshaft inspection EM-28
 Camshaft position sensor (CMPS) EF & EC-12
 Camshaft position sensor inspection EF & EC-216
 Center bearing assembly (propeller shaft) PD-8
 Center bearing disassembly (propeller shaft) PD-7
 Charging system EL-25
 Cigarette lighter EL-94
 Clearance lamp EL-40
 Clock EL-94
 Coil spring (front) FA-15
 Coil spring (rear) RA-23
 Combination lamp, front, removal and installation BT-5
 Combination lamp, rear, removal and installation BT-19
 Combination meter EL-46
 Combination meter removal and installation - See Instrument panel BT-11
 Combination switch EL-32
 Compression pressure EM-8
 Compressor clutch removal and installation HA-127
 Compressor description HA-11
 Compressor mounting HA-126
 Compressor precaution HA-5
 Compressor special service tool HA-5
 Connecting rod EM-41
 Connecting rod bearing clearance EM-45
 Connecting rod bushing clearance EM-47
 Console box - See Instrument panel BT-11
 Consult for ECCS EF & EC-56
 Consult general information GI-26
 Control valve (AT) AT-125
 Converter housing installation AT-105
 Coolant replacement MA-11
 Cooling circuit (engine) LC-8
 Cooling fan LC-12
 Cooling fan control EF & EC-29
 Cooling fan control system LC-13
 Cooling fan relay HA-96
 Crankshaft assembly EM-48
 Crankshaft bearing clearance EM-43
 Crankshaft inspection EM-42
 Cylinder block EM-38
 Cylinder block boring EM-42
 Cylinder head EM-25
 Cylinder head bolt tightening EM-35

D

Data link connector for Consult EF & EC-17

Daytime light system EL-36
 Detonation sensor - See Knock sensor EF & EC-16
 Differential carrier assembly PD-25
 Differential carrier disassembly PD-12
 Differential gear oil MA-8
 Differential gear oil replacement MA-17
 Dimensions GI-30
 Direct ignition system EF & EC-32
 Door glass BT-9
 Door lock BT-9
 Door mirror BT-30
 Door trim BT-15
 Door, front - See Front door BT-9
 Door, rear - See Rear door BT-10
 Drive plate runout EM-47
 Drive shaft (rear) RA-15
 Dropping resistor (AT) AT-81

E

ECCS basic inspection EF & EC-69
 ECCS circuit diagram EF & EC-11
 ECCS component parts location EF & EC-6
 ECCS fail-safe system EF & EC-30
 ECCS on-board diagnostic system EF & EC-49
 ECCS system diagram and chart EF & EC-8
 ECCS trouble diagnoses EF & EC-41
 ECCS wiring diagram Foldout page
 ECM input/output signal inspection EF & EC-211
 EGR control (EGRC) - solenoid valve EF & EC-17
 EGR temperature sensor EF & EC-17
 EGR temperature sensor inspection EF & EC-219
 EGR valve inspection EF & EC-218
 EGRC valve and canister control solenoid valve inspection EF & EC-218
 Electric sun roof EL-92
 Electrical units location EL-162
 Electronic ignition (EI) system EF & EC-22
 Engine compartment BT-32
 Engine control module (ECM) EF & EC-12
 Engine coolant temperature sensor (ECTS) EF & EC-13
 Engine coolant temperature sensor inspection EF & EC-216
 Engine oil MA-8
 Engine oil filter replacement MA-14
 Engine oil precautions GI-4
 Engine oil replacement MA-13
 Engine outer component parts EM-6
 Engine removal EM-36
 Engine room - See Engine compartment BT-32
 Engine serial number GI-29

ALPHABETICAL INDEX

Evaporative emission system..... EF & EC-225
Exhaust gas recirculation (EGR)
 system..... EF & EC-26
Exhaust gas recirculation (EGR)
 valve..... EF & EC-17
Exhaust system..... FE-6
Exhaust system inspection MA-19
Exterior..... BT-19
Exterior lamp EL-40

F

Fan control amp. HA-118
Final drive disassembly PD-12
Final drive pre-inspection..... PD-12
Final drive removal and installation PD-10
Finisher, interior - See Trim BT-13
Finisher, rear panel - See Rear panel
 finisher BT-18
Finisher, trunk lid - See Trunk lid
 finisher BT-18
First (1st) position switch..... AT-80
Floor trim BT-13
Fluid temperature sensor (AT) AT-81
Fluids MA-8
Forward clutch..... AT-144
Front axle..... FA-10
Front bumper BT-5
Front combination lamp removal and
 installation..... BT-5
Front disc brake BR-16
Front door BT-9
Front seat..... BT-24
Front seat belt..... RS-3
Front suspension FA-14
Fuel check valve inspection EF & EC-226
Fuel damper EF & EC-15
Fuel filler lid BT-7
Fuel filter EF & EC-17
Fuel filter replacement..... MA-13
Fuel gauge EL-47
Fuel injector EF & EC-14
Fuel lid opener, electric EL-93
Fuel line inspection..... MA-12
Fuel precautions..... GI-5
Fuel pressure check..... EF & EC-223
Fuel pressure regulator..... EF & EC-14
Fuel pressure release..... EF & EC-223
Fuel pump..... EF & EC-14
Fuel pump control EF & EC-25
Fuel pump control module
 inspection..... EF & EC-217
Fuel pump control unit..... EF & EC-15
Fuel pump dropping resistor
 inspection..... EF & EC-218
Fuel pump inspection..... EF & EC-217
Fuel pump relay inspection EF & EC-222

Fuel system..... FE-3
Fuel tank vacuum relief valve
 inspection..... EF & EC-226
Fuse..... EL-12
Fusible link..... EL-12

G

Garage jack and safety stand..... GI-32
Glass BT-9
Grille - See Exterior BT-19

H

Harness connector EL-4
Harness layout..... EL-165
Hazard warning lamp EL-42
Headlamp EL-35
Headlining - See Roof trim BT-16
Heated oxygen sensor (HO2S) EF & EC-14
Heated oxygen sensor heater
 inspection..... EF & EC-218
Heated oxygen sensor monitor EF & EC-54
Heated seat BT-26, EL-106
Height (Dimensions)..... GI-30
HFC134a (R134a) system precaution HA-3
HFC134a (R134a) system service
 procedure..... HA-121
HFC134a (R134a) system service
 tools HA-6
HFC134a system service equipment
 precaution..... HA-8
High clutch AT-142
Hood..... BT-5
Horn..... EL-94
How to follow flow chart in trouble
 diagnoses..... GI-23
How to perform efficient diagnosis
 for an electrical incident..... GI-12
How to read wiring diagrams..... GI-8
How to use this manual GI-6
Hydraulic lash adjuster inspection EM-32

I

IACV - air regulator inspection..... EF & EC-220
IACV - FICD solenoid valve
 inspection..... EF & EC-220
IACV-AAC valve inspection EF & EC-220
Identification plate..... GI-29
Idle air control (IAC) system EF & EC-24
Idle air control valve (IACV)..... EF & EC-15
Idle mixture ratio inspection EF & EC-34
Idle speed inspection..... EF & EC-34

ALPHABETICAL INDEX

Ignition coil inspection..... EF & EC-217
 Ignition timing inspection EF & EC-34
 Illumination EL-44
 In vehicle sensor..... HA-101
 Inhibitor switch AT-79
 Injector inspection..... EF & EC-221
 Injector removal and installation..... EF & EC-224
 Instrument panel..... BT-11
 Intake door control linkage
 adjustment..... HA-98
 Intake door motor..... HA-115
 Intake sensor..... HA-103
 Interior..... BT-13
 Interior lamp EL-45

K

Knock sensor (KS) EF & EC-16
 Knock sensor inspection..... EF & EC-221

L

Length (Dimensions) GI-30
 Line pressure solenoid valve AT-81
 Line pressure test (AT) AT-84
 Liquid gasket application EM-2
 Lock, door - See Door lock..... BT-9
 Low and reverse brake AT-148
 Lower ball joint (rear susp.)..... RA-25
 Lubricant (R134a) A/C..... HA-123
 Lubricants MA-8
 Lubrication circuit (engine)..... LC-4
 Lubrication-locks, hinges and hood
 latches MA-20

M

Magnet clutch HA-127
 Maintenance (engine)..... MA-10
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic..... MA-5
 Maintenance schedule (1)..... MA-6
 Maintenance schedule (2)..... MA-7
 Mass air flow sensor (MAFS)..... EF & EC-12
 Mass air flow sensor inspection EF & EC-216
 Master cylinder (brake) BR-10
 Max cold door control linkage
 adjustment..... HA-99
 Max cold door motor..... HA-109
 Max cold relay..... HA-96
 Meter and gauges..... EL-46
 Mirror, door - See Door mirror..... BT-30

Mirror, out side - See Out side
 mirror BT-30
 Mode door control linkage
 adjustment..... HA-97
 Mode door motor..... HA-112
 Model variation GI-27
 Molding - See Exterior BT-19
 Mud guard - See Exterior BT-19
 Multi link/lower ball joint (rear) RA-25
 Multi purpose grease MA-8
 Multiport fuel injection (MFI)
 system..... EF & EC-19
 Multiport fuel injection precautions GI-4
 Multiport fuel injection system
 inspection..... EF & EC-223

O

Oil pan (engine)..... EM-9
 Oil pressure (engine)..... LC-5
 Oil pressure relief valve (engine) LC-7
 Oil pump (AT) AT-121
 Oil pump (engine)..... LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-21
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Out side mirror BT-30
 Overrun clutch AT-144
 Overrun clutch solenoid valve..... AT-81
 Oversize piston..... EM-42

P

Parking brake control BR-28
 Parking drum brake BR-24
 PCV (positive crankcase ventilation)
 inspection..... EF & EC-227
 Pinion bearing preload diff. PD-19
 Pinion gear height diff. PD-19
 Piston assembly..... EM-47
 Piston pin inspection EM-39
 Piston ring inspection..... EM-40
 Piston to bore clearance EM-41
 Power antenna EL-99
 Power door lock..... EL-84
 Power door mirror..... EL-90
 Power seat EL-104
 Power steering (twin orifice) trouble
 diagnoses ST-31
 Power steering fluid MA-8
 Power steering fluid level MA-19, ST-6
 Power steering gear..... ST-14
 Power steering hydraulic pressure ST-8

ALPHABETICAL INDEX

Power steering oil pressure switch .. EF & EC-16	
Power steering oil pressure switch inspection..... EF & EC-222	
Power steering oil pump..... ST-26	
Power steering system (twin orifice)..... ST-29	
Power steering system bleeding..... ST-7	
Power supply routing..... EL-9	
Power transistor & ignition coil..... EF & EC-15	
Power transistor inspection..... EF & EC-217	
Power window..... EL-74	
Precautions (General)..... GI-2	
Pressure test (AT)..... AT-84	
Propeller shaft..... PD-5	
Propeller shaft on vehicle service..... PD-5	
Propeller shaft vibration..... PD-5	

R

Rack retainer adjustment..... ST-6	
Radiator..... LC-13	
Rear air spoiler..... BT-31	
Rear axle..... RA-8	
Rear bumper..... BT-7	
Rear combination lamp removal and installation..... BT-19	
Rear disc brake..... BR-20	
Rear door..... BT-10	
Rear panel finisher..... BT-18	
Rear seat..... BT-27	
Rear seat belt..... RS-4	
Rear suspension..... RA-21	
Rear window..... BT-29	
Rear window defogger..... EL-95	
Refrigerant connection precaution..... HA-4	
Refrigerant general precaution..... HA-3	
Refrigerant lines..... HA-125	
Refrigeration cycle..... HA-10	
Reverse clutch..... AT-138	
Revolution sensor (AT)..... AT-80	
Road wheel size..... GI-30	
Roof trim..... BT-16	

S

SAE J1930 terminology list..... GI-36	
Seal - See Exterior..... BT-19	
Seat belt inspection..... MA-20	
Seat belt pre-tensioner..... RS-5	
Seat belt pre-tensioner disposal..... RS-13	
Seat belt pretensioner removal and installation..... RS-8	
Seat belt, front - See Front seat belt..... RS-3	
Seat belt, rear - See Rear seat belt..... RS-4	
Seat, front - See Front seat..... BT-24	
Seat, rear - See Rear seat..... BT-27	
Self-diagnostic results..... EF & EC-49, 52	

Shift lock system..... AT-89	
Shift schedule..... AT-31	
Shift solenoid valve (AT)..... AT-81	
Shock absorber (rear)..... RA-23	
Side bearing preload diff..... PD-18	
Side flange installation diff..... PD-10	
Side trim..... BT-13	
SMJ (super multiple junction)..... Foldout	
Spark plug replacement..... MA-15	
Speedometer..... EL-47	
Spiral cable..... RS-9	
Spring (Wheelarch) height..... FA-5	
SRS - See Supplemental Restraint System..... RS-5	
SRS Trouble diagnoses..... RS-18	
SRS Wiring diagram..... RS-18	
Stabilizer bar (front)..... FA-20	
Stabilizer bar (rear)..... RA-28	
Stall test (AT)..... AT-82	
Standardized relay..... EL-5	
Starter..... EL-24	
Starting system..... EL-23	
Steering gear and linkage inspection..... MA-19	
Steering linkage..... ST-14	
Steering switch..... EL-34	
Steering wheel and column..... ST-10	
Steering wheel play..... ST-5	
Steering wheel turning force..... ST-8	
Stop lamp..... EL-40	
Strut (front)..... FA-15	
Sun roof..... BT-28	
Sun roof, electric - See Electric sun roof..... EL-92	
Sunload sensor..... HA-103	
Supplemental Restraint System..... RS-5	
Symbols and abbreviations..... GI-7	

T

Tachometer..... EL-47	
Tail lamp..... EL-40	
Telephone..... EL-103	
Tension rod (front)..... FA-20	
Theft warning system..... EL-141	
Thermostat..... LC-11	
Three way catalyst precautions..... GI-4	
Throttle bodies..... EM-23	
Throttle position sensor (TPS)..... EF & EC-13	
Throttle position sensor inspection..... EF & EC-219	
Tie-rod..... ST-18	
Tie-rod ball joints..... ST-18	
Tightening torque of standard bolts..... GI-35	
Time control system..... EL-54	
Timing belt..... EM-13	
Tire rotation..... MA-19	
Tire size..... GI-30	

ALPHABETICAL INDEX

Tooth contact diff..... PD-24
 Torque converter clutch solenoid
 valve AT-81
 Torque converter installation..... AT-104
 Tow truck towing GI-33
 Transverse link (front)..... FA-21
 Tread-FR&RR (Dimensions)..... GI-30
 Trim BT-13
 Triple pressure switch HA-96
 Trunk lid BT-7
 Trunk lid finisher BT-18
 Trunk lid opener - See Trunk lid BT-7
 Trunk lid opener, electric EL-93
 Trunk lid trim BT-18
 Trunk room lamp EL-45
 Trunk room trim BT-18
 Turbine revolution sensor AT-80
 Turn signal lamp EL-42
 Two-pole lift GI-33

U

Under body BT-34

V

Vacuum hose (brake system)..... BR-15
 Vacuum hose drawing (ECCS) EF & EC-10
 Valve guide inspection EM-29
 Valve seat inspection EM-31
 Valve spring inspection EM-32
 Valve timing control (VTC) EF & EC-27

Valve timing control solenoid valve.. EF & EC-18
 Vapor lines inspection MA-15
 Vehicle identification number GI-28
 Vehicle Recovery. (Freeing a stuck
 vehicle)..... GI-34
 Vehicle speed sensor (VSS) EF & EC-16
 Vehicle speed sensor inspection EF & EC-218
 VTC solenoid valve inspection EF & EC-221

W

Warning lamps EL-51
 Water cock control rod adjustment HA-98
 Water pump LC-9
 Water temperature gauge EL-47
 Weatherstrip - See Exterior BT-19
 Wheel alignment (front) FA-7
 Wheel alignment (rear)..... RA-6
 Wheel balance MA-18
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-6
 Wheel hub (rear) RA-10
 Wheelbase (Dimensions) GI-30
 Wide open & closed throttle position
 (CTP) switch..... EF & EC-13
 Width (Dimensions) GI-30
 Window, back - See Back window..... BT-29
 Window, door BT-9
 Window, rear - See Rear window..... BT-29
 Windshield BT-29
 Wiper and washer EL-70

GI

MA

EM

LC

EF &
EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX