

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-31
 ABS actuator BR-39
 ABS circuit diagram BR-48
 ABS component parts and connector
 locations BR-45
 ABS control unit BR-38
 ABS hydraulic circuit BR-31
 ABS self-diagnosis BR-42
 ABS system components BR-31
 ABS trouble diagnoses BR-40
 ABS wheel sensors BR-38
 ABS wiring diagram BR-33
 A/C air flow HA-15
 A/C circuit diagram HA-67
 A/C component layout HA-14
 A/C compressor clutch removal and
 installation HA-133
 A/C compressor description HA-10
 A/C compressor mounting HA-132
 A/C compressor precaution HA-4
 A/C compressor special service tool HA-4
 A/C control linkage adjustment HA-102
 A/C control operation HA-17
 A/C diagnostic work flow HA-22
 A/C harness layout HA-65
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure HA-125
 A/C HFC134a (R134a) system service
 tools HA-5
 A/C HFC134a system service equip-
 ment precaution HA-7
 A/C lubricant (R134a) HA-127
 A/C operational check HA-23
 A/C performance chart HA-60
 A/C performance test diagnoses HA-58
 A/C relay HA-101
 A/C self-diagnoses HA-30
 A/C service data specification HA-137
 A/C symptom chart HA-26
 A/C trouble diagnoses HA-19
 A/C wiring diagram HA-68
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-13
 Air bag module RS-9
 Air bag precautions GI-2
 Air bag removal and installation RS-8
 Air bleeding for brake system BR-5
 Air cleaner filter replacement MA-13
 Air conditioner cut control EC-18

Air flow meter - See Mass air flow
 sensor EC-99
 Air mix door control linkage
 adjustment HA-102
 Air mix. door motor HA-111
 Air spoiler, rear - See Rear air
 spoiler BT-31
 Ambient sensor HA-106
 Angular tightening application EM-2
 Antenna - See Power antenna EL-125
 Anti-freeze coolant MA-8
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control
 device) EL-151
 A/T control DTC:P0600 EC-225
 AT control unit AT-104
 AT diagnosis communication line EC-266
 AT fluid temperature sensor AT-111
 AT removal and installation AT-133
 AT self-diagnoses AT-44
 AT shift lock system AT-120
 AT trouble diagnoses AT-12
 Audio EL-120
 Audio and A/C control removal and
 installation - See Instrument panel BT-11
 Automatic amplifier HA-108
 Automatic transmission fluid MA-8
 Automatic transmission fluid
 replacement MA-16
 Automatic transmission number GI-36
 Auxiliary air control (AAC) EC-221
 Axle housing (rear) RA-10

B

Back window BT-29
 Back-up lamp EL-72
 Belt inspection (drive belt) MA-10
 Blower motor HA-102
 Blower relay HA-101
 Board-on lift GI-38
 Body alignment BT-32
 Boost pressure control EC-190
 Brake booster BR-14
 Brake control valve (Proportioning
 valve) BR-8
 Brake fluid MA-8
 Brake fluid change BR-5
 Brake fluid level MA-17
 Brake fluid level and line check BR-5
 Brake hydraulic line BR-7
 Brake inspection MA-18
 Brake lines and cables inspection MA-17
 Brake master cylinder BR-11
 Brake pedal BR-9
 Bumper, front - See Front bumper BT-5

ALPHABETICAL INDEX

Bumper, rear - See Rear bumper BT-7

C

Camshaft inspection EM-28
 Camshaft position sensor inspection EC-194
 Center bearing assembly (propeller shaft) PD-8
 Center bearing disassembly (propeller shaft) PD-7
 Charging system EL-38
 Chassis and body maintenance MA-16
 Cigarette lighter EL-114
 Clearance lamp EL-67
 Clock EL-114
 Closed loop control EC-123
 Coil spring (front) FA-15
 Coil spring (rear) RA-23
 Combination lamp, front, removal and installation BT-5
 Combination lamp, rear, removal and installation BT-19
 Combination meter removal and installation - See Instrument panel BT-11
 Combination switch EL-46
 Compression pressure EM-8
 Compressor clutch removal and installation HA-133
 Compressor description HA-10
 Compressor mounting HA-132
 Compressor precaution HA-4
 Compressor special service tool HA-4
 Connecting rod EM-43
 Connecting rod bearing clearance EM-47
 Connecting rod bushing clearance EM-49
 Console box - See Instrument panel BT-11
 CONSULT for ECCS EC-45
 CONSULT general information GI-33
 Control valve (AT) AT-154
 Converter housing installation AT-134
 Coolant replacement MA-11
 Cooling circuit (engine) LC-8
 Cooling fan LC-12
 Cooling fan control EC-269
 Cooling fan relay HA-101
 Crank angle sensor built into distributor - See Camshaft position sensor EC-190
 Crankshaft assembly EM-50
 Crankshaft bearing clearance EM-45
 Crankshaft inspection EM-44
 Crankshaft position sensor (OBD) DTC0802, P0335 EC-186
 Crankshaft position sensor (OBD) DTC0802, P0335 inspection EC-189
 Cylinder block EM-40
 Cylinder block boring EM-44

Cylinder head EM-25
 Cylinder head bolt tightening EM-35

D

Daytime light system EL-49
 Daytime running light - See Daytime light system EL-49
 Detonation sensor - See Knock sensor EC-183
 Diagnostic trouble code (DTC) chart EC-64
 Diagnostic trouble code (DTC) for ECCS OBD system EC-33
 Differential carrier assembly (except FF) PD-25
 Differential carrier disassembly (except FF) PD-12
 Differential gear oil MA-8
 Differential gear oil replacement MA-17
 Dimensions GI-37
 Direct ignition system EC-24
 Distributor ignition (DI) system EC-17
 Dome light - See Interior lamp EL-86
 Door glass BT-9
 Door lock BT-9
 Door mirror BT-30
 Door trim BT-15
 Door, front - See Front door BT-9
 Door, rear - See Rear door BT-10
 Drive plate runout EM-49
 Drive shaft (rear) RA-15
 Dropping resistor (AT) AT-112

E

ECCS basic inspection EC-62
 ECCS circuit diagram EC-8
 ECCS component parts location EC-10
 ECCS on board diagnostic system EC-33
 ECCS system diagram and chart EC-9
 ECCS trouble diagnoses EC-58
 ECM input/output signal inspection EC-87
 EGR control (EGRC) - solenoid valve EC-252
 EGR temperature sensor EC-256
 EGR temperature sensor inspection EC-260
 EGR valve & EVAP canister purge control solenoid valve inspection EC-255
 EGR valve inspection EC-203
 Electric sun roof EL-135
 Electrical load signal circuit EC-297
 Electronic ignition system EC-17
 Engine compartment BT-32
 Engine control module (ECM) EC-228
 Engine coolant temperature sensor (ECTS) EC-109

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-109
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection.....	EC-112
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-118
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection.....	EC-122
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-6
Engine removal.....	EM-37
Engine room - See Engine compartment.....	BT-32
Engine serial number.....	GI-36
EVAP canister inspection.....	EC-19
EVAP vapor lines inspection.....	MA-15
Evaporative emission system - for Non-California models.....	EC-19
Exhaust gas recirculation (EGR) system.....	EC-195
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-19
Exterior.....	BT-19
Exterior lamp.....	EL-67

F

Fan control amp.....	HA-122
Final drive disassembly (except FF).....	PD-12
Final drive pre-inspection (except FF).....	PD-12
Final drive removal and installation (except FF).....	PD-10
Finisher, interior - See Trim.....	BT-13
Finisher, rear panel - See Rear panel finisher.....	BT-18
Finisher, trunk lid - See Trunk lid finisher.....	BT-18
First (1st) position switch.....	AT-110
Floor trim.....	BT-13
Fluid temperature sensor (AT).....	AT-111
Fluids.....	MA-8
Forward clutch.....	AT-173
Freeze frame data.....	EC-35
Front axle.....	FA-10
Front bumper.....	BT-5
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-17
Front door.....	BT-9
Front heated oxygen sensor (HO2S) (Left bank).....	EC-142
Front heated oxygen sensor (HO2S) (Right bank).....	EC-125
Front heated oxygen sensor (HO2S).....	EC-125

Front heated oxygen sensor (HO2S) monitor.....	EC-36
Front heated oxygen sensor heater (Left bank).....	EC-147, 155
Front heated oxygen sensor heater (Right bank).....	EC-130, 138
Front passenger air bag.....	RS-10
Front seat.....	BT-24
Front seat belt.....	RS-3
Front suspension.....	FA-14
Front washer.....	EL-108
Front wiper.....	EL-108
Fuel check valve inspection.....	EC-20
Fuel cut control (at no load & high engine speed).....	EC-18
Fuel filler lid.....	BT-7
Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-96
Fuel injection system (Left bank).....	EC-169, 174
Fuel injection system (Right bank) ...	EC-159, 164
Fuel lid opener, electric.....	EL-149
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-22
Fuel pressure release.....	EC-22
Fuel pump control.....	EC-283
Fuel pump control module.....	EC-233
Fuel pump inspection.....	EC-286
Fuel pump relay inspection.....	EC-286
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-20
Fuse.....	EL-21
Fusible link.....	EL-21

G

Garage jack and safety stand.....	GI-39
Gauges.....	EL-94
Generic scan tool (GST).....	EC-56
Glass.....	BT-9
Grille - See Exterior.....	BT-19
Ground distribution.....	EL-22

H

Harness connector.....	EL-5
Harness layout.....	EL-276
Hazard warning lamp.....	EL-73
Headlamp.....	EL-49
Headlamp leveler - See Headlamp aiming control.....	EL-108
Headlining - See Roof trim.....	BT-16
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-142

ALPHABETICAL INDEX

Heated oxygen sensor (HO2S) (Front)
 (Right bank)..... EC-125
 Heated oxygen sensor (HO2S) (front) EC-125
 Heated oxygen sensor (HO2S) heater
 (rear)..... EC-137, 154
 Heated oxygen sensor (rear) EC-133, 150
 Heated oxygen sensor heater
 (Front)(Left bank) EC-147, 155
 Heated oxygen sensor heater
 (Front)(Right bank) EC-130, 138
 Heated seat BT-26, EL-141
 Height (Dimensions)..... GI-37
 HFC134a (R134a) system precaution HA-2
 HFC134a (R134a) system service
 procedure..... HA-125
 HFC134a (R134a) system service
 tools HA-5
 HFC134a system service equipment
 precaution..... HA-7
 High clutch AT-171
 Hood..... BT-5
 Horn..... EL-114
 How to erase DTC for ECCS OBD
 system EC-33
 How to follow flow chart in trouble
 diagnoses..... GI-30
 How to perform efficient diagnosis
 for an electrical incident GI-19
 How to read wiring diagrams..... GI-9
 How to use this manual GI-7
 Hydraulic lash adjuster inspection EM-32

I

IACV - air regulator inspection..... EC-289
 IACV-AAC valve inspection..... EC-224
 IACV-FICD solenoid valve EC-293
 Identification plate..... GI-36
 Idle air control valve (IACV) - air
 regulator..... EC-287
 Idle air control valve (IACV) EC-221
 Idle mixture ratio inspection..... EC-26
 Idle speed inspection..... EC-26
 Ignition timing inspection..... EC-26
 Illumination EL-79
 In vehicle sensor..... HA-105
 Inhibitor switch AT-109
 Injector inspection..... EC-280
 Injector removal and installation..... EC-23
 Instrument panel..... BT-11
 Intake air temperature sensor EC-104
 Intake air temperature sensor
 inspection..... EC-108
 Intake door control linkage
 adjustment HA-103
 Intake door motor..... HA-119
 Intake sensor..... HA-107

Interior..... BT-13
 Interior lamp EL-86

J

Joint connector (J/C) EL-296

K

Keyless entry system - See Multi-
 remote control ststem..... EL-204
 Kickdown switch AT-112
 Knock sensor (KS)..... EC-183
 Knock sensor (KS) inspection EC-185

L

Length (Dimensions) GI-37
 License lamp..... EL-67
 Line pressure solenoid valve AT-111
 Line pressure test (AT) AT-115
 Liquid gasket application EM-2
 Location of electrical units EL-273
 Lock, door - See Door lock..... BT-9
 Low and reverse brake AT-177
 Lower ball joint (rear susp.)..... RA-25
 Lubricant (R134a) A/C..... HA-127
 Lubricants MA-8
 Lubrication circuit (engine)..... LC-4
 Lubrication-locks, hinges and hood
 latches MA-20

M

Magnet clutch HA-133
 Maintenance (engine)..... MA-10
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic..... MA-5
 Maintenance schedule (1)..... MA-6
 Maintenance schedule (2)..... MA-7
 Malfunction indicator lamp (MIL) EC-35
 Mass air flow sensor (MAFS) EC-99
 Mass air flow sensor inspection EC-103
 Master cylinder (brake) BR-11
 Max cold door control linkage
 adjustment HA-103
 Max cold door motor..... HA-113
 Max cold relay..... HA-101
 Meter and gauges..... EL-94
 MIL & Data link connectors circuit..... EC-299
 Mirror, door - See Door mirror..... BT-30

ALPHABETICAL INDEX

Mirror, out side - See Out side
 mirror BT-30
 Misfire EC-179
 Mode door control linkage
 adjustment HA-102
 Mode door motor HA-116
 Model variation GI-34
 Molding - See Exterior BT-19
 Mud guard - See Exterior BT-19
 Multi link/lower ball joint (rear) RA-25
 Multi purpose grease MA-8
 Multi-remote control system EL-204
 Multiport fuel injection (MFI) system EC-14
 Multiport fuel injection precautions GI-4

O

Oil pan (engine) EM-9
 Oil pressure (engine) LC-5
 Oil pressure relief valve (engine) LC-7
 Oil pump (AT) AT-150
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-21
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Out side mirror BT-30
 Overrun clutch AT-173
 Overrun clutch solenoid valve AT-111
 Oversize piston EM-44

P

Park/Neutral position switch EC-230
 Parking brake control BR-29
 Parking drum brake BR-25
 PCV (positive crankcase ventilation)
 inspection EC-21
 Pinion bearing preload diff. (except
 FF) PD-19
 Pinion gear height diff. (except FF) PD-19
 Piston assembly EM-49
 Piston pin inspection EM-41
 Piston ring inspection EM-42
 Piston to bore clearance EM-43
 Power antenna EL-125
 Power door lock EL-192
 Power door mirror EL-142
 Power seat EL-137
 Power steering (twin orifice) trouble
 diagnoses ST-33
 Power steering fluid MA-8
 Power steering fluid level MA-19, ST-6
 Power steering gear ST-14

Power steering hydraulic pressure ST-8
 Power steering oil pressure switch EC-290
 Power steering oil pressure switch
 inspection EC-292
 Power steering oil pump ST-26
 Power steering system (twin orifice) ST-29
 Power steering system bleeding ST-7
 Power supply routing EL-9
 Power transistor & ignition coil EC-239
 Power window EL-177
 Precautions (General) GI-2
 Pressure test (AT) AT-115
 Propeller shaft PD-5
 Propeller shaft on vehicle service PD-5
 Propeller shaft vibration PD-5

R

Rack retainer adjustment ST-6
 Radiator LC-14
 Radiator fan - See Cooling fan LC-12
 Radio - See Audio EL-120
 Rear air spoiler BT-31
 Rear axle RA-8
 Rear bumper BT-7
 Rear combination lamp removal and
 installation BT-19
 Rear disc brake BR-21
 Rear door BT-10
 Rear heated oxygen sensor
 (HO2S) EC-133, 150
 Rear heated oxygen sensor (HO2S)
 heater EC-137, 154
 Rear panel finisher BT-18
 Rear seat BT-27
 Rear seat belt RS-4
 Rear suspension RA-21
 Rear window BT-29
 Rear window defogger EL-116
 Refrigerant connection precaution HA-3
 Refrigerant general precaution HA-2
 Refrigerant lines HA-129
 Refrigeration cycle HA-9
 Reverse clutch AT-167
 Revolution sensor (AT) AT-110
 Road wheel size GI-37
 Roof trim BT-16
 Room lamp - See Interior lamp EL-86

S

SAE J1930 terminology list GI-43
 Seal - See Exterior BT-19
 Seat belt inspection MA-20
 Seat belt pre-tensioner RS-5
 Seat belt pre-tensioner disposal RS-13

ALPHABETICAL INDEX

Seat belt pretensioner removal and installation	RS-8
Seat belt, front - See Front seat belt	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat	BT-24
Seat, rear - See Rear seat.....	BT-27
Self-diagnostic results	EC-36
Shift lock system.....	AT-120
Shift schedule	AT-33
Shift solenoid valve (AT)	AT-111
Shift solenoid valve (AT)	AT-111
Shock absorber (rear).....	RA-23
Side bearing preload diff. (except FF)	PD-18
Side flange installation diff. (except FF)	PD-10
Side trim	BT-13
SMJ (super multiple junction)	EL-291
Spark plug replacement.....	MA-15
Speedometer.....	EL-96
Spiral cable	RS-9
Spot lamp	EL-86
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System	RS-5
SRS Trouble diagnoses	RS-22
SRS Wiring diagram.....	RS-22
Stabilizer bar (front)	FA-20
Stabilizer bar (rear)	RA-28
Stall test (AT)	AT-113
Standardized relay	EL-6
Starting system	EL-34
Steering gear and linkage inspection	MA-19
Steering linkage.....	ST-14
Steering wheel and column	ST-10
Steering wheel play	ST-5
Steering wheel turning force	ST-8
Stop lamp	EL-70
Strut (front).....	FA-15
Sun roof	BT-28
Sun roof, electric - See Electric sun roof.....	EL-135
Sunload sensor	HA-107
Supplemental Restraint System	RS-5
Symbols and abbreviations	GI-8

T

Tachometer	EL-96
Tail lamp	EL-67
Telephone.....	EL-130
Tension rod (front).....	FA-20
Theft warning system	EL-245
Thermostat.....	LC-11
Three way catalyst	EC-204
Three way catalyst function (Left bank)	EC-204

Three way catalyst function (Right bank).....	EC-204
Three way catalyst precautions	GI-4
Throttle bodies.....	EM-23
Throttle position sensor (TPS).....	EC-113
Throttle position sensor adjustment.....	EC-62
Throttle position sensor inspection.....	EC-117
Throttle position switch	AT-112
Tie-rod.....	ST-18
Tie-rod ball joints	ST-18
Tightening torque of standard bolts	GI-42
Time control system	EL-223
Timing belt	EM-13
Tire rotation	MA-19
Tire size	GI-37
Tooth contact diff. (except FF)	PD-24
Torque converter clutch solenoid valve	AT-111
Torque converter installation.....	AT-133
Tow truck towing	GI-40
Towing point.....	GI-41
Transmission serial number.....	GI-36
Transverse link (front).....	FA-21
Tread-FR&RR (Dimensions).....	GI-37
Trim	BT-13
Triple pressure switch	HA-101
Trunk lid	BT-7
Trunk lid finisher	BT-18
Trunk lid opener - See Trunk lid	BT-7
Trunk lid opener, electric	EL-149
Trunk lid trim	BT-18
Trunk room lamp	EL-86
Trunk room trim.....	BT-18
Turbine revolution sensor.....	AT-110
Turn signal lamp.....	EL-73
Two trip detection logic	EC-33
Two-pole lift.....	GI-40

U

Under body	BT-34
------------------	-------

V

Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (ECCS)	EC-12
Valve guide inspection	EM-29
Valve seat inspection	EM-31
Valve spring inspection.....	EM-32
Vehicle identification number	GI-35
Vehicle speed sensor (VSS)	EC-217

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

W

Warning lamps	EL-101	Wheel size	GI-37
Water pump	LC-9	Wheelbase (Dimensions)	GI-37
Water temperature gauge	EL-96	Wide open & closed throttle position	
Weatherstrip - See Exterior	BT-19	(CTP) switch	EC-113
Wheel alignment (front)	FA-7	Width (Dimensions)	GI-37
Wheel alignment (rear)	RA-6	Window, back - See Back window	BT-29
Wheel balance	MA-18	Window, door	BT-9
Wheel bearing (front axle)	FA-6	Window, rear - See Rear window	BT-29
Wheel bearing (rear)	RA-6	Windshield	BT-29
Wheel hub (rear)	RA-10	Windshield washer - See Front	
Wheel sensors (ABS)	BR-38	washer	EL-108
		Windshield wiper - See Front wiper	EL-108
		Wiper, front	EL-108