

ALPHABETICAL INDEX

SECTION

INDEX

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-31
ABS actuator	BR-39
ABS circuit diagram	BR-48
ABS component parts and connector locations.....	BR-45
ABS control unit	BR-38
ABS hydraulic circuit	BR-31
ABS self-diagnosis	BR-42
ABS system components.....	BR-31
ABS trouble diagnoses	BR-40
ABS wheel sensors.....	BR-38
ABS wiring diagram	BR-33
A/C air flow.....	HA-16
A/C circuit diagram.....	HA-64
A/C component layout.....	HA-15
A/C compressor clutch removal and installation.....	HA-130
A/C compressor description	HA-11
A/C compressor mounting	HA-129
A/C compressor precaution	HA-5
A/C compressor special service tool	HA-5
A/C control linkage adjustment	HA-99
A/C control operation	HA-18
A/C diagnostic work flow.....	HA-20
A/C harness layout.....	HA-62
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-122
A/C HFC134a (R134a) system service tools	HA-6
A/C HFC134a system service equip- ment precaution.....	HA-8
A/C lubricant (R134a)	HA-124
A/C operational check.....	HA-21
A/C performance chart.....	HA-58
A/C performance test diagnoses	HA-56
A/C relay	HA-98
A/C self-diagnoses	HA-28
A/C service data specification.....	HA-134
A/C symptom chart	HA-24
A/C trouble diagnoses.....	HA-20
A/C wiring diagram.....	HA-65
Accelerator control system	FE-2
Accelerator wire adjustment.....	FE-2
Air bag	RS-5
Air bag disposal	RS-13
Air bag module.....	RS-9
Air bag precautions	GI-2
Air bleeding for brake system.....	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner cut control	EC-19
Air flow meter - See Mass air flow sensor	EC-111
Air mix door control linkage adjustment.....	HA-99
Air mix. door motor	HA-108
Air spoiler, rear	BT-31

Ambient sensor	HA-103
Angular tightening application	EM-2
Antenna - See Power antenna	EL-119
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device)	EL-145
A/T control DTC:P0600	EC-237
AT control unit	AT-104
AT diagnosis communication line.....	EC-278
AT fluid temperature sensor	AT-111
AT removal and installation	AT-134
AT self-diagnoses	AT-44
AT shift lock system	AT-120
AT trouble diagnoses	AT-12
Audio	EL-114
Audio and A/C control removal and installation - See Instrument panel	BT-11
Automatic amplifier.....	HA-105
Automatic transmission fluid replacement.....	MA-17
Automatic transmission number.....	GI-35
Auxiliary air control (AAC).....	EC-233
Axle housing (rear).....	RA-10

B

Back-up lamp	EL-66
Battery.....	EL-26
Belt inspection (drive belt)	MA-10
Blower motor	HA-99
Blower relay	HA-98
Board-on lift	GI-37
Body alignment	BT-32
Brake booster.....	BR-14
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-5
Brake fluid level	MA-18
Brake fluid level and line check	BR-5
Brake hydraulic line.....	BR-7
Brake inspection	MA-19
Brake lines and cables inspection	MA-18
Brake master cylinder.....	BR-11
Brake pedal	BR-9
Bumper, front	BT-5
Bumper, rear	BT-7

C

Camshaft inspection	EM-28
Camshaft position sensor inspection	EC-206
Center bearing assembly (propeller shaft).....	PD-8
Center bearing disassembly (propeller shaft).....	PD-7
Charging system.....	EL-34
Chassis and body maintenance	MA-17
Cigarette lighter	EL-108
Circuit breaker	EL-21

ALPHABETICAL INDEX

Clearance lamp..... EL-61
 Clock..... EL-108
 Closed loop control..... EC-135
 Coil spring (front)..... FA-15
 Coil spring (rear)..... RA-23
 Collision diagnosis..... RS-40
 Combination lamp, front, removal and
 installation..... BT-5
 Combination lamp, rear, removal and
 installation..... BT-19
 Combination meter removal and instal-
 lation - See Instrument panel..... BT-11
 Combination switch..... EL-40
 Compression pressure..... EM-8
 Compressor clutch removal and
 installation..... HA-130
 Compressor description..... HA-11
 Compressor mounting..... HA-129
 Compressor precaution..... HA-5
 Compressor special service tool..... HA-5
 Connecting rod..... EM-43
 Connecting rod bearing clearance..... EM-47
 Connecting rod bushing clearance..... EM-48
 Console box - See Instrument panel..... BT-11
 CONSULT for ECCS..... EC-55
 CONSULT general information..... GI-32
 Control valve (AT)..... AT-155
 Converter housing installation..... AT-135
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-12
 Cooling fan control..... EC-281
 Cooling fan control system..... LC-13
 Cooling fan relay..... HA-98
 Crank angle sensor built into distributor
 - See Camshaft position sensor..... EC-201
 Crankshaft assembly..... EM-50
 Crankshaft bearing clearance..... EM-45
 Crankshaft inspection..... EM-44
 Crankshaft position sensor (OBD)
 DTC0802, P0335..... EC-197
 Crankshaft position sensor (OBD)
 DTC0802, P0335 inspection..... EC-200
 Cylinder block..... EM-40
 Cylinder block boring..... EM-44
 Cylinder head..... EM-25
 Cylinder head bolt tightening..... EM-35

D

Daytime light system..... EL-43
 Daytime running light - See Daytime
 light system..... EL-43
 Detonation sensor - See Knock sensor..... EC-194
 Diagnosis sensor unit..... RS-5
 Diagnostic trouble code (DTC) chart..... EC-76
 Differential carrier assembly..... PD-25
 Differential carrier disassembly..... PD-12
 Differential gear oil replacement..... MA-18
 Dimensions..... GI-36

Direct ignition system..... EC-25
 Distributor ignition (DI) system..... EC-18
 Dome light - See Interior lamp..... EL-80
 Door glass..... BT-9
 Door lock..... BT-9
 Door mirror..... BT-30
 Door trim..... BT-15
 Door, front..... BT-9
 Door, rear..... BT-10
 Drive pinion height..... PD-19
 Drive plate runout..... EM-49
 Drive shaft (rear)..... RA-15
 Dropping resistor (AT)..... AT-112

E

ECCS basic inspection..... EC-73
 ECCS circuit diagram..... EC-9
 ECCS component parts location..... EC-11
 ECCS on board diagnostic system..... EC-34
 ECCS system diagram and chart..... EC-10
 ECCS trouble diagnoses..... EC-69
 ECM input/output signal inspection..... EC-99
 EGR control (EGRC) - solenoid valve..... EC-264
 EGR temperature sensor..... EC-268
 EGR temperature sensor inspection..... EC-272
 EGR valve & EVAP canister purge con-
 trol solenoid valve inspection..... EC-267
 EGR valve inspection..... EC-215
 Electric sun roof..... EL-129
 Electrical load signal circuit..... EC-308
 Electrical unit..... Foldout
 Electronic ignition system..... EC-18
 Engine compartment..... BT-32
 Engine control module (ECM)..... EC-240
 Engine coolant temperature sensor
 (ECTS)..... EC-121
 Engine coolant temperature sensor
 (ECTS) P0115, DTC0103..... EC-121
 Engine coolant temperature sensor
 (ECTS) P0115, DTC0103 inspection..... EC-124
 Engine coolant temperature sensor
 (ECTS) P0125, DTC0908..... EC-130
 Engine coolant temperature sensor
 (ECTS) P0125, DTC0908 inspection..... EC-134
 Engine oil filter replacement..... MA-14
 Engine oil precautions..... GI-4
 Engine oil replacement..... MA-13
 Engine outer component parts..... EM-6
 Engine removal..... EM-37
 Engine room - See Engine
 compartment..... BT-32
 Engine serial number..... GI-35
 EVAP canister..... EC-20
 EVAP canister inspection..... EC-20
 EVAP vapor lines inspection..... MA-16
 Evaporative emission system..... EC-20
 Exhaust gas recirculation (EGR)
 system..... EC-207
 Exhaust system..... FE-6

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Exhaust system inspection MA-20
 Exterior BT-19
 Exterior lamp EL-61

F

Fan control amp. HA-119
 Final drive disassembly PD-12
 Final drive pre-inspection PD-12
 Final drive removal and installation PD-10
 Finisher, interior - See Trim BT-13
 Finisher, rear panel BT-18
 Finisher, trunk lid BT-18
 First (1st) position switch AT-110
 Floor trim BT-13
 Fluid temperature sensor (AT) AT-111
 Fluids MA-8
 Forward clutch AT-174
 Freeze frame data EC-36, 58
 Front axle FA-10
 Front bumper BT-5
 Front combination lamp removal and
 installation BT-5
 Front disc brake BR-17
 Front door BT-9
 Front heated oxygen sensor (HO2S)
 (Left bank) EC-153
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-136
 Front heated oxygen sensor (HO2S) EC-136
 Front heated oxygen sensor (HO2S)
 monitor EC-51
 Front heated oxygen sensor heater
 (Left bank) EC-158
 Front heated oxygen sensor heater
 (Right bank) EC-141
 Front passenger air bag RS-10
 Front seat BT-24
 Front seat belt RS-3
 Front suspension FA-14
 Front washer EL-102
 Front wiper EL-102
 Fuel check valve inspection EC-21
 Fuel cut control (at no load & high
 engine speed) EC-19
 Fuel filler lid BT-7
 Fuel filter replacement MA-12
 Fuel gauge EL-90
 Fuel injection system (Left bank) EC-180, 185
 Fuel injection system (Right bank) EC-170, 175
 Fuel lid opener, electric EL-143
 Fuel line inspection MA-12
 Fuel precautions GI-5
 Fuel pressure check EC-23
 Fuel pressure release EC-23
 Fuel pump control EC-294
 Fuel pump control module EC-245
 Fuel pump inspection EC-297
 Fuel pump relay inspection EC-297
 Fuel system FE-3

Fuel tank vacuum relief valve
 inspection EC-21
 Fuse EL-21
 Fusible link EL-21

G

Garage jack and safety stand GI-38
 Gauges EL-88
 Generic scan tool (GST) EC-67
 Glass BT-9
 Grease MA-8
 Ground distribution EL-22

H

Harness connector EL-5
 Harness layout EL-270
 Hazard warning lamp EL-67
 Headlamp EL-43
 Headlining - See Roof trim BT-16
 Heated oxygen sensor (HO2S) (Front)
 (Left bank) EC-153
 Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-136
 Heated oxygen sensor (HO2S) (front) EC-136
 Heated oxygen sensor (HO2S) heater
 (rear) EC-148, 165
 Heated oxygen sensor (rear) EC-144, 161
 Heated oxygen sensor heater
 (Front)(Left bank) EC-158
 Heated oxygen sensor heater (Front-
 t)(Right bank) EC-141
 Heated seat BT-26, EL-135
 Height (Dimensions) GI-36
 HFC134a (R134a) system precaution HA-3
 HFC134a (R134a) system service
 procedure HA-122
 HFC134a (R134a) system service tools HA-6
 HFC134a system service equipment
 precaution HA-8
 High clutch AT-172
 Hood BT-5
 Horn EL-108
 How to erase DTC for ECCS OBD
 system EC-44
 How to follow flow chart in trouble
 diagnoses GI-29
 How to perform efficient diagnosis for
 an electrical incident GI-18
 How to read wiring diagrams GI-8
 How to use this manual GI-6
 Hydraulic lash adjuster inspection EM-32

I

IACV - air regulator inspection EC-300

ALPHABETICAL INDEX

IACV - FICD solenoid valve inspection EC-307
 IACV-AAC valve inspection..... EC-236
 IACV-FICD solenoid valve EC-304
 Identification plate GI-35
 Idle air control valve (IACV) - air
 regulator..... EC-298
 Idle air control valve (IACV)..... EC-233
 Idle mixture ratio inspection EC-27
 Idle speed inspection EC-27
 Ignition timing inspection..... EC-27
 Illumination EL-73
 In vehicle sensor HA-102
 Inhibitor switch..... AT-109
 Injector inspection EC-291
 Injector removal and installation EC-24
 Instrument panel BT-11
 Intake air temperature sensor EC-116
 Intake air temperature sensor
 inspection..... EC-120
 Intake door control linkage adjustment..... HA-100
 Intake door motor HA-116
 Intake sensor..... HA-104
 Interior..... BT-13
 Interior lamp EL-80

J

Joint connector (J/C) Foldout
 Junction box (J/B) Foldout

K

Kickdown switch AT-112
 Knock sensor (KS) EC-194
 Knock sensor (KS) inspection..... EC-196

L

Length (Dimensions) GI-36
 License lamp..... EL-61
 Line pressure solenoid valve..... AT-111
 Line pressure test (AT)..... AT-115
 Liquid gasket application EM-2
 Location of electrical units EL-267
 Lock, door BT-9
 Low and reverse brake AT-178
 Lower ball joint (rear susp.) RA-25
 Lubricant (R134a) A/C HA-124
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches..... MA-21

M

Magnet clutch HA-130
 Maintenance (engine) MA-10 **GI**
 Maintenance MA-1
 Maintenance general MA-3 **MA**
 Maintenance periodic..... MA-5
 Maintenance schedule (1) MA-6
 Maintenance schedule (2) MA-7 **EM**
 Malfunction indicator lamp (MIL)..... EC-51
 Mass air flow sensor (MAFS) EC-111
 Mass air flow sensor inspection EC-115
 Master cylinder (brake)..... BR-11 **LC**
 Max cold door control linkage
 adjustment HA-100
 Max cold door motor HA-110 **EC**
 Max cold relay HA-98
 Meter..... EL-88 **FE**
 MIL & Data link connectors circuit EC-310
 Mirror, door BT-30
 Mirror, out side BT-30 **AT**
 Misfire..... EC-190
 Mode door control linkage adjustment..... HA-99
 Mode door motor HA-113 **PD**
 Model variation GI-33
 Molding - See Exterior BT-19
 Multi link/lower ball joint (rear) RA-25 **FA**
 Multi-remote control system EL-198
 Multiport fuel injection (MFI) system..... EC-15
 Multiport fuel injection precautions..... GI-4 **RA**

O

Oil change (capacity) MA-8
 Oil pan (engine) EM-9 **ST**
 Oil pressure (engine) LC-5
 Oil pressure relief valve (engine) LC-7 **RS**
 Oil pump (AT) AT-151
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7 **BT**
 Oil seal replacement (engine) EM-21
 Oil seal replacement (front of final
 drive)..... PD-9
 Oil seal replacement (side of final
 drive)..... PD-9 **HA**
 Out side mirror BT-30 **EL**
 Overrun clutch AT-174
 Overrun clutch solenoid valve AT-111
 Oversize piston EM-44

P

Park/Neutral position switch..... EC-242
 Parking brake control BR-29
 Parking drum brake..... BR-25
 PCV (positive crankcase ventilation)
 inspection..... EC-22

ALPHABETICAL INDEX

Pinion bearing preload diff.	PD-19
Pinion gear height diff.	PD-19
Piston assembly.....	EM-49
Piston pin inspection.....	EM-41
Piston ring inspection	EM-42
Piston to bore clearance.....	EM-43
Power antenna.....	EL-119
Power door lock.....	EL-186
Power door mirror.....	EL-136
Power seat.....	EL-131
Power steering (twin orifice) trouble diagnoses.....	ST-33
Power steering fluid level.....	MA-20, ST-6
Power steering gear	ST-14
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-301
Power steering oil pressure switch inspection.....	EC-303
Power steering oil pump.....	ST-26
Power steering system (twin orifice).....	ST-29
Power steering system bleeding	ST-7
Power supply routing.....	EL-9
Power transistor & ignition coil	EC-251
Power window.....	EL-171
Precautions (General)	GI-2
Pressure test (AT)	AT-115
Propeller shaft	PD-5
Propeller shaft on vehicle service.....	PD-5
Propeller shaft vibration	PD-5

R

Rack retainer adjustment.....	ST-6
Radiator	LC-14
Radiator fan - See Cooling fan	LC-12
Radio - See Audio.....	EL-114
Rear air spoiler	BT-31
Rear axle.....	RA-8
Rear bumper.....	BT-7
Rear combination lamp removal and installation	BT-19
Rear disc brake.....	BR-21
Rear door.....	BT-10
Rear heated oxygen sensor (HO2S) ..	EC-144, 161
Rear heated oxygen sensor (HO2S) heater	EC-148, 165
Rear panel finisher	BT-18
Rear seat	BT-27
Rear seat belt.....	RS-4
Rear suspension	RA-21
Rear window	BT-29
Rear window defogger.....	EL-110
Refrigerant connection precaution	HA-4
Refrigerant general precaution	HA-3
Refrigerant lines	HA-126
Refrigeration cycle	HA-10
Reverse clutch.....	AT-168
Revolution sensor (AT).....	AT-110
Road wheel size.....	GI-36
Roof trim	BT-16

Room lamp - See Interior lamp EL-80

S

SAE J1930 terminology list.....	GI-42
SAE J1979 - Mode 1 ~ 7.....	EC-34, 68
Seal - See Exterior	BT-19
Seat belt inspection	MA-21
Seat belt pre-tensioner.....	RS-5
Seat belt pre-tensioner disposal	RS-13
Seat belt, front.....	RS-3
Seat belt, rear	RS-4
Seat, front	BT-24
Seat, rear	BT-27
Self-diagnostic results	EC-51
Shift lock system	AT-120
Shift schedule.....	AT-33
Shift solenoid valve (AT).....	AT-111
Shock absorber (rear)	RA-23
Side bearing preload diff.	PD-18
Side flange installation diff.	PD-10
Side trim.....	BT-13
SMJ (super multiple junction).....	Foldout
Spark plug replacement.....	MA-15
Speedometer	EL-90
Spiral cable	RS-9
Spot lamp.....	EL-80
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses	RS-18
SRS Wiring diagram	RS-21
Stabilizer bar (front)	FA-20
Stabilizer bar (rear)	RA-28
Stall test (AT)	AT-113
Standardized relay.....	EL-6
Starting system	EL-30
Steering gear and linkage inspection	MA-20
Steering linkage	ST-14
Steering wheel and column	ST-10
Steering wheel play	ST-5
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-64
Strut (front).....	FA-15
Sun roof, electric.....	EL-129
Sunload sensor	HA-104
Sunroof	BT-28
Supplemental Restraint System.....	RS-5
Symbols and abbreviations	GI-7
System readiness test (SRT) code	EC-36

T

Tachometer	EL-90
Tail lamp.....	EL-61
Telephone	EL-124
Tension rod (front)	FA-20
Theft warning system	EL-239

ALPHABETICAL INDEX

Thermostat LC-11
 Three way catalyst EC-216
 Three way catalyst function (Left bank)..... EC-216
 Three way catalyst function (Right bank)..... EC-216
 Three way catalyst precautions GI-4
 Throttle bodies EM-23
 Throttle position sensor (TPS) EC-125
 Throttle position sensor adjustment EC-73
 Throttle position sensor inspection EC-129
 Throttle position switch AT-112
 Tie-rod ST-18
 Tie-rod ball joints ST-18
 Tightening torque of standard bolts GI-41
 Time control system EL-217
 Timing belt EM-13
 Tire rotation MA-19
 Tire size GI-36
 Tooth contact diff. PD-24
 Torque converter clutch solenoid valve AT-111
 Torque converter installation AT-134
 Tow truck towing GI-39
 Towing point GI-40
 Transverse serial number GI-35
 Transverse link (front) FA-21
 Tread-FR&RR (Dimensions) GI-36
 Trim BT-13
 Triple pressure switch HA-98
 Trunk lid BT-7
 Trunk lid finisher BT-18
 Trunk lid opener - See Trunk lid BT-7
 Trunk lid opener, electric EL-143
 Trunk lid trim BT-18
 Trunk room lamp EL-80
 Trunk room trim BT-18
 Turbine revolution sensor AT-110
 Turn signal lamp EL-67
 Two-pole lift GI-39

U

Under body BT-34

V

Vacuum hose (brake system) BR-16
 Vacuum hose drawing (ECCS) EC-13 GI
 Valve guide inspection EM-29
 Valve seat inspection EM-31
 Valve spring inspection EM-32 MA
 Vehicle identification number GI-34
 Vehicle speed sensor (VSS) EC-229
 Viscosity number (SAE) MA-8 EM

W

Warning lamps EL-95 EC
 Water pump LC-9
 Water temperature gauge EL-90
 Weatherstrip - See Exterior BT-19 FE
 Wheel alignment (front) FA-7
 Wheel alignment (rear) RA-6
 Wheel balance MA-19 AT
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-6 PD
 Wheel hub (rear) RA-10
 Wheel sensors (ABS) BR-38
 Wheel size GI-36 FA
 Wheelbase (Dimensions) GI-36
 Wide open & closed throttle position
 (CTP) switch EC-125 RA
 Width (Dimensions) GI-36
 Window, door BT-9
 Window, rear BT-29 BR
 Windshield BT-29
 Windshield washer - See Front washer EL-102
 Windshield wiper - See Front wiper EL-102 ST
 Wiper, front EL-102

RS

BT

HA

EL

IDX