

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow	ATC-32
A/C component layout	ATC-21
A/C compressor clutch removal and installation	ATC-134
A/C compressor precaution	ATC-8
A/C compressor special service tool	ATC-12
A/C control operation (auto A/C)	ATC-30
A/C diagnostic work flow (auto A/C)	ATC-34
A/C evaporator	ATC-142
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	ATC-130
A/C HFC134a (R134a) system service tools ...	ATC-12
A/C HFC134a system service equipment precaution ...	ATC-9
A/C lubricant (R134a)	ATC-22
A/C operational check	ATC-57
A/C performance chart	ATC-89
A/C performance test diagnoses	ATC-87
A/C rera	ATC-85
A/C self-diagnoses (auto A/C)	ATC-49
A/C trouble diagnoses (auto A/C)	ATC-34
A/C, A - Wiring diagram	ATC-38
A/T fluid checking	AT-14 , AT-51
A/T fluid replacement	AT-14
A/T fluid temperature sensor	AT-147
A/T IND - Wiring diagram	DI-50
A/T indicator	DI-50
A/T self-diagnoses	AT-87 , AT-97
A/T shift lock system	AT-292
A/T shift lock system - Wiring diagram	AT-293
A/T trouble diagnoses	AT-42
A/T Wiring diagram AT - CAN	AT-100
A/T Wiring diagram AT - D/C	AT-191
A/T Wiring diagram AT - D/CF	AT-196
A/T Wiring diagram AT - E/BRE	AT-168
A/T Wiring diagram AT - FPSW1	AT-223
A/T Wiring diagram AT - FPSW3	AT-227
A/T Wiring diagram AT - FPSW5	AT-231
A/T Wiring diagram AT - FPSW6	AT-235
A/T Wiring diagram AT - FR/B	AT-181
A/T Wiring diagram AT - FR/BF	AT-186
A/T Wiring diagram AT - FTS	AT-148
A/T Wiring diagram AT - HLR/C	AT-200
A/T Wiring diagram AT - HLR/CF	AT-205
A/T Wiring diagram AT - I/C	AT-172
A/T Wiring diagram AT - I/CF	AT-177
A/T Wiring diagram AT - I/LOCK	AT-161
A/T Wiring diagram AT - LC/B	AT-210
A/T Wiring diagram AT - LC/BF	AT-215
A/T Wiring diagram AT - LPSV	AT-129
A/T Wiring diagram AT - MMSW	AT-219
A/T Wiring diagram AT - NONDTC	AT-240
A/T Wiring diagram AT - PNP/SW	AT-107
A/T Wiring diagram AT - POWER	AT-134
A/T Wiring diagram AT - STSIG	AT-103
A/T Wiring diagram AT - TCCSIG	AT-124

A/T Wiring diagram AT - TCV	AT-119
A/T Wiring diagram AT - TRSA/T	AT-154
A/T Wiring diagram AT - VSS A/T	AT-112
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-608 , EC-614 , EC-627
Accelerator pedal released position learning	EC-46
Accelerator wire adjustment	ACC-3
Aiming adjustment	LT-39
Air bag	SRS-3
Air bag disposal	SRS-51
Air bleeding for brake system	BR-9
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-30
Air flow meter - See Mass air flow sensor	EC-171 , EC-179 , EC-419
Air mix door control linkage adjustment	ATC-71
Air mix. door motor	ATC-69 , ATC-126
Alternator	SC-17
Ambient sensor	ATC-99 , ATC-113
Angular tightening application	EM-3
Antenna	AV-33
APPS1 - Wiring diagram	EC-610
APPS2 - Wiring diagram	EC-616
APPS3 - Wiring diagram	EC-629
ASCD - Wiring diagram	ACS-8
ASCD (automatic speed control device)	ACS-4
Ashtray illumination(Front)	LT-183
Audio	AV-5
AUDIO - Wiring diagram	AV-8
Audio and A/C control removal and installation - See	
Instrument panel	IP-11
AUT/DP - Wiring diagram	SE-20
Auto air conditioner - Wiring diagram	ATC-38
Auto anti-dazzling inside mirror	GW-58
Automatic amplifier	ATC-47 , ATC-60
Automatic drive positioner	SE-13
Automatic transmission fluid replacement	MA-21
AV and NAVI control unit	DI-72 , DI-99 , AV-38
AV communication line	DI-115 , AV-59
AV control unit	DI-72 , DI-99
Axle	MA-28

B

BACK/L - Wiring diagram	LT-104
Back-up lamp	LT-104
Ball joint (front)	FSU-12
Ball Joint (rear)	RSU-10
Basic inspection	EC-82
Battery	SC-4
Battery/Starting/Charging System Tester(Battery)	SC-6
Battery/Starting/Charging System Tester(Charging	
system)	SC-19
Battery/Starting/Charging System Tester(Starting	
system)	SC-11
Block heater	EM-72
Blower motor	ATC-75 , ATC-119

ALPHABETICAL INDEX

Blower unit	ATC-117
Body alignment	BL-208
Body component parts	BL-196
Body construction	BL-207
Body exterior paint color	BL-195
Body repair	BL-195
Body sealing	BL-204
Bose speaker amp.	AV-5
Brake booster	BR-21
Brake fluid change	BR-9
Brake fluid level	MA-25
Brake fluid level and line check	BR-9
Brake inspection	MA-26
Brake lines and cables inspection	MA-26
Brake master cylinder	BR-13
Brake switch	EC-603
BRK/SW - Wiring diagram	EC-604
Bulb specifications	LT-187
Bumper, front	EI-15
Bumper, rear	EI-17
BYPS/V - Wiring diagram	EC-580 , EC-587

C

Camshaft	EM-46
Camshaft inspection	EM-50
Camshaft position sensor (PHASE)	EC-315
CAN - Wiring diagram	EC-142 , LAN-25 , LAN-41
CAN (Controller Area Network)	LAN-21 , LAN-24 , LAN-40
CAN communication ...	EC-30 , EC-141 , AT-29 , AT-99 , BRC-10 , DI-8 , LAN-21 , LAN-24 , LAN-40
Canister-See EVAP canister	EC-688
CD auto changer	AV-29
CD/CHG - Wiring diagram	AV-8
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-20
CHIME - Wiring diagram	DI-55
CIGAR - Wiring diagram	WW-26
Cigarette lighter	WW-26
Cigarette lighter illumination	LT-183
Circuit breaker	PG-52
Clearance lamp	LT-106
Clock	DI-154
CLOCK - Wiring diagram	DI-154
Closed loop control	EC-27
Closed loop control (Bank 1)	EC-501
Closed loop control (Bank 2)	EC-501
Coil spring (rear)	RSU-14
Collision diagnosis	SRS-58
Combination lamp, front, removal and installation	LT-42
Combination lamp, rear, removal and installation	LT-123
Combination meter	DI-6
COMM - Wiring diagram	DI-115 , LAN-9 , AV-59
COMPAS - Wiring diagram	DI-28
Compass	DI-26

Component Location (auto A/C)	ATC-35
Compression pressure	EM-60
Compressor clutch removal and installation ..	ATC-134
Compressor special service tool	ATC-12
Condenser	ATC-140
Connecting rod	EM-89
Connecting rod bearing clearance	EM-89
Connecting rod bushing clearance	EM-89
Console box - See Instrument panel	IP-15
CONSULT for engine	EC-108
CONSULT-II for engine	EC-108 , EC-123
Contaminated refrigerant	ATC-4
Control unit	ATC-112
Control units (terminal arrangement)	PG-56
Control valve (A/T)	AT-36
Controller Area Network (CAN)	LAN-21 , LAN-24 , LAN-40
Converter housing installation	AT-307
COOL/V - Wiring diagram	EC-509 , EC-575
Coolant replacement	MA-13
Cooling circuit (engine)	CO-7
Cooling fan	CO-18
Cooling fan control	EC-505 , EC-572
Cooling fan fluid level	MA-19
Cooling fan speed control solenoid valve	EC-572
Corrosion protection	BL-200
Crankcase ventilation system - See Positive crankcase ventilation	EC-697
Crankshaft	EM-73
Crankshaft position sensor (POS)	EC-307
Crash zone sensor	SRS-47
Cylinder block	EM-72
Cylinder block boring	EM-92
Cylinder head	EM-60

D

D/LOCK - Wiring diagram	BL-22
Data link connector	EC-684
Data link connector for Consult	EC-111
Daytime light system	LT-44
Daytime running light - See Daytime light system	LT-44
DEF - Wiring diagram	GW-63 , SE-102
Diagnosis sensor unit	SRS-50
Diagnostic trouble code (DTC) for OBD system ..	EC-9
Diagnostic trouble code (DTC) inspection priority chart	EC-79
Direct clutch solenoid valve	AT-190 , AT-195
DLC - Wiring diagram	EC-684
Door glass	GW-47 , GW-53
Door lock	BL-106 , BL-109
Door mirror	GW-117
Door trim	EI-31
Door, front	BL-102 , GW-47
Door, rear	BL-102 , GW-53
Drive belt	EM-12
Drive belt inspection	MA-13
Drive pinion diff. inspection	RFD-12
Drive shaft	MA-28

ALPHABETICAL INDEX

Drive shaft (rear)	RAX-10
Driver air bag	SRS-38
DTC work support	EC-119
DTRL - Wiring diagram	LT-49
Duct and grilles	ATC-127
Duel mode muffler	EX-5
Duel mode muffler -Wiring diagram-	EX-7

E

ECM input/output signal	EC-99
ECM power supply	EC-133 , EC-415
ECTS - Wiring diagram	EC-192 , EC-203
Electric sunroof	RF-10
Electric throttle control actuator	EC-436 , EC-438 , EC-451
Electrical load signal circuit	EC-678
Electrical unit	PG-56
Electrical units location	PG-48
Electronic ignition (EI) system	EC-28
Electronic key	BL-82 , BL-97 , BL-157
Engine control circuit diagram	EC-97
Engine control component parts location	EC-91
Engine control module (ECM)	EC-407
Engine control system diagram and chart	EC-23
Engine coolant	CO-9
Engine coolant temperature sensor (ECTS) ..	EC-190 , EC-201
Engine fail-safe system	EC-81
Engine oil	LU-6
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine removal	EM-69
Engine room cover	EM-11
ETC1 - Wiring diagram	EC-439
ETC2 - Wiring diagram	EC-447
ETC3 - Wiring diagram	EC-452
EVAP canister	EC-688
EVAP canister purge volume control solenoid valve	EC-339 , EC-539
EVAP canister vent control valve	EC-345 , EC-547 , EC-553
EVAP control system (small leak) diagnosis ..	EC-330 , EC-368 , EC-376 , EC-530 , EC-560
EVAP control system pressure sensor	EC-352 , EC-359
EVAP control system purge flow monitoring diagnosis	EC-325
EVAP vapor lines inspection	MA-19
Evaporative emission (EVAP) system	EC-685
Evaporator	ATC-142
Exhaust manifold	EM-22
Exhaust system	EX-3
Exhaust system inspection	EX-3 , MA-20
Expansion valve	ATC-142

F

F/LID - Wiring diagram	BL-117
------------------------------	------------------------

F/PUMP - Wiring diagram	EC-668
Fan switch	ATC-31
Final drive removal and installation	RFD-10
Finisher, interior - See Trim	EI-34
Finisher, trunk lid	EI-41
Floor trim	EI-37
Flow charts	GI-26
FLS1 - Wiring diagram	EC-386
FLS2 - Wiring diagram	EC-393
FLS3 - Wiring diagram	EC-570
Fluid temperature sensor (A/T)	AT-147
Fluorescent leak detector	ATC-144
FPCM - Wiring diagram	EC-516
Freeze frame data	EC-56
Front axle	FAX-4
Front brake solenoid valve	AT-180 , AT-185
Front bumper	EI-15
Front combination lamp removal and installation	LT-42
Front disc brake	BR-24
Front door	BL-102 , GW-47
Front Door Trim	EI-31
Front passenger air bag	SRS-42
Front seat	SE-127
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-49
Front side air bag	SRS-43
Front suspension	FSU-6
Front wiper	WW-4
FTTS - Wiring diagram	EC-284 , EC-288
Fuel cut control (at no load high engine speed) .	EC-30
Fuel gauge	DI-6
Fuel injection system (Bank 1)	EC-265 , EC-274
Fuel injection system (Bank 2)	EC-265 , EC-274
Fuel injector and fuel tube	EM-31
Fuel level sensor ...	EC-385 , EC-390 , EC-392 , EC-569
Fuel lid opener, electric	BL-116
Fuel line inspection	FL-2 , MA-16
Fuel precautions	GI-5
Fuel pressure check	EC-50
Fuel pressure release	EC-49
Fuel pump	EC-667
Fuel pump and gauge	FL-3
Fuel pump control module	EC-514
Fuel pump dropping resistor	EC-514
Fuel system	FL-2
Fuel tank	FL-9
Fuel tank temperature sensor	EC-282 , EC-287
FUELB1 - Wiring diagram	EC-267 , EC-276
FUELB2 - Wiring diagram	EC-268 , EC-277
Fuse	PG-52
Fuse and fusible link block	PG-64
Fuse and fusible link box	PG-65
Fuse block	PG-62 , PG-63
Fusible link	PG-52

G

Generator	SC-17
Generator - See Alternator	SC-17

ALPHABETICAL INDEX

Generic scan tool (GST) [EC-121](#)
 Glass [GW-11](#), [GW-13](#), [GW-47](#), [GW-53](#)
 Glove box lamp [LT-183](#)
 GPS antenna [AV-37](#)
 Grille - See Exterior [EI-19](#)
 Ground distribution [PG-13](#)

H

H/AIM - Wiring diagram [LT-76](#)
 H/LAMP - Wiring diagram [LT-11](#)
 Handling precautions for plastics [BL-219](#)
 Harness connector [PG-53](#)
 Harness layout [PG-26](#)
 Hazard warning lamp [LT-88](#)
 Headlamp [LT-6](#)
 Headlamp aiming control [LT-76](#)
 Headlamp leveler - See Headlamp aiming control
[LT-76](#)
 Headlamp removal and installation [LT-42](#)
 Headlining - See Roof trim [EI-39](#)
 Heated oxygen sensor 1 (bank 1) [EC-212](#), [EC-221](#),
[EC-233](#), [EC-464](#), [EC-470](#)
 Heated oxygen sensor 1 (bank 2) [EC-212](#), [EC-221](#),
[EC-233](#), [EC-464](#), [EC-470](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-155](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-155](#)
 Heated oxygen sensor 2 (bank 1) [EC-242](#), [EC-253](#),
[EC-477](#), [EC-489](#)
 Heated oxygen sensor 2 (bank 2) [EC-242](#), [EC-253](#),
[EC-477](#), [EC-489](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-163](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-163](#)
 Heater and cooling unit (Heater core) [ATC-122](#)
 HFC134a (R134a) system precaution [ATC-4](#)
 HFC134a (R134a) system service procedure [ATC-130](#)
 HFC134a (R134a) system service tools [ATC-12](#)
 HFC134a system service equipment precaution [ATC-9](#)
 High & low reverse clutch solenoid valve [AT-199](#),
[AT-204](#)
 Hood [BL-13](#)
 Horn [WW-30](#)
 HORN - Wiring diagram [WW-30](#)
 How to erase DTC for OBD system [EC-63](#)

I

I/MIRR - Wiring diagram [GW-58](#)
 IATS - Wiring diagram [EC-187](#), [EC-207](#)
 ICC - Wiring diagram [ACS-48](#)
 Identification [ATC-11](#)
 Idle air volume learning [EC-46](#)
 Idle mixture ratio [EC-35](#)
 Idle speed [EC-35](#), [EC-82](#)
 Idle speed control (ISC) [EC-398](#), [EC-400](#)
 Ignition coil [EM-28](#), [EC-642](#)
 Ignition control system [EC-642](#)
 Ignition timing [EC-35](#), [EC-82](#)
 IGNSYS - Wiring diagram [EC-643](#)

ILL - Wiring diagram [LT-173](#)
 Illumination [LT-171](#)
 Illumination control [LT-183](#)
 In vehicle sensor [ATC-101](#), [ATC-114](#)
 INF/D - Wiring diagram [DI-82](#), [DI-109](#)
 INJECT - Wiring diagram [EC-655](#)
 Injector [EC-654](#)
 Input clutch solenoid valve [AT-171](#), [AT-176](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-30](#)
 INT/L - Wiring diagram [LT-185](#)
 Intake air temperature sensor [EC-186](#), [EC-205](#)
 Intake door control linkage adjustment [ATC-74](#)
 Intake door motor [ATC-72](#), [ATC-120](#)
 Intake manifold [EM-17](#)
 Intake sensor [ATC-107](#), [ATC-116](#)
 Intake valve timing control (Bank 1) [EC-144](#)
 Intake valve timing control (Bank 2) [EC-144](#)
 Intake valve timing control position sensor (Bank 1)
[EC-456](#)
 Intake valve timing control position sensor (Bank 2)
[EC-456](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-425](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-425](#)
 Intelligent cruise control (ICC) system [ACS-34](#)
 Interior lamp [LT-124](#)
 IVCB1 - Wiring diagram [EC-147](#), [EC-426](#)
 IVCB2 - Wiring diagram [EC-149](#), [EC-428](#)
 IVCSB1 - Wiring diagram [EC-457](#)
 IVCSB2 - Wiring diagram [EC-459](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVMS (In-Vehicle Multiplexing System) [LAN-4](#)
 IVMS-System description [LAN-4](#)

J

Joint connector (J/C) [PG-55](#)
 Junction box (J/B) [PG-62](#), [PG-63](#)

K

Keyless entry system - See Multi-remote control system
[BL-51](#)
 Knock sensor (KS) [EC-303](#)
 KS - Wiring diagram [EC-304](#)

L

Laser beam aiming adjustment [ACS-40](#)
 Latch (lower anchors and tether for children) system ...
[SB-10](#)
 License lamp [LT-106](#)
 Line pressure solenoid valve [AT-128](#)
 Line pressure test (A/T) [AT-52](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 LOAD - Wiring diagram [EC-679](#)

ALPHABETICAL INDEX

Location of electrical units [PG-48](#)
Lock, door [BL-106](#), [BL-109](#)
Low coast brake solenoid valve [AT-209](#), [AT-214](#)
Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses .
[WT-9](#)
Low tire pressure warning system - Wiring diagram
[WT-10](#)
Lubricant (R134a) A/C [ATC-5](#), [ATC-22](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-147](#)

M

MAFS - Wiring diagram [EC-174](#), [EC-181](#), [EC-421](#)
Magnet clutch [ATC-80](#), [ATC-134](#)
MAIN - Wiring diagram [EC-133](#)
Maintenance (engine) [MA-13](#)
Major overhaul (Final drive) [RFD-13](#)
Malfunction indicator lamp (MIL) [EC-65](#), [EC-410](#)
Mass air flow sensor (MAFS) [EC-171](#), [EC-179](#), [EC-419](#)
Master cylinder (brake) [BR-13](#)
METER - Wiring diagram [DI-13](#)
MIL - Wiring diagram [EC-411](#)
MIRROR - Wiring diagram [GW-84](#), [GW-116](#)
Mirror, door [GW-117](#)
Mirror, out side [GW-117](#)
Misfire [EC-297](#)
Mode door control linkage adjustment [ATC-68](#)
Mode door motor [ATC-66](#), [ATC-125](#)
Molding - See Exterior [EI-23](#), [EI-25](#), [EI-27](#), [EI-29](#)
Mud guard - See Exterior [EI-22](#)
Multiplex communication [ATC-109](#)
Multiport fuel injection (MFI) system [EC-26](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system [BL-51](#)

N

NATS - Wiring diagram [BL-161](#), [BL-175](#)
NAVI - Wiring diagram [AV-51](#)
Navigation system [AV-36](#)
Nissan torque demand (NTD) control system ... [EC-29](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-157](#)
O2H1B2 - Wiring diagram [EC-159](#)
O2H2B1 - Wiring diagram [EC-165](#)
O2H2B2 - Wiring diagram [EC-167](#)
O2S1B1 - Wiring diagram ... [EC-214](#), [EC-224](#), [EC-236](#)
O2S1B2 - Wiring diagram ... [EC-216](#), [EC-226](#), [EC-238](#)
O2S2B1 - Wiring diagram .. [EC-244](#), [EC-256](#), [EC-480](#),
[EC-492](#)
O2S2B2 - Wiring diagram .. [EC-246](#), [EC-258](#), [EC-482](#),

[EC-494](#)
Oil filter [LU-8](#)
Oil pan (engine) [EM-25](#)
Oil pressure (engine) [LU-6](#)
Oil pump (engine) [LU-9](#)
Oil seal replacement (engine) [EM-57](#)
Oil seal replacement (front of final drive) [RFD-6](#)
Oil seal replacement (side of final drive) [RFD-8](#)
On board diagnostic system [EC-51](#), [EC-66](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-691](#)
Out side mirror [GW-117](#)
Overheat [EC-505](#)

P

Park/Neutral position switch [EC-593](#)
Park/neutral position switch (A/T) [AT-106](#), [AT-238](#)
Parking brake control [PB-4](#)
Parking drum brake [PB-5](#)
Parking lamp [LT-106](#)
PCV (positive crankcase ventilation) [EC-697](#)
Personal lamp [LT-149](#)
PGC/V - Wiring diagram [EC-341](#), [EC-541](#)
PHASE - Wiring diagram [EC-316](#)
Piston pin inspection [EM-87](#)
Piston ring inspection [EM-88](#)
Piston to bore clearance [EM-92](#)
PNP/SW - Wiring diagram [EC-595](#)
POS - Wiring diagram [EC-308](#)
POWER - Wiring diagram [EC-416](#), [PG-3](#)
Power door lock [BL-19](#)
Power seat [SE-93](#)
Power steering fluid level [PS-6](#), [MA-27](#)
Power steering gear [PS-13](#)
Power steering oil pump [PS-25](#)
Power steering pressure (PSP) sensor [EC-402](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-2](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-354](#), [EC-361](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-222](#)
Pressure switch 1 [AT-185](#), [AT-222](#)
Pressure switch 2 [AT-214](#)
Pressure switch 3 [AT-176](#), [AT-226](#)
Pressure switch 5 [AT-195](#), [AT-230](#)
Pressure switch 6 [AT-204](#), [AT-234](#)
Pressure test (A/T) [AT-52](#)
Propeller shaft [PR-4](#)
Propeller shaft on vehicle service [PR-4](#)
Propeller shaft vibration [PR-4](#)
PS/SEN - Wiring diagram [EC-403](#)
PTT switch (Push To Talk switch) [DI-156](#)
Push To Talk switch (PTT switch) [DI-156](#)

R

Radiator [CO-12](#)
Radiator coolant temperature sensor [EC-431](#)

ALPHABETICAL INDEX

Radio - See Audio	AV-5	Spark plug replacement	MA-18	A
RCTS - Wiring diagram	EC-433	Specification value	EC-128	
Rear axle	RAX-6	Speedometer	DI-6	B
Rear bumper	EI-17	Spiral cable	SRS-40	
Rear combination lamp removal and installation	LT-123	Spot lamp	LT-149	C
Rear disc brake	BR-31	SROOF - Wiring diagram	RF-12	
Rear door	BL-102 , GW-53	SRS - See Supplemental Restraint System	SRS-6	D
Rear door trim	EI-31	SRS - Wiring diagram	SRS-12	
Rear parcel shelf finisher	EI-36	SRS Trouble diagnoses	SRS-8	E
Rear seat	SE-133	Stabilizer bar (front)	FSU-14	
Rear seat belt	SB-6	Stabilizer bar (rear)	RSU-15	F
Rear suspension	RSU-5	Stall test (A/T)	AT-51	
Rear window	GW-13	Standardized relay	PG-60	G
Rear window defogger	GW-60	START - Wiring diagram	SC-10	
Refrigerant connection precaution	ATC-5	Start signal	EC-663	H
Refrigerant discharging evacuating charging	ATC-130	Starter	SC-9	
Refrigerant general precaution	ATC-5	Starting system	SC-9	I
Refrigerant lines	ATC-130	Steering gear and linkage inspection	MA-27	
Refrigerant pressure sensor	EC-673 , ATC-85 , ATC-139	Steering linkage	PS-13	J
Refrigeration cycle	ATC-16	Steering wheel and column	PS-7 , PS-9	
Relay block	PG-64	Steering wheel turning force	PS-7	K
REMOTE - Wiring diagram	AV-15	Step lamp	LT-151	
Remote keyless entry system	BL-51	STEP/L - Wiring diagram	LT-154	L
Removal and installation (A/T)	AT-305	Stop lamp	LT-102	
Reverse interlock door mirror	GW-78	Stop lamp switch	EC-603	I
Revolution sensor (A/T)	AT-111	STOP/L - Wiring diagram	LT-102	
Ring gear diff. inspection	RFD-12	Strut (rear)	RSU-9	J
Rocker cover	EM-33	Sun roof, electric	RF-10	
Roof trim	EI-39	Sunload sensor	ATC-104 , ATC-115	K
Room lamp	LT-124 , LT-149	Sunroof	RF-22	
Room lamp - See Interior lamp	LT-124	Supplemental Restraint System	SRS-6	L
ROOM/L - Wiring diagram	LT-129	Supplemental restraint system - Wiring diagram	SRS-12	
RP/SEN - Wiring diagram	EC-674	Suspension	MA-28	I
		Symbols and abbreviations	GI-9 , GI-22	
		Symptom matrix chart	EC-87	J
		System readiness test (SRT) code	EC-57	

S

S/SIG - Wiring diagram	EC-664
SEAT - Wiring diagram	SE-94
Seat belt inspection	SB-7
Seat belt pre-tensioner disposal	SRS-51
Seat belt, front	SB-4
Seat belt, rear	SB-6
Seat, front	SE-127
Seat, rear	SE-133
SEN/PW - Wiring diagram	EC-527
Sheft warning system	BL-125
SHIFT - Wiring diagram	AT-293
Shift change signal	EC-601
Shift lock system	AT-292
Shift schedule	AT-60 , AT-366
Side air bag (satellite) sensor	SRS-48
Side bearing preload diff.	RFD-17
Side curtain air bag	SRS-45
Side flange installation diff.	RFD-9
Side trim	EI-34
SMJ (super multiple junction)	PG-58
Spark plug	EM-29

T

Tachometer	DI-6
Tail lamp	LT-106
TAIL/L - Wiring diagram	LT-108
TCM circuit diagram	AT-50
TCM inspection table	AT-84
THEFT - Wiring diagram	BL-130
Thermostat	CO-23
Three way catalyst	EM-22
Three way catalyst function (Bank 1)	EC-320
Three way catalyst function (Bank 2)	EC-320
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-445
Throttle position sensor (TPS)	EC-195 , EC-291 , EC-522 , EC-524 , EC-526 , EC-620 , EC-627
Throttle position switch	AT-238
Throttle valve closed position learning	EC-46
Tie-rod	PS-13
Timing chain	EM-35
Tire rotation	MA-25

ALPHABETICAL INDEX

TLID - Wiring diagram	BL-117	Wheel bearing (rear)	RAX-6
Tooth contact diff.	RFD-22	Wheel hub (front)	FAX-4
Top tether strap child restraint	SB-11	Wheel sensor (VDC)	BRC-65
Torque converter installation	AT-307	WINDOW - Wiring diagram	GW-21
Torque convertor clutch solenoid valve AT-118 , AT-123		Window antenna	AV-33
TPS1 - Wiring diagram	EC-293	Window, door	GW-47 , GW-53
TPS2 - Wiring diagram	EC-197	Window, rear	GW-13
TPS3 - Wiring diagram	EC-622	Windshield	GW-11
TRANSMT - Wiring diagram	BL-192	Windshield wiper - See Front wiper	WW-4
Trim	EI-34	WIPER - Wiring diagram	WW-7
Trouble diagnoses	GI-10	Wiper and washer	WW-4
Trunk lid	BL-112	Wiper, front	WW-4
Trunk lid finisher	EI-41	Wiring Diagram (Cell code) list	PG-44
Trunk lid opener, electric	BL-54 , BL-116	Wiring diagrams	GI-14
Trunk lid trim	EI-41	WT-T/WARN - Wiring diagram	WT-10
Trunk room lamp	LT-185		
Trunk room trim	EI-41		
Turbine revolution sensor	AT-153		
TURN - Wiring diagram	LT-91		
Turn signal lamp	LT-88		
Two trip detection logic	EC-51		

V

VACS (voice activated control system)	DI-156
Vacuum cut valve	EC-584
Vacuum cut valve bypass valve	EC-578 , EC-584 , EC-688
Vacuum hose (brake system)	BR-23
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-52
Valve guide	EM-65
Valve lifter	EM-51
Valve seat	EM-66
Valve spring	EM-68
Vanity mirror lamp	LT-185
Variable induction air control system (VIAS) ...	EC-634
VDC -Wiring diagram	BRC-18
Vehicle security (theft warning) system	BL-125
Vehicle speed sensor (VSS)	EC-396 , EC-599
VEHSEC - Wiring diagram	BL-130
VENT/V - Wiring diagram ...	EC-347 , EC-549 , EC-556
VIAS - Wiring diagram	EC-636
Vice activated control system (VACS)	DI-156
VOICE - Wiring diagram	DI-159

W

W/ANT - Wiring diagram	AV-32
WARN - Wiring diagram	DI-34
Warning chime	DI-52
Warning lamps	DI-30
Water control valve	CO-23
Water pump	CO-21
Water temperature gauge	DI-6
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-5 , MA-24
Wheel bearing (front)	FAX-4