

SECTION

ALPHABETICAL INDEX

INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

INDEX

ALPHABETICAL INDEX

A

A/C air flow	ATC-32
A/C component layout	ATC-21
A/C compressor clutch removal and installation	ATC-138
A/C compressor precaution	ATC-8
A/C compressor special service tool	ATC-12
A/C control operation (auto A/C)	ATC-30
A/C diagnostic work flow (auto A/C)	ATC-34
A/C evaporator	ATC-146
A/C HFC134a (R134a) system precaution	ATC-4
A/C HFC134a (R134a) system service procedure	ATC-134
A/C HFC134a (R134a) system service tools ...	ATC-12
A/C HFC134a system service equipment precaution ...	ATC-9
A/C lubricant (R134a)	ATC-22
A/C operational check	ATC-57
A/C performance chart	ATC-91
A/C performance test diagnoses	ATC-89
A/C rera	ATC-86
A/C self-diagnoses (auto A/C)	ATC-49
A/C trouble diagnoses (auto A/C)	ATC-34
A/C, A - Wiring diagram	ATC-38
A/T fluid checking	AT-14 , AT-52
A/T fluid cooler cleaning	AT-16
A/T fluid replacement	AT-14
A/T fluid temperature sensor	AT-154
A/T IND - Wiring diagram	DI-44
A/T indicator	DI-44
A/T self-diagnoses	AT-101
A/T shift lock system	AT-306
A/T shift lock system - Wiring diagram	AT-307
A/T trouble diagnoses	AT-43
A/T Wiring diagram AT - CAN	AT-104
A/T Wiring diagram AT - D/C	AT-200
A/T Wiring diagram AT - D/CF	AT-206
A/T Wiring diagram AT - E/BRE	AT-175
A/T Wiring diagram AT - FPSW1	AT-235
A/T Wiring diagram AT - FPSW3	AT-239
A/T Wiring diagram AT - FPSW5	AT-243
A/T Wiring diagram AT - FPSW6	AT-247
A/T Wiring diagram AT - FR/B	AT-190
A/T Wiring diagram AT - FR/BF	AT-195
A/T Wiring diagram AT - FTS	AT-155
A/T Wiring diagram AT - HLR/C	AT-210
A/T Wiring diagram AT - HLR/CF	AT-216
A/T Wiring diagram AT - I/C	AT-180
A/T Wiring diagram AT - I/CF	AT-186
A/T Wiring diagram AT - I/LOCK	AT-168
A/T Wiring diagram AT - LC/B	AT-221
A/T Wiring diagram AT - LC/BF	AT-227
A/T Wiring diagram AT - LPSV	AT-135
A/T Wiring diagram AT - MMSW	AT-231
A/T Wiring diagram AT - NONDTC	AT-254
A/T Wiring diagram AT - PNP/SW	AT-112
A/T Wiring diagram AT - POWER	AT-141
A/T Wiring diagram AT - STSIG	AT-107

A/T Wiring diagram AT - TCCSIG	AT-130
A/T Wiring diagram AT - TCV	AT-124
A/T Wiring diagram AT - TRSA/T	AT-161
A/T Wiring diagram AT - VSS A/T	AT-117
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-615 , EC-621 , EC-634
Accelerator pedal released position learning	EC-44
Accelerator wire adjustment	ACC-3
Aiming adjustment	LT-39
Air bag	SRS-3
Air bag disposal	SRS-52
Air bleeding for brake system	BR-9
Air cleaner and air duct	EM-16
Air cleaner filter replacement	MA-14
Air conditioner cut control	EC-30
Air flow meter - See Mass air flow sensor	EC-174 , EC-182 , EC-422
Air mix door control linkage adjustment	ATC-71
Air mix. door motor	ATC-69 , ATC-130
Alternator	SC-17
Ambient sensor	ATC-101 , ATC-115
Angular tightening application	EM-3
Antenna	AV-35
APPS1 - Wiring diagram	EC-617
APPS2 - Wiring diagram	EC-623
APPS3 - Wiring diagram	EC-636
ASCD - Wiring diagram	ACS-8
ASCD (automatic speed control device)	ACS-4
Ashtray illumination(Front)	LT-185
Audio	AV-5
AUDIO - Wiring diagram	AV-8
Audio and A/C control removal and installation - See	
Instrument panel	IP-11
AUT/DP - Wiring diagram	SE-20
Auto air conditioner - Wiring diagram	ATC-38
Auto anti-dazzling inside mirror	GW-58
Automatic amplifier	ATC-47 , ATC-60
Automatic drive positioner	SE-13
Automatic transmission fluid replacement	MA-20
AV and NAVI control unit	DI-65 , DI-89 , AV-40
AV communication line	DI-103 , AV-60
AV control unit	DI-65 , DI-89
Axle	MA-26

B

BACK/L - Wiring diagram	LT-106
Back-up lamp	LT-106
Ball joint (front)	FSU-12
Ball Joint (rear)	RSU-10
Basic inspection	EC-81
Battery	SC-4
Battery/Starting/Charging System Tester(Battery)	SC-6
Battery/Starting/Charging System Tester(Charging	
system)	SC-19
Battery/Starting/Charging System Tester(Starting	
system)	SC-11
Block heater	EM-80

ALPHABETICAL INDEX

Blower motor [ATC-75](#), [ATC-121](#)
 Blower unit [ATC-119](#)
 Body alignment [BL-208](#)
 Body component parts [BL-196](#)
 Body construction [BL-207](#)
 Body exterior paint color [BL-195](#)
 Body repair [BL-195](#)
 Body sealing [BL-204](#)
 Bose speaker amp. [AV-5](#)
 Brake booster [BR-20](#)
 Brake fluid change [BR-9](#)
 Brake fluid level [MA-24](#)
 Brake fluid level and line check [BR-9](#)
 Brake inspection [MA-24](#)
 Brake lines and cables inspection [MA-24](#)
 Brake master cylinder [BR-13](#)
 Brake switch [EC-610](#)
 BRK/SW - Wiring diagram [EC-611](#)
 Bulb specifications [LT-189](#)
 Bumper, front [EI-15](#)
 Bumper, rear [EI-17](#)
 BYPS/V - Wiring diagram [EC-586](#), [EC-594](#)

C

Camshaft [EM-49](#)
 Camshaft inspection [EM-50](#)
 Camshaft position sensor (PHASE) [EC-317](#)
 CAN - Wiring diagram [EC-144](#), [LAN-25](#), [LAN-41](#)
 CAN (Controller Area Network) [LAN-21](#), [LAN-24](#),
[LAN-40](#)
 CAN communication . [EC-30](#), [EC-143](#), [AT-32](#), [AT-103](#),
[BRC-10](#), [DI-7](#), [LAN-21](#), [LAN-24](#), [LAN-40](#)
 Canister-See EVAP canister [EC-695](#)
 CD auto changer [AV-30](#)
 CD/CHG - Wiring diagram [AV-8](#)
 CHARGE - Wiring diagram [SC-18](#)
 Charging system [SC-17](#)
 Chassis and body maintenance [MA-19](#)
 CHIME - Wiring diagram [DI-49](#)
 CIGAR - Wiring diagram [WW-27](#)
 Cigarette lighter [WW-27](#)
 Cigarette lighter illumination [LT-185](#)
 Circuit breaker [PG-13](#)
 Clearance lamp [LT-108](#)
 Clock [DI-135](#)
 CLOCK - Wiring diagram [DI-135](#)
 Closed loop control [EC-27](#)
 Closed loop control (Bank 1) [EC-505](#)
 Closed loop control (Bank 2) [EC-505](#)
 Coil spring (rear) [RSU-14](#)
 Collision diagnosis [SRS-59](#)
 Combination lamp, front, removal and installation
[LT-42](#)
 Combination lamp, rear, removal and installation
[LT-127](#)
 Combination meter [DI-6](#)
 COMM - Wiring diagram [DI-103](#), [LAN-9](#), [AV-60](#)
 COMPAS - Wiring diagram [DI-23](#)

Compass [DI-21](#)
 Component Location (auto A/C) [ATC-35](#)
 Compression pressure [EM-65](#)
 Compressor clutch removal and installation .. [ATC-138](#)
 Compressor special service tool [ATC-12](#)
 Condenser [ATC-144](#)
 Connecting rod [EM-98](#)
 Console box - See Instrument panel [IP-15](#)
 CONSULT for engine [EC-108](#)
 CONSULT-II for engine [EC-123](#)
 Contaminated refrigerant [ATC-4](#)
 Control unit [ATC-114](#)
 Control units (terminal arrangement) [PG-56](#)
 Control valve (A/T) [AT-37](#), [AT-312](#)
 Controller Area Network (CAN) [LAN-21](#), [LAN-24](#),
[LAN-40](#)
 Converter housing installation [AT-333](#)
 COOL/V - Wiring diagram [EC-513](#), [EC-581](#)
 Coolant replacement [MA-12](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-19](#)
 Cooling fan control [EC-509](#), [EC-578](#)
 Cooling fan fluid level [MA-18](#)
 Cooling fan speed control solenoid valve [EC-578](#)
 Corrosion protection [BL-200](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-704](#)
 Crankshaft [EM-81](#)
 Crankshaft position sensor (POS) [EC-309](#)
 Crash zone sensor [SRS-48](#)
 Cylinder block [EM-80](#)
 Cylinder block boring [EM-101](#)
 Cylinder head [EM-65](#)

D

D/LOCK - Wiring diagram [BL-22](#)
 Data link connector [EC-691](#)
 Data link connector for Consult [EC-110](#)
 Daytime light system [LT-44](#)
 Daytime running light - See Daytime light system [LT-44](#)
 DEF - Wiring diagram [GW-63](#), [SE-102](#)
 Diagnosis sensor unit [SRS-51](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-9](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-78](#)
 Direct clutch solenoid valve [AT-199](#), [AT-205](#)
 DLC - Wiring diagram [EC-691](#)
 Door glass [GW-47](#), [GW-53](#)
 Door lock [BL-107](#), [BL-110](#)
 Door mirror [GW-117](#)
 Door trim [EI-31](#)
 Door, front [BL-103](#), [GW-47](#)
 Door, rear [BL-103](#), [GW-53](#)
 Drive belt [EM-13](#)
 Drive belt inspection [MA-12](#)
 Drive pinion diff. inspection [RFD-13](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-38](#)

ALPHABETICAL INDEX

DTC work support [EC-119](#)
 DTRL - Wiring diagram [LT-49](#)
 Duct and grilles [ATC-131](#)
 Duel mode muffler [EX-6](#)

E

ECM input/output signal [EC-98](#)
 ECM power supply [EC-133](#), [EC-418](#)
 ECM/PW - Wiring diagram [EC-419](#)
 ECTS - Wiring diagram [EC-195](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-440](#), [EC-442](#),
[EC-455](#)
 Electrical load signal circuit [EC-685](#)
 Electrical unit [PG-56](#)
 Electrical units location [PG-49](#)
 Electronic ignition (EI) system [EC-28](#)
 Electronic key [BL-82](#), [BL-97](#), [BL-158](#)
 Engine control circuit diagram [EC-96](#)
 Engine control component parts location [EC-90](#)
 Engine control module (ECM) [EC-410](#)
 Engine control system diagram and chart [EC-23](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) .. [EC-193](#),
[EC-205](#)
 Engine fail-safe system [EC-80](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-16](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-15](#)
 Engine removal [EM-76](#)
 Engine room cover [EM-12](#)
 ETC1 - Wiring diagram [EC-443](#)
 ETC2 - Wiring diagram [EC-451](#)
 ETC3 - Wiring diagram [EC-456](#)
 EVAP canister [EC-695](#)
 EVAP canister purge volume control solenoid valve
[EC-342](#), [EC-544](#)
 EVAP canister vent control valve [EC-348](#), [EC-552](#),
[EC-558](#)
 EVAP control system (small leak) diagnosis .. [EC-333](#),
[EC-370](#), [EC-378](#), [EC-535](#), [EC-565](#)
 EVAP control system pressure sensor [EC-355](#), [EC-362](#)
 EVAP control system purge flow monitoring diagnosis
[EC-327](#)
 EVAP vapor lines inspection [MA-18](#)
 Evaporative emission (EVAP) system [EC-692](#)
 Evaporator [ATC-146](#)
 Exhaust manifold [EM-22](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-19](#)
 Expansion valve [ATC-146](#)

F

F/LID - Wiring diagram [BL-118](#)
 F/PUMP - Wiring diagram [EC-675](#)
 Fan switch [ATC-31](#)

Final drive removal and installation [RFD-11](#)
 Finisher, interior - See Trim [EI-34](#)
 Finisher, trunk lid [EI-42](#)
 Floor trim [EI-38](#)
 Flow charts [GI-26](#)
 FLS1 - Wiring diagram [EC-388](#)
 FLS2 - Wiring diagram [EC-395](#)
 FLS3 - Wiring diagram [EC-575](#)
 Fluid temperature sensor (A/T) [AT-154](#)
 Fluorescent leak detector [ATC-148](#)
 FPCM - Wiring diagram [EC-521](#)
 Freeze frame data [EC-54](#)
 Front axle [FAX-4](#)
 Front brake solenoid valve [AT-189](#), [AT-194](#)
 Front bumper [EI-15](#)
 Front combination lamp removal and installation [LT-42](#)
 Front disc brake [BR-23](#)
 Front door [BL-103](#), [GW-47](#)
 Front Door Trim [EI-31](#)
 Front passenger air bag [SRS-42](#)
 Front seat [SE-127](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-50](#)
 Front side air bag [SRS-44](#)
 Front suspension [FSU-6](#)
 Front wiper [WW-4](#)
 FTTS - Wiring diagram [EC-285](#), [EC-289](#)
 Fuel cut control (at no load high engine speed) . [EC-30](#)
 Fuel gauge [DI-6](#)
 Fuel injection system (Bank 1) [EC-266](#), [EC-275](#)
 Fuel injection system (Bank 2) [EC-266](#), [EC-275](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor .. [EC-387](#), [EC-392](#), [EC-394](#), [EC-574](#)
 Fuel lid opener, electric [BL-117](#)
 Fuel line inspection [FL-2](#), [MA-14](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-48](#)
 Fuel pressure release [EC-46](#)
 Fuel pump [EC-674](#)
 Fuel pump and gauge [FL-3](#)
 Fuel pump control module [EC-519](#)
 Fuel pump dropping resistor [EC-519](#)
 Fuel system [FL-2](#)
 Fuel tank [FL-9](#)
 Fuel tank temperature sensor [EC-283](#), [EC-288](#)
 FUEL B1 - Wiring diagram [EC-268](#), [EC-277](#)
 FUEL B2 - Wiring diagram [EC-269](#), [EC-278](#)
 Fuse [PG-13](#)
 Fuse and fusible link block [PG-64](#)
 Fuse and fusible link box [PG-65](#)
 Fuse block [PG-62](#), [PG-63](#)
 Fusible link [PG-13](#)

G

Generator [SC-17](#)
 Generator - See Alternator [SC-17](#)
 Generic scan tool (GST) [EC-121](#)
 Glass [GW-11](#), [GW-13](#), [GW-47](#), [GW-53](#)

ALPHABETICAL INDEX

Glove box lamp [LT-185](#)
 GPS antenna [AV-39](#)
 Grille - See Exterior [EI-19](#)
 Ground distribution [PG-14](#)

H

H/AIM - Wiring diagram [LT-75](#)
 H/LAMP - Wiring diagram [LT-11](#)
 Handling precautions for plastics [BL-219](#)
 Harness connector [PG-53](#)
 Harness layout [PG-27](#)
 Hazard warning lamp [LT-89](#)
 Headlamp [LT-6](#)
 Headlamp aiming control [LT-75](#)
 Headlamp leveler - See Headlamp aiming control [LT-75](#)
 Headlamp removal and installation [LT-42](#)
 Headlining - See Roof trim [EI-40](#)
 Heated oxygen sensor 1 (bank 1) [EC-214](#), [EC-224](#),
[EC-236](#), [EC-468](#), [EC-474](#)
 Heated oxygen sensor 1 (bank 2) [EC-214](#), [EC-224](#),
[EC-236](#), [EC-468](#), [EC-474](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-157](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-157](#)
 Heated oxygen sensor 2 (bank 1) [EC-245](#), [EC-254](#),
[EC-481](#), [EC-493](#)
 Heated oxygen sensor 2 (bank 2) [EC-245](#), [EC-254](#),
[EC-481](#), [EC-493](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-165](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-165](#)
 Heater and cooling unit (Heater core) [ATC-124](#)
 HFC134a (R134a) system precaution [ATC-4](#)
 HFC134a (R134a) system service procedure [ATC-134](#)
 HFC134a (R134a) system service tools [ATC-12](#)
 HFC134a system service equipment precaution [ATC-9](#)
 High & low reverse clutch solenoid valve [AT-209](#),
[AT-215](#)
 Hood [BL-13](#)
 Horn [WW-31](#)
 HORN - Wiring diagram [WW-31](#)
 How to erase DTC for OBD system [EC-62](#)

I

I/MIRR - Wiring diagram [GW-58](#)
 IATS - Wiring diagram [EC-190](#)
 ICC - Wiring diagram [ACS-48](#)
 Identification [ATC-11](#)
 Idle air volume learning [EC-44](#)
 Idle mixture ratio [EC-33](#)
 Idle speed [EC-33](#), [EC-81](#)
 Idle speed control (ISC) [EC-401](#), [EC-403](#)
 IGN/SG - Wiring diagram [EC-650](#)
 Ignition coil [EM-28](#), [EC-649](#)
 Ignition control system [EC-649](#)
 Ignition timing [EC-33](#), [EC-81](#)
 ILL - Wiring diagram [LT-175](#)
 Illumination [LT-173](#)

Illumination control [LT-185](#)
 In vehicle sensor [ATC-103](#), [ATC-116](#)
 INF/D - Wiring diagram [DI-73](#), [DI-97](#)
 INJECT - Wiring diagram [EC-662](#)
 Injector [EC-661](#)
 Input clutch solenoid valve [AT-179](#), [AT-185](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-31](#)
 INT/L - Wiring diagram [LT-187](#)
 Intake air temperature sensor [EC-189](#), [EC-208](#)
 Intake door control linkage adjustment [ATC-74](#)
 Intake door motor [ATC-72](#), [ATC-122](#)
 Intake manifold [EM-18](#)
 Intake sensor [ATC-109](#), [ATC-118](#)
 Intake valve timing control (Bank 1) [EC-146](#)
 Intake valve timing control (Bank 2) [EC-146](#)
 Intake valve timing control position sensor (Bank 1)
[EC-460](#)
 Intake valve timing control position sensor (Bank 2)
[EC-460](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-428](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-428](#)
 Intelligent cruise control (ICC) system [ACS-34](#)
 Interior lamp [LT-128](#)
 IVCB1 - Wiring diagram [EC-149](#), [EC-429](#)
 IVCB2 - Wiring diagram [EC-151](#), [EC-431](#)
 IVCSB1 - Wiring diagram [EC-461](#)
 IVCSB2 - Wiring diagram [EC-463](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVMS (In-Vehicle Multiplexing System) [LAN-4](#)
 IVMS-System description [LAN-4](#)

J

Joint connector (J/C) [PG-55](#)
 Junction box (J/B) [PG-62](#), [PG-63](#)

K

Keyless entry system - See Multi-remote control system
[BL-51](#)
 Knock sensor (KS) [EC-304](#)
 KS - Wiring diagram [EC-305](#)

L

Laser beam aiming adjustment [ACS-40](#)
 Latch (lower anchors and tether for children) system ...
[SB-10](#)
 License lamp [LT-108](#)
 Line pressure solenoid valve [AT-134](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 LOAD - Wiring diagram [EC-686](#)
 Location of electrical units [PG-49](#)
 Lock, door [BL-107](#), [BL-110](#)

ALPHABETICAL INDEX

Low coast brake solenoid valve [AT-220](#), [AT-226](#)
Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses .
[WT-9](#)
Low tire pressure warning system - Wiring diagram
[WT-10](#)
Lubricant (R134a) A/C [ATC-5](#), [ATC-22](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-151](#)

M

MAFS - Wiring diagram [EC-177](#), [EC-184](#), [EC-424](#)
Magnet clutch [ATC-80](#), [ATC-138](#)
MAIN - Wiring diagram [EC-133](#)
Maintenance (engine) [MA-12](#)
MAJOR OVERHALL [AT-334](#)
Major overhaul (Final drive) [RFD-14](#)
Malfunction indicator lamp (MIL) [EC-64](#), [EC-413](#)
Mass air flow sensor (MAFS) [EC-174](#), [EC-182](#), [EC-422](#)
Master cylinder (brake) [BR-13](#)
METER - Wiring diagram [DI-10](#)
MIL - Wiring diagram [EC-414](#)
MIRROR - Wiring diagram [GW-84](#), [GW-116](#)
Mirror, door [GW-117](#)
Mirror, out side [GW-117](#)
Misfire [EC-298](#)
Mode door control linkage adjustment [ATC-68](#)
Mode door motor [ATC-66](#), [ATC-129](#)
Molding - See Exterior [EI-23](#), [EI-25](#), [EI-27](#), [EI-29](#)
Mud guard - See Exterior [EI-22](#)
Multiplex communication [ATC-111](#)
Multiport fuel injection (MFI) system [EC-26](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system [BL-51](#)

N

NATS - Wiring diagram [BL-162](#), [BL-176](#)
NAVI - Wiring diagram [AV-52](#)
Navigation system [AV-38](#)
Nissan torque demand (NTD) control system [EC-29](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-159](#)
O2H1B2 - Wiring diagram [EC-161](#)
O2H2B1 - Wiring diagram [EC-167](#)
O2H2B2 - Wiring diagram [EC-169](#)
O2S1B1 - Wiring diagram ... [EC-216](#), [EC-227](#), [EC-239](#)
O2S1B2 - Wiring diagram ... [EC-218](#), [EC-229](#), [EC-241](#)
O2S2B1 - Wiring diagram .. [EC-247](#), [EC-257](#), [EC-484](#),
[EC-496](#)
O2S2B2 - Wiring diagram .. [EC-249](#), [EC-259](#), [EC-486](#),
[EC-498](#)

Oil filter [LU-9](#)
Oil pan (engine) [EM-25](#)
Oil pressure (engine) [LU-6](#)
Oil pump (engine) [LU-10](#)
Oil seal replacement (engine) [EM-61](#)
Oil seal replacement (front of final drive) [RFD-7](#)
Oil seal replacement (side of final drive) [RFD-9](#)
On board diagnostic system [EC-49](#), [EC-65](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-698](#)
Out side mirror [GW-117](#)
Overheat [EC-509](#)

P

Park/Neutral position switch [EC-600](#)
Park/neutral position switch (A/T) [AT-110](#), [AT-250](#)
Parking brake control [PB-4](#)
Parking drum brake [PB-5](#)
Parking lamp [LT-108](#)
PCV (positive crankcase ventilation) [EC-704](#)
Personal lamp [LT-153](#)
PGC/V - Wiring diagram [EC-344](#), [EC-546](#)
PHASE - Wiring diagram [EC-318](#)
Piston pin inspection [EM-96](#)
Piston ring inspection [EM-97](#)
Piston to bore clearance [EM-101](#)
PNP/SW - Wiring diagram [EC-602](#)
POS - Wiring diagram [EC-310](#)
POWER - Wiring diagram [PG-3](#)
Power door lock [BL-19](#)
Power seat [SE-93](#)
Power steering fluid level [PS-6](#), [MA-25](#)
Power steering gear [PS-13](#)
Power steering oil pump [PS-25](#)
Power steering pressure (PSP) sensor [EC-405](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-2](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-357](#), [EC-364](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-222](#)
Pressure switch 1 [AT-194](#), [AT-234](#)
Pressure switch 2 [AT-226](#)
Pressure switch 3 [AT-185](#), [AT-238](#)
Pressure switch 5 [AT-205](#), [AT-242](#)
Pressure switch 6 [AT-215](#), [AT-246](#)
Pressure test (A/T) [AT-53](#)
Propeller shaft [PR-4](#)
Propeller shaft on vehicle service [PR-4](#)
Propeller shaft vibration [PR-4](#)
PS/SEN - Wiring diagram [EC-406](#)
PTT switch (Push To Talk switch) [DI-137](#)
Push To Talk switch (PTT switch) [DI-137](#)

R

Radiator [CO-12](#)
Radiator coolant temperature sensor [EC-434](#)
Radio - See Audio [AV-5](#)

ALPHABETICAL INDEX

RCTS - Wiring diagram	EC-436
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-127
Rear disc brake	BR-29
Rear door	BL-103 , GW-53
Rear door trim	EI-31
Rear parcel shelf finisher	EI-37
Rear seat	SE-133
Rear seat belt	SB-6
Rear suspension	RSU-5
Rear window	GW-13
Rear window defogger	GW-60
Refrigerant connection precaution	ATC-5
Refrigerant discharging evacuating charging	ATC-134
Refrigerant general precaution	ATC-5
Refrigerant lines	ATC-134
Refrigerant pressure sensor	EC-680 , ATC-86 , ATC-143
Refrigeration cycle	ATC-16
Relay block	PG-64
REMOTE - Wiring diagram	AV-15
Remote keyless entry system	BL-51
Removal and installation (A/T)	AT-331
Reverse interlock door mirror	GW-78
Revolution sensor (A/T)	AT-116 , AT-319
Ring gear diff. inspection	RFD-13
Rocker cover	EM-36
Roof trim	EI-40
Room lamp	LT-128 , LT-152
Room lamp - See Interior lamp	LT-128
ROOM/L - Wiring diagram	LT-133
RP/SEN - Wiring diagram	EC-681

S

S/SIG - Wiring diagram	EC-671
SEAT - Wiring diagram	SE-94
Seat belt inspection	SB-7
Seat belt pre-tensioner disposal	SRS-52
Seat belt, front	SB-4
Seat belt, rear	SB-6
Seat, front	SE-127
Seat, rear	SE-133
SEN/PW - Wiring diagram	EC-532
Sheft warning system	BL-126
SHIFT - Wiring diagram	AT-307
Shift change signal	EC-608
Shift lock system	AT-306
Shift schedule	AT-62 , AT-397
Shock absorber (adjustable, rear)	RSU-9
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-49
Side bearing preload diff.	RFD-20
Side curtain air bag	SRS-46
Side flange installation diff.	RFD-9
Side trim	EI-34
SMJ (super multiple junction)	PG-58

Spark plug	EM-29
Spark plug replacement	MA-16
Specification value	EC-128
Speedometer	DI-6
Spiral cable	SRS-40
Spot lamp	LT-152
SROOF - Wiring diagram	RF-12
SRS - See Supplemental Restraint System	SRS-6
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-14
Stabilizer bar (rear)	RSU-15
Stall test (A/T)	AT-52
Standardized relay	PG-60
START - Wiring diagram	SC-10
Start signal	EC-670
Starter	SC-9
Starting system	SC-9
Steering gear and linkage inspection	MA-25
Steering linkage	PS-13
Steering wheel and column	PS-7 , PS-9
Steering wheel turning force	PS-7
Step lamp	LT-154
STEP/L - Wiring diagram	LT-157
Stop lamp	LT-104
Stop lamp switch	EC-610
STOP/L - Wiring diagram	LT-104
Strut (rear)	RSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-106 , ATC-117
Sunroof	RF-22
Supplemental Restraint System	SRS-6
Suspension	MA-26
Symbols and abbreviations	GI-9 , GI-22
Symptom matrix chart	EC-86
System readiness test (SRT) code	EC-55

T

Tachometer	DI-6
Tail lamp	LT-108
TAIL/L - Wiring diagram	LT-111
TCM circuit diagram	AT-51
TCM inspection table	AT-86
THEFT - Wiring diagram	BL-131
Thermostat	CO-24
Three way catalyst	EM-22
Three way catalyst function (Bank 1)	EC-322
Three way catalyst function (Bank 2)	EC-322
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-449
Throttle position sensor (TPS)	EC-199 , EC-292 , EC-527 , EC-529 , EC-531 , EC-627
Throttle position switch	AT-250
Throttle valve closed position learning	EC-44
Tie-rod	PS-13
Timing chain	EM-38
Tire rotation	MA-23
TLID - Wiring diagram	BL-118
Tooth contact diff.	RFD-25

ALPHABETICAL INDEX

Top tether strap child restraint	SB-11	Wheel hub (rear)	RAX-6
Torque converter installation	AT-333	Wheel sensor (VDC)	BRC-63
Torque converter clutch solenoid valve	AT-123 , AT-128	WINDOW - Wiring diagram	GW-21
TPS1 - Wiring diagram	EC-294	Window antenna	AV-35
TPS2 - Wiring diagram	EC-201	Window, door	GW-47 , GW-53
TPS3 - Wiring diagram	EC-629	Window, rear	GW-13
TRANSMT - Wiring diagram	BL-192	Windshield	GW-11
Trim	EI-34	Windshield wiper - See Front wiper	WW-4
Trouble diagnoses	GI-10	WIPER - Wiring diagram	WW-8
Trunk lid	BL-113	Wiper and washer	WW-4
Trunk lid finisher	EI-42	Wiper, front	WW-4
Trunk lid opener, electric	BL-54 , BL-117	Wiring Diagram (Cell code) list	PG-45
Trunk lid trim	EI-42	Wiring diagrams	GI-14
Trunk room lamp	LT-187	WT-T/WARN - Wiring diagram	WT-10
Trunk room trim	EI-42		
Turbine revolution sensor	AT-160		
TURN - Wiring diagram	LT-93		
Turn signal lamp	LT-89		
Two trip detection logic	EC-49		

V

VACS (voice activated control system)	DI-137
Vacuum cut valve	EC-590
Vacuum cut valve bypass valve	EC-584 , EC-590 , EC-695
Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-55
Valve guide	EM-71
Valve lifter	EM-52
Valve seat	EM-73
Valve spring	EM-74
Vanity mirror lamp	LT-187
Variable induction air control system (VIAS) ...	EC-641
VDC -Wiring diagram	BRC-16
Vehicle security (theft warning) system	BL-126
Vehicle speed sensor (VSS)	EC-399 , EC-606
VEHSEC - Wiring diagram	BL-131
VENT/V - Wiring diagram ...	EC-350 , EC-554 , EC-561
VIAS - Wiring diagram	EC-643
Vice activated control system (VACS)	DI-137
VOICE - Wiring diagram	DI-140

W

W/ANT - Wiring diagram	AV-34
WARN - Wiring diagram	DI-29
Warning chime	DI-46
Warning lamps	DI-25
Water control valve	CO-24
Water pump	CO-22
Water temperature gauge	DI-6
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-5 , MA-22
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4