

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Symbols	
(VK45DE)	GI-6
(VQ35DE)	GI-6
A	
A/C air flow	ATC-37
A/C component layout	ATC-25
A/C compressor mounting	ATC-153 , ATC-157 , ATC-158 , ATC-159 , ATC-161 , ATC-163 , ATC-164 , ATC-166 , ATC-167 , ATC-168
A/C compressor precaution	ATC-12
A/C compressor special service tool	ATC-16
A/C control operation (auto A/C)	ATC-33
A/C diagnostic work flow (auto A/C)	ATC-110
A/C evaporator	ATC-167
A/C HFC134a (R134a) system precaution	ATC-6
A/C HFC134a (R134a) system service procedure	ATC-150
A/C HFC134a (R134a) system service tools ...	ATC-17
A/C HFC134a system service equipment precaution ...	ATC-13
A/C lubricant (R134a)	ATC-26
A/C lubrication oil	ATC-173
A/C operational check	ATC-65
A/C self-diagnoses (auto A/C)	ATC-56 , ATC-110
A/C service data specification	ATC-173
A/C system description (auto A/C)	ATC-29
A/C trouble diagnoses (auto A/C)	ATC-40
A/C, A - Wiring diagram	ATC-46
A/T fluid checking	AT-13 , AT-53 , MA-29
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12 , MA-31
A/T fluid temperature sensor	AT-135
A/T IND - Wiring diagram	DI-56
A/T self-diagnoses	AT-92 , AT-103
A/T shift lock system	AT-229
A/T shift lock system - Wiring diagram	AT-230
A/T trouble diagnoses	AT-44
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-617 , EC-624 , EC-638 , EC-1336 , EC-1343 , EC-1357
Accelerator pedal released position learning	EC-86 , EC-788
AF1B1-Wiring diagram	EC-237 , EC-246 , EC-255 , EC-265 , EC-648 , EC-950 , EC-959 , EC-968 , EC-978 , EC-1367
AF1B2-Wiring diagram	EC-239 , EC-248 , EC-257 , EC-267 , EC-650 , EC-952 , EC-961 , EC-970 , EC-980 , EC-1369
AF1HB1-Wiring diagram	EC-171 , EC-884
AF1HB2-Wiring diagram	EC-173 , EC-886
Air bag	SRS-3
Air bag precautions	SRS-3
Air cleaner and air duct(VK45DE)	EM-177
Air cleaner and air duct(VQ35DE)	EM-19
Air cleaner filter replacement	MA-25
Air cleaner filter replacement(VQ35DE)	MA-18
Air cleaner filter(VQ35DE)	EM-20
Air conditioner cut control	EC-35 , EC-737
Air flow meter - See Mass air flow sensor	EC-193 , EC-202 , EC-906 , EC-915
Air fuel ratio sensor 1	EC-234 , EC-244 , EC-253 , EC-262 , EC-646 , EC-947 , EC-957 , EC-966 , EC-975 , EC-1365
Air fuel ratio sensor 1 heater	EC-170 , EC-883
Air mix. door motor	ATC-82 , ATC-140
Ambient sensor	ATC-112 , ATC-125
Angular tightening application	EM-7
Angular tightening application(VK45DE)	EM-165
APPS1 - Wiring diagram	EC-619 , EC-1338
APPS2 - Wiring diagram	EC-626 , EC-1345
APPS3 - Wiring diagram	EC-640 , EC-1359
ASC/BS - Wiring diagram	EC-578 , EC-1291
ASC/SW - Wiring diagram	EC-561 , EC-1274
ASCBOF - Wiring diagram	EC-658 , EC-1378
ASCD	EC-36 , EC-738
ASCD (automatic speed control device)	ACS-3
ASCIND - Wiring diagram	EC-665 , EC-1385
AT indicator lamp	DI-55
Auto air conditioner - Wiring diagram	ATC-46
Auto amp	ATC-124
Auto anti-dazzling inside mirror	GW-69 , GW-70
Automatic amplifier	ATC-54 , ATC-67 , ATC-124
Automatic transmission fluid replacement	MA-32
AWD - Wiring diagram	TF-17
Axle	MA-37
B	
Back-up lamp	LT-245
Basic inspection	EC-78 , EC-780
Battery	SC-4
Battery current sensor	EC-524 , EC-531 , EC-538 , EC-545 , EC-1237 , EC-1244 , EC-1251 , EC-1258
Battery/Starting/Charging System Tester	SC-7 , SC-11 , SC-25
BCM (Body control module)	BCS-3
Block heater(VK45DE)	EM-252
Block heater(VQ35DE)	EM-124
Blower motor	ATC-88 , ATC-131
Blower unit	ATC-129
Brake fluid level	MA-35
Brake hydraulic line	BR-11
Brake inspection	MA-36
Brake lines and cables inspection	MA-35
Brake pedal	BR-6
Brake switch	EC-589 , EC-1307
BRK/SW - Wiring diagram	EC-591 , EC-1309
Bulb specifications	LT-313
Bumper, front	EI-11
Bumper, rear	EI-14
C	
Camshaft inspection(VK45DE)	EM-217
Camshaft inspection(VQ35DE)	EM-87

ALPHABETICAL INDEX

Camshaft position sensor (PHASE) [EC-371](#), [EC-1082](#)
 Camshaft(VK45DE) [EM-215](#)
 Camshaft(VQ35DE) [EM-85](#)
 CAN [DI-109](#)
 CAN - Wiring diagram [EC-162](#), [EC-866](#), [AT-106](#)
 CAN (Controller Area Network) ... [SB-5](#), [BL-26](#), [BL-59](#),
[BL-221](#), [GW-19](#), [GW-73](#), [GW-95](#), [SE-16](#)
 CAN communication [EC-161](#), [EC-164](#), [EC-740](#),
[EC-865](#), [EC-868](#), [AT-32](#), [AT-105](#), [TF-13](#), [TF-32](#), [SB-5](#),
[BL-26](#), [BL-59](#), [BL-221](#), [GW-19](#), [GW-73](#), [GW-95](#), [SE-16](#),
[WW-11](#)
 Canister-See EVAP canister [EC-42](#), [EC-744](#)
 Center bearing assembly (propeller shaft) [PR-12](#)
 Center bearing disassembly (propeller shaft) ... [PR-11](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-20](#)
 Chassis and body maintenance [MA-29](#)
 CHIME - Wiring diagram [DI-63](#)
 CIGAR - Wiring diagram [WW-50](#)
 Cigarette lighter [WW-50](#)
 Circuit breaker [PG-17](#)
 Clock [DI-107](#)
 CLOCK - Wiring diagram [DI-107](#)
 Closed loop control [EC-32](#), [EC-734](#)
 Closed loop control (Bank 1) [EC-496](#), [EC-1211](#)
 Closed loop control (Bank 2) [EC-496](#), [EC-1211](#)
 Collision diagnosis [SRS-54](#)
 Combination lamp, front, removal and installation
[LT-75](#)
 Combination lamp, rear, removal and installation
[LT-265](#)
 Combination meter [DI-5](#)
 COMPAS - Wiring diagram [DI-105](#)
 Compass [DI-102](#)
 Component Location (auto A/C) [ATC-42](#)
 Compression pressure(VK45DE) [EM-235](#)
 Compression pressure(VQ35DE) [EM-102](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-164](#)
 Connecting rod bearing clearance(VK45DE) .. [EM-275](#)
 Connecting rod bushing clearance [EM-143](#)
 Connecting rod bushing clearance(VK45DE) .. [EM-271](#)
 Connecting rod(VK45DE) [EM-271](#)
 Connecting rod(VQ35DE) [EM-141](#)
 CONSULT-II Reference value (A/T) [AT-90](#)
 Control units (terminal arrangement) [PG-107](#)
 Control valve (A/T) [AT-38](#)
 Controller Area Network (CAN) ... [SB-5](#), [BL-26](#), [BL-59](#),
[BL-221](#), [GW-19](#), [GW-73](#), [GW-95](#), [SE-16](#)
 Converter housing installation [AT-277](#), [AT-280](#)
 COOL/F - Wiring diagram [EC-502](#), [EC-1217](#)
 Coolant replacement(VQ35DE) [MA-15](#)
 Cooling circuit (engine)(VK45DE) [CO-38](#)
 Cooling circuit (engine)(VQ35DE) [CO-9](#)
 Cooling fan motor [EC-509](#), [EC-1224](#)
 Cooling fan(VK45DE) [CO-51](#)
 Cooling fan(VQ35DE) [CO-22](#)
 Cowl top [EI-18](#)
 Cowl top cover [EI-18](#)

Crankcase ventilation system - See Positive crankcase
 ventilation [EC-51](#), [EC-753](#)
 Crankshaft position sensor (POS) ... [EC-364](#), [EC-1075](#)
 Crankshaft(VK45DE) [EM-253](#)
 Crankshaft(VQ35DE) [EM-141](#)
 Crash zone sensor [SRS-49](#)
 CUR/SE - Wiring diagram .. [EC-526](#), [EC-533](#), [EC-540](#),
[EC-547](#), [EC-1239](#), [EC-1246](#), [EC-1253](#), [EC-1260](#)
 Cylinder block boring(VK45DE) [EM-274](#)
 Cylinder block(VK45DE) [EM-252](#)
 Cylinder block(VQ35DE) [EM-124](#)
 Cylinder head bolt tightening(VK45DE) [EM-237](#)
 Cylinder head bolt tightening(VQ35DE) [EM-105](#)
 Cylinder head(VK45DE) [EM-235](#)
 Cylinder head(VQ35DE) [EM-102](#)

D

D/LOCK - Wiring diagram [BL-28](#)
 Daytime light system [LT-78](#)
 Daytime running light - See Daytime light system [LT-78](#)
 DEF - Wiring diagram [SB-7](#), [SE-119](#)
 Diagnosis sensor unit [SRS-52](#)
 Diagnostic trouble code (DTC) for OBD system [EC-16](#),
[EC-59](#), [EC-718](#), [EC-761](#)
 Direct clutch solenoid valve [AT-155](#), [AT-157](#)
 Display and amp.assembly [ATC-54](#), [ATC-67](#)
 Door glass [GW-61](#), [GW-65](#)
 Door glass Fitting Adjustment(Front) [GW-64](#)
 Door glass Fitting Adjustment(Rear) [GW-68](#)
 Door lock [BL-194](#)
 Door mirror [GW-118](#)
 Door trim [EI-34](#)
 Door, front [BL-188](#), [GW-61](#)
 Door, rear [BL-188](#), [GW-65](#)
 Drive belt inspection [MA-22](#)
 Drive belt(VK45DE) [EM-174](#)
 Drive belt(VQ35DE) [EM-16](#)
 Drive shaft [MA-38](#)
 Drive shaft (rear) [RAX-8](#)
 Driver air bag [SRS-42](#)
 DTRL - Wiring diagram [LT-83](#)
 Duct and grilles [ATC-143](#)

E

ECM power supply [EC-154](#), [EC-479](#), [EC-858](#), [EC-1186](#)
 ECM/PW - Wiring diagram [EC-480](#), [EC-1187](#)
 ECTS - Wiring diagram [EC-216](#), [EC-928](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-604](#), [EC-615](#),
[EC-1322](#), [EC-1334](#)
 Electric throttle control actuator (VK45DE) [EM-179](#)
 Electric throttle control actuator (VQ35DE) [EM-21](#)
 Electrical load signal circuit [EC-667](#), [EC-1387](#)
 Electrical unit [PG-107](#)
 Electrical units location [PG-98](#)
 Electronic ignition (EI) system [EC-33](#), [EC-735](#)
 Engine control module (ECM) [EC-483](#), [EC-1190](#)

ALPHABETICAL INDEX

Engine control system diagram [EC-30](#), [EC-732](#)
 Engine coolant temperature sensor (ECTS) ... [EC-214](#),
[EC-226](#), [EC-926](#), [EC-939](#)
 Engine coolant(VK45DE) [CO-40](#)
 Engine coolant(VQ35DE) [CO-11](#)
 Engine oil filter replacement [MA-26](#)
 Engine oil filter replacement(VQ35DE) [MA-19](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement(VQ35DE) [MA-18](#)
 Engine oil(VK45DE) [LU-27](#)
 Engine oil(VQ35DE) [LU-7](#)
 Engine removal(VK45DE) [EM-247](#)
 Engine removal(VQ35DE) [EM-114](#)
 Engine room cover [EM-15](#)
 Engine room cover(VK45DE) [EM-173](#)
 ETC1 - Wiring diagram [EC-605](#), [EC-1323](#)
 ETC2 - Wiring diagram [EC-600](#), [EC-1318](#)
 ETC3 - Wiring diagram [EC-611](#), [EC-1330](#)
 EVAP canister [EC-42](#), [EC-744](#)
 EVAP canister purge volume control solenoid valve
[EC-400](#), [EC-408](#), [EC-1108](#), [EC-1116](#)
 EVAP canister vent control valve [EC-415](#), [EC-422](#),
[EC-1123](#), [EC-1130](#)
 EVAP control system (small leak) diagnosis .. [EC-391](#),
[EC-453](#), [EC-1100](#), [EC-1160](#)
 EVAP control system pressure sensor [EC-428](#),
[EC-431](#), [EC-437](#), [EC-1136](#), [EC-1139](#), [EC-1145](#)
 EVAP control system purge flow monitoring diagnosis
[EC-386](#), [EC-1095](#)
 EVAP vapor lines inspection [MA-21](#), [MA-28](#)
 Evaporative emission (EVAP) system . [EC-39](#), [EC-741](#)
 Evaporator [ATC-167](#)
 Exhaust manifold(VK45DE) [EM-183](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-29](#)
 Expansion valve [ATC-168](#)

F

F/FOG - Wiring diagram [LT-198](#)
 F/PUMP - Wiring diagram [EC-676](#), [EC-1396](#)
 Final drive pre-inspection [FFD-16](#), [RFD-19](#)
 Final drive removal and installation .. [FFD-13](#), [RFD-16](#)
 Floor trim [EI-50](#)
 Flow charts [GI-28](#)
 Fluid temperature sensor (A/T) [AT-135](#)
 Fluorescent leak detector [ATC-169](#)
 FPCM - Wiring diagram [EC-512](#), [EC-1227](#)
 Freeze frame data [EC-60](#), [EC-762](#)
 Front brake solenoid valve [AT-151](#), [AT-153](#)
 Front bumper [EI-11](#)
 Front combination lamp removal and installation [LT-75](#)
 Front door [BL-188](#), [BL-194](#), [GW-61](#)
 Front passenger air bag [SRS-46](#)
 Front seat belt [SB-29](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-51](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-136](#)

FTTS - Wiring diagram [EC-333](#), [EC-338](#), [EC-1045](#),
[EC-1050](#)
 Fuel cut control (at no load high engine speed) [EC-34](#),
[EC-736](#)
 Fuel filter replacement [FL-4](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-309](#), [EC-320](#),
[EC-1022](#), [EC-1033](#)
 Fuel injection system (Bank 2) [EC-309](#), [EC-320](#),
[EC-1022](#), [EC-1033](#)
 Fuel injector [EC-1389](#)
 Fuel injector and fuel tube(VK45DE) [EM-193](#)
 Fuel injector and fuel tube(VQ35DE) [EM-47](#)
 Fuel level sensor [EC-462](#), [EC-464](#), [EC-466](#), [EC-1169](#),
[EC-1171](#), [EC-1173](#)
 Fuel line inspection [FL-3](#), [MA-25](#)
 Fuel line inspection(VQ35DE) [MA-18](#)
 Fuel pressure check [EC-88](#), [EC-790](#)
 Fuel pressure release [EC-88](#), [EC-790](#)
 Fuel pump [EC-675](#), [EC-1395](#)
 Fuel pump and gauge [FL-4](#)
 Fuel pump control module [EC-510](#), [EC-1225](#)
 Fuel pump dropping resistor [EC-510](#), [EC-1225](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-10](#)
 Fuel tank temperature sensor [EC-331](#), [EC-337](#),
[EC-1043](#), [EC-1049](#)
 Fuel tank vacuum relief valve [EC-42](#), [EC-744](#)
 FUELB1 - Wiring diagram [EC-311](#), [EC-322](#), [EC-1024](#),
[EC-1035](#)
 FUELB2 - Wiring diagram [EC-313](#), [EC-324](#), [EC-1026](#),
[EC-1037](#)
 Fuse [PG-17](#)
 Fuse and fusible link box [PG-115](#)
 Fusible link [PG-17](#)

G

Gauges [DI-5](#)
 Generator - See Alternator [SC-20](#)
 Glass [GW-11](#), [GW-59](#), [GW-61](#), [GW-65](#)
 Grille - See Exterior [EI-16](#)
 Ground distribution [PG-45](#)

H

H/LAMP - Wiring diagram [LT-13](#), [LT-47](#)
 Harness connector [PG-104](#)
 Harness layout [PG-62](#)
 Hazard warning lamp [LT-212](#)
 Headlamp removal and installation [LT-75](#)
 Headlining - See Roof trim [EI-52](#)
 Heated oxygen sensor 2 (bank 1) [EC-274](#), [EC-285](#),
[EC-298](#), [EC-987](#), [EC-998](#), [EC-1011](#)
 Heated oxygen sensor 2 (bank 2) [EC-274](#), [EC-285](#),
[EC-298](#), [EC-987](#), [EC-998](#), [EC-1011](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-177](#),
[EC-890](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-177](#),

ALPHABETICAL INDEX

[EC-890](#)
 Heated seat [SE-144](#)
 Heater and cooling unit (Heater core) [ATC-134](#)
 HFC134a (R134a) system precaution [ATC-6](#)
 HFC134a (R134a) system service procedure [ATC-150](#)
 HFC134a (R134a) system service tools [ATC-17](#)
 HFC134a system service equipment precaution
[ATC-13](#)
 High and low reverse clutch solenoid valve [AT-159](#),
[AT-161](#)
 Hood [BL-15](#)
 Horn [WW-54](#)
 HORN - Wiring diagram [WW-54](#)
 How to erase DTC for OBD system [EC-68](#), [EC-770](#)
 HSEAT - Wiring diagram [SE-147](#)

I

IATS - Wiring diagram [EC-211](#), [EC-923](#)
 ICC - Wiring diagram [ACS-23](#)
 ICC/BS - Wiring diagram [EC-569](#), [EC-1282](#)
 ICC/SW - Wiring diagram [EC-554](#), [EC-1267](#)
 ICCBOF - Wiring diagram [EC-684](#), [EC-1404](#)
 Idle air volume learning [EC-86](#), [EC-788](#)
 Idle speed [EC-78](#), [EC-780](#), [EC-785](#)
 Idle speed control (ISC) [EC-470](#), [EC-472](#), [EC-1177](#),
[EC-1179](#)
 Ignition coil [EC-691](#), [EC-1411](#)
 Ignition coil(VK45DE) [EM-190](#)
 Ignition coil(VQ35DE) [EM-44](#)
 Ignition control system [EC-691](#), [EC-1411](#)
 Ignition timing [EC-78](#), [EC-780](#), [EC-785](#)
 IGNSYS - Wiring diagram [EC-692](#), [EC-1412](#)
 Illumination [LT-293](#)
 Illumination control [LT-289](#), [LT-290](#), [LT-291](#)
 In vehicle sensor [ATC-115](#), [ATC-126](#)
 INJECT - Wiring diagram [EC-670](#), [EC-1390](#)
 Injector [EC-669](#)
 Input clutch solenoid valve [AT-147](#), [AT-149](#)
 Instrument panel [IP-10](#)
 Intake air temperature sensor [EC-209](#), [EC-229](#),
[EC-922](#), [EC-942](#)
 Intake door control linkage adjustment [ATC-87](#)
 Intake door motor [ATC-85](#), [ATC-132](#)
 Intake manifold collector(VQ35DE) [EM-21](#)
 Intake manifold(VK45DE) [EM-179](#)
 Intake manifold(VQ35DE) [EM-26](#)
 Intake sensor [ATC-121](#), [ATC-128](#)
 Intake valve timing control (Bank 1) .. [EC-166](#), [EC-870](#)
 Intake valve timing control (Bank 2) .. [EC-166](#), [EC-870](#)
 Intake valve timing control position sensor (Bank 1)
[EC-1203](#)
 Intake valve timing control position sensor (Bank 2)
[EC-1203](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-185](#), [EC-899](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-185](#), [EC-899](#)
 Integrated homelink transmitter [BL-278](#)

Intelligent cruise control (ICC) system [ACS-6](#)
 Interior [EI-37](#)
 Interior lamp [LT-266](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-18](#)
 IVCB1 - Wiring diagram [EC-186](#), [EC-900](#)
 IVCB2 - Wiring diagram [EC-188](#), [EC-902](#)
 IVCSB1 - Wiring diagram [EC-1204](#)
 IVCSB2 - Wiring diagram [EC-1206](#)
 ITVB1 - Wiring diagram [EC-873](#)
 ITVB2 - Wiring diagram [EC-875](#)

K

Knock sensor (KS) [EC-359](#), [EC-1070](#)
 KS - Wiring diagram [EC-360](#), [EC-1071](#)

L

LAN system circuit [ATC-71](#)
 Lane Departure Warning System [DI-75](#)
 Laser beam aiming adjustment [ACS-15](#)
 Latch (lower anchors and tether for children) system ...
[SB-35](#)
 LDW [DI-75](#)
 LDW - Wiring Diagram [DI-86](#)
 License lamp [LT-248](#)
 Line pressure solenoid valve [AT-130](#)
 Line pressure test (A/T) [AT-55](#)
 Liquid gasket application [EM-8](#)
 Liquid gasket application(VQ35DE) [LU-3](#), [LU-23](#), [CO-3](#)
 Location of electrical units [PG-98](#)
 Low coast brake solenoid valve [AT-163](#), [AT-165](#)
 Lubricant (R134a) A/C [ATC-26](#)
 Lubrication circuit (engine)(VK45DE) [LU-25](#)
 Lubrication circuit (engine)(VQ35DE) [LU-5](#)
 Lubrication oil A/C [ATC-173](#)

M

MAFS - Wiring diagram [EC-196](#), [EC-204](#), [EC-909](#),
[EC-917](#)
 Magnet clutch [ATC-93](#)
 MAIN - Wiring diagram [EC-154](#), [EC-858](#), [AT-180](#)
 Maintenance (engine)(VQ35DE) [MA-14](#)
 Major overhaul (Final drive) [FFD-15](#), [RFD-18](#)
 Major overhaul (Transfer) [TF-45](#)
 Malfunction indicator lamp (MIL) [EC-70](#), [EC-772](#)
 Manual mode switch [AT-167](#)
 Mass air flow sensor (MAFS) [EC-193](#), [EC-202](#),
[EC-906](#), [EC-915](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-13](#)
 MIL data link connectors circuit [EC-714](#), [EC-1438](#)
 MIL/DL - Wiring diagram [EC-714](#), [EC-1438](#)
 MIRROR - Wiring diagram [GW-97](#)
 Mirror, door [GW-118](#)
 Mirror, out side [GW-118](#)
 Misfire [EC-349](#), [EC-1061](#)

ALPHABETICAL INDEX

MMSW - Wiring diagram [AT-168](#)
 Mode door control linkage adjustment [ATC-78](#), [ATC-81](#)
 Mode door motor [ATC-76](#), [ATC-79](#), [ATC-139](#)
 Molding - See Exterior [EI-25](#), [EI-29](#)
 Mud guard - See Exterior [EI-22](#)
 Multiport fuel injection (MFI) system [EC-31](#), [EC-733](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-252](#)
 NONDTC - Wiring diagram [AT-187](#)
 NVH troubleshooting (EM) [EM-171](#)
 NVH troubleshooting (EM)(VQ35DE) [EM-13](#)
 NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (Transfer) [TF-8](#)

O

O2H2B1 - Wiring diagram [EC-179](#), [EC-892](#)
 O2H2B2 - Wiring diagram [EC-181](#), [EC-894](#)
 O2S2B1 - Wiring diagram .. [EC-277](#), [EC-288](#), [EC-301](#),
[EC-990](#), [EC-1001](#), [EC-1014](#)
 O2S2B2 - Wiring diagram .. [EC-279](#), [EC-290](#), [EC-303](#),
[EC-992](#), [EC-1003](#), [EC-1016](#)
 Oil cooler (engine)(VQ35DE) [LU-15](#)
 Oil filter(VK45DE) [LU-30](#)
 Oil filter(VQ35DE) [LU-11](#)
 Oil pan (engine)(VK45DE) [EM-187](#)
 Oil pan (engine)(VQ35DE) [EM-31](#)
 Oil pressure (engine)(VK45DE) [LU-27](#)
 Oil pressure (engine)(VQ35DE) [LU-8](#)
 Oil pressure relief valve (engine)(VQ35DE) [LU-6](#)
 Oil pump (A/T) [AT-322](#)
 Oil pump (engine)(VK45DE) [LU-31](#)
 Oil pump (engine)(VQ35DE) [LU-19](#)
 Oil pump regulator valve (engine)(VK45DE) [LU-31](#)
 Oil pump regulator valve (engine)(VQ35DE) [LU-19](#)
 Oil seal replacement (engine)(VK45DE) [EM-231](#)
 Oil seal replacement (engine)(VQ35DE) [EM-99](#)
 Oil seal replacement (front of final drive) [FFD-9](#),
[RFD-10](#)
 Oil seal replacement (side of final drive) [FFD-11](#),
[RFD-14](#)
 On board diagnostic system [EC-54](#), [EC-756](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-46](#),
[EC-748](#)
 Out side mirror [GW-118](#)
 Overheat [EC-499](#), [EC-1214](#)

P

P/SCKT - Wiring diagram [WW-52](#)
 Park/Neutral position switch [EC-491](#), [EC-1198](#)
 Park/neutral position switch (A/T) [AT-113](#)
 Parking brake control [PB-4](#)
 Parking lamp [LT-248](#)
 PCV (positive crankcase ventilation) ... [EC-51](#), [EC-753](#)

PGC/V - Wiring diagram .. [EC-402](#), [EC-410](#), [EC-1110](#),
[EC-1118](#)
 PHASE - Wiring diagram [EC-1084](#)
 PHSB1 - Wiring diagram [EC-373](#)
 PHSB2 - Wiring diagram [EC-375](#)
 Pilot bushing replacement - See Pilot
 converter(VQ35DE) [EM-125](#)
 Piston assembly(VK45DE) [EM-263](#)
 Piston assembly(VQ35DE) [EM-136](#)
 Piston pin inspection(VK45DE) [EM-269](#)
 Piston pin inspection(VQ35DE) [EM-141](#)
 Piston ring inspection(VK45DE) [EM-270](#)
 Piston ring inspection(VQ35DE) [EM-142](#)
 Piston to bore clearance(VK45DE) [EM-273](#)
 Piston to bore clearance(VQ35DE) [EM-145](#)
 PNP/SW - Wiring diagram . [EC-493](#), [EC-1200](#), [AT-114](#)
 POS - Wiring diagram [EC-366](#), [EC-1077](#)
 POWER - Wiring diagram [PG-5](#)
 Power door mirror [BL-24](#)
 Power socket [WW-52](#)
 Power steering fluid level [PS-8](#), [MA-37](#)
 Power steering hydraulic pressure [PS-30](#)
 Power steering oil pump [PS-30](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-3](#)
 Power window [GW-14](#)
 PRE/SE - Wiring diagram [EC-433](#), [EC-439](#), [EC-1141](#),
[EC-1147](#)
 Precations for Leak detection dye [ATC-15](#)
 Precautions (General) [GI-4](#)
 Pressure switch 1 [AT-153](#), [AT-172](#)
 Pressure switch 2 [AT-165](#)
 Pressure switch 3 [AT-149](#), [AT-174](#)
 Pressure switch 5 [AT-157](#), [AT-176](#)
 Pressure switch 6 [AT-161](#), [AT-178](#)
 Pressure test (A/T) [AT-55](#)
 Propeller shaft [PR-4](#), [PR-6](#)
 Propeller shaft on vehicle service [PR-4](#), [PR-6](#)
 Propeller shaft vibration [PR-4](#), [PR-6](#)
 PS/SEN - Wiring diagram [EC-475](#), [EC-1182](#)

R

Radiator(VK45DE) [CO-43](#)
 Radiator(VQ35DE) [CO-14](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-14](#)
 Rear combination lamp removal and installation
[LT-265](#)
 Rear disc brake [BR-28](#)
 Rear door [BL-188](#), [GW-65](#)
 Rear parcel shelf finisher [EI-42](#)
 Rear seat [SE-173](#)
 Rear seat belt [SB-31](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-59](#)
 Rear window defogger [GW-71](#)
 Refrigerant connection precaution [ATC-7](#)
 Refrigerant discharging evacuating charging [ATC-150](#)

ALPHABETICAL INDEX

Refrigerant general precaution [ATC-7](#)
 Refrigerant lines [ATC-150](#)
 Refrigerant pressure sensor [EC-704](#), [EC-1424](#),
[ATC-97](#), [ATC-166](#)
 Refrigeration cycle [ATC-20](#)
 Removal and installation (A/T) [AT-274](#), [AT-278](#)
 Removal and installation (Transfer) [TF-44](#)
 Reverse interlock door mirror [GW-94](#)
 Revolution sensor (A/T) [AT-119](#), [AT-263](#)
 Rocker cover(VK45DE) [EM-199](#)
 Rocker cover(VQ35DE) [EM-53](#)
 Room lamp - See Interior lamp [LT-266](#)
 ROOM/L - Wiring diagram [LT-273](#)
 RP/SEN - Wiring diagram [EC-705](#), [EC-1425](#)

S

SAE J1979 - Service \$01 - 09 [EC-54](#), [EC-756](#)
 SEAT - Wiring diagram [SE-99](#)
 Seat belt inspection [SB-32](#)
 Seat belt, front [SB-29](#)
 Seat belt, rear [SB-31](#)
 Seat, rear [SE-173](#)
 Self-diagnosis (Transfer) [TF-22](#)
 SEN/PW - Wiring diagram [EC-487](#), [EC-1194](#)
 SHIFT - Wiring diagram [AT-230](#)
 Shift lock system [AT-229](#)
 Shock absorber (rear) [RSU-10](#)
 Side air bag (satellite) sensor [SRS-50](#)
 Side curtain air bag [SRS-47](#)
 Side trim [EI-37](#)
 SMJ (super multiple junction) [PG-109](#)
 Spark plug replacement [MA-27](#)
 Spark plug replacement(VQ35DE) [MA-20](#)
 Spark plug(VK45DE) [EM-191](#)
 Spark plug(VQ35DE) [EM-45](#)
 Specification value [EC-143](#), [EC-847](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-44](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-13](#)
 SRS Trouble diagnoses [SRS-9](#)
 Stabilizer bar (rear) [RSU-17](#)
 Stall test (A/T) [AT-53](#)
 Standardized relay [PG-112](#)
 START - Wiring diagram [SC-9](#)
 Starter [SC-8](#)
 Starting system [SC-8](#)
 Steering gear and linkage inspection [MA-36](#)
 Steering wheel and column [PS-10](#), [PS-13](#)
 Steering wheel turning force [PS-10](#)
 Stop lamp [LT-242](#)
 Stop lamp switch [EC-589](#), [EC-1307](#)
 STSIG - Wiring diagram [AT-109](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-118](#), [ATC-127](#)
 Sunroof [RF-24](#), [RF-27](#)
 Sunshade [EI-44](#)

Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram
[SRS-13](#)
 Suspension [MA-37](#)
 Symbols and abbreviations [GI-11](#), [GI-24](#)
 System readiness test (SRT) code [EC-60](#), [EC-762](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-248](#)
 TCM circuit diagram [AT-52](#)
 TCM inspection table [AT-89](#)
 Thermostat(VK45DE) [CO-55](#)
 Thermostat(VQ35DE) [CO-29](#)
 Three way catalyst function (Bank 1) [EC-380](#), [EC-1089](#)
 Three way catalyst function (Bank 2) [EC-380](#), [EC-1089](#)
 Three way catalyst precautions [GI-5](#)
 Three way catalyst(VK45DE) [EM-183](#)
 Throttle control motor [EC-610](#), [EC-1329](#)
 Throttle control motor relay [EC-598](#), [EC-1316](#)
 Throttle position sensor (TPS) [EC-219](#), [EC-342](#),
[EC-518](#), [EC-520](#), [EC-631](#), [EC-932](#), [EC-1054](#), [EC-1233](#),
[EC-1235](#), [EC-1350](#)
 Throttle valve closed position learning . [EC-86](#), [EC-788](#)
 Tie-rod [PS-19](#)
 Timing chain(VK45DE) [EM-203](#)
 Timing chain(VQ35DE) [EM-66](#)
 Tire rotation [MA-35](#)
 TLID - Wiring diagram [BL-209](#)
 Top tether strap child restraint [SB-36](#)
 Torque converter installation [AT-277](#), [AT-280](#)
 Torque convertor clutch solenoid valve [AT-126](#), [AT-128](#)
 TPS1 - Wiring diagram [EC-344](#), [EC-1056](#)
 TPS2 - Wiring diagram [EC-221](#), [EC-934](#)
 TPS3 - Wiring diagram [EC-633](#), [EC-1352](#)
 Transfer control unit inspection table [TF-20](#)
 TRNSCV - Wiring diagram [BL-278](#)
 Trouble diagnoses [GI-12](#)
 Trunk lid [BL-201](#)
 Trunk lid opener - See Trunk lid [BL-207](#)
 TURN - Wiring diagram [LT-216](#)
 Turn signal lamp [LT-212](#)
 Two trip detection logic [EC-54](#), [EC-756](#)
 Tyre pressure monitoring system - trouble diagnoses ..
[WT-12](#)

U

Unified meter and A/C amp. [DI-28](#)
 Upper link (front susp.) [FSU-16](#), [FSU-34](#)

V

Vacuum hose (brake system) [BR-20](#)
 Valve clearance(VK45DE) [EM-224](#)
 Valve clearance(VQ35DE) [EM-94](#)
 Valve guide [EM-109](#)
 Valve guide(VK45DE) [EM-243](#)

ALPHABETICAL INDEX

Valve lifter	EM-89
Valve seat(VK45DE)	EM-245
Valve seat(VQ35DE)	EM-111
Valve spring(VK45DE)	EM-246
Valve spring(VQ35DE)	EM-112
Variable induction air control system (VIAS)	EC-1302 , EC-1429
Vehicle security (theft warning) system	BL-217
Vehicle speed sensor (VSS)	EC-468 , EC-588 , EC-1175
VEHSEC - Wiring diagram	BL-223
VENT/V - Wiring diagram	EC-417 , EC-424 , EC-1125 , EC-1132
VIAS - Wiring diagram	EC-1431
VIAS/V - Wiring diagram	EC-1303
VIN registration	EC-85 , EC-787
VSS A/T - Wiring diagram	AT-121

W

WARN - Wiring diagram	DI-42
Warning chime	DI-59
Warning lamps	DI-39
Washer, front	WW-4
Water control valve(VK45DE)	CO-55
Water pump(VK45DE)	CO-53
Water pump(VQ35DE)	CO-24
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6 , FSU-24
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-33
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel sensor (VDC)	BRC-54
WINDOW - Wiring diagram	GW-21
Window, door	GW-61 , GW-65
Window, rear	GW-59
Windshield	GW-11
WIPER - Wiring diagram	WW-13
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-95
Wiring diagrams	GI-16