
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT [LAN-130](#), [LAN-505](#),
[LAN-544](#), [LAN-591](#), [LAN-645](#), [LAN-692](#)

A

A-BAG BRANCH LINE CIRCUIT [LAN-117](#), [LAN-184](#),
[LAN-216](#), [LAN-255](#), [LAN-299](#), [LAN-350](#),
[LAN-393](#), [LAN-447](#), [LAN-495](#), [LAN-531](#),
[LAN-578](#), [LAN-632](#), [LAN-679](#)

A/C AUTO AMP. [HAC-26](#), [HAC-126](#)

A/T CONTROL SYSTEM [TM-80](#)

A/T FLUID [TM-182](#)

A/T FLUID COOLER [TM-100](#)

A/T POSITION [TM-104](#)

A/T SHIFT LOCK SYSTEM [TM-90](#)

A/T SHIFT SELECTOR [TM-185](#)

ABBREVIATIONS [GI-14](#)

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) [BRC-44](#), [BRC-166](#)

ABS BRANCH LINE CIRCUIT [LAN-131](#), [LAN-194](#),
[LAN-228](#), [LAN-268](#), [LAN-312](#), [LAN-363](#),
[LAN-405](#), [LAN-460](#), [LAN-506](#), [LAN-545](#),
[LAN-592](#), [LAN-646](#), [LAN-693](#)

ABS WARNING LAMP [BRC-151](#)

ACC WARNING DOES NOT OPERATE... [DLK-165](#)

ACCELERATOR CONTROL SYSTEM [ACC-4](#)

ACCELERATOR PEDAL ACTUATOR [DAS-254](#)

ACCELERATOR PEDAL ASSEMBLY [DAS-390](#)

ACCELERATOR PEDAL RELEASED POSITION
LEARNING [EC-169](#), [EC-690](#), [EC-1142](#), [EC-1724](#)

ACTION TEST [CCS-93](#), [DAS-300](#)

ACTIVE ADAPTIVE FRONT-LIGHTING SYSTEM .
[EXL-63](#)

ACTIVE NOISE CONTROL UNIT [AV-47](#), [AV-130](#)

ADAS CONTROL UNIT [BRC-52](#), [BRC-184](#), [CCS-48](#),
[DAS-33](#), [DAS-163](#), [DAS-240](#)

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL [PWC-32](#)

ADDITIONAL SERVICE WHEN REPLACING (AV
CONTROL UNIT) [AV-80](#)

ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) [BRC-67](#)

ADDITIONAL SERVICE WHEN REPLACING
ACCELERATOR PEDAL ASSEMBLY [DAS-292](#)

ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT [DAS-63](#)

ADDITIONAL SERVICE WHEN REPLACING AFS
CONTROL UNIT [EXL-75](#)

ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
[AV-276](#)

ADDITIONAL SERVICE WHEN REPLACING AV
CONTROL UNIT [AV-275](#)

ADDITIONAL SERVICE WHEN REPLACING CAN
GATEWAY [LAN-162](#)

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT [PWC-33](#), [SEC-53](#)

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT (A/C AUTO AMP.) [HAC-54](#)

ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM [TM-98](#)

ADDITIONAL SERVICE WHEN REPLACING ECM
[EC-165](#), [EC-686](#), [EC-1138](#), [EC-1720](#)

ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR [CCS-80](#), [DAS-291](#)

ADDITIONAL SERVICE WHEN REPLACING LANE
CAMERA UNIT [DAS-293](#)

ADDITIONAL SERVICE WHEN REPLACING LOW
TIRE PRESSURE WARNING CONTROL UNIT
[WT-29](#)

ADDITIONAL SERVICE WHEN REPLACING
SONAR CONTROL UNIT [AV-277](#)

ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY [TM-97](#)

ADDITIONAL SERVICE WHEN REPLACING VVEL
CONTROL MODULE [EC-167](#), [EC-688](#), [EC-1140](#),
[EC-1722](#)

ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION [BRC-68](#)

ADP BRANCH LINE CIRCUIT [LAN-136](#), [LAN-196](#),
[LAN-232](#), [LAN-272](#), [LAN-317](#), [LAN-367](#),
[LAN-410](#), [LAN-465](#), [LAN-508](#), [LAN-549](#),
[LAN-597](#), [LAN-650](#), [LAN-698](#)

AFS BRANCH LINE CIRCUIT .. [LAN-132](#), [LAN-313](#),
[LAN-406](#), [LAN-461](#), [LAN-593](#), [LAN-694](#)

AFS CONTROL UNIT [EXL-39](#), [EXL-148](#)

AFS SWITCH [EXL-147](#)

AIR BREATHER HOSE [TM-210](#)

AIR CLEANER AND AIR DUCT [EM-29](#), [EM-192](#)

AIR CLEANER FILTER [EM-24](#), [EM-185](#)

ALTERNATOR [CHG-31](#)

AMBIENT SENSOR [HAC-127](#)

ANTENNA AMP. [AV-133](#), [AV-419](#)

ANTENNA FEEDER [AV-146](#), [AV-437](#)

ANTI-PINCH FUNCTION DOES NOT OPERATE ..
[PWC-68](#)

APA BRANCH LINE CIRCUIT .. [LAN-142](#), [LAN-323](#),
[LAN-416](#), [LAN-471](#), [LAN-603](#), [LAN-704](#)

AROUND VIEW MONITOR CONTROL UNIT
[AV-225](#), [AV-429](#)

ASCD BRAKE SWITCH [EC-519](#), [EC-941](#), [EC-1523](#)

ASCD INDICATOR [EC-521](#), [EC-943](#), [EC-1525](#)

AUTO ANTI-DAZZLING INSIDE MIRROR SYSTEM
[MIR-23](#)

AUTO DOOR LOCK OPERATION DOES NOT OPERATE.....[DLK-157](#)
 AUTO OPERATION DOES NOT OPERATE [.RF-24](#)
 AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY [PWC-66](#)
 AUTOMATIC AIR CONDITIONING SYSTEM [HAC-35](#), [HAC-118](#)
 AUTOMATIC DRIVE POSITIONER CONTROL UNIT [ADP-36](#), [ADP-149](#)
 AUTOMATIC DRIVE POSITIONER SYSTEM..... [ADP-41](#)
 AUTOMATIC SPEED CONTROL DEVICE (ASCD) [CCS-136](#)
 AV BRANCH LINE CIRCUIT ... [LAN-122](#), [LAN-188](#), [LAN-220](#), [LAN-260](#), [LAN-304](#), [LAN-355](#), [LAN-397](#), [LAN-452](#), [LAN-499](#), [LAN-536](#), [LAN-583](#), [LAN-637](#), [LAN-684](#)
 AV CONTROL UNIT[AV-36](#), [AV-126](#), [AV-204](#), [AV-407](#), [AV-451](#)
 AVM BRANCH LINE CIRCUIT [LAN-134](#), [LAN-230](#), [LAN-270](#), [LAN-315](#), [LAN-365](#), [LAN-408](#), [LAN-463](#), [LAN-547](#), [LAN-595](#), [LAN-648](#), [LAN-696](#)
 AWD CONTROL UNIT [DLN-21](#), [DLN-61](#)
 AWD SYSTEM..... [DLN-24](#)
 AWD WARNING LAMP [DLN-52](#)
 AWD WARNING LAMP BLINKS QUICKLY [DLN-57](#)
 AWD WARNING LAMP BLINKS SLOWLY. [DLN-58](#)
 AWD WARNING LAMP DOES NOT TURN OFF [DLN-54](#)
 AWD WARNING LAMP DOES NOT TURN ON [DLN-53](#)

B

B TERMINAL CIRCUIT [CHG-25](#), [STR-18](#)
 B1001, B1002, B1003, B1004, B1005 DIAGNOSIS SENSOR UNIT [SRC-38](#)
 B1006, B1007, B1008, B1009, B1010 DIAGNOSIS SENSOR UNIT [SRC-39](#)
 B1011, B1012, B1013, B1014, B1015 DIAGNOSIS SENSOR UNIT [SRC-40](#)
 B1017, B1020, B1021 OCCUPANT SYSTEM CONTROL UNIT [SRC-41](#)
 B1018 OCCUPANT SYSTEM SENSOR [SRC-43](#)
 B1022 OCCUPANT SYSTEM CONTROL UNIT..... [SRC-45](#)
 B1023 PASSENGER AIR BAG OFF INDICATOR... [SRC-47](#)
 B1025, B1032, B1048 OCCUPANT SYSTEM SENSOR [SRC-49](#)
 B1026, B1027, B1028, B1029, B1030, B1031 DIAGNOSIS SENSOR UNIT [SRC-51](#)
 B1033, B1034 CRASH ZONE SENSOR [SRC-52](#)
 B1035 CRASH ZONE SENSOR [SRC-54](#)
 B1036 CRASH ZONE SENSOR [SRC-56](#)

B1037, B1039, B1041 CRASH ZONE SENSOR..... [SRC-57](#)
 B1042, B1043, B1044, B1045, B1046, B1047 DIAGNOSIS SENSOR UNIT [SRC-59](#)
 B1049, B1054 DRIVER AIR BAG MODULE [SRC-60](#)
 B1050, B1055 DRIVER AIR BAG MODULE [SRC-62](#)
 B1051, B1056 DRIVER AIR BAG MODULE [SRC-64](#)
 B1052, B1057 DRIVER AIR BAG MODULE [SRC-66](#)
 B1058, B1059, B1060, B1061, B1062, B1063 DIAGNOSIS SENSOR UNIT [SRC-68](#)
 B1065, B1070 PASSENGER AIR BAG MODULE... [SRC-69](#)
 B1066, B1071 PASSENGER AIR BAG MODULE... [SRC-71](#)
 B1067, B1072 PASSENGER AIR BAG MODULE... [SRC-73](#)
 B1068, B1073 PASSENGER AIR BAG MODULE... [SRC-75](#)
 B1074, B1075, B1076, B1077, B1078, B1079 DIAGNOSIS SENSOR UNIT [SRC-77](#)
 B1080, B1096 DRIVER AIR BAG MODULE [SRC-78](#)
 B1081 SEAT BELT PRE-TENSIONER RH. [SRC-80](#)
 B1082 SEAT BELT PRE-TENSIONER RH. [SRC-82](#)
 B1083 SEAT BELT PRE-TENSIONER RH. [SRC-84](#)
 B1084 SEAT BELT PRE-TENSIONER RH. [SRC-86](#)
 B1086 SEAT BELT PRE-TENSIONER LH. [SRC-88](#)
 B1087 SEAT BELT PRE-TENSIONER LH. [SRC-90](#)
 B1088 SEAT BELT PRE-TENSIONER LH. [SRC-92](#)
 B1089 SEAT BELT PRE-TENSIONER LH. [SRC-94](#)
 B1090, B1091, B1092, B1093, B1094, B1095 DIAGNOSIS SENSOR UNIT [SRC-96](#)
 B1106, B1107, B1108, B1109, B1110, B1111 DIAGNOSIS SENSOR UNIT [SRC-97](#)
 B1113, B1114 SATELLITE SENSOR RH [SRC-98](#)
 B1115 SATELLITE SENSOR RH [SRC-100](#)
 B1116 SATELLITE SENSOR RH [SRC-102](#)
 B1118, B1119 SATELLITE SENSOR LH... [SRC-103](#)
 B1120 SATELLITE SENSOR LH [SRC-105](#)
 B1121 SATELLITE SENSOR LH [SRC-107](#)
 B1122, B1123, B1124, B1125, B1126, B1127 DIAGNOSIS SENSOR UNIT [SRC-108](#)
 B1129 SIDE AIR BAG MODULE RH [SRC-109](#)
 B1130 SIDE AIR BAG MODULE RH [SRC-111](#)
 B1131 SIDE AIR BAG MODULE RH [SRC-113](#)
 B1132 SIDE AIR BAG MODULE RH [SRC-115](#)
 B1134 SIDE AIR BAG MODULE LH..... [SRC-117](#)
 B1135 SIDE AIR BAG MODULE LH..... [SRC-119](#)
 B1136 SIDE AIR BAG MODULE LH..... [SRC-121](#)
 B1137 SIDE AIR BAG MODULE LH..... [SRC-123](#)
 B1138, B1139, B1140, B1141, B1142, B1143 DIAGNOSIS SENSOR UNIT [SRC-125](#)
 B1144 DIAGNOSIS SENSOR UNIT [SRC-126](#)
 B1145 CURTAIN AIR BAG MODULE RH. [SRC-127](#)
 B1146 CURTAIN AIR BAG MODULE RH. [SRC-129](#)
 B1147 CURTAIN AIR BAG MODULE RH. [SRC-131](#)
 B1148 CURTAIN AIR BAG MODULE RH. [SRC-133](#)

B1150 CURTAIN AIR BAG MODULE LH. SRC-135	B2195 ANTI-SCANNING..... SEC-64
B1151 CURTAIN AIR BAG MODULE LH. SRC-137	B2196 DONGLE UNIT SEC-65
B1152 CURTAIN AIR BAG MODULE LH. SRC-139	B2198 NATS ANTENNA AMP. SEC-67
B1153 CURTAIN AIR BAG MODULE LH. SRC-141	B2205 VEHICLE SPEED MWI-72
B1154, B1155, B1156, B1157, B1158, B1159	B2267 ENGINE SPEED MWI-73
DIAGNOSIS SENSOR UNIT SRC-143	B2268 WATER TEMP MWI-74
B1170, B1171, B1172, B1173, B1174, B1175	B2451 SEAT BLT MTR DR CIRC..... SBC-40
DIAGNOSIS SENSOR UNIT SRC-144	B2452 SEAT BLT MTR AS CIRC SBC-41
B1182 LAP PRE-TENSIONER LH SRC-145	B2453 BR STROKE SEN CIRC SBC-42
B1183 LAP PRE-TENSIONER LH SRC-146	B2455 CONTROL UNIT DR..... SBC-45
B1184 LAP PRE-TENSIONER LH SRC-147	B2457 CONTROL UNIT AS SBC-46
B1185 LAP PRE-TENSIONER LH SRC-148	B2458 LOCAL COMM..... SBC-47
B1186, B1187, B1188, B1189, B1190, B1191	B2461 VHCL SPEED SIGNAL SBC-49
DIAGNOSIS SENSOR UNIT SRC-149	B2466 DR/AS CONTROL UNIT SBC-50
B1202, B1203, B1204, B1205, B1206, B1207	B2470 SYS HEAT PROTC DR..... SBC-51
DIAGNOSIS SENSOR UNIT SRC-150	B2471 SYS HEAT PROTC AS SBC-52
B1209 FRONTAL COLLISION DETECTION	B2503 SWIVEL ACTUATOR [RH]..... EXL-80
SRC-151	B2504 SWIVEL ACTUATOR [LH] EXL-82
B1210 SIDE COLLISION DETECTION ... SRC-152	B2514 HEIGHT SENSOR UNUSUAL [RR]. EXL-84
B1212, B1213, B1214 SATELLITE SENSOR RH...	B2516 SHIFT POSITION SIGNAL [R, P] ... EXL-87
SRC-153	B2517 VEHICLE SPEED SIGNAL EXL-88
B1215, B1216, B1217 SATELLITE SENSOR LH ...	B2519 LEVELIZER CALIBRATION EXL-89
SRC-155	B2521 ECU CIRCUIT EXL-90
B1218, B1219, B1220, B1221, B1222, B1223	B2555 STOP LAMP SEC-71
DIAGNOSIS SENSOR UNIT SRC-157	B2556 PUSH-BUTTON IGNITION SWITCH SEC-74
B1234, B1235, B1236, B1237, B1238, B1239	B2557 VEHICLE SPEED SEC-76
DIAGNOSIS SENSOR UNIT SRC-158	B2562 LOW VOLTAGE BCS-86
B1250, B1251, B1252, B1253, B1254, B1255	B2578, B2579 IN-VEHICLE SENSOR HAC-60
DIAGNOSIS SENSOR UNIT SRC-159	B257B, B257C AMBIENT SENSOR HAC-63
B1336, B1337 SATELLITE SENSOR RH SRC-160	B2581, B2582 INTAKE SENSOR..... HAC-66
B1338, B1340, B1341, B1342 SATELLITE SENSOR	B2600 CONFIG ERROR LAN-166
RH..... SRC-162	B2601 SHIFT POSITION SEC-77
B1339 SATELLITE SENSOR RH..... SRC-164	B2602 SHIFT POSITION SEC-80
B1343, B1344 SATELLITE SENSOR LH. SRC-165	B2603 SHIFT POSITION SEC-83
B1345, B1347, B1348, B1349 SATELLITE SENSOR	B2604 SHIFT POSITION SEC-87
LH SRC-167	B2605 SHIFT POSITION SEC-89
B1346 SATELLITE SENSOR LH SRC-169	B2608 STARTER RELAY SEC-91
B1350 SATELLITE SENSOR..... SRC-170	B260F ENGINE STATUS SEC-93
B2008 PARA NOT PROG EXL-79	B2614 ACC RELAY CIRCUIT PCS-61
B2098 IGNITION RELAY ON STUCK..... PCS-29	B2615 BLOWER RELAY CIRCUIT PCS-64
B2099 IGNITION RELAY OFF STUCK..... PCS-31	B2616 IGNITION RELAY CIRCUIT PCS-66
B210B STARTER CONTROL RELAY SEC-98	B2618 BCM PCS-68
B210C STARTER CONTROL RELAY SEC-99	B261A PUSH-BUTTON IGNITION SWITCH PCS-69
B210D STARTER RELAY SEC-100	B2621 INSIDE ANTENNA..... DLK-73
B210E STARTER RELAY SEC-101	B2622 INSIDE ANTENNA..... DLK-75
B210F SHIFT POSITION/CLUTCH INTERLOCK	B2623 INSIDE ANTENNA..... DLK-77
SWITCH..... SEC-103	B2626 OUTSIDE ANTENNA..... DLK-79
B2110 SHIFT POSITION/CLUTCH INTERLOCK	B2627 OUTSIDE ANTENNA..... DLK-81
SWITCH..... SEC-105	B2628 OUTSIDE ANTENNA..... DLK-83
B2112 SLIDING MOTOR ADP-66	B2630, B2631 SUNLOAD SENSOR HAC-69
B2113 RECLINING MOTOR ADP-68	B26E7 TPMS CAN COMM..... BCS-87
B2116 TILT MOTOR..... ADP-70	B26F1 IGNITION RELAY PCS-71
B2128 UART COMMUNICATION LINE ADP-72	B26F2 IGNITION RELAY PCS-73
B2130 EEPROM ADP-74	B26F3 STARTER CONTROL RELAY SEC-94
B2192 ID DISCORD, IMMU-ECM..... SEC-62	B26F4 STARTER CONTROL RELAY SEC-95
B2193 CHAIN OF ECM-IMMU..... SEC-63	B26F6 BCM..... PCS-75

B26F7 BCM SEC-96
 B26FC KEY REGISTRATION..... SEC-97
 B2720 CORNER SENSOR [RL]..... AV-348
 B2721 CENTER SENSOR [RL]..... AV-351
 B2722 CENTER SENSOR [RR]..... AV-354
 B2723 CORNER SENSOR [RR]..... AV-357
 B2724 SONAR CONTROL UNIT AV-360
 B2729 CORNER SENSOR [FL] AV-361
 B272A CENTER SENSOR [FL]..... AV-364
 B272B CENTER SENSOR [FR]..... AV-367
 B272C CORNER SENSOR [FR]..... AV-370
 B2750, B2751, B2752 AIR MIX DOOR MOTOR
 (DRIVER SIDE) HAC-72
 B2753, B2754, B2755 AIR MIX DOOR MOTOR
 (PASSENGER SIDE)..... HAC-77
 B2756, B2757, B2758 MODE DOOR MOTOR
 (DRIVER SIDE) HAC-82
 B2759, B275A, B275B MODE DOOR MOTOR
 (PASSENGER SIDE)..... HAC-87
 B275C, B275D, B275E INTAKE DOOR MOTOR
 HAC-92
 B275F, B2760, B2761 UPPER VENTILATOR DOOR
 MOTOR HAC-97
 B2762, B2763, B2764 REAR MODE DOOR MOTOR
 HAC-102
 BASE AUDIO WITHOUT NAVIGATION AV-54
 BASIC INSPECTION ... EC-176, EC-697, EC-1134,
 EC-1716
 BATTERY PG-164
 BATTERY INSPECTION PG-157
 BATTERY TERMINAL WITH FUSIBLE LINK PG-165
 BCI SWITCH DAS-399
 BCI SWITCH CIRCUIT DAS-356
 BCM. BCS-37, BCS-61, BCS-95, DEF-10, DLK-43,
 INL-21, INL-105, PCS-48, WCS-33
 BCM (BODY CONTROL MODULE) ADP-28,
 PWC-14, RF-8
 BCM BRANCH LINE CIRCUIT LAN-124, LAN-190,
 LAN-222, LAN-262, LAN-306, LAN-357,
 LAN-399, LAN-454, LAN-501, LAN-538,
 LAN-585, LAN-639, LAN-686
 BCM, IPDM E/R..... EXL-38, SEC-30, WW-20
 BLIND SPOT WARNING/BLIND SPOT
 INTERVENTION INDICATOR DAS-395
 BLOWER MOTOR..... HAC-110
 BLOWER UNIT VTL-16
 BODY ALIGNMENT BRM-67, BRM-154, BRM-179
 BODY COMPONENT PARTS BRM-9, BRM-98
 BODY CONSTRUCTION BRM-23, BRM-112
 BODY EXTERIOR PAINT COLOR BRM-3, BRM-92
 BODY MAINTENANCE MA-54
 BODY SIDE TRIM INT-38
 BOSE AMP. AV-215, AV-416
 BOSE AUDIO WITH NAVIGATION AV-237, AV-456
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON EXL-132

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON EXL-129
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON EXL-130
 BRAKE BOOSTER BR-16, BR-38
 BRAKE CONTROL SYSTEM BRC-53
 BRAKE FLUID BR-13
 BRAKE MASTER CYLINDER BR-15, BR-35
 BRAKE PEDAL BR-10, BR-21
 BRAKE PEDAL STROKE SENSOR..... SBC-64
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURS BRC-159
 BRAKE PIPING BR-23
 BRAKE WARNING LAMP..... BRC-152
 BSW/BUZZER BRANCH LINE CIRCUIT LAN-140,
 LAN-321, LAN-414, LAN-469, LAN-601,
 LAN-702

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-72
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-77
 C1109 POWER AND GROUND SYSTEM .BRC-84
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
 BRC-86
 C1115 WHEEL SENSOR..... BRC-89
 C1116 STOP LAMP SWITCH BRC-96
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM..... BRC-102
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM..... BRC-104
 C1130 ENGINE SIGNAL BRC-106
 C1140 ACTUATOR RELAY SYSTEM..... BRC-108
 C1142 PRESS SENSOR BRC-110
 C1143 STEERING ANGLE SENSOR..... BRC-113
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT BRC-117
 C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR
 BRC-119
 C1155 BRAKE FLUID LEVEL SWITCH ...BRC-122
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION BRC-126
 C1164, C1165 CV SYSTEM BRC-128
 C1170 VARIANT CODING BRC-130
 C1197 VACUUM SENSOR BRC-131
 C1198 VACUUM SENSOR BRC-134
 C1199 BRAKE BOOSTER..... BRC-136
 C119A VACUUM SENSOR..... BRC-139
 C1201 AWD CONTROL UNIT DLN-34
 C1203 ABS ACTUATOR AND ELECTRIC UNIT
 (CONTROL UNIT) DLN-35
 C1204 AWD SOLENOID DLN-36
 C1205 AWD ACTUATOR RELAY DLN-39
 C1210 ECM DLN-41

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE	WT-32
C1708, C1709, C1710, C1711 TIRE PRESSURE SENSOR	WT-34
C1716, C1717, C1718, C1719 TIRE PRESSURE SENSOR	WT-38
C1728 RECEIVER ID	WT-40
C1729 VEHICLE SPEED SIGNAL	WT-42
C1750, C1751, C1752, C1753 RECEIVER ..	WT-43
C1754 LOW TIRE PRESSURE WARNING CONTROL UNIT	WT-46
C1755, C1756, C1757, C1758 POOR RECEIVING CONDITIONS	WT-48
C1A00 CONTROL UNIT	CCS-99, DAS-67
C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2	CCS-100, DAS-68
C1A03 VEHICLE SPEED SENSOR	DAS-69
C1A04 ABS/TCS/VDC SYSTEM	DAS-71
C1A05 BRAKE SW/STOP LAMP SW	DAS-72
C1A06 OPERATION SW	DAS-77
C1A0A CONFIG UNFINISHED	DAS-66
C1A12 RADAR OFF-CENTER	CCS-101
C1A13 STOP LAMP RELAY	DAS-80
C1A14 ECM	DAS-87
C1A15 GEAR POSITION	DAS-89
C1A16 RADAR BLOCKED	CCS-102
C1A21 UNIT HIGH TEMP	CCS-104
C1A23 UNIT LOW TEMP	CCS-105
C1A24 NP RANGE	DAS-91
C1A26 ECD MODE MALFUNCTION	DAS-93
C1A27 ECD POWER SUPPLY CIRCUIT ...	DAS-95
C1A33 CAN TRANSMISSION ERROR	DAS-97
C1A34 COMMAND ERROR	DAS-98
C1A35 ACCELERATOR PEDAL ACTUATOR	DAS-99
C1A36 ACCELERATOR PEDAL ACTUATOR CAN COMM	DAS-100
C1A37 ACCELERATOR PEDAL ACTUATOR CAN 2	DAS-101
C1A38 ACCELERATOR PEDAL ACTUATOR CAN 1	DAS-102
C1A39 STEERING ANGLE SENSOR	CCS-106, DAS-103
C1A50 ADAS CONTROL UNIT	CCS-107, DAS-308
C1B00 CAMERA UNIT MALF ..	DAS-104, DAS-309
C1B01 CAM AIMING INCOMP ...	DAS-105, DAS-310
C1B03 ABNRML TEMP DETECT	DAS-106, DAS-311
C1B20 CONTROL MODULE	DAS-312
C1B50 SIDE RADAR MALFUNCTION	DAS-314
C1B51 BLIND SPOT WARNING/BLIND SPOT INTERVENTION INDICATOR SHORT CIRCUIT	DAS-315
C1B52 BLIND SPOT WARNING/BLIND SPOT INTERVENTION INDICATOR OPEN CIRCUIT	DAS-317
C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-108
C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-109
C1B55 RADAR BLOCKAGE	DAS-319
C1B56 SONAR CIRCUIT	DAS-110
C1B57 AVM CIRCUIT	DAS-111
C1B58 DRIVER ASSISTANCE BUZZER ..	DAS-112
C1B5D FEB OPE COUNT LIMIT	DAS-107
C1B82 DISTANCE SENSOR OFF-CENTER	DAS-113
C1B83 DISTANCE SENSOR BLOCKED ..	DAS-114
C1B84 DISTANCE SENSOR	DAS-115
C1B85 DISTANCE SENSOR ABNORMAL TEMP ..	DAS-116
C1B86 DISTANCE SENSOR POWER SUPPLY CIRCUIT	DAS-117
C1F01 ACCELERATOR PEDAL ACTUATOR	DAS-119, DAS-321
C1F02 ACCELERATOR PEDAL ACTUATOR	DAS-120, DAS-322
C1F03 ACCELERATOR PEDAL ACTUATOR	DAS-323
C1F05 ACCELERATOR PEDAL ACTUATOR POWER SUPPLY CIRCUIT	DAS-121, DAS-324
C1F06 CAN CIRCUIT2	DAS-325
C1F07 CAN CIRCUIT1	DAS-327
CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)	AV-283
CALIBRATION OF DECEL G SENSOR	BRC-70, TM-99
CAMERA AIMING ADJUSTMENT	DAS-295
CAMERA IMAGE SIGNAL CIRCUIT	AV-104, AV-383
CAMSHAFT	EM-103, EM-254
CAMSHAFT VALVE CLEARANCE ..	EM-13, EM-175
CAN COMMUNICATION CIRCUIT	LAN-145, LAN-197, LAN-509
CAN COMMUNICATION CIRCUIT 1	LAN-147, LAN-233, LAN-273, LAN-326, LAN-368, LAN-419, LAN-474, LAN-550, LAN-606, LAN-651, LAN-707
CAN COMMUNICATION CIRCUIT 2	LAN-149, LAN-235, LAN-275, LAN-328, LAN-370, LAN-421, LAN-476, LAN-552, LAN-608, LAN-653, LAN-709
CAN GATEWAY	LAN-158, LAN-168
CAN GATEWAY SYSTEM	LAN-160
CAN SYSTEM (WITH ICC)	LAN-44
CAN SYSTEM (WITHOUT ICC)	LAN-63
CANNOT ADJUST FRONT HEATED SEAT TEMPERATURE	SE-108
CENTER CONSOLE ASSEMBLY	IP-23
CENTER SPEAKER	AV-413

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1).....LAN-128, LAN-226, LAN-266, LAN-310, LAN-361, LAN-403, LAN-458, LAN-542, LAN-589, LAN-643, LAN-690

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2).....LAN-129, LAN-227, LAN-267, LAN-311, LAN-362, LAN-404, LAN-459, LAN-543, LAN-590, LAN-644, LAN-691

CHARGING SYSTEM CHG-10, CHG-30

CHARGING SYSTEM PRELIMINARY INSPECTION CHG-22

CHASSIS MAINTENANCE..... MA-41

CHECK ANTI-PINCH FUNCTION PWC-35

CHILD SEAT ANCHOR SB-18

CHIME DOES NOT SOUND ... CCS-123, DAS-374

CIGARETTE LIGHTER PWO-4, PWO-8

CIGARETTE LIGHTER ILLUMINATION..... INL-76, INL-160

CLIMATE CONTROLLED SEAT ACTIVATES ONCE BUT STOPS IMMEDIATELY SE-104

CLIMATE CONTROLLED SEAT BLOWER FILTER SE-87, SE-140

CLIMATE CONTROLLED SEAT CONTROL UNIT.. SE-20

CLIMATE CONTROLLED SEAT CUSHION BLOWER MOTOR..... SE-82

CLIMATE CONTROLLED SEAT DOES NOT OPERATE..... SE-101

CLIMATE CONTROLLED SEAT SWITCH ... SE-71, SE-139

CLIMATE CONTROLLED SEAT SWITCH INDICATOR SE-85

CLIMATE CONTROLLED SEAT SYSTEM.... SE-39

CLOCK MWI-65, MWI-97

COLLISION DIAGNOSIS SR-5

COMBINATION METER MWI-37, MWI-95, WCS-23

COMBINATION METER BUZZER..... DLK-123

COMBINATION SWITCH BCS-96

COMBINATION SWITCH INPUT CIRCUIT BCS-91

COMBINATION SWITCH OUTPUT CIRCUIT BCS-89

COMBINATION SWITCH SYSTEM SYMPTOMS ... BCS-93

COMPOSITE IMAGE SIGNAL CIRCUIT AV-106, AV-379

COMPRESSION PRESSURE EM-18, EM-179

COMPRESSOR..... HA-31

COMPRESSOR DOES NOT OPERATE .. HAC-120

CONDENSER..... HA-40

CONFIGURATION (ADAS CONTROL UNIT) DAS-64

CONFIGURATION (AFS CONTROL UNIT) EXL-76

CONFIGURATION (AROUND VIEW MONITOR CONTROL UNIT) AV-280

CONFIGURATION (AV CONTROL UNIT).... AV-81, AV-278

CONFIGURATION (CAN GATEWAY)..... LAN-163

CONFIGURATION (HVAC)..... HAC-55

CONFIGURATION (SONAR CONTROL UNIT)..... AV-281

CONSULT/GST CHECKING SYSTEM..... GI-53

CONTROL ROD TM-190

CONTROL SIGNAL CIRCUIT AV-112

CONTROL VALVE & TCM TM-192

COOLER PIPE AND HOSE..... HA-35

COOLING FAN ... CO-21, CO-49, EC-522, EC-944, EC-1526, EC-1992

CORROSION PROTECTION ... BRM-14, BRM-103

COWL TOP..... EXT-23

CRASH ZONE SENSOR SR-21

CURTAIN AIR BAG MODULE SR-19

CYLINDER BLOCK EM-130, EM-282

CYLINDER HEAD..... EM-120, EM-272

D

DAYTIME RUNNING LIGHT CIRCUIT EXL-111

DIAGNOSIS AND REPAIR WORK FLOW ADP-56, AV-492, BRC-64, CCS-78, CHG-15, DAS-288, DLK-69, DLN-31, DMS-9, EXL-71, HAC-48, INL-59, INL-143, INT-17, PCS-57, PWC-31, RF-15, SE-60, SEC-50, SRC-33, ST-13, STC-17, STR-13, TM-94, WT-27, WW-29

DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)..... MWI-67

DIAGNOSIS SENSOR UNIT SBC-19, SR-25, SRC-18

DIAGNOSIS SYSTEM (A/C AUTO AMP.) .. HAC-23

DIAGNOSIS SYSTEM (ACCELERATOR PEDAL ACTUATOR)..... DAS-230

DIAGNOSIS SYSTEM (ACTIVE NOISE CONTROL UNIT) AV-32

DIAGNOSIS SYSTEM (ADAS CONTROL UNIT).... CCS-28, DAS-19, DAS-214

DIAGNOSIS SYSTEM (AFS CONTROL UNIT)..... EXL-36

DIAGNOSIS SYSTEM (AIR BAG) SRC-12

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT) AV-197

DIAGNOSIS SYSTEM (AV CONTROL UNIT) AV-20, AV-177

DIAGNOSIS SYSTEM (AWD CONTROL UNIT) DLN-19

DIAGNOSIS SYSTEM (BCM)..... BCS-14, DEF-7, DLK-35, EXL-25, INL-15, INL-99, PCS-42, PWC-11, SEC-20, WCS-20, WW-12

DIAGNOSIS SYSTEM (CAN GATEWAY). LAN-157

DIAGNOSIS SYSTEM (COMBINATION METER)... MWI-31, WCS-15

DIAGNOSIS SYSTEM (DRIVER ASSISTANCE BUZZER CONTROL MODULE)	CCS-44, DAS-236
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)	ADP-25
DIAGNOSIS SYSTEM (ECM)	EC-76, EC-604, EC-1030, EC-1617
DIAGNOSIS SYSTEM (ICC SENSOR)	CCS-42, DAS-228
DIAGNOSIS SYSTEM (IPDM E/R)	EXL-31, PCS-11, SEC-28, WW-15
DIAGNOSIS SYSTEM (LANE CAMERA UNIT)	DAS-232
DIAGNOSIS SYSTEM (LOW TIRE PRESSURE WARNING CONTROL UNIT)	WT-11
DIAGNOSIS SYSTEM (PRE-CRASH SEAT BELT)	SBC-12
DIAGNOSIS SYSTEM (SIDE RADAR LH)	DAS-234
DIAGNOSIS SYSTEM (SIDE RADAR RH)	DAS-235
DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)	AV-201
DIAGNOSIS SYSTEM (TCM)	TM-61
DIAGNOSIS SYSTEM (TCU)	AV-449
DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)	AV-34
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] ..	BRC-39
DIAGNOSIS SYSTEM [BOSE AMP.(ACTIVE NOISE CONTROL SYSTEM)]	AV-195
DIFFERENTIAL ASSEMBLY ..	DLN-138, DLN-180, DLN-218
DIRECT CLUTCH	TM-321
DISK EJECT SIGNAL CIRCUIT	AV-109, AV-380
DISPLAY UNIT	AV-44, AV-134, AV-213, AV-420
DLC BRANCH LINE CIRCUIT ..	LAN-114, LAN-183, LAN-494
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	LAN-115, LAN-214, LAN-253, LAN-297, LAN-348, LAN-391, LAN-445, LAN-529, LAN-576, LAN-630, LAN-677
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	LAN-116, LAN-215, LAN-254, LAN-298, LAN-349, LAN-392, LAN-446, LAN-530, LAN-577, LAN-631, LAN-678
DOES NOT OPERATE	BRC-158
DOOR & LOCK SYSTEM	DLK-49
DOOR DOES NOT LOCK/UNLOCK WITH DOOR KEY CYLINDER OPERATION	DLK-142
DOOR DOES NOT LOCK/UNLOCK WITH DOOR LOCK AND UNLOCK SWITCH	DLK-139
DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH	DLK-143
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-145
DOOR KEY CYLINDER SWITCH	DLK-92, PWC-53
DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	PWC-70
DOOR LOCK ACTUATOR	DLK-95
DOOR LOCK AND UNLOCK SWITCH	DLK-94
DOOR LOCK OPERATION WARNING DOES NOT OPERATE	DLK-169
DOOR MIRROR	MIR-41
DOOR MIRROR DEFOGGER	DEF-26
DOOR MIRROR DEFOGGER DOES NOT OPERATE	DEF-33
DOOR MIRROR MOTOR	ADP-129
DOOR MIRROR REMOTE CONTROL SWITCH	MIR-32
DOOR MIRROR SYSTEM	MIR-11
DOOR MOTOR	HAC-131
DOOR OUTSIDE MOLDING	EXT-41
DOOR PARTING SEAL	EXT-43
DOOR REQUEST SWITCH	DLK-90
DOOR SASH MOLDING	EXT-36
DOOR SWITCH	DLK-87, DLK-228
DRIVE BELT	EM-22
DRIVE BELT AUTO TENSIONER AND IDLER PULLEY	EM-28, EM-191
DRIVE BELTS	EM-182
DRIVE MODE SELECT SWITCH	DMS-13
DRIVE MODE SELECT SWITCH CIRCUIT	DMS-11
DRIVE PINION	DLN-154, DLN-193, DLN-229
DRIVER AIR BAG MODULE	SR-11
DRIVER ASSISTANCE BUZZER	DAS-397
DRIVER ASSISTANCE BUZZER CIRCUIT	DAS-350
DRIVER ASSISTANCE BUZZER CONTROL MODULE	CCS-62, DAS-265, DAS-396
DRIVER ASSISTANCE SYSTEM SYMPTOMS	DAS-358
DRIVER ASSISTANCE SYSTEMS	DAS-44, DAS-269
DRIVER SEAT CONTROL UNIT	ADP-29, ADP-148
DRIVER SEAT CONTROL UNIT, AUTOMATIC DRIVE POSITIONER CONTROL UNIT	MIR-10
DRIVER SIDE DOOR MIRROR DEFOGGER	DEF-27
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-62
DRIVING FORCE IS HUNTING	CCS-125
DUCT AND GRILLE	VTL-8
DYNAMIC DRIVER ASSISTANCE SWITCH	DAS-391
E	
ECM BRANCH LINE CIRCUIT ..	LAN-112, LAN-181, LAN-212, LAN-251, LAN-295, LAN-346, LAN-389, LAN-443, LAN-492, LAN-527, LAN-574, LAN-628, LAN-675
ECM, IPDM E/R	HAC-34
ECV (ELECTRICAL CONTROL VALVE) ..	HAC-115

ELECTRICAL LOAD SIGNAL [EC-526](#), [EC-948](#),
[EC-1531](#), [EC-1997](#)
ENCODER [PWC-44](#)
ENGINE ASSEMBLY [EM-76](#), [EM-220](#)
ENGINE CONTROL SYSTEM [EC-134](#), [EC-656](#),
[EC-1098](#), [EC-1681](#)
ENGINE CONTROL SYSTEM SYMPTOMSEC-548,
[EC-967](#), [EC-1557](#), [EC-2018](#)
ENGINE COOLANT [CO-10](#), [CO-39](#)
ENGINE COVER [EM-27](#), [EM-189](#)
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE [SEC-118](#)
ENGINE MAINTENANCE (VK56VD) [MA-31](#)
ENGINE MAINTENANCE (VQ37VHR) [MA-20](#)
ENGINE OIL [LU-9](#), [LU-33](#)
ENGINE SPEED SIGNAL CIRCUIT [STC-22](#)
ENGINE STAND SETTING [EM-86](#)
ENGINE UNIT [EM-88](#)
ENTRY/EXIT ASSIST FUNCTION DOES NOT
OPERATE [ADP-143](#)
EVAP CANISTER [FL-15](#)
EVAP LEAK CHECK..... [EC-556](#), [EC-975](#), [EC-1565](#)
EVAPORATIVE EMISSION SYSTEM [EC-2026](#)
EXCESSIVE OPERATION FREQUENCY [BRC-155](#)
EXHAUST MANIFOLD [EM-36](#)
EXHAUST MANIFOLD AND THREE WAY
CATALYST [EM-231](#)
EXHAUST SYSTEM [EX-4](#), [EX-5](#)
EXTERIOR LIGHTING SYSTEM [EXL-43](#)
EXTERIOR LIGHTING SYSTEM SYMPTOMS
[EXL-125](#)

F

FENDER PROTECTOR [EXT-26](#)
FILAMENT [DEF-36](#)
FLOOR SIDE FAIRING [EXT-31](#)
FLOOR TRIM [INT-52](#)
FLUID COOLER SYSTEM [TM-215](#)
FOOT LAMP [INL-78](#), [INL-163](#)
FORWARD EMERGENCY BRAKING [BRC-195](#)
FREQUENTLY CANNOT DETECT THE VEHICLE
AHEAD / DETECTION ZONE IS SHORT
[CCS-126](#), [DAS-377](#)
FRONT BUMPER [EXT-13](#)
FRONT CAMERA [AV-430](#)
FRONT CAMERA COMMUNICATION SIGNAL
CIRCUIT [AV-384](#)
FRONT CARRIER, INPUT CLUTCH, REAR
INTERNAL GEAR [TM-308](#)
FRONT CASE AND REAR CASE [DLN-69](#)
FRONT COIL SPRING AND SHOCK ABSORBER.
[FSU-10](#), [FSU-30](#)
FRONT COMBINATION LAMP [EXL-137](#)
FRONT DIFFERENTIAL GEAR OIL [DLN-126](#)
FRONT DISC BRAKE [BR-7](#), [BR-17](#), [BR-43](#)
FRONT DOOR [DLK-188](#)

FRONT DOOR FINISHER [INT-30](#)
FRONT DOOR GLASS [GW-17](#)
FRONT DOOR LOCK [DLK-210](#)
FRONT DOOR SPEAKER [AV-127](#)
FRONT DOOR SQUAWKER [AV-128](#), [AV-409](#)
FRONT DOOR WOOFER [AV-408](#)
FRONT DRIVE SHAFT [FAX-17](#), [FAX-26](#)
FRONT DRIVE SHAFT AND DRIVE CHAINDLN-84
FRONT DRIVE SHAFT BOOT [FAX-21](#)
FRONT FENDER [DLK-186](#)
FRONT FINAL DRIVE ASSEMBLY [DLN-131](#)
FRONT FOG LAMP [EXL-141](#)
FRONT FOG LAMP AIMING ADJUSTMENT
[EXL-135](#)
FRONT FOG LAMP CIRCUIT [EXL-115](#)
FRONT GRILLE [EXT-22](#)
FRONT HEATED SEAT CONTROL UNIT [SE-24](#)
FRONT HEATED SEAT DOES NOT OPERATE
[SE-106](#)
FRONT HEATED SEAT RELAY [SE-92](#)
FRONT HEATED SEAT SWITCH [SE-133](#)
FRONT HEATED SEAT SYSTEM [SE-49](#)
FRONT LOWER LINK [RSU-14](#)
FRONT MICROPHONE (ACTIVE NOISE
CONTROL SYSTEM) [AV-131](#)
FRONT MICROPHONE (ACTIVE NOISE
CONTROL SYSTEM/AUDIOPILOT® 2) [AV-417](#)
FRONT OIL SEAL [DLN-62](#), [DLN-173](#), [DLN-211](#)
FRONT PASSENGER SIDE POWER WINDOW
DOES NOT OPERATE [PWC-63](#)
FRONT POWER WINDOW SWITCH [PWC-74](#)
FRONT POWER WINDOW SWITCH (PASSENGER
SIDE) [PWC-17](#)
FRONT PROPELLER SHAFT [DLN-92](#), [DLN-93](#)
FRONT REGULATOR [GW-19](#)
FRONT SEAT [SE-118](#)
FRONT SEAT BELT [SB-5](#)
FRONT SEATBACK HEATER ONLY DOES NOT
OPERATE [SE-107](#)
FRONT STABILIZER [FSU-18](#), [FSU-38](#)
FRONT SUSPENSION ASSEMBLYFSU-7, [FSU-27](#)
FRONT SUSPENSION MEMBER [FSU-19](#), [FSU-39](#)
FRONT TURN SIGNAL LAMP ASSEMBLY [EXL-139](#)
FRONT WASHER NOZZLE AND TUBE [WW-52](#)
FRONT WHEEL HUB AND KNUCKLE [FAX-7](#),
[FAX-8](#), [FAX-16](#), [FAX-18](#)
FRONT WIPER ARM [WW-55](#)
FRONT WIPER BLADE [WW-57](#)
FRONT WIPER DOES NOT OPERATE [WW-47](#)
FRONT WIPER DRIVE ASSEMBLY [WW-59](#)
FRONT WIPER MOTOR HI CIRCUIT [WW-35](#)
FRONT WIPER MOTOR LO CIRCUIT [WW-33](#)
FRONT WIPER POSITION SIGNAL CIRCUIT
[WW-37](#)
FUEL FILLER LID OPENER [DLK-223](#)

FUEL INJECTOR [EC-528](#), [EC-950](#), [EC-1533](#),
[EC-1999](#)
 FUEL INJECTOR AND FUEL TUBE [EM-42](#), [EM-205](#)
 FUEL LEVEL SENSOR SIGNAL CIRCUIT [MWI-78](#)
 FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
 FUEL PUMP ASSEMBLY [FL-6](#)
 FUEL LID LOCK ACTUATOR [DLK-111](#)
 FUEL LID LOCK ACTUATOR DOES NOT
 OPERATE [DLK-151](#)
 FUEL PRESSURE [EC-1149](#), [EC-1731](#)
 FUEL PRESSURE CHECK [EC-180](#), [EC-701](#)
 FUEL PUMP [EC-530](#), [EC-952](#)
 FUEL PUMP CONTROL MODULE (FPCM)
[EC-1570](#), [EC-2030](#)
 FUEL SYSTEM [FL-5](#)
 FUEL TANK [FL-11](#)
 FUSE BLOCK - JUNCTION BOX (J/B) [PG-120](#)
 FUSE INSPECTION [PG-160](#)
 FUSE, FUSIBLE LINK AND RELAY BOX... [PG-121](#)
 FUSIBLE LINK INSPECTION [PG-163](#)

G

GENERAL MAINTENANCE [MA-5](#)
 GLASS LID [RF-33](#)
 GLOVE BOX LAMP [INL-77](#), [INL-162](#)
 GPS ANTENNA [AV-426](#)
 GROUND DISTRIBUTION [PG-93](#)

H

HANDLE SWITCH [DLK-130](#)
 HANDLING PRECAUTION [AV-448](#), [BRC-183](#),
[CCS-25](#), [DAS-208](#), [DMS-8](#), [EC-74](#), [EC-602](#),
[EC-1028](#), [EC-1615](#)
 HARNESS LAYOUT [PG-124](#)
 HAZARD AND BUZZER REMINDER DOES NOT
 OPERATE [DLK-159](#)
 HAZARD AND HORN REMINDER DOES NOT
 OPERATE [DLK-158](#)
 HAZARD FUNCTION [DLK-124](#)
 HAZARD SWITCH [EXL-123](#), [EXL-146](#)
 HAZARD WARNING LAMP REMAINS ON.. [WT-60](#)
 HEADLAMP (HI) CIRCUIT [EXL-96](#)
 HEADLAMP (LO) CIRCUIT [EXL-98](#)
 HEADLAMP AIMING ADJUSTMENT [EXL-133](#)
 HEADLAMP FUNCTION [SEC-107](#)
 HEADLAMP LEVELIZER CIRCUIT [EXL-102](#)
 HEADLAMP WARNING [EXL-101](#)
 HEADLINING [INT-55](#)
 HEATED SEAT SWITCH [SE-88](#)
 HEATED SEAT SWITCH INDICATOR [SE-99](#)
 HEATED SEAT SWITCH INDICATOR DOES NOT
 TURN ON [SE-109](#)
 HEATED STEERING WHEEL [ST-10](#)
 HEATED STEERING WHEEL SWITCH [ST-78](#)

HEATED STEERING WHEEL SWITCH INDICATOR
 LAMP [ST-20](#)
 HEATED STEERING WHEEL SWITCH INDICATOR
 LAMP DOES NOT TURN ON [ST-26](#)
 HEATED STEERING WHEEL SYSTEM [ST-16](#)
 HEATED STEERING WHEEL SYSTEM DOES NOT
 ACTIVATE [ST-23](#)
 HEATER & COOLING UNIT ASSEMBLY [HA-43](#)
 HEAVY TIGHT-CORNER BRAKING SYMPTOM
 OCCURS [DLN-55](#)
 HEIGHT SENSOR [EXL-150](#)
 HI MODE AND LO MODE OF REAR HEATED SEAT
 DOES NOT OPERATE [SE-110](#)
 HI MODE OR LO MODE OF REAR HEATED SEAT
 DOES NOT OPERATE [SE-111](#)
 HIGH AND LOW REVERSE CLUTCH [TM-318](#)
 HIGH PRESSURE FUEL PUMP [EC-1536](#), [EC-2002](#)
 HIGH PRESSURE FUEL PUMP AND FUEL HOSE
[EM-201](#)
 HIGH-MOUNTED STOP LAMP [EXL-155](#)
 HOOD [DLK-178](#)
 HOOD LOCK [DLK-205](#)
 HOOD SWITCH [SEC-108](#)
 HORIZONTAL SYNCHRONIZING (HP) SIGNAL
 CIRCUIT [AV-107](#)
 HORN [HRN-4](#), [HRN-7](#)
 HORN FUNCTION [SEC-110](#)
 HOW TO ERASE PERMANENT DTC [EC-188](#),
[EC-1158](#)
 HOW TO FOLLOW TROUBLE DIAGNOSES .. [GI-6](#)
 HOW TO READ WIRING DIAGRAMS [GI-9](#)
 HOW TO SELECT PISTON AND BEARING [EM-149](#),
[EM-301](#)
 HOW TO SET SRT CODE [EC-182](#), [EC-703](#),
[EC-1152](#), [EC-1734](#)
 HOW TO USE THIS MANUAL [GI-3](#)
 HOW TO USE THIS SECTION [LAN-32](#)
 HVAC BRANCH LINE CIRCUIT [LAN-121](#), [LAN-187](#),
[LAN-219](#), [LAN-259](#), [LAN-303](#), [LAN-354](#),
[LAN-396](#), [LAN-451](#), [LAN-498](#), [LAN-535](#),
[LAN-582](#), [LAN-636](#), [LAN-683](#)
 HYDRAULIC LINE [ST-72](#)

I

ICC BRAKE SWITCH. [EC-533](#), [EC-1538](#), [EC-2004](#)
 ICC BRANCH LINE CIRCUIT .. [LAN-137](#), [LAN-318](#),
[LAN-411](#), [LAN-466](#), [LAN-598](#), [LAN-699](#)
 ICC SENSOR [CCS-59](#), [CCS-133](#), [DAS-251](#)
 ICC SENSOR ALIGNMENT [CCS-81](#)
 ICC STEERING SWITCH [CCS-135](#)
 ICC STEERING SWITCH (OTHER THAN MAIN
 SWITCH) DOES NOT FUNCTION [CCS-121](#)
 ICC SYSTEM CANNOT BE SET (MAIN SWITCH
 TURNS ON/OFF) [CCS-119](#)
 ICC SYSTEM DOES NOT CANCEL WHEN A/T
 SELECTOR LEVER SETS ON

ID REGISTRATION WT-31
 ID REGISTRATION CANNOT BE COMPLETED WT-59
 IDENTIFICATION INFORMATION GI-34
 IDLE AIR VOLUME LEARNING .. EC-171, EC-692, EC-1144, EC-1726
 IDLE SPEED EC-554, EC-973, EC-1563, EC-2024
 IGN OFF INTERLOCK DOOR UNLOCK FUNCTION DOES NOT OPERATE DLK-155
 IGNITION COIL, SPARK PLUG AND ROCKER COVER EM-54, EM-194
 IGNITION POSITION WARNING FUNCTION DOES NOT OPERATE DLK-152
 IGNITION SIGNAL EC-535, EC-955, EC-1541, EC-2007
 IGNITION TIMING EC-555, EC-974, EC-1564, EC-2025
 ILLUMINATION INL-39, INL-123
 IN-CABIN MICROFILTER VTL-19
 IN-VEHICLE SENSOR HAC-128
 INFORMATION DISPLAY DLK-122
 INFORMATION DISPLAY (ASCD) EC-1546
 INSIDE KEY ANTENNA DLK-229
 INSIDE MIRROR MIR-40
 INSTRUMENT PANEL ASSEMBLY IP-12
 INSUFFICIENT COOLING HAC-122
 INSUFFICIENT HEATING HAC-123
 INTAKE MANIFOLD EM-34, EM-198
 INTAKE MANIFOLD COLLECTOR EM-31
 INTAKE SENSOR HAC-130
 INTELLIGENT CRUISE CONTROL CCS-66
 INTELLIGENT CRUISE CONTROL SYSTEM SYMPTOMS CCS-117
 INTELLIGENT KEY BATTERY . DLK-121, DLK-236
 INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE ADP-145, HAC-124
 INTELLIGENT KEY LOW BATTERY WARNING DOES NOT OPERATE DLK-168
 INTELLIGENT KEY WARNING BUZZER. DLK-119, DLK-231
 INTERIOR LIGHTING SYSTEM SYMPTOMS INL-72, INL-156
 INTERIOR ROOM LAMP CONTROL CIRCUIT INL-64, INL-148
 INTERIOR ROOM LAMP CONTROL SYSTEM INL-22, INL-106
 INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT INL-62, INL-146
 IPDM E/R MWI-47, PCS-16, PCS-25, PCS-34
 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) PG-122
 IPDM-E BRANCH LINE CIRCUIT LAN-133, LAN-195, LAN-229, LAN-269, LAN-314, LAN-364, LAN-407, LAN-462, LAN-507, LAN-546, LAN-594, LAN-647, LAN-695

ITS COMMUNICATION CIRCUIT LAN-151, LAN-330, LAN-423, LAN-478, LAN-610, LAN-711
 Infiniti Drive Mode Selector EC-552, EC-971, EC-1561, EC-2022

K

KEY CYLINDER DLK-225
 KEY ID WARNING DOES NOT OPERATED DLK-170
 KEY REMINDER FUNCTION DOES NOT OPERATE DLK-160
 KEYLESS POWER WINDOW DOWN DOES NOT OPERATE PWC-71

L

L TERMINAL CIRCUIT (OPEN) CHG-26
 L TERMINAL CIRCUIT (SHORT) CHG-28
 LANE BRANCH LINE CIRCUIT LAN-143, LAN-324, LAN-417, LAN-472, LAN-604, LAN-705
 LANE CAMERA UNIT DAS-256, DAS-392
 LANE DEPARTURE WARNING LAMP DOES NOT TURNED ON DAS-381
 LAP PRE-TENSIONER SR-28
 LASER BRANCH LINE CIRCUIT LAN-144, LAN-325, LAN-418, LAN-473, LAN-605, LAN-706
 LDP ON INDICATOR LAMP DOES NOT TURNED ON DAS-382
 LED HEADLAMP EXL-100
 LED HEADLAMP OPERATION INSPECTION EXL-74
 LICENSE PLATE LAMP EXL-156
 LICENSE PLATE LAMP CIRCUIT EXL-109
 LIFTING MOTOR (FRONT) ADP-121
 LIFTING MOTOR (REAR) ADP-123
 LIFTING POINT GI-29
 LIFTING SENSOR (FRONT) ADP-102
 LIFTING SENSOR (REAR) ADP-105
 LIFTING SENSOR CONTROL UNIT ADP-39, ADP-150
 LIFTING SWITCH (FRONT) ADP-82
 LIFTING SWITCH (REAR) ADP-84
 LIGHTING AND TURN SIGNAL SWITCH. EXL-145
 LOCATION OF PLASTIC PARTS BRM-89, BRM-176
 LOW PRESSURE FUEL PUMP EC-1547, EC-2012
 LOW TIRE PRESSURE WARNING CONTROL UNIT WT-13, WT-66
 LOW TIRE PRESSURE WARNING LAMP ... WT-53
 LOW TIRE PRESSURE WARNING LAMP BLINKS WT-58
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF WT-57
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON WT-56
 LOWER SHAFT ST-38

LUBRICANT	HA-23
LUMBAR SUPPORT SYSTEM	SE-32

M

M&A BRANCH LINE CIRCUIT .	LAN-118, LAN-185, LAN-217, LAN-256, LAN-300, LAN-351, LAN-394, LAN-448, LAN-496, LAN-532, LAN-579, LAN-633, LAN-680
MAGNET CLUTCH	HAC-117
MAIN LINE BETWEEN 4WD AND ABS CIRCUIT ..	LAN-102, LAN-523, LAN-566, LAN-624, LAN-667
MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	LAN-84, LAN-170, LAN-200, LAN-238, LAN-278, LAN-333, LAN-373, LAN-426, LAN-481, LAN-512, LAN-555, LAN-613, LAN-656
MAIN LINE BETWEEN ADP AND ABS CIRCUIT...	LAN-100, LAN-179, LAN-490
MAIN LINE BETWEEN APA AND LANE CIRCUIT .	LAN-111, LAN-294, LAN-388, LAN-442, LAN-573, LAN-674
MAIN LINE BETWEEN AV AND BCM CIRCUIT	LAN-90, LAN-174, LAN-204, LAN-243, LAN-283, LAN-338, LAN-377, LAN-431, LAN-485, LAN-517, LAN-560, LAN-618, LAN-661
MAIN LINE BETWEEN AVM AND ADP CIRCUIT ..	LAN-105, LAN-211, LAN-250, LAN-345, LAN-526, LAN-627
MAIN LINE BETWEEN BCM AND TCM CIRCUIT .	LAN-91, LAN-175, LAN-205, LAN-244, LAN-284, LAN-339, LAN-378, LAN-432, LAN-486, LAN-518, LAN-561, LAN-619, LAN-662
MAIN LINE BETWEEN CGW AND 4WD CIRCUIT	LAN-96, LAN-521, LAN-564, LAN-622, LAN-665
MAIN LINE BETWEEN CGW AND ABS CIRCUIT .	LAN-98, LAN-208, LAN-247, LAN-287, LAN-342, LAN-381, LAN-435
MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	LAN-83, LAN-169, LAN-199, LAN-237, LAN-277, LAN-332, LAN-372, LAN-425, LAN-480, LAN-511, LAN-554, LAN-612, LAN-655
MAIN LINE BETWEEN DLC AND AVM CIRCUIT...	LAN-104, LAN-210, LAN-249, LAN-344, LAN-525, LAN-626
MAIN LINE BETWEEN DLC AND ICC CIRCUIT	LAN-106, LAN-289, LAN-383, LAN-437, LAN-568, LAN-669
MAIN LINE BETWEEN HVAC AND AV CIRCUIT ...	LAN-89, LAN-173, LAN-203, LAN-242, LAN-282, LAN-337, LAN-376, LAN-430, LAN-484, LAN-516, LAN-559, LAN-617, LAN-660
MAIN LINE BETWEEN M&A AND TCU CIRCUIT ..	LAN-85, LAN-239, LAN-279, LAN-334, LAN-427, LAN-513, LAN-556, LAN-614, LAN-657
MAIN LINE BETWEEN M&A AND TPMS CIRCUIT	LAN-86, LAN-171, LAN-201, LAN-374, LAN-482
MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	LAN-108, LAN-291, LAN-385, LAN-439, LAN-570, LAN-671
MAIN LINE BETWEEN RDR-R AND APA CIRCUIT	LAN-109, LAN-292, LAN-386, LAN-440, LAN-571, LAN-672
MAIN LINE BETWEEN STRG AND ADP CIRCUIT	LAN-93, LAN-177, LAN-488
MAIN LINE BETWEEN STRG AND CGW CIRCUIT	LAN-95, LAN-207, LAN-246, LAN-286, LAN-341, LAN-380, LAN-434, LAN-520, LAN-563, LAN-621, LAN-664
MAIN LINE BETWEEN TCM AND STRG CIRCUIT	LAN-92, LAN-176, LAN-206, LAN-245, LAN-285, LAN-340, LAN-379, LAN-433, LAN-487, LAN-519, LAN-562, LAN-620, LAN-663
MAIN LINE BETWEEN TCU AND TPMS CIRCUIT	LAN-87, LAN-240, LAN-280, LAN-335, LAN-428, LAN-514, LAN-557, LAN-615, LAN-658
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	LAN-88, LAN-172, LAN-202, LAN-241, LAN-281, LAN-336, LAN-375, LAN-429, LAN-483, LAN-515, LAN-558, LAN-616, LAN-659
MAIN POWER SUPPLY AND GROUND CIRCUIT .	TM-159
MAIN SHAFT	DLN-79
MAIN SWITCH DOES NOT TURN ON, MAIN SWITCH DOES NOT TURN OFF	CCS-118
MALFUNCTION AREA CHART	LAN-79
MALFUNCTION INDICATOR LAMP	EC-540, EC-960, EC-1550, EC-2015
MANUAL FUNCTION DOES NOT OPERATE	ADP-134
MAP (MANIFOLD ABSOLUTE PRESSURE) SENSOR	EC-961
MAP LAMP	INL-73, INL-157
MEMORY FUNCTION DOES NOT OPERATE	ADP-139
MEMORY INDICATE DOES NOT OPERATE	ADP-146
METER BUZZER CIRCUIT	WCS-44
METER CONTROL SWITCH	MWI-96
METER CONTROL SWITCH SIGNAL CIRCUIT	MWI-76
METER SYSTEM	MWI-48
MICROPHONE	AV-141, AV-428, AV-519

MICROPHONE SIGNAL CIRCUIT [AV-110](#), [AV-381](#),
[AV-512](#)
MID SUN GEAR, REAR SUN GEAR, HIGH AND
LOW REVERSE CLUTCH HUB [TM-313](#)
MIRROR SENSOR [ADP-113](#)
MIXTURE RATIO SELF-LEARNING VALUE CLEAR
[EC-175](#), [EC-696](#), [EC-1148](#), [EC-1730](#)
MULTI AV SYSTEM SYMPTOMS ..[AV-119](#), [AV-395](#)
MULTIFUNCTION SWITCH [AV-137](#), [AV-422](#),
[HAC-125](#)

N

NATS ANTENNA AMP. [SEC-125](#)
NEUTRAL SWITCH.....[DLK-127](#)
NO FORCE GENERATED FOR PUTTING BACK
THE ACCELERATOR PEDAL [DAS-376](#)
NOISE[HA-30](#)
NOISE, VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTING [BR-9](#), [DLN-59](#), [DLN-91](#),
[DLN-102](#), [DLN-111](#), [DLN-125](#), [DLN-170](#),
[DLN-208](#), [EM-20](#), [EM-180](#), [FAX-6](#), [FAX-15](#),
[FSU-6](#), [FSU-26](#), [RAX-5](#), [RSU-4](#), [ST-28](#), [WT-61](#)
NONE OF THE POWER WINDOWS CAN BE
OPERATED USING ANY SWITCH [PWC-61](#)
NORMAL OPERATING CONDITION [ADP-147](#),
[AV-123](#), [AV-401](#), [AV-517](#), [BCS-94](#), [BRC-161](#),
[CCS-130](#), [DAS-384](#), [EC-553](#), [EC-972](#), [EC-1562](#),
[EC-2023](#), [EXL-128](#), [MWI-94](#), [WW-46](#)

O

OCCUPANT CLASSIFICATION SYSTEM
CONTROL UNIT[SR-29](#)
OFF POSITION WARNING DOES NOT OPERATE
[DLK-163](#)
OIL COOLER..... [LU-18](#), [LU-37](#)
OIL FILTER..... [LU-13](#), [LU-36](#)
OIL FILTER BRACKET (AWD) [LU-15](#)
OIL PAN (LOWER) [EM-48](#)
OIL PAN (LOWER) AND OIL STRAINER... [EM-212](#)
OIL PAN (UPPER) [EM-234](#)
OIL PAN (UPPER) AND OIL STRAINER [EM-89](#)
OIL PRESSURE SWITCH SIGNAL CIRCUIT
(VQ37VHR ENGINE MODELS) [MWI-81](#)
OIL PUMP [LU-23](#), [LU-24](#), [LU-39](#)
OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON
[TM-296](#)
OIL SEAL.....[EM-74](#), [EM-218](#)
ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-75](#),
[EC-603](#), [EC-1029](#), [EC-1616](#), [TM-60](#)
ON BOARD REFUELING VAPOR RECOVERY
(ORVR)..... [EC-541](#), [EC-1551](#)
ON IS NOT DISPLAYED WHEN PRESSING REAR
WINDOW DEFOGGER SWITCH BUT IT IS
OPERATED [DEF-34](#)
ONE-TOUCH JOINT.....[HA-17](#)

OPERATION [BRC-181](#), [CCS-19](#), [DAS-196](#), [EC-72](#),
[EC-600](#), [EC-1026](#), [HAC-19](#), [MWI-30](#)
OPERATION INSPECTION [HAC-51](#)
OPERATION SWITCH..... [DLK-133](#)
OPTICAL SENSOR[EXL-120](#), [EXL-144](#)
OPTION HARNESS..... [PG-106](#)
OUTPUT SPEED SENSOR..... [TM-205](#)
OUTSIDE HANDLE LAMP [INL-84](#), [INL-169](#)
OUTSIDE HANDLE LAMP CIRCUIT [INL-69](#), [INL-153](#)
OUTSIDE KEY ANTENNA [DLK-230](#)
OVERHEATING CAUSE ANALYSIS . [CO-8](#), [CO-37](#)

P

P POSITION WARNING DOES NOT OPERATE
[DLK-164](#)
P RANGE INTERLOCK DOOR LOCK/UNLOCK
FUNCTION DOES NOT OPERATE ... [DLK-156](#)
P0011, P0021 IVT CONTROL [EC-213](#), [EC-727](#),
[EC-1180](#), [EC-1755](#)
P0014, P0024 EVT CONTROL [EC-1184](#), [EC-1759](#)
P0030, P0031, P0032, P0036, P0051, P0052 A/F
SENSOR 1 HEATER [EC-217](#)
P0031, P0032, P0051, P0052 A/F SENSOR 1
HEATER [EC-731](#), [EC-1188](#), [EC-1763](#)
P0037, P0038, P0057, P0058 HO2S2 HEATER
[EC-220](#), [EC-734](#), [EC-1191](#), [EC-1766](#)
P0075, P0081 IVT CONTROL SOLENOID VALVE .
[EC-223](#), [EC-737](#), [EC-1194](#), [EC-1769](#)
P0078, P0084 EVT CONTROL SOLENOID VALVE
[EC-1197](#), [EC-1772](#)
P0087 FRP CONTROL SYSTEM [EC-1200](#), [EC-1775](#)
P0088 FRP CONTROL SYSTEM [EC-1204](#), [EC-1779](#)
P0090 HIGH PRESSURE FUEL PUMP .. [EC-1207](#),
[EC-1782](#)
P0101, P010B MAF SENSOR [EC-226](#), [EC-1210](#)
P0102, P0103, P010C, P010D MAF SENSOR
[EC-232](#), [EC-740](#), [EC-1216](#), [EC-1785](#)
P010A MANIFOLD ABSOLUTE PRESSURE
SENSOR [EC-746](#), [EC-1222](#), [EC-1791](#)
P0111 IAT SENSOR [EC-238](#), [EC-1225](#)
P0112, P0113 IAT SENSOR [EC-240](#), [EC-749](#),
[EC-1227](#), [EC-1794](#)
P0116 ECT SENSOR [EC-242](#), [EC-1229](#)
P0117, P0118 ECT SENSOR [EC-245](#), [EC-751](#),
[EC-1232](#), [EC-1796](#)
P0122, P0123, P0227, P0228 TP SENSOREC-247,
[EC-753](#), [EC-1234](#), [EC-1798](#)
P0125 ECT SENSOR [EC-250](#), [EC-1237](#)
P0127 IAT SENSOR [EC-252](#), [EC-1239](#)
P0128 THERMOSTAT FUNCTIONEC-254, [EC-1241](#)
P0130, P0150 A/F SENSOR 1 [EC-257](#), [EC-756](#),
[EC-1244](#), [EC-1801](#)
P0131, P0151 A/F SENSOR 1 [EC-261](#), [EC-760](#),
[EC-1248](#), [EC-1805](#)
P0132, P0152 A/F SENSOR 1 [EC-264](#), [EC-763](#),
[EC-1251](#), [EC-1808](#)

P0133, P0153 A/F SENSOR 1.... EC-766 , EC-1811	P0451 EVAP CONTROL SYSTEM PRESSURE
P0137, P0157 HO2S2.. EC-267 , EC-771 , EC-1254 , EC-1816	SENSOR EC-361 , EC-1355
P0138, P0158 HO2S2.. EC-273 , EC-777 , EC-1260 , EC-1822	P0452 EVAP CONTROL SYSTEM PRESSURE
P0139, P0159 HO2S2.. EC-281 , EC-785 , EC-1268 , EC-1830	SENSOR EC-365 , EC-1359
P014C, P014D, P014E, P014F, P015A, P015B, P015C, P015D A/F SENSOR 1 EC-288 , EC-1274	P0453 EVAP CONTROL SYSTEM PRESSURE
P0171, P0174 FUEL INJECTION SYSTEM	SENSOR EC-370 , EC-1364
FUNCTIONEC EC-294 , EC-791 , EC-1280 , EC-1836	P0456 EVAP CONTROL SYSTEMEC EC-376 , EC-1370
P0172, P0175 FUEL INJECTION SYSTEM	P0460 FUEL LEVEL SENSOR ... EC-382 , EC-1376
FUNCTIONEC EC-298 , EC-795 , EC-1284 , EC-1840	P0461 FUEL LEVEL SENSOR ... EC-383 , EC-1377
P0181 FTT SENSOR EC-302 , EC-1288	P0462, P0463 FUEL LEVEL SENSOR EC-385 , EC-1379
P0182, P0183 FTT SENSOR..... EC-306 , EC-799 , EC-1292	P0500 VSS... EC-386 , EC-832 , EC-1380 , EC-1877
P0190 FRP SENSOR EC-1844	P0506 ISC SYSTEM .. EC-388 , EC-1382 , EC-1879
P0190, P0192, P0193 FRP SENSOR..... EC-1295	P0507 ISC SYSTEM .. EC-390 , EC-1384 , EC-1881
P0191 FRP SENSOR EC-1298	P050A, P050B, P050E COLD START CONTROL .. EC-1386
P0196 EOT SENSOR EC-309 , EC-1302	P050A, P050E COLD START CONTROL... EC-392
P0197, P0198 EOT SENSOR..... EC-313 , EC-802 , EC-1306 , EC-1847	P0520 EOP SENSOR EC-1388 , EC-1883
P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208 INJECTOR .. EC-1308 , EC-1849	P0524 ENGINE OIL PRESSURE. EC-394 , EC-834 , EC-1391 , EC-1886
P0222, P0223, P2132, P2133 TP SENSOREC EC-315 , EC-804 , EC-1309 , EC-1850	P0550 PSP SENSOR.. EC-397 , EC-837 , EC-1394 , EC-1889
P0300, P0301, P0302, P0303, P0304, P0305, P0306 MISFIRE EC-318 , EC-807	P0603 ECM POWER SUPPLY EC-399 , EC-839 , EC-1397 , EC-1892
P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308 MISFIRE EC-1312 , EC-1853	P0605 ECM .. EC-401 , EC-841 , EC-1399 , EC-1894
P0327, P0328, P0332, P0333 KS EC-324 , EC-813 , EC-1318 , EC-1859	P0607 ECM .. EC-403 , EC-843 , EC-1401 , EC-1896
P0335 CKP SENSOR EC-1320 , EC-1861	P0611 ECM PROTECTION..... EC-1402 , EC-1897
P0335 CKP SENSOR (POS) EC-327 , EC-816	P0615 STARTER RELAY TM-109
P0340, P0345 CMP SENSOR .. EC-1324 , EC-1865	P062B ECM..... EC-1403 , EC-1898
P0340, P0345 CMP SENSOR (PHASE).... EC-331 , EC-820	P0643 SENSOR POWER SUPPLYEC EC-404 , EC-844 , EC-1404 , EC-1899
P0420, P0430 THREE WAY CATALYST FUNCTION EC-336 , EC-824 , EC-1329 , EC-1869	P0705 TRANSMISSION RANGE SENSOR A TM-111
P0441 EVAP CONTROL SYSTEMEC EC-341 , EC-1334	P0710 TRANSMISSION FLUID TEMPERATURE
P0443 EVAP CANISTER PURGE VOLUME	SENSOR A..... TM-112
CONTROL SOLENOID VALVE..... EC-346 , EC-1339	P0717 INPUT SPEED SENSOR A TM-114
P0444 EVAP CANISTER PURGE VOLUME	P0720 OUTPUT SPEED SENSOR..... TM-115
CONTROL SOLENOID VALVE..... EC-829 , EC-1874	P0725 ENGINE SPEED TM-117
P0444, P0445 EVAP CANISTER PURGE VOLUME	P0729 6GR INCORRECT RATIO TM-119
CONTROL SOLENOID VALVE..... EC-350 , EC-1344	P0730 INCORRECT GEAR RATIO..... TM-121
P0447 EVAP CANISTER VENT CONTROL VALVE EC-353 , EC-1347	P0731 1GR INCORRECT RATIO TM-123
P0448 EVAP CANISTER VENT CONTROL VALVE EC-357 , EC-1351	P0732 2GR INCORRECT RATIO TM-125
	P0733 3GR INCORRECT RATIO TM-127
	P0734 4GR INCORRECT RATIO TM-129
	P0735 5GR INCORRECT RATIO TM-131
	P0740 TORQUE CONVERTER TM-133
	P0744 TORQUE CONVERTER TM-134
	P0745 PRESSURE CONTROL SOLENOID A..... TM-136
	P0750 SHIFT SOLENOID A..... TM-137
	P0775 PRESSURE CONTROL SOLENOID B..... TM-138
	P0780 SHIFT..... TM-139
	P0795 PRESSURE CONTROL SOLENOID C TM-141

P0850 PNP SWITCH... EC-407 , EC-846 , EC-1406 , EC-1901	P1572 ASCD BRAKE SWITCH ... EC-477 , EC-910 , EC-1477
P100A, P100B VVEL SYSTEM ... EC-410 , EC-849 , EC-1409 , EC-1904	P1572 ICC BRAKE SWITCH..... EC-483 , EC-1482 , EC-1963
P1078, P1084 EVT CONTROL POSITION SENSOR EC-1413 , EC-1908	P1574 ASCD VEHICLE SPEED SENSOR EC-489 , EC-916 , EC-1488
P1087, P1088 VVEL SYSTEM.... EC-414 , EC-853 , EC-1416 , EC-1911	P1574 ICC VEHICLE SPEED SENSOR ... EC-491 , EC-1490 , EC-1969
P1089, P1092 VVEL CONTROL SHAFT POSITION SENSOR EC-415 , EC-854 , EC-1417 , EC-1912	P1606 VVEL CONTROL MODULE EC-493 , EC-918 , EC-1492 , EC-1971
P1090, P1093 VVEL ACTUATOR MOTOR EC-418 , EC-857 , EC-1420 , EC-1915	P1607 VVEL CONTROL MODULE EC-494 , EC-919 , EC-1493 , EC-1972
P1091 VVEL ACTUATOR MOTOR RELAY EC-422 , EC-861 , EC-1423 , EC-1918	P1608 VVEL SENSOR POWER SUPPLY EC-495 , EC-920 , EC-1494 , EC-1973
P1148, P1168 CLOSED LOOP CONTROL EC-425 , EC-1426	P1610 LOCK MODE..... SEC-55
P1197 OUT OF GAS EC-1427 , EC-1921	P1611 ID DISCORD, IMMU-ECM..... SEC-56
P1211 TCS CONTROL UNIT EC-426 , EC-864	P1612 CHAIN OF ECM-IMMU SEC-57
P1212 TCS COMMUNICATION LINE EC-427 , EC-865 , EC-1429 , EC-1923	P1614 CHAIN OF IMMU-KEY SEC-58
P1217 ENGINE OVER TEMPERATURE ... EC-428 , EC-866 , EC-1430 , EC-1924	P1705 TP SENSOR..... TM-142
P1220 FUEL PUMP CONTROL MODULE (FPCM) EC-1433 , EC-1927	P1715 INPUT SPEED SENSOR EC-1496 , EC-1975
P1225, P1234 TP SENSOR EC-432 , EC-870 , EC-1436 , EC-1930	P1721 VEHICLE SPEED SIGNAL..... TM-143
P1226, P1235 TP SENSOR EC-434 , EC-872 , EC-1437 , EC-1931	P1730 INTERLOCK..... TM-145
P1233, P2101 ELECTRIC THROTTLE CONTROL FUNCTION EC-436 , EC-874 , EC-1438 , EC-1932	P1734 7GR INCORRECT RATIO TM-147
P1236, P2118 THROTTLE CONTROL MOTOR EC-440 , EC-878 , EC-1442 , EC-1936	P1804 TRANSFER CONTROL UNIT DLN-42
P1238, P2119 ELECTRIC THROTTLE CONTROL ACTUATOR EC-443 , EC-881 , EC-1444 , EC-1938	P1805 BRAKE SWITCH EC-498 , EC-923 , EC-1497 , EC-1976
P1239, P2135 TP SENSOR EC-445 , EC-883 , EC-1446 , EC-1940	P1809 TRANSFER CONTROL UNIT DLN-43
P1290, P2100, P2103 THROTTLE CONTROL MOTOR RELAY EC-448 , EC-886	P1815 M-MODE SWITCH TM-149
P1423, P1424 COLD START CONTROL.. EC-1449	P1826 TRANSFER FLUID TEMPERATURE DLN-44
P1550 BATTERY CURRENT SENSOR EC-450 , EC-888 , EC-1451 , EC-1943	P2096, P2097, P2098, P2099 A/F SENSOR 1 EC-501 , EC-1500
P1551, P1552 BATTERY CURRENT SENSOR..... EC-454 , EC-892 , EC-1455 , EC-1946	P2100, P2103 THROTTLE CONTROL MOTOR RELAY EC-1504 , EC-1979
P1553 BATTERY CURRENT SENSOR EC-458 , EC-896 , EC-1459 , EC-1949	P2122, P2123 APP SENSOR..... EC-505 , EC-926 , EC-1506 , EC-1981
P1554 BATTERY CURRENT SENSOR EC-462 , EC-900 , EC-1463 , EC-1952	P2127, P2128 APP SENSOR..... EC-509 , EC-929 , EC-1509 , EC-1984
P1556, P1557 BATTERY TEMPERATURE SENSOR EC-466 , EC-904 , EC-1467 , EC-1956	P2138 APP SENSOR.. EC-514 , EC-933 , EC-1513 , EC-1988
P1564 ASCD STEERING SWITCH EC-469 , EC-907 , EC-1470	P219A, P219B AIR FUEL RATIO EC-1518
P1564 ICC STEERING SWITCH EC-472 , EC-1473 , EC-1959	P2713 PRESSURE CONTROL SOLENOID D..... TM-155
P1568 ICC FUNCTION EC-476 , EC-1476 , EC-1962	P2722 PRESSURE CONTROL SOLENOID E TM-156
	P2731 PRESSURE CONTROL SOLENOID F TM-157
	P2807 PRESSURE CONTROL SOLENOID G..... TM-158
	P2A00, P2A03 A/F SENSOR 1 EC-937
	PADDLE SHIFTER TM-191
	PANIC ALARM FUNCTION DOES NOT OPERATE SEC-124
	PARKING BRAKE CONTROL PB-7
	PARKING BRAKE SHOE PB-6 , PB-9
	PARKING BRAKE SWITCH BRC-147

PARKING BRAKE SWITCH SIGNAL CIRCUIT
[WCS-47](#)
 PARKING BRAKE SYSTEM [PB-4](#)
 PARKING COMPONENTS [TM-197](#)
 PARKING LAMP CIRCUIT [EXL-104](#)
 PARKING, LICENSE PLATE, SIDE MARKER AND
 TAIL LAMPS ARE NOT TURNED ON [EXL-131](#)
 PASSENGER AIR BAG MODULE [SR-17](#)
 PASSENGER SIDE DOOR MIRROR DEFOGGER
[DEF-29](#)
 PCB HARNESS [PG-123](#)
 PERFORMANCE TEST [HA-26](#)
 PERIODIC MAINTENANCE.....[MA-9](#)
 PERSONAL LAMP [INL-82](#)
 POSITIVE CRANKCASE VENTILATION... [EC-558](#),
[EC-976](#), [EC-1567](#), [EC-2027](#)
 POWER DISTRIBUTION SYSTEM[PCS-49](#)
 POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM OPERATION
 INSPECTION [CHG-23](#)
 POWER SEAT CONTROL SYSTEM (PASSENGER
 SIDE) [SE-27](#)
 POWER SEAT SWITCH[ADP-152](#), [SE-138](#)
 POWER SEAT SWITCH GROUND CIRCUIT
[ADP-96](#)
 POWER SOCKET[PWO-6](#), [PWO-9](#)
 POWER STEERING CONTROL SYSTEM. [STC-11](#)
 POWER STEERING CONTROL UNIT [STC-8](#),
[STC-28](#)
 POWER STEERING FLUID [ST-30](#)
 POWER STEERING OIL PUMP [ST-60](#)
 POWER STEERING SOLENOID VALVE....[STC-20](#)
 POWER SUPPLY AND GROUND CIRCUIT (VVEL
 CONTROL MODULE).....[EC-205](#), [EC-719](#)
 POWER SUPPLY ROUTING CIRCUIT[PG-12](#)
 POWER TRANSISTOR [HAC-134](#)
 POWER WINDOW LOCK SWITCH DOES NOT
 FUNCTION[PWC-72](#)
 POWER WINDOW MAIN SWITCH [ADP-92](#), [PWC-15](#)
 POWER WINDOW MOTOR[PWC-40](#)
 POWER WINDOW RETAINED POWER
 OPERATION DOES NOT OPERATE
 PROPERLY[PWC-69](#)
 POWER WINDOW SERIAL LINK[PWC-55](#)
 POWER WINDOW SWITCH DOES NOT
 ILLUMINATE[PWC-73](#)
 POWER WINDOW SYSTEM[PWC-21](#)
 PRE-CRASH SEAT BELT CONTROL UNIT [SBC-20](#),
[SBC-65](#)
 PRE-CRASH SEAT BELT CONTROL UNIT
 (DRIVER SIDE).....[SBC-14](#)
 PRE-CRASH SEAT BELT CONTROL UNIT
 (PASSENGER SIDE)[SBC-17](#)
 PRE-CRASH SEAT BELT DOSE NOT OPERATE .
[SBC-61](#)
 PRE-INSPECTION FOR DIAGNOSIS[DAS-294](#)

PRECAUTIONS [ACC-2](#), [ADP-5](#), [AV-10](#), [AV-147](#),
[AV-438](#), [BCS-3](#), [BR-3](#), [BRC-5](#), [BRC-171](#), [CCS-4](#),
[CHG-3](#), [CO-3](#), [CO-32](#), [DAS-10](#), [DAS-164](#),
[DEF-3](#), [DLK-7](#), [DLN-6](#), [DLN-89](#), [DLN-100](#),
[DLN-109](#), [DLN-118](#), [DLN-164](#), [DLN-202](#), [EC-30](#),
[EC-562](#), [EC-980](#), [EC-1572](#), [EM-5](#), [EM-167](#),
[EX-2](#), [EXL-5](#), [EXT-3](#), [FAX-3](#), [FAX-11](#), [FL-2](#),
[FSU-3](#), [FSU-23](#), [GI-23](#), [GW-2](#), [HA-3](#), [HAC-4](#),
[HRN-2](#), [INL-5](#), [INL-88](#), [INT-3](#), [IP-2](#), [LAN-17](#),
[LAN-33](#), [LAN-153](#), [LU-3](#), [LU-27](#), [MIR-3](#), [MWI-4](#),
[PB-2](#), [PCS-3](#), [PCS-36](#), [PG-3](#), [PWC-4](#), [PWO-2](#),
[RAX-2](#), [RF-3](#), [RSU-2](#), [SB-2](#), [SBC-3](#), [SE-4](#),
[SEC-4](#), [SR-2](#), [SRC-5](#), [ST-3](#), [STC-2](#), [STR-2](#),
[TM-6](#), [VTL-3](#), [WCS-3](#), [WT-3](#), [WW-3](#)
 PREDICTIVE COURSE LINE CENTER POSITION
 ADJUSTMENT [AV-282](#)
 PRESET SWITCH.....[AV-138](#), [AV-423](#)
 PROCEDURE FOR TEMPORARILY DISABLING
 THE IGNITION BATTERY SAVER SYSTEM
[PCS-60](#)
 PSB BRANCH LINE CIRCUIT .[LAN-138](#), [LAN-319](#),
[LAN-412](#), [LAN-467](#), [LAN-599](#), [LAN-700](#)
 PUSH-BUTTON IGNITION SWITCH [PCS-76](#),
[PCS-83](#), [SEC-126](#)
 PUSH-BUTTON IGNITION SWITCH DOES NOT
 OPERATE [PCS-81](#)
 PUSH-BUTTON IGNITION SWITCH
 ILLUMINATION CIRCUIT [INL-70](#), [INL-154](#)
 PUSH-BUTTON IGNITION SWITCH POSITION
 INDICATOR..... [PCS-79](#)
 PUSH-BUTTON IGNITION SWITCH POSITION
 INDICATOR DOES NOT ILLUMINATE [PCS-82](#)

R

RADIATOR[CO-14](#), [CO-16](#), [CO-43](#), [CO-45](#)
 RADIATOR CORE SUPPORT [DLK-183](#)
 RAIN SENSOR..... [WW-41](#), [WW-61](#)
 RDR-L BRANCH LINE CIRCUIT [LAN-139](#), [LAN-320](#),
[LAN-413](#), [LAN-468](#), [LAN-600](#), [LAN-701](#)
 RDR-R BRANCH LINE CIRCUIT [LAN-141](#), [LAN-322](#),
[LAN-415](#), [LAN-470](#), [LAN-602](#), [LAN-703](#)
 REAR BUMPER [EXT-19](#)
 REAR CAMERA [AV-432](#)
 REAR CAMERA COMMUNICATION SIGNAL
 CIRCUIT [AV-385](#)
 REAR COIL SPRING AND SHOCK ABSORBER...
[RSU-8](#)
 REAR COMBINATION LAMP [EXL-151](#)
 REAR DIFFERENTIAL GEAR OIL[DLN-172](#),
[DLN-210](#)
 REAR DISC BRAKE..... [BR-8](#), [BR-19](#), [BR-55](#)
 REAR DOOR.....[DLK-193](#)
 REAR DOOR ASHTRAY ILLUMINATION .. [INL-161](#)
 REAR DOOR AUTO CLOSURE CONTROL UNIT .
[DLK-237](#)

REAR DOOR AUTO CLOSURE SYSTEM DOES NOT OPERATEDLK-171
 REAR DOOR CLOSURE CONTROL UNIT DLK-45
 REAR DOOR CLOSURE MOTORDLK-125
 REAR DOOR FINISHERINT-33
 REAR DOOR GLASS GW-21
 REAR DOOR LOCKDLK-214
 REAR DOOR SPEAKERAV-129, AV-411
 REAR DRIVE SHAFTRAX-7, RAX-12
 REAR FINAL DRIVE ASSEMBLY DLN-178, DLN-216
 REAR HEATED SEAT CONTROL UNITSE-25
 REAR HEATED SEAT SWITCHSE-137
 REAR HEATED SEAT SYSTEMSE-57
 REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE PWC-64
 REAR LOWER LINKRSU-16
 REAR MICROPHONE (ACTIVE NOISE CONTROL SYSTEM) AV-132, AV-418
 REAR OIL SEALDLN-63, TM-202
 REAR PARCEL SHELF FINISHERINT-49
 REAR POWER WINDOW SWITCH PWC-19, PWC-75
 REAR PROPELLER SHAFT ... DLN-103, DLN-104, DLN-112, DLN-113
 REAR REGULATOR GW-23
 REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE PWC-65
 REAR SEATSE-134
 REAR SEAT BELTSB-13
 REAR SEAT CUSHION HEATERSE-97
 REAR SPOT LAMPINL-167
 REAR STABILIZERRSU-20
 REAR SUNSHADE ASSEMBLYINT-66
 REAR SUNSHADE CONTROL UNITINT-10
 REAR SUNSHADE DOES NOT OPEN WHEN SELECTOR LEVER IS SHIFTED TO THE
 REAR SUNSHADE DOES NOT OPERATE .INT-22
 REAR SUNSHADE SWITCHINT-19, INT-67
 REAR SUNSHADE SYSTEM INT-11
 REAR SUSPENSION ASSEMBLY RSU-5, RSU-21
 REAR TIMING CHAIN CASE EM-98
 REAR VIEW CAMERA AV-143
 REAR WHEEL HUB AND HOUSING RAX-6, RAX-8
 REAR WINDOW DEFOGGER DEF-24
 REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGERS DO NOT OPERATE ... DEF-31
 REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE DEF-32
 REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE DEF-35
 REAR WINDOW DEFOGGER RELAY DEF-22
 REAR WINDOW DEFOGGER SWITCH DEF-21
 REAR WINDOW DEFOGGER SYSTEMDEF-11

REAR WINDOW GLASS GW-15
 REAR WOOFERAV-414
 RECLINING MOTOR ADP-119
 RECLINING SENSORADP-100
 RECLINING SWITCHADP-80
 RECOMMENDED CHEMICAL PRODUCTS AND SEALANTSGI-22
 RECOMMENDED FLUIDS AND LUBRICANTS MA-16
 REFRIGERANT HA-19
 REFRIGERANT PRESSURE SENSOR EC-546, EC-965, EC-1555, EC-2016
 REFRIGERATION SYSTEM SYMPTOMS ... HA-28
 REMOTE KEYLESS ENTRY RECEIVER DLK-113, DLK-235
 REPAIRING HIGH STRENGTH STEEL BRM-4, BRM-93
 REPAIRING MATERIAL BRM-7, BRM-96
 REPLACEMENT OPERATIONS BRM-26, BRM-115
 RETAINED POWER OPERATION DOES NOT OPERATE PROPERLYRF-26
 RETRACT MOTOR OPERATION SIGNAL CIRCUIT AV-388
 REVERSE INTERLOCK DOOR MIRROR DOES NOT OPERATEMIR-33
 REVERSE SIGNAL CIRCUITINT-21
 REVERSE SWITCH DLK-136
 RGB (B: BLUE) SIGNAL CIRCUITAV-101
 RGB (G: GREEN) SIGNAL CIRCUITAV-100
 RGB (R: RED) SIGNAL CIRCUITAV-99
 RGB AREA (YS) SIGNAL CIRCUITAV-103
 RGB DIGITAL IMAGE SIGNAL CIRCUIT ...AV-378
 RGB SYNCHRONIZING SIGNAL CIRCUIT AV-102
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT DAS-349
 ROAD WHEEL WT-62
 ROAD WHEEL TIRE ASSEMBLY WT-64
 ROOF SIDE MOLDING EXT-33

S

S CONNECTOR CIRCUIT STR-19
 S TERMINAL CIRCUIT CHG-29
 SATELLITE RADIO ANTENNA AV-136, AV-421
 SATELLITE RADIO TUNER AV-50, AV-135
 SATELLITE SENSOR SR-23
 SATELLITE SPEAKERAV-412
 SEAT BELT BUCKLE SWITCH (DRIVER SIDE) SBC-54
 SEAT BELT BUCKLE SWITCH (PASSENGER SIDE) SBC-56
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .. WCS-45
 SEAT BELT PRE-TENSIONER SR-27
 SEAT BELT WARNING LAMP CIRCUIT SBC-58
 SEAT BELT WARNING LAMP DOES NOT TURN OFF SBC-62

SEAT BELT WARNING LAMP DOES NOT TURN ON.....	SBC-63	
SEAT BELT WARNING SYSTEM	SBC-28	
SEAT CUSHION THERMAL ELECTRIC UNIT.....	SE-78	
SEAT CUSHION THERMAL ELECTRIC UNIT SENSOR	SE-80	
SEAT MEMORY INDICATOR	ADP-132	
SEAT MEMORY SWITCH.....	ADP-90, ADP-151	
SEAT SPEAKER	AV-415	
SEAT SWITCH INDICATOR IS NOT ILLUMINATED IN HEAT OR COOL POSITION	SE-105	
SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE	ADP-144	
SEATBACK HEATER	SE-94	
SEATBACK THERMAL ELECTRIC UNIT	SE-74	
SEATBACK THERMAL ELECTRIC UNIT SENSOR	SE-76	
SECURITY CONTROL SYSTEM.....	SEC-31	
SECURITY INDICATOR LAMP	SEC-112	
SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK.....	SEC-119	
SELECTIVE UNLOCK FUNCTION DOES NOT OPERATE	DLK-153	
SENSOR INITIALIZE	EXL-78	
SENSOR ROTOR	BRC-165	
SERVICE DATA AND SPECIFICATIONS (SDS)	BR-68, CHG-37, CO-31, CO-56, DLN-88, DLN-99, DLN-108, DLN-117, DLN-163, DLN-201, DLN-236, EC-561, EC-979, EC-1571, EC-2031, EM-155, EM-309, EXL-157, FAX-10, FAX-35, FL-22, FSU-21, FSU-41, HA-48, INL-87, INL-172, LU-26, LU-41, MA-55, PB-12, PG-166, RAX-20, RSU-23, ST-79, STR-28, TM-323, VTL-20, WT-70	
SERVICE INFORMATION FOR ELECTRICAL INCIDENT	GI-41	
SHIFT LOCK SYSTEM	TM-162	
SHIFT POSITION INDICATOR CIRCUIT.....	TM-161	
SIDE CAMERA	AV-431	
SIDE CAMERA LH COMMUNICATION SIGNAL CIRCUIT	AV-386	
SIDE CAMERA RH COMMUNICATION SIGNAL CIRCUIT	AV-387	
SIDE OIL SEAL.....	DLN-127, DLN-177, DLN-215	
SIDE RADAR	DAS-393	
SIDE RADAR LH.....	DAS-259	
SIDE RADAR RH	DAS-262	
SIDE SHAFT	DLN-134	
SIDE TURN SIGNAL LAMP	EXL-143	
SIDE WINDOW GLASS	GW-13	
SILL COVER	EXT-28	
SLIDING MOTOR	ADP-117	
SLIDING SENSOR.....	ADP-98	
SLIDING SWITCH.....	ADP-78	
SONAR BRANCH LINE CIRCUIT	LAN-135, LAN-231, LAN-271, LAN-316, LAN-366, LAN-409, LAN-464, LAN-548, LAN-596, LAN-649, LAN-697	A
SONAR CONTROL UNIT	AV-233, AV-433	B
SONAR SENSOR	AV-434	
SPARK PLUG	EM-25, EM-187	
SPIRAL CABLE	SR-14	C
SQUEAK AND RATTLE TROUBLE DIAGNOSES..	DLK-172, EXT-7, GW-5, INT-24, IP-6, MIR-34, RF-27, SE-112	
SRS AIR BAG SYSTEM.....	SRC-22	D
SRS AIR BAG WARNING LAMP BLINKS	SRC-173	
SRS AIR BAG WARNING LAMP DOES NOT TURN OFF	SRC-171	E
SRS AIR BAG WARNING LAMP DOES NOT TURN ON	SRC-172	
STALL TEST	TM-103	F
STARTER MOTOR.....	STR-21	
STARTING SYSTEM.....	STR-8, STR-20	
STEERING ANGLE SENSOR.....	AV-145, AV-436, BRC-169, EXL-149	G
STEERING COLUMN	ST-35	
STEERING GEAR AND LINKAGE.....	ST-40	H
STEERING SWITCH	AV-139, AV-424	
STEERING SWITCH GROUND CIRCUIT	AV-117, AV-393	
STEERING SWITCH SIGNAL A CIRCUIT.....	AV-113, AV-389	
STEERING SWITCH SIGNAL B CIRCUIT.....	AV-115, AV-391	J
STEERING WHEEL	ST-14, ST-32, ST-33	
STEP LAMP	INL-81, INL-166	
STEP LAMP CIRCUIT.....	INL-67, INL-151	K
STRG BRANCH LINE CIRCUIT.....	LAN-127, LAN-193, LAN-225, LAN-265, LAN-309, LAN-360, LAN-402, LAN-457, LAN-504, LAN-541, LAN-588, LAN-642, LAN-689	L
STRUCTURE AND OPERATION.....	DLN-14, DLN-124, DLN-169, DLN-207, EC-54, EC-585, EC-1005, EC-1596, TM-17	M
SUNLOAD SENSOR.....	HAC-129	
SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION.....	RF-25	N
SUNROOF DOES NOT OPERATE PROPERLY	RF-22	
SUNROOF MOTOR ASSEMBLY	RF-10, RF-35	O
SUNROOF SWITCH	RF-20, RF-43	
SUNROOF SYSTEM.....	RF-9	
SUNROOF UNIT ASSEMBLY	RF-37	P
SUNSHADE	RF-40	
SUSPENSION ARM.....	RSU-11	
SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF	DAS-363	
SYSTEM (INTELLIGENT KEY SYSTEM)...	DLK-16	

SYSTEM (REAR DOOR AUTO CLOSURE SYSTEM)DLK-34
 SYSTEM (TRUNK LID AUTO CLOSURE SYSTEM) DLK-33
 SYSTEM INITIALIZATION..... PWC-34
 SYSTEM NOT ACTIVATED..... DAS-371
 SYSTEM SETTING HAC-56
 SYSTEM SETTINGS CANNOT BE TURNED ON/OFF ON THE NAVIGATION SCREENBRC-196, DAS-366
 SYSTEM SYMPTOM..... TM-172

T

TAIL LAMP CIRCUITEXL-106
 TAKE AWAY WARNING DOES NOT OPERATE DLK-166
 TCM..... TM-68
 TCM BRANCH LINE CIRCUIT LAN-125, LAN-191, LAN-223, LAN-263, LAN-307, LAN-358, LAN-400, LAN-455, LAN-502, LAN-539, LAN-586, LAN-640, LAN-687
 TCU AV-452, AV-520
 TCU BRANCH LINE CIRCUIT .LAN-119, LAN-257, LAN-301, LAN-352, LAN-449, LAN-533, LAN-580, LAN-634, LAN-681
 TEL ADAPTER UNIT..... AV-52, AV-142
 TELEMATICS ANTENNA AV-521
 TELEMATICS SWITCH AV-523
 TELEMATICS SYSTEM..... AV-515
 TELESCOPIC MOTOR..... ADP-127
 TELESCOPIC SENSOR..... ADP-110
 TELESCOPIC SWITCH..... ADP-88
 TEMPERATURE ADJUSTMENT IS IMPOSSIBLE . SE-102
 THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT MWI-93
 THE BRAKING DISTANCE IS LONG..... BRC-157
 THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAYMWI-91
 THE FUEL GAUGE INDICATOR DOES NOT OPERATE..... MWI-84
 THE LIGHT REMINDER WARNING DOES NOT SOUND WCS-48
 THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY..... MWI-90
 THE METER CONTROL SWITCH IS INOPERATIVE MWI-85
 THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF MWI-87
 THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON MWI-86
 THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY..... MWI-89

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND..... WCS-49
 THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND WCS-50
 THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALL CCS-128, DAS-379
 THE SYSTEM OPERATES EVEN WHEN USING TURN SIGNAL DAS-383
 THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAYMWI-92
 THROTTLE VALVE CLOSED POSITION LEARNINGEC-170, EC-691, EC-1143, EC-1725
 TIGHTENING TORQUE OF STANDARD BOLTS ... GI-19
 TILT &TELESCOPIC SWITCH GROUND CIRCUIT ADP-97
 TILT MOTOR ADP-125
 TILT SENSOR ADP-108
 TILT SWITCH ADP-86
 TILT&TELESCOPIC SWITCH ADP-153
 TIMING CHAIN EM-57, EM-239
 TIRE PRESSURE MONITORING SYSTEM.WT-18
 TIRE PRESSURE RECEIVER WT-69
 TIRE PRESSURE SENSOR..... WT-67
 TIRE PRESSURE SENSOR WAKE UP OPERATION..... WT-30
 TOE CONTROL LINK..... RSU-18
 TOW TRUCK TOWING GI-31
 TPMS BRANCH LINE CIRCUITLAN-120, LAN-186, LAN-218, LAN-258, LAN-302, LAN-353, LAN-395, LAN-450, LAN-497, LAN-534, LAN-581, LAN-635, LAN-682
 TPMS SYMPTOMS WT-54
 TRANSFER ASSEMBLY DLN-66
 TRANSFER FLUID DLN-60
 TRANSIT MODE CANCEL OPERATION ... BCS-82
 TRANSMISSION ASSEMBLY TM-224, TM-236
 TRANSVERSE LINK FSU-14, FSU-34
 TROUBLE DIAGNOSIS..... LAN-21
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE EC-194, EC-708, EC-1164, EC-1739
 TRUNK CLOSURE ASSEMBLYDLK-110
 TRUNK CLOSURE CONTROL UNIT DLK-44
 TRUNK KEY CYLINDER SWITCH..... SEC-114
 TRUNK LID..... DLK-198
 TRUNK LID AUTO CLOSURE SYSTEM DOES NOT OPERATE..... DLK-150
 TRUNK LID DOES NOT OPEN DLK-147
 TRUNK LID FINISHER..... EXT-46
 TRUNK LID LOCK DLK-221
 TRUNK LID OPEN CLOSE SIGNAL SEC-116
 TRUNK LID OPEN SIGNAL CIRCUIT..... DLK-101
 TRUNK LID OPENER CANCEL SWITCHDLK-108, DLK-234
 TRUNK LID OPENER REQUEST SWITCHDLK-104

TRUNK LID OPENER SWITCH [DLK-106](#), [DLK-233](#)
 TRUNK LID TRIM [INT-64](#)
 TRUNK OPENER REQUEST SWITCH [DLK-232](#)
 TRUNK ROOM LAMP [INL-85](#), [INL-170](#)
 TRUNK ROOM LAMP CIRCUIT [INL-66](#), [INL-150](#)
 TRUNK ROOM TRIM [INT-61](#)
 TURN SIGNAL LAMP CIRCUIT [EXL-117](#)
 TWEETER [AV-410](#)

U

U0100 LOST COMMUNICATION (ECM A). [TM-106](#)
 U0101 CAN COMM CIRCUIT [EC-207](#), [EC-721](#),
[EC-1174](#), [EC-1749](#)
 U0104 ADAS CAN 1 [CCS-108](#), [DAS-329](#)
 U0113, U1003 CAN COMM CIRCUIT [EC-1175](#),
[EC-1750](#)
 U0121 VDC CAN 2 [CCS-109](#), [DAS-122](#)
 U0126 ST ANG SEN SIG [SBC-38](#)
 U0126 STEERING ANGLE SENSOR SIGNAL
[EXL-91](#)
 U0126 STRG SEN CAN 1 [CCS-110](#), [DAS-123](#),
[DAS-332](#)
 U0235 ICC SENSOR CAN 1 [DAS-124](#)
 U0300 CAN COMMUNICATION DATA [TM-107](#)
 U0401 ECM CAN 1 [DAS-125](#)
 U0402 TCM CAN 1 [DAS-126](#)
 U0405 ADAS CAN 2 [CCS-111](#), [DAS-333](#)
 U0415 VDC CAN 1 [CCS-112](#), [DAS-127](#)
 U0415 VEHICLE SPEED [BCS-85](#)
 U0424 HVAC CAN CIRCUIT 1. [BRC-143](#), [DAS-128](#)
 U0428 STEERING ANGLE SENSOR [AV-289](#)
 U0428 STEERING ANGLE SENSOR
 CALIBRATION [EXL-92](#)
 U0428 STRG ANGL CAL [SBC-39](#)
 U0428 STRG SEN CAN 2 [CCS-113](#), [DAS-129](#),
[DAS-335](#)
 U1000 CAN COMM [BCS-83](#)
 U1000 CAN COMM CIRCUIT [ADP-64](#), [AV-83](#),
[AV-290](#), [AV-496](#), [BRC-142](#), [CCS-114](#), [DAS-130](#),
[DAS-336](#), [DLN-47](#), [EXL-93](#), [HAC-58](#), [LAN-164](#),
[MWI-70](#), [PCS-28](#), [SBC-37](#), [SRC-36](#), [TM-108](#),
[WT-50](#)
 U1001 CAN COMM CIRCUIT [EC-208](#), [EC-722](#),
[EC-1177](#), [EC-1752](#)
 U1003 CAN COMM CIRCUIT [EC-209](#), [EC-723](#)
 U1010 CONTROL UNIT (CAN) [ADP-65](#), [AV-84](#),
[AV-292](#), [AV-497](#), [BCS-84](#), [CCS-115](#), [DAS-132](#),
[DAS-341](#), [DLN-48](#), [EXL-94](#), [HAC-59](#), [LAN-165](#),
[MWI-71](#), [SRC-37](#), [WT-51](#)
 U1024 CAN COMM CIRCUIT [EC-211](#), [EC-725](#),
[EC-1178](#), [EC-1753](#)
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT
[AV-293](#)
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUIT [AV-295](#)

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
[AV-297](#)
 U111D SIDE CAMERA LH IMAGE SIGNAL
 CIRCUIT [AV-299](#)
 U1200 AV CONTROL UNIT [AV-85](#), [AV-301](#)
 U1201 AV CONTROL UNIT [AV-302](#)
 U1202 AV CONTROL UNIT [AV-303](#)
 U1204 AV CONTROL UNIT [AV-304](#)
 U1205 AV CONTROL UNIT [AV-305](#)
 U1206 AV CONTROL UNIT [AV-306](#)
 U1207 AV CONTROL UNIT [AV-307](#)
 U1216 AV CONTROL UNIT [AV-86](#), [AV-308](#)
 U1217 AV CONTROL UNIT [AV-309](#)
 U1218 AV CONTROL UNIT [AV-310](#)
 U1219 AV CONTROL UNIT [AV-311](#)
 U121A AV CONTROL UNIT [AV-312](#)
 U121B AV CONTROL UNIT [AV-313](#)
 U121C AV CONTROL UNIT [AV-314](#)
 U121D AV CONTROL UNIT [AV-315](#)
 U121E AV CONTROL UNIT [AV-316](#)
 U1225 AV CONTROL UNIT [AV-317](#)
 U1227 AV CONTROL UNIT [AV-318](#)
 U1228 AV CONTROL UNIT [AV-319](#)
 U1229 AV CONTROL UNIT [AV-320](#)
 U122A AV CONTROL UNIT [AV-321](#)
 U122E AV CONTROL UNIT [AV-322](#)
 U1231 BOSE AMP. [AV-323](#)
 U1232 STEERING ANGLE SENSOR [AV-87](#), [AV-324](#)
 U1243 DISPLAY UNIT [AV-88](#), [AV-325](#)
 U1244 GPS ANTENNA [AV-327](#)
 U1255 SATELLITE RADIO TUNER [AV-90](#)
 U1258 SATELLITE RADIO ANTENNA [AV-328](#)
 U1263 USB [AV-329](#)
 U1264 ANTENNA AMP. [AV-330](#)
 U1300 AV COMM CIRCUIT [AV-92](#), [AV-331](#)
 U1302 CAMERA POWER VOLT [AV-332](#)
 U1303 LED POWER SUPPLY VOLT [AV-336](#)
 U1304 CAMERA IMAGE CALIBRATION [AV-337](#)
 U1305 CONFIG UNFINISH [AV-338](#)
 U1310 AV CONTROL UNIT [AV-93](#), [AV-339](#)
 U1500 CAM CAN 2 [DAS-139](#)
 U1501 CAM CAN 1 [DAS-140](#)
 U1502 ICC SENSOR CAN COMM CIRC. [DAS-141](#)
 U1503 SIDE RDR L CAN 2 [DAS-142](#)
 U1504 SIDE RDR L CAN 1 [DAS-143](#)
 U1505 SIDE RDR R CAN 2 [DAS-144](#)
 U1506 SIDE RDR R CAN 1 [DAS-145](#)
 U1507 LOST COMM(SIDE RDR R) [DAS-146](#)
 U1508 LOST COMM(SIDE RDR L) [DAS-147](#)
 U150B ECM CAN 3 [DAS-133](#)
 U150C VDC CAN 3 [DAS-135](#)
 U150D TCM CAN 3 [DAS-136](#)
 U150E BCM CAN 3 [DAS-137](#)
 U150F AV CAN 3 [DAS-138](#)
 U1512 HVAC CAN 3 [DAS-148](#)
 U1513 METER CAN 3 [DAS-149](#)

U1514 STRG SEN CAN 3	DAS-150
U1515 ICC SENSOR CAN 3	DAS-151
U1516 CAM CAN 3	DAS-152
U1517 ACCELERATOR PEDAL ACTUATOR CAN 3 DAS-153	
U1518 SIDE RDR L CAN 3	DAS-154
U1519 SIDE RDR R CAN 3	DAS-155
U1521 SONAR CAN 2	DAS-156
U1522 SONAR CAN 1	DAS-157
U1523 SONAR CAN 3	DAS-158
U1524 AVM CAN 1	DAS-159
U1525 AVM CAN 3	DAS-160
U1530 DR ASSIST BUZZER CAN 1	DAS-161
U1601, U1609 FRONT DOOR WOOFER ...	AV-340
U1602, U160A FRONT DOOR SQUAWKER/ TWEETER	AV-341
U162A CENTER SPEAKER	AV-342
U1632, U163A, U163E SEAT SPEAKER ...	AV-343
U1708, U1710 REAR DOOR SPEAKER	AV-344
U1725 REAR WOOFER	AV-345
U190C FRONT/REAR MICROPHONE	AV-346
U1A00 TCU	AV-498
U1A01 TCU	AV-499
U1A02 TCU	AV-500
U1A03 TCU	AV-501
U1A04 TCU	AV-502
U1A05 TCU	AV-503
U1A07 TEL ANTENNA	AV-504
U1A08 TEL ANTENNA	AV-505
U1A0B MICROPHONE	AV-506
U1A0C MICROPHONE	AV-508
U1A0E TELEMATICS SWITCH	AV-509
U1A0F TELEMATICS SWITCH	AV-510
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-27
UNDER DRIVE CARRIER, FRONT BRAKE HUB .. TM-305	
UNEXPECTED BRAKE PEDAL REACTION	
BRC-156	
UNLOCK SENSOR	DLK-117
UPPER LINK	FSU-16, FSU-36
USB CONNECTOR	AV-140, AV-425

V

VACUUM LINES	BR-41
VANITY MIRROR LAMP	INL-75, INL-159
VDC OFF INDICATOR LAMP	BRC-154
VDC OFF SWITCH	BRC-149, BRC-170
VDC WARNING LAMP	BRC-153
VEHICLE DOES NOT ENTER AWD MODE	DLN-56
VEHICLE JERKS DURING	BRC-160
VEHICLE SECURITY ALARM DOES NOT ACTIVATE	SEC-123
VEHICLE SECURITY SYSTEM CANNOT BE SET SEC-120	

VEHICLE SPEED SENSING AUTO LOCK OPERATION DOES NOT OPERATE .	DLK-154
VEHICLE SPEED SIGNAL CIRCUIT	RF-19, STC-25
VENTILATION SYSTEM	VTL-6
VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT	AV-108
VIN REGISTRATION ...	EC-168, EC-689, EC-1141, EC-1723
VVEL CONTROL MODULE	EC-130, EC-560, EC-652, EC-978, EC-1094, EC-1569, EC-1677, EC-2029
VVEL CONTROL SHAFT POSITION SENSOR ADJUSTMENT	EC-173, EC-694, EC-1146, EC-1728

W

WARNING CHIME SYSTEM	WCS-34
WARNING SYSTEMS ON INDICATOR CIRCUIT ... DAS-354	
WARNING SYSTEMS SWITCH	DAS-398
WARNING SYSTEMS SWITCH CIRCUIT	DAS-352
WASHER LEVEL SWITCH	WW-51
WASHER LEVEL SWITCH SIGNAL CIRCUIT	
MWI-83	
WASHER PUMP	WW-50
WASHER SWITCH	WW-43
WASHER TANK	WW-49
WATER INLET AND THERMOSTAT ASSEMBLY ... CO-26, CO-53	
WATER OUTLET AND WATER PIPING	CO-28
WATER PUMP	CO-23, CO-51
WELCOME LIGHT FUNCTION DOES NOT OPERATE	DLK-161
WHEEL ALIGNMENT	FSU-8, FSU-28, RSU-6
WHEEL SENSOR	BRC-162
WIND DEFLECTOR	RF-42
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-32
WIPER AND WASHER SWITCH	WW-62
WIPER AND WASHER SYSTEM	WW-21
WIPER AND WASHER SYSTEM SYMPTOMS	
WW-44	
WIPER REVERSE RELAY CIRCUIT	WW-39

Y

YAW RATE/SIDE/DECEL G SENSOR	BRC-168
------------------------------------	---------