

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C HFC134a (R134a) system service procedureHA-112
A/C HFC134a system service equipment precautionHA-9
A/C air flowHA-13
A/C component layoutHA-12
A/C compressor precautionHA-6
A/C compressor special service toolHA-6, 7
A/C control linkage adjustment (auto A/C)HA-77
A/C control operation (manual A/C)HA-16
A/C harness layout (manual A/C)HA-17
A/C lubricant (R134a)HA-114
A/C relayHA-97
A/C self-diagnoses (auto A/C)HA-63
A/C CUT - Wiring diagramEC-186
A/T controlEC-174
ABS sensor rotorFA-15
ACC/SW - Wiring diagramEC-105
ACL/SW - Wiring diagramEC-164
ADJRES - Wiring diagramEC-91
APS - Wiring diagramEC-138
AT/C - Wiring diagramEC-174
AUDIO - Wiring diagramEL-168
Accelerator position sensorEC-138
Accelerator position switchEC-164
Accelerator switch (F/C)EC-105
Adjustment resistorEC-91
Air bag disposalRS-17
Air bagRS-8
Air bleeding (hydraulic clutch)CL-6
Air bleeding for brake systemBR-4
Air cleaner filter replacementMA-18
Air conditioner cut controlEC-19
Air flow meter - See Mass air flow sensorEC-73
Air mix door control linkage adjustmentHA-81
AlternatorEL-56
Antenna - See Power antennaEL-181
Audio and A/C control removal and installation - See Instrument panelBT-11
AudioEL-168
Auto lock free running hubFA-13
Automatic amplifierHA-61
Axle housing (rear)RA-9

B

BACK/L - Wiring diagramEL-78
Back door opener - See Back doorBT-6
Back door trimBT-24
Back door windowBT-45
Back doorBT-6

Back-up lamp switch (M/T)MT-4
Back-up lampEL-78
BatteryEL-37
Baulk ring (M/T)MT-10
Body alignmentBT-49
Body mountingBT-48
Brake boosterBR-15
Brake fluid changeBR-3
Brake fluid level and line checkBR-3
Brake fluid levelMA-23
Brake hydraulic lineBR-5
Brake inspectionMA-24
Brake master cylinderBR-12
Brake pedalBR-10
Bulb specificationsEL-314
Bumper, frontBT-4
Bumper, rearBT-6

C

CD/CHG - Wiring diagramEL-176
CHIME - Wiring diagramEL-136
CIGAR - Wiring diagramEL-156
CKPS - Wiring diagramEC-143
CLOCK - Wiring diagramEL-157
CMPS - Wiring diagramEC-68
COMPAS - Wiring diagramEL-117
CONSULT for ECCSEC-36
CONSULT general informationGI-33
COOL/F - Wiring diagramEC-112
CSPS - Wiring diagramEC-86
Cab bodyBT-47
Camshaft inspectionEM-36
Camshaft position sensor (PUMP)EC-68
Center case (Transfer)TF-10
Charge air cooler fan controlEC-177
Charge air temperature sensorEC-121
Chassis and body maintenanceMA-20
Cigarette lighterEL-156
Circuit breakerEL-14
ClockEL-157
Clutch boosterCL-9
Clutch coverCL-14
Clutch damperCL-7
Clutch discCL-13
Clutch fluid levelMA-20
Clutch master cylinderCL-7
Clutch operating cylinderCL-8
Clutch pedalCL-5
Clutch release bearingCL-11
Clutch release mechanismCL-11
Clutch withdrawal leverCL-11
Coil spring (front)FA-25
Coil spring (rear)RA-14
Collision diagnosisRS-45
Combination meter removal and installation - See Instrument panelBT-11

ALPHABETICAL INDEX

Combination meter.....EL-102
 Combination switch.....EL-57
 Combustion chamber replacement.....EM-32
 Compass.....EL-116
 Compression pressure.....EM-10
 Compressor special service tool.....HA-6
 Connecting rod.....EM-47
 Connecting rod.....EM-51
 Connector inspection.....GI-17
 Console box - See Instrument panel.....BT-11
 Control lever (Transfer).....TF-9
 Control sleeve position sensor.....EC-86
 Coolant mixture ratio.....MA-11
 Coolant replacement.....MA-14
 Cooling circuit (engine).....LC-9
 Cooling fan control.....EC-112
 Cooling fan motor.....EC-120
 Cooling fan relay.....EC-120
 Cooling fan.....LC-15
 Counter gear (M/T).....MT-10
 Counter gear (Transfer).....TF-11
 Coupling sleeve (M/T).....MT-10
 Crankcase emission control system -
 See Positive crankcase ventilation.....EC-21
 Crankcase ventilation system - See
 Positive crankcase ventilation.....EC-21
 Crankshaft position sensor (TDC).....EC-143
 Crankshaft.....EM-50
 Cylinder block.....EM-45, 48
 Cylinder head.....EM-28

D

D/LOCK - Wiring diagram.....EL-205
 DEF - Wiring diagram.....EL-159
 DEICER - Wiring diagram.....EL-167
 DTRL - Wiring diagram.....EL-67
 Data link connector for Consult.....EC-36
 Daytime light system.....EL-65
 Diagnosis sensor unit.....RS-12
 Diagnostic trouble code (DTC) for
 ECCS OBD system.....EC-30
 Differential carrier assembly.....PD-31
 Differential carrier disassembly.....PD-14
 Differential gear oil replacement.....MA-22
 Dimensions.....GI-38
 Dome light - See Interior lamp.....EL-93
 Door glass.....BT-9
 Door lock.....BT-9
 Door mirror.....BT-46
 Door trim.....BT-18
 Door, front.....BT-9
 Door, rear.....BT-10
 Drive belt inspection.....MA-12
 Drive chain (Transfer).....TF-11
 Drive pinion diff. inspection.....PD-19
 Drive pinion height.....PD-27
 Drive shaft (front).....FA-23
 Dual pressure switch.....HA-11

Dual pressure switch.....HA-97

E

ECCS basic inspection.....EC-46
 ECCS circuit diagram.....EC-11
 ECCS component parts location.....EC-8
 ECCS on board diagnostic system.....EC-30
 ECCS symptom matrix chart.....EC-48
 ECCS system diagram and chart.....EC-12
 ECCS-D control module.....EC-54, 110
 ECM input/output signal.....EC-54
 ECTS - Wiring diagram.....EC-78
 EGR control (EGRC) - solenoid valve.....EC-155
 EGR control valve.....EC-161
 EGRC/V - Wiring diagram.....EC-155
 Electric governor.....EC-95, 148
 Electric sunroof.....EL-186
 Electrical diagnoses.....GI-20
 Electrical unit.....EL-321
 Electrical units location.....EL-269
 Electronic fuel injection pump.....EC-27
 Engine compartment.....BT-49
 Engine coolant temperature sensor
 (ECTS).....EC-78
 Engine oil filter replacement.....MA-14
 Engine oil precautions.....GI-4
 Engine oil replacement.....MA-13
 Engine outer component parts.....EM-8
 Engine removal.....EM-43
 Engine room - See Engine
 compartment.....BT-49
 Engine serial number.....GI-37
 Exhaust system inspection.....MA-20
 Exhaust system.....FE-3
 Exterior.....BT-26

F

FCUT - Wiring diagram.....EC-129
 FTS - Wiring diagram.....EC-134
 Fan control amp.....HA-88
 Final drive disassembly.....PD-14
 Final drive removal and installation.....PD-11
 Finisher, interior - See Trim.....BT-14
 Floor trim.....BT-14
 Flow charts.....GI-30
 Fluids.....MA-9
 Flywheel (clutch).....CL-13, 14
 Flywheel runout.....EM-52
 Fog lamp, rear.....EL-80
 Fork rod (M/T).....MT-12
 Front axle.....FA-10
 Front bumper.....BT-4
 Front case (Transfer).....TF-10
 Front disc brake.....BR-20
 Front door.....BT-9

ALPHABETICAL INDEX

Front drive shaft (Transfer)TF-11
Front final drive disassembly (4WD).....PD-14
Front final drive removal and installa-
tion (4WD).....PD-11
Front passenger air bag.....RS-8, 14
Front seat beltRS-2
Front seat.....BT-32
Front suspensionFA-24
Front washerEL-141
Front wiperEL-141
Fuel cut control (at no load & high
engine speed).....EC-20
Fuel cut solenoid valveEC-129
Fuel filler lid.....BT-6
Fuel filter replacementMA-16
Fuel gaugeEL-102
Fuel injection system.....EC-15
Fuel line inspectionMA-17
Fuel precautions.....GI-5
Fuel temperature sensorEC-134
Fuse block.....EL-319
FuseEL-14
Fusible link.....EL-14

G

GLOW - Wiring diagram.....EC-150
GOVNR - Wiring diagramEC-95
Garage jack and safety standGI-39
Gauges.....EL-102
Gear components (M/T)MT-10
GlassBT-9
Glow plugEC-150, 154
Glow relayEC-150, 154
GreaseMA-9
Ground distribution.....EL-15

H

H/AIM - Wiring diagramEL-71
H/LAMP - Wiring diagram.....EL-61
HEAT UP - Wiring diagramEC-182
HFC134a (R134a) system service
procedureHA-112
HLC - Wiring diagramEL-153
HORN - Wiring diagram.....EL-155
Harness connector inspectionGI-17
Harness connector.....EL-2
Harness layout.....EL-275
Headlamp aiming controlEL-70
Headlamp leveler - See Headlamp
aiming control.....EL-70
Headlamp wiperEL-153
Headlamp.....EL-61
Headlining - See Roof trimBT-20
Heat up switch.....EC-182
Heated seat.....BT-34

Hood.....BT-4
HornEL-155
How to erase DTC for ECCS OBD
systemEC-30

I

IATS - Wiring diagram.....EC-121
IC/FAN - Wiring diagramEC-177
ILL - Wiring diagramEL-87
INT/L - Wiring diagram.....EL-101
Identification plate.....GI-37
Idle speed inspectionMA-19
Idle speed.....EC-46
IlluminationEL-86
In vehicle sensorHA-105
Injection nozzle inspection.....MA-18
Injection nozzle.....EC-22
Injection timing control valve.....EC-100
Instrument panelBT-11
Intake door control linkage adjustment.....HA-84
Intake door motorHA-25
Intake sensorHA-111
Interior lampEL-93
InteriorBT-14

J

Jacking points.....GI-39
Joint connector (J/C).....EL-322
Journal bearing assembly (propeller
shaft).....PD-8
Journal bearing disassembly (propeller
shaft).....PD-7
Junction box (J/B)EL-319

L

LSV (Load sensing valve)BR-6
Lifting pointsGI-40
Limited slip diff. adjustment.....PD-23
Limited slip diff. assemblyPD-24
Limited slip diff. disassemblyPD-21
Limited slip diff. inspectionPD-21
Location of electrical unitsEL-269
Lock, doorBT-9
Lubricant (R134a) A/CHA-114
Lubricants.....MA-9
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-27
Luggage compartment trim.....BT-14
Luggage room lamp.....EL-93

ALPHABETICAL INDEX

M

M/T major overhaul	MT-9
M/T removal and installation	MT-5
MAFS - Wiring diagram	EC-73
MAIN - Wiring diagram	EC-62
METER - Wiring diagram	EL-104
MIL & Data link connectors circuit	EC-187
MIL/DL - Wiring diagram	EC-187
MIRROR - Wiring diagram	EL-188
Main drive gear (M/T)	MT-10
Main gear (Transfer)	TF-11
Mainshaft (M/T)	MT-10
Mainshaft (Transfer)	TF-11
Maintenance (engine)	MA-12
Major overhaul (Transfer)	TF-10
Malfunction indicator lamp (MIL)	EC-31
Manifold tightening torque (intake & exhaust)	MA-12
Manual lock free running hub	FA-11
Manual transmission number	GI-37
Mass air flow sensor (MAFS)	EC-73
Master cylinder (brake)	BR-12
Meter	EL-102
Mirror, door	BT-46
Mirror, outside	BT-46
Mode door control linkage adjustment	HA-77
Model variation	GI-35
Molding - See Exterior	BT-26
Multiport fuel injection precautions	GI-3

N

NATS (Nissan Anti-theft System)	EL-240
NATS - Wiring diagram	EL-241
NLS - Wiring diagram	EC-125
NVH Troubleshooting (PD)	PD-4
NVH troubleshooting (BR)	BR-2
NVH troubleshooting (EM)	EM-6
NVH troubleshooting (FA)	FA-3
NVH troubleshooting (MT)	MT-3
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-3
NVH troubleshooting (Transfer)	TF-3
NVH troubleshooting CL	CL-3
Needle lift sensor	EC-125
Neutral position switch (M/T)	MT-4
Neutral position switch	EC-169

O

Oil change (capacity)	MA-9
Oil cooler (engine)	LC-7
Oil jet	LC-7
Oil pan (engine)	EM-13

Oil pressure (engine)	LC-3
Oil pump (engine)	LC-4
Oil seal replacement (engine)	EM-20
Oil seal replacement (front final drive 4WD)	PD-10
Oil seal replacement (front of final drive)	PD-10
Operating cylinder (clutch)	CL-8
Outside mirror	BT-46

P

P/ANT - Wiring diagram	EL-181
PCV (positive crankcase ventilation)	EC-21
PNP/SW - Wiring diagram	EC-169
POWER - Wiring diagram	EL-6
Park/Neutral position switch	EC-169
Periodic maintenance (for Europe)	MA-4
Pinion bearing preload diff.	PD-27
Pinion gear height diff.	PD-27
Piston assembly	EM-46
Piston pin inspection	EM-46
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
Power antenna	EL-181
Power door lock	EL-204
Power door lock	EL-211
Power door mirror	EL-188
Power seat	EL-190
Power steering fluid level	ST-5
Power steering gear	ST-12
Power steering hydraulic pressure	ST-6
Power steering oil pump	ST-15
Power steering system bleeding	ST-6
Power supply routing	EL-5
Power window	EL-196
Pre-delivery inspection	MA-2
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-14
Priming pump	EC-46
Propeller shaft greasing	MA-21
Propeller shaft inspection	MA-21
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
Propeller shaft	PD-5

Q

Quick-glow system check	EC-153
Quick-glow system	EC-150

R

R/FOG - Wiring diagram	EL-80
R/HEAT - Wiring diagram	HA-14

ALPHABETICAL INDEX

ROOM/L - Wiring diagramEL-95
RadiatorLC-14
Radio - See Audio.....EL-168
Rear axle (disc brake type).....RA-6
Rear bumperBT-6
Rear case (Transfer).....TF-10
Rear combination lamp removal and
 installationBT-26
Rear cover packing replacement diff.....PD-11
Rear disc brakeBR-24
Rear doorBT-10
Rear fog lampEL-80
Rear heater - Wiring diagramHA-14
Rear seat belt.....RS-5
Rear seatBT-35
Rear side windowBT-44
Rear suspensionRA-12
Rear washer.....EL-145
Rear window defoggerEL-158
Rear windowBT-42
Rear wiper.....EL-145
Refrigerant connection precautionHA-2
Refrigerant discharging evacuating
 chargingHA-113
Refrigerant general precaution.....HA-2
Refrigerant linesHA-117
Refrigeration cycleHA-11
Release bearing (clutch).....CL-11
Removal and installation (Transfer).....TF-8
Reverse idler shaft (M/T)MT-10
Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T).....MT-4
Reverse main gear (M/T)MT-10
Ring gear diff. inspectionPD-19
Road wheel sizeGI-38
Roof trimBT-20
Room lamp - See Interior lampEL-93
Rotor disc (front)FA-14

S

S/LOCK - Wiring diagramEL-215
S/SIG - Wiring diagramEC-162
SAE J1930 terminology listGI-43
SEAT - Wiring diagramEL-190
SMJ (super multiple junction)EL-317
SROOF - Wiring diagramEL-186
SRS - See Supplemental Restraint
 System.....RS-8
SRS Trouble diagnosesRS-22
STAB - Wiring diagramRA-18
START - Wiring diagram.....EL-45
Screw jackGI-39
Seal - See ExteriorBT-26
Seat belt inspectionMA-27
Seat belt pre-tensioner disposalRS-17
Seat belt pre-tensionerRS-12
Seat belt, front.....RS-2
Seat belt, rear.....RS-5

Seat, frontBT-32
Seat, rearBT-35
Seat, second (2nd)BT-35
Seat, third (3rd).....BT-37
Second (2nd) seatBT-35
Self-diagnostic resultsEC-31
Shift control (Transfer)TF-12
Shift control components (M/T).....MT-12
Shift fork (M/T)MT-12
Shift leverMT-12
Shock absorber (front)FA-25
Shock absorber (rear)RA-14
Side bearing preload (front final drive
 4WD).....PD-27
Side bearing preload diff.PD-27
Side trim.....BT-14
Side window - See Rear side window.....BT-44
Speedometer.....EL-102
Spiral cable.....RS-13
Stabilizer bar (front)FA-25
Stabilizer bar (rear)RA-15
Stabilizer release device - Wiring
 diagram.....RA-18
Stabilizer release deviceRA-16
Standardized relayEL-3
Start signalEC-162
StarterEL-51
Starting systemEL-45
Steering gear and linkage inspectionMA-26
Steering linkageST-19
Steering switch.....EL-59
Steering wheel and columnST-8
Steering wheel playST-4
Steering wheel turning force.....ST-6
Striking rod (M/T)MT-12
Sub-gear (M/T)MT-10
Sunload sensorHA-107
Sunroof, electricEL-186
Sunroof.....BT-39
Super lockEL-211
Supplemental Restraint System.....RS-8
Supplemental restraint system - Wiring
 diagram.....RS-27
Symbols and abbreviationsGI-7
Synchronizer (M/T).....MT-10

T

TCV - Wiring diagramEC-100
TachometerEL-102
ThermometerEL-116
Thermostat.....LC-12
Third (3rd) seatBT-37
Three way catalyst precautions.....GI-4
Throttle control solenoid valveEC-155
Throttle control solenoid valveEC-161
Throwout bearing - See Clutch release
 bearingCL-11
Thrust washer selection diff.PD-27

ALPHABETICAL INDEX

Tie-rod ball joints.....ST-19
Tie-rod.....ST-19
Timing belt.....EM-15
Tire rotation.....MA-25
Tire size.....GI-38
Tooth contact (front final drive 4WD).....PD-29
Tooth contact diff.....PD-29
Tow truck towing.....GI-41
Towing point.....GI-42
Transfer case.....TF-10
Transfer fluid replacement.....MA-21
Transfer serial number.....GI-37
Transmission case (M/T).....MT-9
Trim.....BT-14
Trouble diagnoses.....GI-30
Turbocharger charge air cooler.....EM-27
Turbocharger.....EM-23
Two-pole lift.....GI-40

u

Under body.....BT-51

v

VSS - Wiring diagram.....EC-82
Vacuum hose (brake system).....BR-17
Vacuum hose (brake system).....BR-18
Vacuum hose drawing (ECCS).....EC-13
Valve clearance.....EM-40
Valve guide.....EM-31
Valve lifter.....EM-35
Valve seat.....EM-32
Valve spring.....EM-34

Vehicle identification number.....GI-36
Vehicle speed sensor (VSS).....EC-82
Viscosity number (SAE).....MA-10

w

WARN - Wiring diagram.....EL-123
WINDOW - Wiring diagram.....EL-198
WIP/R - Wiring diagram.....EL-146
WIPER - Wiring diagram.....EL-142
Warning chime.....EL-135
Warning lamps.....EL-121
Washer, front.....EL-141
Washer, rear.....EL-145
Water pump.....LC-10
Water temperature gauge.....EL-102
Weatherstrip - See Exterior.....BT-26
Wheel alignment (front).....FA-8
Wheel bearing (front axle).....FA-5
Wheel bearing (rear).....RA-5
Wheel hub (front).....FA-14
Wheel size.....GI-38
Window, back door.....BT-45
Window, door.....BT-9
Window, rear side.....BT-44
Window, side - See Rear side window.....BT-44
Windshield.....BT-42
Wiper deicer.....EL-166
Wiper, front.....EL-141
Wiper, rear.....EL-145
Wiring diagram (cell code) list.....EL-315
Wiring diagrams.....GI-8
Withdrawal lever (clutch).....CL-11