

AUTOMATIC TRANSMISSION

SECTION **AT**


CONTENTS

DESCRIPTION OF E4N71B	AT- 2
GENERAL SERVICE NOTICE	AT- 4
ON-VEHICLE SERVICE	AT- 9
REMOVAL AND INSTALLATION	AT-16
MAJOR OVERHAUL	AT-18
DISASSEMBLY	AT-20
REPAIR FOR COMPONENT PARTS	AT-26
ASSEMBLY	AT-49
TROUBLE-SHOOTING AND DIAGNOSES	AT-64
SERVICE DATA AND SPECIFICATIONS (S D S.)	AT-89
SPECIAL SERVICE TOOLS	AT-93


The logo consists of the letters "AT" in a bold, white, sans-serif font, positioned inside a black square. A white diagonal line cuts across the square from the bottom-left corner to the top-right corner, passing behind the text.

DESCRIPTION OF E4N71B

The Model E4N71B automatic transmission is the latest addition to Nissan's line-up of transmissions. This transmission is based on the model L4N71B (mounted on the 1983 model 810), and can provide lockup of 3rd and O.D. by electronic control. By use of a microcomputer, the electronic-controlled lockup system permits lockup

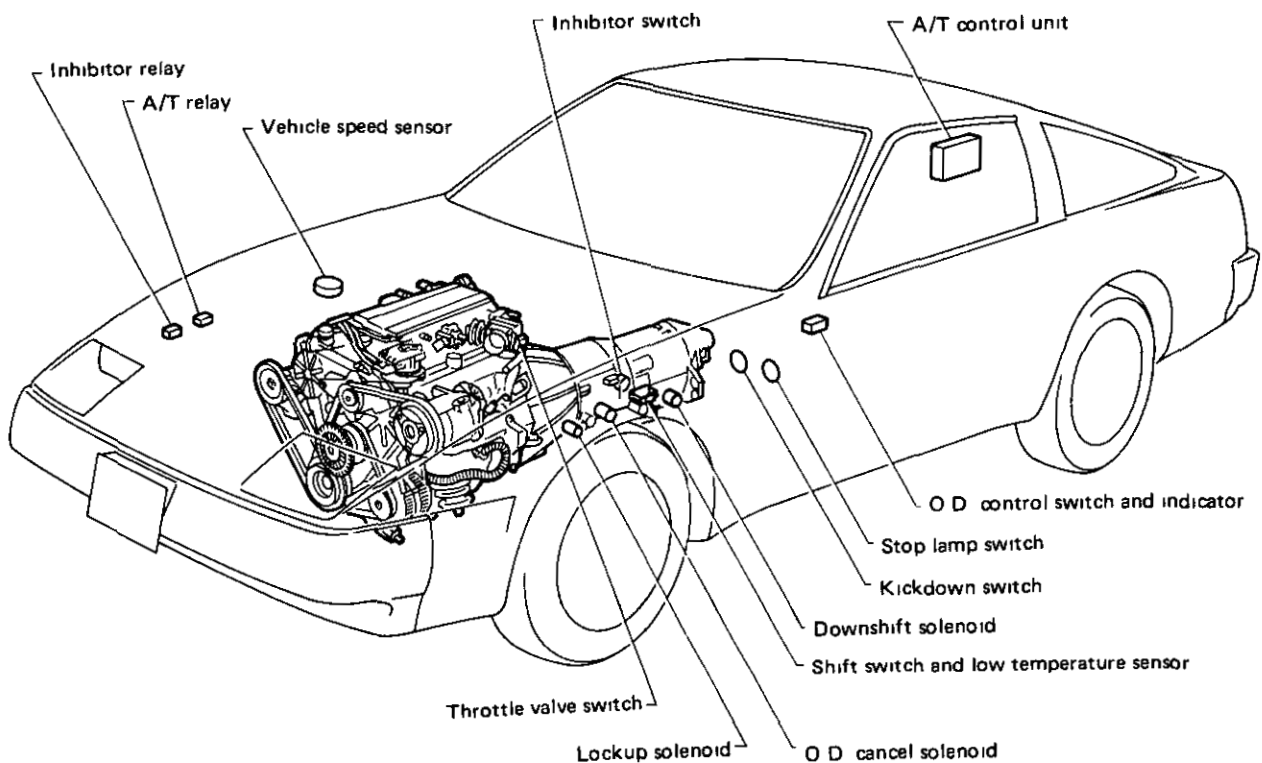

SAT588A

 

- 1 Converter housing
- 2 Torque converter
- 3 Oil pump assembly
- 4 O D planetary gear
- 5 Direct clutch
- 6 Drum support

GENERAL SERVICE NOTICE

Repair Notes

- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts of the transmission from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use a nylon cloth or paper towel for wiping parts clean. Common shop rags can leave lint that might interfere with the transmission's operation.
- When disassembling parts, be sure to place them in order in parts rack so they can be put back in the unit in their proper positions.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals, and O-rings should be replaced. It is also very important to perform functional tests whenever it is designated.
- The valve body contains many precision parts

and requires extreme care when parts are removed and serviced. Place removed parts on a parts rack so they can be put back in the valve body in the same positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.


- Before assembly, apply a coat of recommended A.T.F. to all parts. Vaseline may be applied to O-rings and seals. Do not use any grease.
- Care should be taken to avoid damaging O-rings, seals and gaskets when assembling.

Abbreviations used throughout this section stand for the following

- A.T.F. . . . Automatic transmission fluid
- D₁ Drive range 1st gear
- D₂ Drive range 2nd gear
- D₃ Drive range 3rd gear
- D₄ Drive range 4th gear
- O.D. . . . Overdrive
- 1₂ 1 range 2nd gear
- 1₁ 1 range 1st gear

Control Valve

CONTROL VALVE UPPER BODY

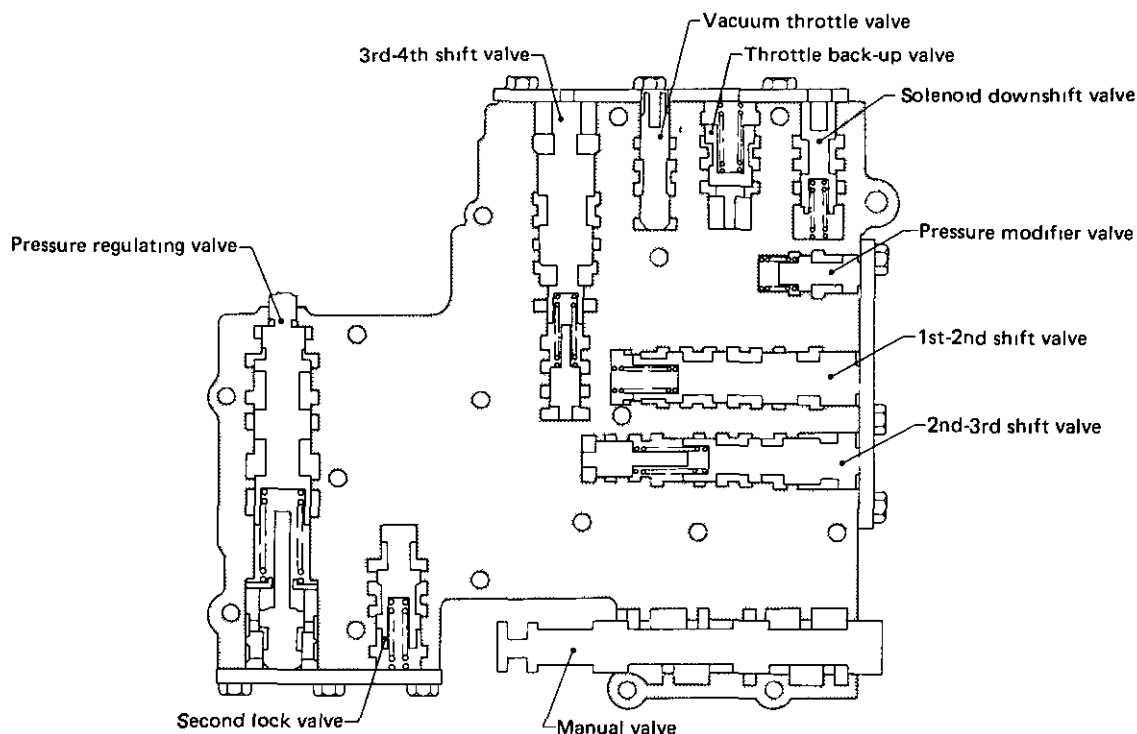


SAT742

GENERAL SERVICE NOTICE


Control Valve (Cont'd)

CONTROL VALVE LOWER BODY

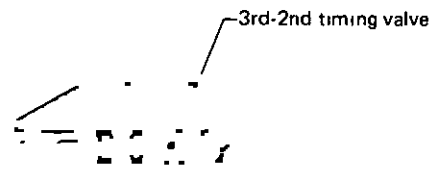

SAT705

Lock-up Control Valve and O.D. Cancel Valve

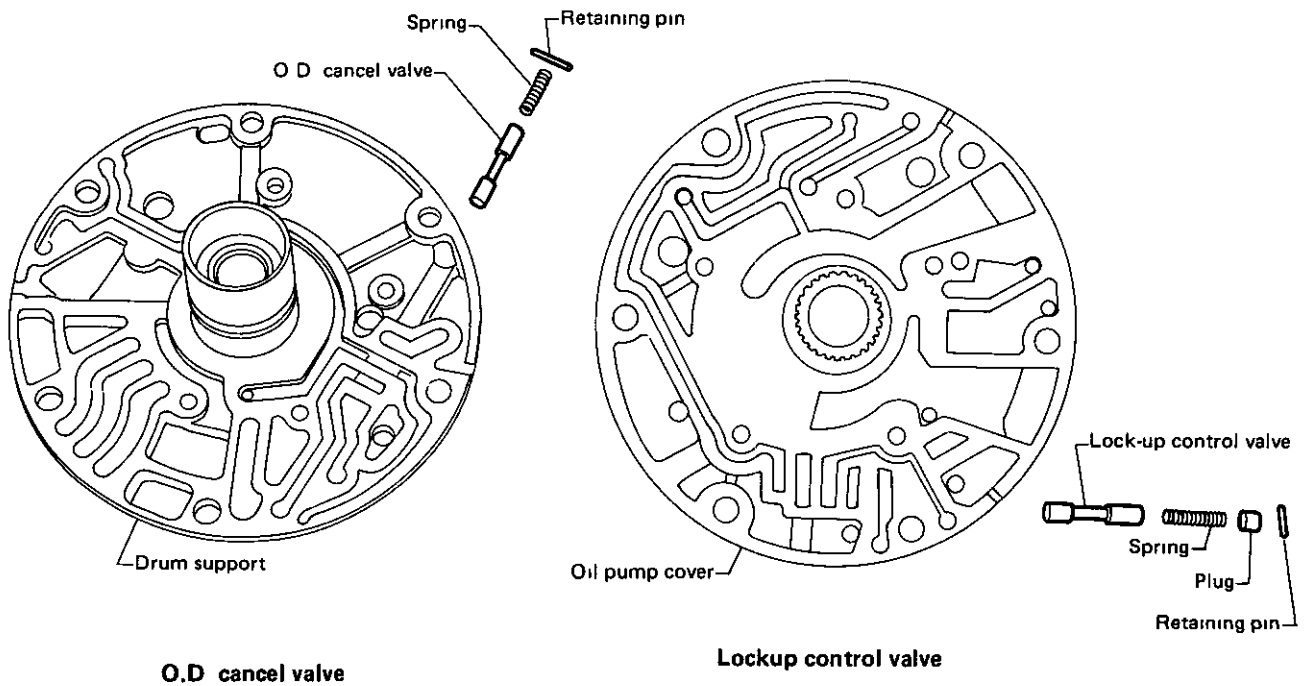

SAT498


GENERAL SERVICE NOTICE

Oil Channel

Oil channels which connect components are located in the areas shown below.


OIL CHANNELS IN OIL PUMP

Oil pump cover side

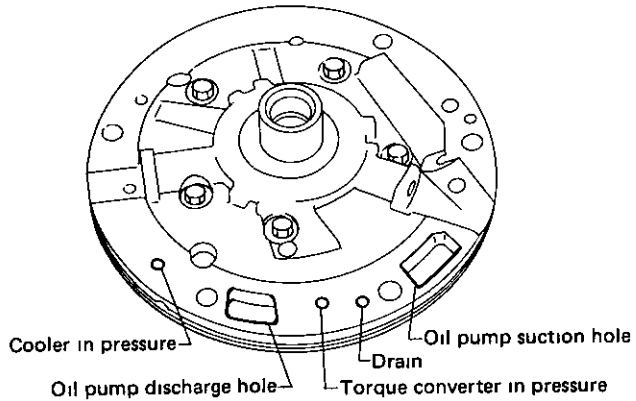

SAT499


Oil pump housing side

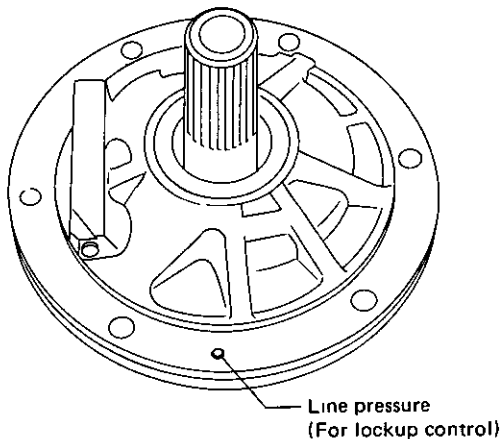

SAT500


OIL CHANNELS IN TRANSMISSION CASE

Front face side

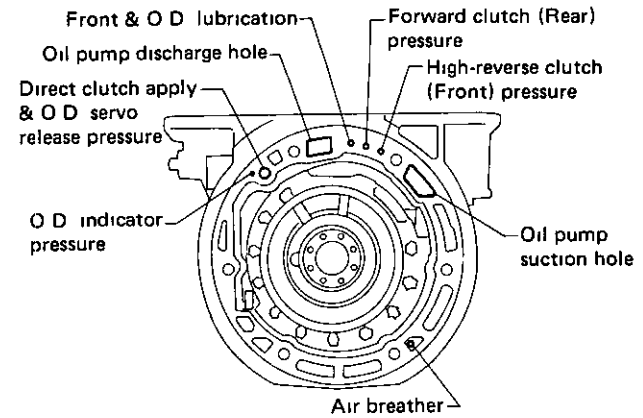


SAT501

Lower face side

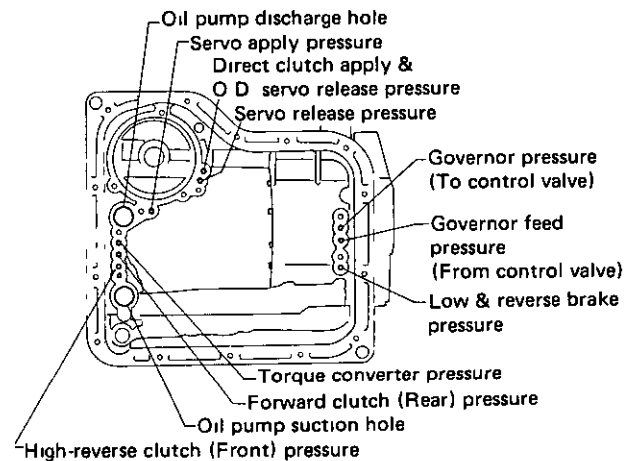

SAT502

OIL CHANNELS IN O.D. CASE

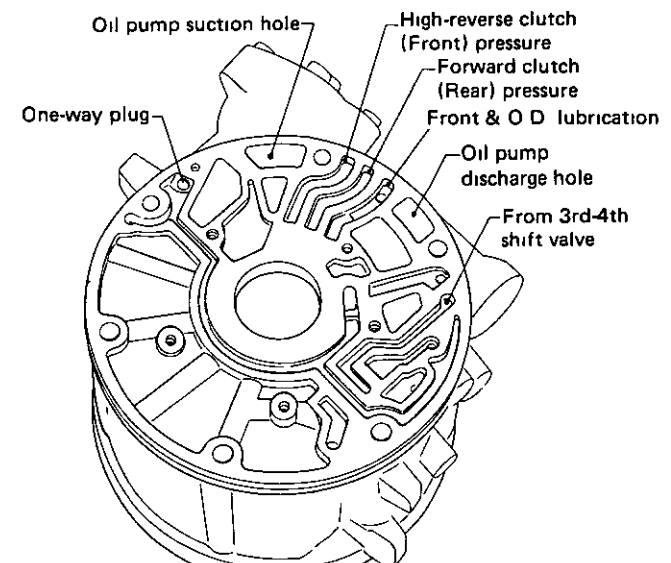


In regards to one-way plug, refer to page AT-30

SAT645

GENERAL SERVICE NOTICE


Oil Channel (Cont'd)

OIL CHANNELS IN DRUM SUPPORT

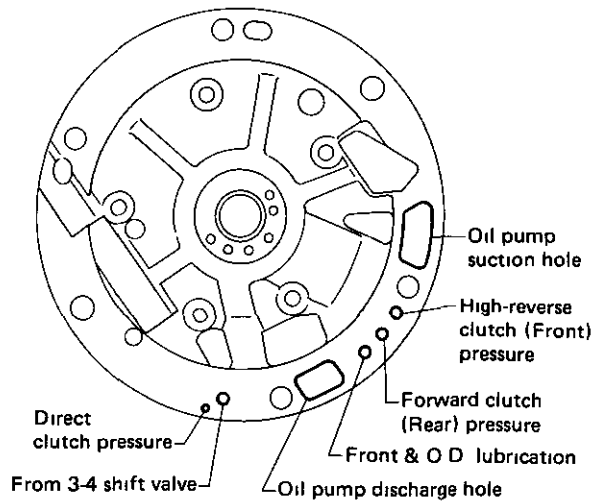

SAT503

OIL CHANNELS IN CONVERTER HOUSING (For lockup control)

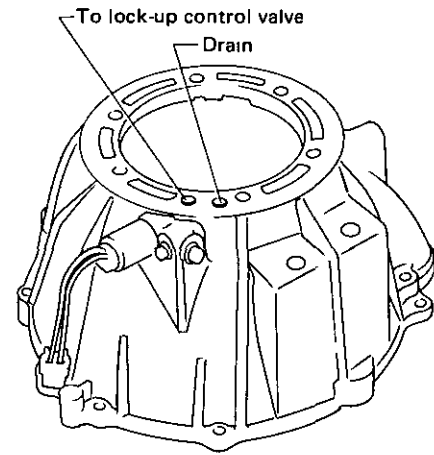

SAT706

Mechanical Operation


In the E4N71B automatic transmission, each part operates as shown in the following table at each gear select position.

Range	Direct clutch	O D band servo		High-reverse clutch (Front)	Forward clutch (Rear)	Low & reverse brake	2nd band servo		One-way clutch	Parking pawl
		Apply	Release				Apply	Release		
Park	ON	(ON)	ON			ON				ON
Reverse	ON	(ON)	ON	ON		ON		ON		
Neutral	ON	(ON)	ON							
D	D ₁ (Low)	ON	(ON)	ON	ON				ON	
	D ₂ (Second)	ON	(ON)	ON	ON		ON			
	D ₃ (Top)	ON	(ON)	ON	ON		(ON)	ON		
	D ₄ (O D)		ON		ON		(ON)	ON		
2	Second	ON	(ON)	ON	ON		ON			
1	1 ₂ (Second)	ON	(ON)	ON	ON		ON			
	1 ₁ (Low)	ON	(ON)	ON	ON	ON			ON	

The low & reverse brake is applied in "1₁" range to prevent free wheeling when coasting and allows engine braking.

GENERAL SERVICE NOTICE

Hydraulic Control Circuits

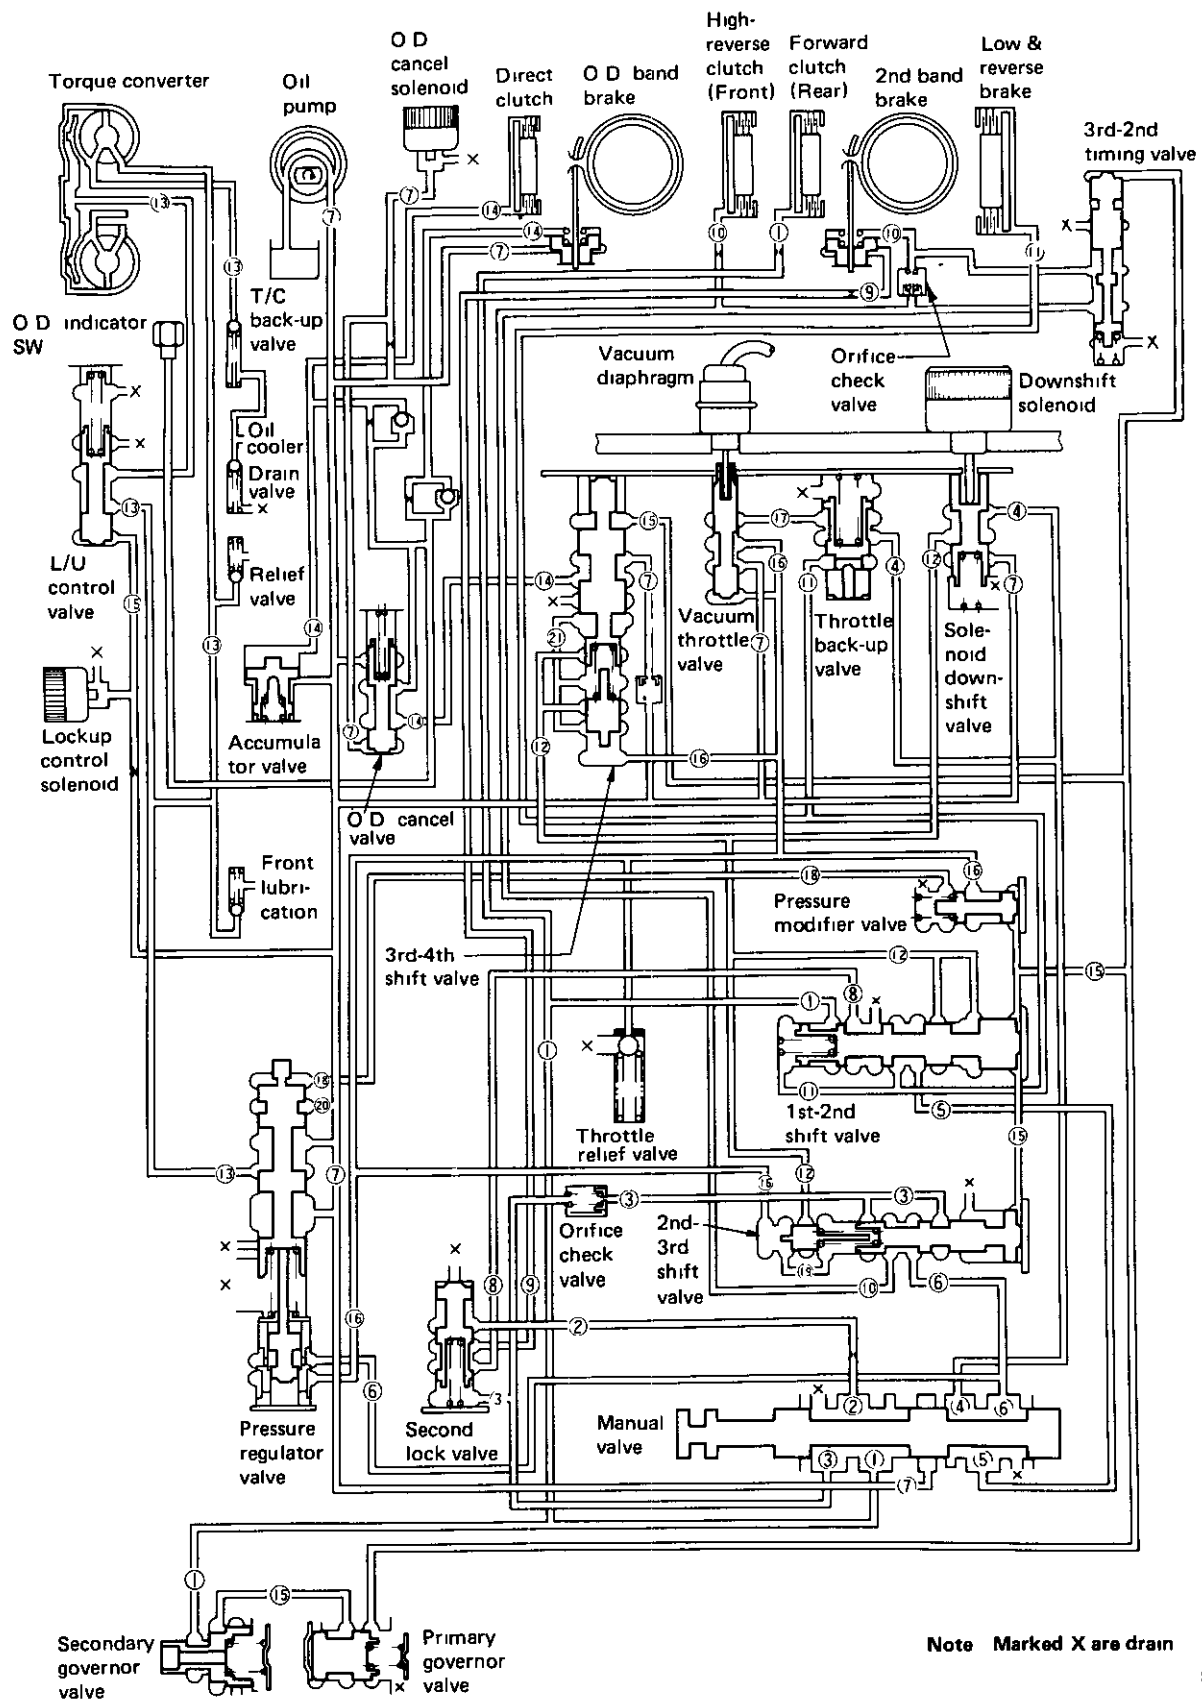


SAT707

ON-VEHICLE SERVICE

Control Valve


- 1 Drain fluid by removing oil pan
- 2 Remove kickdown solenoid and vacuum diaphragm & rod

Be careful not to lose vacuum rod.

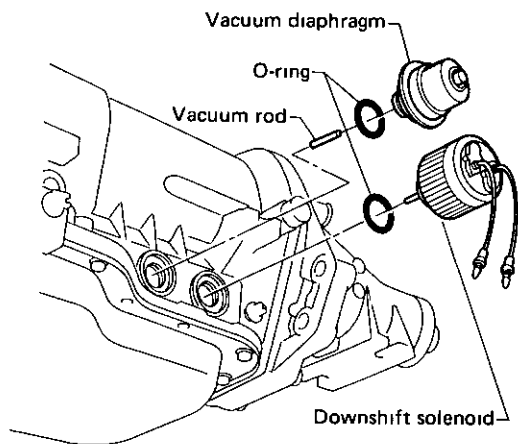


SAT506

- 3 Remove control valve assembly

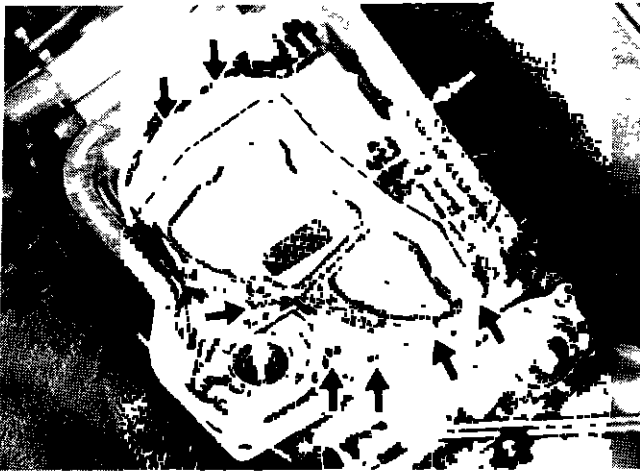

Be careful not to drop manual valve out of valve body.

4. Disassemble, inspect and assemble control valve assembly Refer to Control Valve Body.
 - 5 Install control valve assembly
- Set manual shaft at Neutral, then align manual plate with groove in manual valve of control valve assembly.
 - Securing bolts come in 3 different lengths.

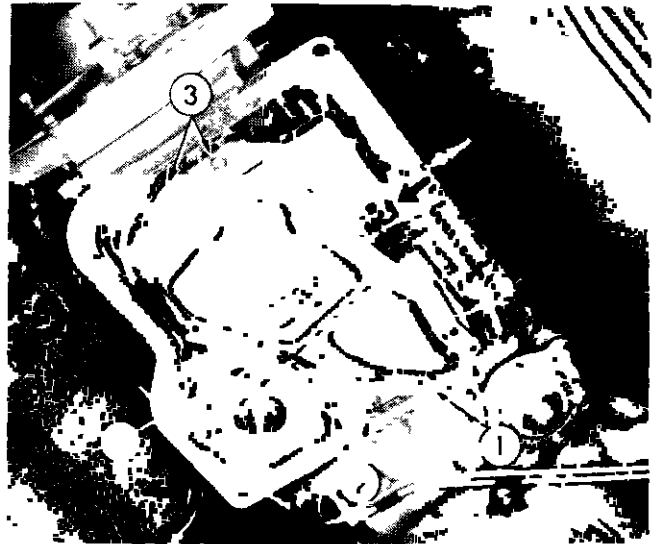

- 1 40 mm (1.57 in)
- 2 35 mm (1.38 in)
- 3 25 mm (0.98 in)

- After installing control valve to transmission case, make sure that control lever can be moved to all positions.
- 6 Install kickdown solenoid and vacuum diaphragm & rod.
- Make sure that vacuum diaphragm rod does not interfere with side plate of control valve.

ON-VEHICLE SERVICE

Extension Oil Seal Replacement

1. Remove oil seal.




2. Apply coat of A.T.F. to oil seal surface, then drive new oil seal into place



3. Coat sealing lips with vaseline, then install propeller shaft.


Parking Component

1. Remove oil pan
2. Remove propeller shaft
3. Remove speedometer pinion.

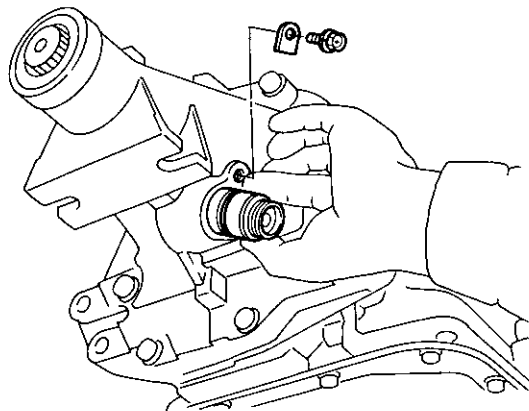

SAT511

4. Support transmission with a jack, then remove rear mounting bolts

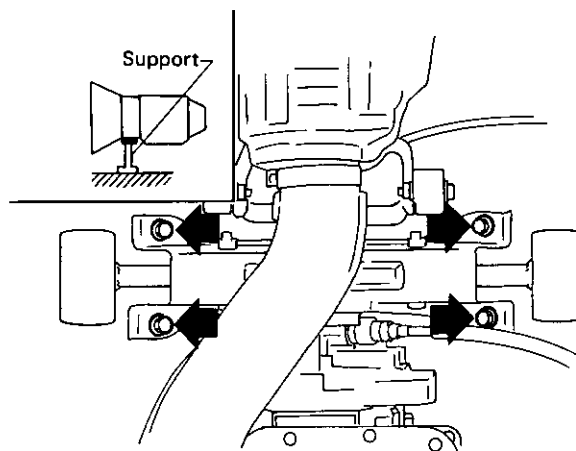

SAT709

ON-VEHICLE SERVICE

— Parking Component (Cont'd) —


5. Remove rear extension bolts, then draw out rear extension with rear mounting.



6. Remove control valve assembly.
7. Inspect and repair parking components. Check component parts for wear or damage

— Governor Valve Assembly —

1. Drain oil by removing oil pan
2. Remove rear extension with rear mounting.
3. Remove governor valve assembly.

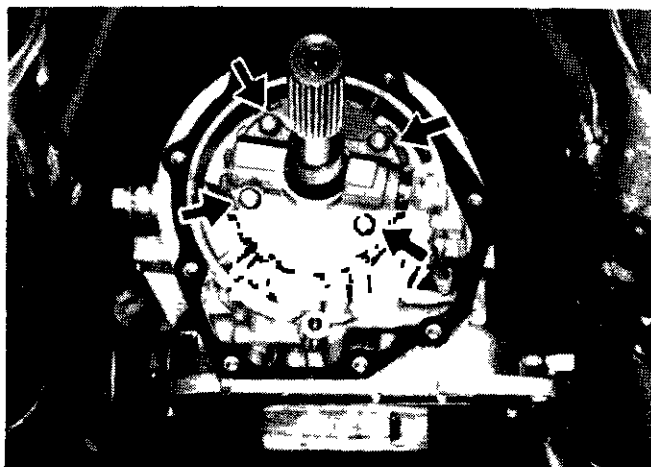


4. Inspect and repair governor valve assembly
Refer to Governor for inspection

— Inhibitor Switch Adjustment —

Disconnect harness at connector, then remove inhibitor switch

- Check continuity at "N", "P" and "R" ranges

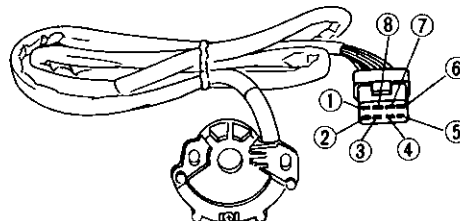

	P	R	N	D	2	1
1						
2						
3						
4						
5						
6						
7						
8						


SAT060A

- With control lever held in "Neutral", turn manual lever an equal amount in both directions to see if current flow ranges are nearly the same. (Current normally begins to flow before manual lever reaches a angle of 1.5° in either direction)

If current flows outside normal range, or if normal flow range is out of specifications, properly adjust inhibitor switch

Adjust inhibitor switch as follows

1. Place the manual valve in Neutral (vertical position).
2. Remove the screw

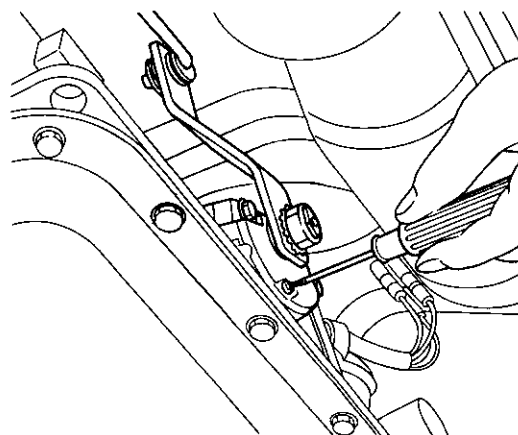


SAT097

ON-VEHICLE SERVICE

Inhibitor Switch Adjustment (Cont'd)

- 3 Loosen the attaching bolts
- 4 Using an aligning pin, [2 0 mm (0 079 in) dia] move the switch until the pin falls into the hole in the rotor

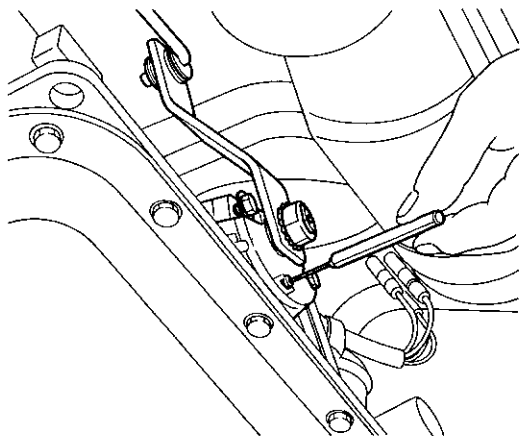

SAT098

- 5 Tighten the attaching bolts equally
- 6 Recheck for continuity. If faulty, replace the switch

Manual Linkage Adjustment

Move the shift lever from the "P" range to "1" range. You should be able to feel the detents in each range.


If the detents cannot be felt or the pointer indicating the range is improperly aligned, the linkage needs adjustment.

- 1 Place selector lever in "P" range
- 2 Loosen lock nuts.



3. Tighten lock nut (X) until it touches trunnion pulling selector lever toward "R" range side without pushing button.
4. Back off lock nut (X) 1/4 - 1/2 turns and tighten lock nut (Y) to the specified torque.

 : Lock nut
8 - 11 N·m
(0.8 - 1.1 kg-m, 5.8 - 8.0 ft-lb)

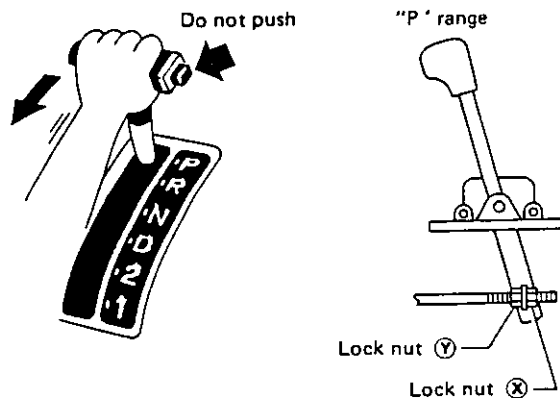


SAT293A

5. Move selector lever from "P" range to "1" range. Make sure that selector lever can move smoothly.

ON-VEHICLE SERVICE

Vacuum Diaphragm Rod Adjustment

1. Remove diaphragm from transmission case.
2. Using a depth gauge, measure depth "L". Be sure vacuum throttle valve is pushed into valve body as far as possible.
3. Check "L" depth with chart below and select proper length rod.

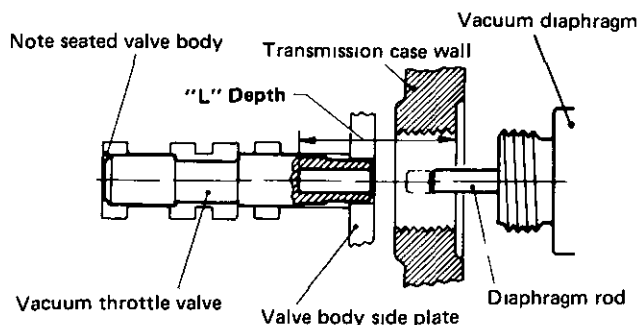


SAT078

Vacuum diaphragm rod selection

Measured depth "L" mm (in)	Rod length mm (in)	Part number
Under 25 55 (1 0059)	29 0 (1 142)	31932 - X0103
25 65 - 26 05 (1 0098 - 1 0256)	29 5 (1 161)	31932 - X0104
26 15 - 26 55 (1 0295 - 1 0453)	30 0 (1 181)	31932 - X0100
26 65 - 27 05 (1 0492 - 1 0650)	30 5 (1 201)	31932 - X0102
Over 27 15 (1 0689)	31 0 (1 220)	31932 - X0101


Downshift Solenoid

1. Remove downshift solenoid and O-ring
Catch oil dropping out of the hole.

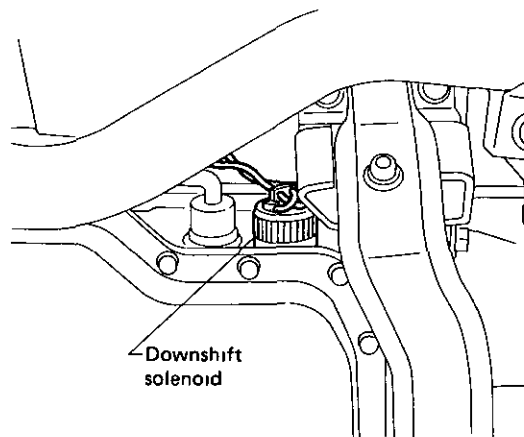

SAT516

2. Check to verify that downshift solenoid is operating properly. If faulty, replace it with a new one.

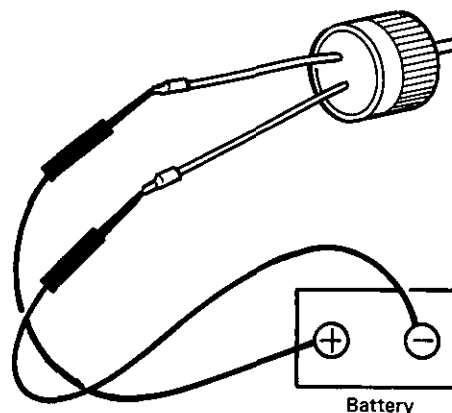


Battery

SAT517

ON-VEHICLE SERVICE

Kickdown Switch Adjustment

When the pedal is fully depressed, a click can be heard just before the pedal bottoms out. If the click is not heard, loosen the locknut and extend the switch until the pedal lever makes contact with the switch and the switch clicks.

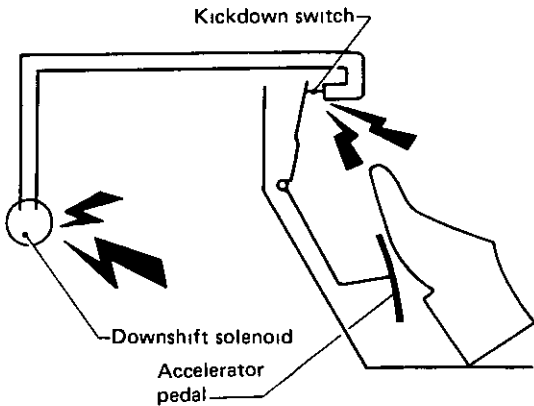


Do not allow the switch to make contact too soon. This would cause the transmission to downshift on part throttle.

DIAGNOSIS:

Switch can be heard clicking, and the transmission still does not kickdown:

Check the continuity of the switch. Also check for available current.

The vehicle upshifts at approximately 55 (1st to 2nd) and 90 km/h (2nd to 3rd) (34 and 56 MPH) only: The kickdown switch may be internally shorted (When the switch is shorted, there is continuity through the switch in any position).

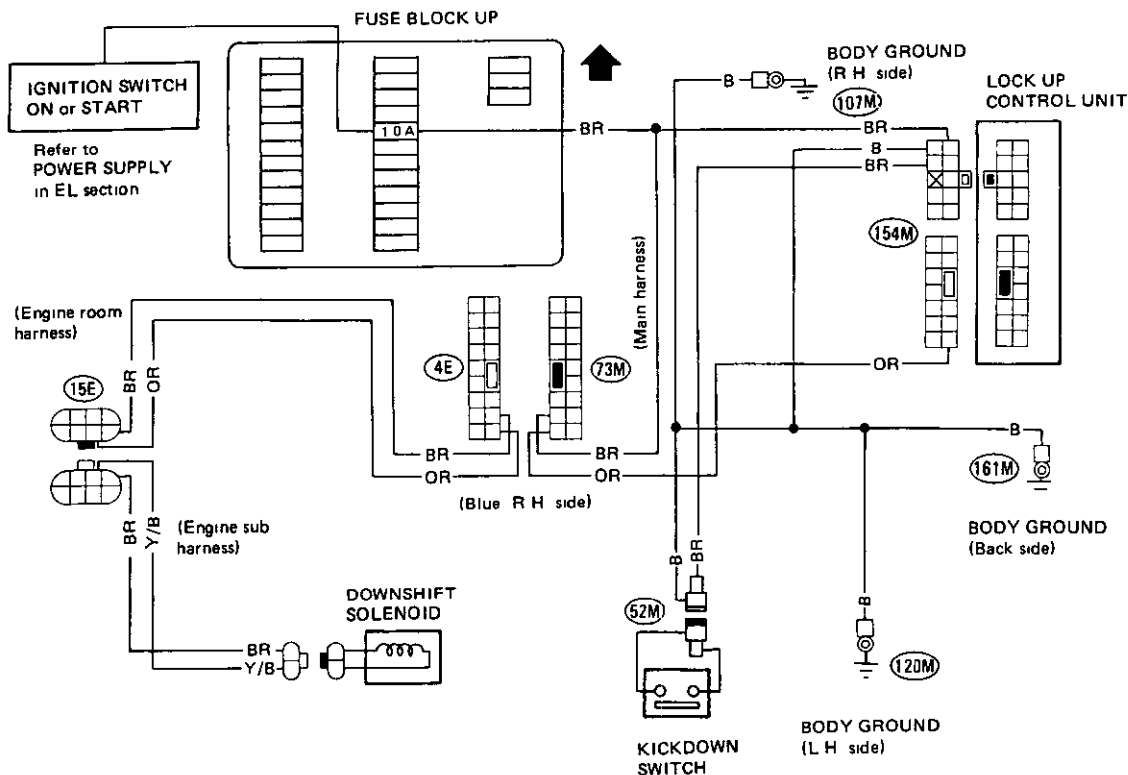

SAT586A


ON-VEHICLE SERVICE

Overdrive and Lockup Control

O.D. CONTROL SWITCH & O.D. INDICATOR LAMP

Inspection


	ON	OFF
1		
2		
3		

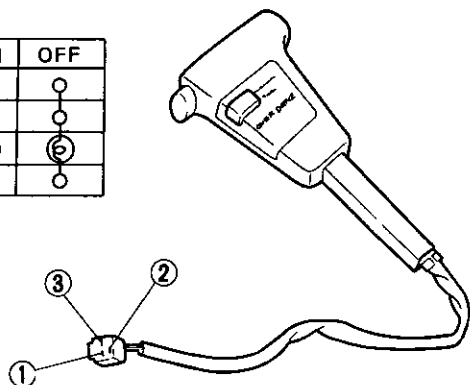

SAT236A

Inspection


Confirm that clicking sound is heard when power is applied

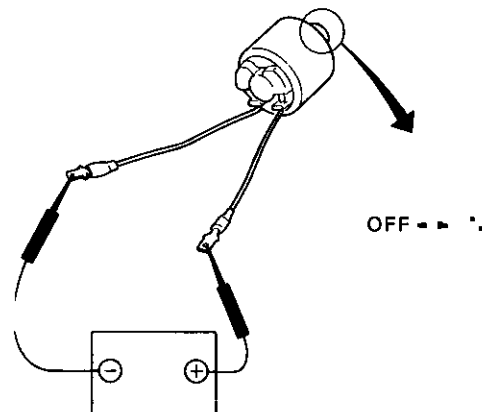

SAT620

O.D. CANCEL SOLENOID AND LOCKUP SOLENOID

Location

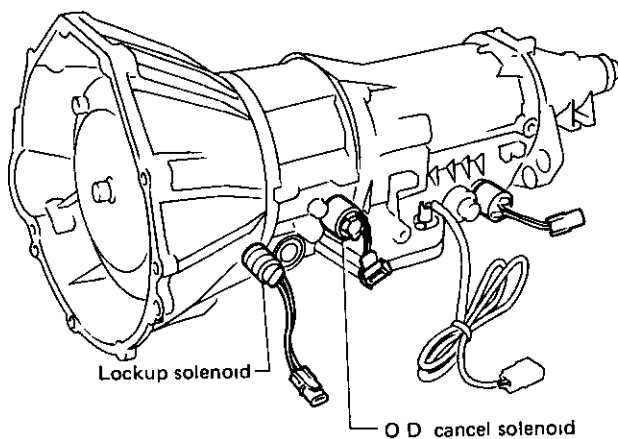

SAT063A

REMOVAL AND INSTALLATION

Removal

- Remove bolts securing torque converter to drive plate.




- a. Remove those bolts turning crank shaft.
 - b. Before removing torque converter, inscribe matching marks on two parts so that they may be replaced in their original positions during assembly
- Plug up openings such as oil charging pipe, etc

CAUTION:

Take care when dismounting transmission not to strike any adjacent parts.

Installation

- Drive plate runout
Maximum allowable runout:
0.5 mm (0.020 in)

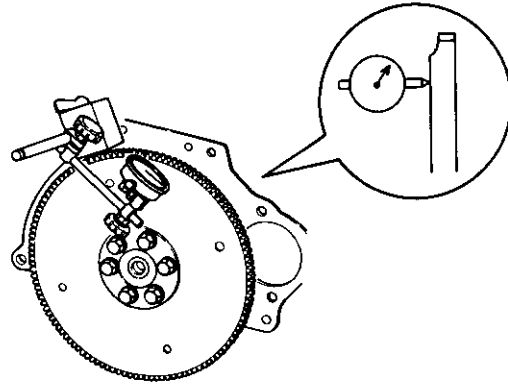


SAT718

If this runout is out of allowance, replace drive plate and ring gear

- When connecting torque converter to transmission, measure distance "A" to be certain that they are correctly assembled.

Distance "A":

More than 35 mm (1.38 in)

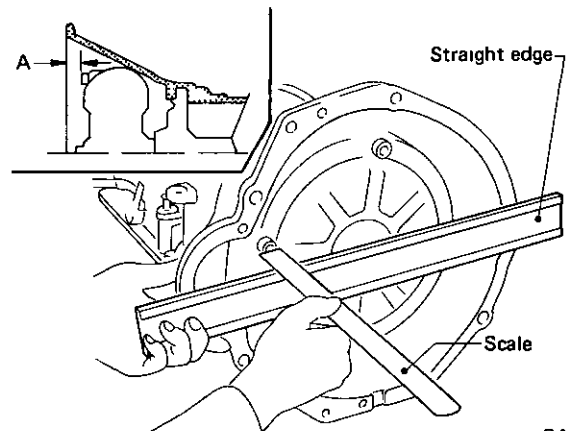

SAT615

- Install converter to drive plate
Align matching marks painted across both parts during disassembly.
- After converter is installed, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.

REMOVAL AND INSTALLATION


Installation (Cont'd)

- Check inhibitor switch for operation
- Check fluid level in transmission
- Move selector lever through all positions to be sure that transmission operates correctly
With parking brake applied, rotate engine at idling. Move selector lever through "N" to "D", to "2", to "1" and to "R". A slight shock should be felt by hand gripping selector each time transmission is shifted.
- Check to be sure that line pressure is correct
To do this, refer to Line Pressure Test
- Perform stall test.

MAJOR OVERHAUL

⓪ N m (kg m, ft lb)

Ⓐ	39	49	(40	50, 29	36)
Ⓑ	10	15	(10	15, 7	11)
Ⓒ	44	54	(45	55, 33	40)
Ⓓ	13	18	(13	18, 9	13)
Ⓔ	5	7	(05	07, 36	51)
Ⓕ	8	11	(08	11, 58	80)
Ⓖ	7	9	(07	09, 51	65)
Ⓗ	54	74	(055	075, 40	54)
Ⓙ	5	7	(05	07, 36	51)
Ⓚ	29	39	(30	40, 22	29)

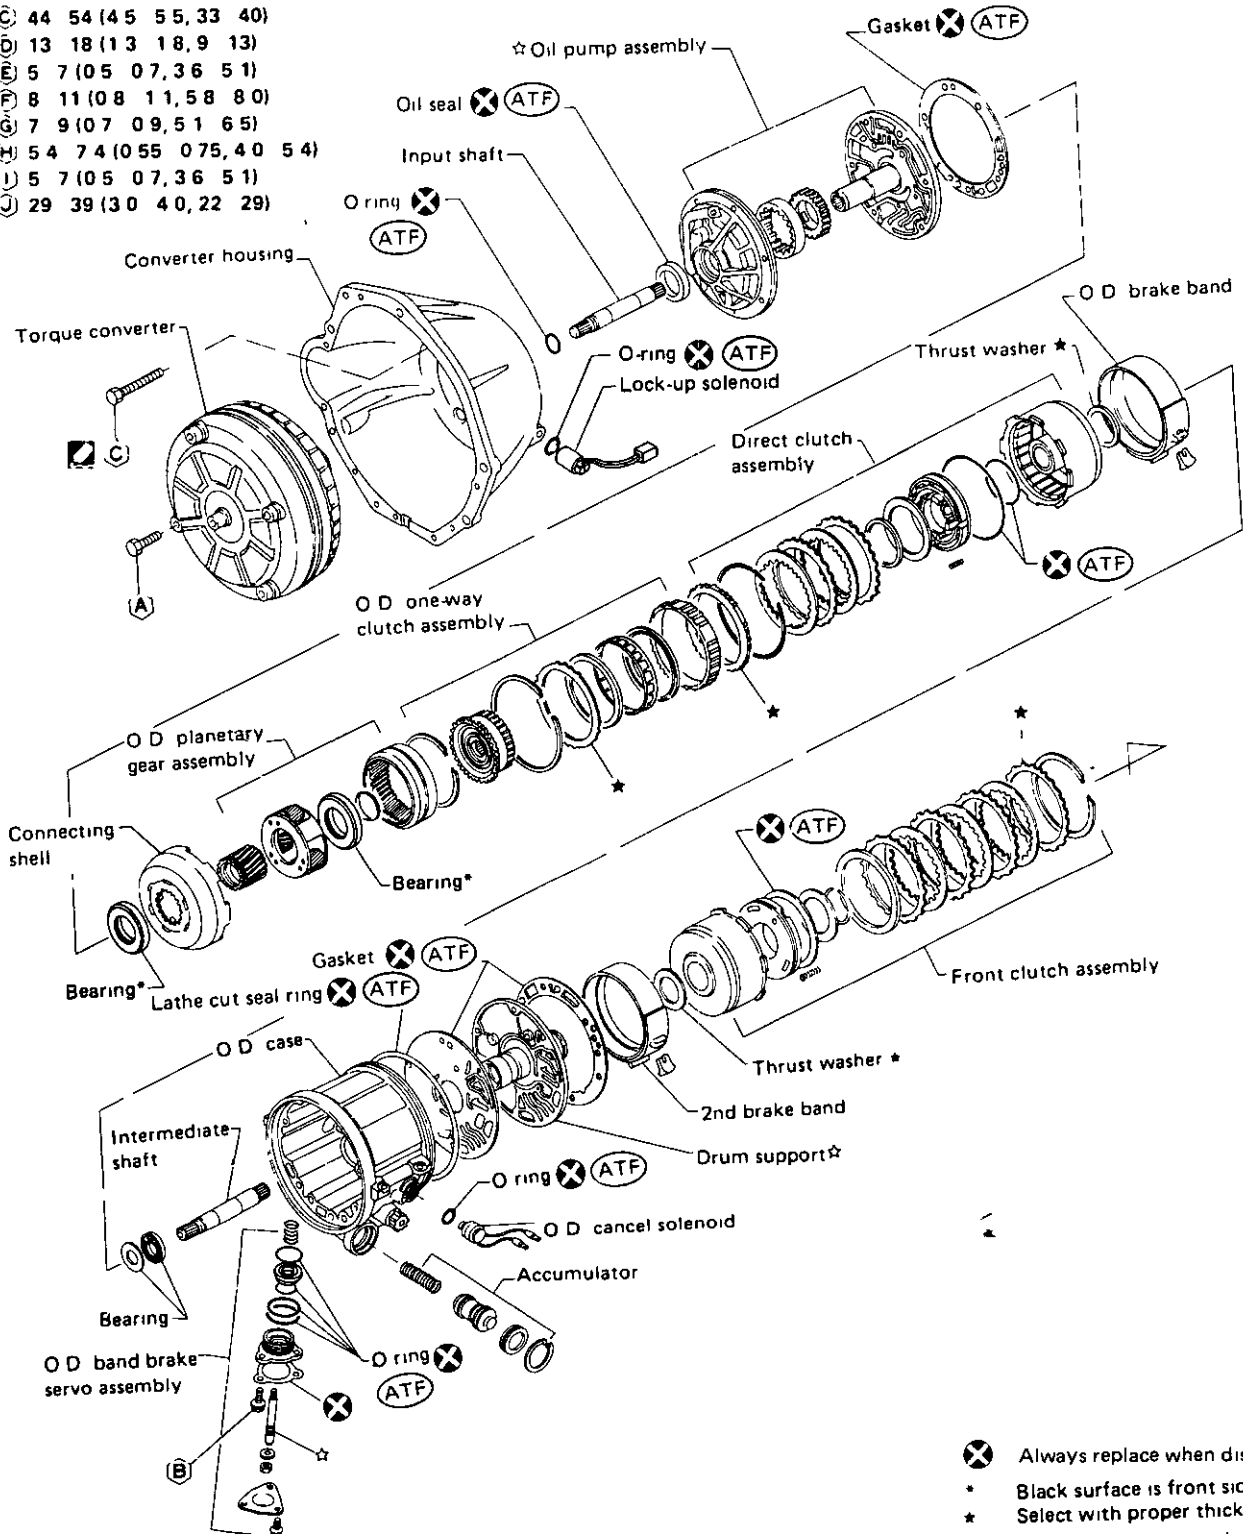

(X) Always replace when disassembled

* Black surface is front side

☆ Select with proper thickness

☆ Adjustment is required

(ATF) Apply A T F

This diagram illustrates the exploded view of a 4-speed automatic transmission assembly. The main components are arranged along a central shaft, showing the internal gear trains and external housing parts. Key components labeled include:


- Front planetary gear assembly**: Located at the top right, connected to the input shaft.
- Rear clutch assembly**: Positioned below the front planetary gear assembly.
- Low & reverse brake assembly**: Located at the bottom right, connected to the rear of the transmission.
- Rear planetary gear assembly**: Positioned below the low and reverse brake assembly.
- One way clutch assembly**: Located between the rear planetary gear assembly and the output shaft.
- Output shaft**: The central shaft that carries the output gears.
- Governor valve assembly**: A component that regulates oil pressure based on vehicle speed.
- Oil distributor**: A component that distributes oil to the various clutches and bands.
- Control valve assembly**: A complex component that controls the flow of oil through the transmission.
- Oil pan**: The bottom housing of the transmission, which collects excess oil.
- Oil level gauge**: A gauge that indicates the oil level in the transmission.
- Oil charging pipe**: A pipe that allows oil to be added to the transmission.
- Inhibitor switch**: A switch that prevents the transmission from shifting out of Park when the parking brake is not engaged.
- Parking rod**: A rod that connects the parking brake to the parking pawl.
- Parking pawl part**: A part that engages the parking gear to prevent the vehicle from moving.
- Parking actuator part**: A part that actuates the parking pawl.
- Downshift solenoid**: A solenoid that controls the downshift of the transmission.
- Vacuum diaphragm**: A diaphragm that is used to control the downshift solenoid.
- Diaphragm rod**: A rod that connects the vacuum diaphragm to the downshift solenoid.
- 2nd band brake servo assembly**: A component that provides additional braking force for the second gear.
- Low temperature sensor**: A sensor that monitors the temperature of the transmission oil.
- Tube clamp**: A clamp that is used to secure the oil pan to the transmission housing.
- Harness**: A cable that connects the transmission to the vehicle's electrical system.

The diagram also shows various seals and gaskets, such as the **Oil seal**, **Gasket**, **O-ring**, and **Seal ring**, which are used to prevent oil leakage. The assembly is shown in a disassembled state to illustrate the relationship between the various components.

AT-19


DISASSEMBLY

1. Remove torque converter, drain A.T.F. through end of rear extension, and place transmission on Tool.

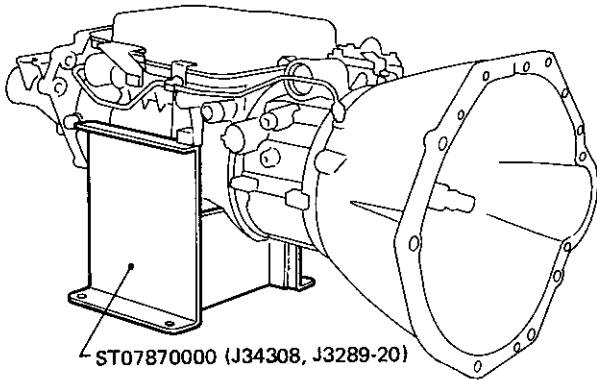


SAT520


2. Remove lock-up solenoid

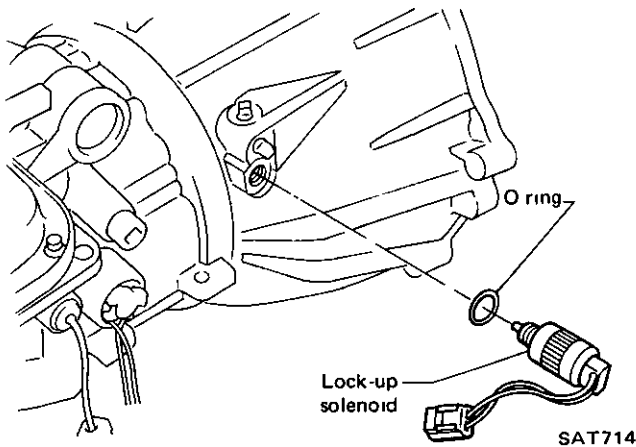


3. Remove converter housing.

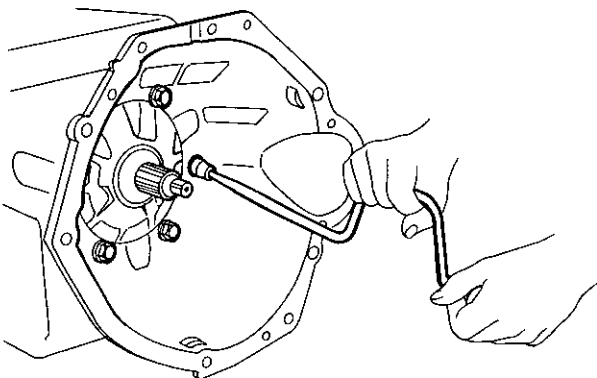

4. Remove oil pan and inspect its contents. An analysis of any foreign matter can indicate the types of problems to look for. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up which can cause valves, servo, and clutches to stick and may inhibit pump pressure.

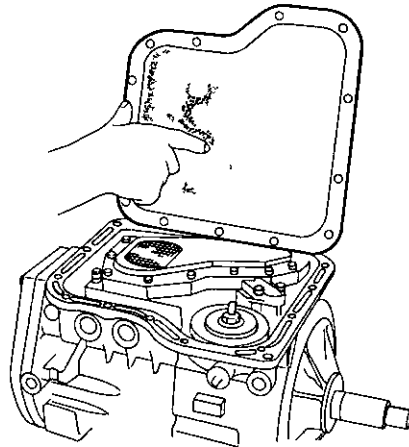


5. Loosen 2nd band servo piston stem lock nut and tighten piston stem.

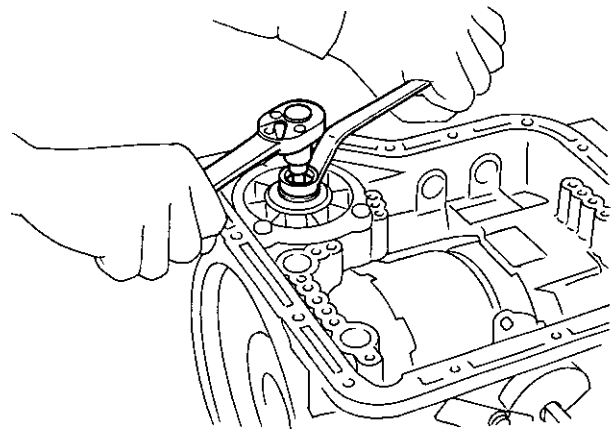


DISASSEMBLY

6. Remove O D component assembly, then remove high-reverse clutch (Front) thrust washer and needle bearing & race

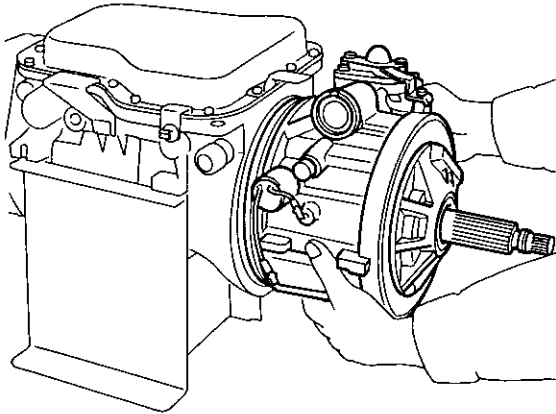


SAT522

7. Draw out input shaft and intermediate shaft

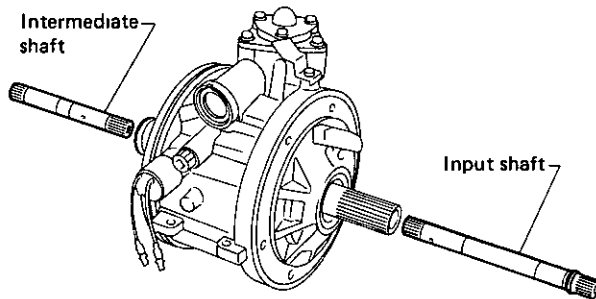


SAT523

- 8 Attach Tool to pump and remove pump

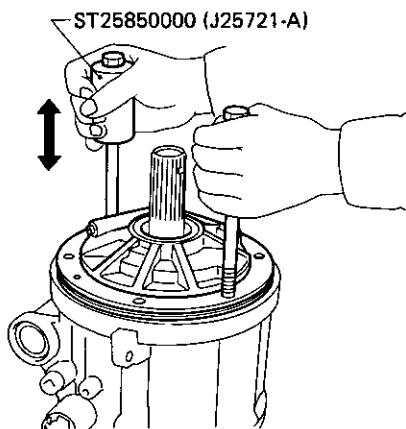


SAT524

- 9 Remove O D. servo cover, then loosen O D band servo piston stem.

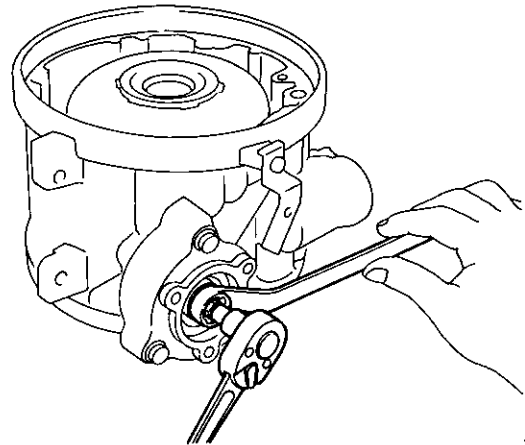


SAT525

10. Remove O.D. pack (O D planetary gear & direct clutch assembly).

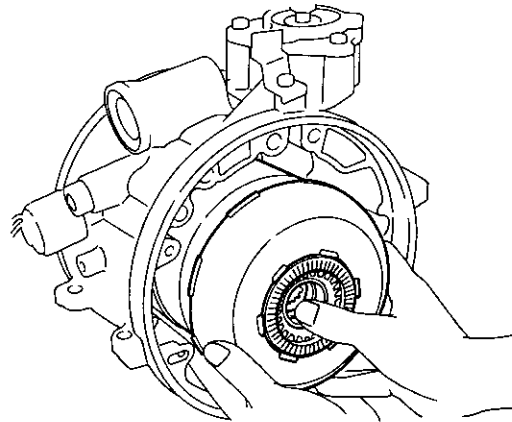

SAT526


- 11 Remove needle bearing & race and direct clutch thrust washer, then remove O.D. brake band & strut.

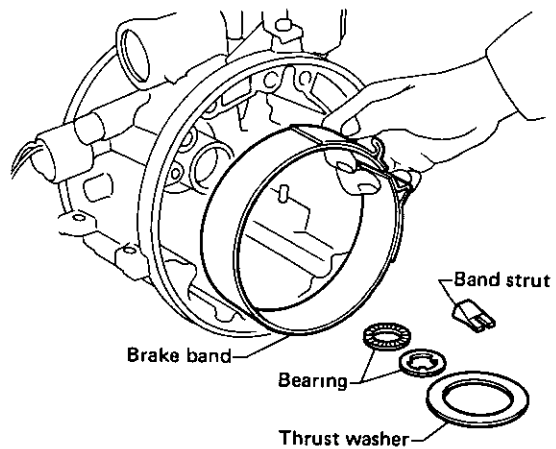

SAT527


DISASSEMBLY

- 12 Remove O.D. servo assembly by lightly tapping retainer

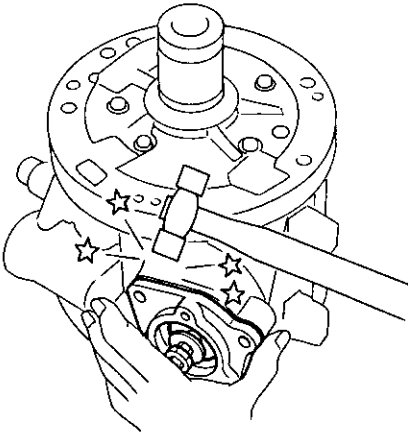


SAT528

13. Remove accumulator snap ring, then apply pressure to remove accumulator plug, piston and spring.

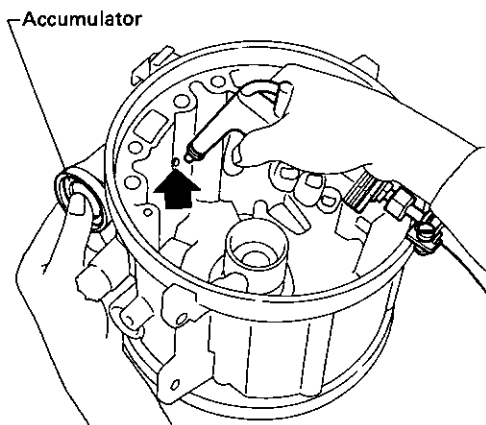


SAT529

- 14 Remove O.D. cancel solenoid and O-ring.

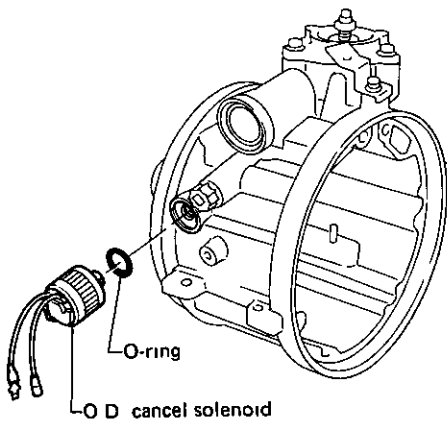


SAT530

15. Remove drum support.

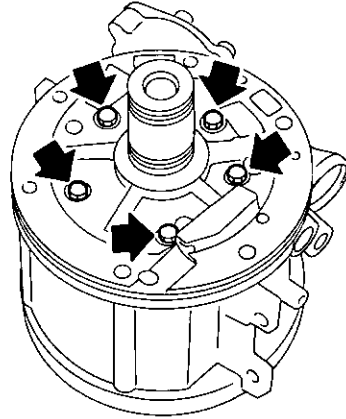


SAT531

16. Remove downshift solenoid, vacuum diaphragm & rod and O-rings

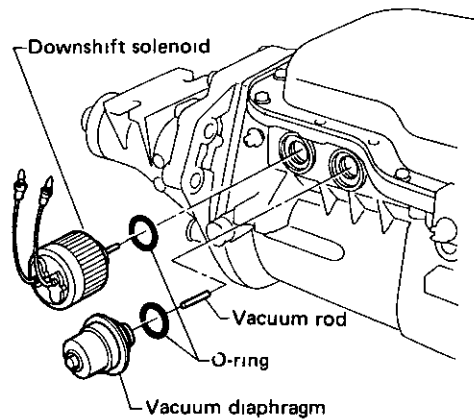

SAT532


17. Remove speedometer pinion

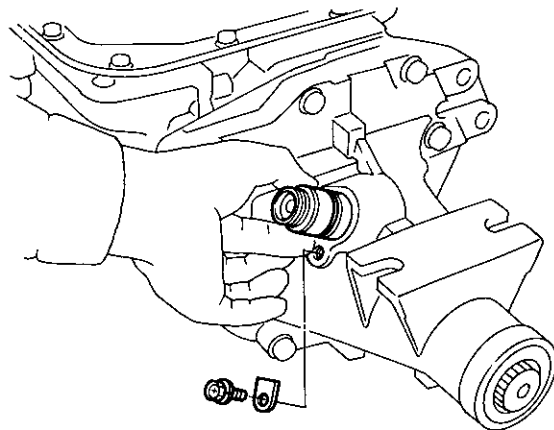


SAT533

DISASSEMBLY

18. Remove control valve body

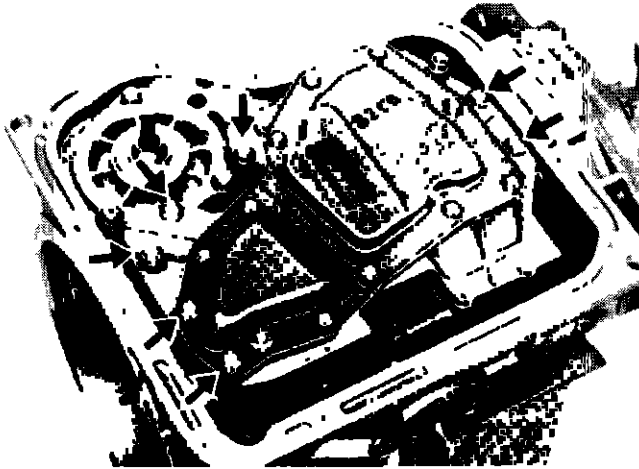


Remove manual valve from valve body as a precaution, to prevent valve from dropping out accidentally

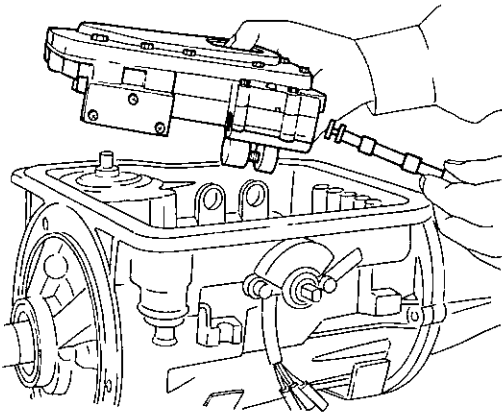


SAT007

19. Remove 2nd brake band strut. Brake band and clutch & planetary gear pack [including high-reverse clutch (Front), forward clutch (Rear) and front planetary gear] may be removed together

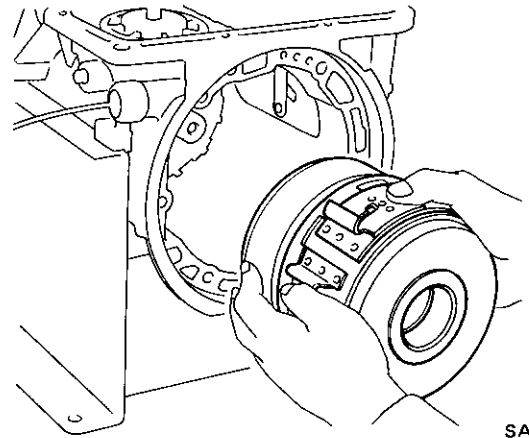

SAT534

To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. Before removing the brake band, always secure it with a clip as shown in the figure below. Leave the clip in position after removing the brake band.

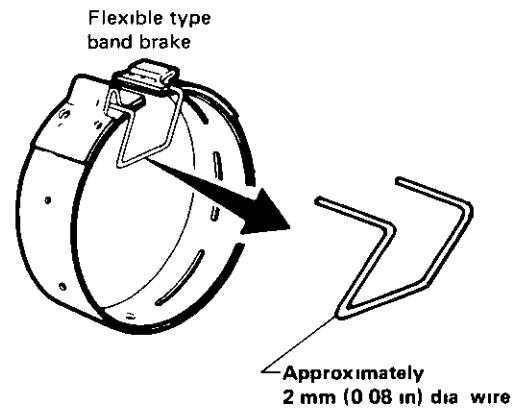


SAT656

20. Remove 2nd band servo retaining bolts. Apply pressure to remove 2nd band servo




DISASSEMBLY

- 21 Check one-way clutch to see if it operates properly.

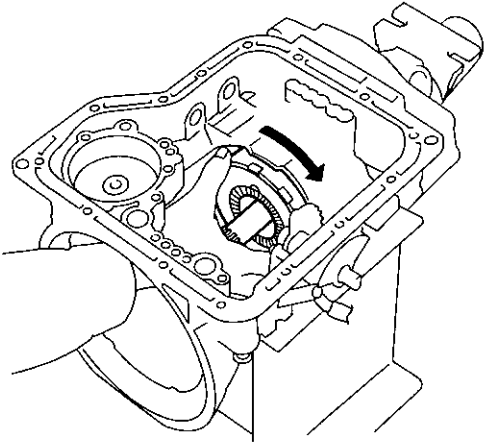


SAT536

22. Remove rear planetary carrier snap ring and rear planetary carrier.

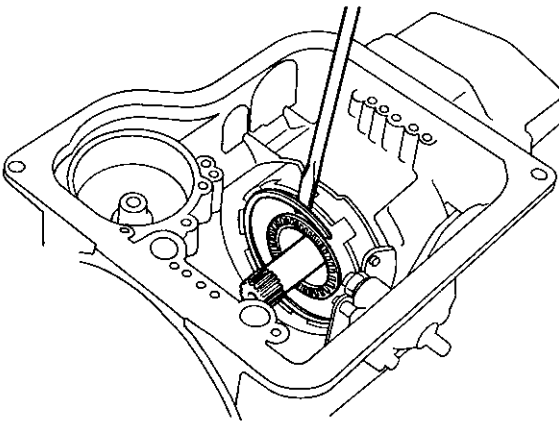


SAT015

23. Remove output shaft snap ring.

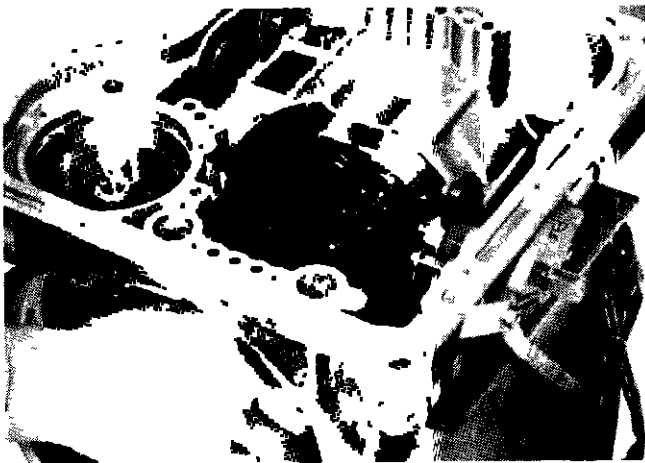


24. Remove connecting drum with internal gear

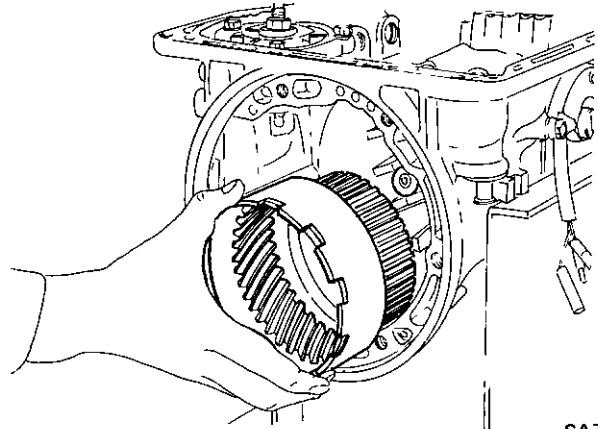


SAT017

25. Pry off one end of snap ring with a screwdriver
Remove snap ring from low and reverse brake assembly while applying plier force in direction of arrow.

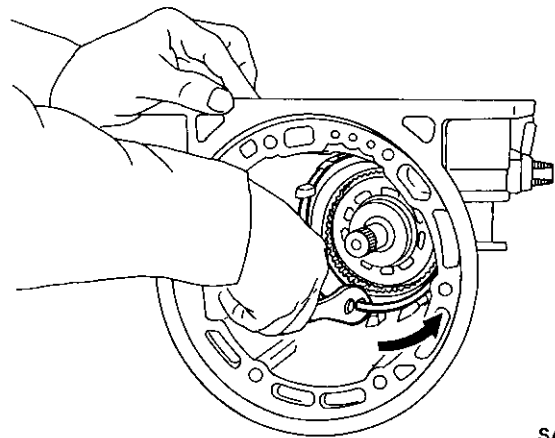

SAT087

26. Remove low and reverse brake clutch assembly.

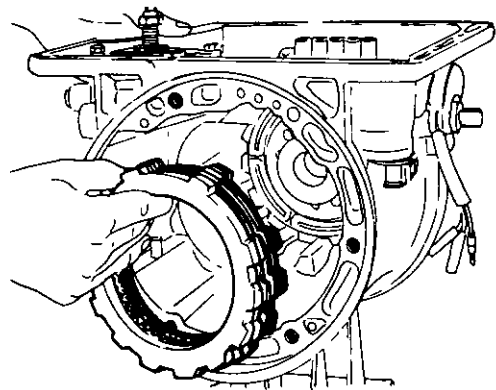


AT129

DISASSEMBLY


27. Remove rear extension.

Be careful not to lose retainer washer.

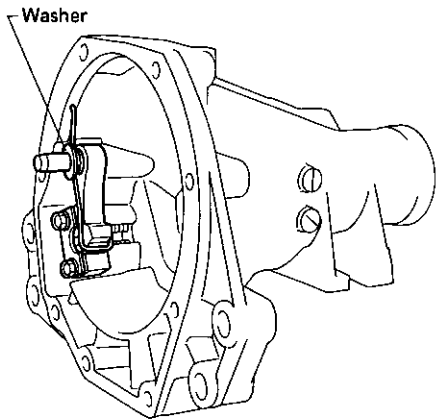

SAT537


28 Remove output shaft with governor.

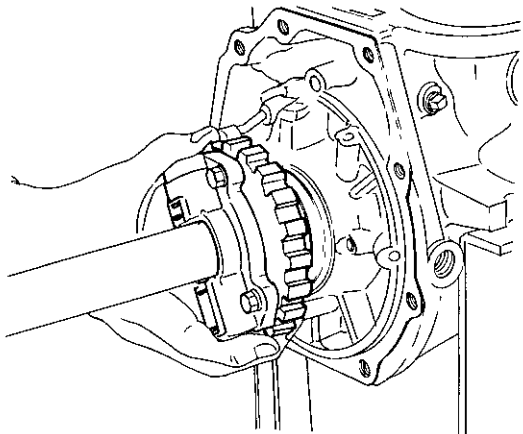

SAT019


29 Remove governor thrust washer and needle bearing

Remove one-way clutch inner race attaching hex-head slotted bolts using Tool.

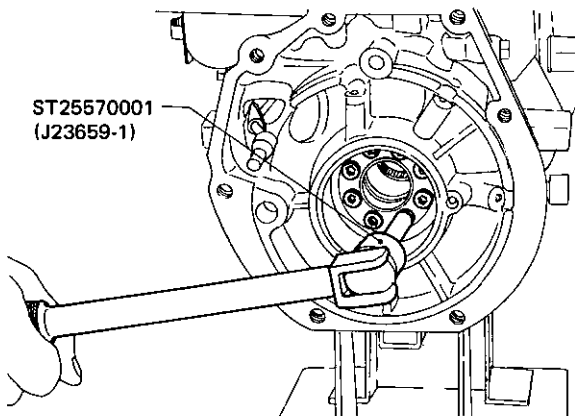


SAT020

30 Remove one-way clutch inner race, return thrust washer, low and reverse return spring, and spring thrust ring.

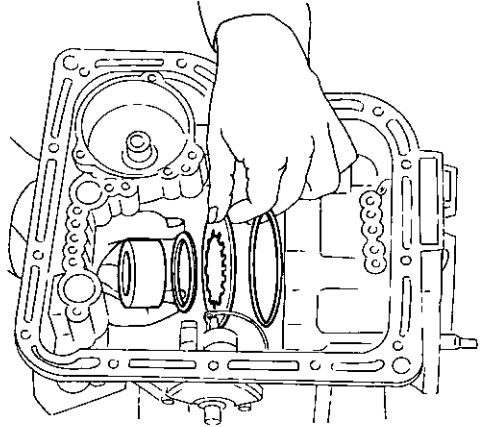


SAT021

31 Apply air pressure to remove low and reverse brake piston

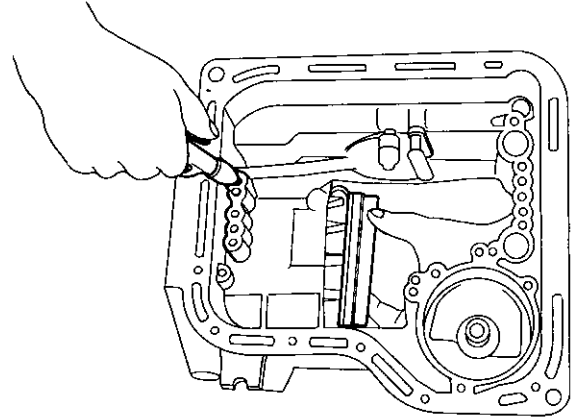

SAT022

32. Remove snap ring, then remove lock nut, manual plate and parking rod.

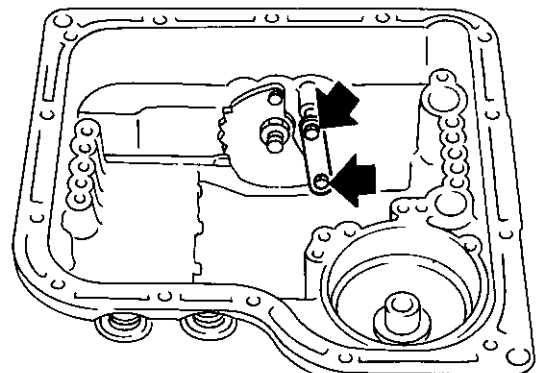


SAT720

33. Remove inhibitor switch and manual shaft.

34. Remove O D indicator switch and O-ring

REPAIR FOR COMPONENT PARTS


Oil Pump

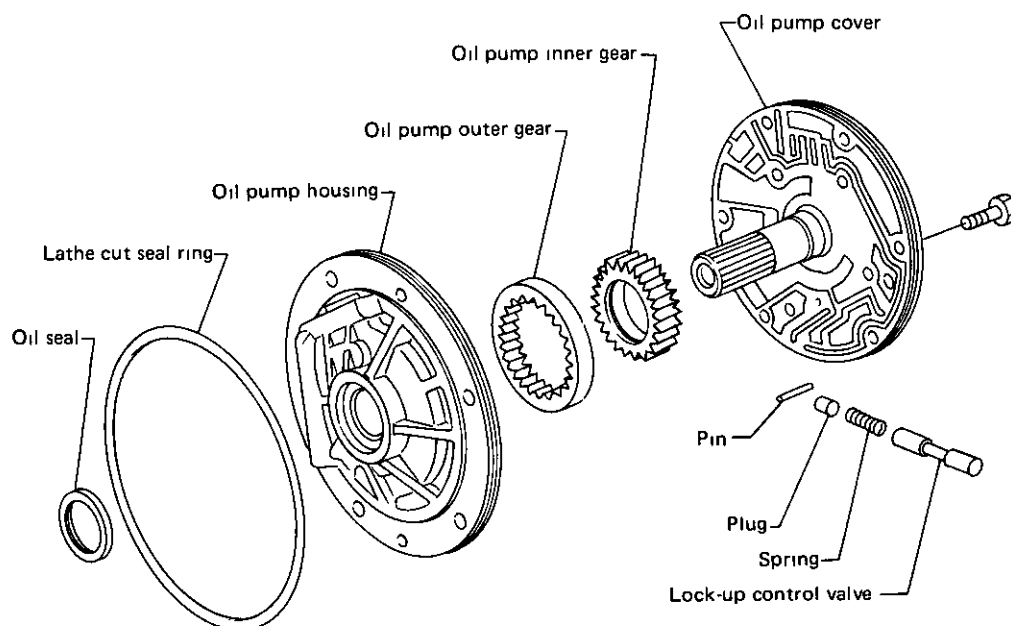

SAT721


DISASSEMBLY

1. Remove pump cover from pump housing.

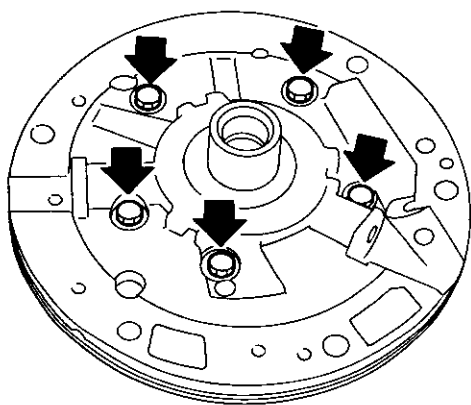

SAT538

2. Stake off retaining pin with a punch [outer dia. 1.5 to 1.8 mm (0.059 to 0.071 in)], then remove lock-up control valve and spring

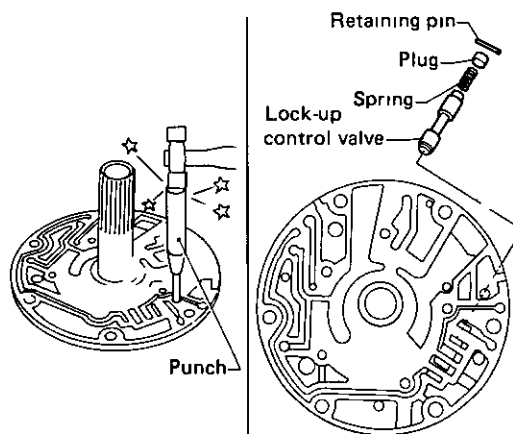

SAT722

INSPECTION

1. Inspect pump body, bushing and pump shaft, for wear
2. Inspect gears, lock-up control valve, spring and all internal surfaces for damage and visible wear.

REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)


- 3 Measure clearance between outer gear and crescent.

Standard clearance:

0.14 - 0.21 mm (0.0055 - 0.0083 in)

Wear limit:

0.25 mm (0.0098 in)

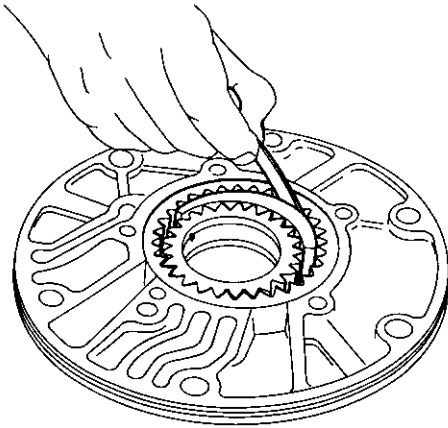

SAT025


- 4 Measure clearance between outer gear and pump housing.

Standard clearance:

0.05 - 0.20 mm (0.0020 - 0.0079 in)

Wear limit:

0.25 mm (0.0098 in)

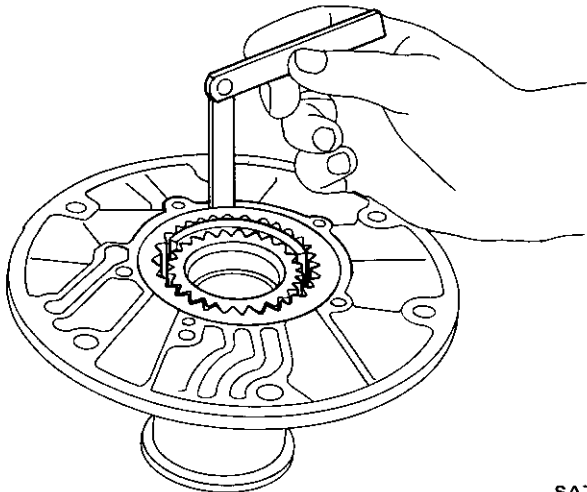

SAT026


5. Measure clearance between gears and pump cover with a feeler gauge and straight edge

Standard clearance:

0.02 - 0.04 mm (0.0008 - 0.0016 in)

Wear limit:

0.08 mm (0.0031 in)

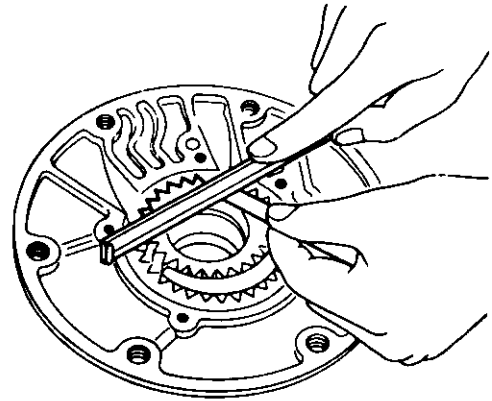

AT162


REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

Drum Support

ASSEMBLY

1. Install lock-up control valve and spring into oil pump cover, then tap new retaining pin
2. Mount pump housing in Tool and suitable spacer. Set up pump housing with inner and outer pump gears on it and install pump cover to pump housing. Temporarily assemble oil pump

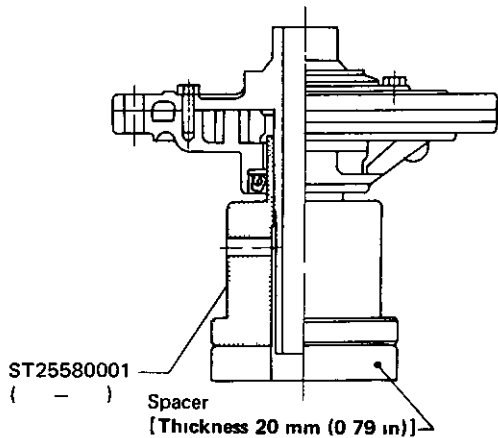


SAT540

3. Set the cover to within the run-out of the specified total indicator reading.

Total indicator reading

Less than 0.07 mm (0.0028 in)

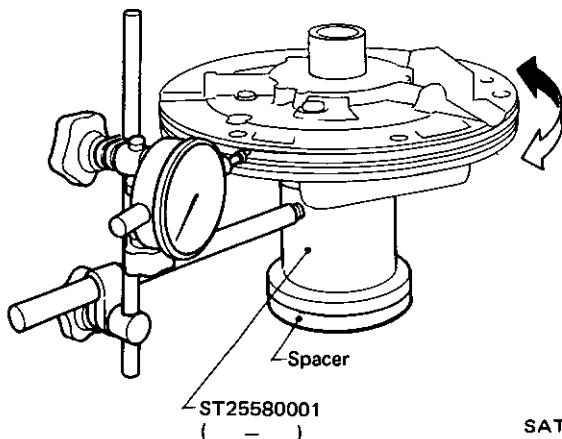


SAT541

4. Tighten pump securing bolts to the specified torque.
Recheck run-out

DISASSEMBLY


1. Remove drum support and gasket from O D. case

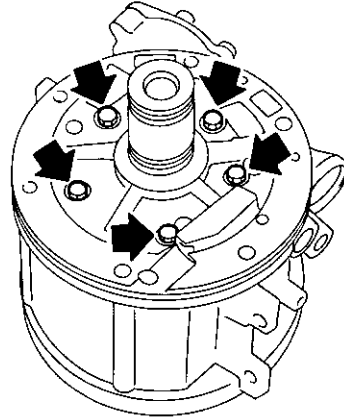

SAT531

2. Stake off retaining pin with a punch [outer dia. 1.5 to 1.8 mm (0.059 to 0.071 in)], then remove O D. cancel valve and spring

Don't stake it off from contacting face side

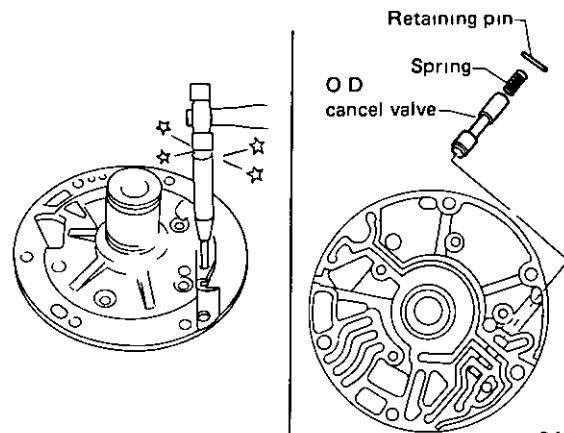


SAT723

REPAIR FOR COMPONENT PARTS

Drum Support (Cont'd)

INSPECTION

- Inspect drum support bushing and ring groove areas for wear

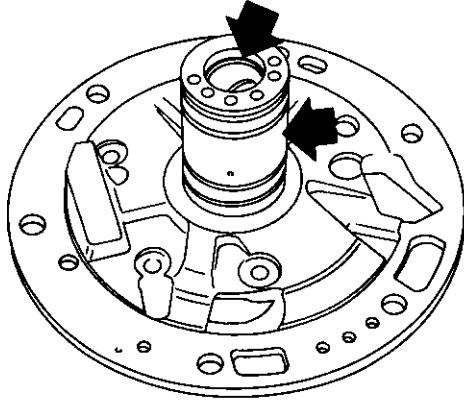

SAT542


- Measure clearance between seal ring and ring groove

Standard clearance:

0.05 - 0.20 mm (0.0020 - 0.0079 in)

Wear limit:

0.20 mm (0.0079 in)

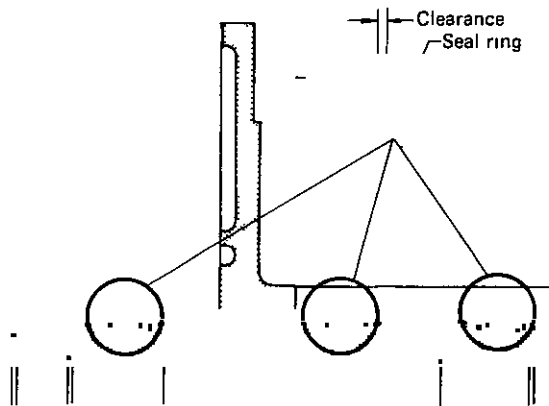

SAT545



- Inspect O.D. cancel valve & spring and all internal surfaces for damage visible wear

REPAIR FOR COMPONENT PARTS



Drum Support (Cont'd)

ASSEMBLY

1. Install O D. cancel valve and spring into drum support, then tap new retaining pins.
2. Install lubrication plug in drum support.

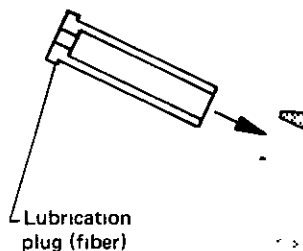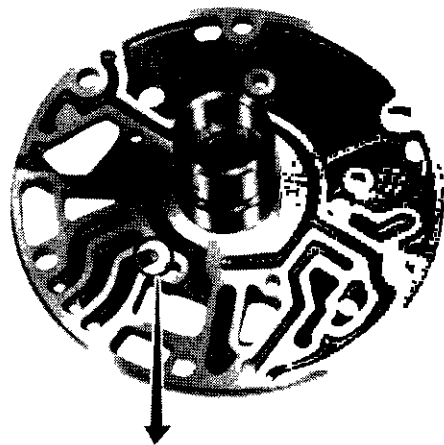


3. Install one-way orifice in O D case.

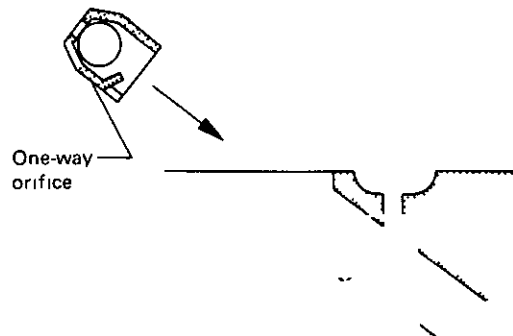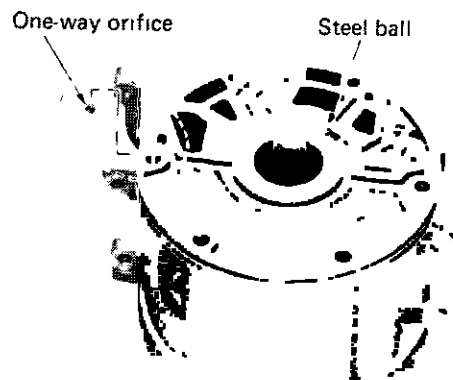

SAT282A

4. Mount oil pump assembly in Tool and suitable spacer.

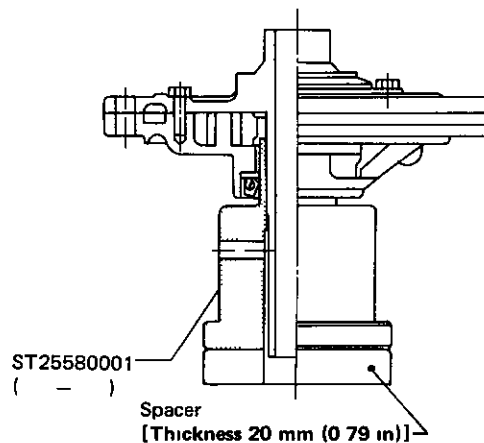


SAT540

REPAIR FOR COMPONENT PARTS

Drum Support (Cont'd)


- 5 Mount O D case, drum support and gasket in oil pump assembly

Ensure O.D. case is inserted properly into oil pump assembly.

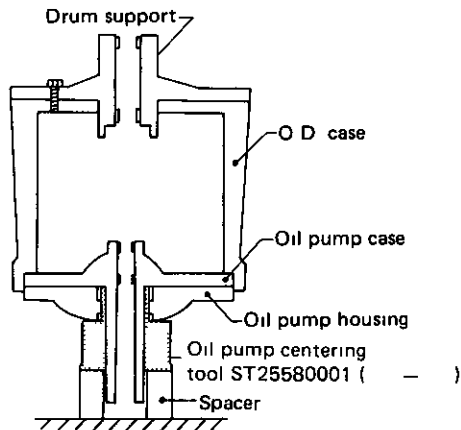


SAT547

- 6 Loosen drum support bolts before inserting Tool (J33909).

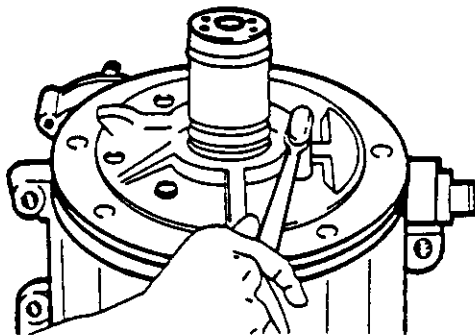


SAT935

- 7 Insert the tapered edge of Tool and install Tool until it completely passes through O D case.

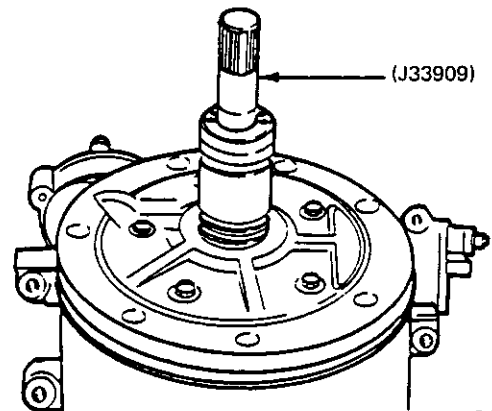

SAT936

8. Rotate Tool to ensure proper alignment
9. Tighten drum support bolts while Tool is inside O D case

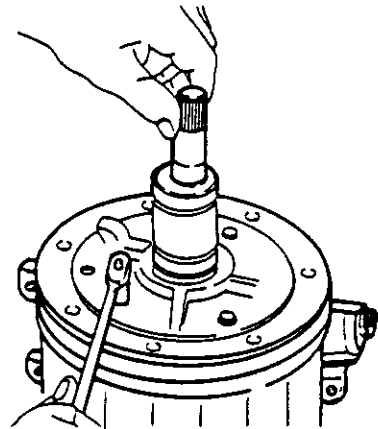


SAT937

10. Remove Tool (J33909)
11 Check to drum support is within the run-out of the specified total indicator reading

Total indicator reading:

Less than 0.05 mm (0.0020 in)

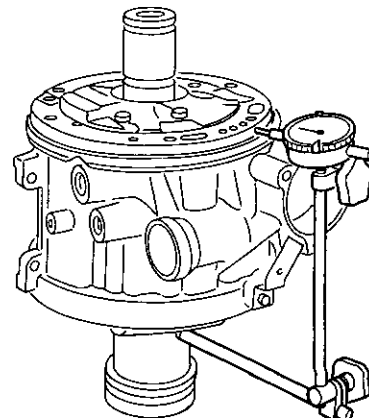


SAT600


REPAIR FOR COMPONENT PARTS

Control Valve Body

Upper body side

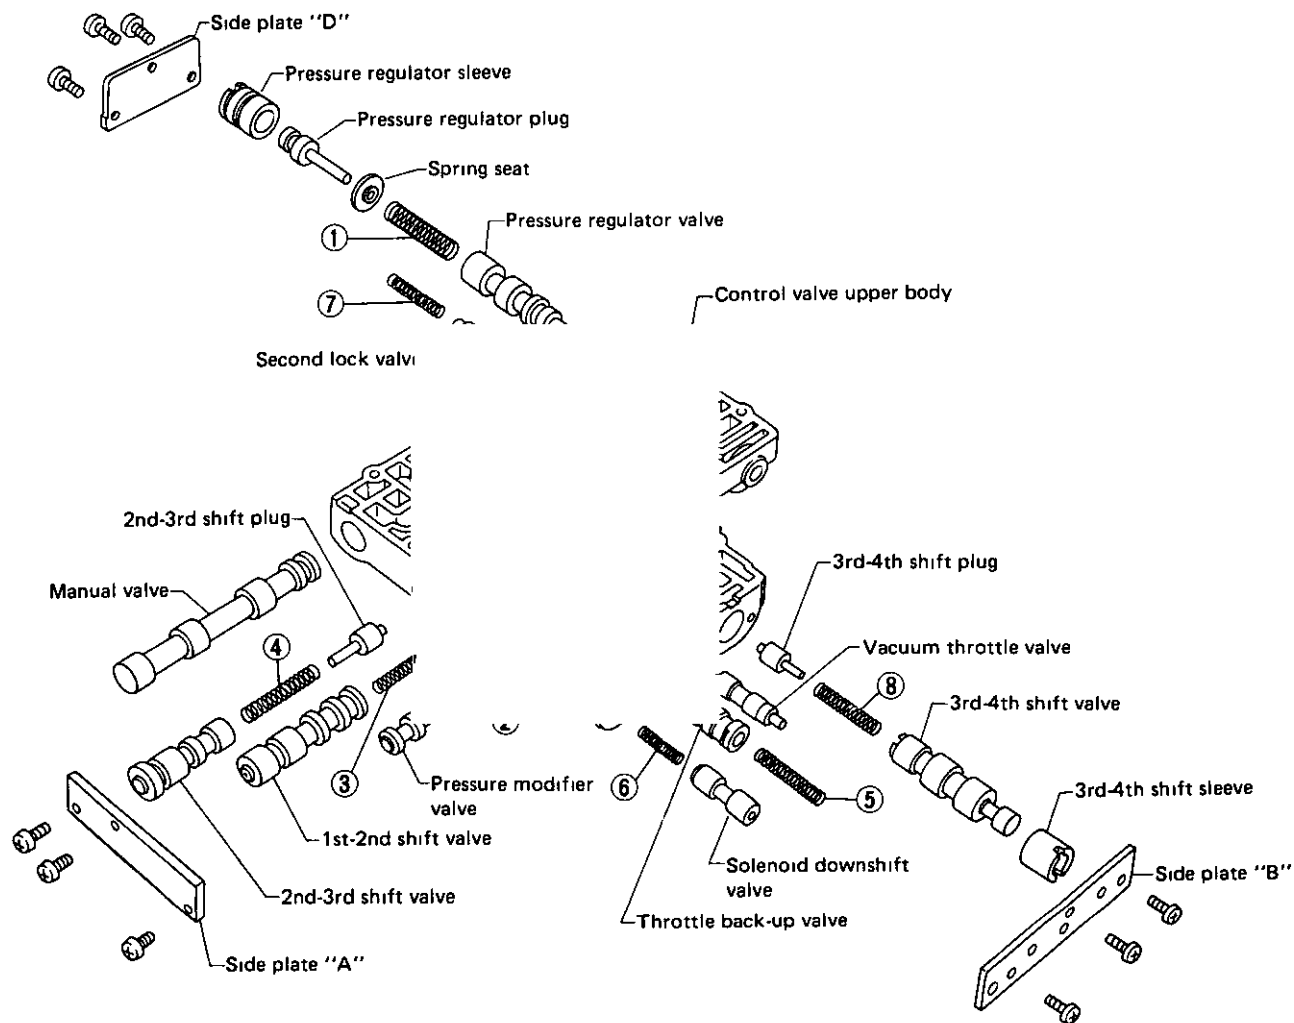

Lower body side

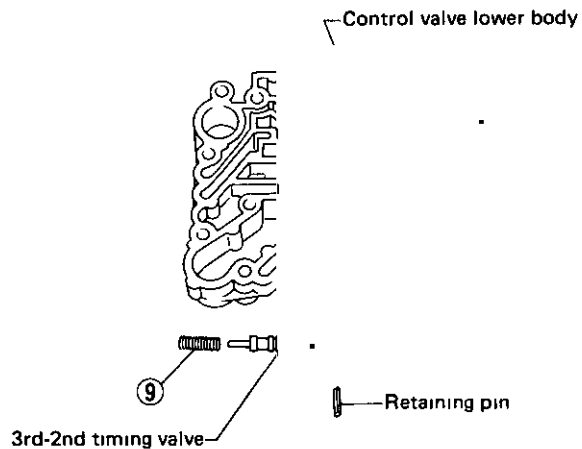


REPAIR FOR COMPONENT PARTS

Control Valve Body (Cont'd)

DISASSEMBLY


- 1 Remove oil strainer

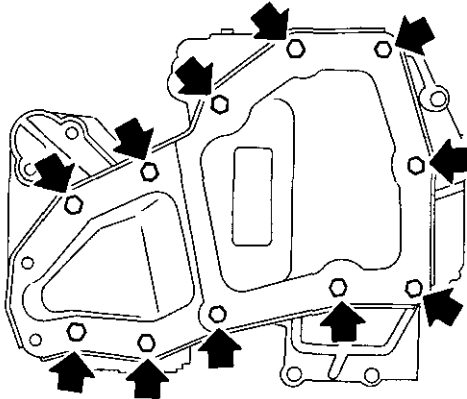

SAT564

- 2 Separate lower body, separator plate and upper body.

Be careful not to scatter or lose orifice check valve, servo orifice check valve, or throttle relief check valve (ball) and related springs.

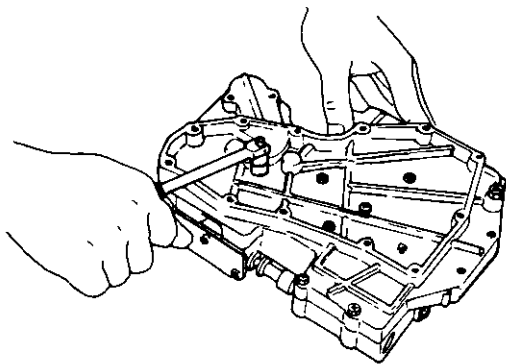

SAT067A

INSPECTION

A newly manufactured valve body represents precision manufactured valves assembled with close tolerances into precision bores of the valve body. If inspection reveals excessive clearances, 0.03 mm (0.0012 in) or more, between the valves and the valve body bores, replace the entire valve body rather than attempt rework.

If one or more valves are sticking from varnish deposits or burns resulting from deteriorated oil or overheating, you may be able to clean the valves


and valve bodies. Always use crocus cloth, which is a very fine type of cutting material. Never use emery cloth, as it is too coarse and can scratch the valves or valve bores. Scratches can lead to future deposits of varnish or foreign matter.

During cleaning, do not remove the sharp edges of the valve. When edges are rounded or scratched, entry is provided for dirt or foreign matter to work into the sides of the valves and hinder valve movement.

The valves may be cleaned using alcohol or lacquer thinner. The valve bodies can be dip cleaned with a good carburetor cleaner or lacquer thinner. Do not leave valve bodies submerged in carburetor cleaner longer than five minutes. Rinse parts thoroughly and dry.

Lubricate all parts in clean ATF before reassembly.

- 1 Check valves for signs of burning. Replace if beyond clean-up.
- 2 Check oil strainer for general condition. Replace if necessary.

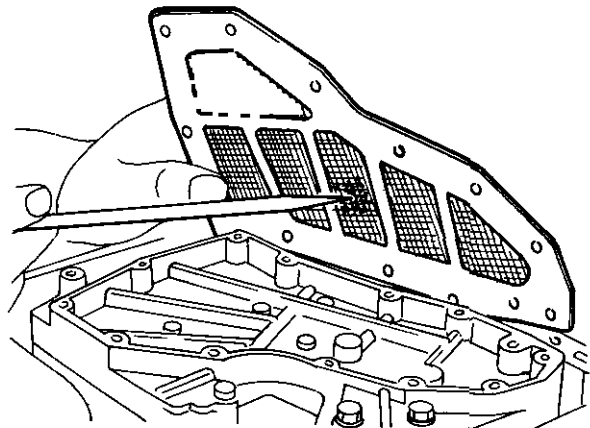


SAT045

- 3 Check separator plate for scratches or damage. Replace if necessary. Scratches or score marks can cause oil to by-pass correct oil passages and result in system malfunction.

REPAIR FOR COMPONENT PARTS

Control Valve Body (Cont'd)

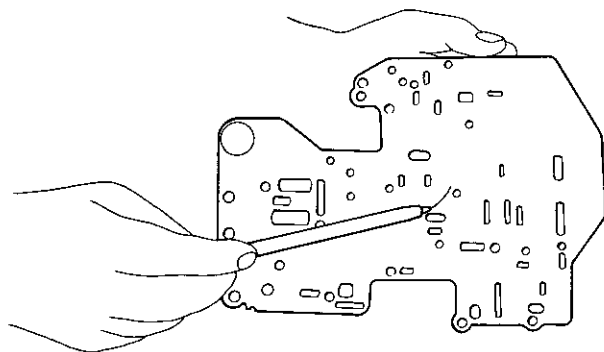

SAT046

4. Check oil passages in upper and lower valve bodies for varnish deposits, scratches or other damage that would impair valve movement. Check threaded holes and related bolts and screws for stripped threads, replace as needed.
5. Check valve springs for damage. Measure free length of valve springs. If the free length is out of specification, replace it.

Numbers stamped on valve springs listed in table below are the same as those in the figure on page AT-32.

Valve spring		Free length mm (in)
① Pressure regulator valve	VG30E	43 0 (1 693)
	VG30E turbo	38 9 (1 531)
② Pressure modifier valve		18 5 (0 728)
③ 1st- 2nd shift valve	VG30E	32 0 (1 260)
	VG30E turbo	28 3 (1 114)
④ 2nd - 3rd shift valve	VG30E	42 0 (1 654)
	VG30E turbo	39 2 (1 543)
⑤ Throttle back-up valve	VG30E	31 8 (1 252)
	VG30E turbo	36 0 (1 417)
⑥ Solenoid downshift valve		22 0 (0 866)
⑦ Second lock valve		33 5 (1 319)
Throttle relief check valve	VG30E	26 8 (1 055)
	VG30E turbo	24 9 (0 980)
Orifice check valve		15 5 (0 610)
⑧ 3rd - 4th shift valve		30 3 (1 193)
⑨ 3rd - 2nd timing valve	VG30E	23 2 (0 913)
	VG30E turbo	22 2 (0 874)

REPAIR FOR COMPONENT PARTS


Control Valve Body (Cont'd)

ASSEMBLY


- 1 Install orifice check valves, valve springs, throttle relief valve spring and steel ball in valve body

Lower valve body

Throttle relief valve

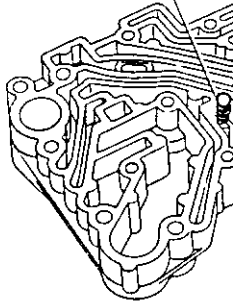

check valve
(2nd servo release)
SAT252A

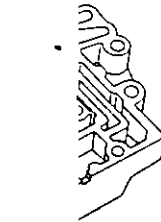


Upper valve body

Orifice check valve
(Front clutch appli



SAT766

- 2 Assemble separator plate and upper valve body on lower valve body, then tighten bolts.

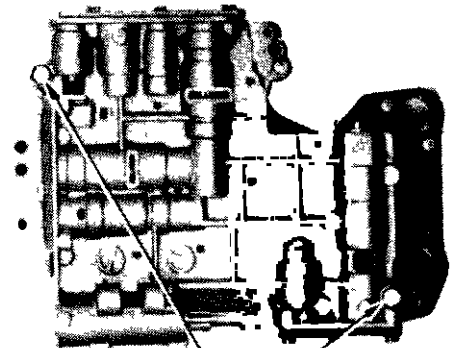


Reamer bolt

When installing these bolts, first be sure to install the two reamer bolts to their original positions.

- 3 Install oil strainer

Orifice check valve

Unit mm (in)		
Orifice check valve	Diameter "A"	Identification
2nd servo release	1.5 (0.059)	Green
Front clutch applies	2.2 (0.087)	Black

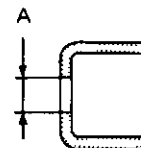


SAT924

REPAIR FOR COMPONENT PARTS

Oil Distributor

INSPECTION

- Inspect contacting surface of oil distributor and ring groove areas for wear

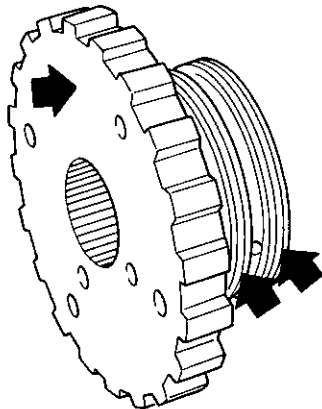

SAT725


- Measure clearance between seal ring and ring groove.

Standard clearance:

0.04 - 0.16 mm (0.0016 - 0.0063 in)

Wear limit:


0.16 mm (0.0063 in)

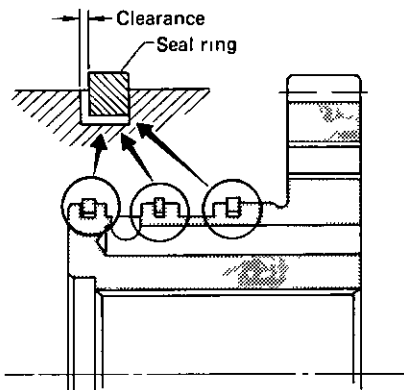

SAT726

REPAIR FOR COMPONENT PARTS

Direct Clutch

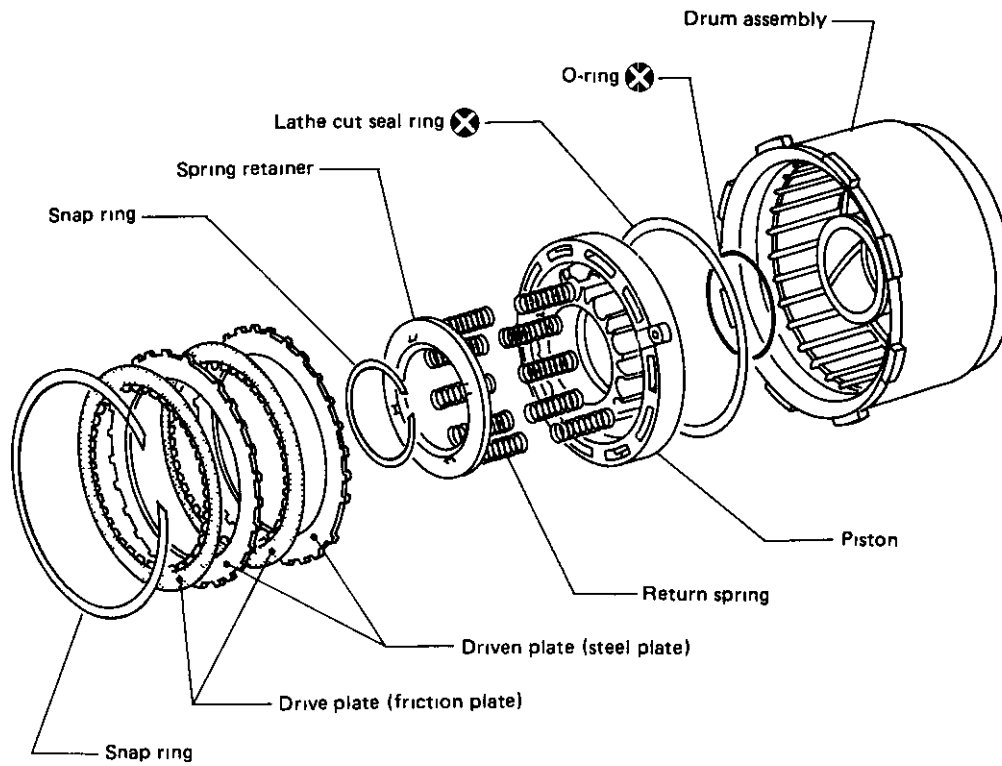


SAT228A

REPAIR FOR COMPONENT PARTS

Direct Clutch (Cont'd)


DISASSEMBLY

- Compress clutch springs and remove snap ring from spring retainer with Tool

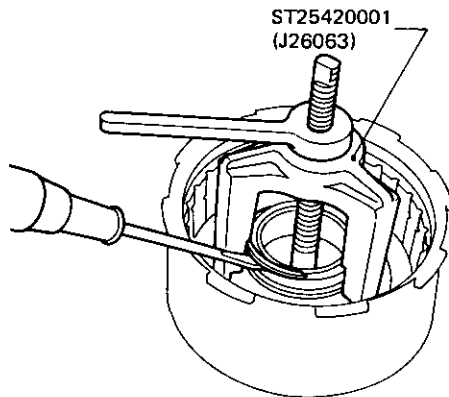

SAT551

- For easy removal of piston from drum, mount clutch on drum support. Use an air gun with a tapered rubber cup to carefully apply air pressure to loosen piston from drum.

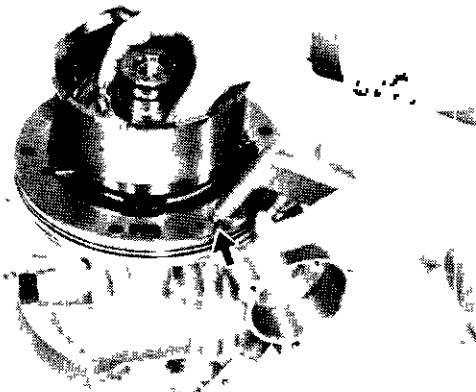

INSPECTION AND ASSEMBLY

1. Check clutch drive plate facing for wear or damage


Standard thickness:

1.50 - 1.65 mm (0.0591 - 0.0650 in)

Wear limit


1.4 mm (0.055 in)

- 2 Check for wear on snap ring, weak or broken coil springs, and warped spring retainer
- 3 Check the operation of check ball in piston using compressed air

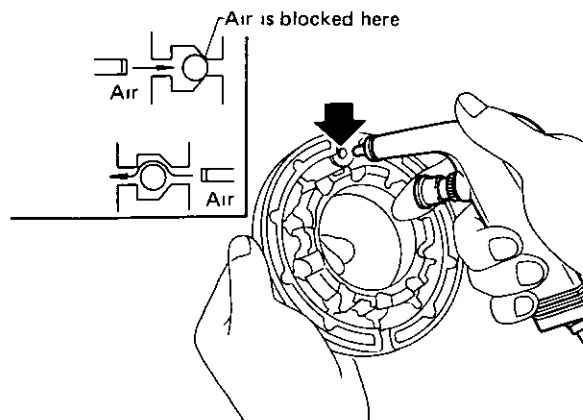


SAT553

- 4 Lubricate clutch drum hub and seals, and install inner seal and piston seal as illustrated. Be careful not to stretch seals during installation.

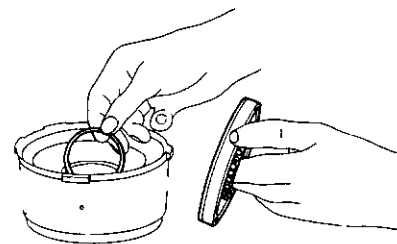

SAT031

5. Assemble piston, being careful not to allow seal to kink or become damaged during installation. After installing, turn piston by hand to ensure that there is no binding.

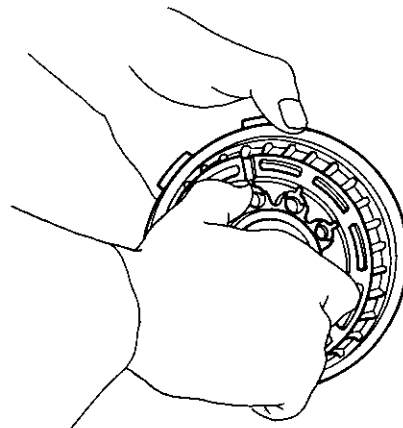


SAT032

REPAIR FOR COMPONENT PARTS

Direct Clutch (Cont'd)

- 6 Reassemble spring and retainer Reinstall snap ring Be sure snap ring is properly seated

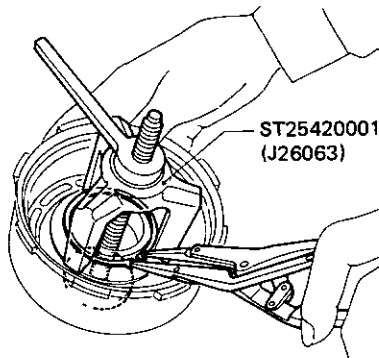


SAT028

- 7 Install driven plates, drive plates, and secure with snap ring
8 Install retainer plate, O D one-way clutch assembly, race side, and secure with snap ring.
9 Measure clearance between race side and snap ring

Specified clearance.

0 - 0.2 mm (0 - 0.008 in)

If necessary, try other race side having different thicknesses until correct clearance is obtained

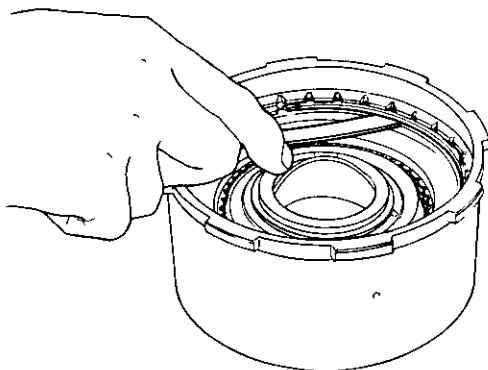


SAT034

Thickness mm (in)	Part number
0.4 (0.016)	31606-X8501
0.6 (0.024)	31606-X8502
0.8 (0.031)	31606-X8500
1.0 (0.039)	31606-X8503
1.2 (0.047)	31606-X8504

- 10 Testing direct clutch


With direct clutch assembled on drum support, direct a jet of air into hole in clutch drum for definite clutch operation

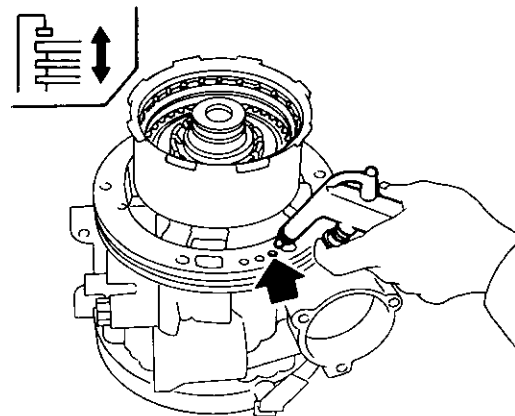


SAT621

REPAIR FOR COMPONENT PARTS


Front Clutch

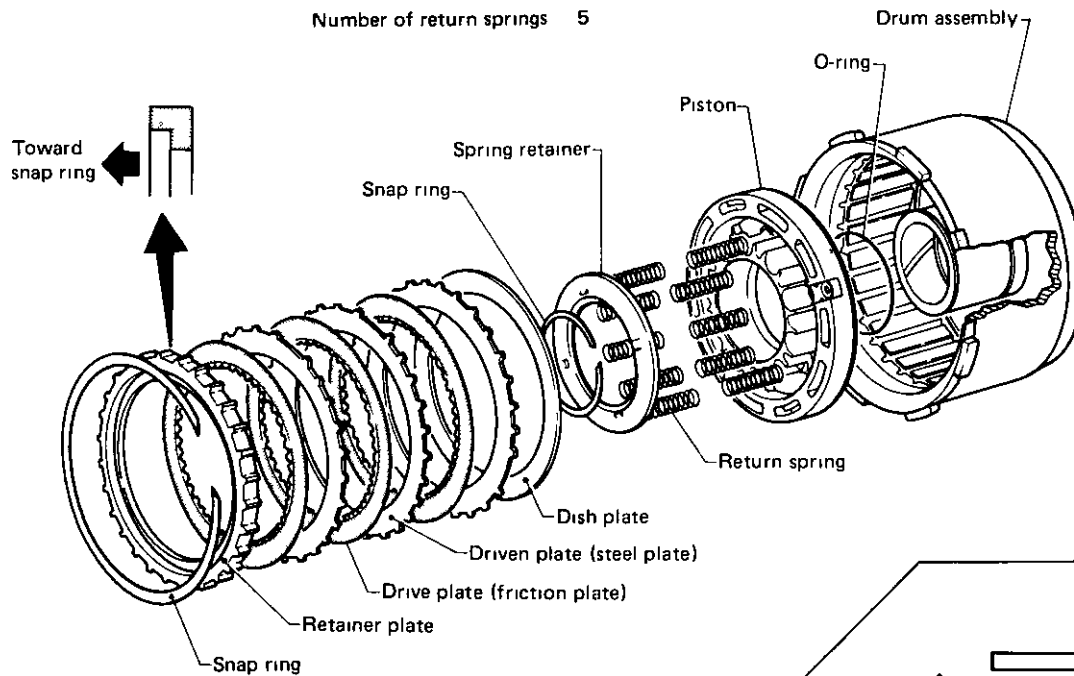


Layout of front clutch plates

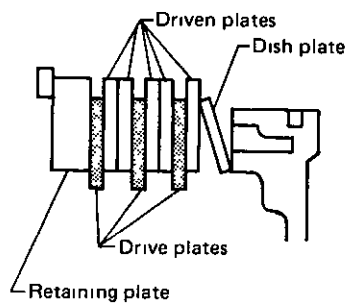

VG30E

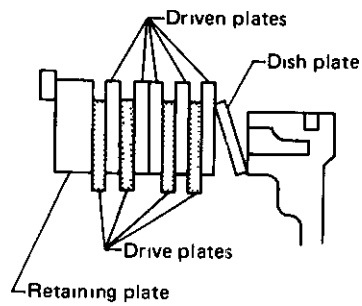

VG30E turbo

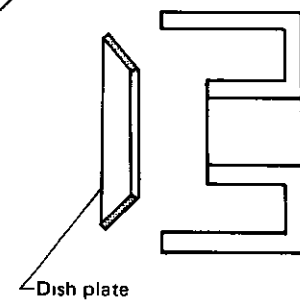


SAT286A

REPAIR FOR COMPONENT PARTS

Front Clutch (Cont'd)


DISASSEMBLY

- Compress clutch springs and remove snap ring from spring retainer with Tool

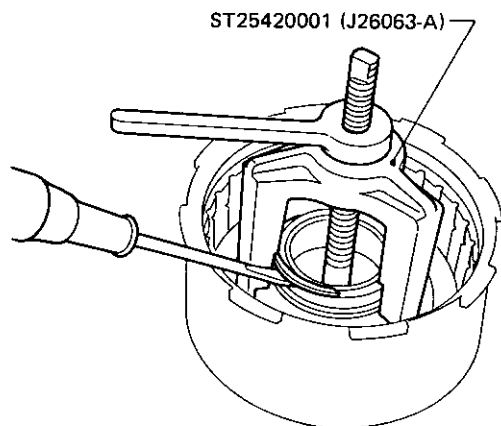

SAT551

- For easy removal of piston from drum, mount clutch on drum support. Use an air gun with a tapered rubber up to carefully apply air pressure to loosen piston from drum

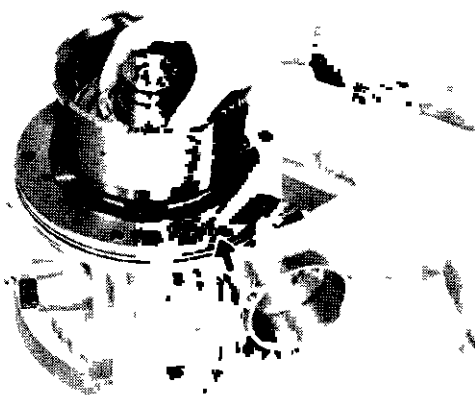

INSPECTION AND ASSEMBLY

- 1 Check clutch drive plate facing for wear or damage.


Standard thickness:

1.50 - 1.65 mm (0.0591 - 0.0650 in)

Wear limit:


1.4 mm (0.055 in)

2. Check for wear on snapping, weak or broken coil springs, and warped spring retainer
- 3 Check the operation of check ball in piston using compressed air.

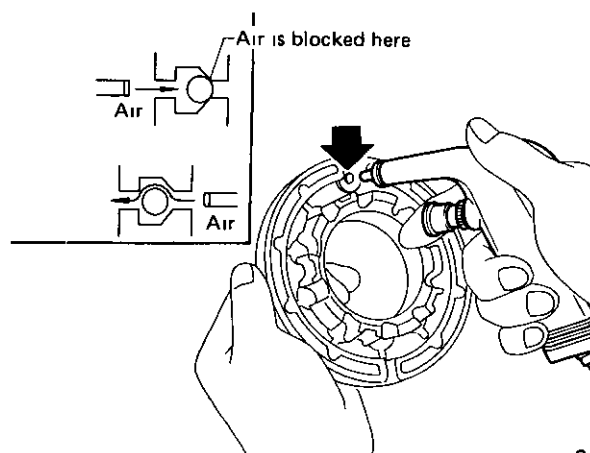


SAT553

4. Lubricate clutch drum hub and seals, and install inner seal and piston seal as illustrated. Be careful not to stretch seals during installation

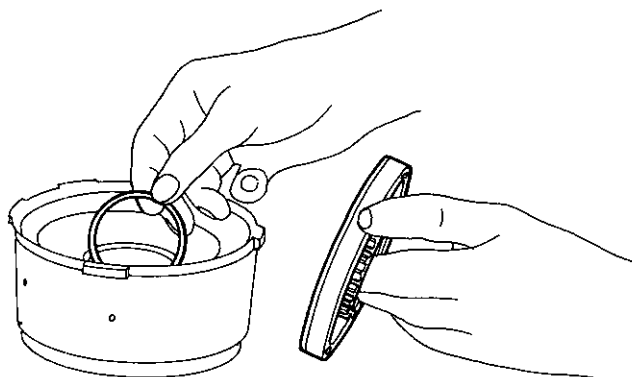

SAT031

- 5 Assemble piston, being careful not to allow seal to kink or become damaged during installation. After installing, turn piston by hand to ensure that there is no binding

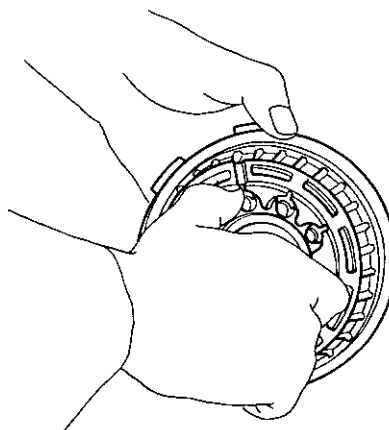


SAT032

REPAIR FOR COMPONENT PARTS


Front Clutch (Cont'd)

- 6 Reassemble spring and retainer Reinstall snap ring. Be sure snap ring is properly seated.

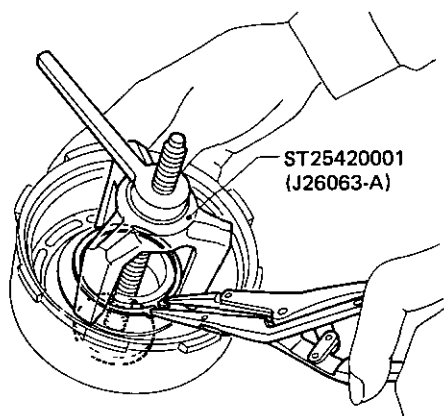

SAT028

7. Install dish plate.

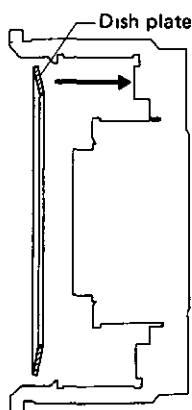


SAT233A

8. Install driven plates, drive plates, and secure with snap ring.
9. Measure clearance between retainer plate and snap ring.

Specified clearance:

1.6 - 1.8 mm (0.063 - 0.071 in)

If necessary, try other retaining plates having different thicknesses until correct clearance is obtained

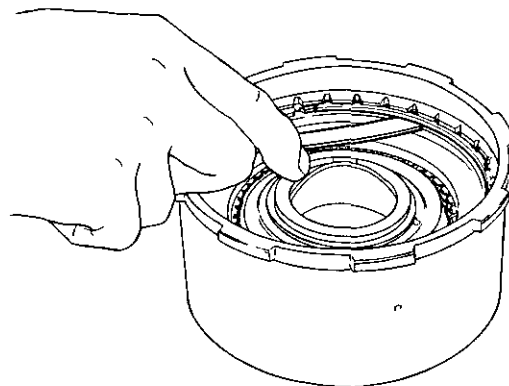


SAT034

Available retaining plate

Thickness mm (in)	Part number
5 0 (0 197)	31567-X2900
5 2 (0 205)	31567-X2901
5 4 (0 213)	31567-X2902
5 6 (0 220)	31567-X2903
5 8 (0 228)	31567-X2904
6 0 (0 236)	31567-X2905
6 2 (0 244)	31567-X2906

10. Testing front clutch (High-reverse)

With front clutch (High-reverse) assembled on drum support, direct a jet of air into hole in clutch drum for definite clutch operation.

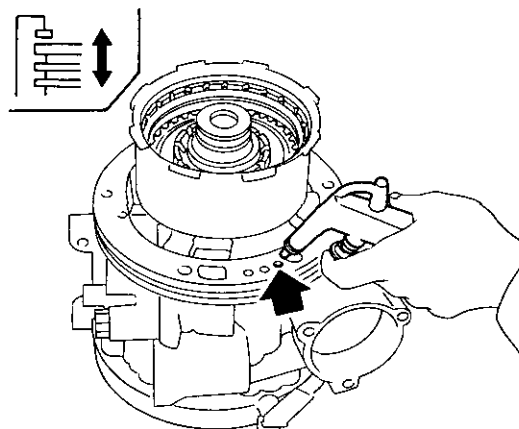


SAT621

REPAIR FOR COMPONENT PARTS

Rear Clutch (Forward)

In regard to the number of clutch sheets (drive plate and driven plate), refer to S D S

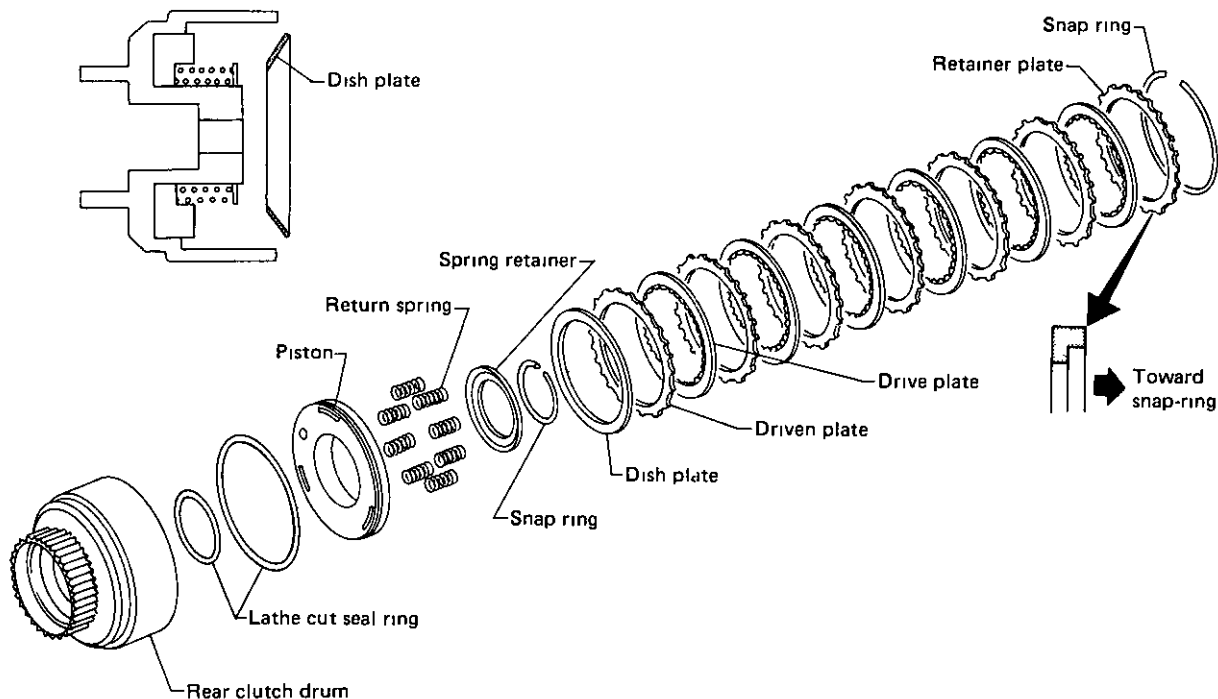


SAT728

Service procedures for rear clutch (Forward) are essentially the same as those for front clutch (High-reverse), with the following exception


Specified clearance between retainer plate and snap ring.

0.8 - 1.0 mm (0.031 - 0.039 in)

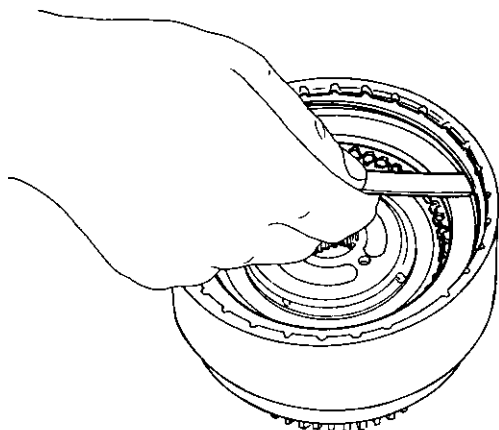

SAT035

Test rear clutch

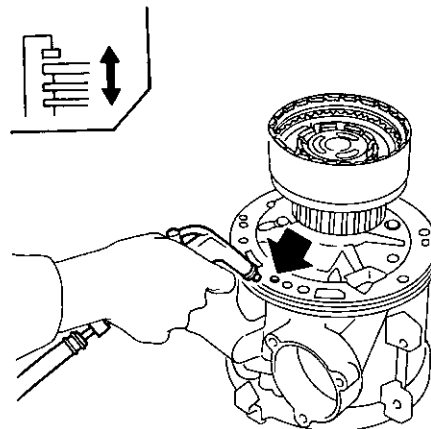


SAT622

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake

In regard to the number of clutch sheets
(drive plate and driven plate), refer to S D S

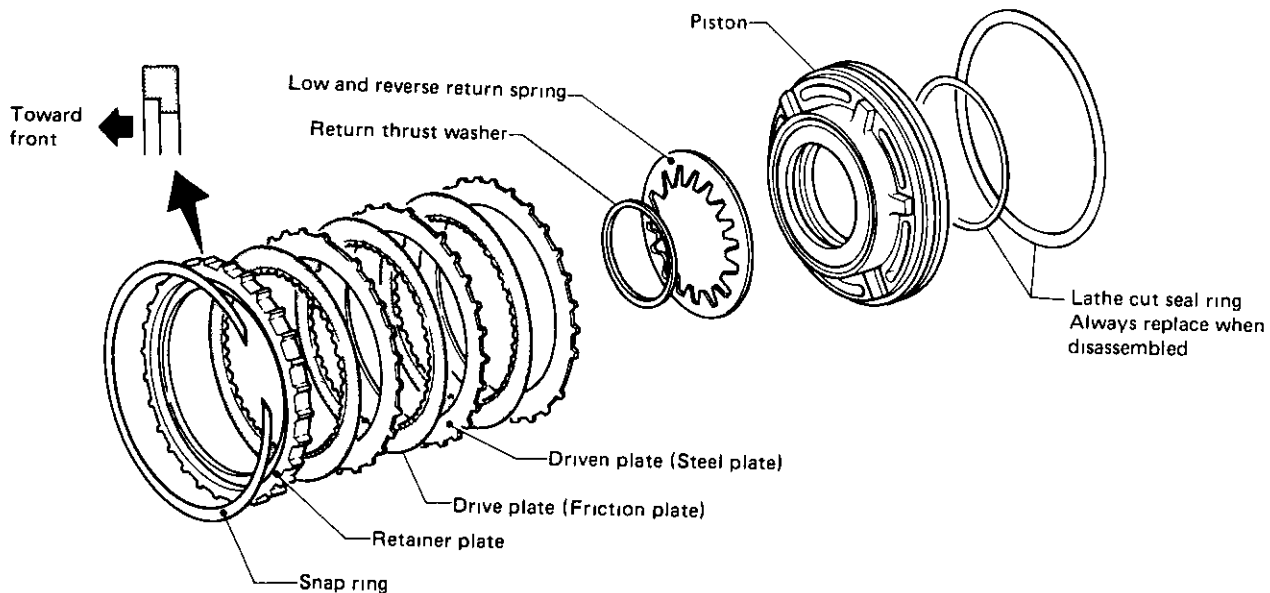

SAT972

INSPECTION

- Examine for damaged drive plate facing and worn snap ring
- Check drive plate facing for wear; if necessary, replace

Drive plate thickness:

Standard


1.90 - 2.05 mm (0.0748 - 0.0807 in)

Allowable limit

1.8 mm (0.071 in)

REPAIR FOR COMPONENT PARTS


Brake Band and Band Servo

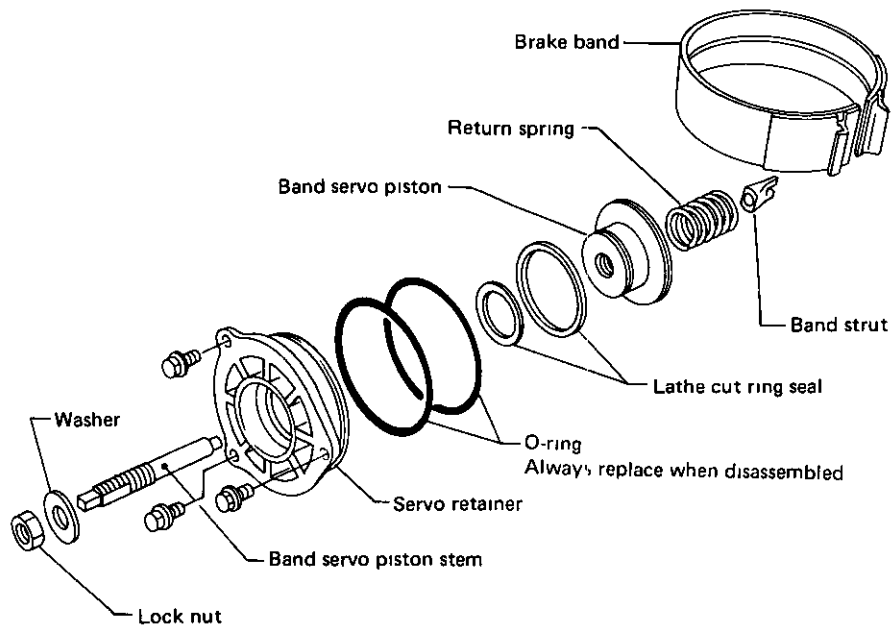

SAT559

INSPECTION

- Inspect band friction material for wear. If cracked, chipped or burnt spots are apparent, replace the band.

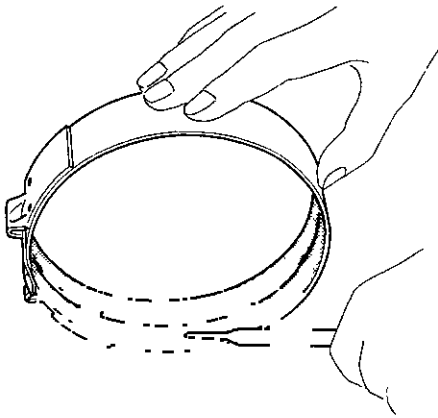


SAT327

- Check band servo components for wear and scoring

REPAIR FOR COMPONENT PARTS

Governor

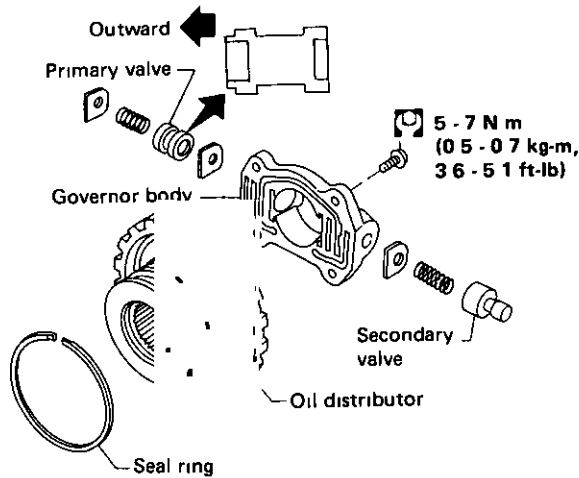

SAT560


INSPECTION

- Check governor valves and valve body for indication of burning or scratches.
- Check valve springs for damage. Measure free length of valve springs.


Valve spring		Free length mm (in)
Primary governor	VG30E	10.5 (0.413)
	VG30E turbo	21.8 (0.858)
Secondary governor	VG30E	21.7 (0.854)
	VG30E turbo	19.8 (0.780)

If any abnormalities are found, replace governor body, valves and springs as an assembly.

Accumulator

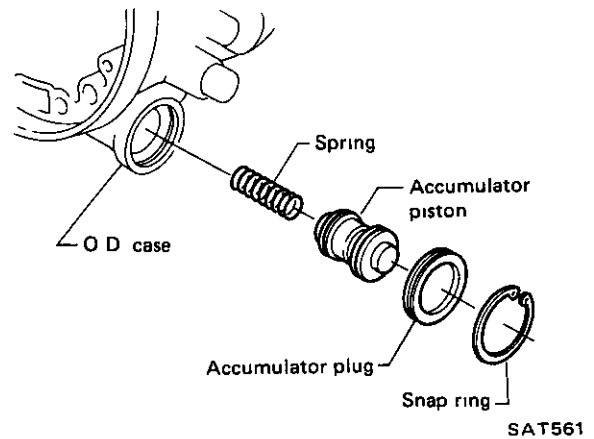

- Remove snap ring, then apply pressure to remove accumulator plug, piston and spring

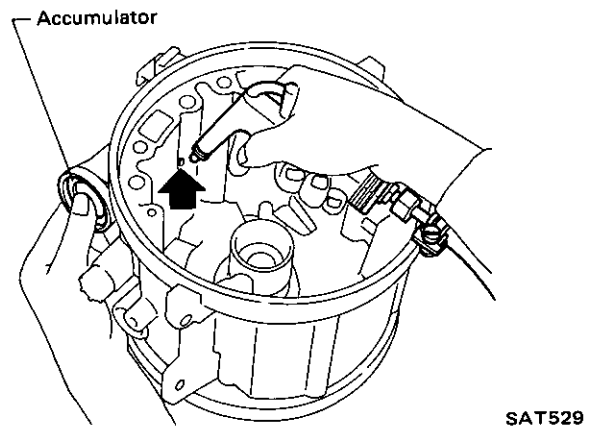

- Check accumulator components for wear and scoring.

REPAIR FOR COMPONENT PARTS

Planetary Carrier

INSPECTION


- Check clearance between pinion washer and planetary carrier with a feeler.

Standard clearance:

0.20 - 0.70 mm (0.0079 - 0.0276 in)

Wear limit:

0.80 mm (0.0315 in)

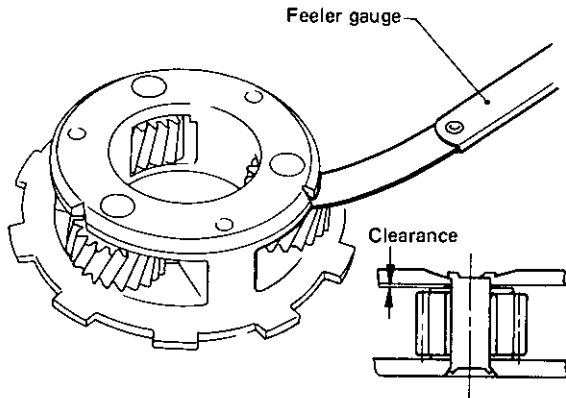


SAT730

- Check planetary gear sets and bearings for damaged or worn gears

Connecting Drum Assembly


If one-way clutch is out of order as determined during disassembly, repair it as follows:

1. Remove each snap ring, then draw out one-way clutch inner & outer race.

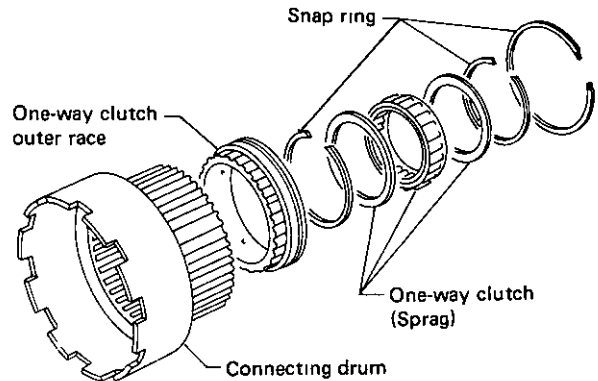

SAT562

2. Inspect one-way sprag and contacting surface for wear or burns.
Replace parts as necessary.
3. Assemble those parts

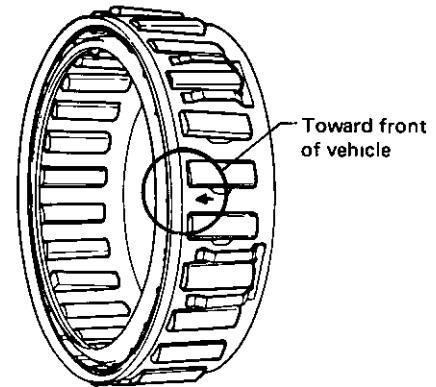


SAT563

REPAIR FOR COMPONENT PARTS

O.D. One-Way Clutch


If one-way clutch is out of order as determined during disassembly, repair it as follows

- 1 Remove each snap ring, then draw out O D one-way clutch
- 2 Inspect one-way sprag and contacting surface for wear or burns
Replace parts as necessary

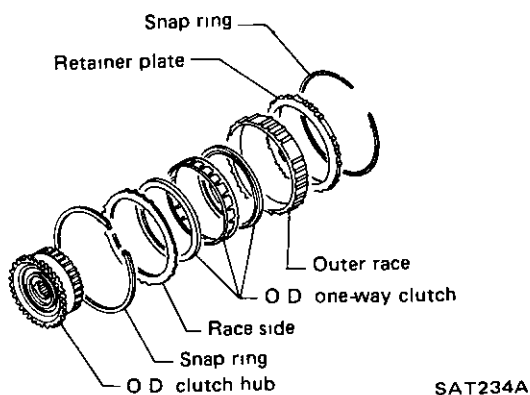


- 3 Assemble those parts

Pay attention to direction of O.D. one-way clutch.

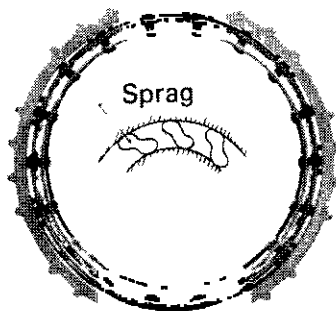


Front side

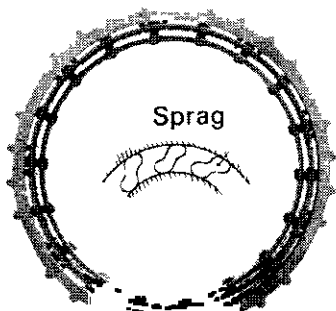

Rear side


4. After assembly, check O D one-way clutch to see if it operates properly

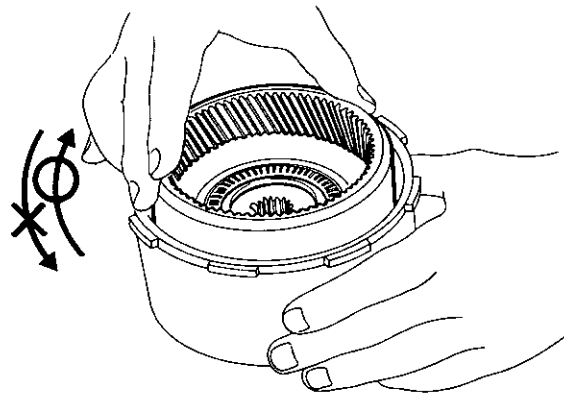

SAT235A

ASSEMBLY


When installing/assembling needle bearing, bearing race, snap ring and thrust washer, use the following illustration as a guide to installation procedures and locations

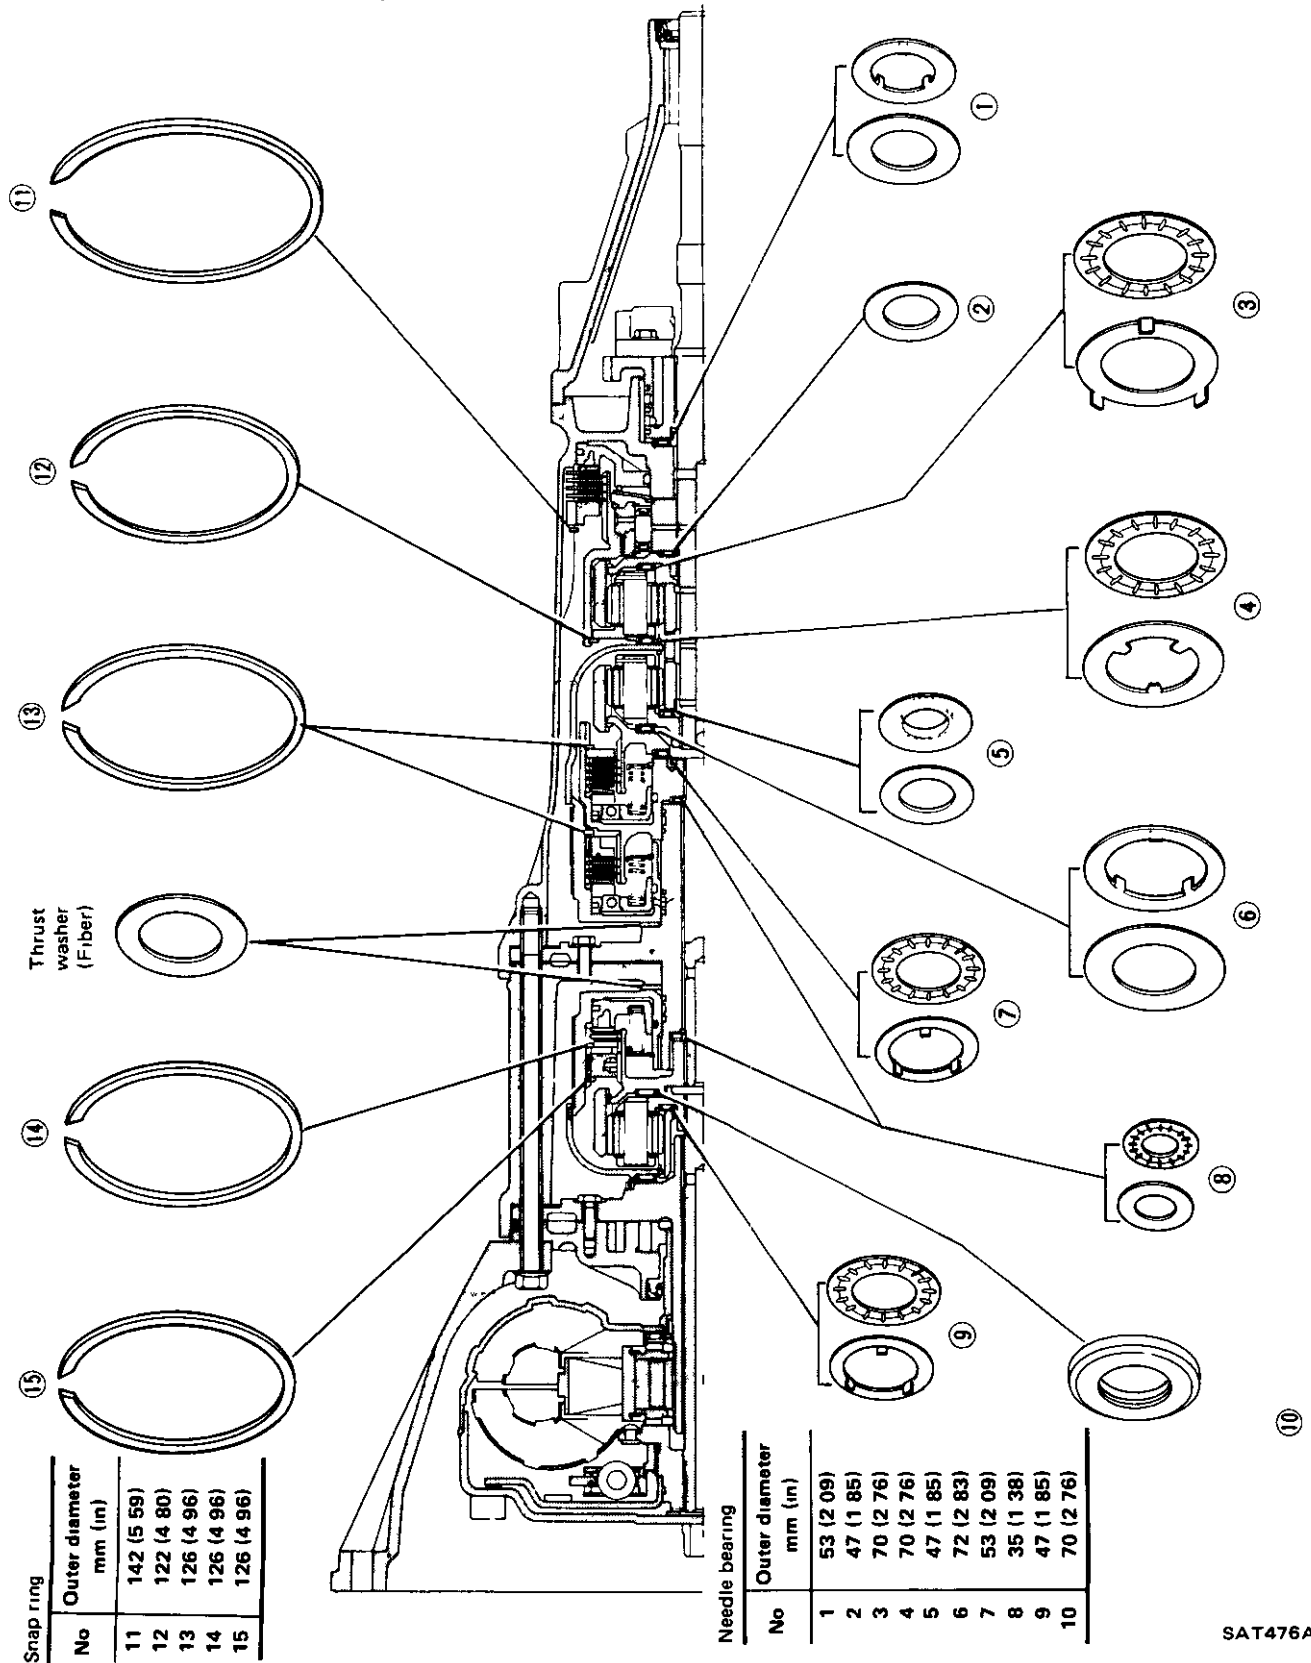

SAT476A


ASSEMBLY

1. Install parking rod, manual plate, manual plate lock nut, parking brake lever and snap rings.

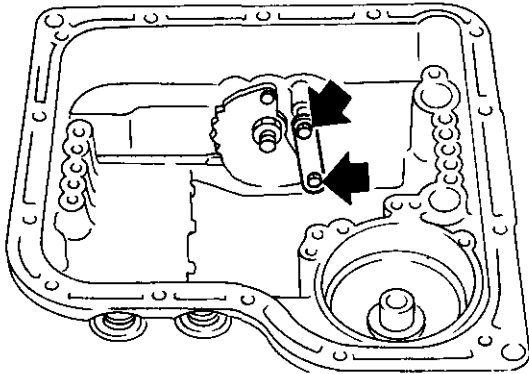


SAT720

2. Lubricate and install low and reverse piston into the case.

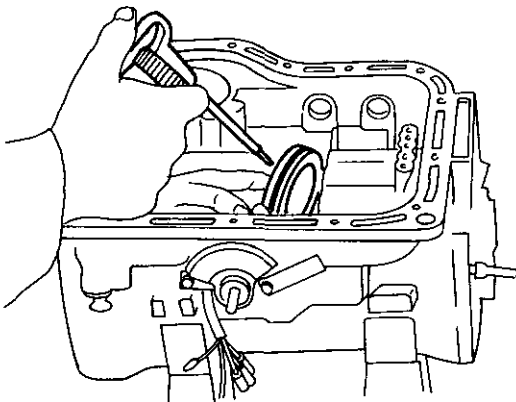

SAT048


- 3 Install thrust ring, piston return spring, thrust washer and one-way clutch inner race

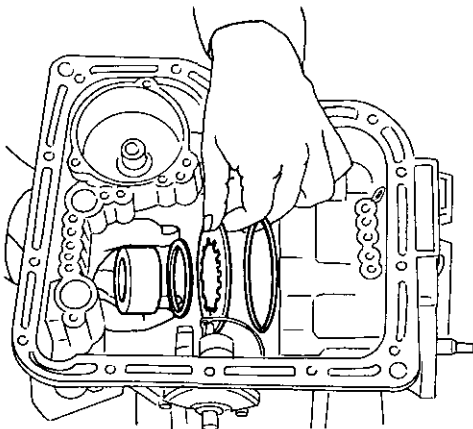

SAT021


4. Install hex-head slotted bolts

Check that return spring is centered on race before tightening.

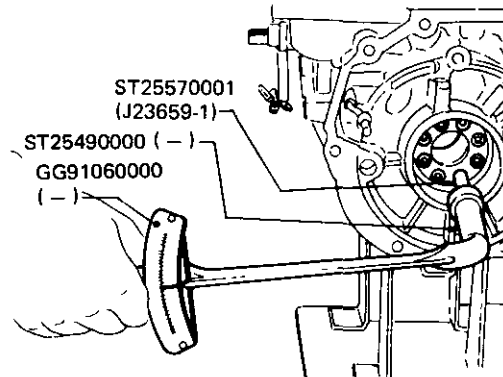

AT135

5. Install steel dished plate first, then steel and friction plates, and, finally, retaining plate and snap-ring.

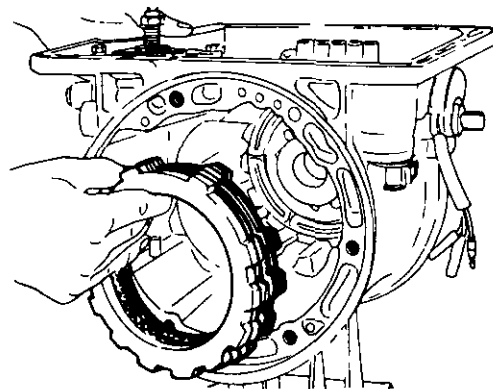


AT129

ASSEMBLY

6. After low and reverse brake has been completely assembled, measure clearance between snap ring and retainer plate. If measurement exceeds specifications adjust by replacing retainer plate with one of a different thickness

Low and reverse brake clearance:

0.80 - 1.05 mm (0.0315 - 0.0413 in)

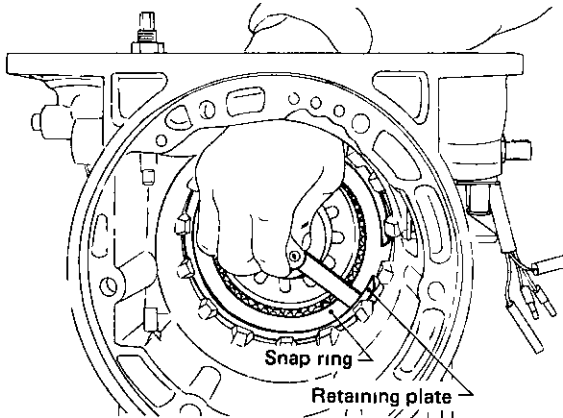


SAT049

Available retainer plates


	Thickness mm (in)	Part number
VG30E turbo	9.8 (0.386)	31667-X2900
	10.0 (0.394)	31667-X2901
	10.2 (0.402)	31667-X2902
	10.4 (0.409)	31667-X2903
	10.6 (0.417)	31667-X2904
	10.8 (0.425)	31667-X2905
VG30E	11.8 (0.465)	31667-X0300
	12.0 (0.472)	31667-X0301
	12.2 (0.480)	31667-X0302
	12.4 (0.488)	31667-X0303
	12.6 (0.496)	31667-X0304
	12.8 (0.504)	31667-X0305

7. Check low and reverse brake operation with compressed air.

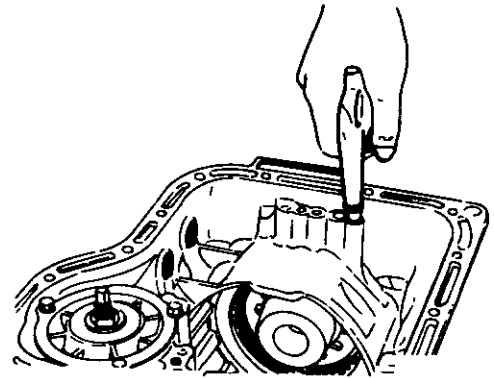


AT158

8. Install governor thrust washer and needle bearing

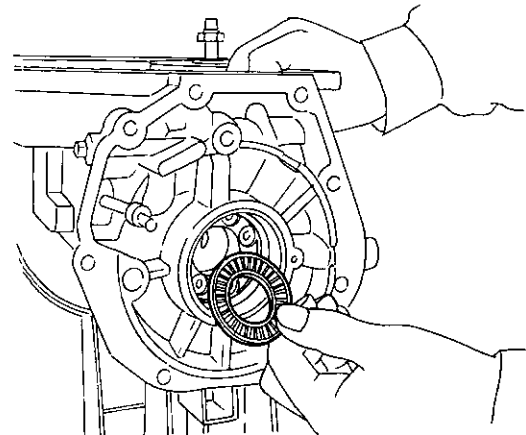

SAT050


9. Install output shaft and governor distributor into case

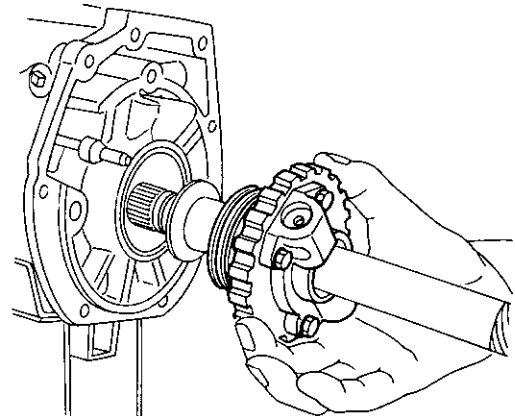

SAT731


ASSEMBLY

- 10 Install connecting drum with sprag by rotating drum clockwise.

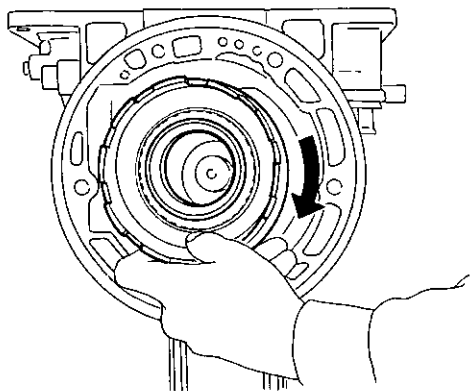


SAT732

11. Check one-way clutch to see if it operates properly.

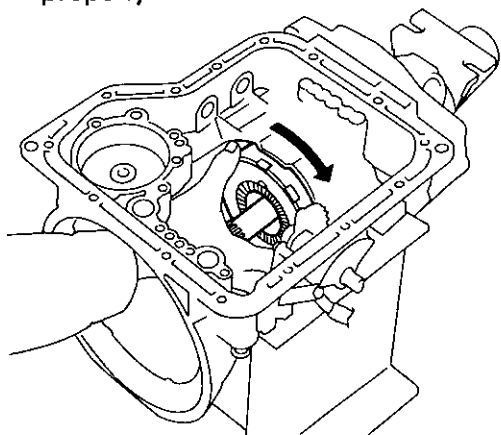


SAT536

12. Install rear internal gear.

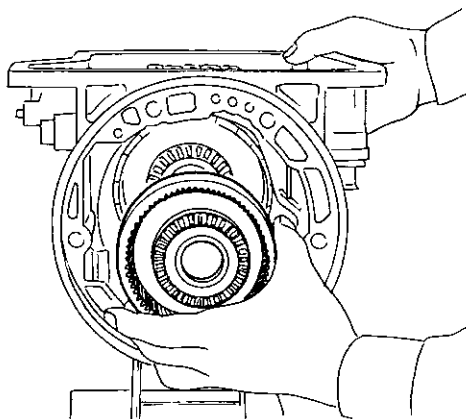


SAT054

13. Install snap-ring on shaft.

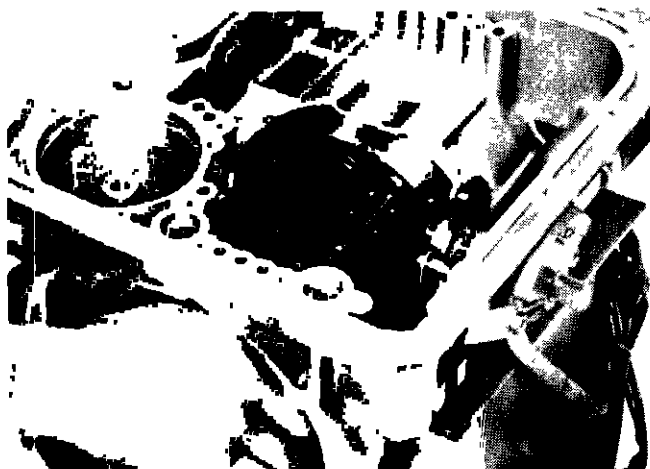


- 14 Secure thrust bearing and thrust washer with vaseline and install rear planetary carrier.

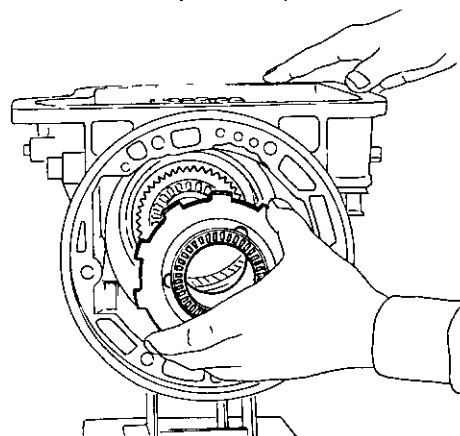

SAT055

15. Install rear planetary carrier snap ring.


If you have insufficient space to install snap ring into drum groove, pull connecting drum forward as far as possible.

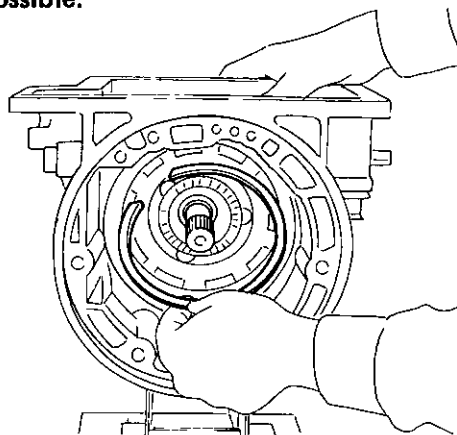

SAT056


ASSEMBLY

16. Adjust end play as follows

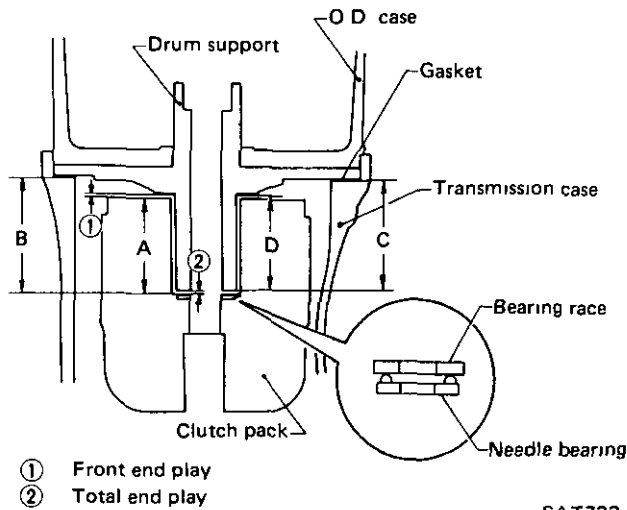


SAT733

- 1) Assemble front internal gear, front planetary carrier and connecting shell. Secure thrust bearing with vaseline.

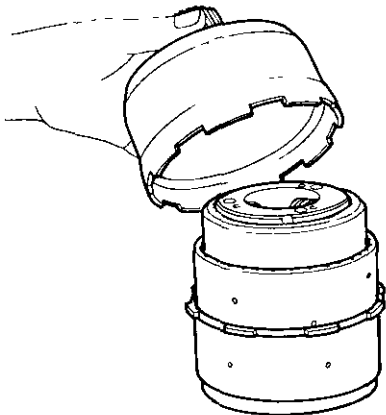

SAT057

- 2) Install assembly into transmission case. Check that parts are properly seated before proceeding with measurements.

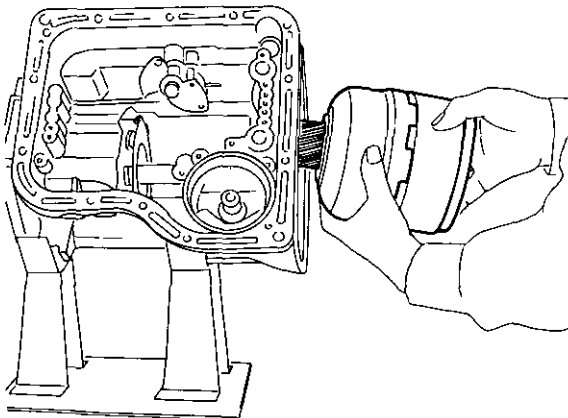


SAT058

3) Adjust front end play.

- a Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined surface of transmission case (no gasket). Position bridge legs so short end of legs is down, and adjust legs to fit onto case properly. Allow gauging cylinder to rest on top of thrust washer surface of clutch pack. Now lock gauging cylinder in position with thumbscrew.




- b. Remove thrust washer from drum support.
- c. Now insert J34290-12 (gauging plunger) into gauging cylinder. Lock gauging plunger by tightening thumbscrew.

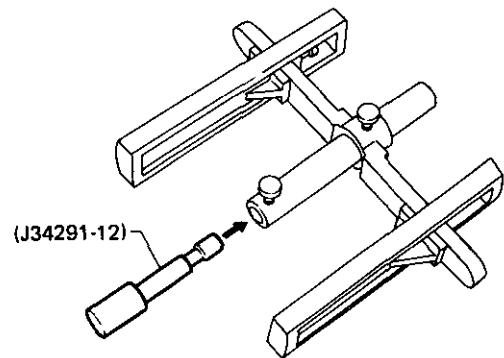


SAT496A

- d Place bridge, gauging cylinder and gauging plunger onto machined surface of drum support. Loosen plunger set screw and allow plunger to drop onto drum support thrust washer surface. Now lock gauging cylinder in position with thumbscrew.

ASSEMBLY

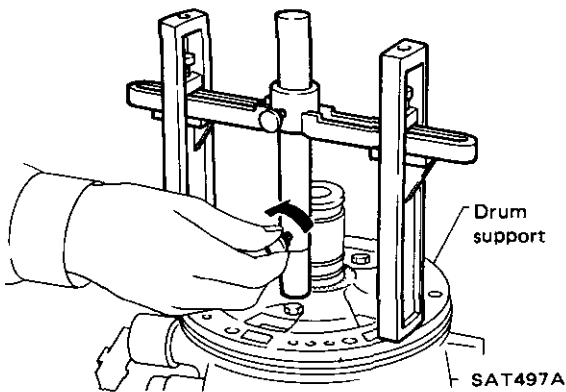

- e Use feeler gauge to measure gap between gauging cylinder and shoulder of gauging plunger

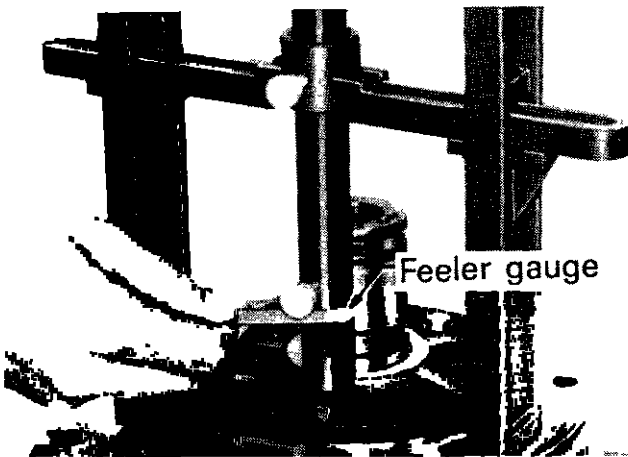

- f Use your feeler gauge measurement and following thrust washer chart to select correct washer thickness to give you proper total end play.



Available front clutch thrust washer

Thickness mm (in)	Part number
1.3 (0.051)	31528-X0107
1.5 (0.059)	31528-X0105
1.7 (0.067)	31528-X0106
1.9 (0.075)	31528-X0100
2.1 (0.083)	31528-X0101
2.3 (0.091)	31528-X0102
2.5 (0.098)	31528-X0103
2.7 (0.106)	31528-X0104


4. Adjust total end play

- a. Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined sur-

face of transmission case (no gasket). Position bridge legs so short end of legs is down, and adjust legs to fit onto case properly. Allow gauging cylinder to rest on top of needle bearings in forward clutch. Now lock gauging cylinder in position with thumbscrew.

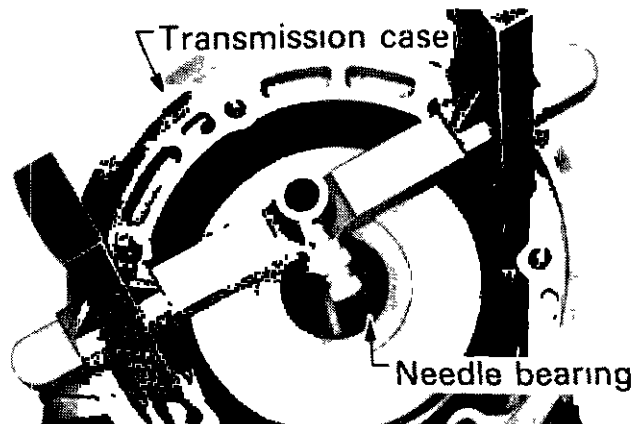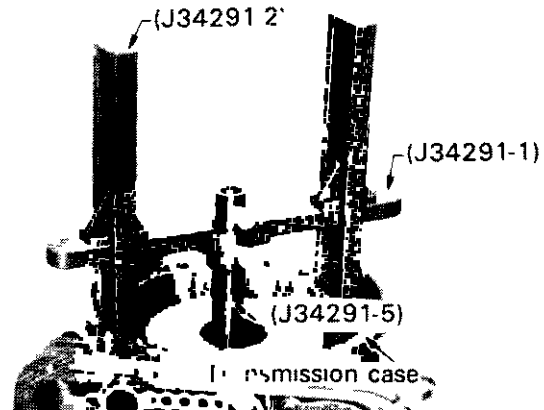

- b Now insert J34291-13 (gauging plunger) into gauging cylinder. Lock gauging plunger by tightening thumbscrew

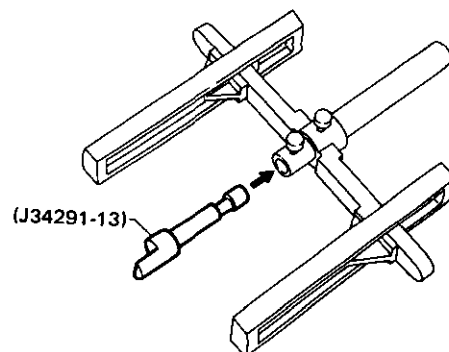


SAT498A


- c Remove oil pump cover bearing race from drum

ASSEMBLY

- d. Place bridge, gauging cylinder, and gauging plunger onto machined surface of drum support. Loosen plunger set screw and allow plunger to rest on top of drum support. Now lock plunger thumbscrew.

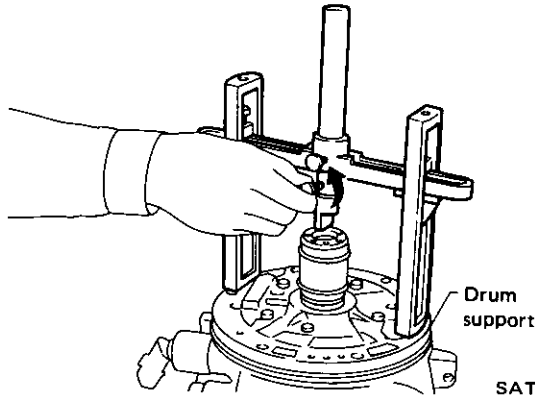

- e. Use feeler gauge to measure gap between gauging cylinder and shoulder of gauging plunger.

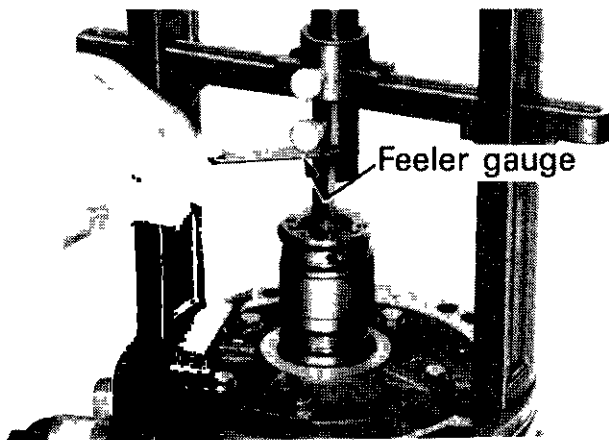


- f. Use your feeler gauge measurement and following bearing race chart to select correct race to give you proper front end play.


Available oil pump cover bearing race

Thickness mm (in)	Part number
1.2 (0.047)	31556-X0100
1.4 (0.055)	31556-X0101
1.6 (0.063)	31556-X0102
1.8 (0.071)	31556-X0103
2.0 (0.079)	31556-X0104
2.2 (0.087)	31556-X0105

- 17 Adjust O.D. end play as follows

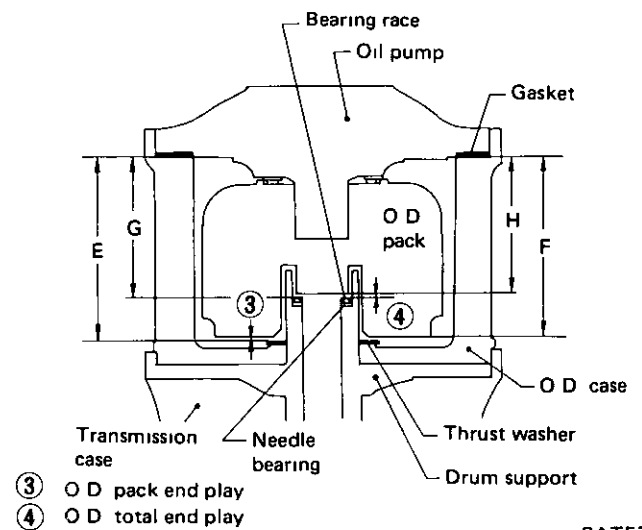


- 1) Adjust O.D. total end play
 - a. Remove O.D. bearing race from direct clutch drum support. Leave needle thrust washer in place.
 - b. Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined surface of O.D. case. Position bridge legs so short end of legs is down (toward drum support), and adjust legs to fit on case properly. Allow gauging cylinder to rest inside direct drum support on top of needle bearing. Now lock gauging cylinder in position with thumbscrew.

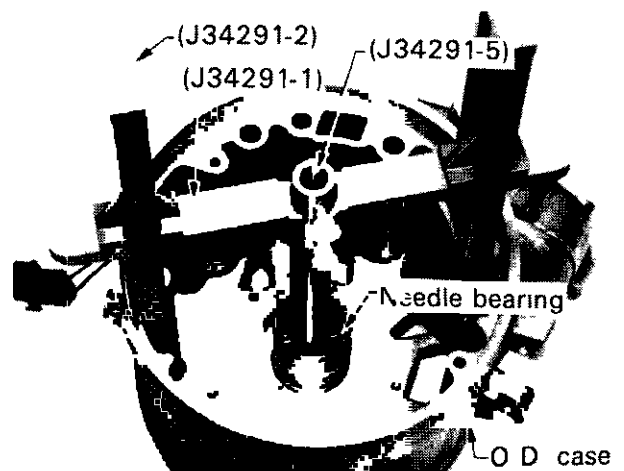


ASSEMBLY

- c Put oil pump bearing and O D planetary gear assembly on pump

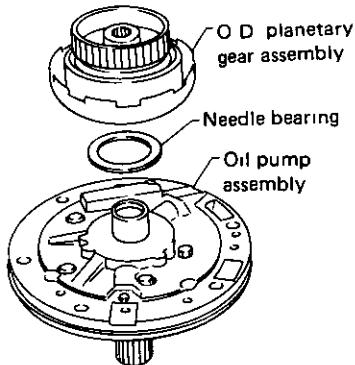


SAT500A

- d Now insert J34291-13 (gauging plunger) into gauging cylinder. Lock gauging plunger by tightening thumbscrew.

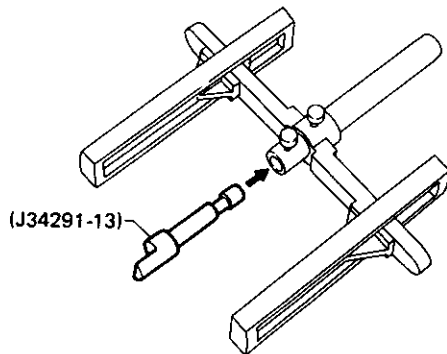


SAT501A

- e Place bridge, gauging cylinder, and gauging plunger on machined surface of oil pump. Loosen plunger set screw and allow plunger to rest on bearing surface of O D internal gear. Now lock plunger in position with thumbscrew.

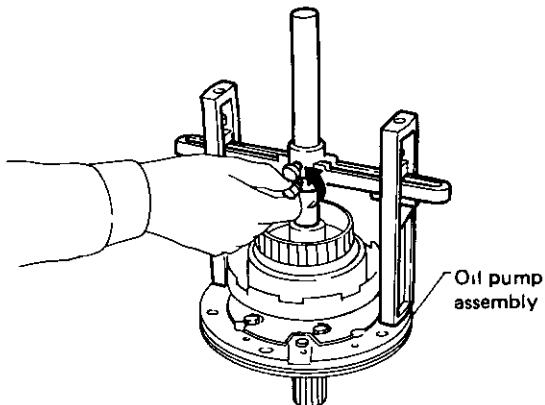

SAT502A

- f Use feeler gauge to measure gap between gauging cylinder and shoulder of gauging plunger.

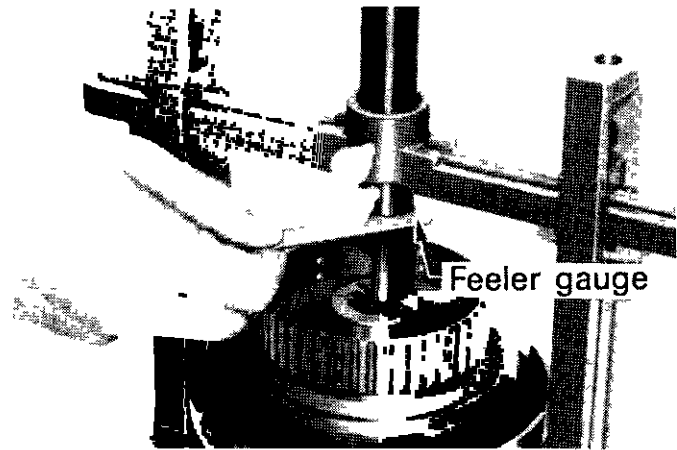


- g Use your feeler gauge measurement and following O D bearing race chart to select correct race thickness to give you proper O D total end play.

Available O D bearing races

Thickness mm (in)	Part number
1.2 (0.047)	31603-X8600
1.4 (0.055)	31603-X8601
1.6 (0.063)	31603-X8602
1.8 (0.071)	31603-X8603
2.0 (0.079)	31603-X8604
2.2 (0.087)	31603-X8605

- 2) Adjust O D. pack end play


- a Put thrust needle bearings and O D pack on oil pump.

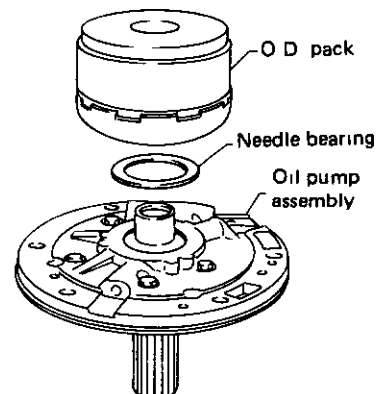


SAT503A

ASSEMBLY

- b Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined surface of oil pump (no gasket) Position bridge legs so that long end of legs is down (to pump) and adjust legs to fit onto oil pump properly Allow gauging cylinder to rest on top of thrust washer surface of direct clutch drum Now lock gauging cylinder in position with thumbscrew.

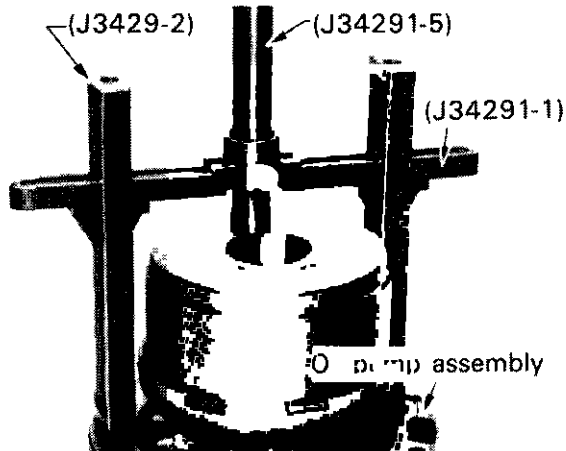


- c Remove O D thrust washer from O D drum support
d. Insert J34291-12 (gauging plunger) into gauging cylinder Lock gauging plunger by tightening thumbscrew.

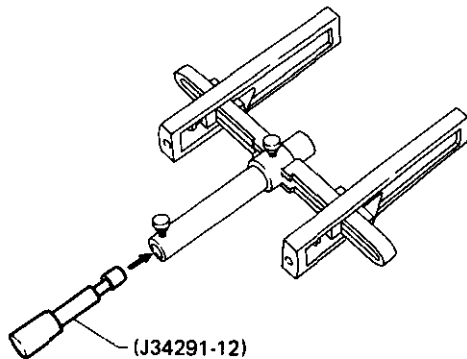

SAT504A

- e Place bridge, gauging cylinder, and gauging plunger onto machined surface of O.D case. Loosen plunger set screw and allow plunger to rest on machined thrust washer surface in O D case Now lock plunger thumbscrew

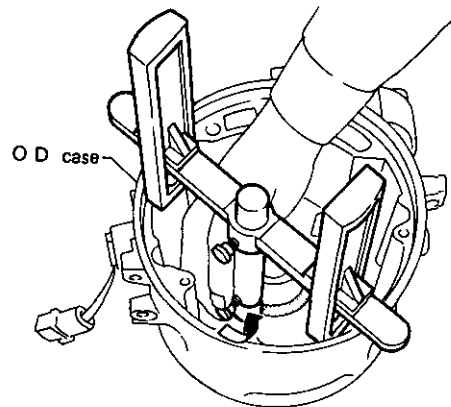

SAT505A

- f Use feeler gauge to measure gap between gauging cylinder and shoulder of gauging plunger.




- g Use your feeler gauge measurement and following thrust washer chart to select correct washer thickness for proper total O.D pack end play

Available O.D. thrust washer

Thickness mm (in)	Part number
1.3 (0.051)	31528-X0107
1.5 (0.059)	31528-X0105
1.7 (0.067)	31528-X0106
1.9 (0.075)	31528-X0100
2.1 (0.083)	31528-X0101
2.3 (0.091)	31528-X0102
2.5 (0.098)	31528-X0103
2.7 (0.106)	31528-X0104


ASSEMBLY

- 18 Install brake band, band strut, and band servo.
Lubricate servo O-rings before installing

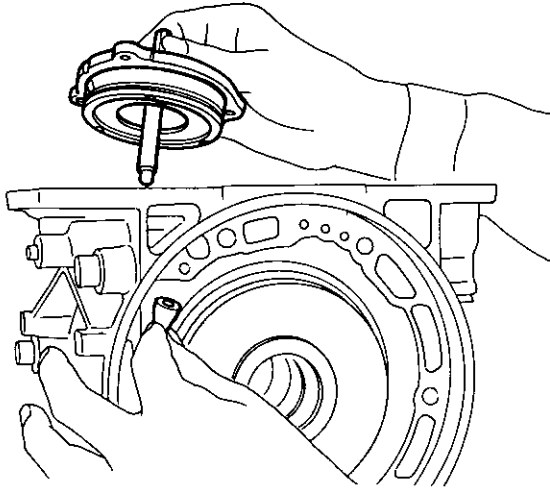

SAT066


- 19 Install and tighten the retainer bolts.
Loosen piston stem

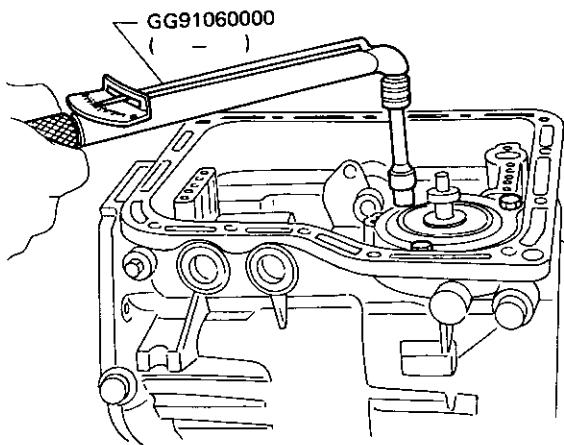

SAT067


20. Tighten piston stem of brake band servo with finger enough to prevent brake band and strut from falling out

Do not adjust brake band at this time.

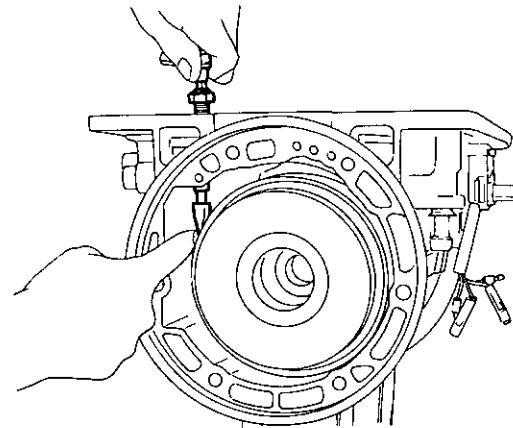

SAT068


- 21 Apply vaseline to bearing race and thrust washer, then mount them on drum support

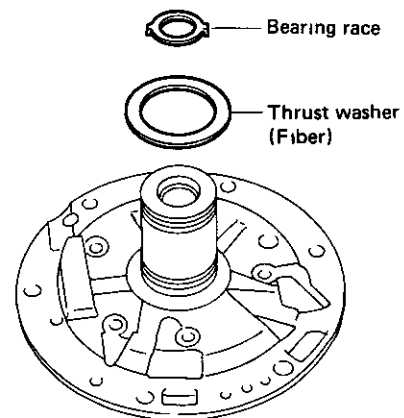


SAT573

- 22 Mount drum support gasket (A) on drum support after coating with vaseline. Apply A.T.F. to O-ring of drum support. Align drum support with O.D case to transmission case and install.

Identification point of gasket

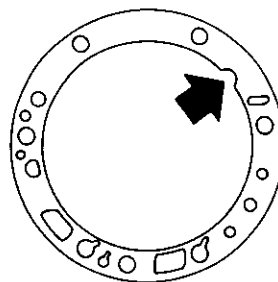

Between oil pump and O.D case (B)

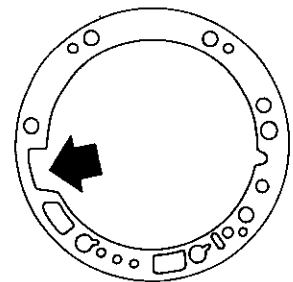

Between drum support to transmission case (A)


SAT624

ASSEMBLY

23. Apply A.T.F. to O-ring of drum support, then install drum support and O.D. case.


Before installing drum support and O.D. case on transmission case, ensure that they have been centered properly. Refer to Component Parts for Drum Support.

24 Temporarily tighten O.D case with two converter housing securing bolts.

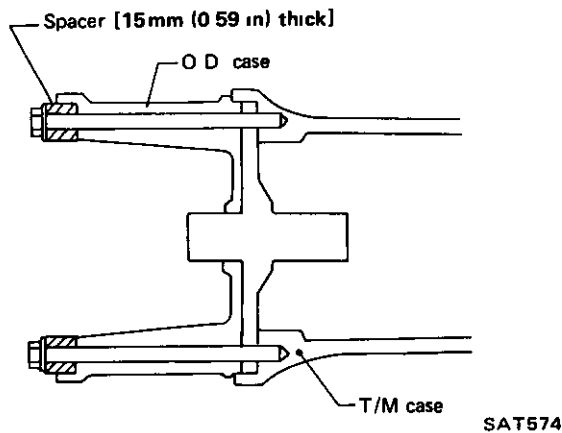


25 Insert intermediate shaft


Be careful of shaft direction.

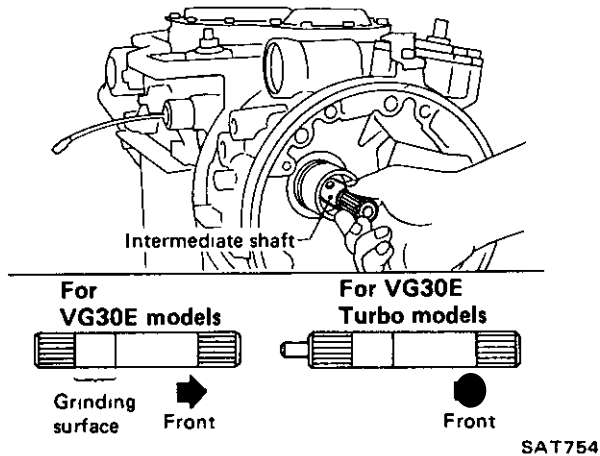


26. Adjust 2nd brake band. Tighten piston stem to the specified value. Back off three full turns and secure with lock nut.

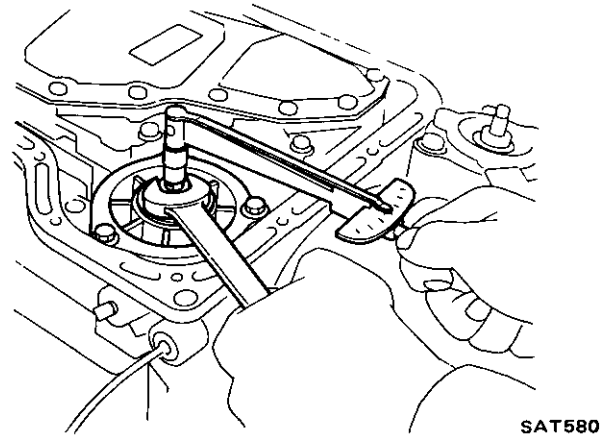

27 Lubricate O.D. servo O-rings, then install O D band servo, brake band and band strut.

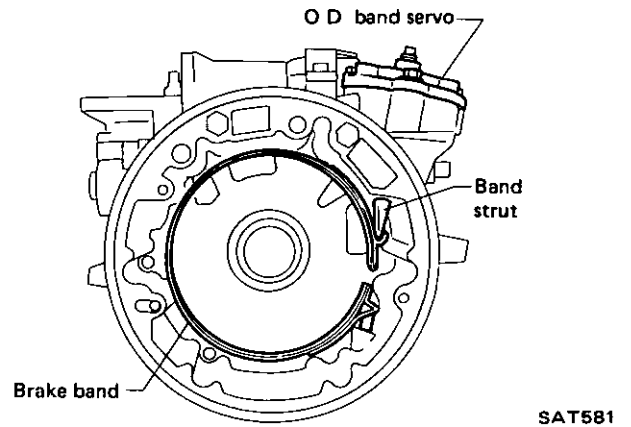


28. Lubricate seal ring of drum support, then install O.D. bearing & race, O.D thrust washer and O.D. pack on drum support. Make sure that brake band strut is correctly installed.

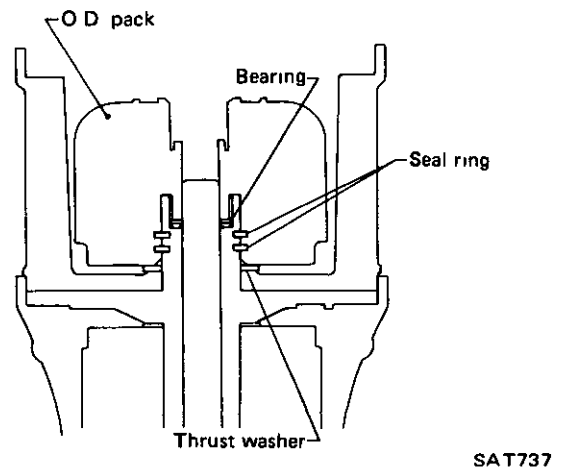


ASSEMBLY

29. Adjust O.D. band. Tighten piston stem to the specified value. Back off two full turns and secure with lock nut.

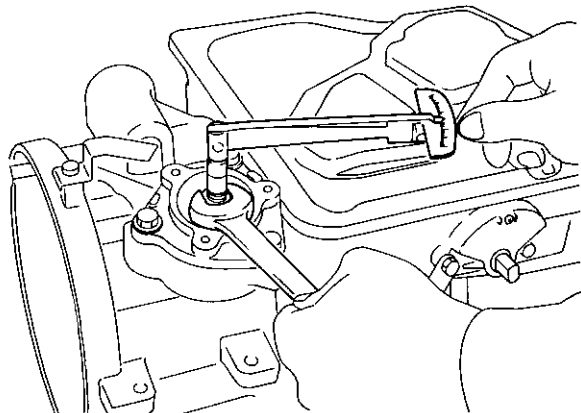


SAT625

30. Test O.D. band servo operation with compressed air.

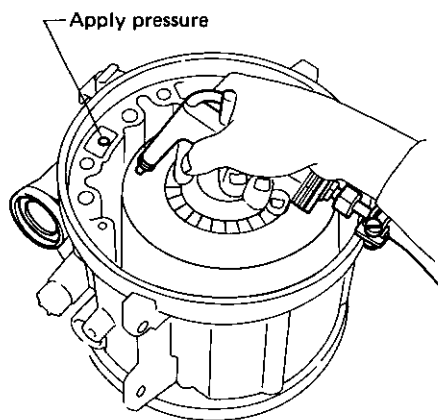

SAT648

31. Install accumulator parts, then secure with snap ring.

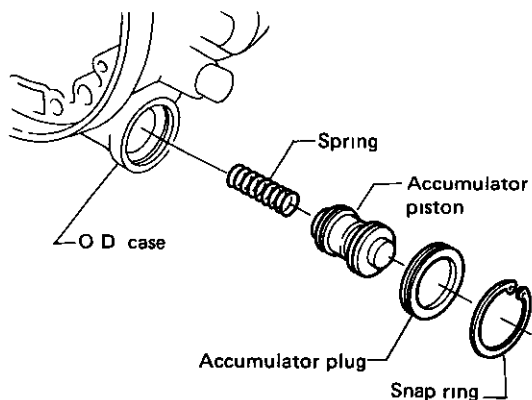


SAT561

32. Lubricate O-ring of oil pump, then install needle bearing & race and oil pump

Before installing oil pump housing and oil pump on O.D. case, ensure that they have been centered properly.

Refer to Oil Pump in Repair for Component parts.

33. Remove the two bolts used to temporarily tighten O D case. Apply sealant to seating surface of converter housing around the bolt holes.

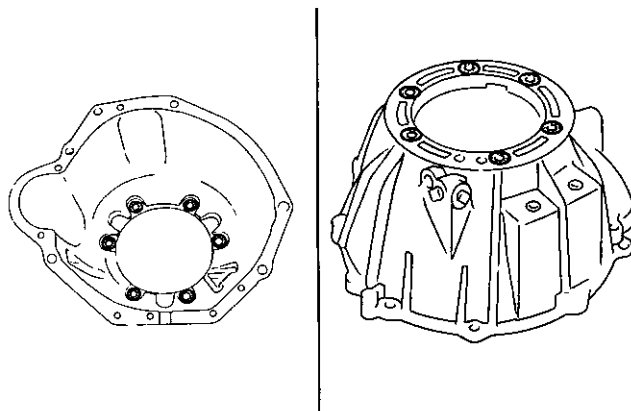


Apply sealant

SAT738

34. Install converter housing on O.D. case and tighten to the specified torque.

35. Install input shaft.

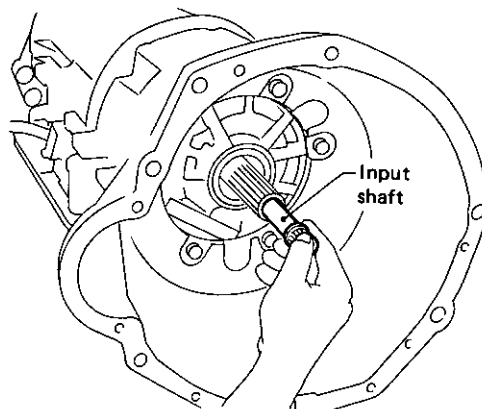


SAT585

36. Before installing valve body assembly, perform a final operation check of all assembled components, with compressed air.


ASSEMBLY

Air check point

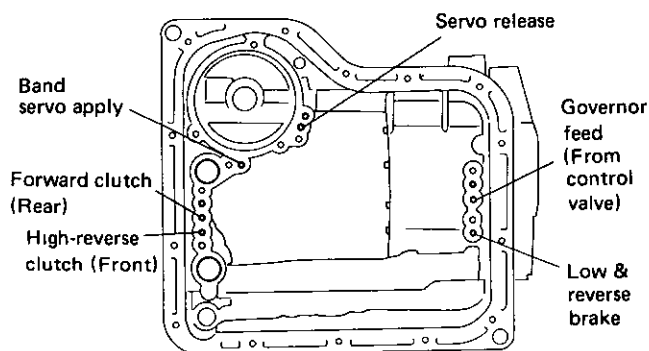

SAT586

37. Check that parking pawl, pin, spring and washer are assembled correctly.

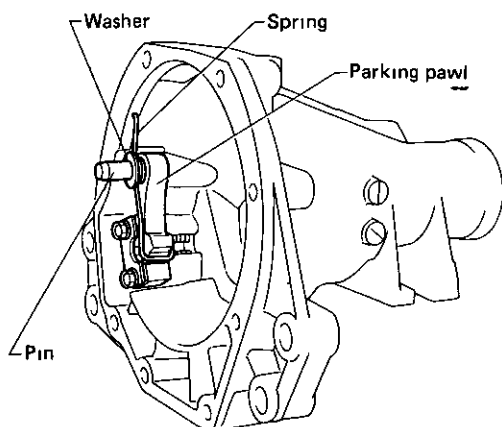


SAT739

38. Install rear extension.

39. Install control valve assembly. Be sure manual valve is in alignment with selector pin. Tighten control valve body attaching bolts


Securing bolt comes in three different lengths.

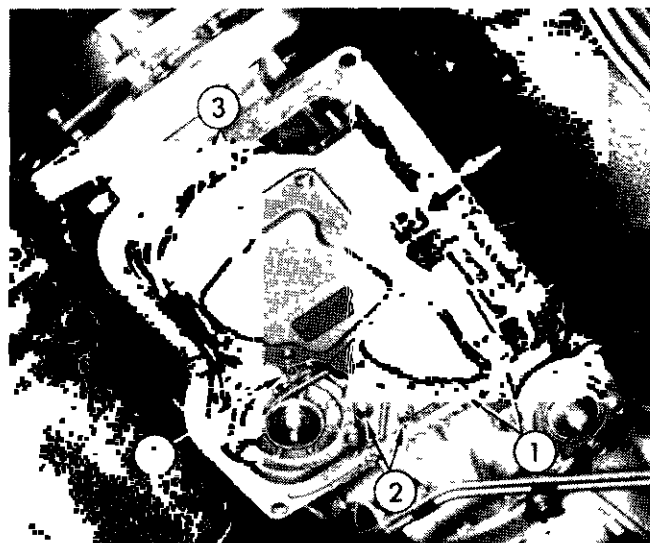

- 1 40 mm (1.57 in)
- 2 35 mm (1.38 in)
- 3 25 mm (0.98 in)

After installing control valve to transmission case, make sure that control lever can be moved to all positions.

40. Before installing vacuum diaphragm valve, measure depth of hole in which it is inserted. This measurement determines correct rod length to ensure proper performance.

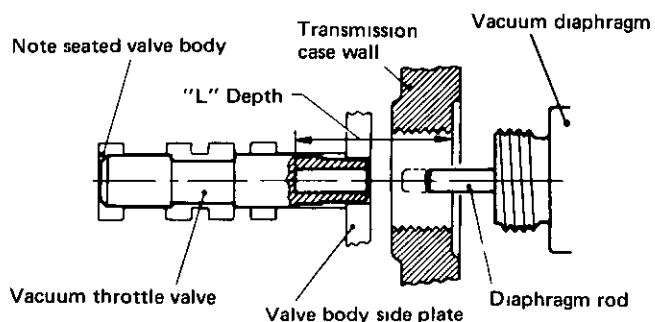


SAT078

ASSEMBLY

Vacuum diaphragm rod selection

Measured depth "L" mm (in)	Rod length mm (in)	Part number
Under 25 55 (1 0059)	29 0 (1 142)	31932-X0103
25 65 - 26 05 (1 0098 - 1 0256)	29 5 (1 161)	31932-X0104
26 15 - 26 55 (1 0295 - 1 0453)	30 0 (1 181)	31932-X0100
26 65 - 27 05 (1 0492 - 1 0650)	30 5 (1 201)	31932-X0102
Over 27 15 (1 0689)	31 0 (1 220)	31932-X0101


41. Install vacuum diaphragm.

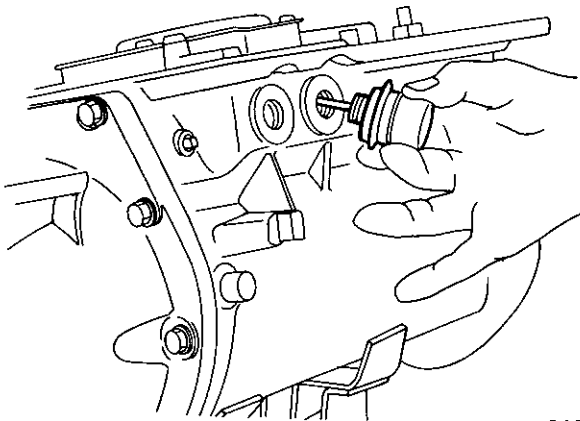

SAT079


Make sure that vacuum diaphragm rod does not interfere with side plate of control valve.

42 Install downshift solenoid, O D cancel solenoid, and lock-up solenoid

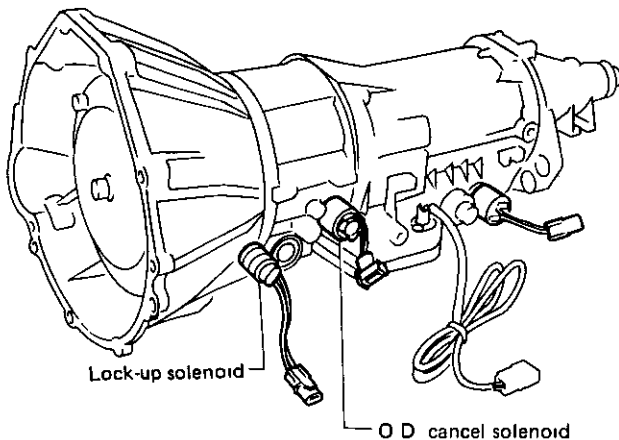


SAT063A

43 Install inhibitor switch Check for proper operation in each range with a circuit tester. Refer to On Vehicle Service.

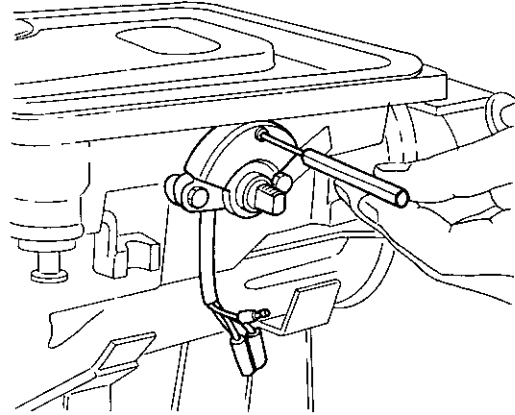

SAT082


44 Before installing oil pan, check parking pawl engagement. Make wiring connections to shift switches and low temperature sensor (E4N71B automatic transmission models).

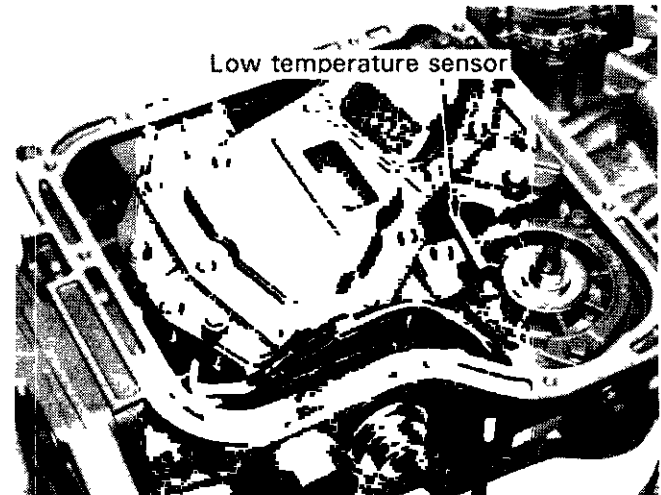

45. Install oil pan with new gasket.

ASSEMBLY

- 46 Pour approx 2-liters (2-1/8 US qt, 1-3/4 Imp qt) of A.T F into converter housing

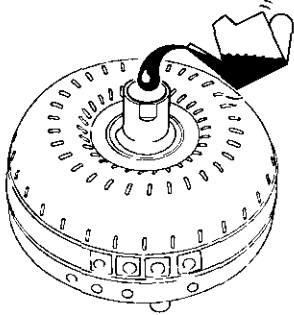

SAT518

47. Install torque converter to converter housing.
Be careful not to scratch front cover oil seal.

TROUBLE-SHOOTING AND DIAGNOSES

Preliminary Checks (Prior to Road Testing)

FLUID LEAKAGE

To detect a fluid leak

- 1) Raise vehicle
- 2) Clean area suspected of leaking
- 3) Start engine, apply foot brake, place control lever in drive, and wait a few minutes
- 4) Stop engine
- 5) Check for fresh leakage


FLUID CONDITION

Examine the A T F and note its color, texture, and odor.

- 1) Dark of Black Fluid
With a burned odor
 - Worn friction material
- 2) Milky Pink Fluid Water Contamination
 - Road water entering through filler tube or breather
- 3) Varnished Fluid, light to dark brown and tacky Oxidation
 - Over or Underfilling
 - Overheating.

Road Testing

- Before starting road tests, install vacuum gauge.

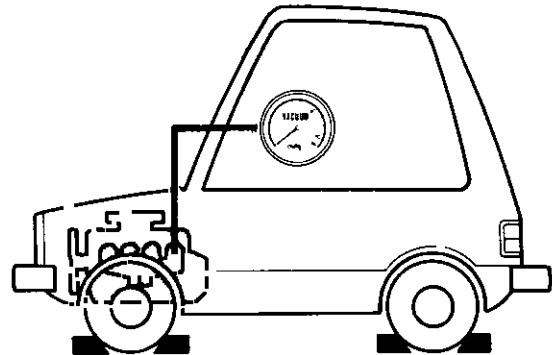

SAT596

- Perform road tests, using "Symptom" chart, as follows:

"P" RANGE

- 1 Place the control lever in "P" range and start the engine Stop the engine and repeat the procedure in all other ranges and neutral
- 2 Stop vehicle on a slight upgrade and place control lever in "P" range Release parking brake to make sure vehicle remains locked

"R" RANGE

- 1 Manually shift the control lever from "P" to "R", and note shift quality.
2. Drive the vehicle in reverse long enough to detect slippage or other abnormalities

"N" RANGE

- 1 Manually shift the control lever from "R" and "D" to "N" and note quality.
- 2 Release parking brake with control lever in "N" range Lightly depress accelerator pedal to make sure vehicle does not move (When vehicle is new or soon after clutches have been replaced, vehicle may move slightly This is not a problem)


"D" RANGE

1. Manually shift the gear selector from "N" to "D" range, and note shift quality

TROUBLE-SHOOTING AND DIAGNOSES


Road Testing (Cont'd)

- Using the shift schedule as a reference, drive vehicle in "D" range. Record, on symptom chart, respective vehicle speeds at which upshifting and downshifting occur. Check that there is not a considerable jolt when shifting gears. Also determine the timing at which shocks are encountered during shifting and which clutches are engaged.

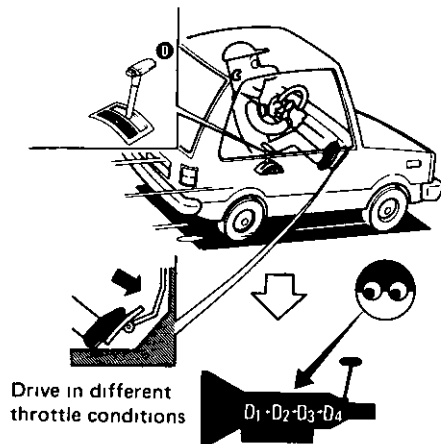

SAT590

- Check to determine if shifting speed changes when accelerator pedal is depressed slowly and when it is depressed quickly.
- Check to determine if shifting to overdrive gear cannot be made while O.D. control switch is "OFF".

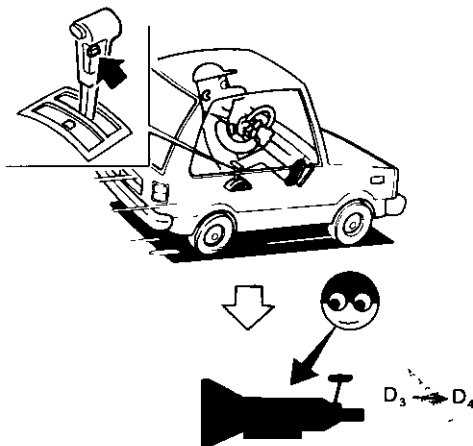

SAT279A

- When vehicle is being driven in the 65 to 85 km/h (40 to 53 MPH) range in "D₃" range at half to light throttle position, fully depress accelerator pedal to make sure it downshifts from 3rd to 2nd gear.
- When vehicle is being driven in the 25 to 35 km/h (16 to 22 MPH) ("D₂" range) at half to light throttle position, fully depress accelerator pedal to make sure it downshifts from 2nd to 1st gear.

"2" RANGE

- While vehicle is being driven in "2" range, make sure that it does not shift into 1st or 3rd gear, despite speed changes.
- Shift control lever to "D" range and allow vehicle to operate at 40 to 50 km/h (25 to 31 MPH). Then, shift to "2" range to make sure it downshifts to 2nd gear.

"1" RANGE

- Shift control lever to "1" range and allow vehicle to run. Ensure that it does not upshift from 1st to 2nd gear although vehicle speed increases.
- While vehicle is being driven in "1" range, release accelerator pedal to make sure that engine compression acts as a brake.
- Shift control lever to "D" or "2" range and allow vehicle to run at 20 to 30 km/h (12 to 19 MPH). Then, shift control lever to "1" range to make sure the downshift to 1st gear is made.

TROUBLE-SHOOTING AND DIAGNOSES

Road Testing (Cont'd)

VEHICLE SPEED WHEN SHIFTING GEARS

- 1 Disconnect harness from A/T control unit
Road test the vehicle to determine if all items listed in the following chart are within their specified values
- 2 Reconnect harness to A/T control unit. Road test the vehicle to see if shifting corresponds to the specified shift schedule pattern

VG30E engine

Throttle position	Gearshift	Vehicle speed km/h (MPH)
Full throttle	D ₁ → D ₂	65 - 73 (40 - 45)
	D ₂ → D ₃	110 - 118 (68 - 73)
	D ₃ → D ₄	—
	D ₄ → D ₃	—
	D ₃ → D ₂	98 - 106 (61 - 66)
	D ₂ → D ₁	44 - 52 (27 - 32)

VG30E turbo engine


Throttle position	Gearshift	Vehicle speed km/h (MPH)
Full throttle	D ₁ → D ₂	62 - 70 (39 - 43)
	D ₂ → D ₃	108 - 116 (67 - 72)
	D ₃ → D ₄	—
	D ₄ → D ₃	—
	D ₃ → D ₂	82 - 90 (51 - 56)
	D ₂ → D ₁	42 - 50 (26 - 31)

TROUBLE-SHOOTING AND DIAGNOSES


Road Testing (Cont'd)

SHIFT SCHEDULE

VG30E engine

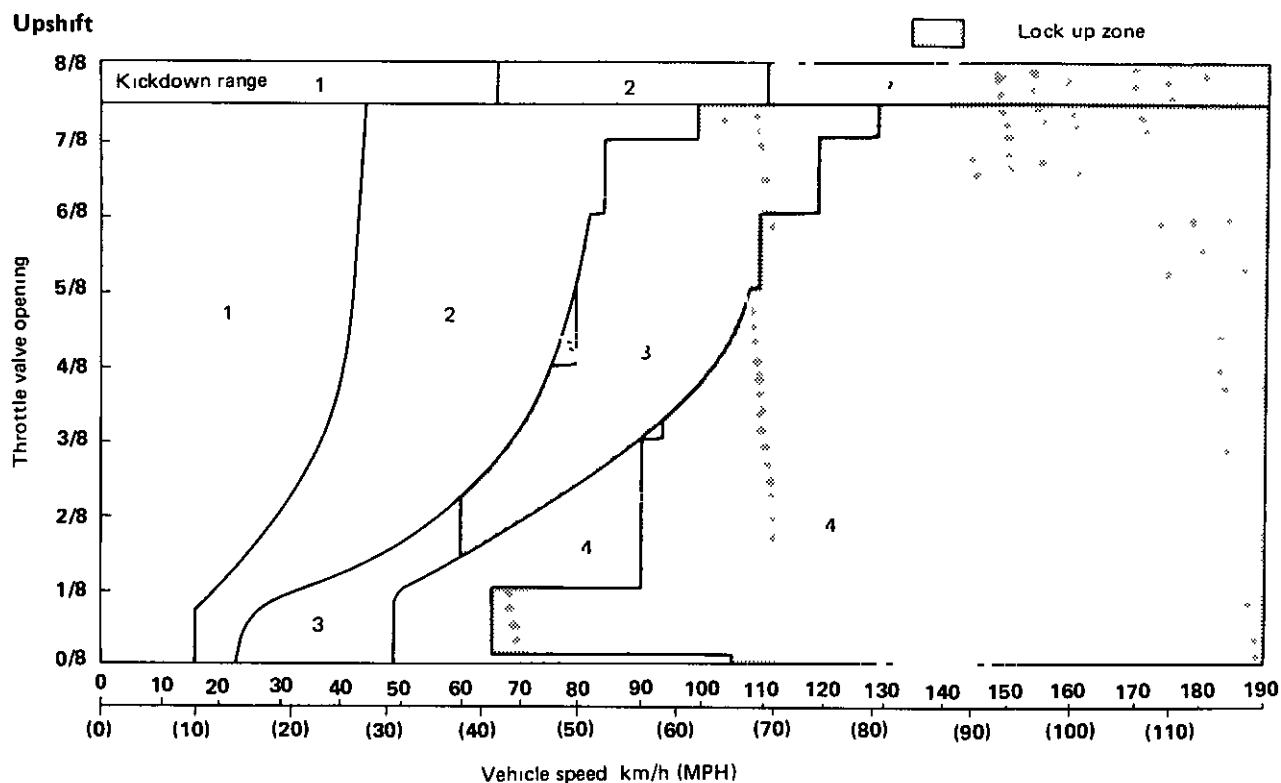

Downshift

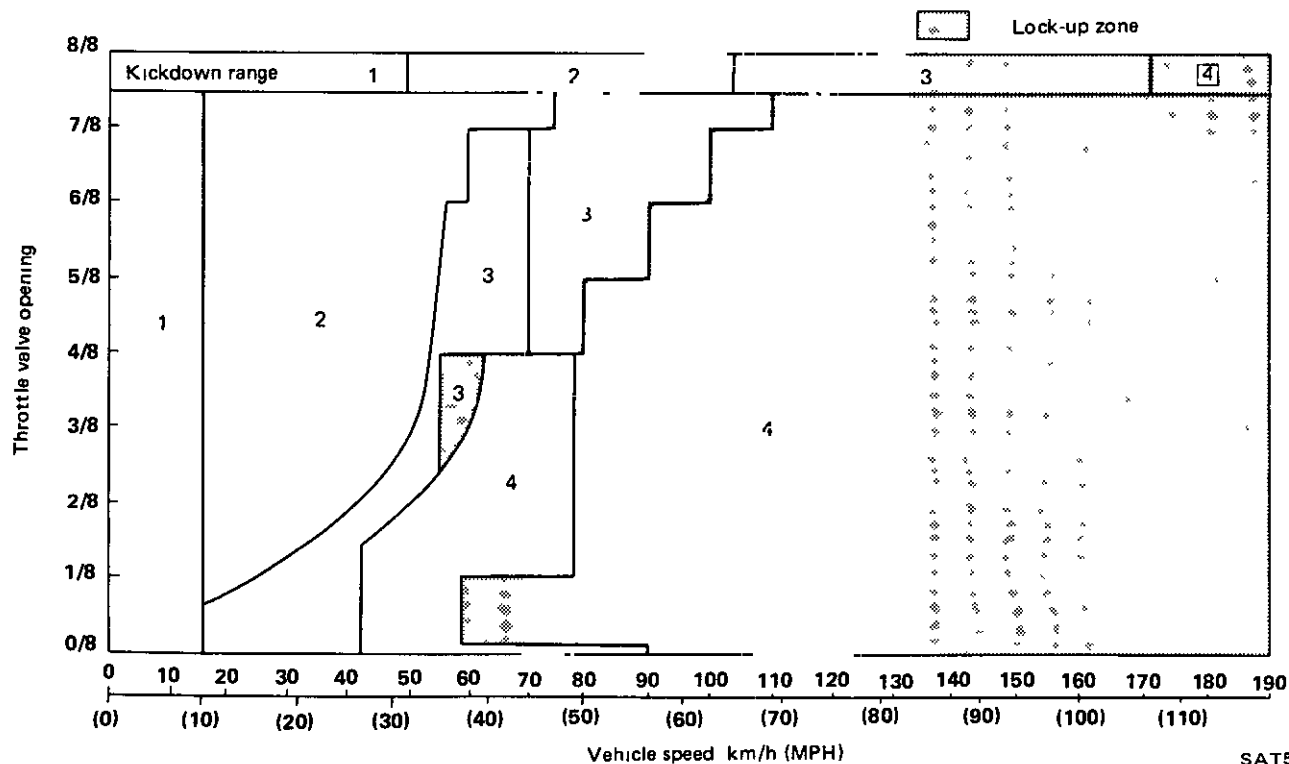


TROUBLE-SHOOTING AND DIAGNOSES


Road Testing (Cont'd)

VG30E Turbo engine

Upshift

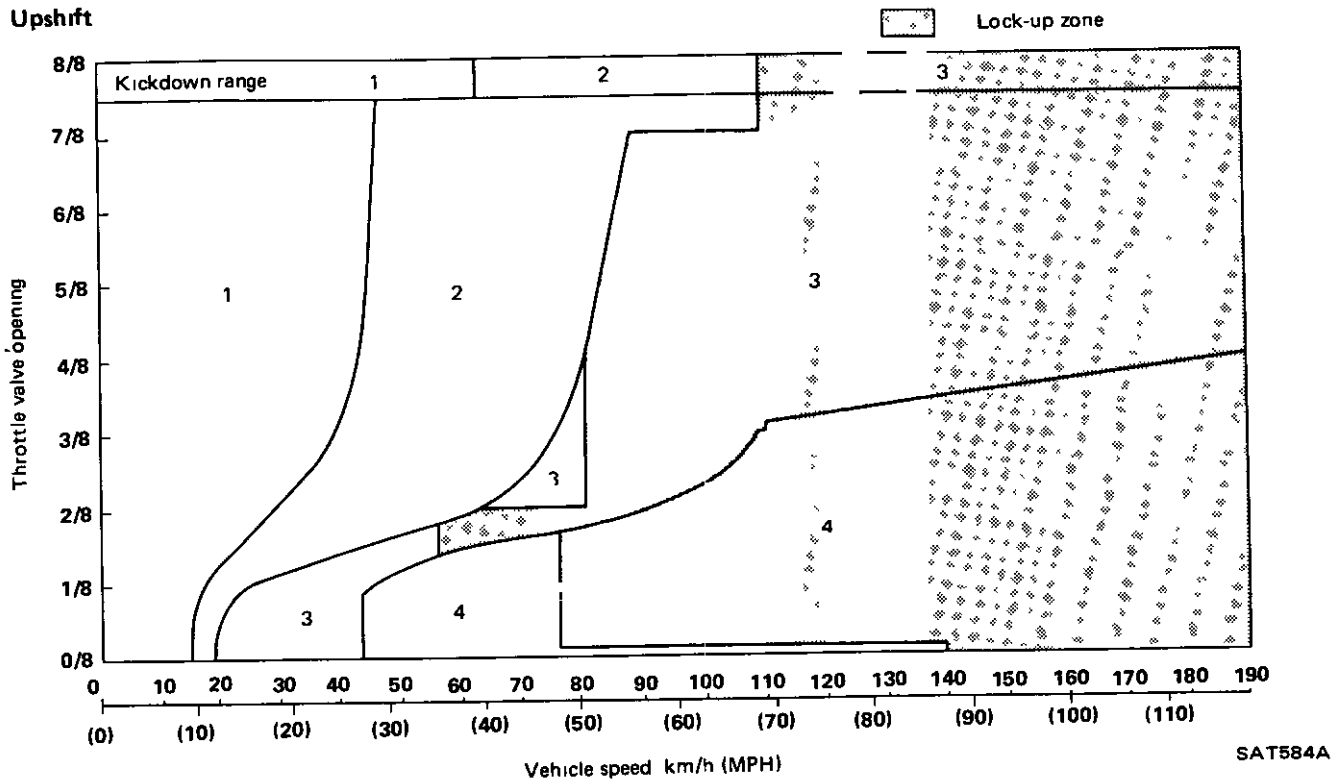

Downshift

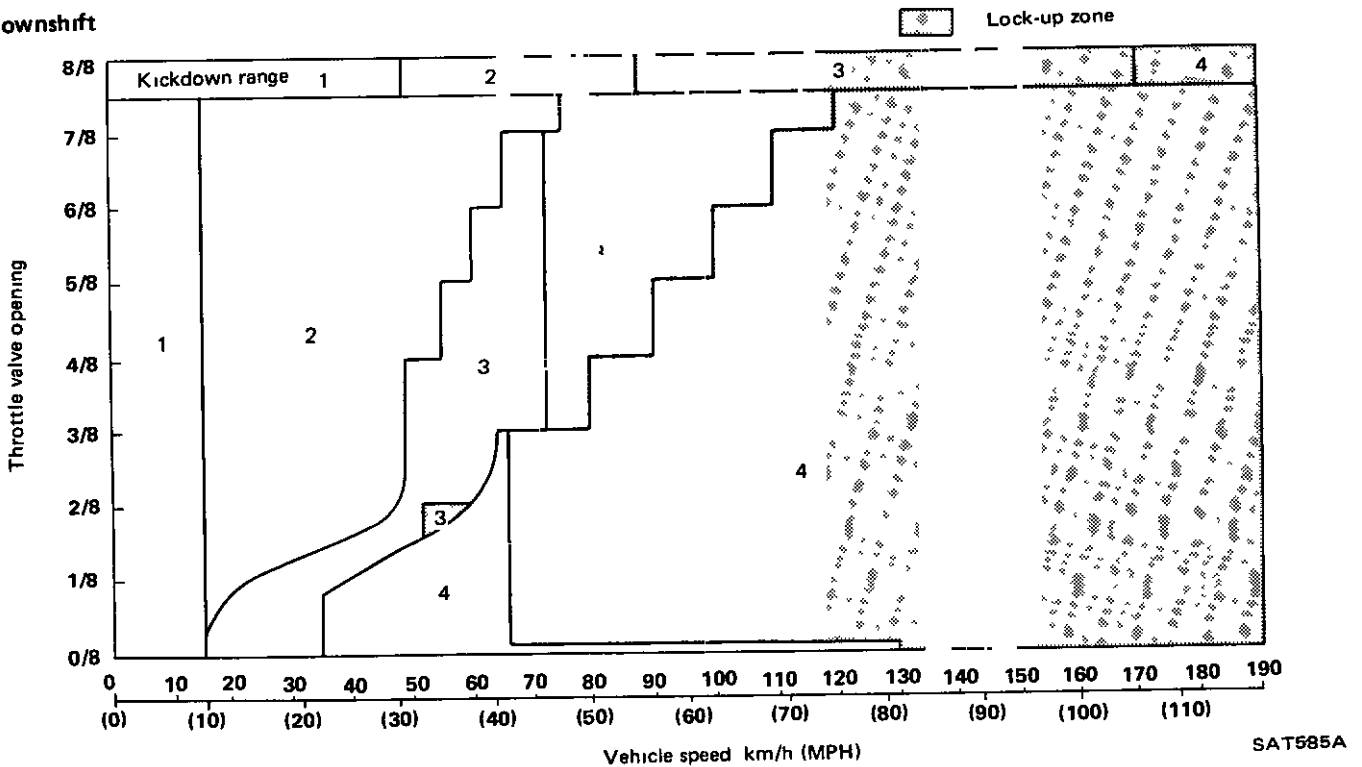

TROUBLE-SHOOTING AND DIAGNOSES

Road Test Symptom Chart

Numbers in chart below correspond with those indicated in Trouble-shooting chart
It is not necessary to check shaded items

		SHIFT QUALITY				VEHICLE WON'T MOVE	CRUISE SLIPPAGE	POOR POWER/ ACCELERATION	NOISY	ENGINE WON'T START	VEHICLE WON'T STAND STILL	NO ENGINE BRAKING	NO LOCK-UP	COMMENTS
		ROUGH	SHIFT TIMING [Mark km/h (MPH)]	NO SHIFT	SHIFT SLIPPAGE									
PARK RANGE	ENG START									(A)				
	HOLDING								(B)		(C)			
"R" RANGE	Man shift P-R					(A3)			(A4)					
	REVERSE					(E) (A3)	(E)	(E)	(A4)					
"N" RANGE	Man shift R-N								(A4)					
	ENG START									(A)				
	N								(B)		(D)			
"D" RANGE	Man shift N-D	(F)				(G) (A3)			(A4)					
	1st					(G) (A3)		(I)	(A4)					
	Auto shift 1-2	(O)		(J)	(R)				(A4)					
	2nd							(U)	(A4)					
	Auto shift 2-3	(P)		(K)	(S)				(A4)					
	3rd							(U)	(A4)					
	Auto shift 3-4	(Q)		(L)	(T)				(A4)					
	4th							(U)	(A4)					
	Lock-up "OFF" → Lock-up "ON"	(N)							(A4)				(M)	
	In lock-up "ON"								(A4)				(M)	
	Lock-up "ON" → Lock-up "OFF"								(A4)					
	Decel 4-3			(V)	(Z)				(A4)					
	Kickdown 4-3			(V)	(Z) (A2)				(A4)					
	Decel 3-2			(W)	(A1)				(A4)					
	Kickdown 3-2			(W)	(Y) (A1)				(A4)					
	Decel 2-1			(X)					(A4)					
	Kickdown 2-1			(X)					(A4)					
"2" RANGE	Man shift D-2			(A5)		(H) (A3)			(A4)					
	2nd					(H) (A3)		(I)	(A4)					
"1" RANGE	Man shift 2-1	(A9)		(X) (A8)					(A4)					
	Man shift D-1			(X) (A6)					(A4)					
	Acceleration					(H) (A3)		(I)	(A4)					
	"1" Engine Braking								(A4)			(A7)		

TROUBLE-SHOOTING AND DIAGNOSES

Trouble-shooting Chart

Numbers are arranged in order of probability
Perform inspections starting with number one
and working up. Circled numbers indicate that
the transmission must be removed from the
vehicle

Numbers are arranged in order of probability Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle		ON vehicle																OFF vehicle																		
		Oil level	Range select linkage	Inhibitor switch and wiring	Vacuum diaphragm and piping	Kickdown solenoid switch and wiring	Engine idling rpm	Line pressure	Control valve	Governor	2nd band servo	Transmission air check	Oil quality	Ignition switch and starter motor	Engine adjustment	brake inspection	O D band servo	O D control SW	O D cancel solenoid	Lock up solenoid	Lock up control unit and sensors	Direct clutch	Forward clutch (Rear)	High reverse clutch (Front)	O D band brake	2nd band brake	Low and reverse brake	Oil pump	Oil passage leak	Torque converter	Transmission one way clutch	Park linkage	Planetary gear	O D cancel valve	Lock up control valve	Accumulator
A	Engine does not start in N P ranges	2 3											1				4	5																		
	Engine starts in range other than N and P	1 2																																		
B	Transmission noise in P and N ranges	1					2						.											.		3										
C	Vehicle moves when changing into P' range or parking gear does not disengage when shifted out of P range	1																												2						
D	Vehicle runs in N range	1					3			2												4														
E	Vehicle will not run in R range (but runs in D '2' and '1' ranges) Clutch slips	1 2					3 5			6 4												8			7		10									
	Very poor acceleration																																			
	Vehicle braked when shifting into R range						.			3 2 1							.					4		5			.		6							
F	Sharp shock in shifting from N to D' range		2	1	3 4																	5													.	
G	Vehicle will not run in D range (but runs in '2' '1' and R ranges)	1					2 3																						4							
H	Vehicle will not run in D 1 "2 ranges (but runs in R range) Clutch ships	1 2					4 5			6 3	.	7	.									8, 10	.				9	.								
I	Clutches or brakes slip somewhat in starting	1 2	6				3 5			7 4																	8 9									
	Excessive creep						1																				.									
	No creep at all	1 2					3		5		4											8 9, 10					6 7,									
J	Failure to change gear from 1st to 2nd	1	2 3				5 6	8 7 4																9,		10										
K	Failure to change gear from 2nd to '3rd	1	2 3				5 6	8 7 4					.									9	.		10											
L	Failure to change gear from '3rd to 4th	1	2 3				5 6	8 7 4	.															9,		10										
	Too high a gear change point from 1st to 2nd from 2nd to 3rd from 3rd to 4th				1 2		3 5 6			4																	7									
	Gear change directly from 1st to 3rd occurs				.		2 4			3 1			.											5		6										
	Gear change directly from 2nd to 4th occurs		.	.	.		2 4			3 1													5			6										
M	Lock up does not occur in any range (E4N71B)						.										1 2											3	.					4		
N	Large jolt changing from lock up 'OFF' to 'ON	.					2 3			1												4		6										3	5	

TROUBLE-SHOOTING AND DIAGNOSES

Trouble-shooting Chart (Cont'd)

Numbers are arranged in order of probability
Perform inspections starting with number one
and working up. Circled numbers indicate that
the transmission must be removed from the
vehicle

Numbers are arranged in order of probability Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle		ON vehicle														OFF vehicle																		
		Oil level	Range select linkage	Inhibitor switch and wiring	Vacuum diaphragm and piping	Kickdown solenoid switch and wiring	Engine idling rpm	Line pressure	Control valve	Governor	2nd band servo	Transmission air check	Oil quality	Ignition switch and starter motor	Engine adjustment	brake inspection	O D band servo	O D control SW	O D cancel solenoid	Lock-up solenoid	Lock up control unit and sensors	Direct clutch	Forward clutch (Rear)	High reverse clutch (Front)	O D band brake	2nd band brake	Low and reverse brake	Oil pump	Oil passage leak	Torque converter	Transmission one way clutch	Park linkage	Planetary gear	O D cancel valve
Ⓐ	Too sharp a shock in change from 1st to 2nd		1	2			4			5	3						6	7					8			10								9
Ⓑ	Too sharp a shock in change from 2nd to 3rd			1			2	3		5	4						6	7				8					10							9
Ⓒ	Too sharp a shock in change from 3rd to 4th			1			2	3			7			4			5	6					8				10							9
Ⓓ	Almost no shock or clutches slipping in change from 1st to 2nd	1	2		3		4	6		8	7	5												9			10							
Ⓔ	Almost no shock or slipping in change from 2nd to '3rd' Engine races extremely fast	1	2		3		4	6		8	7	5											9				10							
Ⓕ	Almost no shock or slipping in change from 3rd to 4th	1	2		3		4	6		8	7	5												9			10							
	Vehicle braked by gear change from '1st to 2nd'							2				1											4			3				5				
	Vehicle braked by gear change from 2nd to '3rd'							3		2		1													4									
	Vehicle braked by gear change from 3rd to 4th							2				1										3	4											
Ⓖ	Maximum speed not attained Acceleration poor	1	2			5	4	7		6	3		8									11	12		9	10	13	14						
Ⓗ	Failure to change gear from 4th to 3rd			1			3	4			5	2					6	7	8			9	10	11			12						13	
Ⓙ	Failure to change gear from '3rd to 2nd and from 4th' to '2nd'			1			3	4		6	5	2											7	10	8			9						
Ⓚ	Failure to change gear from 2nd to 1st or from '3rd to 1st			1			3	4		6	5	2												7					8					
	Gear change shock felt during deceleration by releasing accelerator pedal	1		2	3		4	5	6																			7						8
	Too high a change point from 4th ' to 3rd from 3rd to 2nd from '2nd' to 1st	1		2	3		4	5	6												7							8						
Ⓛ	Kickdown does not operate when depressing pedal in '3rd' within kickdown vehicle speed			2	1			4	5			3													6			7						
	Kickdown operates or engine overruns when depressing pedal in 3rd beyond kickdown vehicle speed limit	1		2			3	5	6		7	4												8				9						
Ⓜ	Races extremely fast or slips in changing from 4th to 3rd ' when depressing pedal			1			2	4		6	5	3											7	8	9			10						
Ⓝ	Races extremely fast or slips in changing from 3rd to 2nd when depressing pedal			1			2	4		6	5	3												7	8			9						
Ⓞ	Kickdown does not operate when depressing pedal in '4th' within kickdown vehicle speed			2	1			4	5			3												7	6				8					
	Kickdown operates or engine overruns when depressing pedal in 4th ' beyond kickdown vehicle speed limit	1		2			3	5	6		7	4													8			9						
	Shift pattern does not change				1	3			7					5		2	4		6															8

TROUBLE-SHOOTING AND DIAGNOSES


Trouble-shooting Chart (Cont'd)

Numbers are arranged in order of probability
Perform inspections starting with number one
and working up. Circled numbers indicate that
the transmission must be removed from the
vehicle

Refer ence		ON vehicle										OFF vehicle																										
		Oil level	Range select linkage	Inhibitor switch and wiring	Vacuum diaphragm and piping	Kickdown solenoid switch and wiring	Engine idling rpm	Line pressure	Control valve	Governor	2nd band servo	Transmission air check	Oil quality	Ignition switch and starter motor	Engine adjustment	brake inspection	O D band servo	O D control SW	O D cancel solenoid	Lock up solenoid	Lock up control unit and sensors	Direct clutch	Forward clutch (Rear)	High reverse clutch (Front)	O D band brake	2nd band brake	Low and reverse brake	Oil pump	Oil passage leak	Torque converter	Transmission one way clutch	Park linkage	Planetary gear	O D cancel valve	Lock-up control valve	Accumulator	Rear lubrication	
A3	Vehicle will not run in any range	1 2	.	.	.	.	3 6	.	.	6 4	.	.	.	.	.	.	8 7	.	.	.	.	.	.	.	.	9 10	.	11	.	12	.	.	.	.	.	.	.	.
A4	Transmission noise in D 2 1 and R ranges	1	.	.	.	.	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	3 6	4 5	.	.	.	.	.	.	.	.	.	.	
A5	Failure to change from 3rd to 2nd when changing lever into 2 range	1	.	.	.	.	2 4	.	.	5 3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	7	.	.	.	.	.	.	.	.	.	.	.	
	Gear change from 2 to 1st or from 2nd to 3rd in 2 range	.	1	.	.	.	2 3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
	No shock at change from 1 to 2 range or engine races extremely	1 2	3 4	.	.	.	7	.	.	8 6	.	5	.	.	.	.	.	.	.	.	.	.	.	.	.	9	10	.	.	.	.	.	.	.	.	.	.	
A6	Failure to change from 3rd to 2nd when shifting lever into 1 range	1	.	.	.	.	2 4 5	.	.	7 6 3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	8	9	.	10	.	.	.	.	.	.	.	.	.	
A7	Engine brake does not operate in 1 range	1	.	.	.	.	2 4	.	.	5 3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	7	.	.	.	.	.	.	.	.	.	.	
	Gear change from 1st to 2nd or from 2nd to 3rd in 1 range	1	.	.	.	.	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	3	.	.	.	.	.	.	.	.	.	.	
A8	Does not change from 2nd to 1st in 1 range	1 2	.	.	.	.	4 5	.	.	6 7 3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	8	9	.	.	.	.	.	.	.	.	.	.	.	
A9	Large shock changing from 2nd to 1st in 1 range	.	1	.	.	.	4	.	.	3	.	2	.	.	.	.	.	.	.	.	.	.	.	.	5	.	.	.	.	.	.	.	.	.	.	.	.	
	Transmission overheats	1	.	.	.	.	2 5	.	.	7 6 4	.	3 8	.	.	.	.	.	.	.	.	.	.	.	10 9 11	13 12 14	15 16 17	.	18	.	.	.	.	.	.	.	19		
	Oil shoots out during operation. White smoke emitted from exhaust pipe during operation	1	.	2	.	.	4 6	.	.	7 3	.	5	.	.	.	.	.	.	.	.	.	.	.	9 8 10	12 11 13	14 15 16	.	17	.	.	.	.	.	.	.	18		
	Offensive smell at oil charging pipe	1	.	.	.	.	.	.	.	2	.	.	.	.	.	.	.	.	.	.	.	.	.	3 4 5	6 7 8	9 10 11	.	12	.	.	.	.	.	.	.	.		
	Transmission shifts to overdrive even if O D control switch is turned to ON	.	.	.	.	.	.	.	.	.	.	.	.	.	.	1 2	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	4	.	.	.		
	Lamp inside O D control switch does not glow even if ignition switch is turned to ON (engine not started)	.	.	.	.	.	.	.	.	.	.	.	.	.	.	1	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
	Lamp inside O D cancel switch does not glow even if transmission is shifted to O D	.	.	.	.	.	.	.	.	.	.	.	.	.	.	1	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	

TROUBLE-SHOOTING AND DIAGNOSES


E4N71B Electrical System/Schematic

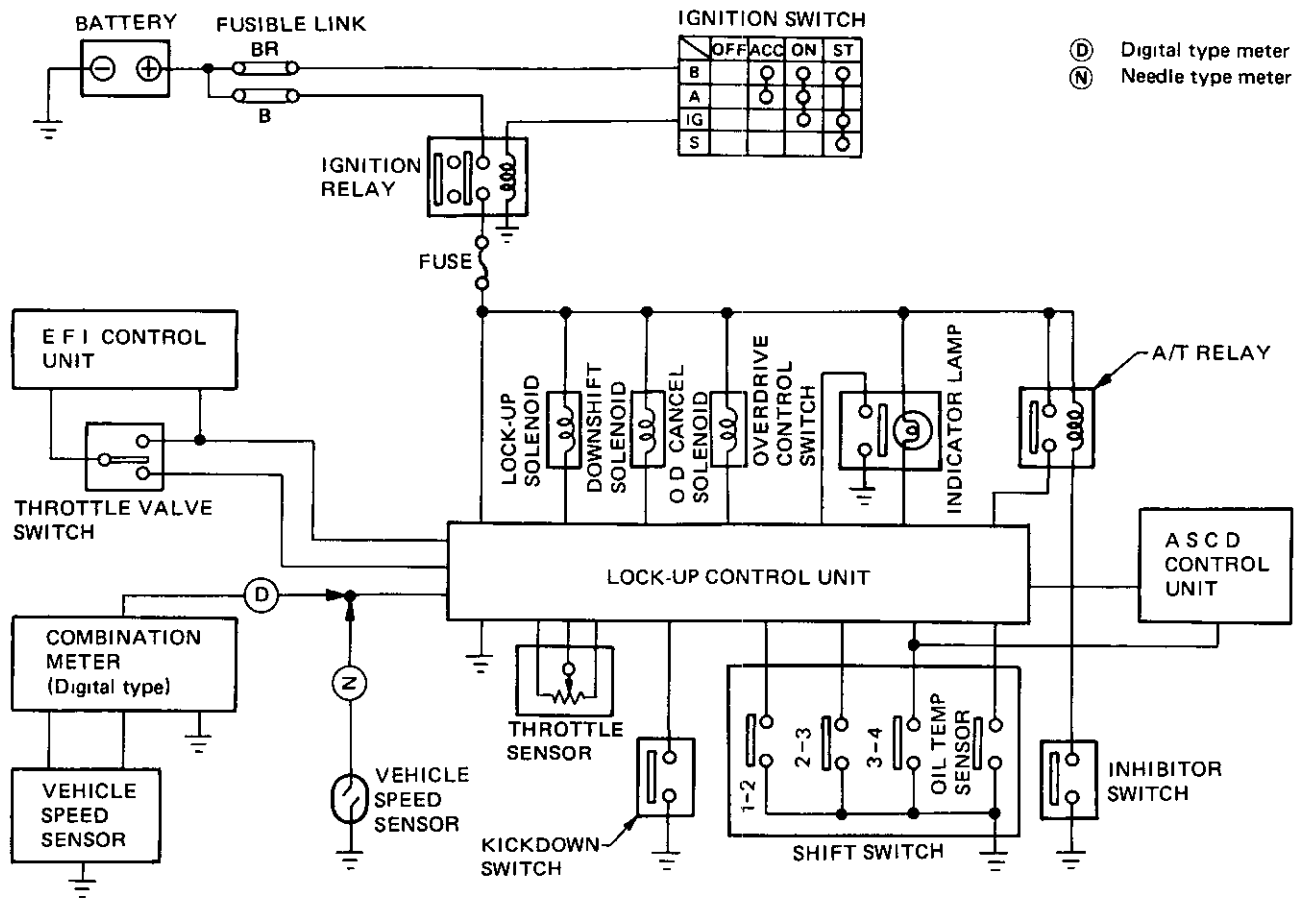

SAT291A

TROUBLE-SHOOTING AND DIAGNOSES

E4N71B Electrical System/Wiring Diagram

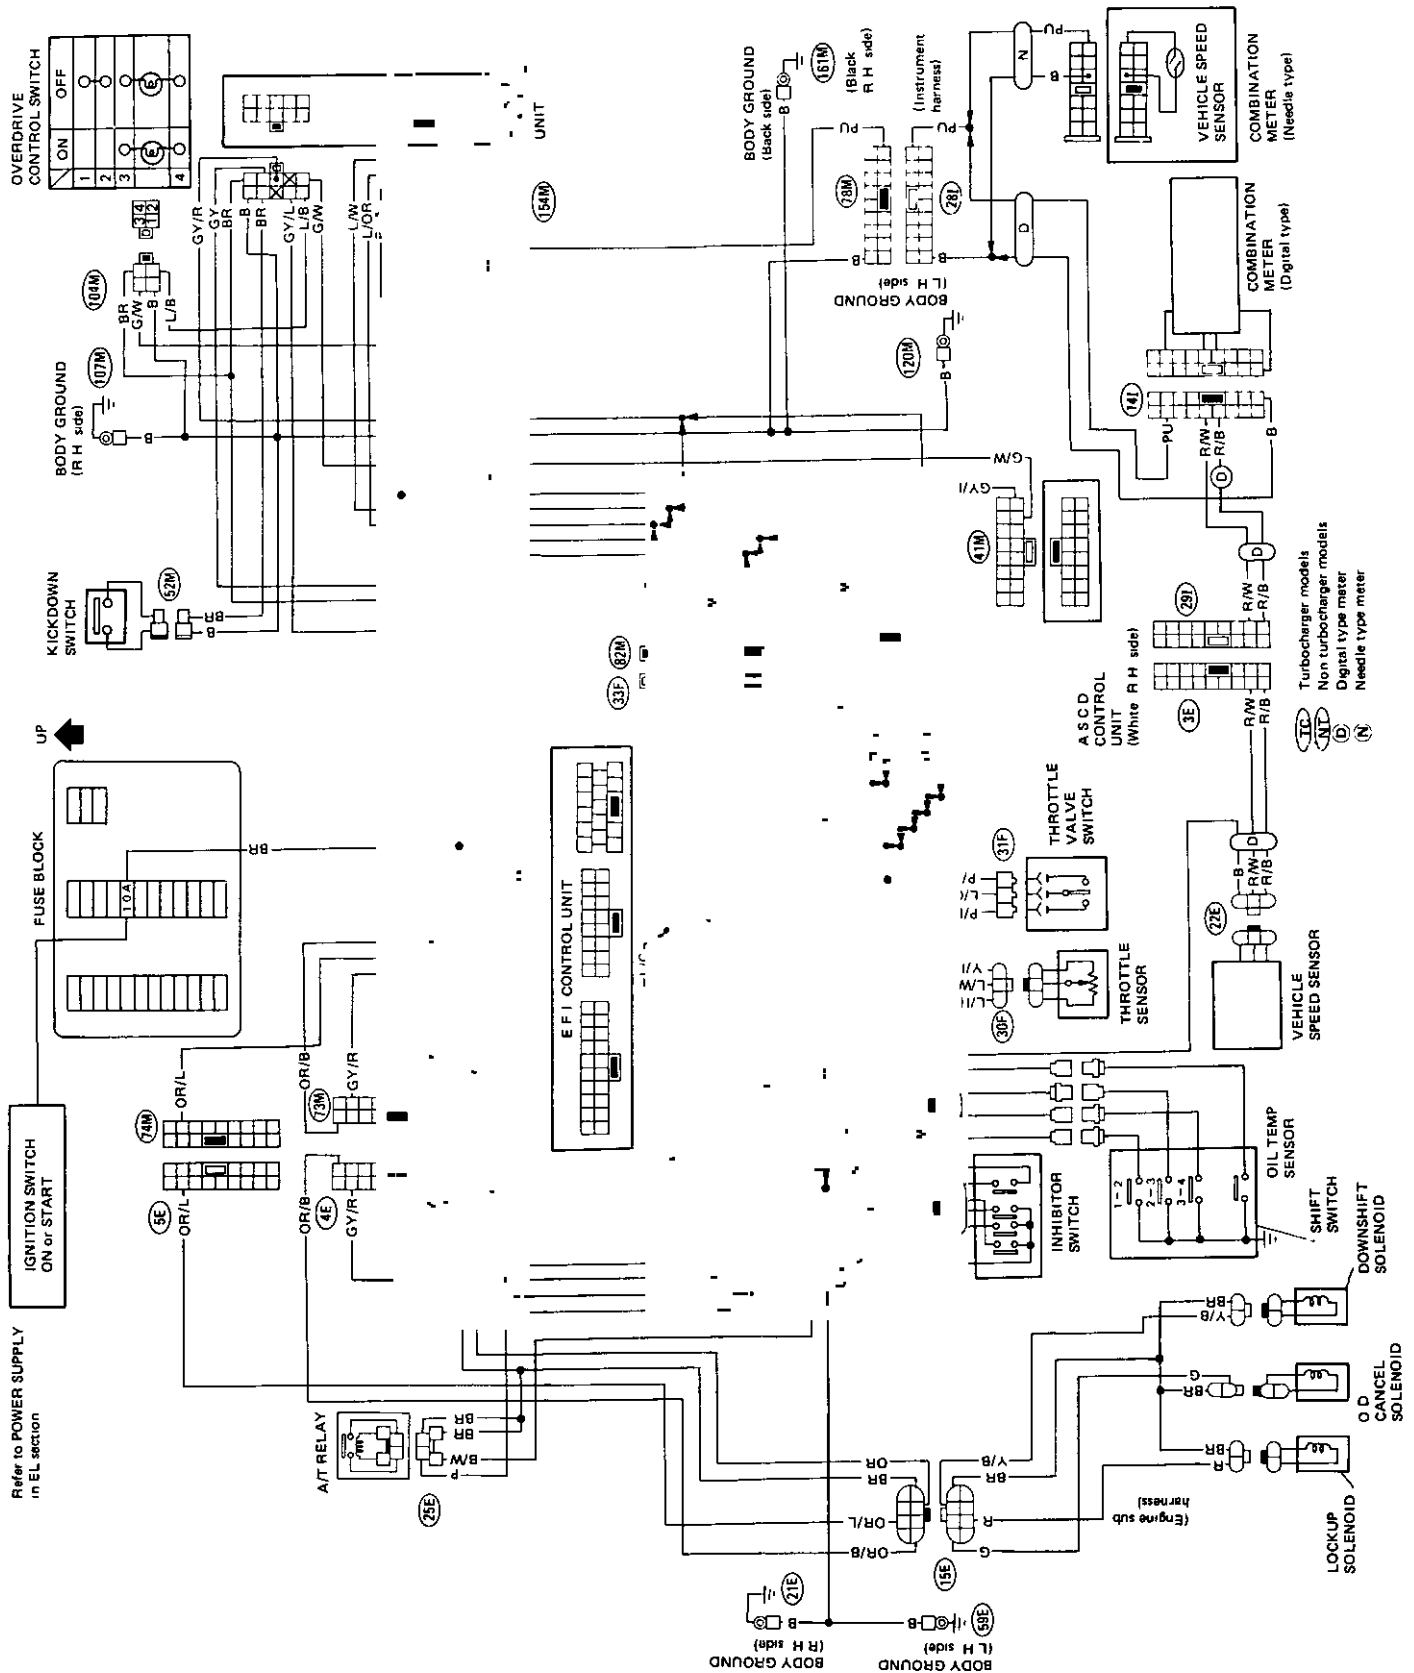


SAT587A

TROUBLE-SHOOTING AND DIAGNOSES

Inspection of A/T Control Unit


Check voltage between No 22 terminal (Ground) and each terminal in the following table using tester and Tool (Diagnostic sub-harness)

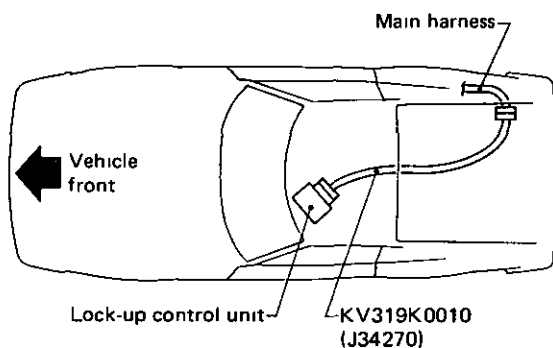

SAT763

1	2	3			4	5	13	(14)	15	16	17
6	7	8	9	10	11	12	18	19	(20)	21	22

(A/T control unit harness connector as seen from front)
Note (14) and (20) is not used

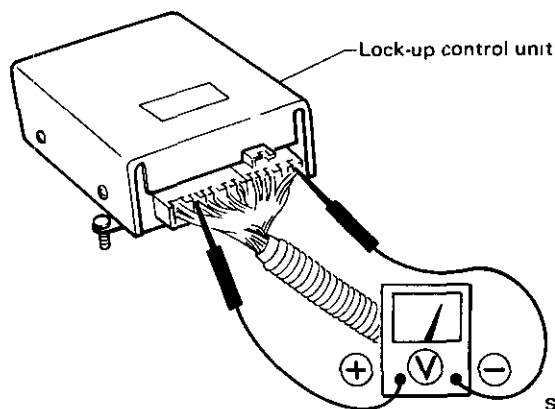

SAT752

Terminal No	Checking input/output signal	Checking method	Judgment standard
1	Downshift solenoid	Measure when depressing and releasing accelerator pedal while driving vehicle	0V if turned on 12V if turned off
2	Lock-up solenoid	Measure while driving vehicle in "D" range	0V if turned on 12V if turned off
3	Throttle sensor (power source)	Connect tester to terminals 3 and 5	5V at all times
4	Throttle sensor	Measure while operating accelerator pedal	Full-close throttle 0.4V Full-open throttle 4V
5	Throttle sensor (ground)	—	—
6	O D cancel solenoid	Measure while operating power shift switch	0V if turned on 12V if turned off
7	O D indicator lamp	Measure while operating O D control switch	0V if turned to "OFF" 12V if turned to "ON"
8	Idle contact switch	Measure while operating accelerator pedal	Full-close throttle More than 4.8V Part-open throttle 0V
9	Full throttle contact switch		Throttle opening Over 1/2 More than 4.8V Below 1/4 0V
10	Inhibitor "2" range switch	Measure with control lever set to "2" range or other ranges	12V if set to "2" range 0V if set to other ranges
11	Vehicle speed sensor	Check voltage variation while running vehicle over 1 m (3 ft) at very low speed	Voltage must vary from 0V to approx 5V

TROUBLE-SHOOTING AND DIAGNOSES


Inspection of A/T Control Unit (Cont'd)

Terminal No	Checking input/output signal	Checking method	Judgment standard
12	1-2 shift switch	Jack up rear wheels, set lever to D range, and measure while accelerating with a slightly open throttle	D1 range 0V D2, D3, and D4 ranges 5V
13	A S C D cruise signal	Measure by repeatedly releasing vehicle speed setting during A.S C D. driving	12V if A S C D is set 0V if A.S C D is released
14	—	—	—
15	A S C D O D cut signal	Measure by turning on and off accelerator switch during A S C D driving at D4 speed	0V if accelerator switch is on 5V if accelerator switch is off
	3-4 shift switch	Jack up rear wheels, set lever to D range range, and measure while accelerating with a slightly open throttle	D1, D2, and D3 ranges 0V D4 range 5V
16	2-3 shift switch		D1 and D2 ranges 0V D3 and D4 ranges 5V
17	Power source	Make ground connection	12V at all times
18	O D control switch	Measure while operating O D control switch	0V if turned to "OFF" 5V if turned to "ON"
19	Low-temperature sensor	When checking in installed state, refer to the items on the right Remove sensor from transmission and make continuity test	Continuity test Zero continuity at 20°C (68°F) or higher Continuity at 10°C (50°F) or lower (Reference) 5V if oil temp is over 20°C (68°F) 0V if oil temp is below 10°C (50°F)
20	—	—	—
21	Kickdown switch	Measure while operating accelerator pedal	Full-open accelerator 0V Less than full open 5V
22	Ground	—	—

TROUBLE-SHOOTING AND DIAGNOSES

Inspection of Lockup Control

Details on each step will be described later

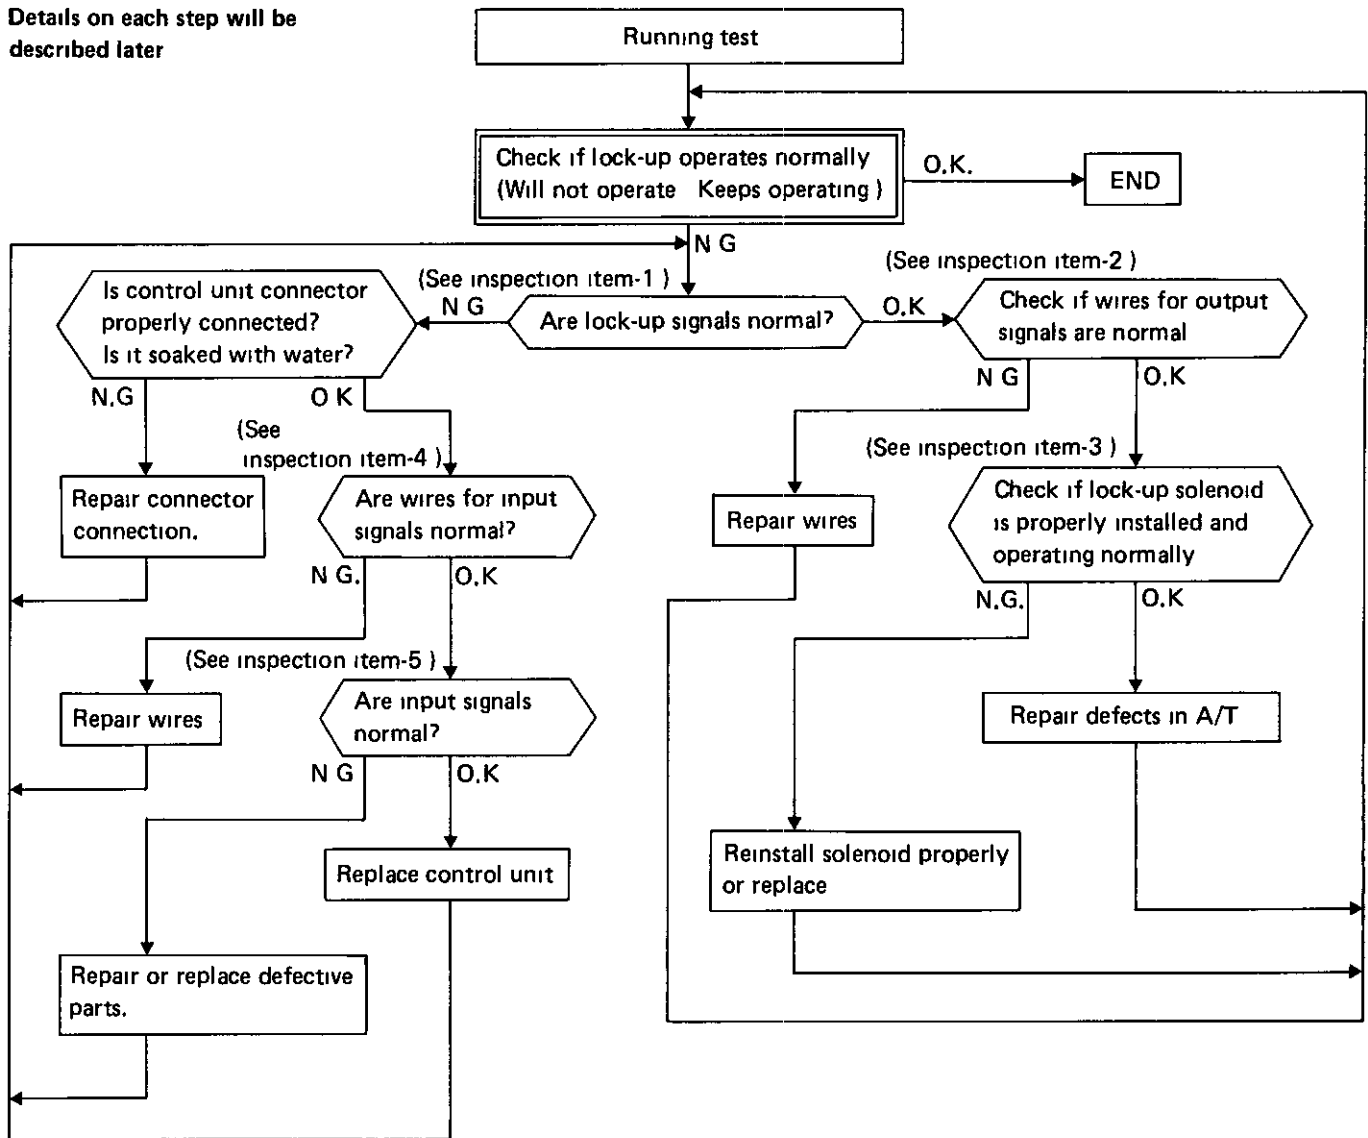

TROUBLE-SHOOTING AND DIAGNOSES


Inspection of Lockup Control (Cont'd)

INSPECTION POINTS

Inspection No	Item to be checked	Checking method
1	Lock-up signals	● Connect tester to control unit connector terminals, Nos 2 and 22 and check lock-up signals while running vehicle Proper indication 0V if lock-up solenoid is on 12V if lock-up solenoid is off
2	Wires for output signals	Check if connector between control unit and lock-up solenoid is properly connected Also, check connector for continuity
3	Lock-up solenoid	● Check if O-ring is installed to tip of solenoid ● Check operation of solenoid by applying 12V voltage
4	Wires for input signals	Check if connections are properly made between control unit and following sensors Also, check connectors for conduction ● Throttle sensor (Idle, high-throttle side) ● Inhibitor switch (2 range) ● Shift switches (1-2, 2-3 and 3-4) ● Low-temperature sensor ● Kickdown switch ● Vehicle speed sensor ● O D switch
5	Input signals	Check items given on inspection-4 in chart on pages AT-74 and 75

TROUBLE-SHOOTING AND DIAGNOSES

Inspection of O.D. Control

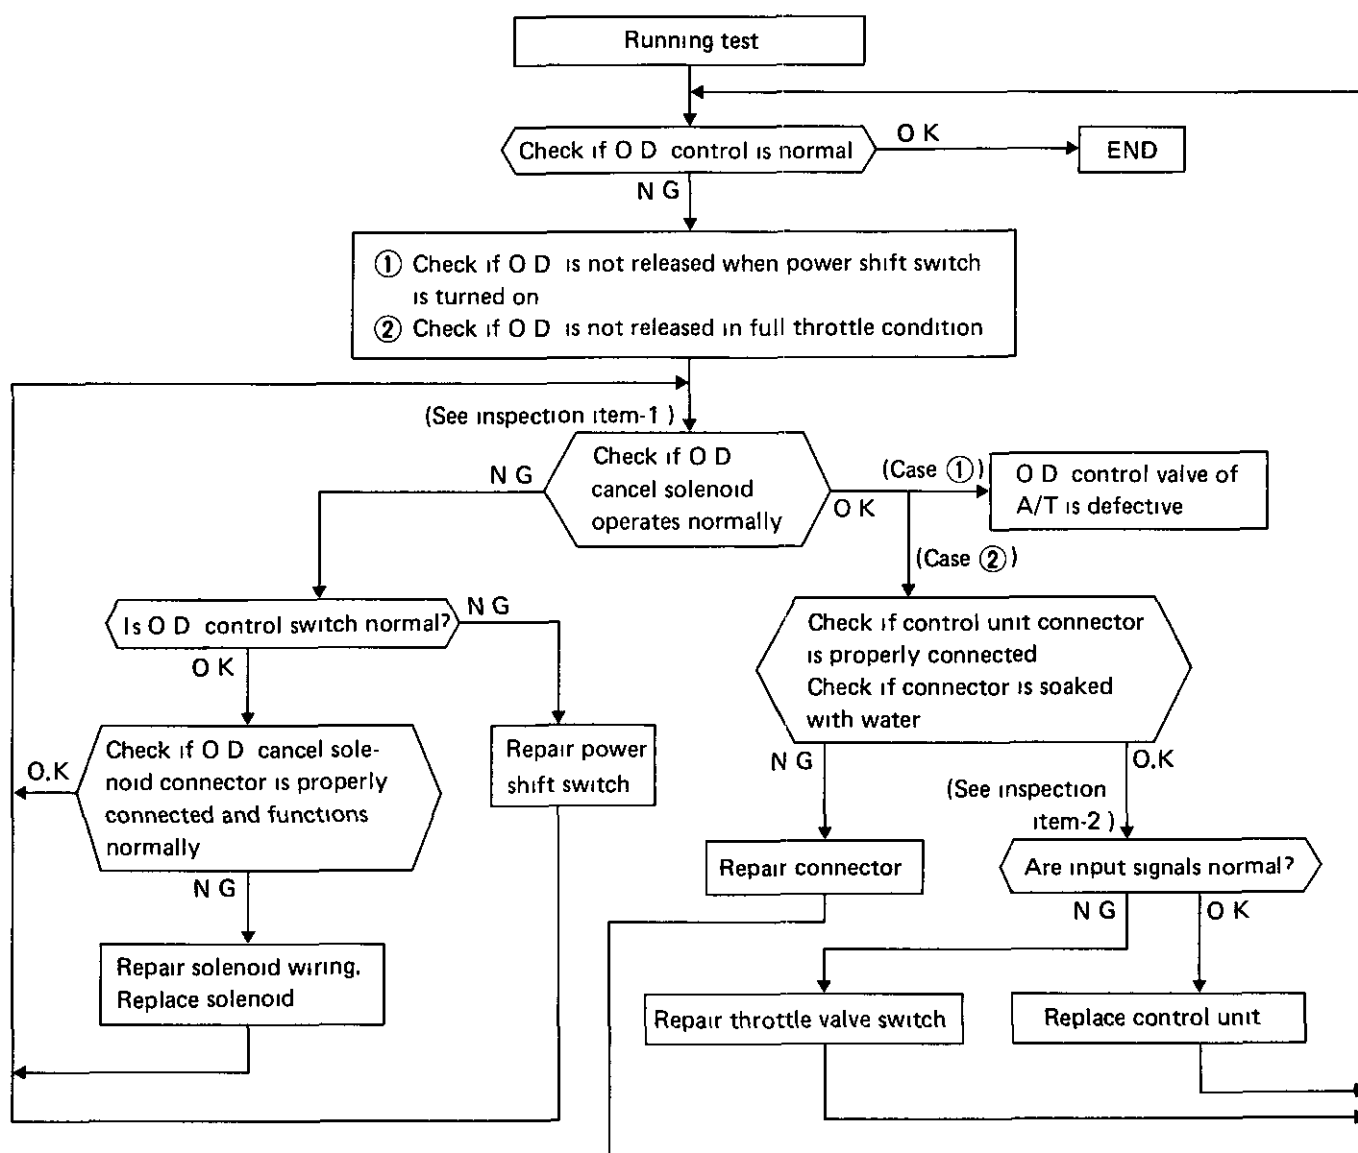


INSPECTION POINTS

Inspection No	Item to be checked	Checking method
1	O D solenoid	Turn on key and set O D switch to "O D release" position to see if O D solenoid clicks
2	Input signals	Inspect following items given in flow chart on pages AT-74 and 75 • Shift switches (1-2, 2-3 and 3-4) • Vehicle speed sensor • Full throttle contact switch • Throttle sensor • Low-temperature sensor

TROUBLE-SHOOTING AND DIAGNOSES

Inspection of Parts Related to A.S.C.D.

Details on each step will be described later

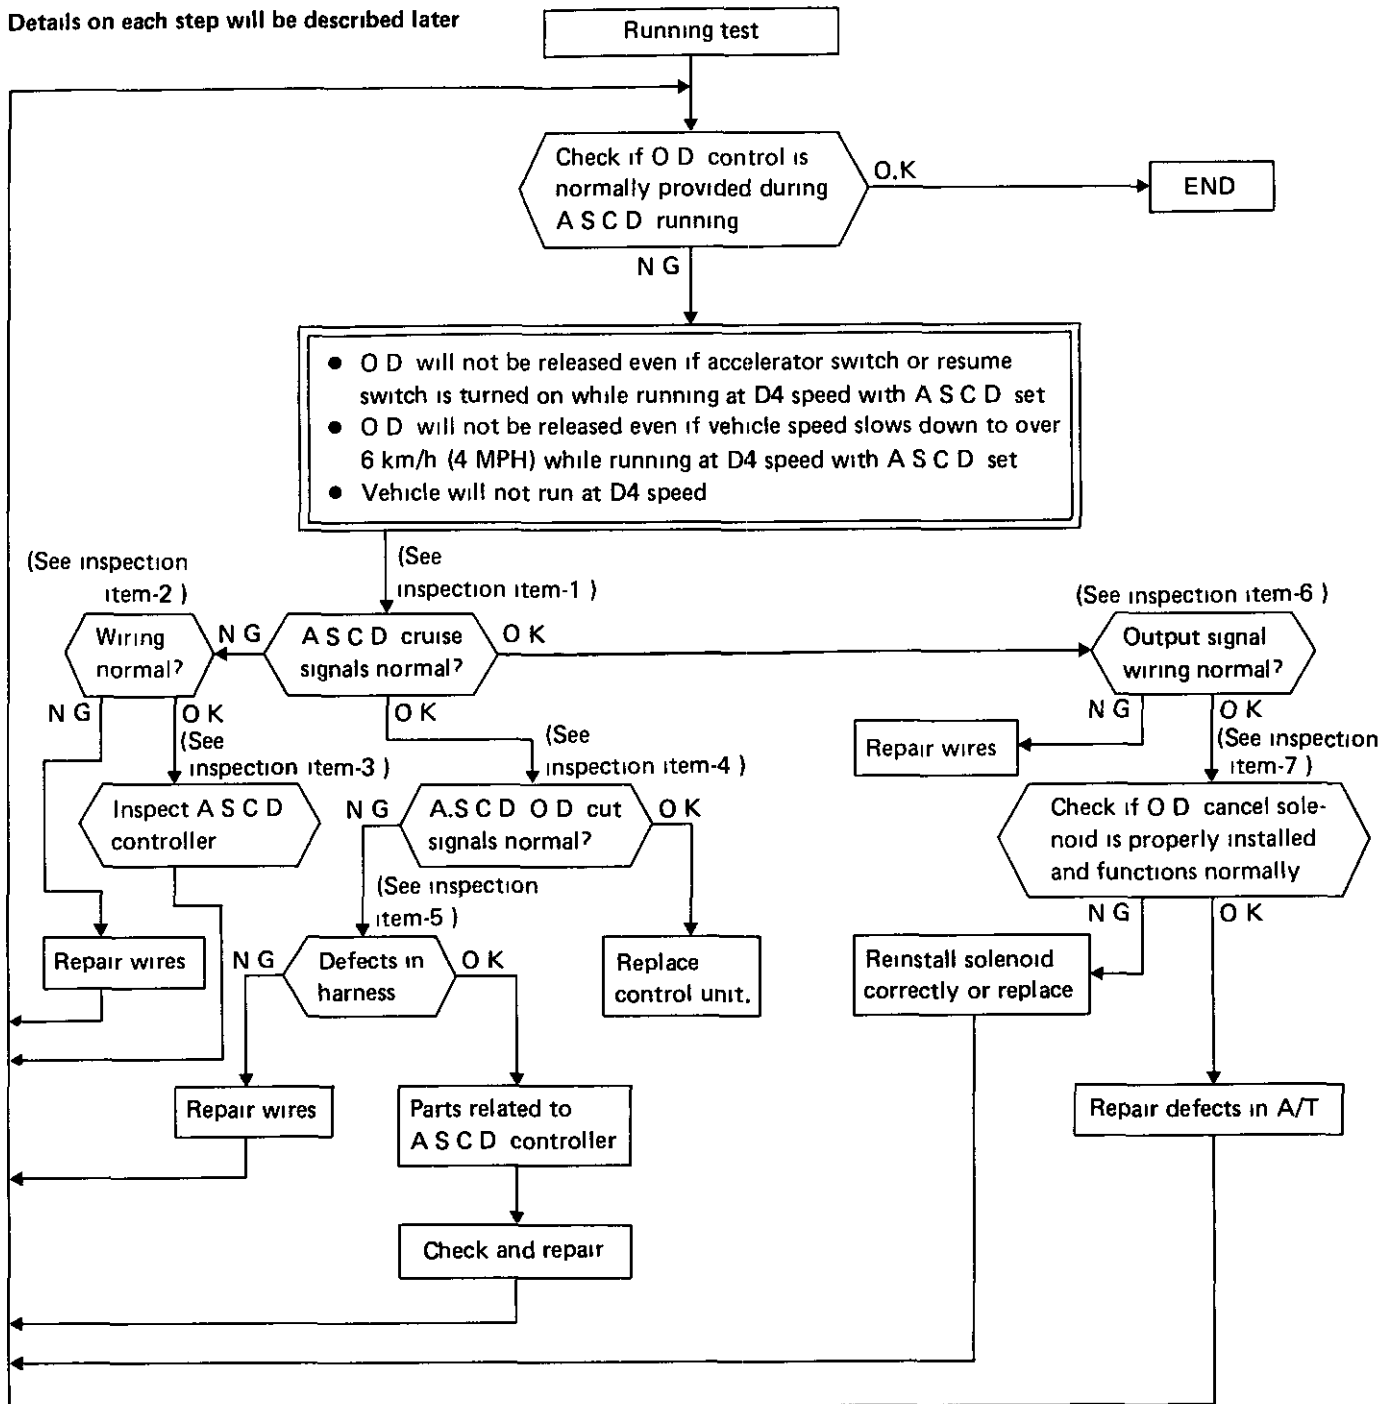

TROUBLE-SHOOTING AND DIAGNOSES


Inspection of Parts Related to A.S.C.D. (Cont'd)

INSPECTION POINTS

Inspection No	Item to be checked	Checking method
1	A S C D cruise signals	1 Connect tester to connector terminals, Nos 13 and 22, of lock-up control unit 2 Measure by repeatedly releasing vehicle speed setting during A S C D driving Proper indication A S C D is set 12V A S C D is released 0V
2	A S C D wiring harness	Refer to section EL for A S C D
3	A S C D controller	Refer to section EL for A S C D
4	A S C D O D cut signals	1 Connect tester to connector terminals, Nos 15 and 22, of lock-up control unit 2 Measure by repeatedly releasing vehicle speed setting during A S C D driving in D4 speed Proper indication Accelerator pedal is depressed 0V Accelerator pedal is released 5V
5	A S C D wiring harness	Refer to section EL for A S C D
6	Output signal wiring	Check connector between control unit and O D cancel solenoid for connections and continuity
7	O D cancel solenoid	Apply 12V voltage to solenoid proper to see if it operates normally

TROUBLE-SHOOTING AND DIAGNOSES

Inspection of Kickdown Control

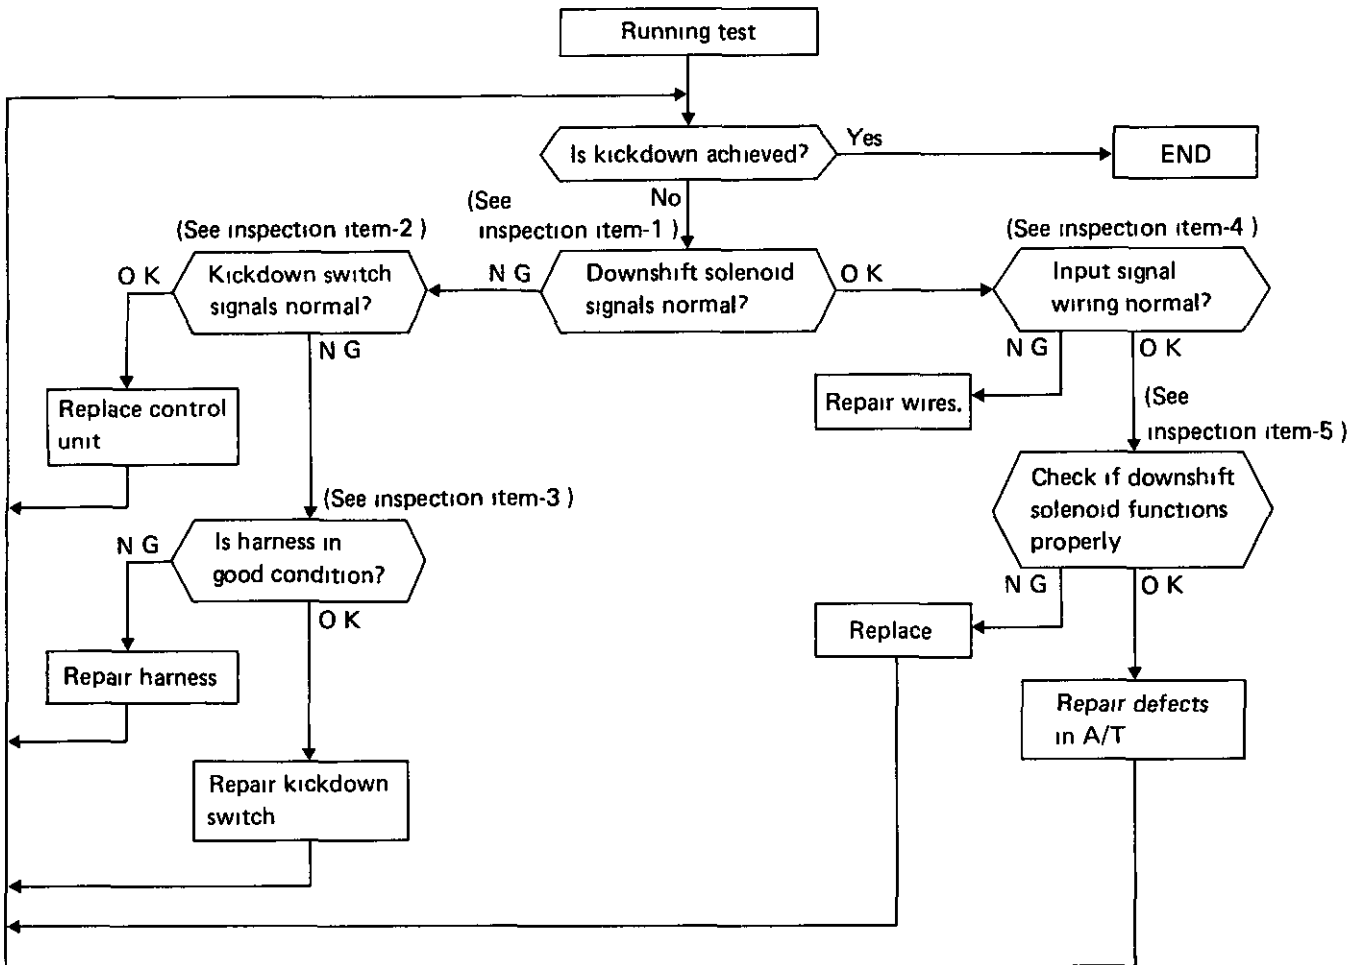

INSPECTION POINTS

Inspection No	Item to be checked	Checking method
1	Downshift solenoid signals	Listen for a "click" to be emitted by downshift solenoid when accelerator pedal is fully depressed and ignition switch is "ON"
2	Kickdown switch signals	Connect tester to connector terminals, Nos 21 and 22, of lock-up control unit Measure while operating accelerator pedal Full-open accelerator 0V Less than full open 5V
3	Wires for kickdown switch	Check connector between kickdown switch and control unit for proper connection and continuity
4	Input signal wiring	Check connector between downshift solenoid and control unit for proper connection and continuity
5	Downshift solenoid	Apply 12V voltage to solenoid proper to see if it functions normally

TROUBLE-SHOOTING AND DIAGNOSES

Troubles Detected by Self-diagnosing and Their Indication


Trouble-shooting procedure

Before trouble-shooting the lock-up control unit, operate the self-diagnosis function as follows

- 1 Turn O D control switch to "ON".
- 2 Turn the ignition switch to "ON"

Do not start the engine.

- 3 Press the kickdown switch to "ON" for at least one second

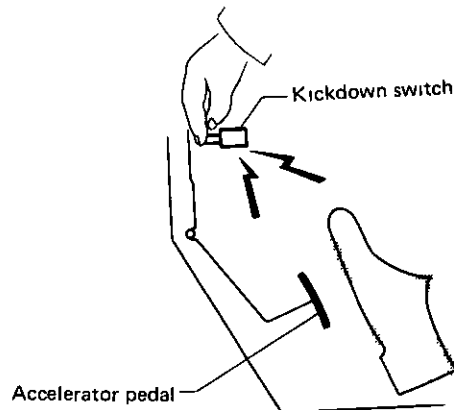


SAT077A

- 4 Start the engine and run the vehicle about 20 km/h (12 MPH), and check to see whether or not an abnormal condition exists

Turning the ignition switch to "OFF" or "ACC" cancels the self-diagnosis function. If cancelled, repeat steps over again

- 5 If an abnormal condition is indicated, track down the cause of the problem in accordance with the chart as shown below

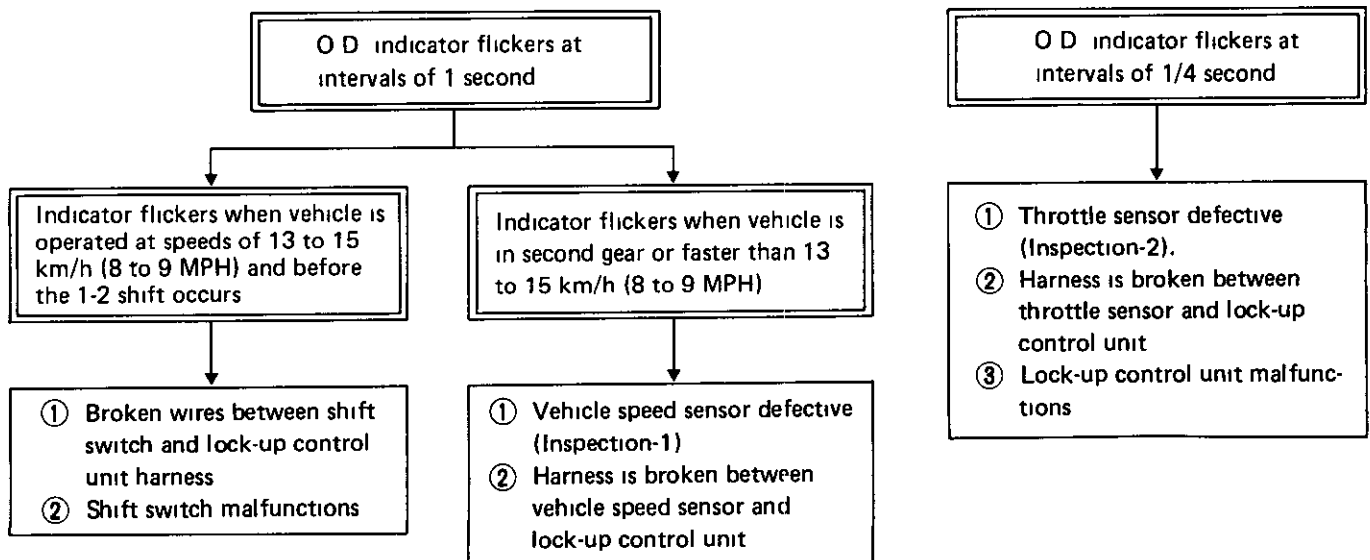

TROUBLE-SHOOTING AND DIAGNOSES


_____Troubles Detected by Self-diagnosing and Their Indication (Cont'd)_____

INSPECTION POINTS

No of inspection	Checking item	Checking method
1	Vehicle speed sensor	1 Connect tester to connector terminals, Nos 11 and 22, of lock-up control unit 2 Check voltage variation by running vehicle over 1 m (3 ft) at very slow speed Proper indication Voltage must vary from 0V to over 5V
2	Throttle sensor	1 Connect tester to connector terminals, Nos 4 and 22, of lock-up control unit 2 Measure voltage while operating accelerator pedal Proper indication Accelerator pedal in full-close throttle position 0.4 V Accelerator pedal in full-open throttle position 4V


TROUBLE-SHOOTING AND DIAGNOSES

Pressure Testing

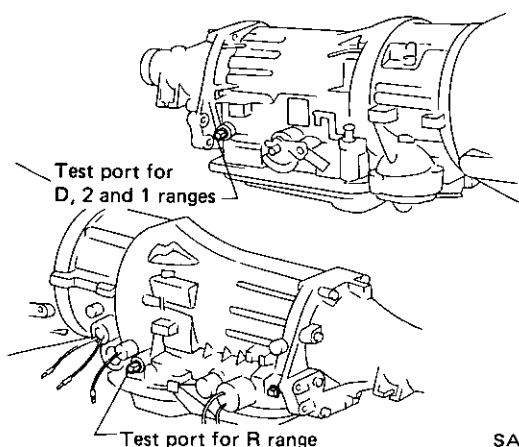

LINE PRESSURE

1. Install pressure gauge to line pressure port

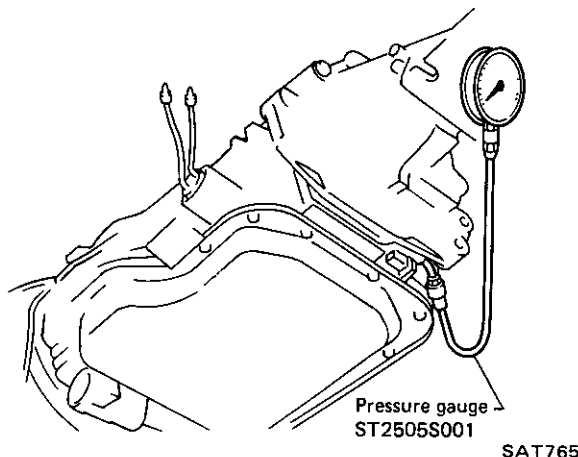

2. Warm up engine until engine oil and A T F. reach operating temperatures.

A.T.F. temperature:

50 - 80°C (122 - 176°F)

- 3 Set parking brake and block wheels.
- 4 Measure line pressure at idle and at stall point while depressing brake pedal fully

At idling

VG30E engine without turbo

Range	Line pressure kPa (kg/cm ² , psi)
R	569 - 755 (5.8 - 7.7, 82 - 109)
D	314 - 373 (3.2 - 3.8, 46 - 54)
2	569 - 1,128 (5.8 - 11.5, 82 - 164)
1	314 - 373 (3.2 - 3.8, 46 - 54)

VG30E turbo engine

Range	Line pressure kPa (kg/cm ² , psi)
R	392 - 490 (4.0 - 5.0, 57 - 71)
D	255 - 353 (2.6 - 3.6, 37 - 51)
2	588 - 1,177 (6.0 - 12.0, 85 - 171)
1	255 - 355 (2.6 - 3.6, 37 - 51)

At stall test

- 1 Start engine and place select lever in "D" range
 - 2 Apply foot brake and accelerate to wide-open throttle
 3. Quickly note the line pressure and immediately release throttle
 - 4 Shift select lever to "N"
 - 5 Cool off A T.F.
 6. Perform line pressure testing in the same manner as in steps 2 through 6 with select lever in "2", "1" and "R", respectively.
- Do not perform tests for more than five seconds at any shift range
 - Do not proceed to next "range" test immediately after one "range" test is done. Wait until oil temperature decreases

TROUBLE-SHOOTING AND DIAGNOSES

Pressure Testing (Cont'd)

VG30E engine without turbo

Range	Line pressure kPa (kg/cm ² , psi)
R	2,089 - 2,393 (21.3 - 24.4, 303 - 347)
D	1,128 - 1,275 (11.5 - 13.0, 164 - 185)
2	1,128 - 1,275 (11.5 - 13.0, 164 - 185)
1	1,128 - 1,275 (11.5 - 13.0, 164 - 185)

VG30E turbo engine

Range	Line pressure kPa (kg/cm ² , psi)
R	2,530 - 2,824 (25.8 - 28.8, 367 - 410)
D	1,824 - 1,981 (18.6 - 20.2, 264 - 287)
2	1,824 - 1,981 (18.6 - 20.2, 264 - 287)
1	1,824 - 1,981 (18.6 - 20.2, 264 - 287)

Judgment by measuring line pressure

If line pressure does not rise, first check to make sure that vacuum hose is connected properly.

- 1) When line pressure is low at all positions, the problem may be due to
 - Wear on interior of oil pump
 - Oil leakage at or around oil pump, control valve body, transmission case or governor
 - Sticking pressure regulator valve
 - Sticking pressure modifier valve
- 2) When line pressure is low at a particular position, the problem may be due to the following
 - If oil leaks at or around forward clutch (rear) or governor, line pressure is low in "D", "2" or "1" range but is normal in "R" range
 - If oil leaks at or around low and reverse brake circuit, line pressure becomes low in "R" or "P" range but is normal in "D", "2" or "1" range
- 3) When line pressure is high, pressure regulator valve may have stuck

TROUBLE-SHOOTING AND DIAGNOSES

Stall Testing


The stall test is an effective method of testing clutch and band holding ability, torque converter one-way clutch operation, and engine performance. A stall test should only be performed as a last resort because of the high fluid temperature it generates and the excessive load it places on the engine and transmission.

CAUTION.

- a. Transmission and engine fluid levels should always be checked and fluid added as needed.
- b. Run engine to attain proper warm-up.
- c. During test, never hold throttle wide-open for more than 5 seconds.
- d. Do not test more than two gear ranges without driving vehicle to cool off engine and transmission.

STALL TEST PROCEDURE

- 1 Set parking brake and block wheels

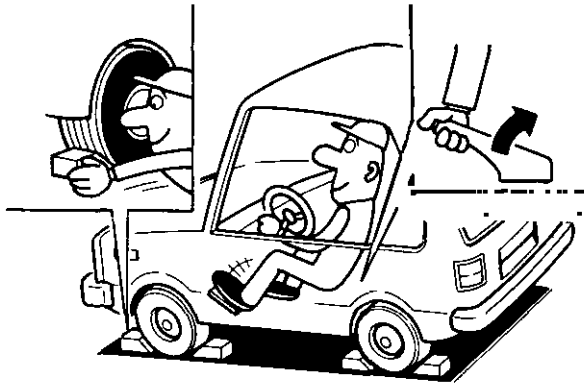

SAT597

2. Install a tachometer where it can be seen by driver during test
- 3 Start engine and place select lever in "D" range
- 4 Apply foot brake and accelerate to wide-open throttle
- 5 Quickly note the engine stall speed and immediately release throttle


Stall revolution:

VG30E engine without turbo

2,150 - 2,450 rpm

VG30E turbo engine

2,500 - 2,800 rpm

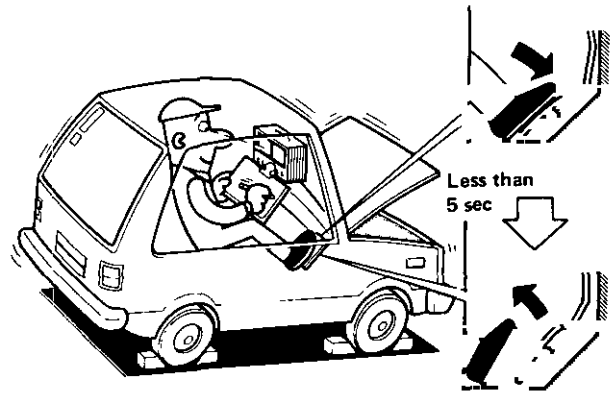


SAT598

- 6 Shift select lever to "N"
- 7 Cool off A.T.F
- 8 Perform stall tests in the same manner as in steps 3 through 7 with select lever in "1" and "R", respectively

TROUBLE-SHOOTING AND DIAGNOSES

STALL TEST ANALYSIS

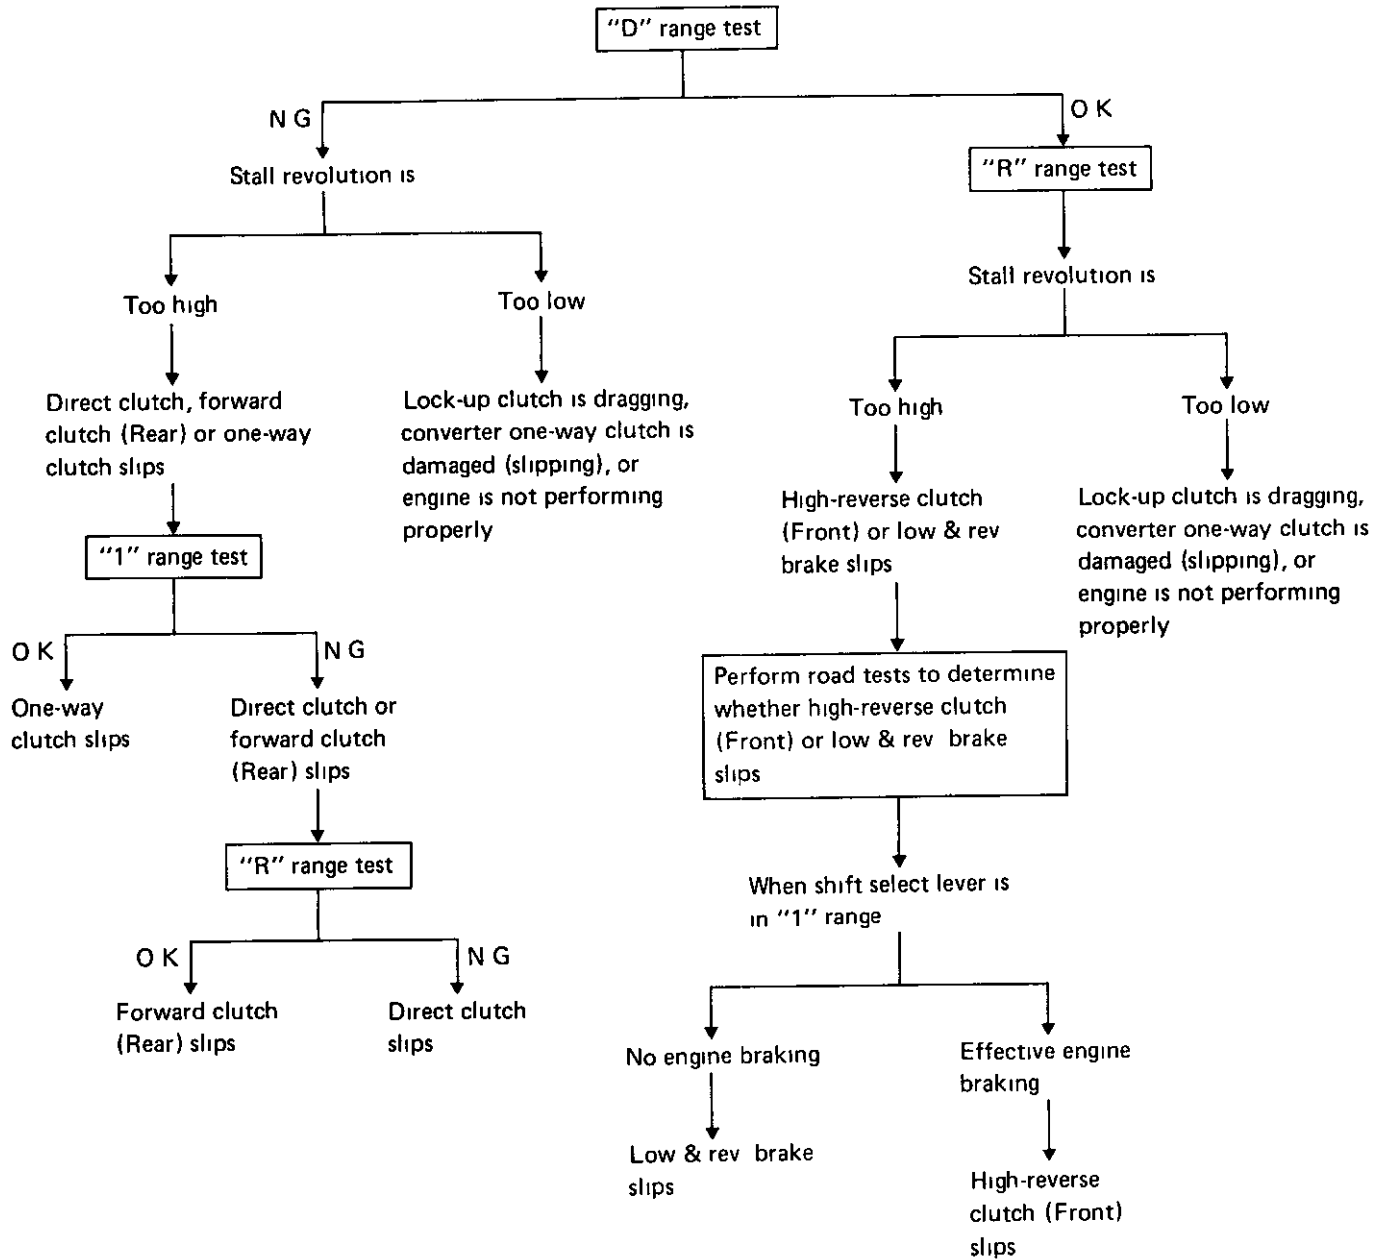

If converter one-way clutch is stuck, vehicle will have poor high speed performance and low engine rpm when it is raced in "N" range. If converter one-way clutch is slipping, vehicle will be sluggish up to 50 or 60 km/h (30 or 40 MPH).

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

Engine model	VG30E	VG30E turbo
Automatic transmission model	E4N71B	
Transmission model code number	X8203	X8206
Stall torque ratio	2.0 : 1	
Transmission gear ratio		
1st	2.458	
2nd	1.458	
Top	1.000	
O/D	0.686	
Reverse	2.182	
Recommended oil	Automatic transmission fluid "Dexron" type	
Oil capacity	7.0 liters (7-3/8 US qt, 6-1/8 Imp qt)	

Specifications and Adjustment

Transmission model code number	X8203	X8206
Torque converter assembly Stamped mark on the torque converter	GXA	G
Direct clutch		
Number of drive plates	2	2
Number of driven plates	2	2
Clearance mm (in)		
Standard	0 - 0.2 (0 - 0.008)	
Allowable limit	0.2 (0.008)	
Drive plate thickness mm (in)		
Standard	1.50 - 1.65 (0.0591 - 0.0650)	
Allowable limit	1.4 (0.055)	
Thickness of race side	Thickness mm (in)	Part number
	0.4 (0.016)	31606-X8501
	0.6 (0.024)	31606-X8502
	0.8 (0.031)	31606-X8500
	1.0 (0.039)	31606-X8503
	1.2 (0.047)	31606-X8504

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustment (Cont'd)

Transmission model code number	X8203	X8206
Front clutch (High reverse)		
Number of drive plates	3	4
Number of driven plates	5	5
Clearance mm (in)		
Standard	1 6 - 1 8 (0 063 - 0 071)	
Allowable limit	2 2 (0 087)	2 4 (0 094)
Drive plate thickness mm (in)		
Standard	1 50 - 1 65 (0 0591 - 0 0650)	
Allowable limit	1 4 (0 055)	
Thickness of retaining plate	Thickness mm (in)	Part number
	5 0 (0 197)	31567-X2900
	5 2 (0 205)	31567-X2901
	5 4 (0 213)	31567-X2902
	5 6 (0 220)	31567-X2903
	5 8 (0 228)	31567-X2904
	6 0 (0 236)	31567-X2905
	6 2 (0 244)	31567-X2906
Rear clutch (Forward)		
Number of drive plates	6	6
Number of driven plates	6	6
Clearance mm (in)		
Standard	0 8 - 1 0 (0 031 - 0 039)	
Allowable limit	1 5 (0 059)	1 5 (0 059)
Drive plate thickness mm (in)		
Standard	1 50 - 1 65 (0 0591 - 0 0650)	
Allowable limit	1 4 (0 055)	
Thickness of retaining plate	Thickness mm (in)	Part number
	6 2 (0 244)	31567-X2906
	6 4 (0 252)	31507-X8600
	6 6 (0 260)	31507-X8601
	6 8 (0 268)	31537-X2800
	7 0 (0 276)	31537-X2801
	7 2 (0 283)	31537-X0900
	7 4 (0 291)	31537-X0901
	7 6 (0 295)	31537-X0902

Transmission model code number	X8203	X8206
Low & reverse brake		
Number of drive plates	6	8
Number of driven plates	6	8
Clearance mm (in)		
Standard	0 80 - 1 05 (0 0315 - 0 0413)	
Allowable limit	2 0 (0 079)	2 4 (0 094)
Drive plate thickness mm (in)		
Standard	1 90 - 2 05 (0 0748 - 0 0807)	
Allowable limit	1 8 (0 071)	
Thickness of retaining plate	Thickness mm (in)	Part number
	11 8 (0 465)	31667-X0300
	12 0 (0 472)	31667-X0301
	12 2 (0 480)	31667-X0302
	12 4 (0 488)	31667-X0303
	12 6 (0 496)	31667-X0304
	12 8 (0 504)	31667-X0305
	Thickness mm (in)	Part number
	9 8 (0 386)	31667-X2900
	10 0 (0 394)	31667-X2901
	10 2 (0 402)	31667-X2902
	10 4 (0 409)	31667-X2903
	10 6 (0 417)	31667-X2904
	10 8 (0 425)	31667-X2905
2nd brake band		
Piston size mm (in)		
Big dia	72 (2 83)	80 (3 15)
Small dia	50 (1 97)	44 (1 73)
O D brake band		
Piston size mm (in)		
Big dia	60 (2 36)	60 (2 36)
Small dia	40 (1 57)	40 (1 57)
Front end play mm (in)	0 5 - 0 8 (0 020 - 0 031)	
Thickness of high-reverse clutch (Front) thrust washer	Thickness mm (in)	Part number
	1 3 (0 051)	31528-X0107
	1 5 (0 059)	31528-X0105
	1 7 (0 067)	31528-X0106
	1 9 (0 075)	31528-X0100
	2 1 (0 083)	31528-X0101
	2 3 (0 091)	31528-X0102
	2 5 (0 098)	31528-X0103
	2 7 (0 106)	31528-X0104

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustment (Cont'd)

Total end play	mm (in)	0.25 - 0.50 (0.0098 - 0.0197)	
Thickness of oil pump cover bearing race	Thickness mm (in)	Part number	
	1.2 (0.047)	31556-X0100	
	1.4 (0.055)	31556-X0101	
	1.6 (0.063)	31556-X0102	
	1.8 (0.071)	31556-X0103	
	2.0 (0.079)	31556-X0104	
	2.2 (0.087)	31556-X0105	
O D pack end play	mm (in)	0.5 - 0.8 (0.020 - 0.031)	
Thickness of O D thrust washer	Thickness mm (in)	Part number	
	1.3 (0.051)	31528-X0107	
	1.5 (0.059)	31528-X0105	
	1.7 (0.067)	31528-X0106	
	1.9 (0.075)	31528-X0100	
	2.1 (0.083)	31528-X0101	
	2.3 (0.091)	31528-X0102	
	2.5 (0.098)	31528-X0103	
	2.7 (0.106)	31528-X0104	
O D total end play	mm (in)	0.25 - 0.50 (0.0098 - 0.0197)	
Thickness of O D bearing race	Thickness mm (in)	Part number	
	1.2 (0.047)	31603-X8600	
	1.4 (0.055)	31603-X8601	
	1.6 (0.063)	31603-X8602	
	1.8 (0.071)	31603-X8603	
	2.0 (0.079)	31603-X8604	
	2.2 (0.087)	31603-X8605	

Oil pump clearance	mm (in)	
Outer gear-pump housing		
Standard		0.05 - 0.20 (0.0020 - 0.0079)
Allowable limit		0.25 (0.0098)
Outer gear-crescent		
Standard		0.14 - 0.21 (0.0055 - 0.0083)
Allowable limit		0.25 (0.0098)
Gears-pump cover		
Standard		0.02 - 0.04 (0.0008 - 0.0016)
Allowable limit		0.08 (0.0031)
Drum support		
Seal ring-ring groove		
Standard		0.05 - 0.20 (0.0020 - 0.0079)
Allowable limit		0.20 (0.0079)
Oil distributor		
Seal ring-ring groove		
Standard		0.04 - 0.16 (0.0016 - 0.0063)
Allowable limit		0.16 (0.0063)
Planetary carrier	mm (in)	
Clearance between pinion washer and planetary carrier		
Standard		0.20 - 0.70 (0.0079 - 0.0276)
Allowable limit		0.80 (0.0315)
Run-out of oil pump cover to housing	mm (in)	Less than 0.07 (0.0028)
Run-out of drum support to O D case	mm (in)	Less than 0.05 (0.0020)

STALL REVOLUTION

VG30E engine without turbo	2,150 - 2,450 rpm
VG30E turbo engine	2,500 - 2,800 rpm

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Tightening Torque










Unit	N m	kg-m	ft-lb
Transmission installation			
Drive plate to Crankshaft	137 - 157	14.0 - 16.0	101 - 116
Drive plate to torque converter	39 - 49	4.0 - 5.0	29 - 36
Converter housing to engine	39 - 49	4.0 - 5.0	29 - 36
Rear mounting bracket to transmission	31 - 42	3.2 - 4.3	23 - 31
Rear mounting bracket to rear insulator	31 - 42	3.2 - 4.3	23 - 31
Rear mounting member to body	59 - 78	6.0 - 8.0	43 - 58
Component part			
Transmission case to converter housing	44 - 54	4.5 - 5.5	33 - 40
Transmission case to rear extension	20 - 25	2.0 - 2.5	14 - 18
Oil pan to transmission case	5 - 7	0.5 - 0.7	3.6 - 5.1
2nd servo piston retainer to transmission case	7 - 9	0.7 - 0.9	5.1 - 6.5
2nd piston stem (when adjusting band brake)	12 - 15*1	1.2 - 1.5*1	9 - 11*1
2nd piston stem lock nut	15 - 39	1.5 - 4.0	11 - 29
One-way clutch inner race to transmission case	13 - 18	1.3 - 1.8	9 - 13
Control valve body to transmission case	5.4 - 7.4	0.55 - 0.75	4.0 - 5.4
Lower valve body to upper valve body	2.5 - 3.4	0.25 - 0.35	1.8 - 2.5
O D servo piston retainer to O D case	10 - 15	1.0 - 1.5	7 - 11
O D piston stem (when adjusting band brake)	7 - 10*2	0.7 - 1.0*2	5.1 - 7.2*2
O D piston stem lock nut	15 - 39	1.5 - 4.0	11 - 29
Side plate to control valve body	2.5 - 3.4	0.25 - 0.35	1.8 - 2.5
Nut for control valve reamer bolt	5 - 7	0.5 - 0.7	3.6 - 5.1
Oil strainer to lower valve body	3 - 4	0.3 - 0.4	2.2 - 2.9
Governor valve body to oil distributor	5 - 7	0.5 - 0.7	3.6 - 5.1
Oil pump housing to oil pump cover	6 - 8	0.6 - 0.8	4.3 - 5.8
Inhibitor switch to transmission case	5 - 7	0.5 - 0.7	3.6 - 5.1

Unit	N m	kg-m	ft-lb
Manual shaft lock nut	29 - 39	3.0 - 4.0	22 - 29
Oil cooler pipe to transmission case	29 - 49	3.0 - 5.0	22 - 36
Test plug (oil pressure inspection hole)	14 - 21	1.4 - 2.1	10 - 15
Support actuator (parking rod inserting position) to rear extension	8 - 11	0.8 - 1.1	5.8 - 8.0
Drum support to O D case	7 - 9	0.7 - 0.9	5.1 - 6.5

*1 Turn back three turns after tightening.

*2 Turn back two turns after tightening.

     SPECIAL SERVICE TOOLS

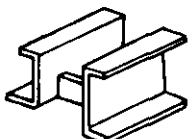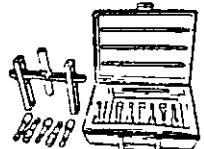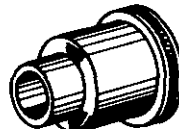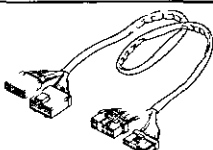Tool number (Kent-Moore No) Tool name	Tool	Tool number (Kent-Moore No) Tool name	Tool
ST07870000 (J34308, J3289-20) Transmission case stand		(J34291) Shim setting gauge set	
ST25850000 (J25721-A) Sliding hammer			
GG91060000 (-) (GG93010000) (J25703) Torque wrench			
ST25420001 (J26063) (ST25420000) (J26063-A) Clutch spring compressor			
ST25570001 (J23659-A) (ST25570000) (J23659-1) Hex-head extension			
ST25490000 (-) (ST25512001) (-) Socket extension			
ST25580001 (-) Oil pump assembling gauge			
ST2505S001 (-) Oil pressure gauge set			
KV319K0010 (J34270) Diagnostic sub-harness			
(J33909) Transmission alignment arbor			

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.