

BRAKE SYSTEM

SECTION **BR**

CONTENTS


BRAKE HYDRAULIC LINE ...	BR- 2
BRAKE PEDAL ...	BR- 4
MASTER CYLINDER .	BR- 6
BRAKE BOOSTER ...	BR- 7
FRONT DISC BRAKE (CL28VE, CL28VB) — <i>Caliper</i>	BR- 9
FRONT DISC BRAKE (CL28VE, CL28VB) — <i>Rotor</i> ..	BR-12
REAR DISC BRAKE (CL14HVB) — <i>Caliper</i>	BR-13
REAR DISC BRAKE — <i>Rotor</i> .	BR-17
PARKING BRAKE .	BR-18
SERVICE DATA AND SPECIFICATIONS (S D.S.) ..	BR-20
SPECIAL SERVICE TOOL	BR-22

BR

BRAKE HYDRAULIC LINE

Precautions

- Recommended fluid is brake fluid "DOT 3"
- Do not reuse drained brake fluid
- Be careful not to splash brake fluid on painted areas

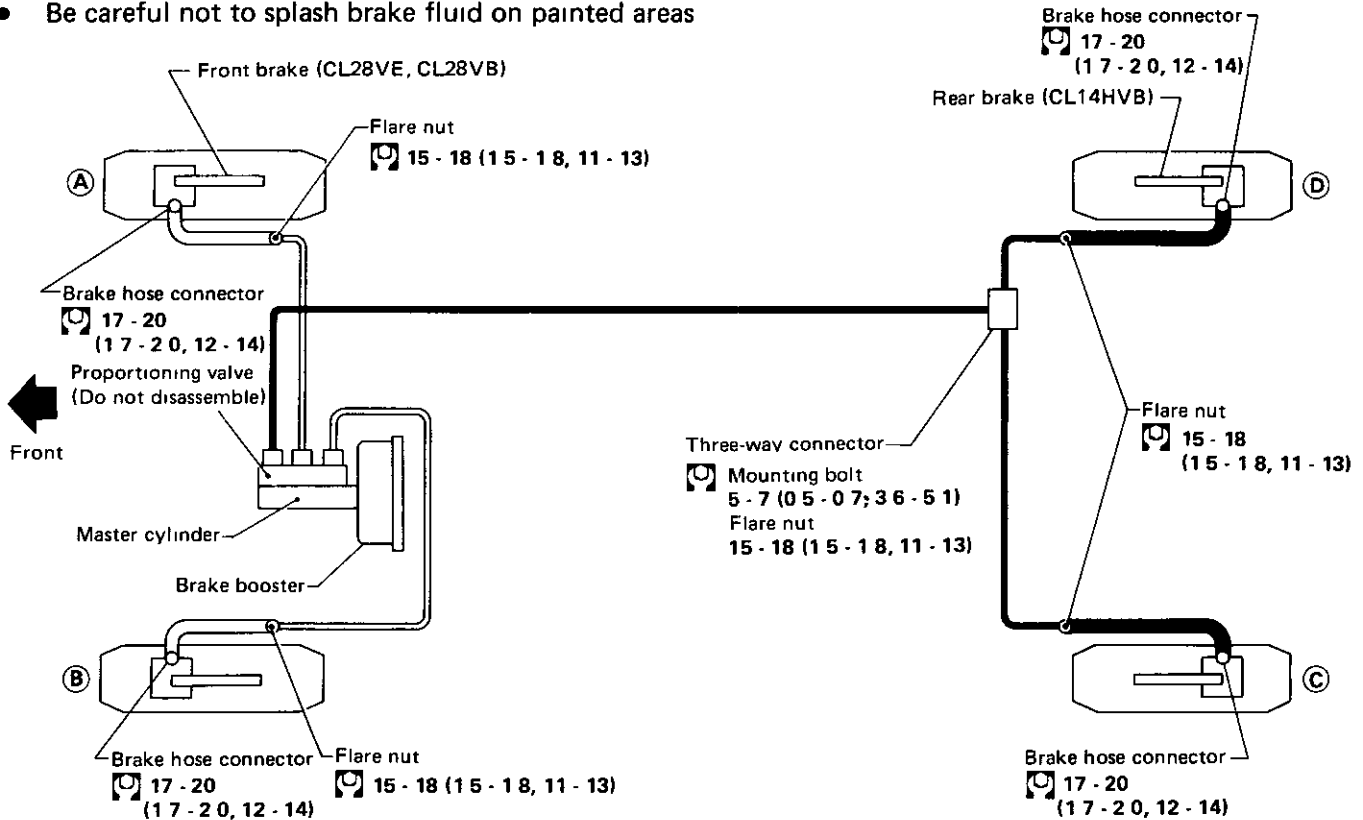

WARNING

Clean pad and shoe dust using a dust collector after cleaning with waste cloth


SBR821

Bleeding Procedure

PRECAUTIONS

Carefully monitor brake fluid level at master cylinder during bleeding operation.

- Bleed air according to the following procedure
Left rear caliper ③ → Right rear caliper ④ → Right front caliper ① → Left front caliper ②
- Connect a transparent vinyl tube to air bleeder valve of caliper.

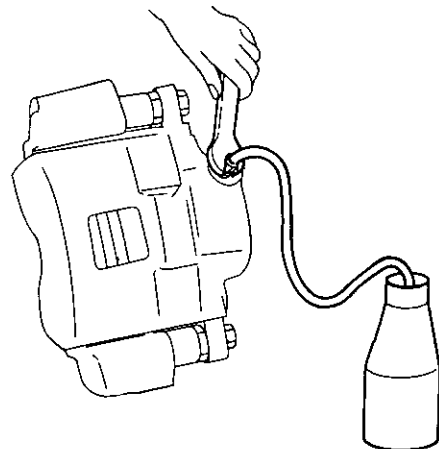

SBR606


BRAKE HYDRAULIC LINE

Removal and Installation

Inspection

CAUTION :

- a. When removing and installing brake tube, use Tool.

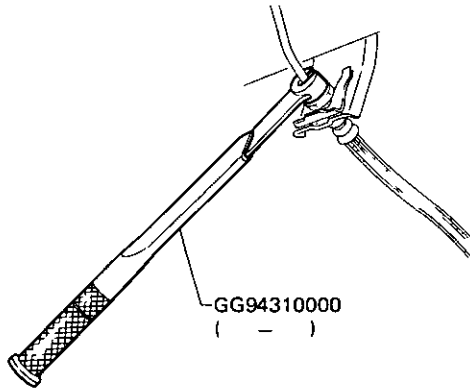


SBR500

- b. Cover openings to prevent entrance of dirt whenever disconnecting hydraulic line.
- To remove brake hose, first remove flare nut securing brake tube to hose, then withdraw lock spring. Next disconnect the other side.
 - All hoses must be free from excessive bending, twisting and pulling.
 - Whenever installing brake lines, be sure to check for oil leakage by fully depressing brake pedal.

Check brake lines (tubes and hoses) for evidence of cracks, deterioration or other damage. Replace any damaged parts.

If leakage occurs around connectors re-tighten or, if necessary, replace damaged parts.

BRAKE PEDAL

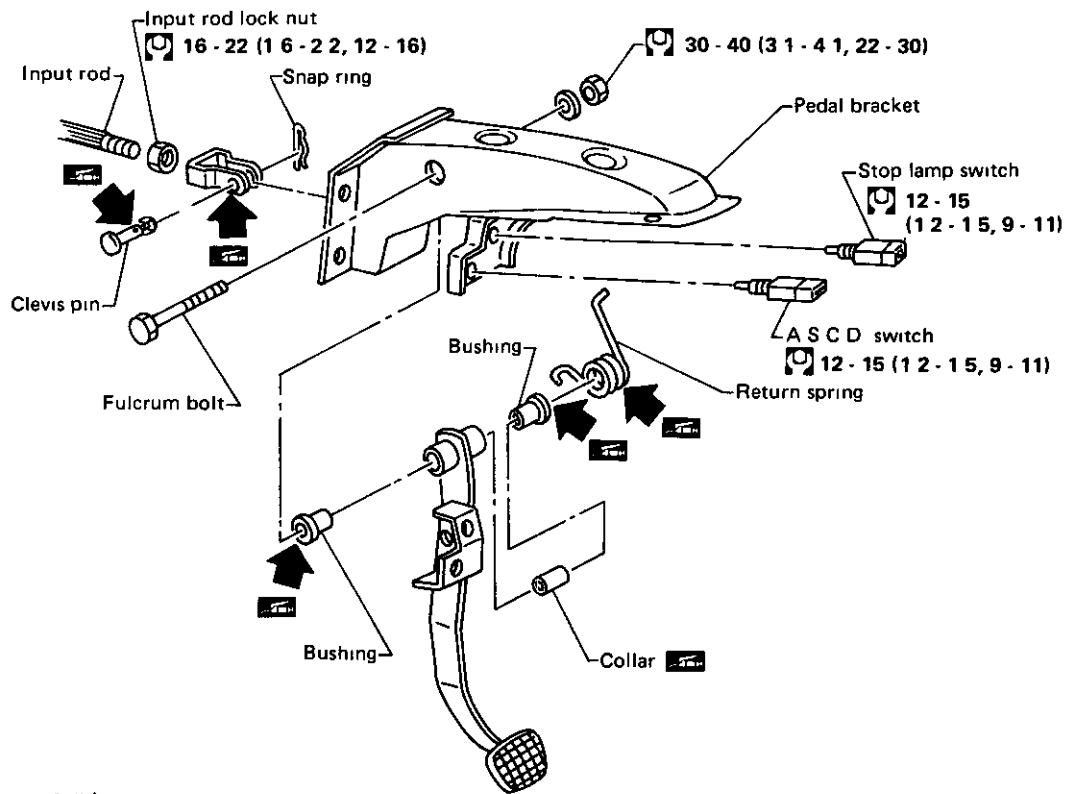

N m (kg-m, ft-lb)

SBR822

Inspection


Check brake pedal for the following items.

- Brake pedal bend
- Clevis pin deformation
- Crack of any welded portion

BRAKE PEDAL

Adjustment

Check brake pedal free height from melt sheet.
Adjust if necessary.

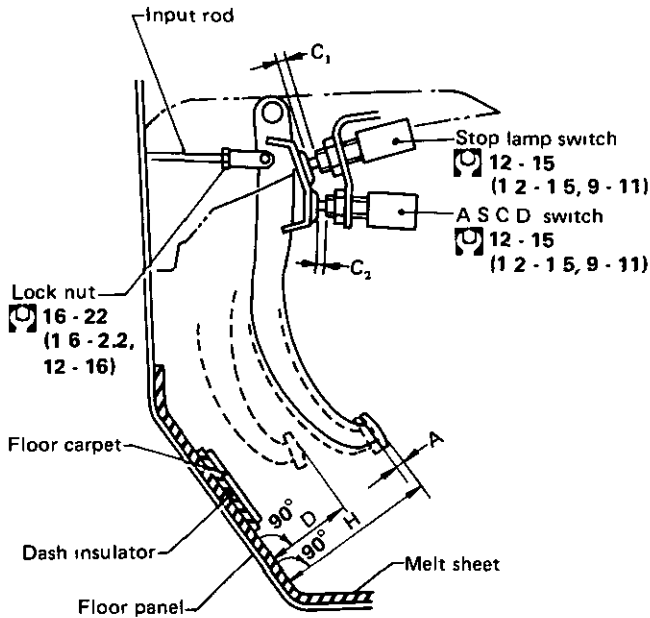

N m (kg-m, ft-lb)

SBR838

H. Free height

M/T 182 - 192 mm (7.17 - 7.56 in)

A/T 184 - 194 mm (7.24 - 7.64 in)

D: Depressed height

M/T 90 mm (3.54 in) or more

A/T 90 mm (3.54 in) or more

Under force of 490 N (50 kg, 110 lb) with engine running

C₁: Clearance between pedal stopper and threaded end of stop lamp switch.

0.3 - 1.0 mm (0.012 - 0.039 in)

C₂: Clearance between pedal stopper and threaded end of A.S.C.D. switch.


0.3 - 1.0 mm (0.012 - 0.039 in)

A: Pedal free play

1.0 - 3.0 mm (0.039 - 0.118 in)

(1) Adjust pedal free height with brake booster input rod. Then tighten lock nut.

Be sure that tip of input rod stays inside.

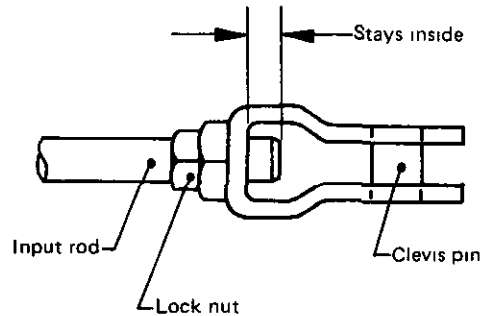

SBR930

(2) Adjust clearance "C₁" and "C₂" with stop lamp switch and A.S.C.D. switch respectively. Then tighten lock nuts.


(3) Check pedal free play.

Make sure that stop lamp is off when pedal is released.

(4) Check brake pedal depressed height with engine running.

If depressed height is below the specified value, check brake system for leaks, accumulation of air or any damage regarding component parts (master cylinder, wheel cylinder, etc.), and make the necessary repairs.

MASTER CYLINDER

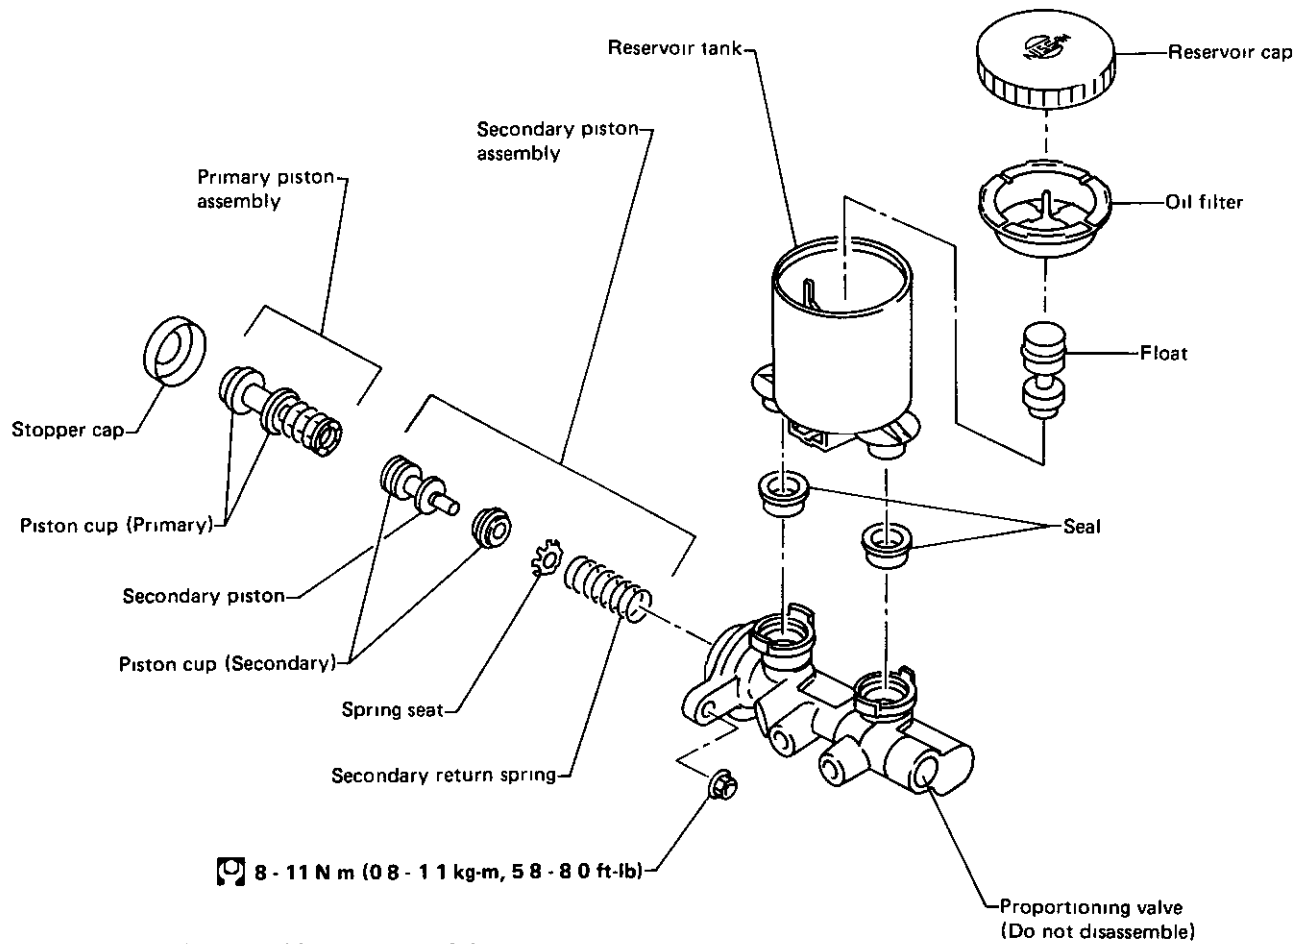

- Apply brake fluid or rubber grease to sliding contact surface when assembling master cylinder
- Check parts for wear or damage. Replace if any of above conditions are observed.
- Replace piston assembly when disassembled.

SBR823

BRAKE BOOSTER


Operating Check

- Depress brake pedal several times with engine off, then check that there is no change in pedal stroke
- Depress brake pedal, then start engine. If pedal goes down slightly, operation is normal.

Airtight Check

- Start engine, then stop it in one or two minutes. Depress brake pedal several times slowly. If pedal goes further down the first time, but gradually rises after second or third time, the booster is airtight.
- Depress brake pedal while engine is running, then stop it with pedal depressed. If there is no change in pedal stroke after holding pedal for thirty seconds, brake booster is airtight.

Removal and Installation

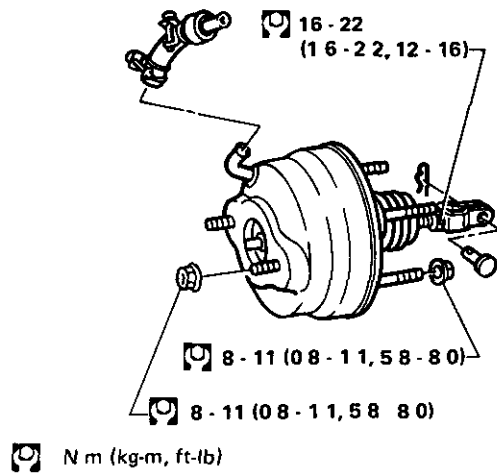


SBR831

BRAKE BOOSTER

Inspection

HOSES AND CONNECTORS


- Check condition of vacuum hoses and connectors
- Check vacuum hoses and check valve for air tightness.
- Do not apply any oil or lubricants to vacuum hose and check valve.

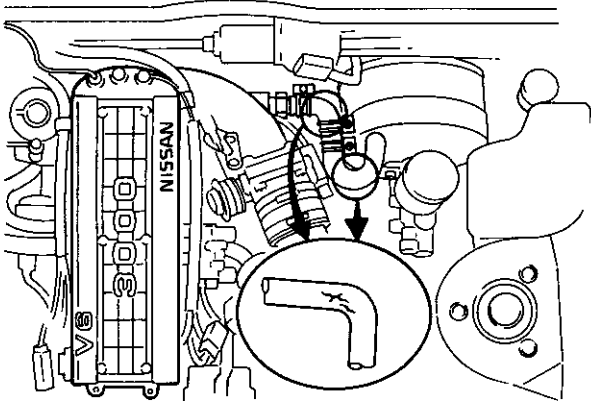

SBR986

CHECK VALVE

- When pressure is applied to the brake booster side of check valve and valve does not open, replace check valve with a new one.

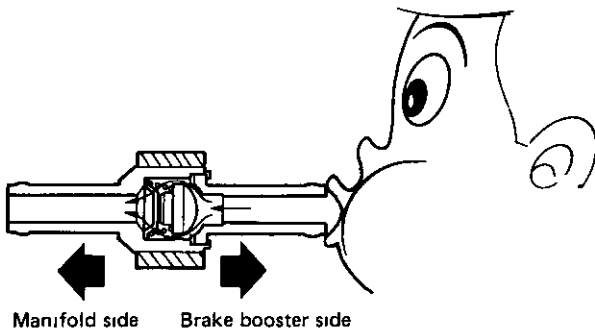


SBR846


OUTPUT ROD LENGTH CHECK

- 1 Supply brake booster with vacuum of -66.7 kPa (-500 mmHg, -19.69 inHg) using a handy vacuum pump
- 2 Check output rod length

Specified length:

 
10.275 - 10.525 mm (0.4045 - 0.4144 in)

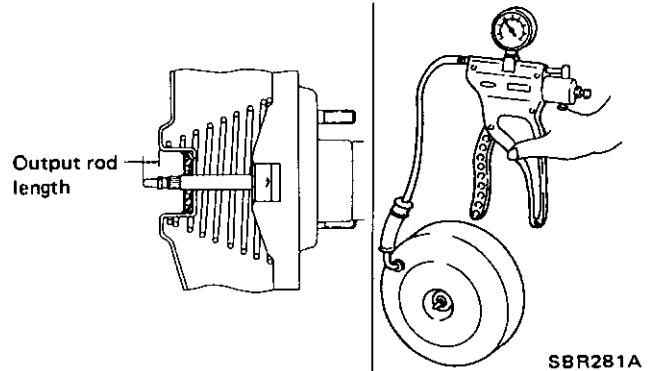

CL28VE

FRONT DISC BRAKE (CL28VE, CL28VB)—Caliper

CL28VB

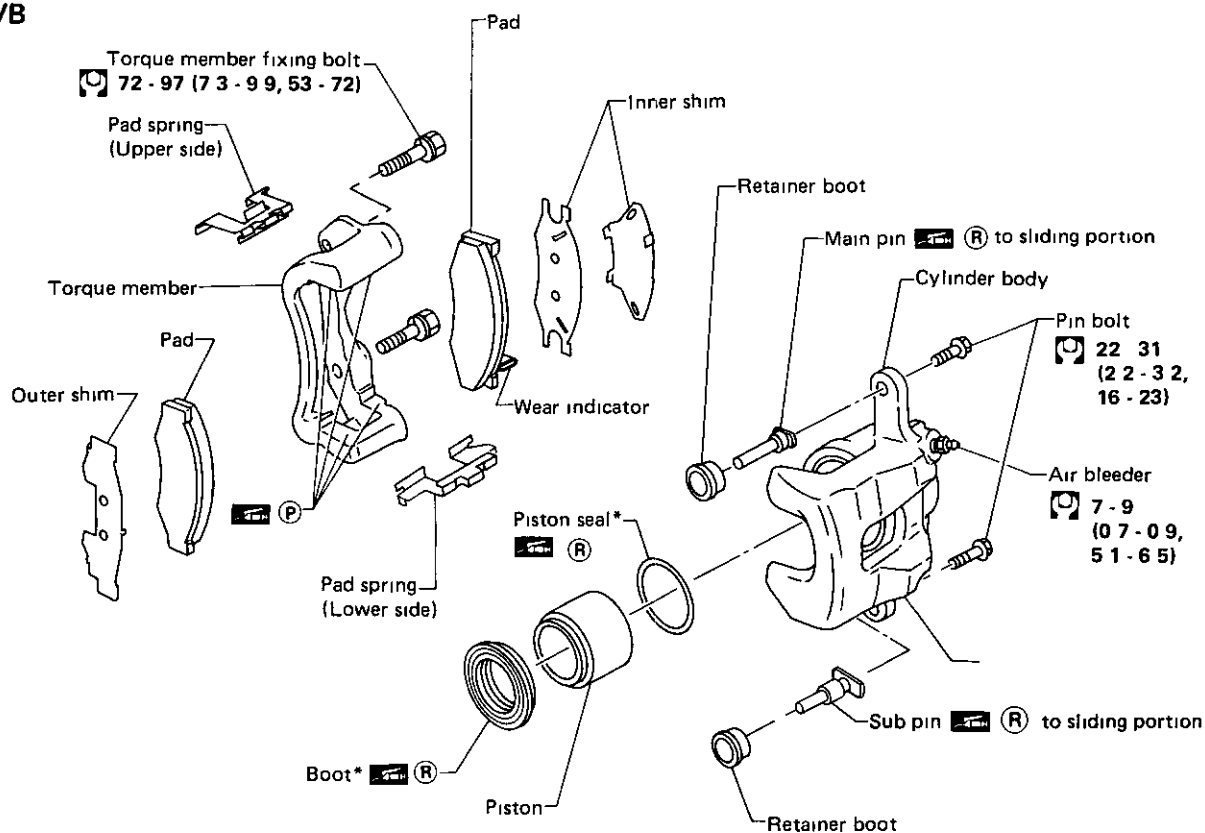

- (P) P B C (Poly Butyl Cuprysil) grease or silicone-based grease point
- (R) Rubber grease points
- * Always replace when disassembled

N m (kg-m, ft-lb)


SBR157A

Pad Replacement

CAUTION:


When cylinder body is swung up, do not depress brake pedal because piston will pop out.

- 1 Remove brake hose lock spring and pin bolt

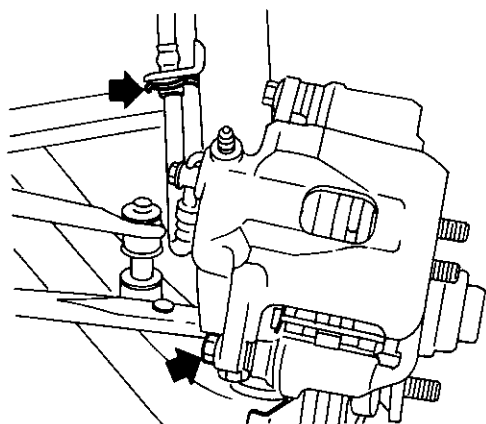

SBR988

- 2 Swing cylinder body upward. Then remove pad retainer and inner and outer shims

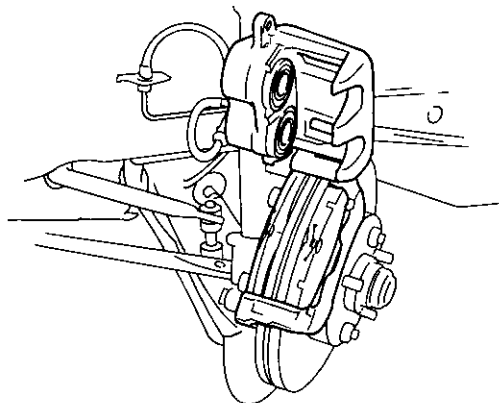


SBR296A

Be careful not to damage piston boot or get oil on rotor. Always replace shims when replacing pads.

FRONT DISC BRAKE (CL28VE, CL28VB)—Caliper

Removal and Installation

Remove torque member fixing bolts and brake hose connector

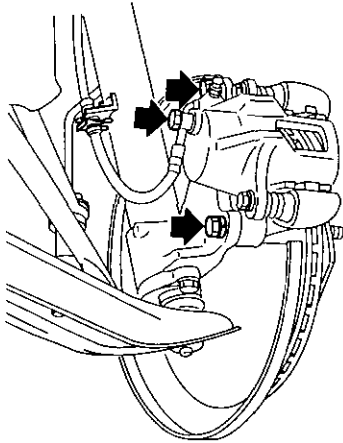


SBR839

Disassembly

Push out piston with dust cover with compressed air.

For CL28VE (2-piston type), use a wooden block so that the 2 pistons come out evenly.

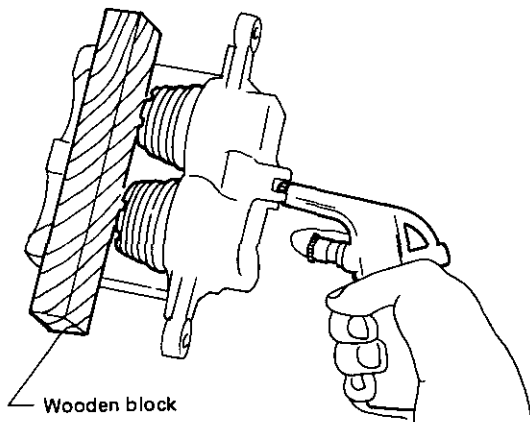

SBR085A

Inspection

CAUTION:

Use brake fluid to clean. Never use mineral oil.

CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body
- Minor damage from rust of foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary

PISTON

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed

CAUTION:


Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.

PIN, PIN BOLT, RETAINER BOOT, RUBBER BUSHING, RETAINER BUSHING, AND PIN BOOT

Check for wear, cracks or other damage. Replace if any of the above conditions are observed

Assembly

- With dust seal fitted to piston, insert dust seal into groove on cylinder body and install piston.
- Properly secure dust seal.
- Pay attention to piston seal direction

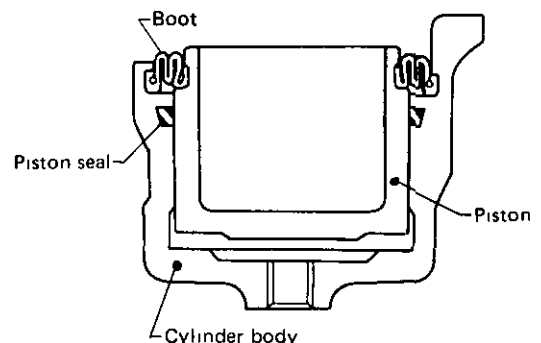

SBR574

FRONT DISC BRAKE (CL28VE, CL28VB)—Rotor


Inspection

RUBBING SURFACE

Check rotor for roughness, cracks or chips.

RUNOUT

Make sure axle shaft has no axial end play. Then check runout with a dial indicator

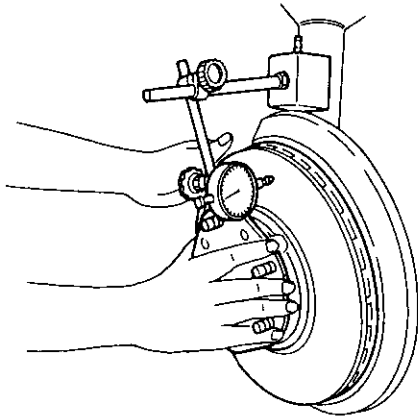


SBR158A

Rotor repair limit.

Maximum runout

**(Total indicator reading at
center of rotor pad contact surface)
0.07 mm (0.0028 in)**

THICKNESS

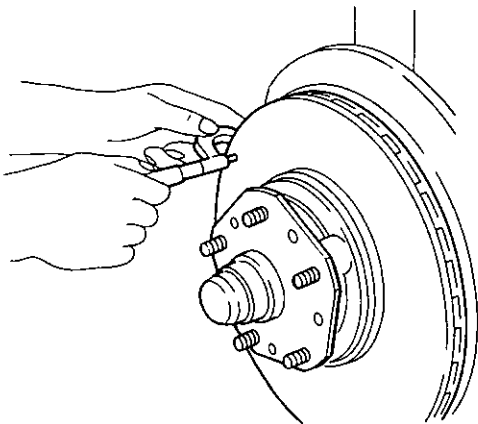


SBR159A

Rotor repair limit:

Minimum thickness

24.0 mm (0.945 in)

REAR DISC BRAKE (CL14HVB)—Caliper

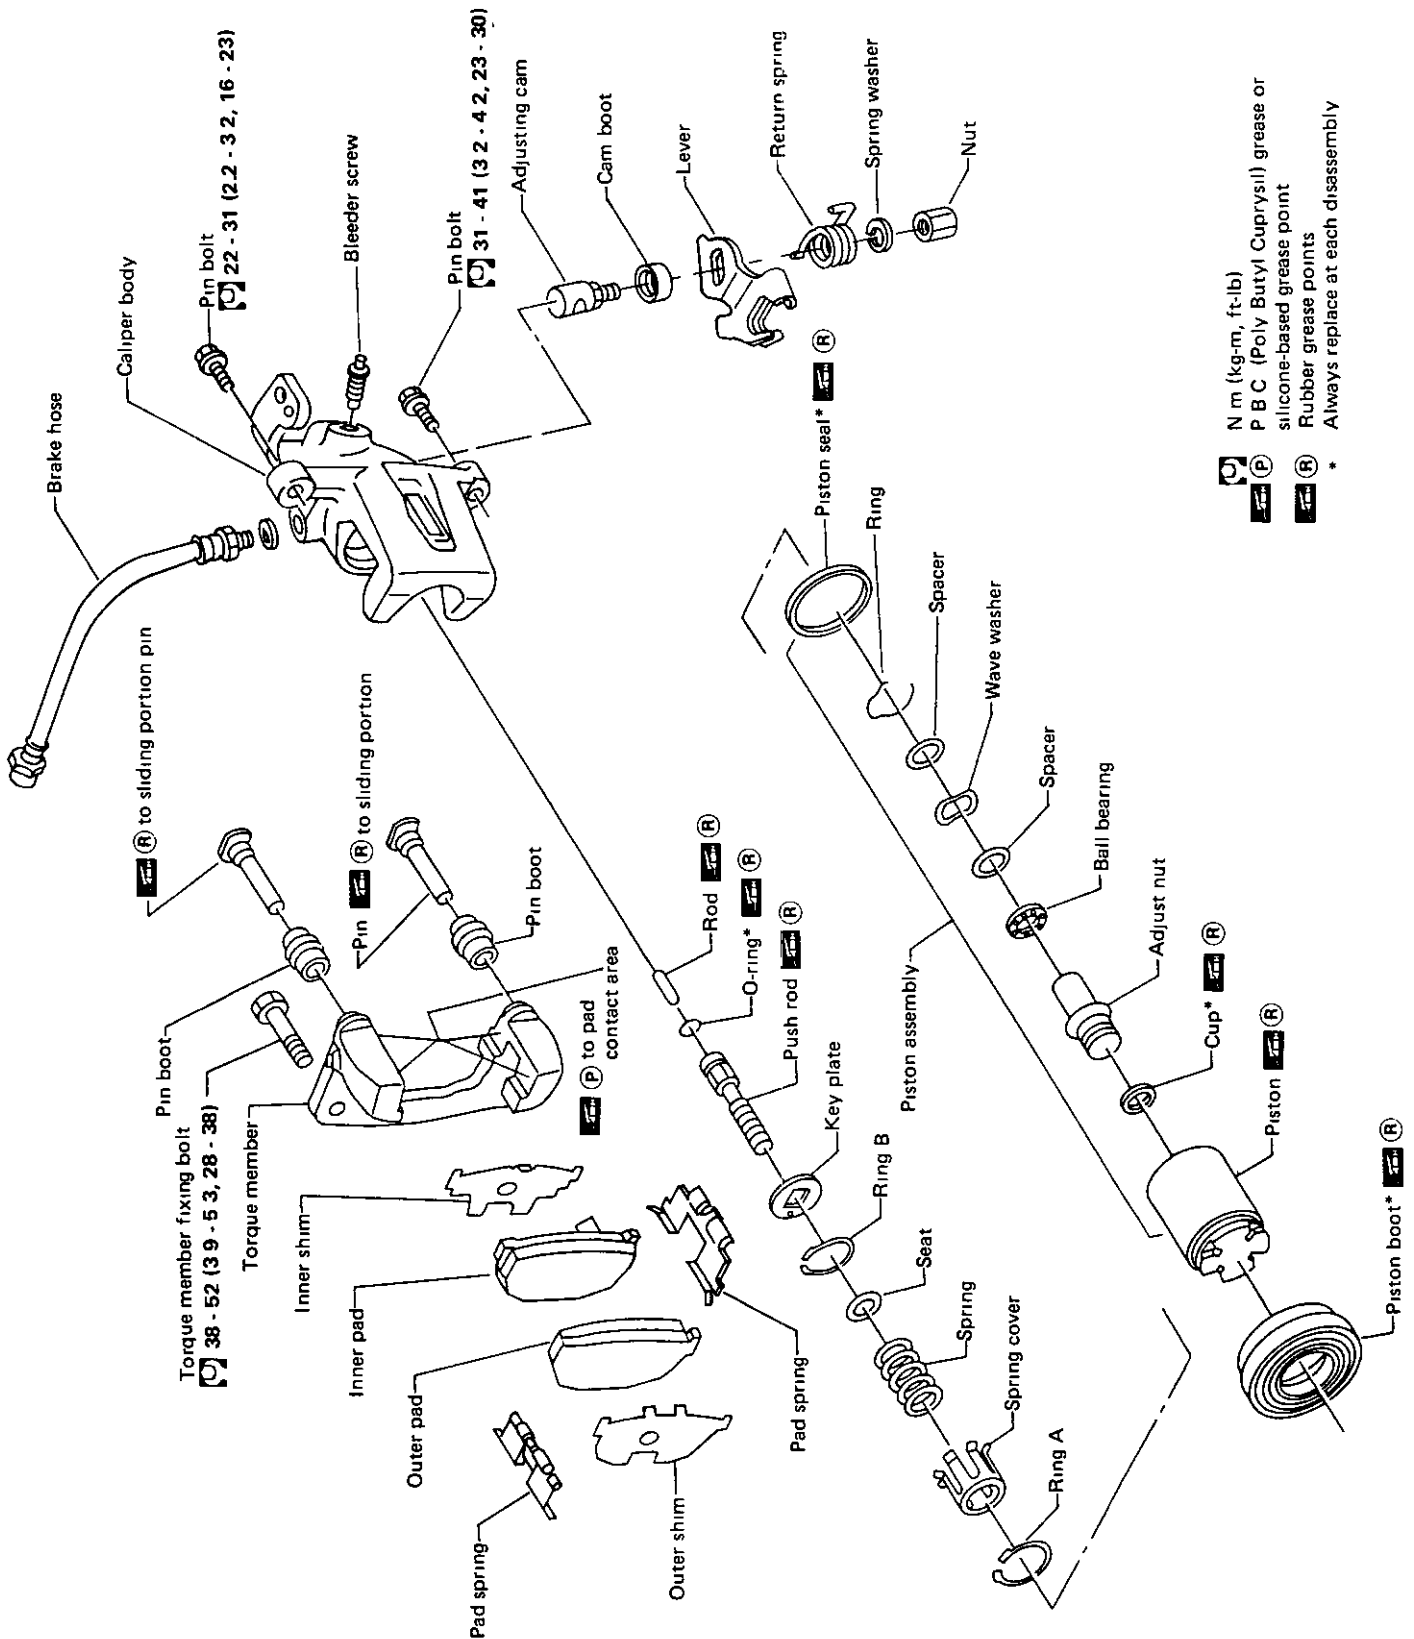

N m (kg-m, ft-lb)
P B C (Poly Butyl Cuprysil) grease or
silicone-based grease point
Rubber grease points
* Always replace at each disassembly

SBR151A


REAR DISC BRAKE (CL14HVB)—Caliper

Pad Replacement

CAUTION


When cylinder body is swung up, do not depress brake pedal because piston will pop out.

- 1 Disconnect parking brake cable, then remove pin bolts.

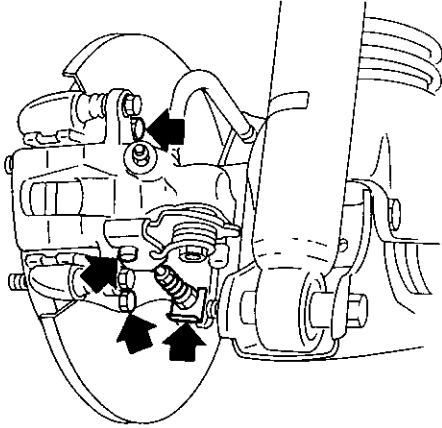

SBR166A

- 2 Remove pad retainer, pads and shims

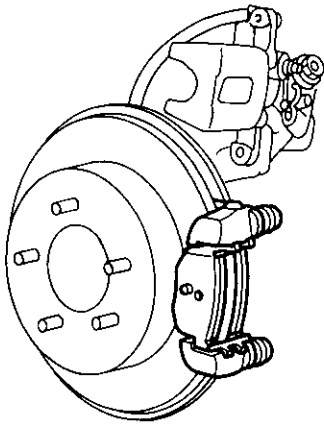


SBR160A

- 3 When installing pads, retract piston into cylinder body by turning it clockwise

Be careful not to damage piston boot or get oil on rotor.


Always replace shims when replacing pads.

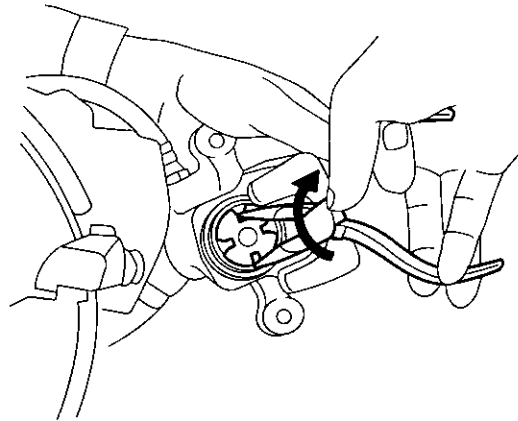

SBR641

Removal and Installation

Disconnect parking brake cable and brake hose, then remove caliper assembly.

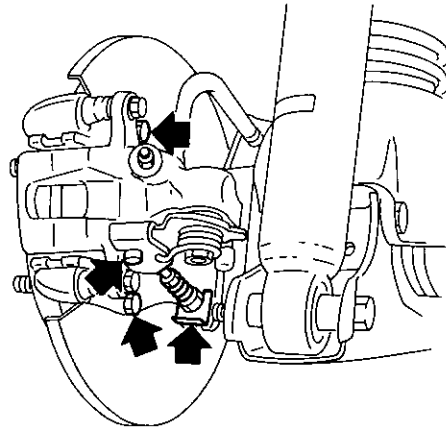


SBR166A

REAR DISC BRAKE (CL14HVB)—Caliper


Disassembly

- 1 Remove piston by turning it counterclockwise with suitable long nose pliers

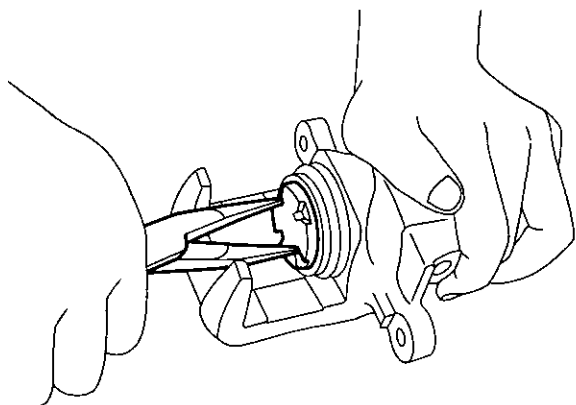

SBR646


- 2 Pry off ring from piston and remove adjusting nut

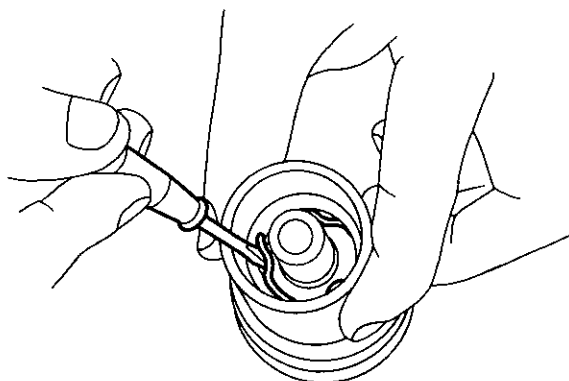

SBR648


- 3 Disassembly cylinder body

- (1) Pry off ring A with suitable pliers, then remove spring cover, spring and seat.

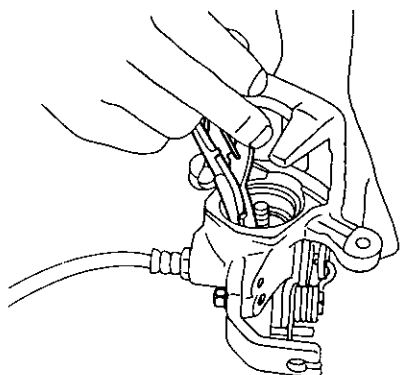


SBR148A

- (2) Pry off ring B, then remove key plate, push rod and rod

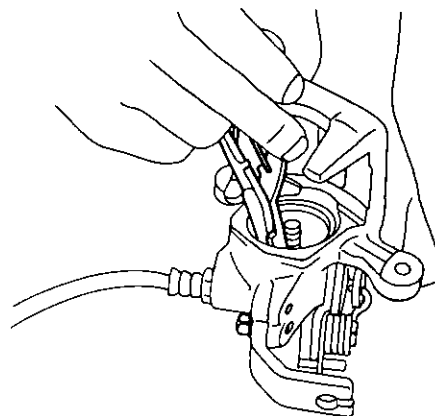


SBR164A

- (3) Remove piston seal
Be careful not to damage cylinder body.

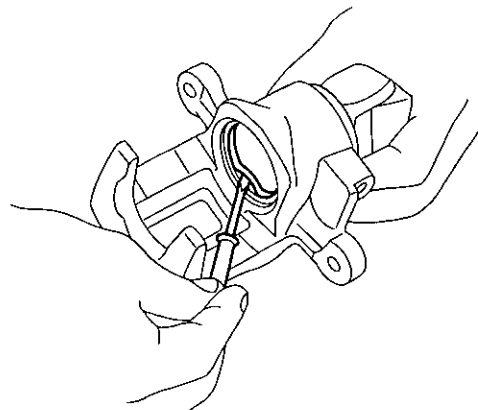

SBR656

- 4 Remove return spring and lever

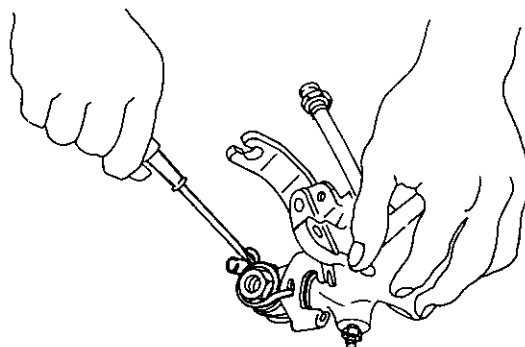

SBR149A

REAR DISC BRAKE (CL14HVB)—Caliper

Inspection

CAUTION:

Use brake fluid to clean. Never use mineral oil.

CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

TORQUE MEMBER

Check for wear, cracks or other damage. Replace if necessary.

PISTON

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any wear or damage is found.

CAUTION:


Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign matter is stuck to sliding surface.

PIN AND PIN BOOT

Check for wear, cracks or other damage. Replace if any of the above conditions are observed.


Assembly

- Install cup securely in the specified direction.

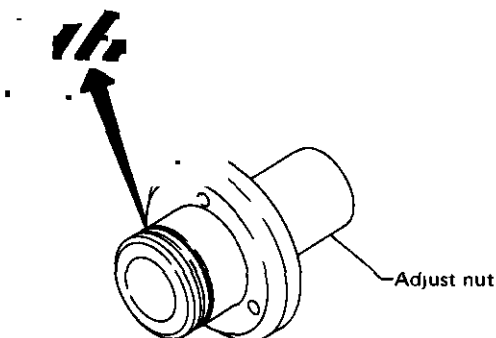



SBR849

- Fit push rod into square hole in key plate. Also match convex portion of key plate with concave portion of cylinder.

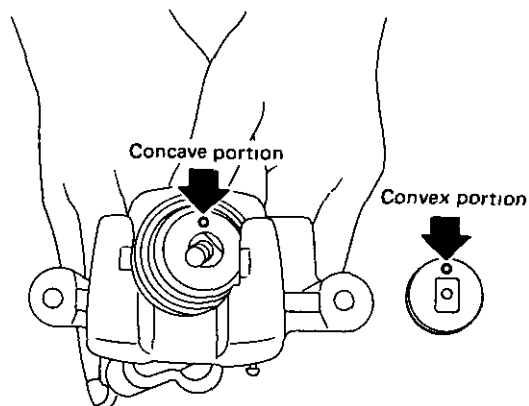



SBR842

- Install ring B with suitable tool.

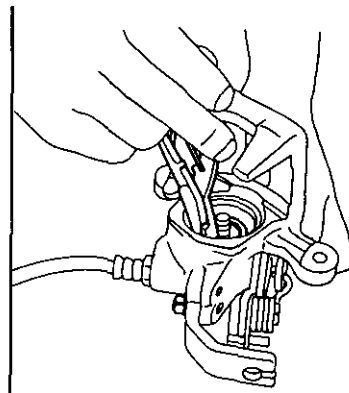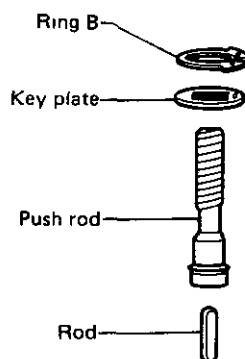

SBR165A

- Install seat, spring, spring cover and ring A with suitable press and drift.

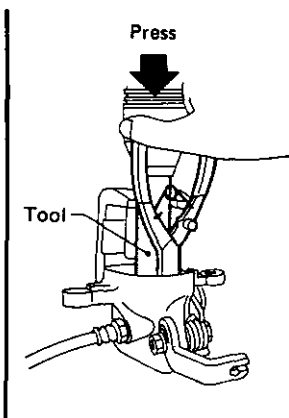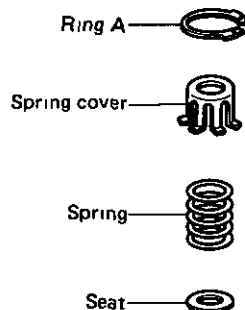

SBR150A

REAR DISC BRAKE — Rotor


Inspection

RUBBING SURFACE

Check rotor for roughness, cracks or chips. Repair or replace if necessary.

RUNOUT

Make sure that axial end play is within the specifications before measuring. Refer to section RA. Then check runout with a dial indicator.

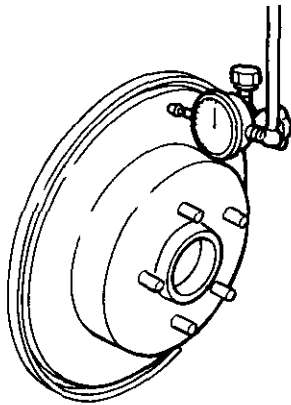

SBR161A


Rotor repair limit:

Maximum runout

(Total indicator reading at
center of rotor pad contact surface)

0.07 mm (0.0028 in)

THICKNESS

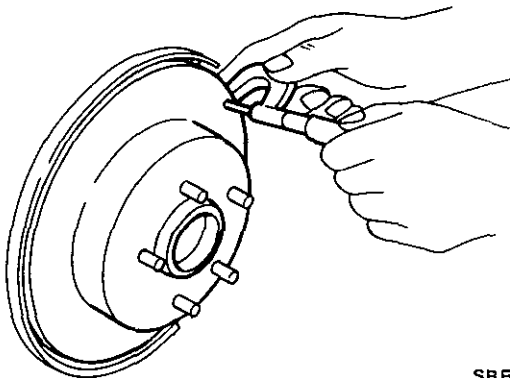


SBR162A

Rotor repair limit:

Minimum thickness

18.0 mm (0.709 in)

PARKING BRAKE

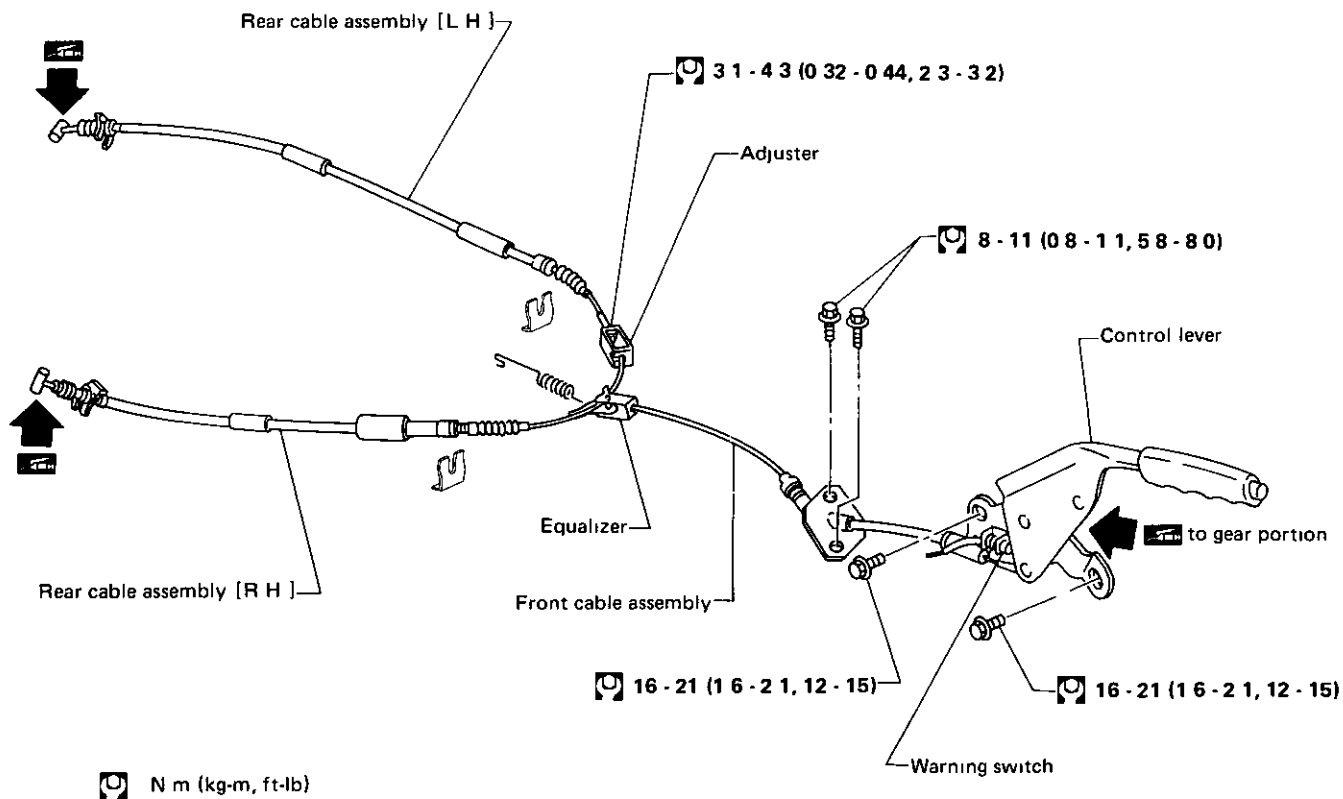


SBR163A

Removal

If necessary, separate front cable from parking brake lever by breaking pin


Front cable, clevis pin and cotter pin are available as service parts.

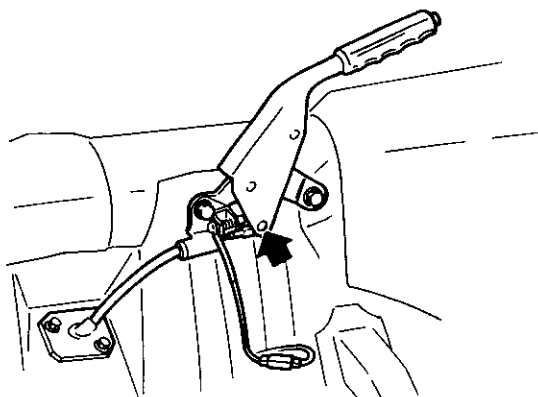

SBR835

Installation

When installing parking brake cable at rear caliper, make sure to pull back rubber boot to expose cable

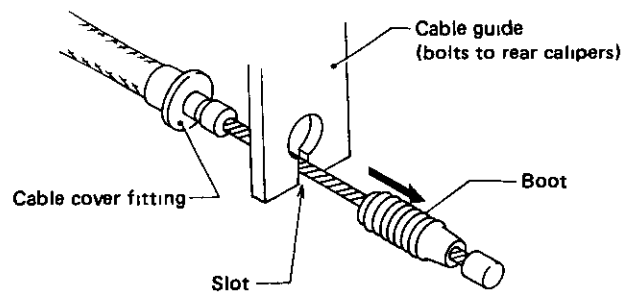

SBR290A

PARKING BRAKE

Installation (Cont'd)

After cable cover fitting is installed in cable guide, reattach boot to fitting

CAUTION:

It is important not to damage boot as it prevents water from entering cable. Water in cable may freeze during winter or cause corrosion.


Inspection

1. Check control lever for wear or other damage
Replace if necessary.
2. Check wires for discontinuity or deterioration
Replace if necessary.
3. Check warning lamp and switch Replace if necessary
4. Check parts at each connecting portion and, if found deformed or damaged, replace

Adjustment

STROKE


- Pull lever with specified amount of force
Check lever stroke and ensure smooth operation

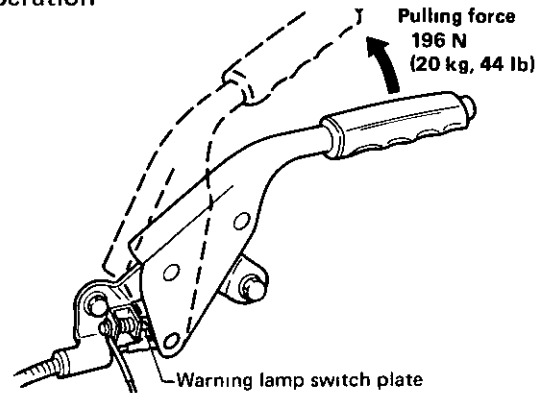

Number of notches 8 - 10

SBR836

- Adjust lever stroke.

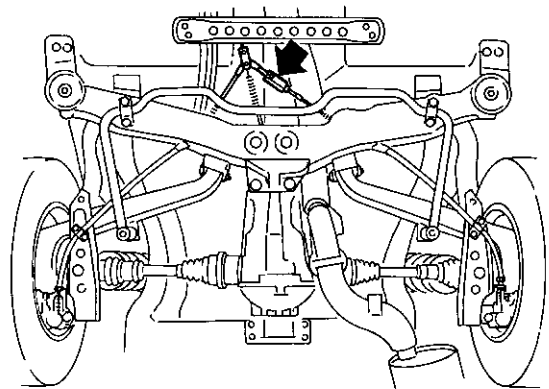

SBR837

WARNING LAMP SWITCH

Bend parking brake warning lamp switch plate so that brake warning light comes on when ratchet at parking brake lever is pulled one notch and goes out when fully released.

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

Inspection and Adjustment

Engine	VG30E	VG30ET
Item		
Front brake		
Brake model	CL28VB	CL28VE
Pad	Inner 43 x 11 x 126.5 (1.69 x 0.43 x 4.98) Outer 43 x 11 x 129.0 (1.69 x 0.43 x 5.08)	50 x 11 x 132 (1.97 x 0.43 x 5.20)
Width x thickness x length mm (in)		
Rotor outer diameter mm (in)	274 (10.79)	280 (11.02)
Caliper inner diameter mm (in)	60.6 (2.386)	42.8 (1.685)
Rear brake		
Brake model	CL14HVB	
Pad	39.5 x 8.0 x 75 (1.555 x 0.315 x 2.95)	
Width x thickness x length mm (in)		
Rotor outer diameter mm (in)	282 (11.10)	
Caliper inner diameter mm (in)	42.8 (1.685)	
Master cylinder		
Inner diameter mm (in)	23.81 (15/16)	
Brake booster		
Model	M20T	
Diaphragm diameter mm (in)	Primary 205 (8.07) Secondary 201 (7.91)	
Control valve		
Model	Proportioning valve (within master cylinder)	
Sprint point kPa (kg/cm ² , psi)	2,942 (30, 427)	
Reducing ratio	0.4	
Recommended brake fluid	DOT 3	

BRAKE PEDAL

Pedal ratio	3.8
Free height	M/T 182 - 192 (7.17 - 7.56) A/T 184 - 194 (7.24 - 7.64)
mm (in)	
Depressed height [Under force of 490 N (50 kg, 110 lb) with engine running]	90 (3.54) or more
mm (in)	
Clearance between pedal stopper and threaded end of stop lamp switch	0.3 - 1.0 (0.012 - 0.039)
mm (in)	
Clearance between pedal stopper and threaded end of A S C D switch	
mm (in)	
Pedal free play	1.0 - 3.0 (0.039 - 0.118)
mm (in)	

PARKING BRAKE

Type	Center lever type
Number of notches when warning lamp switch comes on	1
Number of notches [When pulled under force of 196 N (20 kg, 44 lb)]	8 - 10

CHECK VALVE

Maximum vacuum leakage [15 seconds after 66.7 kPa (500 mmHg, 19.69 inHg) is applied]	1.3 (10, 0.39)
kPa (mmHg, inHg)	

BRAKE BOOSTER

Maximum vacuum leakage (15 seconds after engine is stopped)	3.3 (25, 0.98)
kPa (mmHg, inHg)	

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment (Cont'd)


DISC BRAKE

	Front brake		Rear brake
Brake model	CL28VE	CL28VB	CL14HVB
Pad wear limit Minimum thickness mm (in)	2.0 (0.079)		
Rotor repair limit Maximum runout mm (in)	0.07 (0.0028)		
Minimum thickness mm (in)	24.0 (0.945)	20.0 (0.787)	18.0 (0.709)

Tightening Torque

Item	N·m	kg-m	ft-lb
Brake pedal			
Pedal bracket to body	8 - 11	0.8 - 1.1	5.8 - 8.0
Pedal bracket to pedal	30 - 40	3.1 - 4.1	22 - 30
Stop lamp switch lock nut	12 - 15	1.2 - 1.5	9 - 11
Brake booster			
Brake booster to body	8 - 11	0.8 - 1.1	5.8 - 8.0
Input rod lock nut	16 - 22	1.6 - 2.2	12 - 16
Brake booster to master cylinder	8 - 11	0.8 - 1.1	5.8 - 8.0
Three-way connector			
Three-way connector to brake tube	15 - 18	1.5 - 1.8	11 - 13
Three-way connector mounting bolt	5 - 7	0.5 - 0.7	3.6 - 5.1
Brake hose connector	17 - 20	1.7 - 2.0	12 - 14
Brake tube flare nut	15 - 18	1.5 - 1.8	11 - 13
Wheel cylinder air bleeder	7 - 9	0.7 - 0.9	5.1 - 6.5
Front disc brake			
Baffle plate	32 - 43	0.33 - 0.44	2.4 - 3.2
Torque member fixing bolt	72 - 97	7.3 - 9.9	53 - 72
Torque member to cylinder body (Pin bolt)	22 - 31	2.2 - 3.2	16 - 23
Disc rotor to wheel hub	59 - 69	6.0 - 7.0	43 - 51
Rear disc brake			
Baffle plate	10 - 14	1.0 - 1.4	7 - 10
Torque member fixing bolt	38 - 52	3.9 - 5.3	28 - 38
Torque member to cylinder body (Pin bolt)	31 - 41	3.2 - 4.2	23 - 30
Parking brake			
Center lever type			
Control lever to body	16 - 21	1.6 - 2.1	12 - 15
Adjuster lock nut	31 - 43	0.32 - 0.44	2.3 - 3.2
Front cable clamp to body	8 - 11	0.8 - 1.1	5.8 - 8.0

 SPECIAL SERVICE TOOL

Tool number (Kent-Moore No)	Tool name
GG94310000 (-)	Flare nut torque wrench 

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.