

SECTION FE


ENGINE CONTROL SYSTEM..	FE-2
FUEL SYSTEM..	FE-3
EXHAUST SYSTEM..	FE-5



ENGINE CONTROL SYSTEM

Accelerator Control System

- a Check to see if throttle valve fully opens when accelerator pedal is fully depressed and returns to idle when released
- b Adjust accelerator pedal free play by turning adjusting nut
- c. On automatic transmission models, make sure kickdown switch rod is fully pushed in when accelerator pedal is depressed completely
- d ON A S C D equipped models, first adjust accelerator wire and then A S C D cable For details, refer to "Automatic Speed Control Device" in EL section
- e Check accelerator control parts for improper contact with any adjacent parts
- f When connecting accelerator wire, be careful not to twist or scratch its inner wire
- g Apply a light coat of recommended multi-purpose grease to all sliding or friction surfaces Do not apply grease to wire

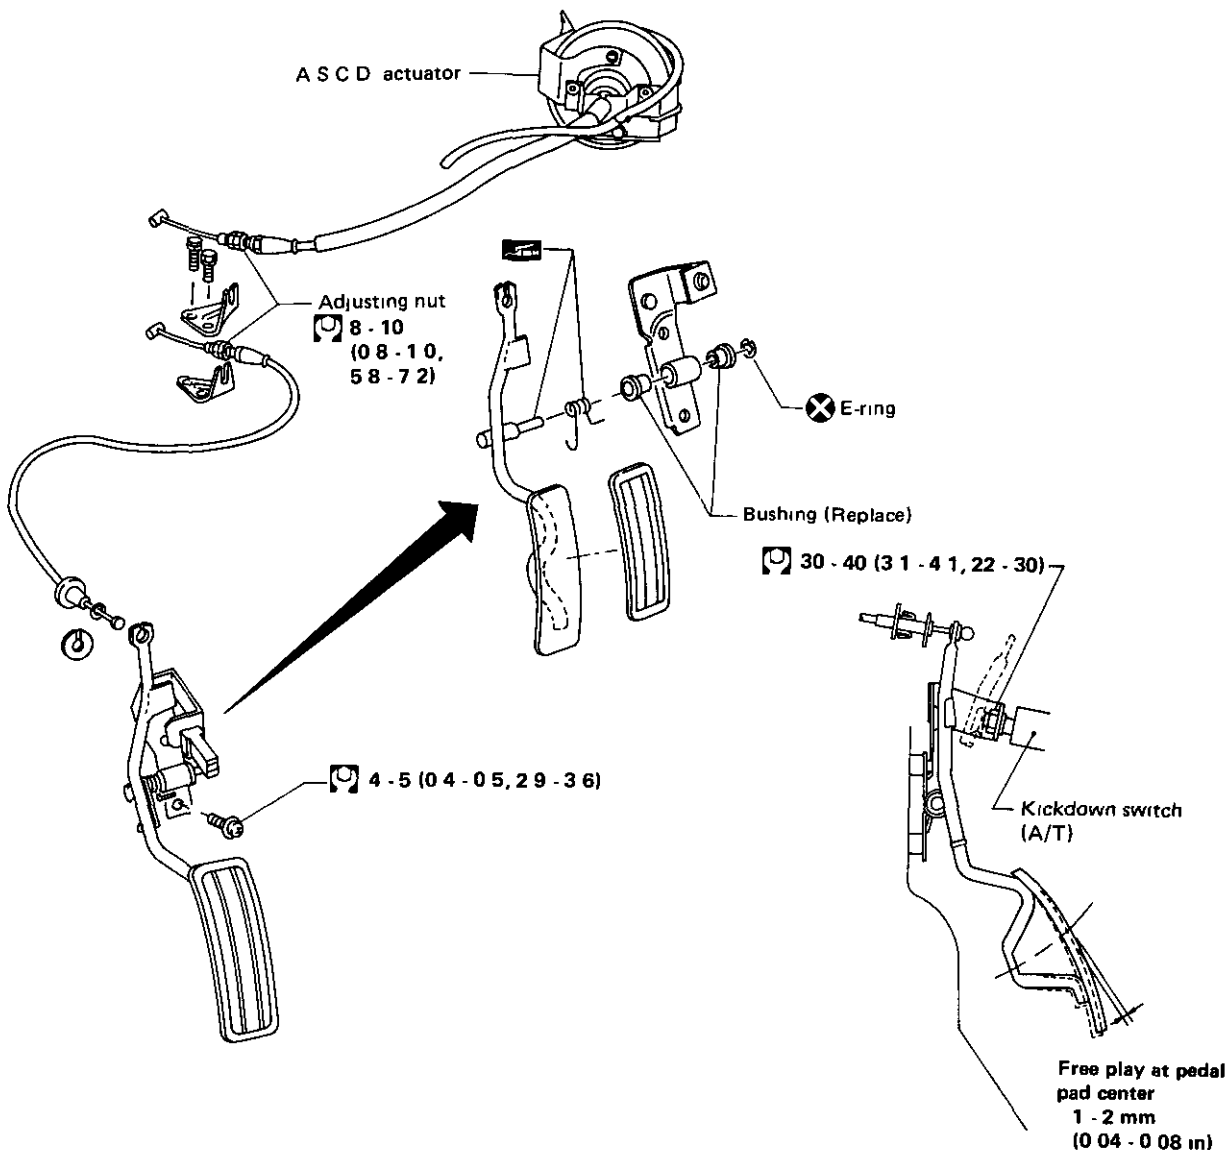

FUEL SYSTEM


WARNING:

When replacing fuel line parts, be sure to observe the following:

- Put a "CAUTION: INFLAMMABLE" sign in workshop.
- Be sure to furnish the workshop with a CO₂ fire extinguisher
- Be sure to disconnect battery ground cable before conducting operations.
- Put drained fuel in an explosion-proof container and attach lid securely

CAUTION.

Before disconnecting fuel hose, release fuel pressure from fuel line. Refer to the "Releasing Fuel Pressure" in EF & EC section.

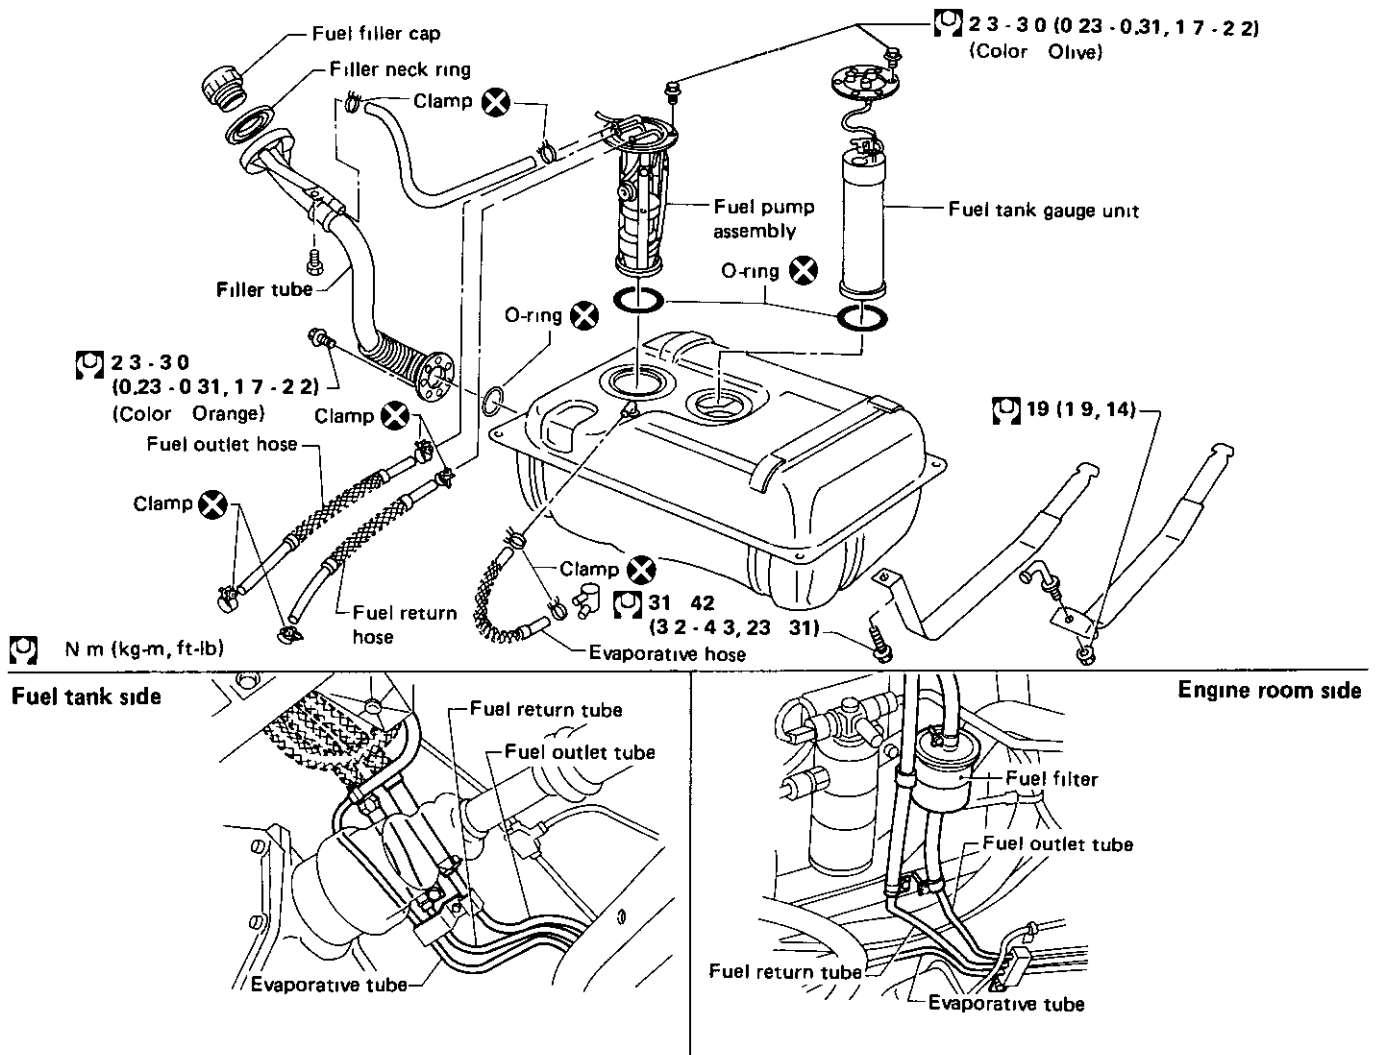

- Do not disconnect any fuel line unless absolutely necessary
- Plug hose and pipe openings to prevent entry of dust or dirt
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose clamps excessively to avoid damaging hoses.
- When installing fuel check valve, be careful of its designated direction (Refer to section EF & EC)
- Run the engine and check for leaks at connections


SFE936

FUEL SYSTEM


Removal of Fuel Tank

Do not separate fuel tank and fuel filler tube except when replacement is necessary.

- 1 Disconnect harness connectors of fuel tank gauge unit and electric fuel pump in luggage compartment
- 2 Siphon or pump fuel from filler opening of fuel tank into a suitable container. Then blow away fuel from filler opening with compressed clean air
- 3 Remove fuel filler neck ring

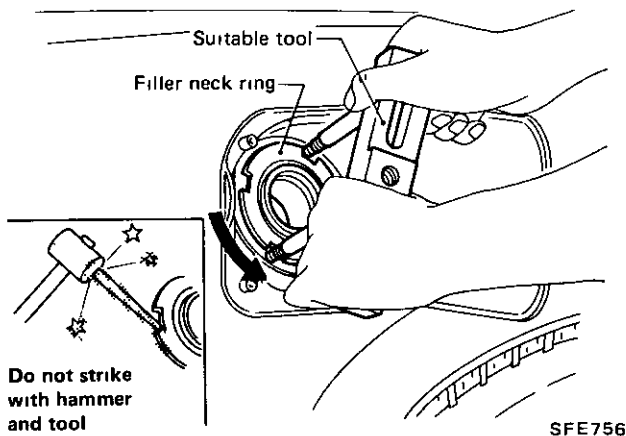


- 4 Remove rear right side wheel
- 5 Remove fuel filler tube protectors and disconnect ventilation hose

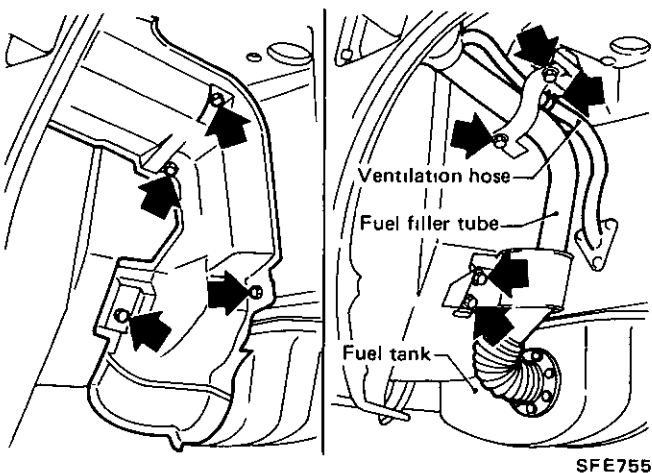


- 6 Disconnect fuel hoses and evaporative hose on fuel tube side
- 7 Loosen bolt and nut securing mounting bands and then remove fuel tank with filler tube

- 8 When installing fuel filler neck ring tighten as follows

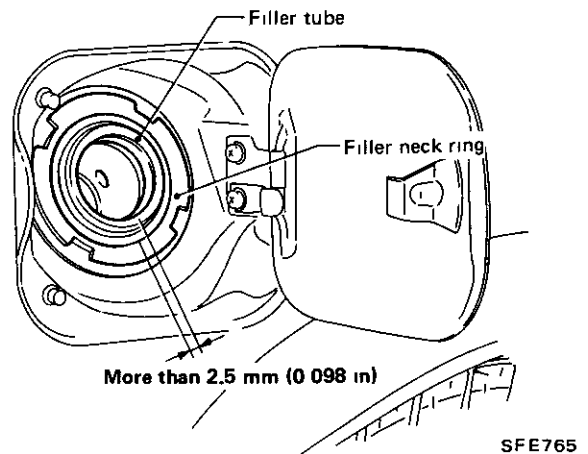

Removal of Fuel Gauge Unit

Lift fuel gauge unit straight up off the fuel tank. Resistor gauge is made of ceramic material. Be careful not to bend it.

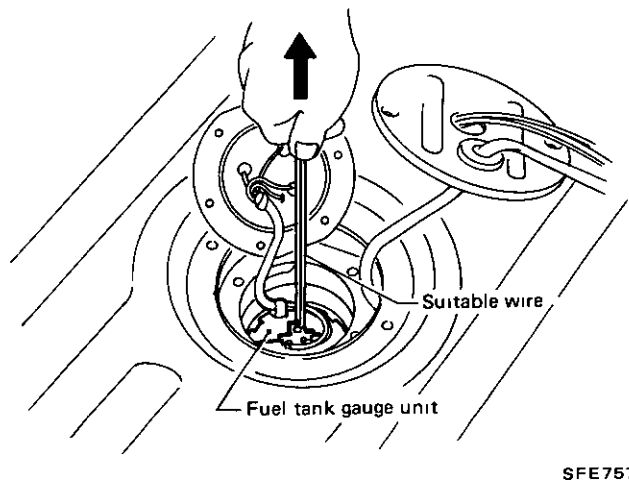

Removal of Electric Fuel Pump

Remove fuel tank, then detach fuel pump


EXHAUST SYSTEM

CAUTION:


- a. Be careful not to drop or damage catalytic converter.
- b. Never wet catalytic converter with water, oil, etc.
- When removing muffler assembly, always separate it from center tube
- For A/T models, heat shield plates cannot be removed
- On non-turbocharger models, when removing heat shield plates from front tube, remove the entire front tube assembly
- After installation, make sure that mounting brackets and mounting insulator are free from undue stress
If any of above parts is not installed properly, excessive noises or vibrations may be transmitted to vehicle body
- When connecting center tube and muffler assembly, use the Genuine Nissan Sealant "Exhaust Sealant Kit 20720-N2225" or an equivalent to eliminate gas leakage at the joint
- Check all tube connections for exhaust gas leaks, and entire system for unusual noises, with engine running

EXHAUST SYSTEM

Turbo models

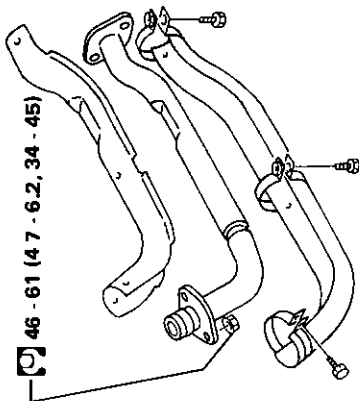

Non-turbo models

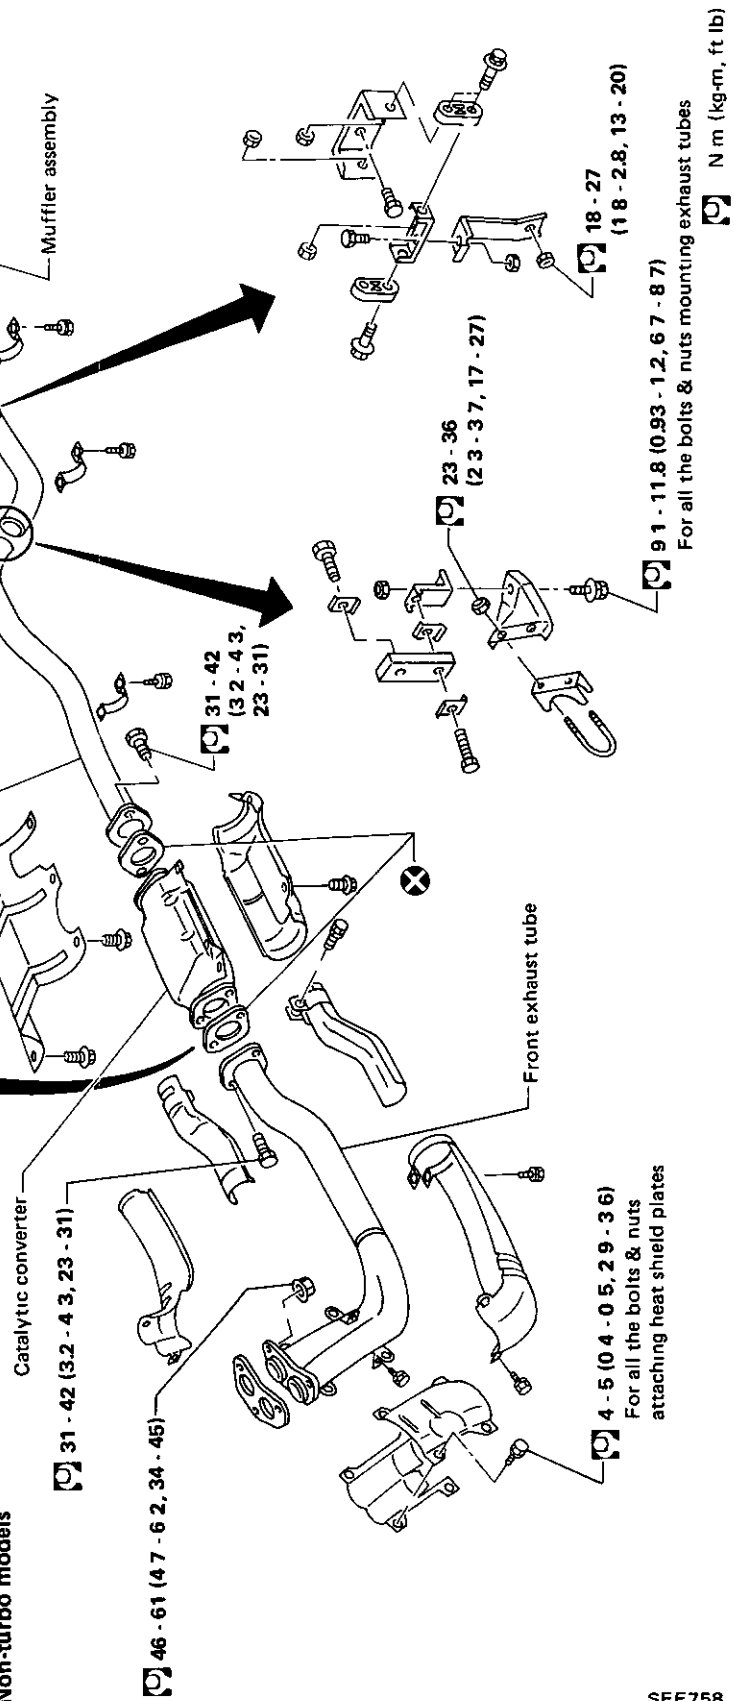

SFE758

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.